T3000 Engineering


Updating the Airlab bootloader · built Nov 13, 2026

Updating the Airlab bootloader

Airlab is a T3 variant with its own bootloader path. Doing it by hand is the recovery route when the normal update will not run.

The update of Airlab bootloader is non-mandatory, so we hope you can do the following manually。


Step 1 . Use ISP Tool to select the repair_bootloader_airlab.hex in the attachment. Use RS485 port ,Select the corresponding ID and baudrate. After this step is updated, the device's screen will always be in a double-flash state.

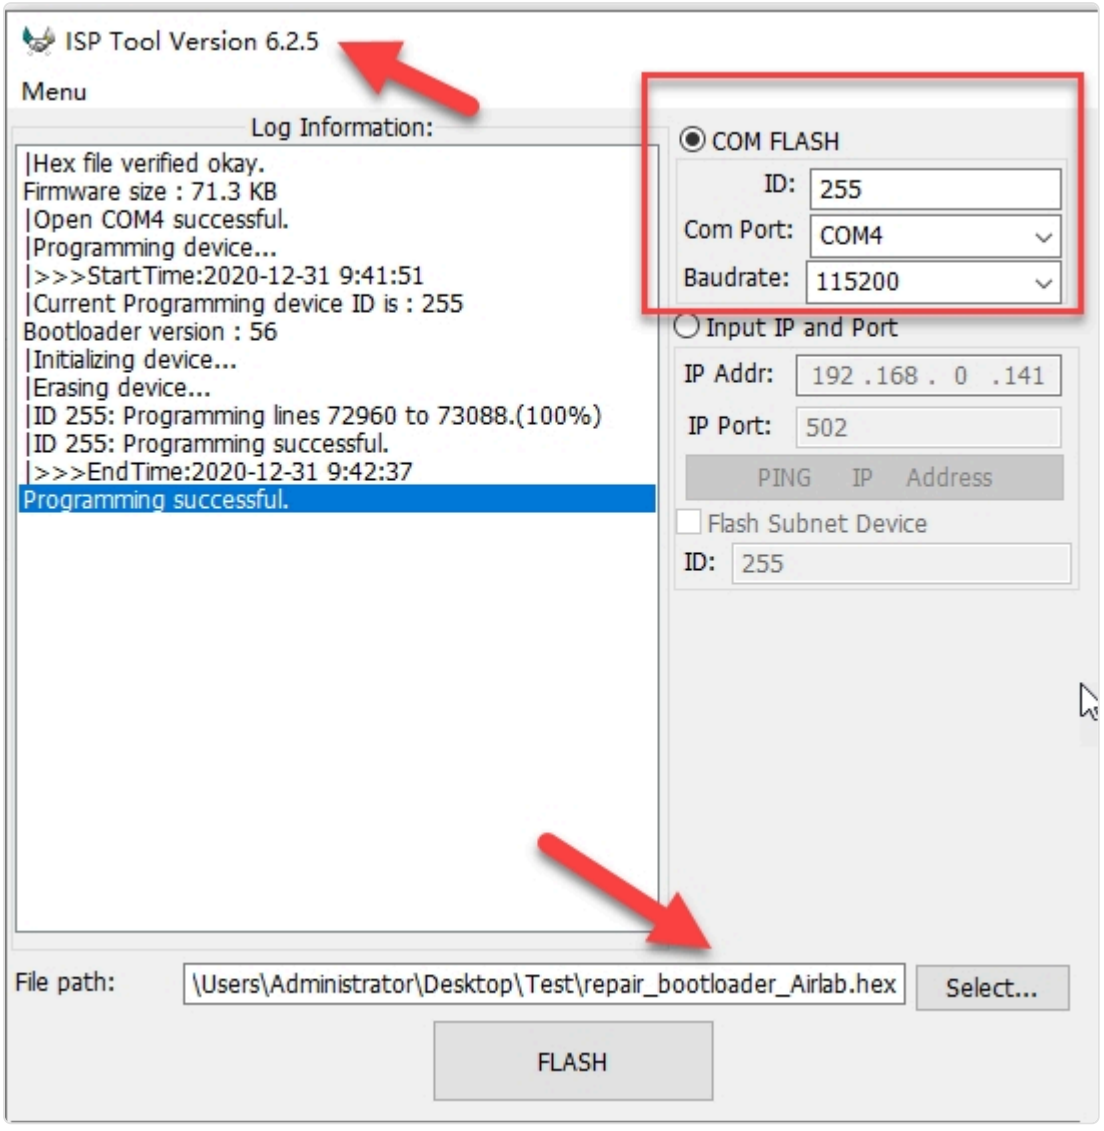

Step 2 . Select the latest version of Airlab firmware, version 11.4, as attached


Also use RS485 to update the firmware airquality_rev11_4.hex

When the update is complete, the device is in normal working mode.

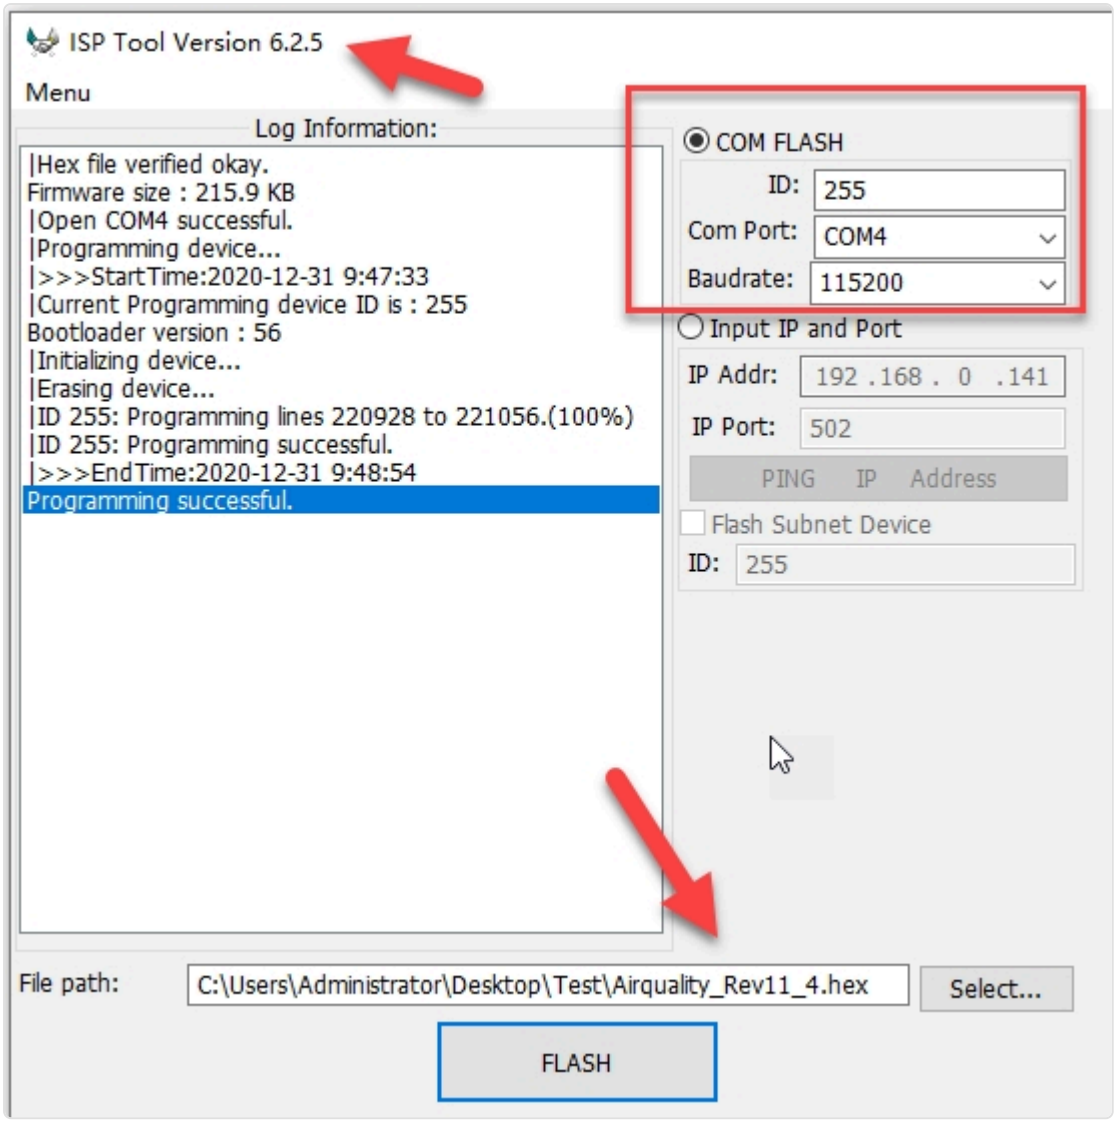

Step 3 . Using the T3000 software, you can know the device's Wifi IP Address

Then we can use this IP address to update the required firmware

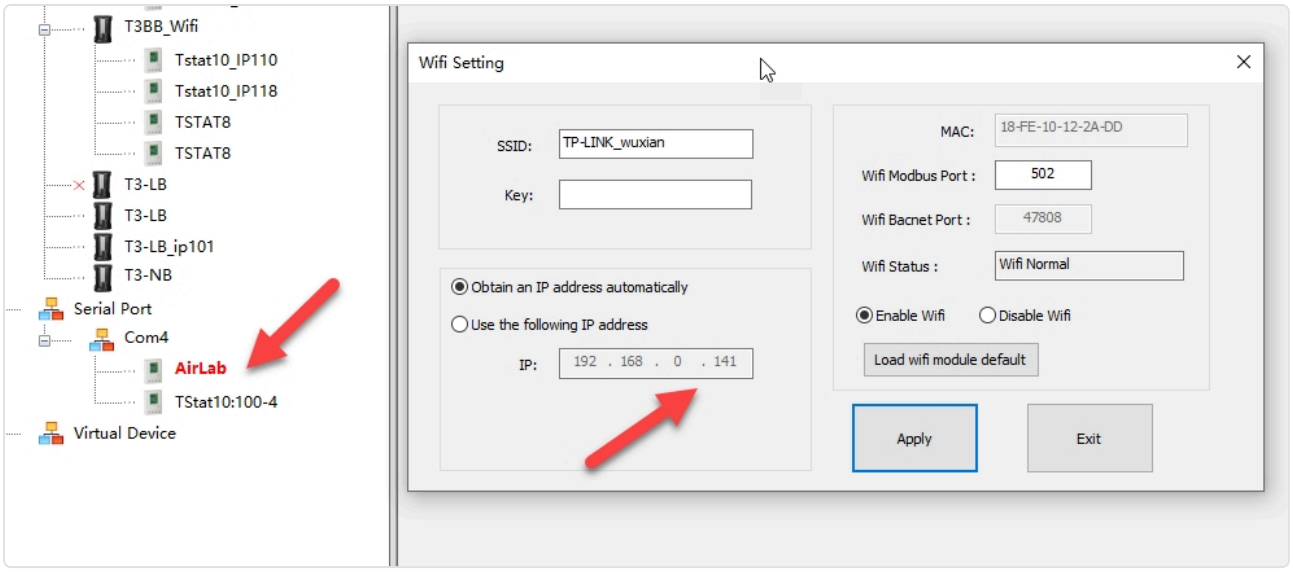
T3BB_Wifi
Tstat10_IP110
Tstat10_IP118
TSTAT8
TSTAT8
T3-LB
T3-LB
T3-LB_ip101
T3-NB
Serial Port
Com4
AirLab
TStat10:100-4
Virtual Device
Wifi Setting
SSID:
TP-LINK_wuxian
Key:
MAC:
18-FE-10-12-2A-DD
Wifi Modbus Port :
502
Wifi Bacnet Port :
47808
Wifi Status :
Wifi Normal
Obtain an IP address automatically
Use the following IP address
IP:
192 . 168 . 0 . 141
Enable Wifi
Disable Wifi
Load wifi module default
Apply
Exit