
6.1.2 Edit Point

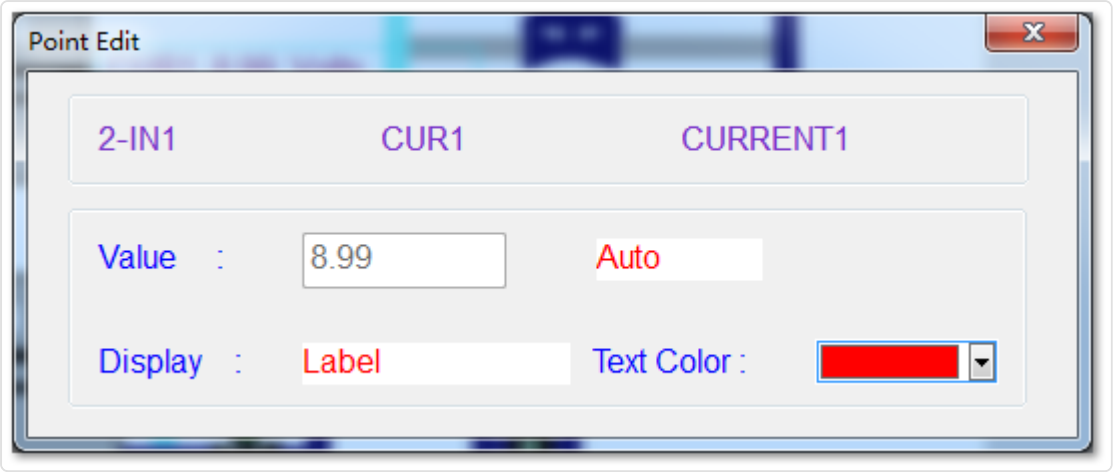

POP- UP WINDOW FUNCTIONS

A description of each of the items appearing in a pop-up window follows.

FIELD TITLE	FUNCTION OF FIELD
VALUE	Value of point.
HIGH LIMIT	Floating point number, above which, an analog point will change
to the high color.	
LOW LIMIT.	Floating point number, above which, an analog point will change
to the low color.	

DISPLAY. . . . . .

Determines how the point in question will be displayed on the graphic screen. A number of options are avail able for displaying the points info:

20 char: Displays 20 character Full label.

Value: Displays value of point only.




Icon: Displays representative Icon only.



Icon/8ch: Displays representative and 8 character Label.




Icon/20c: Displays representative and 8 character Full label.

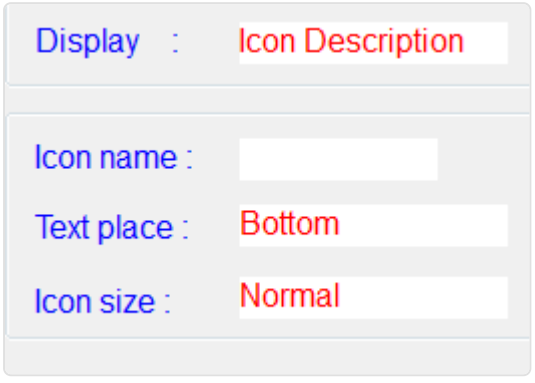

Icon/Val: Displays representative icon and point value.



8 char: Displays 20 character Label.



AUTO/MAN . . . .

When in auto the point is operational and will read the value as determined by the programming. When in manual the point is

not operational and will remain at a fixed value as determined by the operator. To change from auto to manual or vice versa

simply highlight the field and press ENTER.