TEMCO LEARN

T3000

DEMO PROGRAM · built Nov 12, 2026


DEMO PROGRAM

1 .Download the configuration file called [TBD]

2. Read the readme file .


1>you should put the image fold to the installation path to replace the image file fold.

..\Database\Buildings\Default_Building\image

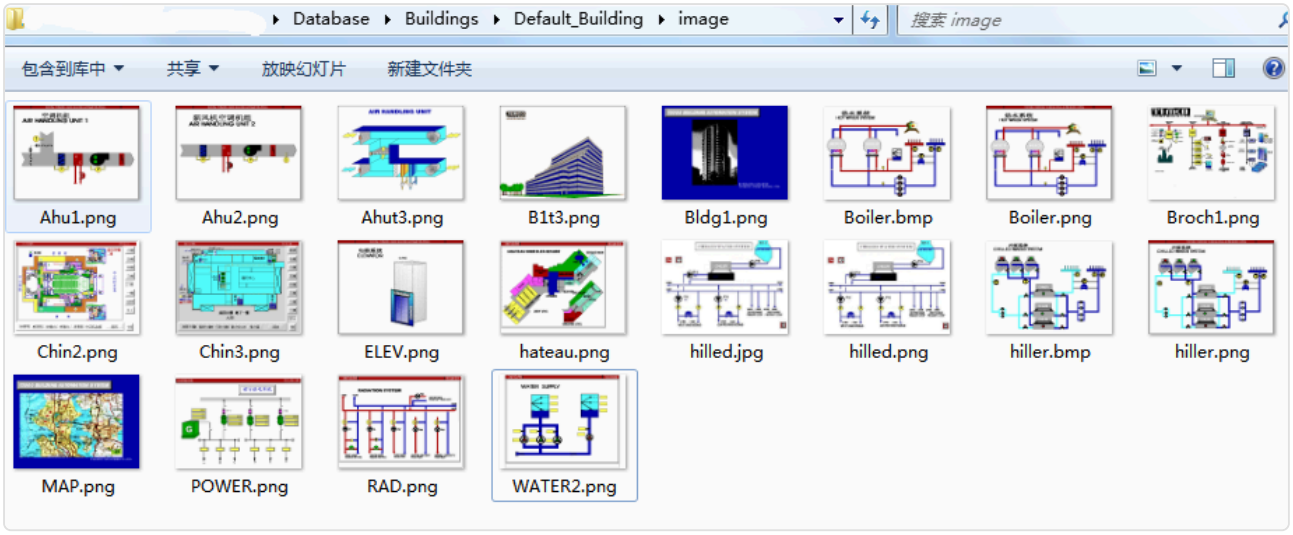


2>you should open T3000 to load the T3000DEMOSHOW.prg to your T3 controllers .


2.1.select your T3 controllers

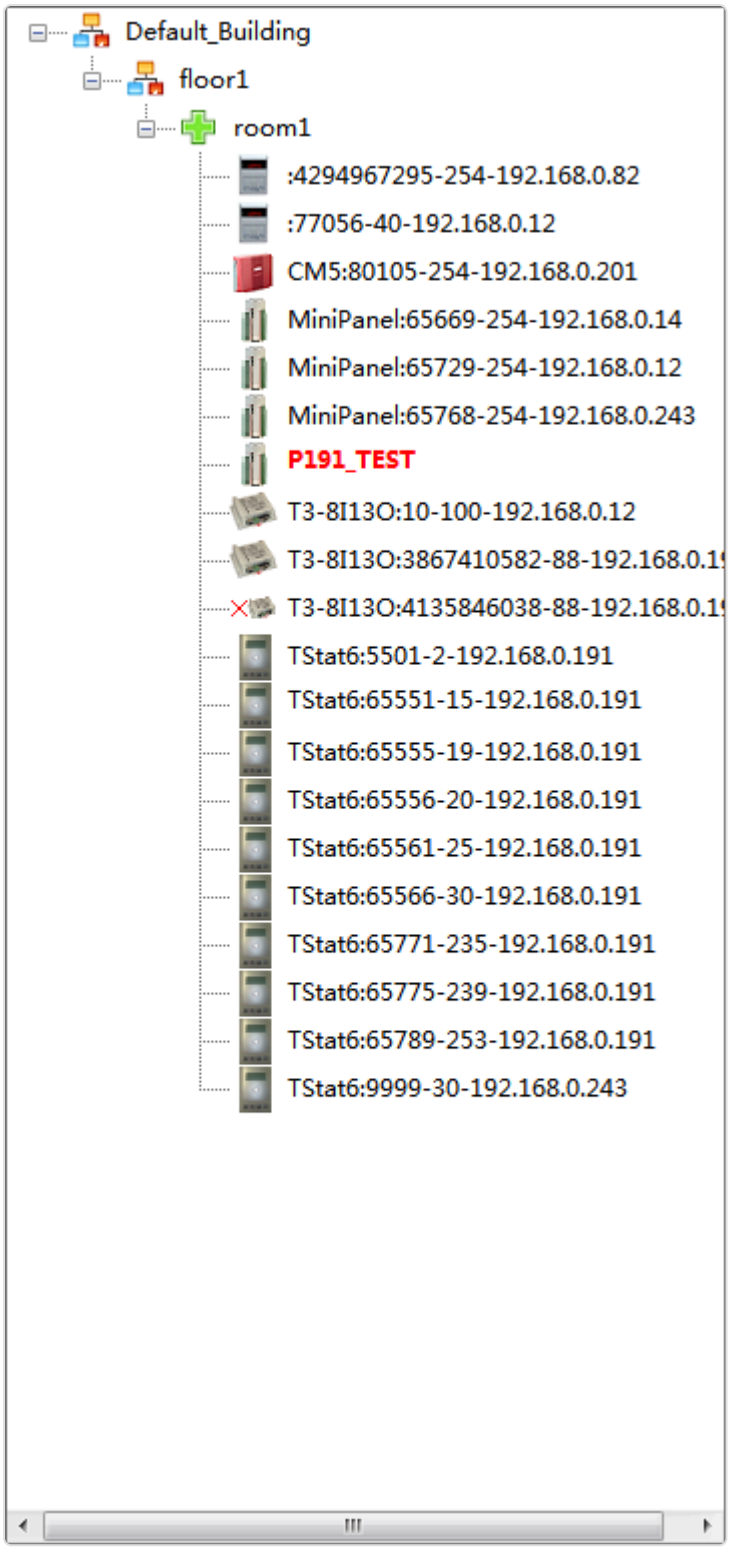

2.2.select the menu

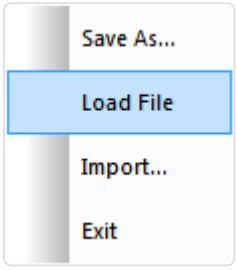

2.3.select the demo project file

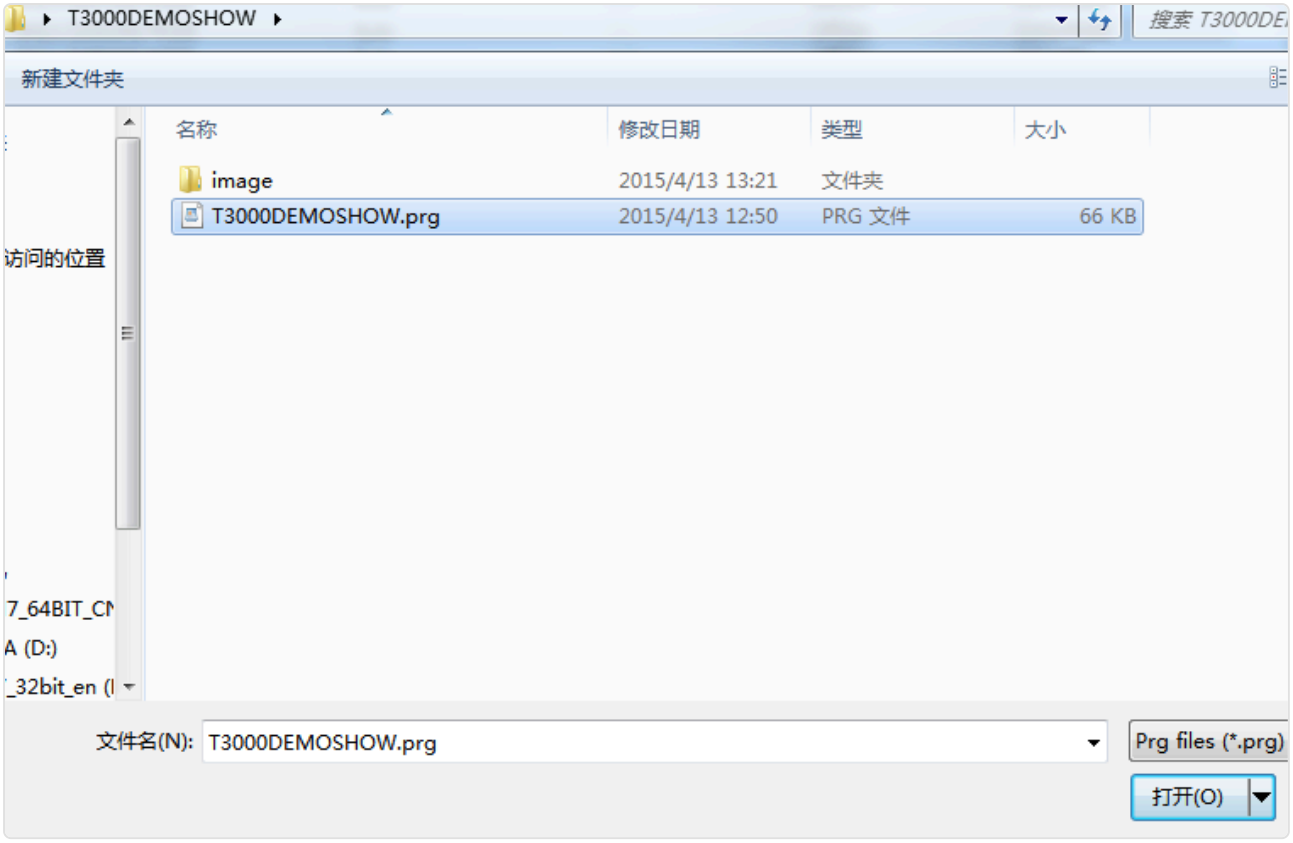

2.4.If finished ,please check these data .

Check these data [Inputs ,Outputs ,Variables, Programs, PID Loops, Graphics ,Schedules, Holidays, Trend Logs]



DEMO SHOW

> > INPUTS

Input	Panel	Full Label	Auto/Manual	Value	Units	Range	Calibration	Sign	Filter	Status	Jumper	Label
IN1	1	SUPPLY AIR TEMP	Auto	-40.00	Deg.F	10K -40 to 250	0.0	-	5	Open	Thermistor Dry...	AHU1SAT
IN2	1	RETURN AIR TEMI	Auto	248.00	Deg.F	10K -40 to 250	0.0	-	5	Shorted	Thermistor Dry...	AHU1RAT
IN3	1	MIXED AIR TEMP	Auto	-40.00	Deg.F	10K -40 to 250	0.0	-	5	Open	Thermistor Dry...	AHUMAT
IN4	1	ROOM TEMP	Auto	-40.00	Deg.F	10K -40 to 250	0.0	-	5	Open	Thermistor Dry...	AHU1RT
IN5	1	FAN STATUS	Auto	On		Off/On		-	5	Normal	Thermistor Dry...	AHU1FS
IN6	1	OUTSIDE AIR TEMI	Auto	-40.00	Deg.F	10K -40 to 250	0.0	-	5	Open	Thermistor Dry...	OAT
IN7	1	IN 7	Auto	2.99		Unused	0.0	-	5	Normal	Thermistor Dry...	IN7
IN8	1	IN 8	Auto	3.00		Unused	0.0	-	5	Normal	Thermistor Dry...	IN8
IN9	1	IN 9	Auto	3.00		Unused	0.0	-	5	Normal	Thermistor Dry...	IN9
IN10	1	IN 10	Auto	3.00		Unused	0.0	-	5	Normal	Thermistor Dry...	IN10
IN11	1	IN 11	Auto	3.00		Unused	0.0	-	5	Normal	Thermistor Dry...	IN11
IN12	1	IN 12	Auto	3.00		Unused	0.0	-	5	Normal	Thermistor Dry...	IN12
IN13	1	IN 13	Auto	3.00		Unused	0.0	-	5	Normal	Thermistor Dry...	IN13
IN14	1	IN 14	Auto	3.00		Unused	0.0	-	5	Normal	Thermistor Dry...	IN14
IN15	1	IN 15	Auto	3.00		Unused	0.0	-	5	Normal	Thermistor Dry...	IN15
IN16	1	IN 16	Auto	3.00		Unused	0.0	-	5	Normal	Thermistor Dry...	IN16
IN17	1	IN 17	Auto	3.00		Unused	0.0	-	5	Normal	Thermistor Dry...	IN17
IN18	1	IN 18	Auto	0.00		Unused	0.0	-	5	Normal	Thermistor Dry...	IN18
IN19	1	IN 19	Auto	3.00		Unused	0.0	-	5	Normal	Thermistor Dry...	IN19
IN20	1	IN 20	Auto	3.00		Unused	0.0	-	5	Normal	Thermistor Dry...	IN20
IN21	1	IN 21	Auto	3.00		Unused	0.0	-	5	Normal	Thermistor Dry...	IN21
IN22	1	IN 22	Auto	3.00		Unused	0.0	-	5	Normal	Thermistor Dry...	IN22
IN23	1	IN 23	Auto	3.00		Unused	0.0	-	5	Normal	Thermistor Dry...	IN23
IN24	1	IN 24	Auto	3.00		Unused	0.0	-	5	Normal	Thermistor Dry...	IN24
IN25	1	IN 25	Auto	3.00		Unused	0.0	-	5	Normal	Thermistor Dry...	IN25
IN26	1	IN 26	Auto	3.00		Unused	0.0	-	5	Normal	Thermistor Dry...	IN26
IN27	1	IN 27	Auto	3.00		Unused	0.0	-	5	Normal	Thermistor Dry...	IN27
IN28	1	IN 28	Auto	3.00		Unused	0.0	-	5	Normal	Thermistor Dry...	IN28
IN29	1	IN 29	Auto	3.00		Unused	0.0	-	5	Normal	Thermistor Dry...	IN29
IN30	1	IN 30	Auto	3.00		Unused	0.0	-	5	Normal	Thermistor Dry...	IN30
IN31	1	IN 31	Auto	3.00		Unused	0.0	-	5	Normal	Thermistor Dry...	IN31
IN32	1	IN 32	Auto	3.00		Unused	0.0	-	5	Normal	Thermistor Dry...	IN32
IN33	1	IN 33	Auto	0.00		Unused	0.0	-	5	Normal	Thermistor Dry...	IN33
IN34	1	IN 34	Auto	0.00		Unused	0.0	-	5	Normal	Thermistor Dry...	IN34
IN35	1	IN 35	Auto	0.00		Unused	0.0	-	5	Normal	Thermistor Dry...	IN35
IN36	1	IN 36	Auto	0.00		Unused	0.0	-	5	Normal	Thermistor Dry...	IN36
IN37	1	IN 37	Auto	0.00		Unused	0.0	-	5	Normal	Thermistor Dry...	IN37
IN38	1	IN 38	Auto	0.00		Unused	0.0	-	5	Normal	Thermistor Dry...	IN38
IN39	1	IN 39	Auto	0.00		Unused	0.0	-	5	Normal	Thermistor Dry...	IN39
IN40	1	IN 40	Auto	0.00		Unused	0.0	-	5	Normal	Thermistor Dry...	IN40
IN41	1	IN 41	Auto	0.00		Unused	0.0	-	5	Normal	Thermistor Dry...	IN41
IN42	1	IN 42	Auto	0.00		Unused	0.0	-	5	Normal	Thermistor Dry...	IN42
IN43	1	IN 43	Auto	0.00		Unused	0.0	-	5	Normal	Thermistor Dry...	IN43
IN44	1	IN 44	Auto	0.00		Unused	0.0	-	5	Normal	Thermistor Dry...	IN44
IN45	1	IN 45	Auto	0.00		Unused	0.0	-	5	Normal	Thermistor Dry...	IN45
IN46	1	IN 46	Auto	0.00		Unused	0.0	-	5	Normal	Thermistor Dry...	IN46
IN47	1	IN 47	Auto	0.00		Unused	0.0	-	5	Normal	Thermistor Dry...	IN47
IN48	1	IN 48	Auto	0.00		Unused	0.0	-	5	Normal	Thermistor Dry...	IN48
IN49	1	IN 49	Auto	0.00		Unused	0.0	-	5	Normal	Thermistor Dry...	IN49
IN50	1	IN 50	Auto	0.00		Unused	0.0	-	5	Normal	Thermistor Dry...	IN50
IN51	1	IN 51	Auto	0.00		Unused	0.0	-	5	Normal	Thermistor Dry...	IN51
IN52	1	IN 52	Auto	0.00		Unused	0.0	-	5	Normal	Thermistor Dry...	IN52
IN53	1	IN 53	Auto	0.00		Unused	0.0	-	5	Normal	Thermistor Dry...	IN53
IN54	1	IN 54	Auto	0.00		Unused	0.0	-	5	Normal	Thermistor Dry...	IN54
IN55	1	IN 55	Auto	0.00		Unused	0.0	-	5	Normal	Thermistor Dry...	IN55
IN56	1	IN 56	Auto	0.00		Unused	0.0	-	5	Normal	Thermistor Dry...	IN56
IN57	1	IN 57	Auto	0.00		Unused	0.0	-	5	Normal	Thermistor Dry...	IN57
IN58	1	IN 58	Auto	0.00		Unused	0.0	-	5	Normal	Thermistor Dry...	IN58
IN59	1	IN 59	Auto	0.00		Unused	0.0	-	5	Normal	Thermistor Dry...	IN59
IN60	1	IN 60	Auto	0.00		Unused	0.0	-	5	Normal	Thermistor Dry...	IN60
IN61	1	IN 61	Auto	0.00		Unused	0.0	-	5	Normal	Thermistor Dry...	IN61
IN62	1	IN 62	Auto	0.00		Unused	0.0	-	5	Normal	Thermistor Dry...	IN62
IN63	1	IN 63	Auto	0.00		Unused	0.0	-	5	Normal	Thermistor Dry...	IN63
IN64	1	IN 64	Auto	0.00		Unused	0.0	-	5	Normal	Thermistor Dry...	IN64

OUTPUTS


Output	Panel	Full Label	Auto/Manual	HOA Switch	Value	Units	Range	PWM Period	Status	Label
OUT1	1	AHU1 FAN	Auto	AUTO	Off		Off/On	0	OK	AHU1FAN
OUT2	1	AHU1 COOLING	Auto	AUTO	Off		Off/On	0	-	AHU1COOL
OUT3	1	AHU1 HEATING	Auto	AUTO	Off		Off/On	0	OK	AHU1HEAT
OUT4	1	AHU1 MIX ㄣ	Auto	AUTO	Off		Off/On	1	OK	
OUT5	1	┼	Manual	AUTO	Off		Off/On	32	OK	
OUT6	1		Auto	AUTO	0.00		Unused	0	OK	OUT6
OUT7	1	OUT7	Auto	AUTO	0.00		Unused	0	OK	OUT7
OUT8	1	OUT8	Auto	AUTO	0.00		Unused	0	OK	OUT8
OUT9	1	OUT9	Auto	AUTO	Off		Unused	28	OK	OUT9
OUT10	1	E	Auto	AUTO	Off		Unused	65	OK	?
OUT11	1		Auto	AUTO	0.00		Unused	0	OK	ACACAAA
OUT12	1	OUT12	Auto	AUTO	0.00		Unused	0	OK	OUT12
OUT13	1	OUT13	Auto	AUTO	0.00		Unused	0	OK	OUT13
OUT14	1	OUT14	Auto	AUTO	0.00		Unused	0	OK	OUT14
OUT15	1	OUT15	Manual	AUTO	Off		Off/On	168	OK	OUT1 ㄣ
OUT16	1		Manual	AUTO	Off		Off/On	65	OK	
OUT17	1	CACACACACACAAA	Auto	AUTO	0.00		Unused	0	OK	OUT17
OUT18	1	OUT18	Auto	AUTO	0.00		Unused	0	OK	OUT18
OUT19	1	OUT19	Auto	AUTO	0.00		Unused	0	OK	OUT19
OUT20	1	OUT20	Auto	AUTO	0.00		Unused	0	OK	OUT20
OUT21	1	OUT21	Manual	AUTO	0.00		Unused	11	OK	g@
OUT22	1	?	Auto	AUTO	0.00		Unused	0	OK	
OUT23	1	OUT23	Auto	AUTO	0.00		Unused	0	OK	OUT23
OUT24	1	OUT24	Auto	AUTO	0.00		Unused	0	OK	OUT24
OUT25	1	OUT25	Auto	AUTO	0.00		Unused	0	-	OUT25
OUT26	1	OUT26	Auto	AUTO	0.00		Unused	0	-	OUT26
OUT27	1	6€	Manual	AUTO	688.38	Unused	Out of range	25	-	
OUT28	1	.e••	Auto	AUTO	0.00		Unused	0	-	OUT28
OUT29	1	OUT29	Auto	AUTO	0.00		Unused	0	-	OUT29
OUT30	1	OUT30	Auto	AUTO	0.00		Unused	0	-	OUT30
OUT31	1	OUT31	Auto	AUTO	0.00		Unused	0	-	OUT31
OUT32	1	OUT32	Manual	AUTO	0.00		Unused	17	-	OUT32
OUT33	1	g括	Manual	AUTO	0.00		Unused	0	-	┘
OUT34	1	OUT34	Auto	AUTO	0.00		Unused	0	-	OUT34
OUT35	1	OUT35	Auto	AUTO	0.00		Unused	0	-	OUT35
OUT36	1	OUT36	Auto	AUTO	0.00		Unused	0	-	OUT36
OUT37	1	OUT37	Auto	AUTO	0.00		Unused	0	-	OUT37
OUT38	1	OUT38	Auto	AUTO	0.00		Unused	0	-	
OUT39	1	˜攫?	Auto	AUTO	0.00		Unused	0	-	•
OUT40	1	OUT40	Auto	AUTO	0.00		Unused	0	-	OUT40
OUT41	1	OUT41	Auto	AUTO	0.00		Unused	0	-	OUT41
OUT42	1	OUT42	Auto	AUTO	0.00		Unused	0	-	OUT42
OUT43	1	OUT43	Auto	AUTO	0.00		Unused	0	-	OUT43
OUT44	1	ㄣ	Manual	AUTO	0.00		Unused	10	-	ㄏ括
OUT45	1	┘├ .e••	Auto	AUTO	0.00		Unused	0	-	OUT45
OUT46	1	OUT46	Auto	AUTO	0.00		Unused	0	-	OUT46
OUT47	1	OUT47	Auto	AUTO	0.00		Unused	0	-	OUT47
OUT48	1	OUT48	Auto	AUTO	0.00		Unused	0	-	OUT48
OUT49	1	OUT49	Manual	AUTO	0.00		Unused	0	-	OUT49
OUT50	1	€↵ ?	Auto	AUTO	917.67		Unused	0	-	括
OUT51	1	OUT51	Auto	AUTO	0.00		Unused	0	-	OUT51
OUT52	1	OUT52	Auto	AUTO	0.00		Unused	0	-	OUT52
OUT53	1	OUT53	Auto	AUTO	0.00		Unused	0	-	OUT53
OUT54	1	OUT54	Auto	AUTO	0.00		Unused	0	-	OUT54
OUT55	1	OUT55	Manual	AUTO	0.00		Unused	192	-	€
OUT56	1	豪	Auto	AUTO	12.03		Unused	0	-	_e••
OUT57	1	OUT57	Auto	AUTO	0.00		Unused	0	-	OUT57
OUT58	1	OUT58	Auto	AUTO	0.00		Unused	0	-	OUT58
OUT59	1	OUT59	Auto	AUTO	0.00		Unused	0	-	OUT59
OUT60	1	OUT60	Auto	AUTO	0.00		Unused	0	-	OUT60
OUT61	1	OUT ㄣ	Manual	AUTO	0.00		Unused	0	-	括
OUT62	1		Manual	AUTO	0.00		Unused	0	-	
OUT63	1	OUT63	Auto	AUTO	0.00		Unused	0	-	OUT63
OUT64	1	OUT64	Auto	AUTO	0.00		Unused	0	-	OUT64

VARIABLES

Variable	Full Label	Auto/Manual	Value	Units	Label
VAR1	AHU1 HEATING SETPT	Auto	0.000	Deg.C	AHU1HSP
VAR2	AHU1 COOLING SETPT	Auto	0.000	Deg.C	AHU1CSP
VAR3	AHU1 HEATING MODE	Auto	Off	Off/On	HEATMODE
VAR4	AHU1 COOLING MODE	Auto	On	Off/On	COOLMODE
VAR5	AHU1 OVERIDE MODE	Auto	Off	Off/On	AHU1OM
VAR6	AHU1 DAYTIME SETPT	Manual	0.000	Deg.C	AHU1DSP
VAR7	AHU1 FREECOOL AVAIL	Auto	Off	Off/On	AHU1COOL
VAR8	AHU1 SETPOINT ADJUST	Manual	0.000	Deg.C	AHU1SPA
VAR9	AHU1 SETPOINT	Manual	0.000	Deg.C	AHU1SP
VAR10	AHU2 HEATING SETPT	Auto	2.000	Deg.C	AHU2HSP
VAR11	AHU2 COOLING SETPT	Auto	0.000	Deg.C	AHU2CSP
VAR12	AHU2 HAEATING MODE	Auto	Off	Off/On	HEATMOD2
VAR13	AHU2 COOLING MODE	Auto	Off	Off/On	COOLMOD2
VAR14	AHU2 OVERIDE MODE	Auto	Off	Off/On	AHU2OM
VAR15	AHU2 DAYTIME SETPT	Auto	0.000	Deg.C	AHU2DSP
VAR16	AHU2 SETPOINT	Manual	0.000	Deg.C	AHU2SP
VAR17	DAYTIME	Auto	0.000	Unused	DAYTIMER
VAR18	OCCUPIED MODE	Manual	Off	Off/On	OCCUPIED
VAR19	NIGHTTIME SETPOINT	Manual	0.000	Deg.C	NITESP
VAR20	TIMEBASE	Manual	0.000	Counts	TIMEBASE
VAR21	BOILER SUPPLY SETPT	Auto	0.000	Deg.C	BADSETP
VAR22	BOILER SETPT @ 0DEGC	Manual	0.000	Deg.C	BLRSP0
VAR23	AHU2 SETPT ADJUST	Auto	0.000	Deg.C	
VAR24	RTS1 TEMP CHANGE	Auto	0.000	Deg.C	RTSC1
VAR25	LOSS1 THERMAL	Auto	0.000	Unused	LOSS1
VAR26	LOSS2 AIR FLOW	Auto	0.000	Unused	LOSS2
VAR27	ROOM1 AIRFLOW	Manual	0.000	Unused	AIRFLOW1
VAR28	GAIN1 SOLAR HEAT	Auto	0.000	Unused	GAIN1
VAR29	GAIN2 AIR FLOW	Auto	0.000	Unused	GAIN2
VAR30	GAIN3 INTERNAL HEAT	Auto	0.000	Unused	GAIN3
VAR31	AHU1 WARMUP MODE	Manual	Off	Off/On	AHU1WUM
VAR32	TOTAL HEAT GAIN	Auto	0.000	Unused	GAIN
VAR33	TOTAL HEAT LOSS	Auto	0.000	Unused	LOSS
VAR34	NET ENERGY 1	Auto	0.000	Unused	ENERGY1
VAR35	SUPPLY TEMP RISE 1	Auto	0.000	Unused	RISE1
VAR36	RTS2 TEMP CHANGE	Auto	0.000	Unused	RTSC2
VAR37	NET ENERGY 2	Auto	0.000	Unused	ENERGY2
VAR38	SUPPLY TEMP RISE2	Auto	0.000	Deg.C	RISE2
VAR39	DAY OF YEAR	Auto	0.000	Days	DOY
VAR40	OAT ADJUST	Auto	0.000	Unused	OATADJ1
VAR41	AHU1 WARMUP MODE	Auto	Off	Off/On	WARMUP1
VAR42	OAT ADJUST 2	Auto	0.000	Deg.C	OATADJ2
VAR43	AHU2 AIRFLOW	Auto	0.000	Unused	AIRFLOW2
VAR44	LOSS1 THERMAL	Auto	0.000	Unused	LOSS1_2
VAR45	LOSS2 AIR FLOWL	Auto	0.000	Unused	LOSS2_2
VAR46	DOM HOTWATER SETPT	Manual	0.000	Deg.C	DHWSP
VAR47	GAIN1 SOLAR	Auto	0.000	Unused	GAIN1_2
VAR48	GAIN2 AIRFLOW	Auto	0.000	Unused	GAIN2_2
VAR49	GAIN3 INTERNAL	Auto	0.000	Unused	GAIN3_I
VAR50	TOTAL HEAT LOSS2	Auto	0.000	Unused	T_LOSS2
VAR51	TOTAL HEAT GAIN2	Auto	0.000	Unused	T_GAIN2
VAR52	HEAT ENERGY ADDED1	Auto	0.000	Unused	HEATENR1
VAR53	HEAT ENERGY ADDED2	Auto	0.000	Unused	HEATENR2
VAR54	FAN ENERGY ADDED	Auto	0.000	Unused	FANENERG
VAR55	COOL ENERGY ADDED1	Auto	0.000	Unused	COOLENR1
VAR56	COOL ENERGY ADDED2	Auto	0.000	Unused	COOLENR2
VAR57	ENERGY BILL SCAN1	Auto	0.000	Unused	EBILL1
VAR58	RATE OF ENERGY	Auto	0.000	Counts	ERATE
VAR59	ENERGY BILL SCAN2	Auto	0.000	Unused	EBILL2
VAR60	DOM HOTWAT SETPOINT2	Auto	0.000	Deg.C	DHWSP2
VAR61		Auto			
VAR62		Auto			
VAR63		Auto			
VAR64		Auto			
VAR65		Auto			
VAR66		Auto			
VAR67		Auto			
VAR68		Auto			
VAR69		Auto			
VAR70		Auto			
VAR71		Auto			

VAR71		Auto			
VAR72		Auto			
VAR73		Auto			
VAR74		Auto			
VAR75		Auto			
VAR76		Auto			
VAR77		Auto			
VAR78		Auto			
VAR79		Auto			
VAR80		Auto			
VAR81		Auto			
VAR82		Auto			
VAR83		Auto			
VAR84		Auto			
VAR85		Auto			
VAR86		Auto			
VAR87		Auto			
VAR88		Auto			
VAR89		Auto			
VAR90		Auto			
VAR91		Auto			
VAR92		Auto			
VAR93		Auto			
VAR94		Auto			
VAR95		Auto			
VAR96		Auto			
VAR97		Auto			
VAR98		Auto			
VAR99		Auto			
VAR100		Auto			
VAR101		Auto			
VAR102		Auto			
VAR103		Auto			
VAR104		Auto			
VAR105		Auto			
VAR106		Auto			
VAR107		Auto			
VAR108		Auto			
VAR109		Auto			
VAR110		Auto			
VAR111		Auto			
VAR112		Auto			
VAR113		Auto			
VAR114		Auto			
VAR115		Auto			
VAR116		Auto			
VAR117		Auto			
VAR118		Auto			
VAR119		Auto			
VAR120		Auto			
VAR121		Auto			
VAR122		Auto			
VAR123		Auto			
VAR124		Auto			
VAR125		Auto			
VAR126		Auto			
VAR127		Auto			
VAR128		Auto			


Programs

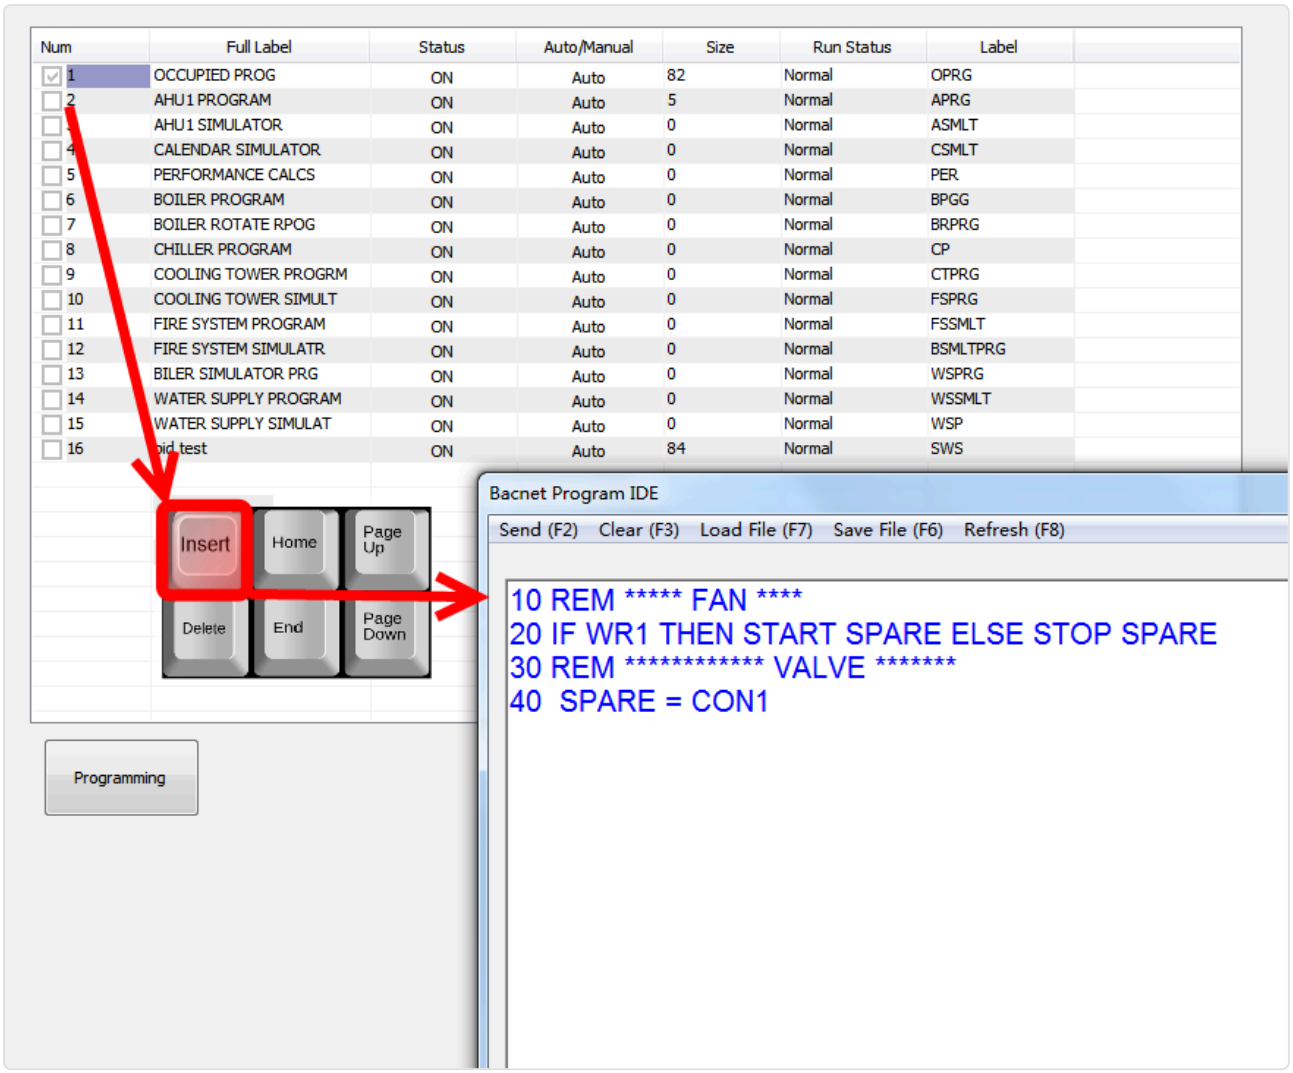

PID Loops

NUM	Input	Value	Units	A/M	Output	Setpoint	Set Value	Units	Action	Prop	Int	Der	Bias
1				Auto	0.0%				-	0	0	0.00	0
2				Auto	0.0%				-	0	0	0.00	0
3				Auto	0.0%				-	0	0	0.00	0
4				Auto	0.0%				-	0	0	0.00	0
5				Auto	0.0%				-	0	0	0.00	0
6				Auto	0.0%				-	0	0	0.00	0
7				Auto	0.0%				-	0	0	0.00	0
8				Auto	0.0%				-	0	0	0.00	0
9				Auto	0.0%				-	0	0	0.00	0
10				Auto	0.0%				-	0	0	0.00	0
11				Auto	0.0%				-	0	0	0.00	0
12				Auto	0.0%				-	0	0	0.00	0
13				Auto	0.0%				-	0	0	0.00	0
14				Auto	0.0%				-	0	0	0.00	0
15				Auto	0.0%				-	0	0	0.00	0
16				Auto	0.0%				-	0	0	0.00	0

Graphics

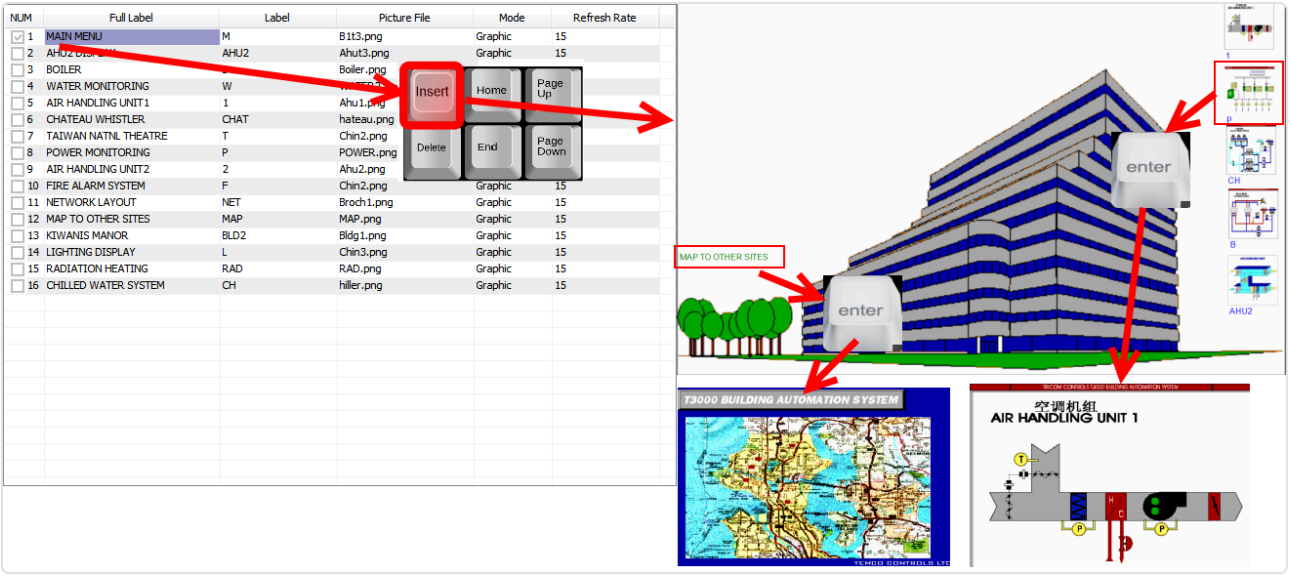
NUM
Full Label
Label
Picture File
Mode
Refresh Rate
1 MAIN MENU M B1t3.png Graphic 15
2 AHU2 DISPLAY AHU2 Ahut3.png Graphic 15
3 BOILER Boiler.png
4 WATER MONITORING W
5 AIR HANDLING UNIT1 1 Ahu1.png
6 CHATEAU WHISTLER CHAT hateau.png
7 TAIWAN NATNL THEATRE T Chin2.png
8 POWER MONITORING P POWER.png
9 AIR HANDLING UNIT2 2 Ahu2.png
10 FIRE ALARM SYSTEM F Chin2.png Graphic 15
11 NETWORK LAYOUT NET Broch1.png Graphic 15
12 MAP TO OTHER SITES MAP MAP.png Graphic 15
13 KIWANIS MANOR BLD2 Bldg1.png Graphic 15
14 LIGHTING DISPLAY L Chin3.png Graphic 15
15 RADIATION HEATING RAD RAD.png Graphic 15
16 CHILLED WATER SYSTEM CH hiller.png Graphic 15
Insert
Home
Page Up
Delete
End
Page Down
MAP TO OTHER SITES
enter
enter
T3000 BUILDING AUTOMATION SYSTEM
空调机组
AIR HANDLING UNIT 1