TEMCO LEARN


TStat8

AUTO Mode · built Nov 12, 2026

AUTO Mode




Heating/Cooling Stage

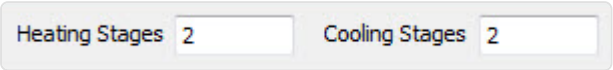


Set the number of stages of heating and cooling.

Fan Aut

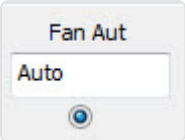

Fill in the grid for the Auto mode.


Heat2

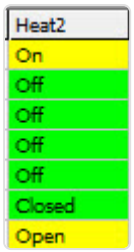

Heat2
On
Off
Off
Off
Off
Closed
Open

Heat2 will be on in the column called Heat2 and off for the other stages and so on. The fan is on all the time as shown by the FAN row with all yellow entries.

Coast

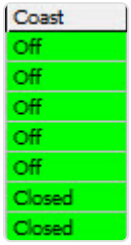

Coast
Off
Off
Off
Off
Off
Closed
Closed

You could optionally turn the fan off during coasting by setting the cell to OFF.