

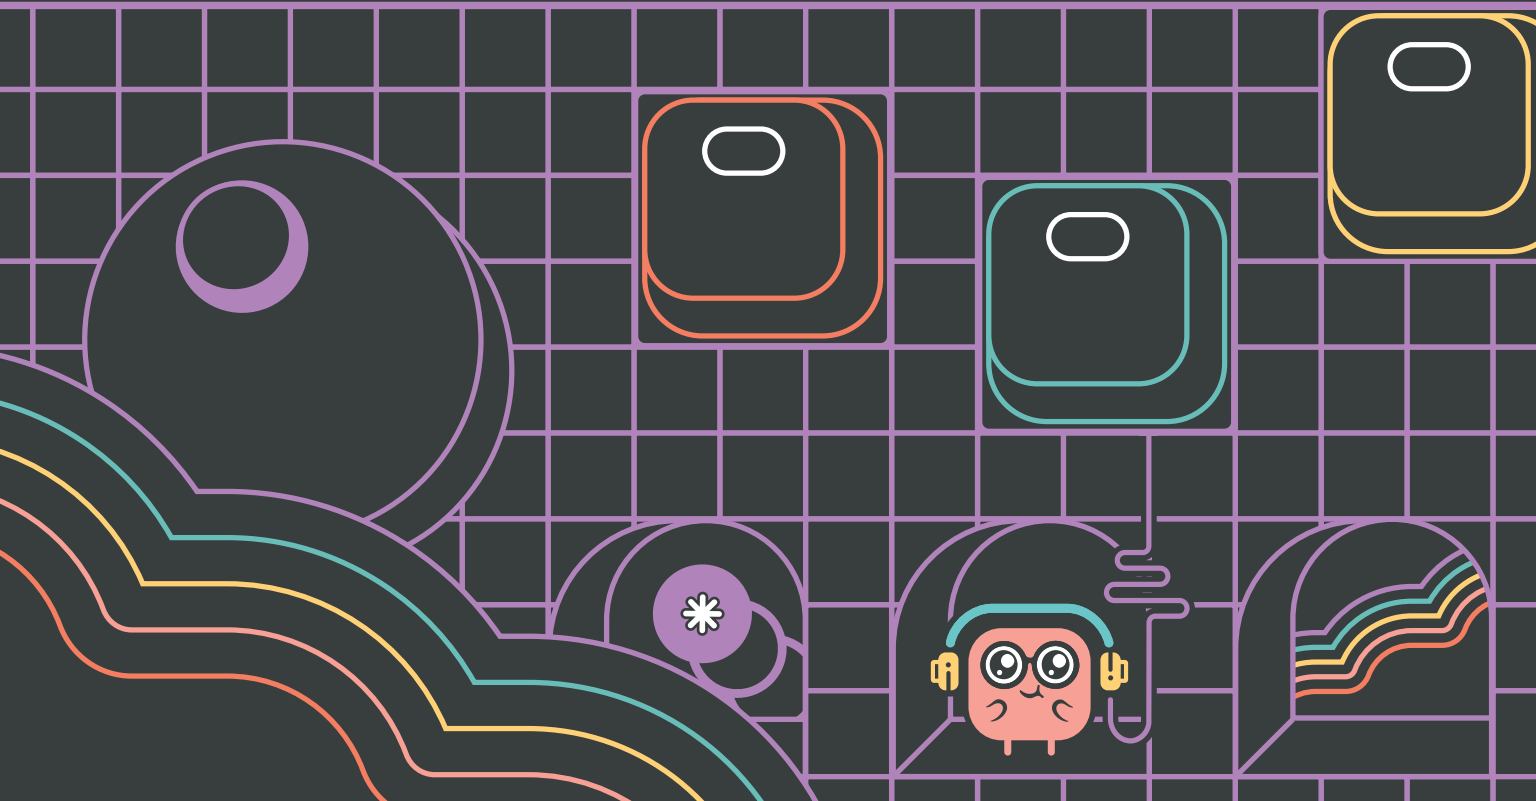


Table of Contents

- 1 Overview
- 2 Hardware
- 3 Setup
- 4 Getting Started
- 6 Controls
- 7 Sampler
- 8 Sound Design
- 10 Multi-FX
- 11 Looper
- 12 Volume + Routing
- 13 SD Card: Firmware
- 14 Cheat Sheet
- 15 Bye



Recommended USB-C power requirement: 5V = 2A

Overview



CHOMPI

Hello!

Welcome to CHOMPI — a quirky, chromatic sampler instrument made for self-expression through sound design.

TAPE

With its unique stereo sampling engine, expressive multi-effects and varispeed “tape” style looper, CHOMPI is ready for immediate fun.


This mini guide provides a quick start reference to **CHOMPI's TAPE firmware**.

Highlights:

- 7 Voice Polyphony
- Chromatic & One-Shot Samples
- 16-bit 48kHz Stereo Audio I/O
- Built-in Microphone
- Built-in Rechargeable Battery
- Real time audio thru mode for live FX and loop recording



Visit chompiclub.com for downloads, video tutorials, manuals, and resources to help along your journey.

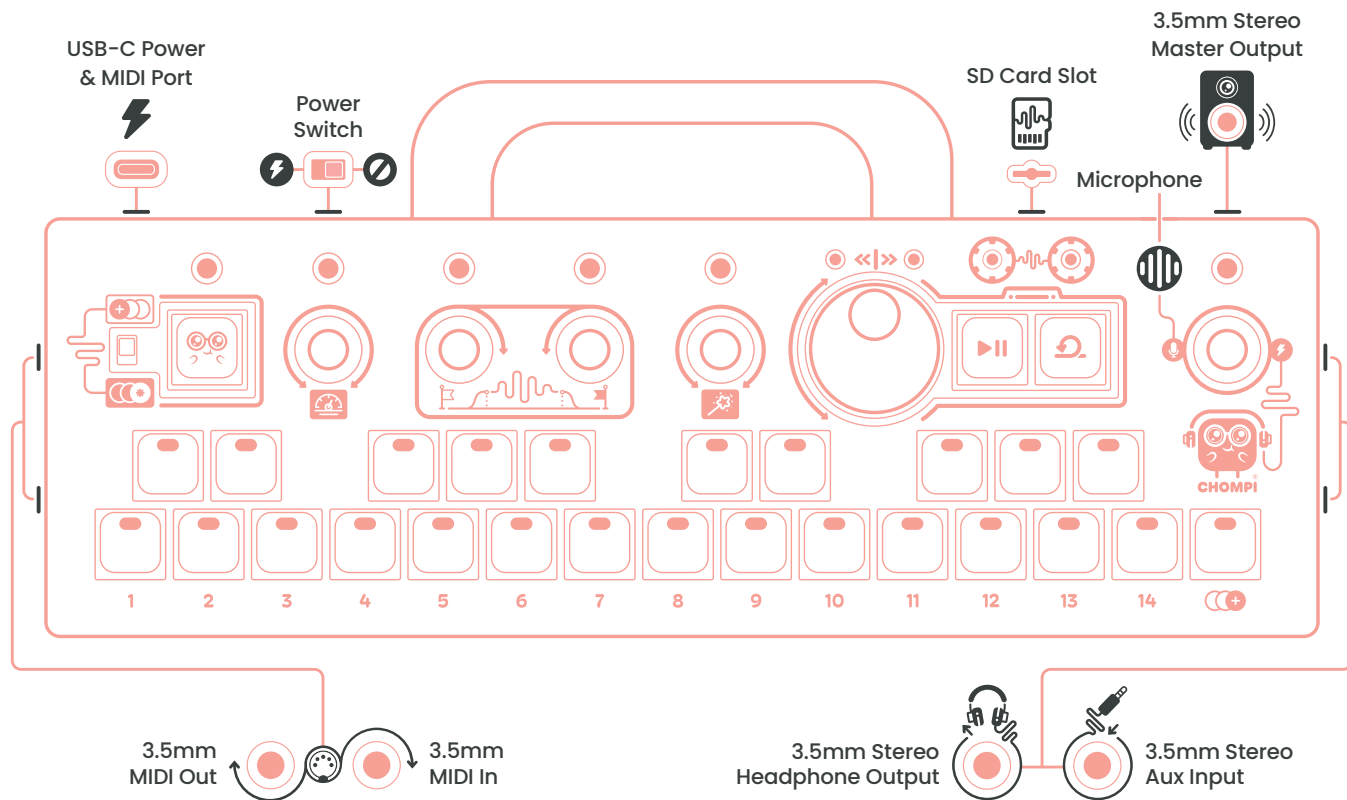

Setup

Here's some helpful info to know as you begin exploring.

When you first unbox your CHOMPI, connect it to a USB power source and charge the built-in battery for about 2 hours. Feel free to play CHOMPI at the same time.

POWER

To start, flip the switch  and enjoy the lightshow.



USB-C Power & MIDI Port

Minimum power requirement: $5V = 1A$ using a type C or A-to-C cable, but we recommend a USB charging source with $5V = 2A$ or higher for optimal performance. CHOMPI can run on its built-in LiPo battery for approximately 3-4 hours.



AUDIO



Microphone

CHOMPI contains a built-in high-quality microphone. The sensitivity of the microphone can be adjusted on the second page of the Volume Encoder (pg. 12).



Micro SD Card

CHOMPI comes preloaded with a handful of samples, but you can also import and export samples to and from your computer with the included Micro SD card. The SD card is also used for updating firmware (pg. 11).



I/O

There are a variety of ways to get sound in and out of CHOMPI.

3.5mm Stereo Headphone Output

Use this output for headphones and to monitor the built-in mic.



3.5mm Stereo Aux Input

Use this input to bring external sounds into CHOMPI.



3.5mm Stereo Master Output



If using CHOMPI with a pair of speakers or mixer, we recommend using a 3.5mm stereo cable plugged into this "Master Output" jack. This output contains only the master signal (not the input monitor) to avoid feedback when using the mic for sampling.

Stereo In, Stereo Out



3.5mm Aux Cable

All of CHOMPI's inputs and outputs are stereo. You may need a TRS to dual-mono TS splitter cable for use with other devices.



MIDI

CHOMPI is a class-compliant MIDI device which sends and receives MIDI data through both the USB-C port and the two 3.5mm MIDI (Type A) ports. With these, CHOMPI can be used as a MIDI keyboard, or with other MIDI compatible gear to control CHOMPI's primary functions.

3.5mm MIDI Out




3.5mm MIDI In



MIDI over USB

Getting Started

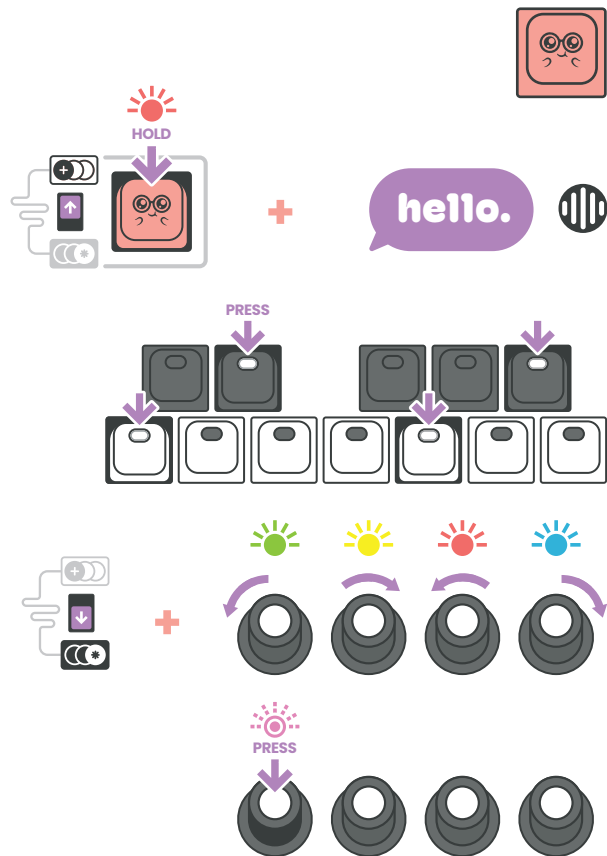

This is the **CHOMPI KEY** and you will be using it a lot.

In the **UP** position it's your record button.

In the **DOWN** position it's your shift button.

We're going to start by recording our first sample.

To do this, simply hold down the **CHOMPI KEY** when the **MODE SWITCH** is in the **UP** position. The recording will end when you release it. Give it a try:

Hold down the **CHOMPI KEY** and say **"hello."**


*hello.
hello.
hello.
hello.*

Now play some keys on the keyboard – you should hear your voice playing back at different speeds.


Next, let's put the **MODE SWITCH** in the **DOWN** position and start shaping that sample. We'll make sense of all this later, for now just explore and listen to the way that these four encoders transform your sound.

Each encoder has additional, related pages that you can access by pushing them down. There's no way to go wrong here, just mess around for a while. You can always go back to the original sound later.


Getting Started

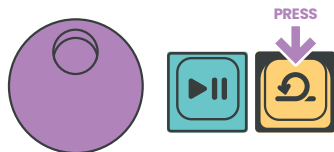


CHOMPI gives you the essential tools of sound design, but where it all really starts to come alive is when you get the **LOOPER** involved and start building musical compositions.

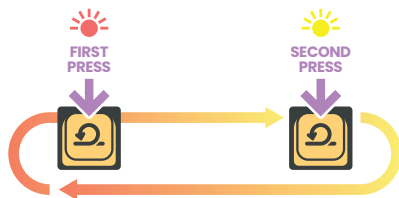

Press the **RECORD KEY** once to start recording. Press it again to set the length of your loop.

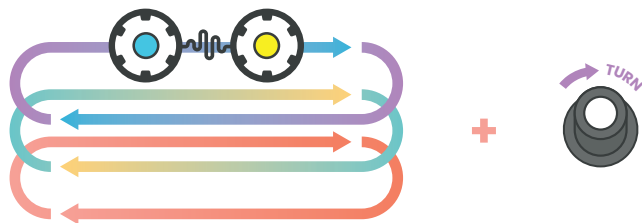

From this point onwards, every sound you make will simply pile on top. Try using the encoders to change the sound of your sample so that each layer has a distinct character.

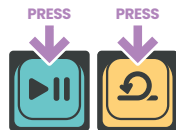


If you want to start fresh, hold down the **PLAY / PAUSE** and **RECORD KEYS** to delete your loop and start over.

By this point you probably have some questions, so let's get into how CHOMPI actually works.



Press Encoders: All of CHOMPI's knobs are endless push-button encoders. Press to cycle through pages and access additional menu features.

TAPE

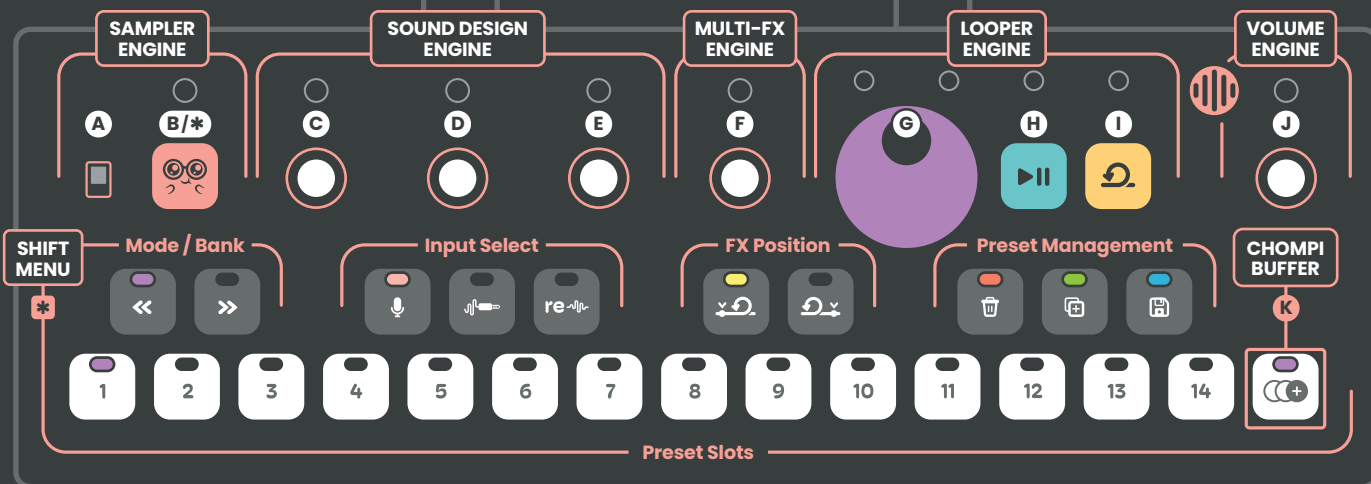

Mode / Bank

Switch between Chromatic and One-Shot samples: press either key to cycle between Banks.

- ◀▶ Chromatic (JAMMI)
- ▶▶ One-Shot (CUBBI)

FX Position

Toggle the position of the FX in the signal path (Pre or Post-Looper).

- Pre-Looper
- Post-Looper

Input Select

Select which sound source will send signal to the Sampler Engine.

- Microphone
- Aux Input
- Re-Sample

Preset Management


Press the desired function, follow the LED indicators, then confirm by pressing the CHOMPI key.

- Erase
- Copy
- Save

Sampler

A MODE SELECT SWITCH

- Up: CHOMPI Mode
Down: JAMMI Mode

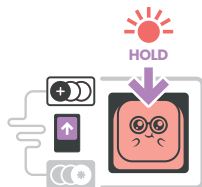

B/* CHOMPI KEY



CHOMPI MODE: Sample Record

CHOMPI Mode is where you can record new samples. To do this, simply hold down the **CHOMPI KEY**. The new sample will be available to play instantly. It will also be stored in the temporary sampling buffer **K**.



JAMMI MODE: *Shift Key

JAMMI Mode is where you can access a deeper level of control. Here the **CHOMPI KEY** accesses a variety of shift parameters, opening up the ability to save and recall samples and control secondary functions.

- See **Shift Menu Diagram** (pg. 6).

K CHOMPI BUFFER KEY



Sampling Buffer: Temporary Sample Slot

The CHOMPI Buffer is where sounds are temporarily stored when they are first recorded into CHOMPI. You can play them chromatically or as a one-shot. These sounds will be deleted when CHOMPI is turned off or you record a new sample, so save them to a preset slot if you want to keep them around for later.



* MODE / BANK

The TAPE firmware has two different sample engines, each with 5 banks of 14 preset slots.

Be sure to have the **CHOMPI KEY** in the **DOWN** position to navigate between them.

<< JAMMI ENGINE (default)



Plays a single sample chromatically across the two-octave chromatic keyboard (both black + white keys).

<< + Slots 1 - 14: Chromatic Samples

- 5 banks of samples.
- Up to 7 voices of polyphony.


>> CUBBI ENGINE




Plays a one-shot sample on the lower row of white keys. Each white key can hold a completely different sample.

>> + Slots 1 - 14: One-Shot Samples

- 5 banks of samples.
- Useful for creating rhythms and storing / recalling loops.

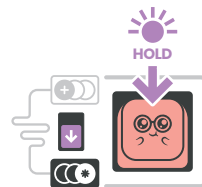


Chromatic

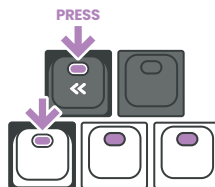

OR

One-Shot

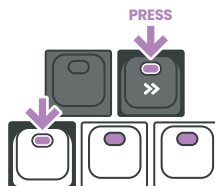



CHOMPI's a hungry little thing that goes around munching and crunching all kinds of audio into otherworldly instruments.

From ordinary everyday objects to old cassettes, traditional music-makers to environmental textures — **sound is all around, just waiting to be captured.**

CHOMPI's Sound Design Engine is where you will begin shaping, trimming, and adjusting your samples to get them dialed-in for playback, layering, and more.

TRY THIS:

Use parameters as performance effects during sample playback.

Create gliding bends, momentary reversals, or swirling ping pongs with the Sample Staging Knob.

C SAMPLE STAGING KNOB



Pg 1

Turn: Speed / Direction


Lets you smoothly adjust the sample's playback speed for pitch bends and fine tuning.

*Shift + Turn: Speed / Direction (Stepped)

Lets you adjust the sample's playback speed in musical steps for harmonized transposition.

*Shift + Press: Reset Speed / Direction


Resets sample speed and direction back to the original recording.

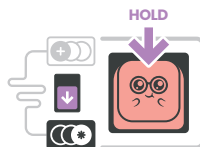

Hold the
CHOMPI KEY
to access the
shift functions.



Press the encoder
to move between
parameter pages.

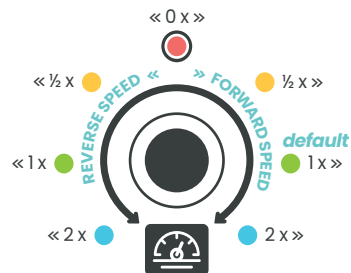

Pg 2

Turn: Sample Volume

Adjusts the level per sample.

default
65%




Pg 2

*Shift + Turn: Sample Pan

Adjusts stereo placement.

default
Stereo

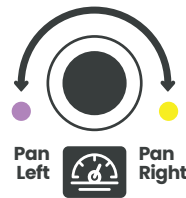



D SAMPLE ENVELOPE KNOB »|

☀️ Turn: Sample Start Point


Pg 1

*Shift + Turn: Move Sample Window

Nudges both start and end points in tandem.

*Shift + Press: Sample Looping Toggle

Controls whether samples will repeat when the end point is reached.

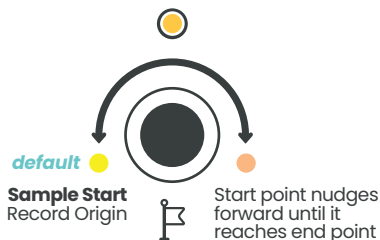


☀️ Turn: Attack Envelope

Pg 2

Adjusts the sample's fade-in time.

*Shift + Turn: Move Envelope in Tandem

Adjusts attack and decay settings in tandem.

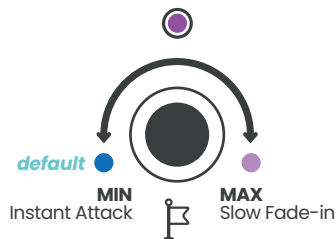

E SAMPLE ENVELOPE KNOB |«

☀️ Turn: Sample End Point


Pg 1

*Shift + Turn: Move Sample Window

Nudges both start and end points in tandem.

*Shift + Press: Envelope Sustain Toggle

Controls whether samples will sustain or just follow the envelope settings.

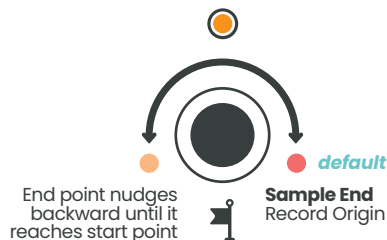


☀️ Turn: Release Envelope

Pg 2

Adjusts the sample's fade-out time.

*Shift + Turn: Move Envelope in Tandem

Adjusts attack and decay settings in tandem.

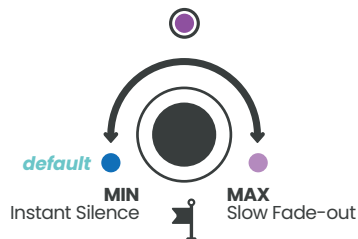


F MAGIC WAND FX KNOB




Turn: Stereo Delay + Reverb

A dreamy combination of delay and reverb indicated by a sweeping range of intensity.

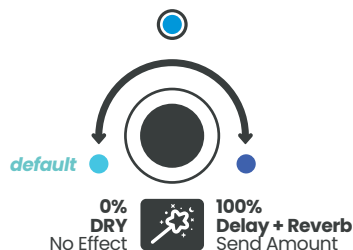


*Shift + Turn: Delay Time

Adjusts timing from tight rhythmic delays to dense layers of sound.

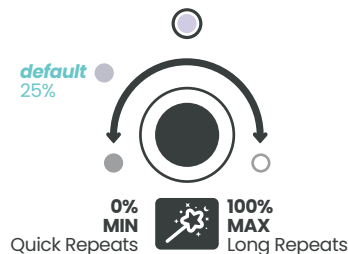


Turn: Tape Saturation

An increasing range of saturation and overdrive, moving from subtle warmth into blown out sound.

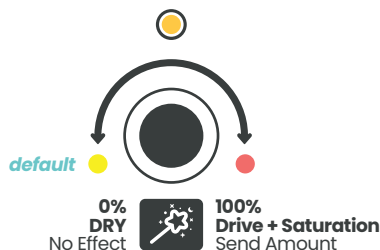


*Shift + Turn: Wow + Flutter

Adds wobbly lo-fi pitch modulation — emulating an old tape machine.

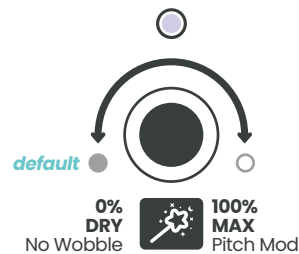


Turn: Multi-Mode Filter

A sweeping cutoff filter ranging from a mellow Low-pass to a cold and thin High-pass.

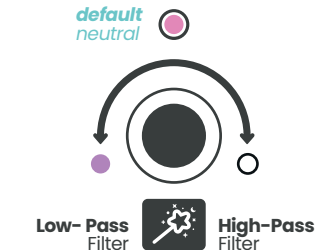

*Shift + Turn: Resonance Amount

Creates a pronounced boost at the cutoff point of the filter.

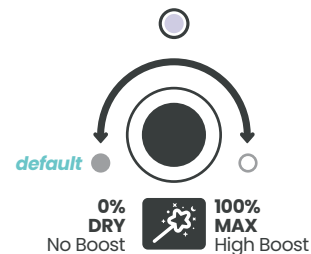

TIP: *Shift + Press the MAGIC WAND FX KNOB to reset ALL FX parameters at once.

G TRANSPORT KNOB

Turn: Loop Speed / Direction

When loop is playing:

Controls loop playback speed / direction.

When loop is paused:


Manual tape transport control / scrub.

Press: Reset Playback Speed

Press once to reset the loop back to the original recorded speed / direction.

***Shift + Turn:** Stepped Loop Pitch / Speed

Changes occur in steps of 5ths and octaves.

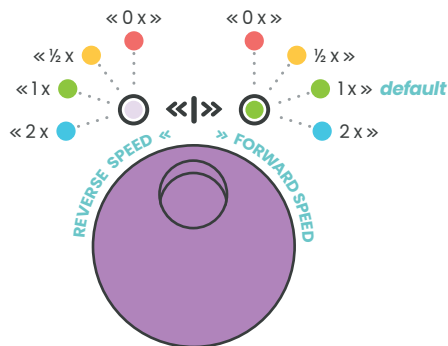

TIP: Take a sample of your loop by switching the INPUT SELECT to Re-Sample. Then flip the MODE SWITCH UP and use the CHOMPI KEY (pg.6).

H PLAY / PAUSE KEY



Press: Loop Playback

Starts and stops loop playback. You can also press this key to go into playback (instead of overdubbing) when first recording a loop.

***Shift + Press:**

Overdub Decay ON

Lowest the feedback of the loop so that old material will fade out when overdubbing. Each press lowers the feedback by 10%.



LOOPER ACTIONS




Looper LEDs: Playback Position

The LEDs above the **PLAY / PAUSE** and **LOOP KEYS** fade between each other to show where in the loop you are hearing the playback.



Hold PLAY / PAUSE then press LOOP KEY: Record Cue

While holding **PLAY / PAUSE**, press and release the **LOOP KEY** to arm loop record function. Looper is now armed and will wait to start recording until the first note is pressed on the keyboard.

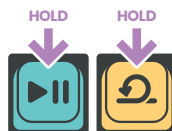

Hold PLAY / PAUSE + LOOP KEY: Erase Loop

Press and hold both the **PLAY / PAUSE + LOOP KEY** for 2 seconds to clear the loop.

I LOOP KEY



1st Press: Start Recording

2nd Press: Sets Loop Length

Further Presses: Toggle between overdubbing and playback


● = Overdub recording is active.

○ = Playing without overdub.

***Shift + Press:**

Overdub Decay OFF

Increases the feedback of the loop to return to standard loop operation. Each press increases the feedback by 10%.

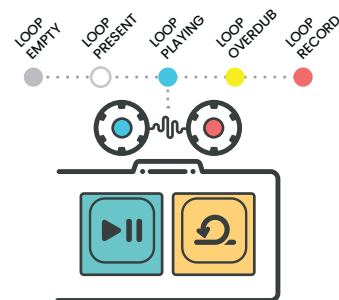

Volume + Routing


J GAIN CONTROL KNOB



Pg 1

Turn: Master Volume

Controls overall output level of device.
(Master and Headphone Outputs)


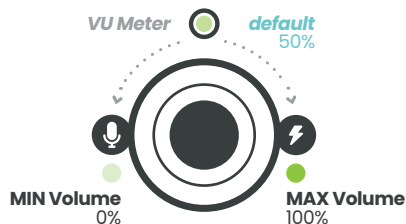


Pg 2

Turn: Input Gain

Controls gain level of selected input.

- Built-in Microphone
- Stereo Aux Input
- Re-Sample

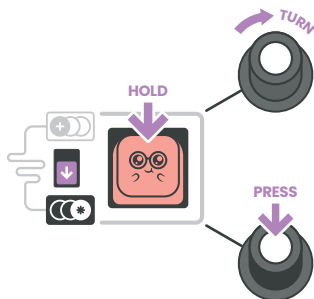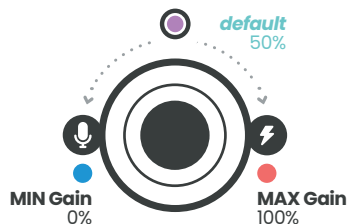

*Shift + Turn: Master Compression

Adds compression at the end of signal chain.

*Shift + Press: Toggles Routing Position

- Position 1 (default)** – Dry monitor sent directly to the Sample Engine and Headphone Output.
- Position 2** – Wet monitor passes through the Sample Engine, FX, and Looper to both outputs.
- Position 3** – Master Output is used as an FX send and the Aux Input is the return; Headphone Output is dedicated as the main output.

Long Press: Battery Level (*low, mid, or high*)

Hold for 2 seconds to indicate level of battery charge.

TRY THIS:

Pair CHOMPI with your favorite pedal!

Use Position 3 to send audio from CHOMPI out to an effects pedal, and then back into CHOMPI to create something entirely new.



CHOMPI's Micro SD card is a powerful little tool.

This is where CHOMPI's firmware, configuration files, and samples live.

CHANGING YOUR FIRMWARE

All CHOMPI users have free access to alternate firmwares, and it's real easy to swap between them. CHOMPI will simply detect the new firmware on the SD card and automatically load it on boot-up.

The Micro SD card must be inserted for CHOMPI to operate.

To update the firmware on your CHOMPI, you will need the following:



Micro SD Card



Standard Micro SD Card Adapter
(for your computer)



Computer



New Firmware Files

Download Firmware and Card Profiles on chompclub.com

- 1 Power OFF and carefully eject the Micro SD card from CHOMPI.




- 2 Connect the card to your computer using an adapter.




- 3 Delete all existing files from the Micro SD card and be sure to empty the trash.

This is a good time to back up your current sample files as well.



- 4 Download and unzip the new firmware file. Drag and drop ALL contents of the folder onto the the Micro SD card.

Note: be sure there are no duplicates or additional files.

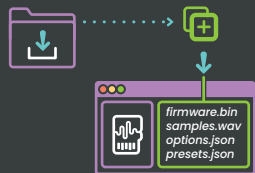

- 5 Eject the Micro SD card from your computer.



- 6 Carefully place the Micro SD card back into CHOMPI and turn it on!



CHOMPI will take care of the rest! You will see a nice little light show to indicate the firmware is being loaded. Once it's done, you're ready. Have fun!

Cheat Sheet





SAMPLE STAGING KNOB

- Pg 1** **Playback Speed / Direction**
● << 0x >> ● << 1/2 x >>
● << 1x >> ● << 2x >>
- Pg 2** **Sample Volume**
● 0% Min ● 100% Max
- * + Turn: Sample Pan**
● Pan Left ● Pan Right

SHIFT FUNCTIONS



= *Shift Function
HOLD



SAMPLE ENVELOPE KNOBS



SAMPLE START >>|

- Pg 1** **Sample Start Point**
● Record origin ● End
- Pg 2** **Sample Attack**
● Instant ● Slow
- ALL** *** + Press: Looping Toggle**
● On ● OFF



SAMPLE END |<<

- Pg 1** **Sample End Point**
● Record origin ● End
- Pg 2** **Sample Decay**
● Instant ● Slow
- ALL** *** + Press: Sustain Toggle**
● On ● Off



MAGIC WAND FX KNOB

- Pg 1** **Stereo Delay + Reverb**
● 0% Dry ● 100% Max
- * + Turn: Delay Time**
● 0% Off ● 100% Faster
- Pg 2** **Tape Saturation**
● 0% Dry ● 100% Max
- * + Turn: Wow + Flutter**
● 0% Off ● 100% Wobble
- Pg 3** **Multi-Mode Filter**
● Low-Pass ● High-Pass
- * + Turn: Resonance**
● 0% Off ● 100% Boost



GAIN CONTROL KNOB

- Pg 1** **Master Volume**
● 0% Min ● 100% Max
- Pg 2** **Input Gain**
● 0% Min ● 100% Max
- ALL** *** + Turn: Master Compression**
● Low ● High
- * + Press: Routing Position Toggle**
● 1 ● 2 ● 3

Quick Tips

CUSTOMIZE YOUR CONFIGURATION

Use the **CONFIG** tool on chompclub.com to adjust the default user options for your CHOMPI.

SAMPLE AND SD CARD FORMATTING

Sample Format: 16bit 48khz Stereo .WAV files.

Micro SD Card Format: MS-DOS (FAT32).

POWER AND CHARGING

A 15 sec timer flashes all the LEDs yellow when low battery threshold is reached. Time to charge.


Bye

**This is the end of the
CHOMPI TAPE mini guide.**

Hope you're feeling excited to go explore your CHOMPI!

Write us anytime if you'd like to know more:
chompi@chasebliss.com

We're happy to help.

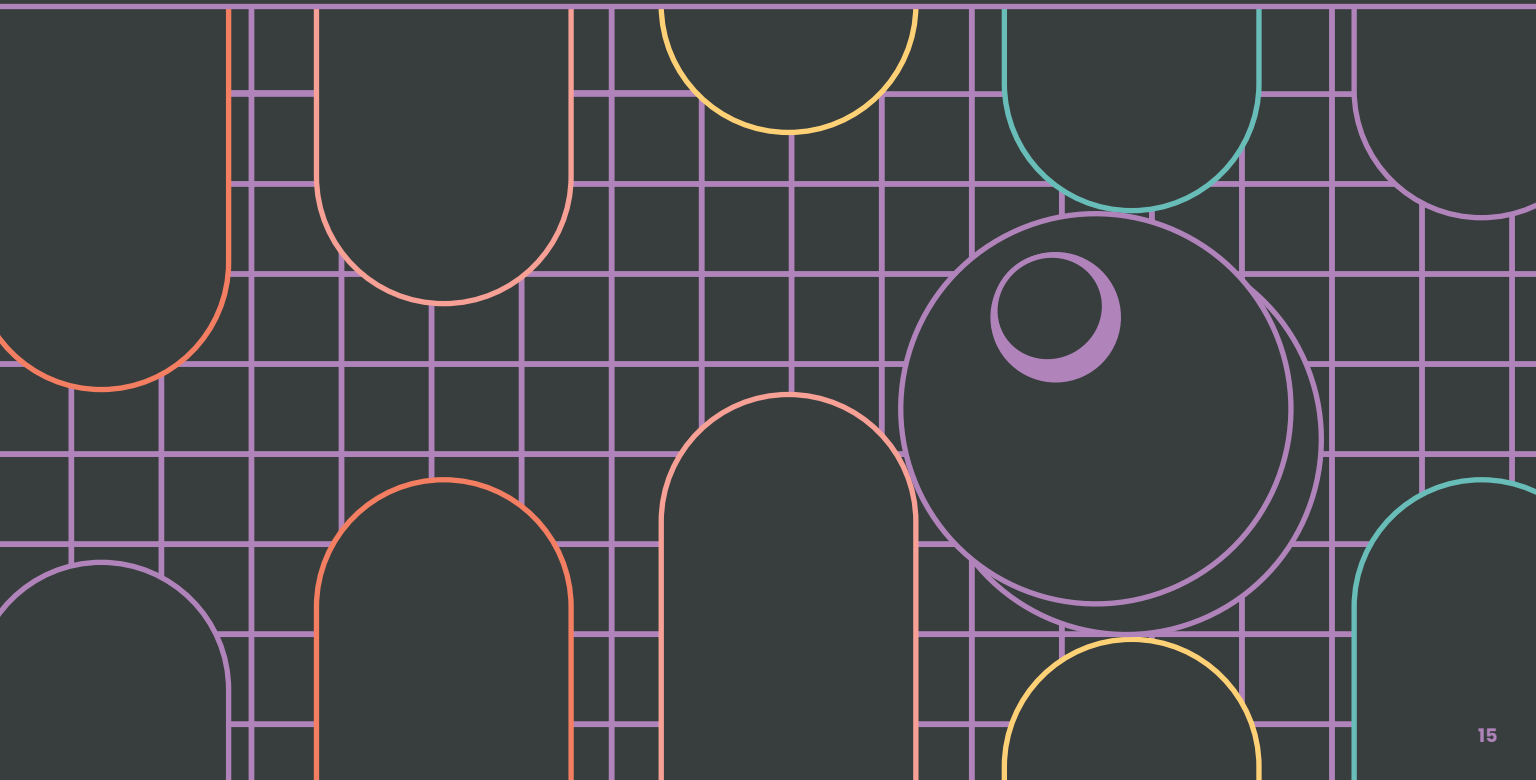

Jam Notes



chasebliss.com
chompiclub.com

