



Open Chiplet Atlas Harness (OCAH)

Integrator Guide

Version 0.0.7, 2026-09-11

Table of Contents

SoC Integration Checklist	2
1. Integration gates	3
SMU Top-Level Integration	4
2. Address Map Integration	5
2.1. Register collateral	5
3. Immutable ROM FW Integration	7
3.1. Weak-symbol override method	7
3.2. SMC ROM FW integration	7
3.3. SEP ROM FW integration	8
3.4. Key Manager ROM FW integration	8
4. System Management Controller (SMC) Integration	9
4.1. Clock and Reset	9
4.2. Address Map and Aperture	9
4.3. AXI Interface Configuration	10
4.4. GPIO Pad Integration	10
4.5. Peripheral Interface Connections	11
4.5.1. Adopter Peripheral Window	11
4.5.2. eFuse Interface	11
4.6. Memory Subsystem Integration	12
4.6.1. SRAM and Cache Array Integration	12
4.7. Memory Repair Integration	12
4.8. Interrupt Integration	14
4.9. Telemetry and Debug Integration	14
4.10. Bring-Up Sequence	14
4.11. SMC Port Interface	15
4.12. GPIO Pin Requirements	19
5. Debug & Test Ports (DTP) Integration	24
5.1. Configuration	24
5.2. Instantiation	24
5.3. Clock and Reset	24
5.4. Constraints	25
5.5. STAP Scan Chain Topology	25
5.6. DTP Port Interface	25
6. Security Processor (SEP) Integration	30
6.1. Module Overview	30
6.2. Clock and Reset Requirements	30
6.3. AXI Interfaces	30
6.4. Memory Interfaces	31
6.5. Cryptographic Subsystem Connections	31
6.5.1. External TRNG	31
6.6. eFuse and Lifecycle	31
6.7. SPI Host Interface	32

6.8. Bring-Up Considerations	32
6.9. SEP Port Interface	32
7. SMU Composition and Internal Wiring	37
7.1. Module Variants and IP Integration	37
7.1.1. IP Integration Modules	38
7.1.2. Wrapper Clock Architecture	38
7.2. Clock and Reset Architecture	38
7.3. SMU AXI Crossbar Address Map	39
7.3.1. Firmware programming order	39
7.4. SMU Default Parameters	39
7.5. IC_RESET TDR Structure	40
7.5.1. SMC slice (TDI to TDO)	41
7.5.2. SEP slice (TDI to TDO)	41
7.5.3. External slice (adopter-defined)	41
7.6. DTP Parameter Pass-Through	41
7.6.1. JTAG Configuration Parameters	42
7.6.2. JTAG ID Parameters	42
7.6.3. Cross Trigger Parameters	42
7.6.4. Pipeline Depth Parameters	42
7.6.5. Type Parameters	43
7.7. DTP Port Mapping	43
7.7.1. Clock and Reset	43
7.7.2. Primary JTAG TAP Interface	43
7.7.3. Boundary Scan Interface	43
7.7.4. I/O STAP Interface	44
7.7.5. SMC Debug STAP Interface	44
7.7.6. SEP Debug STAP Interface	44
7.7.7. Extra STAP Interfaces	44
7.7.8. Extended STAP Scan Interface	44
7.7.9. DFD iJTAG Interface	45
7.7.10. DFT iJTAG Interface	45
7.7.11. SMC Fabric Debug AXI Interface	45
7.7.12. SMC OTP Debug AXI-Lite Interface	45
7.7.13. SEP OTP Debug AXI-Lite Interface	45
7.7.14. Clock Control	45
7.7.15. Boot Stall Control	46
7.7.16. JTAG Reset Control	46
7.7.17. JTAG State Outputs	46
7.7.18. Cross Trigger CSR AXI-Lite Interface	46
7.7.19. Cross Trigger Matrix Interface	46
7.7.20. Clock Stop Request Interface	47
7.7.21. Cross Trigger Port GPIO Interface	47
7.8. SMC Port Mapping	47
7.8.1. Clocks	47

7.8.2. Resets	48
7.8.3. System AXI Input	48
7.8.4. JTAG AXI Input	48
7.8.5. SMC OTP JTAG AXI-Lite	48
7.8.6. SEP AXI Input	48
7.8.7. AXI Output	48
7.8.8. DTP CSR Interface	48
7.8.9. Adopter Peripheral Window AXI-Lite	49
7.8.10. eFuse Interface	49
7.8.11. GPIO Data Signals	49
7.8.12. GPIO External Pins	49
7.8.13. ATB Telemetry	49
7.8.14. DED/WDT	50
7.8.15. Region Size	50
7.8.16. External Interrupts	50
7.8.17. Fuse Signals	50
7.8.18. DFT Signals	50
7.8.19. Lifecycle State	50
7.8.20. Mailbox Interrupts	50
7.8.21. Reset Unit Signals	51
7.8.22. CPU Memory Signals	51
7.8.23. Memory Init	51
7.8.24. System Timer OCTS Interface	51
7.8.25. Reset Overrides (from DTP)	51
7.8.26. DFD Signals	52
7.8.27. Cross Trigger Interface	52
7.8.28. Trace Memory	52
7.8.29. External Debug Bus	52
7.8.30. Test Mode	52
7.9. SMC-DTP Internal Interconnection	52
7.10. SEP-Conditional Wiring	53
7.10.1. Other Internal Tie-offs	53
7.11. SMU Port Interface	53
System Management Network (SMN) Integration	62
8. Status	63
AXI-over-UCIe Bridge (AoU) Integration	64
9. Integration guide	65
References	65
Integration Options	65
1. Module Overview	65
1.1 AOU_TOP	65
1.2 AOU_CORE_TOP	66
2. Parameter List	68
FDI_CONFIG values	70

Build flags	70
3. Interface Signals	70
3.1 Clock and Reset	70
3.2 APB Slave Interface	71
3.3 AXI Master (RX) – AR Channel	71
3.4 AXI Master (RX) – R Channel	71
3.5 AXI Master (RX) – AW Channel	71
3.6 AXI Master (RX) – W and B Channels	72
3.7 AXI Slave (TX) – AR Channel	72
3.8 AXI Slave (TX) – R Channel	72
3.9 AXI Slave (TX) – AW, W, B Channels	73
3.10 PHY and FDI (Flit Data Interface)	73
3.11 Interrupt and Error (to Error Handler)	74
3.12 UCIE / External Control and Status	75
3.13 DFT	75
3.14 FDI Bringup Control Interface (AOU_TOP only)	77
3.15 FDI Bringup Software Control (AOU_TOP only)	77
3.16 FDI Bringup Status (AOU_TOP only)	78
3.17 AOU_CORE_TOP-only Ports (not on AOU_TOP)	78
4. Software operation Guide	78
4.1 Register Map	78
5. Interrupts	78
6. Activation Flow	79
6.1 Credit Management Type	79
6.2 Activation Start	80
6.3 Deactivation Start	80
6.4 Activation/Deactivation Interrupt	84
6.5 PM Entry / LinkReset / LinkDisabled Sequence	84
6.6 FDI Bringup Flow (AOU_TOP only)	85
7 Verification Testbench	89
7.1 Architecture	90
7.2 Components	90
7.3 Running the Testbench	91
8. IP Integration Collateral	92
8.1 Generated Outputs (Phase 1)	92
8.2 Single Source of Truth	92
8.3 Regeneration	92
8.4 Planned: Full IP-XACT Component (Phase 2)	93
8.5 Timing Constraints (SDC)	93
8.6 UPF Power Intent	94
8.7 Library Cell Replacement	94
Project Defines	97
10. SIMULATION	98
Prim Cell Replacement and Don't-Touch Constraints	99

11. Naming Requirement	100
12. Constraint Requirement	101
12.1. After Synthesis	101
13. Simulation	103
CDC Timing Constraints	104
14. Why crossings are bounded rather than timed	105
15. What is constrained	106
15.1. Why protocol-protected data still needs a bound	106
16. The two layers	108
17. What is covered	109
18. Integration checklist	110
18.1. 1. Repoint the constraints at the pin of the cell inside the prim wrapper	110
18.2. 2. Point the files at your hierarchy, or regenerate	110
18.3. 3. Set the default bound	111
18.4. 4. Declare your own clock groups	111
18.5. 5. Declare periods for generated clocks	112
18.6. Also check	112
19. Confirming it worked	113
20. Scope and limitations	114
Revision History	115
21. Document history	116
22. SMU Top-Level Integration	117
22.1. Address Map Integration	117
22.1.1. Register collateral	117
22.2. Immutable ROM FW Integration	118
22.2.1. Weak-symbol override method	118
22.2.2. SMC ROM FW integration	118
22.2.3. SEP ROM FW integration	119
22.2.4. Key Manager ROM FW integration	119
22.3. System Management Controller (SMC) Integration	119
22.3.1. Clock and Reset	119
22.3.2. Address Map and Aperture	120
22.3.3. AXI Interface Configuration	121
22.3.4. GPIO Pad Integration	121
22.3.5. Peripheral Interface Connections	121
22.3.6. Memory Subsystem Integration	123
22.3.7. Memory Repair Integration	123
22.3.8. Interrupt Integration	124
22.3.9. Telemetry and Debug Integration	125
22.3.10. Bring-Up Sequence	125
22.3.11. SMC Port Interface	125
22.3.12. GPIO Pin Requirements	130
22.4. Debug & Test Ports (DTP) Integration	133
22.4.1. Configuration	134

22.4.2. Instantiation	134
22.4.3. Clock and Reset	134
22.4.4. Constraints	134
22.4.5. STAP Scan Chain Topology	135
22.4.6. DTP Port Interface	135
22.5. Security Processor (SEP) Integration	139
22.5.1. Module Overview	139
22.5.2. Clock and Reset Requirements	139
22.5.3. AXI Interfaces	139
22.5.4. Memory Interfaces	140
22.5.5. Cryptographic Subsystem Connections	140
22.5.6. eFuse and Lifecycle	140
22.5.7. SPI Host Interface	141
22.5.8. Bring-Up Considerations	141
22.5.9. SEP Port Interface	141
22.6. SMU Composition and Internal Wiring	145
22.6.1. Module Variants and IP Integration	145
22.6.2. Clock and Reset Architecture	146
22.6.3. SMU AXI Crossbar Address Map	146
22.6.4. SMU Default Parameters	147
22.6.5. IC_RESET TDR Structure	148
22.6.6. DTP Parameter Pass-Through	149
22.6.7. DTP Port Mapping	151
22.6.8. SMC Port Mapping	155
22.6.9. SMC-DTP Internal Interconnection	160
22.6.10. SEP-Conditional Wiring	160
22.6.11. SMU Port Interface	161
23. System Management Network (SMN) Integration	169
24. Project Defines	170
24.1. SIMULATION	170
25. Prim Cell Replacement and Don't-Touch Constraints	171
25.1. Naming Requirement	171
25.2. Constraint Requirement	171
25.2.1. After Synthesis	172
25.3. Simulation	173
26. CDC Timing Constraints	174
26.1. Why crossings are bounded rather than timed	174
26.2. What is constrained	174
26.2.1. Why protocol-protected data still needs a bound	175
26.3. The two layers	175
26.4. What is covered	176
26.5. Integration checklist	176
26.5.1. 1. Repoint the constraints at the pin of the cell inside the prim wrapper	176
26.5.2. 2. Point the files at your hierarchy, or regenerate	177

26.5.3. 3. Set the default bound	178
26.5.4. 4. Declare your own clock groups	178
26.5.5. 5. Declare periods for generated clocks	178
26.5.6. Also check	179
26.6. Confirming it worked	179
26.7. Scope and limitations	179

This guide provides instructions and best practices for integrating OCAH subsystems into your chiplet design.

The integrator guide is split into multiple chapters. Each of these chapters covers integration considerations, interfaces, and configuration requirements for the respective subsystem.

SoC Integration Checklist

Use this checklist as a quick route through the integration work; each item links to its detailed requirements elsewhere in this guide. Record minimum evidence against each gate before sign-off.

Chapter 1. Integration gates

Done	Integration gate	Minimum evidence	Reference
[]	Select the delivered hierarchy, enabled subsystems, and required configuration	Selected hierarchy and configuration record reviewed	SMU Top-Level Integration
[]	Assign the chiplet address envelope and program the SEP and SMC apertures	Approved non-overlapping address map; aperture CSRs verified in simulation	Address Map Integration
[]	Connect clocks, resets, power-good, and configuration straps; follow the power-up sequence	Clock/reset/power review and sequencing test pass	SMC Integration, SEP Integration
[]	Connect external pin, bus, memory, eFuse, peripheral, and debug interfaces	Interface connectivity and tie-off audit complete	SMC Integration, DTP Integration, SEP Integration
[]	Verify boot and reset progression, including fuse sensing, memory repair or bypass, ROM execution, and SEP release when enabled	Successful boot and reset log including failure paths	SMC Integration, SEP Integration
[]	Apply technology-mapping and CDC constraints; run integration-level verification	Lint, CDC/RDC, constraint, and integration-test reports archived	Prim Cell Replacement, CDC Timing Constraints , OCA Standard Compliance (see the OCAH Technical Reference Manual)
[]	For each adopter-owned IP, select its trust and attachment class and complete the User IP integration checklist	User IP integration checklist completed per IP block	User IP integration checklist (see the <i>User IP Integration</i> chapter)

SMU Top-Level Integration

The System Management Unit (SMU) comprises three peer subsystems: the System Management Controller (SMC), the Debug & Test Ports (DTP), and the Security Processor (SEP). The subsections below describe each subsystem's interfaces independently, followed by the [SMU Composition](#) section that explains how they are wired together inside the SMU and how to select between the `smu.sv` logic-level core and the `smu_wrapper.sv` reference integration.

Chapter 2. Address Map Integration

The OCAH address map has three levels, and the assignment contract splits across the integrator, SEP firmware, and SMC firmware. Assign and program them from this section; the deeper subsystem and crossbar sections referenced below give the per-block detail.

- **Chiplet envelope (integrator).** The SoC/chiplet address map assigns each subsystem a global base and reserved size, and the adopter’s fabric decoder routes those ranges to the SMU. The SMU crossbar preserves offsets and does not constrain envelope size, so the integrator owns non-overlap and containment at the SoC level.
- **SEP and SMC chiplet apertures (firmware).** Each subsystem exposes a chiplet-visible aperture whose base and size are programmable at runtime. Inbound transactions to an aperture are remapped global-to-local before they reach the subsystem.
- **Local-alias views (fixed in RTL).** Internally each subsystem addresses its own resources through a fixed local map: the SMC at `0xC000_0000` (see [Address Map and Aperture](#)), the SEP through its own local map. These are RTL-fixed and not integrator-assigned.

Table 1. Address-map assignment contract

Level	Owner	Assigned / programmed by
Chiplet envelope	Integrator	SoC/chiplet address map + adopter fabric decode
SEP chiplet aperture	SEP firmware	<code>SEP_GLOBAL_BASE_ADDR / SEP_REGION_SIZE</code> (the <code>sep_cpu_ctrl</code> CSRs)
SMC chiplet aperture	SMC firmware	<code>GLOBAL_BASE / REGION_SIZE</code> (the SMC CPU Control CSRs at <code>0xC001_0000</code>)
SEP / SMC local view	Fixed (RTL)	Offsets within each subsystem’s local map (SMC local base <code>0xC000_0000</code>)

Programming order and constraints: firmware programs the SEP and SMC aperture CSRs during early boot, **before any cross-subsystem AXI traffic is issued**, and must keep the two apertures non-overlapping and inside the chiplet envelope the integrator assigned. The full runtime crossbar behaviour and the exact CSR plumbing are in [Firmware programming order](#) under [SMU Composition and Internal Wiring](#).

2.1. Register collateral

The machine-readable address map ships in the repository tree; integrators consume it from the release checkout or tarball rather than a separate package. The source of truth is distributed by ownership: each subsystem or IP keeps its canonical register sources and generated outputs beside its implementation. The `integration/` directory centralizes symlinks to that distributed collateral so an integrator does not have to discover every owner-local path.

`integration/rdl/<subsystem>/` is a flat, self-contained list of the SystemRDL files required by that subsystem. Filenames remain unchanged, and shared dependencies appear in every subsystem that needs them. Non-RDL support files needed by relative includes remain at the `integration/rdl/` root—for example, `integration/rdl/i3c_defines.svh` sits there because both `integration/rdl/smc/registers.rdl` and `integration/rdl/smu/registers.rdl` reach it through the I3C core’s own parent-relative include (`../i3c_defines.svh`), and that relative path only resolves if the header is one directory above every subsystem folder that needs it. The matching generated IEEE 1685-2014 component descriptions use the same flat subsystem organization under `integration/ipxact/<subsystem>/`.

These directories are generated symlink indexes; run `python3 scripts/collect_integration.py` after adding or moving collateral. Their canonical targets remain under `hw/sys/<sys>/regs/`, `hw/ip/<ip>/regs/`, and `vendor/...`—the `regs/` element of every component’s directory layout, described in the *Getting Started Guide*. Other generated outputs remain under each owner’s `regs/gen/{c,sv,svh,py,ral,adoc,html,ipxact}/` directory.

For the architecture-level responsibility split between the integrator, firmware, and the internal SEP/SMC maps, see the *OCAH Memory Map* section of the Technical Reference Manual.

Chapter 3. Immutable ROM FW Integration

OCAH contains three immutable ROM FW images: the SMC production ROM FW, the SEP production ROM FW, and the Key Manager production ROM FW. Each image has two integration contracts. The adopter connects and configures the corresponding ROM macro, and the final ROM FW image must be present before its processor leaves reset. Where ROM FW must initialize or access an adopter-owned peripheral outside OCAH, the image may also expose build-time integration hooks.

3.1. Weak-symbol override method

An immutable ROM FW image may provide selected vendor-neutral integration hooks as weak symbols. Supply an adopter implementation as a strong definition of the same symbol before the final image is frozen. The strong implementation must program the same adopter-owned IP instantiated by the RTL integration, and its signature, ABI, return values, and documented semantics must match the weak declaration.

This mechanism applies only when the ROM FW needs to interact with a peripheral outside OCAH. It is a build-time image-composition mechanism, not a runtime extension mechanism. Include the adopter implementation in the final ROM FW build so that it replaces the weak definition at link time.

Inspect the final ELF or linker map after linking. For example, `riscv64-unknown-elf-nm` must report each selected implementation as a strong symbol rather than `W`; successful linking alone does not prove that the weak default was replaced.

3.2. SMC ROM FW integration

Connect `smc_rom_intf_req_o` and `smc_rom_intf_rsp_i` to the adopter's ROM implementation. In the current four-core configuration, the request provides the ROM clock, enable, and 14-bit 64-bit-word address, and the response returns one 64-bit word. This is a direct memory interface, not AXI-Lite. The 128 KiB ROM FW image must be present before the first boot; its build is under `hw/sys/smc/bootrom/prod/`.

Connect the ROM macro configuration input reached as `rom_cfg_i` and `mem_cfg_i` according to the selected macro's contract. OCAH forwards these 11 bits without assigning technology-specific semantics; the reference `smc_ip_integration.sv` ties them to zero. Set the eFuse shadow value that drives the CPU's `rom_flip_endianness_i` path to match the byte order of the image and ROM macro. Deasserted passes each 64-bit read word unchanged; asserted reverses its eight bytes.

Table 2. SMC ROM FW override inventory

Hook	Weak default	Rationale	Override and integration action
<code>smc_pll_init()</code>	Returns <code>SMC_PLL_SUCCESS</code> without programming PLL hardware.	PLL implementation is technology- and vendor-specific, so OCAH does not include a vendor-specific PLL driver.	Override when <code>BL0_PLLCLK</code> is asserted and the adopter's PLL requires ROM-time configuration. Provide the same <code>smc_pll_result_t smc_pll_init(void)</code> signature in the final ROM FW build. Any result other than <code>SMC_PLL_SUCCESS</code> is fatal: the ROM FW records an interface error and remains in <code>wfi</code> .

Hook	Weak default	Rationale	Override and integration action
<code>i3c_release_reset()</code> , <code>cfg_ps()</code> , <code>init_i3c_ctrl()</code> , and <code>I3C_GetDriverInstance()</code>	Permit the ROM FW to boot without an active I3C implementation; I3C data operations report a hardware error.	OCAH includes an I3C implementation, but the adopter may select a different I3C target and driver for the final system.	When the ROM FW must use an active I3C target, select the open HCI implementation with <code>I3C_CORE=swap</code> , or connect the adopter's I3C target through the SMC external AXI-Lite master (<code>smc_external_req_o</code> and <code>smc_external_resp_i</code>) and link strong implementations that conform to <code>drivers/include/i3c_target_driver.h</code> .

3.3. SEP ROM FW integration

The SEP exposes the `sep_boot_rom` memory interface for its production ROM FW image. The detailed ROM-macro configuration, image-loading contract, and adopter override inventory are not yet documented here.

Table 3. SEP ROM FW override inventory

Hook	Status
<i>To be documented</i>	No adopter override requirement is defined here yet.

3.4. Key Manager ROM FW integration

The Key Manager exposes the `km_rom_mem` interface through SEP for its production ROM FW image. The detailed ROM-macro configuration, image-loading contract, and adopter override inventory are not yet documented here.

Table 4. Key Manager ROM FW override inventory

Hook	Status
<i>To be documented</i>	No adopter override requirement is defined here yet.

Chapter 4. System Management Controller (SMC) Integration

The System Management Controller (SMC) is a subsystem responsible for power management, clock control, reset sequencing, and peripheral interface coordination. The `smc.sv` module exposes logic-level interfaces; all technology-specific components (PLLs, PVT sensors, eFuses, memory macros, GPIO padrings) are instantiated externally by the adopter. See the [SMU Module Variants](#) section for how the reference wrappers demonstrate this integration.

For detailed architectural documentation about the SMC internal design, refer to [hw/sys/smc/doc/](#). The public integration examples are [hw/top/smc_wrapper.sv](#) and [hw/top/smc_ip_integration.sv](#).

4.1. Clock and Reset

The SMC requires three external clock inputs: `clk_smc_i` (primary system clock driving the CPU cluster, fabric, and peripherals), `clk_periph_i` (peripheral clock driving the peripherals), and `clk_ref_i` (reference clock for timing-sensitive operations). All must be generated externally by the adopter's PLL infrastructure; the SMC provides AXI-Lite control outputs for PLL configuration (see [Peripheral Interface Connections](#)). The peripheral clock is used to drive the I3C interface, I2C interface, UART interface, and AVSBus interface.

Hold `rst_cold_ni` asserted (low) while power supplies and clocks stabilize. Assert `powergood_i` once supplies reach nominal, then deassert `rst_cold_ni` (drive high) to start the boot sequence.

The SMC generates AASD (async-assert / sync-deassert) reset outputs: `rst_primary_smc_clk_no` for the main clock domain, `rst_primary_periph_clk_no` for the peripheral clock domain, and `rst_primary_ref_clk_no` for the reference clock domain. These ensure clean reset release without metastability across the system hierarchy.

Reset domain overrides are delivered through a single typed input, `jtag_reset_ctrl_i` (`smc_pkg::jtag_smc_reset_ctrl_t`), which carries all SMC reset override enables and active-low values. The DTP drives this input through the JTAG IC_RESET mechanism (see [SMC-DTP Internal Interconnection](#)); most integrations leave all override enables deasserted.

4.2. Address Map and Aperture

The SMC has a chiplet-visible aperture and an internal local address view. Internally, the SMC uses a fixed local base address of `0xC000_0000` and a fixed local window size of 16 MiB. SMC-local addresses (registers, memories, remapped regions) are defined as offsets from that base. The chiplet-visible aperture is adopter-defined: the chiplet or SoC address map assigns the global base and size that external masters can use to reach SMC through the SMU crossbar.

When integrating the SMC into a chiplet or SoC, the adopter assigns a system base address and reserved size for the SMC window. The system base (e.g. `0x0800_0000` in a chiplet address map) may be different from the SMC-local base `0xC000_0000`. Firmware programs the SMC `GLOBAL_BASE / REGION_SIZE` CSRs during early boot to match that assignment. The adopter's fabric or address decoder must route the reserved system range to the SMC block so that offsets are preserved: system base + offset maps to SMC-local `0xC000_0000` + offset.

Table 5. Address Base Mapping

View	Base Address	Description
SMC-local (internal)	<code>0xC000_0000</code>	Local alias address (fixed). Used by SMC CPU, firmware, and fabric.
System (adopter)	Adopter-defined	Base of the chiplet/SoC aperture assigned to SMC.

The SMC fabric uses three registers in the CPU Control block (`0xC001_0000`) to distinguish local from remote addresses:

- **LOCAL_BASE** (read-only, fixed at `0xC000_0000`): The local alias base. Together with **REGION_SIZE**, this is the address space the SMC CPU and internal fabric use to access SMC resources.
- **GLOBAL_BASE** (read-write, defaults to `0x4000_0000`): The system-level base address. Firmware must program this during early boot to match the adopter's system address assignment, enabling the SMC to issue outbound transactions using global system addresses.
- **REGION_SIZE** (read-write, resets to `0x0100_0000` / 16 MiB): The size of both the local alias window and the global aperture. It sizes the SMC input fabric's local/global split as well as SMU-level routing and SEP-to-SMC decode. Firmware must not program it to zero, and must keep **LOCAL_BASE + REGION_SIZE** inside the 32-bit SMC-local address space.

For full details on alias remapping and outbound routing, see the SMC Fabric documentation (<hw/sys/smc/doc/fabric.adoc>).

For a detailed breakdown of all components within the SMC local map, refer to the SMC Memory Map documentation (<hw/sys/smc/doc/memmap.adoc>).

4.3. AXI Interface Configuration

The SMC provides three distinct AXI interface groups serving different access paths. The **sys_axi_in** interface accepts requests from external system masters requiring access to SMC-managed resources. This interface uses a 56-bit address space with 64-bit data width and 6-bit transaction IDs. Connect this interface to your system fabric for normal operational access from application processors or DMA controllers.

The **sep_axi_in** interface provides dedicated access from the Security Processor (SEP) subsystem. This interface shares the same sizing parameters as the system input but operates independently to maintain security domain separation. Use this interface only when integrating alongside the SEP subsystem. The interface may remain unconnected if your integration does not include SEP.

The **output_axi** interface carries filtered and remapped requests from the SMC to external system resources. This interface uses an 8-bit transaction ID field to accommodate merged traffic from multiple input paths. Connect this interface to your system interconnect to allow SMC components access to external memory and peripherals. An AXI VIP or equivalent BFM is a suitable stand-in during integration verification before the real system fabric is available.

The **jtag_axi_in** interface provides debug access through JTAG mechanisms. This interface uses reduced 2-bit transaction IDs and connects to your JTAG debug infrastructure.

4.4. GPIO Pad Integration

GPIO pad integration requires careful attention to function assignment and pull requirements. The GPIO table below lists each signal, bump location, function, recommended pull, and integration notes. Default input/output direction is defined by `smc_padrng_pkg::DefaultDirectionMap`, not by the table.

The public `hw/top/smc_wrapper.sv` and `hw/top/smc_ip_integration.sv` examples show the pad connections. For bidirectional pins, implement proper tri-state buffers controlled by the `core2pad_en_o` signals. Connect multiplexed UART, I2C, I3C, and SPI pins to external devices according to the function assignments in the GPIO table.

Configuration straps are captured separately from the GPIO table. Establish them before cold reset deassertion and keep them stable during capture. The generated reset-unit **STRAPS_LO** and **STRAPS_HI** register descriptions define the decoded

bit assignments, including `BYPASS_SRAM_REPAIR` at `STRAPS_LO[13]` and `TEST_EN` at `STRAPS_LO[14]`.

4.5. Peripheral Interface Connections

The SMC exposes logic-level interfaces to several technology-specific subsystem components that the adopter instantiates externally. The subsections below describe each connection in turn.

4.5.1. Adopter Peripheral Window

The `smc_external_req_o` and `smc_external_resp_i` signals form a 32-bit AXI-Lite interface to the adopter's own peripheral register maps. Any technology- or product-specific block that SMC firmware needs to reach sits behind this window rather than on a dedicated per-peripheral port.

The window is the recommended home for the control/status registers of logic that the SMC must configure or monitor but that the SMC itself does not implement — padding configuration logic, clock generation, on-die sensors, memory-technology SHIMs, and similar adopter-owned blocks are typical examples. For example, runtime reconfiguration of pin directions, pull settings, and peripheral multiplexing is expected to be reachable here. The SMC decodes the aperture and forwards the transaction; what lives behind it is entirely adopter-defined.

The window is split into a mandatory region, whose contents and placement the SMC memory map fixes and every integration must implement, and a supplementary region for anything else the adopter chooses to expose. For placement and the full register layout, refer to the SMC Memory Map documentation ([hw/sys/smc/doc/memmap.adoc](#)).

4.5.2. eFuse Interface

NOTE This guide uses **eFuse** and **OTP** interchangeably for the same one-time programmable bank and the SHIM that fronts it. Port names mix both (`efuse_*`, `otp`); they refer to the same interface.

The eFuse interface consists of two parts:

- `efuse_bank_ctrl` — a 32-bit AXI-Lite interface used to access the SHIM control CSRs (for example, foundry-specific bank timing such as the initialization delay before sensing can begin).
- `efuse_shim_command` — the custom fuse command interface used to issue read, program, and program/read-back operations to the eFuse bank.

Adopter responsibility. The `efuse_shim_command` interface is intentionally generic and technology-neutral. The adopter must implement an Interface SHIM that converts these generic commands into the hardware signals required by their OTP macro. The conversion is driven by the adopter's own read and program state machines inside the SHIM; OCAH only defines the command/response contract, not the macro-side signaling.

The command and response payloads are exchanged as packed structs:

```
// Controller -> SHIM
typedef struct packed {
    addr_t          address;          // Target address (in bits)
    logic           program_data;     // Data to program (when programming)
    access_length_words_t access_length_words; // Number of WORD_WIDTH words to access
    command_t       command;          // READ / PROGRAM / PROGRAM_READ_BACK
    logic           valid;            // Request valid
```

```

} fuse_command_req_t;

// SHIM -> Controller
typedef struct packed {
    data_t data;    // Read data (one WORD_WIDTH word)
    logic  status;  // Operation status (0 = OK, 1 = error)
    logic  valid;   // Response valid (qualifies `data` for one cycle)
} fuse_command_resp_t;

```

Fuse sensing protocol. During automatic sensing the controller issues a single read with `access_length_words` set to the entire bank (all `NUM_WORDS` words). The SHIM is expected to stream the bank back one `WORD_WIDTH` word at a time: for each OTP access it drives the read `data` onto `fuse_command_resp_o.data` and asserts `valid` for **exactly one cycle**. The controller consumes one word per cycle that `valid` is high, advancing to the next eFuse word on each assertion.

WARNING

`valid` must be asserted for only a single cycle per returned word. If the SHIM holds `valid` high for two cycles, the controller will sample the same `data` value a second time and count it as the data for the **next** eFuse word, shifting all subsequent words and corrupting the sensed shadow contents. The adopter's SHIM FSM is responsible for producing a clean one-cycle `valid` strobe per `WORD_WIDTH` access.

The `shadow_regs_o` output provides read-only access to the sensed fuse values. During bring-up the SMC automatically senses the fuse contents and propagates them through the shadow registers; the `smc_fuse_sense_done_o` signal indicates completion of this sensing operation.

4.6. Memory Subsystem Integration

The SMC includes an embedded RISC-V CPU cluster with associated memory interfaces. See [Immutable ROM FW Integration](#) for the ROM FW integration contract.

4.6.1. SRAM and Cache Array Integration

Scratch RAM interfaces (`smc_scratch_ram_intf_req_o` and `smc_scratch_ram_intf_rsp_i`) connect to 32 independent RAM banks totaling the scratchpad memory space. Cache memory interfaces for L1 instruction and data caches (`smc_l1_icache_*` and `smc_l1_dcache_*`) connect to tag and data RAM banks as specified in the port table.

The `smc_disable_sram_auto_init_i` input controls automatic memory initialization behavior. When deasserted, the SMC automatically zeroes all SRAM contents during bring-up. The `smc_init_mem_done_o` output indicates completion of this initialization sequence. The `SRAM_AUTO_ZERO_DISABLE` strap (`STRAPS_LO[26]`) can disable this automatic zeroing behavior if your integration requires preserved SRAM contents across resets.

4.7. Memory Repair Integration

The SMC implements Built-In Redundancy Analysis (BIRA) memory repair to address manufacturing defects in SRAM arrays. Repair uses redundant memory elements configured with data stored in eFuse memory, replacing defective cells detected during manufacturing test.

Memory repair executes automatically during boot after eFuse sensing completes and before MBIST operations. The process must complete successfully before the CPU cluster can safely access SRAM arrays. Repair is required on every

cold reset but can be bypassed during Function Level Reset (FLR) operations for faster recovery.

Control Signals:

- `smc_fuse_sense_done_o`: eFuse controller output indicating fuse sensing completion. External DFT logic monitors this signal to trigger repair operations.
- `skip_mem_repair_o`: Reset unit output indicating repair should be bypassed. It is driven by the isolation request inputs (`isolate_req_pin_sync_smc` or the SMC isolation register), not directly by the strap. When asserted, external repair logic should skip operations and immediately assert completion status.
- `ext_boot_seq_done_i`: External signal indicating the external boot sequence (memory repair and shadow register override) is complete. Held low to pause reset release until the external agent gives the go-ahead; required before the system can continue its boot sequence

Repair Data:

Repair data is stored in the eFuse BIRA shadow register as a 16-kilobit `repair_data` field. The eFuse controller reads this data during fuse sensing and makes it available through shadow registers. The external memory repair controller must read repair data from `shadow_regs_o` and apply it to SRAM arrays according to your memory architecture.

Status Monitoring:

Repair completion and success are reported through `DFX_CTRL_STATUS.STATUS_SMU` at `0xC000_B800`. The `mem_repair_done` bit indicates completion regardless of success, while `mem_repair_success` indicates successful repair. Both bits are set by the external repair controller. The SMC ROM FW monitors these bits during initialization to verify repair completion.

Bypass Configuration:

The `BYPASS_SRAM_REPAIR` configuration strap (`STRAPS_LO[13]`) is captured into the reset-unit strap registers. Keep these three mechanisms distinct:

- No RTL path drives `skip_mem_repair_o` from this strap directly. `skip_mem_repair_o` is driven from the isolation request path.
- Production ROM reads the strap and, when asserted, skips repair-status validation and writes `MBIST_STATUS_MEM_REPAIR_BYPASSED` to scratchpad register 15 (`SMC_SCRATCH_MBIST_STATUS`, `0xC003_90F8`). It does not cause the external repair controller to skip physical repair.
- External repair logic independently honors `skip_mem_repair_o` to decide whether to bypass physical repair operations.

Use bypass mode only when SRAM arrays are guaranteed defect-free, such as during development or with known-good components.

Integration Requirements:

Provide an external memory repair controller that monitors `smc_fuse_sense_done_o` to initiate repair, respects `skip_mem_repair_o` for bypass control, reads repair data from eFuse shadow registers, applies repair configuration to SRAM arrays, asserts `ext_boot_seq_done_i` and updates DFT Control Status registers with completion status. The controller operates independently of the SMC core and must complete before the CPU cluster accesses SRAM.

For direct access to the eFuse besides from the shim, i.e. from a DFT fuse controller, adopters must ensure the integrated logic will not interfere with accesses from the OCAH's efuse interface.

During FLR operations, the isolation request path asserts `skip_mem_repair_o` to bypass repair for rapid reset sequences.

Normal cold reset sequences always execute repair unless isolation is already asserted.

4.8. Interrupt Integration

The SMC aggregates interrupts from multiple sources into `cpu_interrupts_o`, which feeds the PLIC of the embedded RISC-V CPU cluster. The interrupt vector is assembled in `hw/sys/smc/rtl/smc_base.sv` and `hw/sys/smc/rtl/smc_peripherals/rtl/smc_peripherals.sv`. The authoritative bit-level map (RTL trace and PLIC source ID note) is maintained in a single place:

See the *SMC CPU interrupt vector map* in the Technical Reference Manual.

The SMC PLIC and CPU interrupt vector are internal. `sync_irq_o` is **not** the interrupt aggregate—it is the software-controlled `SYNC_REG.sync` global synchronisation bit in the reset unit, unrelated to PLIC interrupt delivery. Do not connect an external interrupt controller to `sync_irq_o`.

External interrupt sources visible to the adopter are `smc_ext_interrupts_i` (SMC external interrupt input vector, width `NUM_INT_TO_SMC`), `smc_ext_mailbox_interrupts_o` (outbound mailbox notifications, width `NUM_MAILBOXES`), `gpio_interrupt_o` (GPIO edge/level events, width `NUM_GPIO_WRAPS`), and `uart_interrupt_o` (UART TX/RX events, width `NUM_UART`). Drive `smc_ext_interrupts_i` as an active-high level or as a pulse that stays high long enough to be sampled on `clk_smc`. The pin is three-flop synchronized; a short asynchronous pulse can be lost. There is no edge-triggered mode. For the full PLIC source map see the SMC Technical Reference Manual.

4.9. Telemetry and Debug Integration

For system-level debug and telemetry, the SMC implements ATB (Advanced Trace Bus) receiver interfaces. The telemetry interface group (`telemetry_atdata_i`, `telemetry_atid_i`, `telemetry_atvalid_i`, `telemetry_atready_o`) operates in a dedicated `clk_telemetry_i` clock domain with separate `rst_telemetry_ni` reset. Connect these signals to ATB trace sources for debug data collection.

At the SMC boundary, `ext_debug_bus_i` is 512 bits wide; the SMU concatenates the adopter-visible 128-bit input with the SEP's internal 384-bit bus before driving SMC. The typed `xtrigger_ss_i` / `xtrigger_ss_o` ports are the only cross-trigger signals at the SMC boundary. The adopter-visible SMU cross-trigger interfaces are `xtrig_ctm_*`, `xtrig_clk_stop_req_i`, and the CTP groups.

Trace memory interfaces (`trace_mem_req_o` and `trace_mem_resp_i`) connect to trace RAM instances for storing captured debug data. `smc_ip_integration.sv` shows an example set of RAM instances that can be adapted to your debug requirements.

4.10. Bring-Up Sequence

The recommended bring-up sequence begins with asserting `rst_cold_ni` while stabilizing power supplies and clocks. Once all supplies reach nominal voltages, deassert `rst_cold_ni` to initiate the SMC boot sequence. The SMC immediately begins fuse sensing to read configuration values and security credentials.

Monitor the `smc_fuse_sense_done_o` signal to detect completion of fuse sensing. Configuration straps sampled during this phase determine boot modes and operational settings. After fuse sensing completes, the SMC releases internal subsystem resets based on the programmed reset sequencing configuration.

The CPU cluster begins executing the ROM FW after reset release. The ROM FW performs additional initialization including peripheral configuration, memory testing (unless disabled), and system health checks. The

`smc_init_mem_done_o` signal indicates completion of memory initialization if automatic SRAM zeroing is enabled.

To support Function Level Reset (FLR), assert `cfg_flr_pf_active_i` to trigger a warm reset sequence. The SMC asserts `isolate_req_o` bits for the affected subsystem indices. The adopter's power controller drives `ss_reset_complete_i` high once the subsystem reset is complete; the SMC synchronizes this into the readable `SS_RESET_COMPLETE` register. Isolation remains asserted until cleared by software: SMC firmware must poll `SS_RESET_COMPLETE` and then write `ISOLATE_REQ_SMC_REG` to clear the FLR isolation latch. Do not assume isolation releases automatically on `ss_reset_complete_i`.

See `hw/top/smu_wrapper.sv` and `hw/top/smc_ip_integration.sv` for reference bring-up wiring examples covering clock, reset, strap, and peripheral connections.

4.11. SMC Port Interface

The SMC exposes a comprehensive set of interfaces for system integration. The following table defines all SMC top-level ports including clocks, resets, AXI interfaces, peripheral connections, and control signals. Refer to the detailed SMC documentation for internal signal descriptions and timing requirements.

Table 6. SMC Port Declaration

Interface Name	Type	Direction	Width	Description	Connection	Default value (if applicable)
<code>clk_smc_i</code>	logic	Input	1	Primary SMC clock domain. All SMC internal logic operates synchronously to this clock.	PLL output	N/A
<code>clk_ref_i</code>	logic	Input	1	Reference clock domain. Used for timing-sensitive operations and peripheral interfaces.	PLL reference clock	N/A
<code>clk_periph_i</code>	logic	Input	1	Peripheral clock domain.	PLL peripheral clock	N/A
<code>powergood_i</code>	logic	Input	1	Power-good indication. Assert after supply voltages stabilize.	Power management controller	N/A
<code>powergood_stable_o</code>	logic	Output	1	Stabilized power-good output. Debounced version of <code>powergood_i</code> .	Reset unit → External systems	N/A
<code>rst_cold_ni</code>	logic	Input	1	Cold reset input (active low). Asynchronous assertion, synchronous deassertion.	System cold reset	N/A
<code>rst_primary_ref_clk_no</code>	logic	Output	1	Primary reset synchronized to reference clock domain (active low).	To subsystems using ref clock	N/A
<code>rst_primary_smc_clk_no</code>	logic	Output	1	Primary reset synchronized to SMC clock domain (active low).	To subsystems using SMC clock	N/A
<code>sys_axi_in_req_i</code>	<code>smc_sys_in_56_64_6_12_axi_req_t</code>	Input	-	System AXI input request (56-bit addr, 64-bit data, 6-bit ID, 12-bit user).	External system masters → Input Fabric	N/A, tie to '0 if unused
<code>sys_axi_in_resp_o</code>	<code>smc_sys_in_56_64_6_12_axi_resp_t</code>	Output	-	System AXI input response.	Input Fabric → External system masters	N/A, leave floating if unused
<code>jtag_axi_in_req_i</code>	<code>smc_jtag_56_64_2_12_axi_req_t</code>	Input	-	JTAG debug AXI request (56-bit addr, 64-bit data, 2-bit ID, 12-bit user).	JTAG debug port → Input Fabric	N/A, tie to '0 if unused
<code>jtag_axi_in_resp_o</code>	<code>smc_jtag_56_64_2_12_axi_resp_t</code>	Output	-	JTAG debug AXI response.	Input Fabric → JTAG debug port	N/A, leave floating if unused
<code>axil_smc_otp_jtag_req_i</code>	<code>smc_pkg::smc_axil_32_32_req_t</code>	Input	-	eFuse OTP/JTAG AXI-Lite request.	JTAG → eFuse controller	N/A, tie to '0 if unused
<code>axil_smc_otp_jtag_resp_o</code>	<code>smc_pkg::smc_axil_32_32_resp_t</code>	Output	-	eFuse OTP/JTAG AXI-Lite response.	eFuse controller → JTAG	N/A, leave floating if unused

Interface Name	Type	Direction	Width	Description	Connection	Default value (if applicable)
sep_axi_in_req_i	smc_sep_in_56_64_6_12_axi_req_t	Input	-	SEP AXI request (56-bit addr, 64-bit data, 6-bit ID, 12-bit user).	SEP → Input Fabric	N/A, tie to '0 if unused
sep_axi_in_resp_o	smc_sep_in_56_64_6_12_axi_resp_t	Output	-	SEP AXI response.	Input Fabric → SEP	N/A, leave floating if unused
output_axi_req_o	smc_sys_out_56_64_8_12_axi_req_t	Output	-	Filtered and remapped AXI output request (56-bit addr, 64-bit data, 8-bit ID, 12-bit user).	Output Fabric → External system resources	N/A, leave floating if unused
output_axi_resp_i	smc_sys_out_56_64_8_12_axi_resp_t	Input	-	Filtered and remapped AXI output response.	External system resources → Output Fabric	N/A, tie to '0 if unused
efuse_bank_ctrl_req_o	smc_pkg::smc_axil_32_32_req_t	Output	-	eFuse bank control AXI-Lite request.	eFuse controller → eFuse Shim	N/A
efuse_bank_ctrl_resp_i	smc_pkg::smc_axil_32_32_resp_t	Input	-	eFuse bank control AXI-Lite response.	eFuse Shim → eFuse controller	N/A
efuse_shim_command_req_o	smc_efuse_pkg::fuse_command_req_t	Output	-	eFuse command interface request.	eFuse controller → eFuse Shim	N/A
efuse_shim_command_resp_i	smc_efuse_pkg::fuse_command_resp_t	Input	-	eFuse command interface response.	eFuse Shim → eFuse controller	N/A
shadow_regs_o	smc_efuse_pkg::efuse_map_t	Output	-	eFuse shadow register output.	eFuse controller → External systems	N/A
pll_clk_obs_i	logic	Input	1	PLL clock observation input.	PLL → GPIO padding (muxed)	N/A
pll_clk_obs_en_i	logic	Input	1	PLL clock observation enable.	Control logic → GPIO padding	N/A
pvt_process_clk_obs_i	logic	Input	1	PVT process monitor clock observation input.	PVT → GPIO padding (muxed)	N/A
pvt_process_clk_obs_en_i	logic	Input	1	PVT process monitor clock observation enable.	Control logic → GPIO padding	N/A
cat_therm_i	logic	Input	1	CAT thermal sensor input.	CAT thermal sensor → PVT wrap	N/A, tie to '0 if unused
lsio_interface_select_o	logic	Output	[NUM_GPIO_WRAPS-1:0]	LSIO interface selection for each GPIO wrap.	GPIO padding → GPIO wraps	N/A
pad2core_i	logic	Input	[NUM_GPIO_WRAPS-1:0]	GPIO input data from pad ring to core.	GPIO padding → SMC	N/A
core2pad_o	logic	Output	[NUM_GPIO_WRAPS-1:0]	GPIO output data from core to pad ring.	SMC → GPIO padding	N/A
pad2core_en_o	logic	Output	[NUM_GPIO_WRAPS-1:0]	GPIO pad-to-core path enable.	SMC → GPIO padding	N/A
core2pad_en_o	logic	Output	[NUM_GPIO_WRAPS-1:0]	GPIO core-to-pad path enable.	SMC → GPIO padding	N/A
rst_cool_n_from_pin_i	logic	Input	1	Cool reset input from GPIO pin 61.	GPIO pin 61 → Reset Unit	N/A
clk_telemetry_i	logic	Input	1	Telemetry clock domain. Separate clock for ATB telemetry data collection.	Telemetry clock source	N/A
rst_telemetry_n_i	logic	Input	1	Telemetry reset (active low). Resets telemetry receiver logic.	Telemetry reset source	N/A
telemetry_atdata_i	telemetry_receiver_pkg::telemetry_data_t	Input	[NUM_TELMETRY_RECEIVERS-1:0]	ATB telemetry data input array.	ATB sources → Telemetry receivers	N/A
telemetry_atid_i	telemetry_receiver_pkg::atb_id_t	Input	[NUM_TELMETRY_RECEIVERS-1:0]	ATB telemetry ID input array.	ATB sources → Telemetry receivers	N/A

Interface Name	Type	Direction	Width	Description	Connection	Default value (if applicable)
telemetry_atready_o	logic	Output	[NUM_TELEMETRY_RECEIVERS-1:0]	ATB telemetry ready output.	Telemetry receivers → ATB sources	N/A
telemetry_atvalid_i	logic	Input	[NUM_TELEMETRY_RECEIVERS-1:0]	ATB telemetry valid input.	ATB sources → Telemetry receivers	N/A
telemetry_afvalid_o	logic	Output	[NUM_TELEMETRY_RECEIVERS-1:0]	ATB flush valid output.	Telemetry receivers → ATB sources	N/A
telemetry_afready_i	logic	Input	[NUM_TELEMETRY_RECEIVERS-1:0]	ATB flush ready input.	ATB sources → Telemetry receivers	N/A
smc_cluster_double_error_o	logic	Output	1	Cluster double error detection output.	CPU cluster → External systems	N/A
smc_wdt_first_timeout_o	logic	Output	1	First watchdog timeout signal.	CPU cluster WDT → Reset Unit	N/A
smc_wdt_second_timeout_o	logic	Output	1	Second watchdog timeout signal.	Reset Unit → External systems	N/A
smc_region_size_o	logic	Output	[31:0]	SMC address region size output.	SMC Internal Registers → External systems	N/A
smc_ext_interrupts_i	logic	Input	[NUM_EXT_INTERRUPTS-1:0]	External interrupt inputs. Width is 256. Active-high level or a pulse long enough to be sampled on <code>clk_smc</code> . Synchronized to <code>clk_smc</code> (3-stage) in <code>smc_base</code> ; a short asynchronous pulse can be lost.	External sources → Interrupt aggregator	N/A, tie to '0 if unused
sep_mailbox_interrupts_i	logic	Input	[7:0]	SEP → SMC mailbox interrupt inputs (8 channels). Routed to internal interrupts to the SMC CPU.	SEP → Interrupt aggregator	N/A, tie to '0 if unused
sep_wdt_reset_n_i	logic	Input	1	SEP watchdog reset (active low). Active-low polarity is inverted before routing to internal interrupts to the SMC CPU.	SEP → Interrupt aggregator	N/A
smc_fuse_sense_done_o	logic	Output	1	Fuse sense completion output.	eFuse controller → Memory repair logic	N/A
smc_fuse_reset_n_delayed_o	logic	Output	1	Delayed fuse reset output (after 16 pipeline stages).	eFuse controller → External systems	N/A
skip_mem_repair_o	logic	Output	1	Skip memory repair output.	Reset Unit → Memory repair logic	N/A
ext_boot_seq_done_i	logic	Input	1	External boot sequence completion input (memory repair and shadow register override done); gates reset release.	External boot/repair controller → eFuse controller	N/A
lc_state_i	logic	Input	[2*LC_STATE_WIDTH-1:0] (8 bits)	Lifecycle state input, differentially encoded.	Lifecycle controller → SMC Internal Registers	From SEP; tie to 8'hf0 if unused (encoded TEST_DEV)
smc_ext_mailbox_interrupts_o	logic	Output	[NUM_MAILBOXES-1:0]	External mailbox interrupt outputs (32 interrupts, mapped to IDs 156-187).	Mailbox controller → External targets	N/A
cfg_flr_pf_active_i	logic	Input	1	Function Level Reset (FLR) PF active signal.	PCIe/System → Reset Unit	N/A, tie to '0 if unused
isolate_req_o	logic	Output	[31:0]	Isolation request output for 32 subsystems.	Reset Unit → 32 subsystems	N/A
ss_reset_complete_i	logic	Input	[31:0]	Subsystem reset completion status.	32 subsystems → Reset Unit	32'hFFFFFFFF
ss_config_o	logic	Output	[31:0]	Subsystem configuration output.	Reset Unit → 32 subsystems	N/A

Interface Name	Type	Direction	Width	Description	Connection	Default value (if applicable)
ss_reset_ctrl_o	smc_reset_unit_pk g::reset_ctrl_t	Output	[31:0]	Subsystem reset control output array.	Reset Unit → 32 subsystems	N/A
sync_irq_o	logic	Output	1	Software-controlled global synchronisation bit (SYNC_REG.sync in the reset unit). Not an interrupt aggregate output.	Reset unit → External	N/A
gpio_interrupt_o	logic	Output	[NUM_GPIO_WRAPS-1:0]	Raw GPIO interrupt vector from the padding, one bit per GPIO wrap (bonded + unbonded). Software reads GPIO status registers to identify the interrupt source. Already OR-reduced into peripheral_interrupts_o[30:29] internally.	smc_padding → external consumers	N/A, leave floating if unused
uart_interrupt_o	logic	Output	[NUM_UART-1:0]	Raw UART interrupt outputs, one bit per UART instance, in the peripheral clock domain. Already aggregated into peripheral_interrupts_o[21:18] internally via CDC.	uart_wrap → external consumers	N/A, leave floating if unused
smc_rom_intf_req_o	rom_req_t	Output	-	ROM memory interface request. Width depends on CPU cluster configuration	CPU cluster → Boot ROM	N/A
smc_rom_intf_rsp_i	rom_rsp_t	Input	-	ROM memory interface response. Width depends on CPU cluster configuration	Boot ROM → CPU cluster	N/A
smc_scratch_ram_intf_req_o	scratch_ram_req_t	Output	[NUM_SRAM_BANKS2-1:0]	Scratch RAM interface requests. Width depends on CPU cluster configuration	CPU cluster → Scratch RAM banks	N/A
smc_scratch_ram_intf_rsp_i	scratch_ram_rsp_t	Input	[NUM_SRAM_BANKS2-1:0]	Scratch RAM interface responses. Width depends on CPU cluster configuration	Scratch RAM banks → CPU cluster	N/A
smc_l1_icache_tag_intf_req_o	l1_icache_tag_req_t	Output	[NUM_ICACHE_TAG_BANKS-1:0]	L1 I-cache tag interface requests. Width depends on CPU cluster configuration	CPU cluster → L1 I-cache tag banks	N/A
smc_l1_icache_tag_intf_rsp_i	l1_icache_tag_rsp_t	Input	[NUM_ICACHE_TAG_BANKS-1:0]	L1 I-cache tag interface responses. Width depends on CPU cluster configuration	L1 I-cache tag banks → CPU cluster	N/A
smc_l1_icache_data_intf_req_o	l1_icache_data_req_t	Output	[NUM_ICACHE_DATA_BANKS-1:0]	L1 I-cache data interface requests. Width depends on CPU cluster configuration	CPU cluster → L1 I-cache data banks	N/A
smc_l1_icache_data_intf_rsp_i	l1_icache_data_rsp_t	Input	[NUM_ICACHE_DATA_BANKS-1:0]	L1 I-cache data interface responses. Width depends on CPU cluster configuration	L1 I-cache data banks → CPU cluster	N/A
smc_l1_dcache_tag_intf_req_o	l1_dcache_tag_req_t	Output	[NUM_DCACHE_TAG_BANKS-1:0]	L1 D-cache tag interface requests. Width depends on CPU cluster configuration	CPU cluster → L1 D-cache tag banks	N/A
smc_l1_dcache_tag_intf_rsp_i	l1_dcache_tag_rsp_t	Input	[NUM_DCACHE_TAG_BANKS-1:0]	L1 D-cache tag interface responses. Width depends on CPU cluster configuration	L1 D-cache tag banks → CPU cluster	N/A
smc_l1_dcache_data_intf_req_o	l1_dcache_data_req_t	Output	[NUM_DCACHE_DATA_BANKS-1:0]	L1 D-cache data interface requests. Width depends on CPU cluster configuration	CPU cluster → L1 D-cache data banks	N/A
smc_l1_dcache_data_intf_rsp_i	l1_dcache_data_rsp_t	Input	[NUM_DCACHE_DATA_BANKS-1:0]	L1 D-cache data interface responses. Width depends on CPU cluster configuration	L1 D-cache data banks → CPU cluster	N/A
smc_disable_sram_auto_init_i	logic	Input	1	Disable SRAM automatic initialization.	Control logic → CPU cluster	1'b0
smc_init_mem_done_o	logic	Output	1	Memory initialization completion signal.	CPU cluster → Control logic	N/A
chiplet_is_primary_i	logic	Input	1	Chiplet is primary signal. Used for System Timer OCTS	GPIO Padding Straps (strap 25) → SMC	N/A
timer_count_o	logic	Output	[63:0]	64-bit system timer count output for Open Chiplet Time Synchronization (OCTS).	System Timer OCTS → External systems	N/A

Interface Name	Type	Direction	Width	Description	Connection	Default value (if applicable)
jtag_reset_ctrl_i	smc_pkg::jtag_smc_reset_ctrl_t	Input	-	Typed reset-override control struct carrying all SMC reset override enables and active-low values. Driven by DTP via JTAG IC_RESET. Tie all enables to 0 when not used.	DTP → SMC reset unit	All enables 0
cla_gpio_enable_o	logic	Output	1	CLA GPIO enable output.	DFD controller → CLA	N/A
tdr_dbg_ctrl_clock_stop_en_i	logic	Input	1	DEBUG_CONTROL CLA clock-stop enable.	DTP → DFD	1'b0
tdr_dbg_ctrl_clocks_stopped_by_cla_o	logic	Output	1	CLA halt-clock status under enable; also drives <code>cpu_interrupts_o[NUM_EXT_INTERRUPTS+64]</code> (internal interrupt 0), bit 320.	DFD → DTP / interrupt	N/A
xtrigger_ss_i	smc_pkg::xtrigger_t	Input	-	Cross-trigger subsystem input. SMU drives from <code>dtp_xtrig_ctm_src_req[1:0]</code> . Internal SMU connection; not an SMU external port.	SMU internal: DTP → <code>xtrig_ctm_src_req_o[1:0]</code> → SMC	N/A
xtrigger_ss_o	smc_pkg::xtrigger_t	Output	-	Cross-trigger subsystem output. SMU routes to <code>dtp_xtrig_ctm_dst_req[1:0]</code> . Internal SMU connection; not an SMU external port.	SMU internal: SMC → DTP → <code>xtrig_ctm_dst_req_i[1:0]</code>	N/A
trace_mem_req_o	dfd_trace_mem_pkg::SinkMemPktIn_s	Output	[TRC_RAM_INSTANCES-1:0]	Trace memory interface requests.	DFD controller → Trace memory	N/A, leave floating if unused
trace_mem_resp_i	dfd_trace_mem_pkg::SinkMemPktOut_s	Input	[TRC_RAM_INSTANCES-1:0]	Trace memory interface responses.	Trace memory → DFD controller	N/A, tie to '0 if unused
ext_debug_bus_i	logic	Input	[511:0]	External debug bus input (512 bits, 16-bit aligned).	External debug sources → Debug bus aggregator	N/A, tie to '0 if unused
test_en_i	logic	Input	1	DFT/scan test-enable. Drives clock-gater test ports and AXI cell test inputs.	Test controller → All modules	1'b0
scan_rst_ni	logic	Input	1	Scan reset (active-low). Bypasses reset synchronizers during DFT.	Test controller → All modules	1'b1

4.12. GPIO Pin Requirements

The SMC provides GPIO functionality with multiplexed peripheral functions and test interfaces. The following table lists the signal and bump location, assigned function, recommended pull, and GPIO-specific notes. It does not define default direction or decode configuration straps; use `smc_padrng_pkg::DefaultDirectionMap` and the generated reset-unit `STRAPS_LO` and `STRAPS_HI` register descriptions for those.

Table 7. OCAH GPIO Requirements

Index	Signal	Bump Loc	Function	Recommended Pull	GPIO Notes
0	smc_wrapper.GPIO_PAD[0]	SMC	SPI.DATA[0]	PD	
1	smc_wrapper.GPIO_PAD[1]	SMC	SPI.DATA[1]	PD	
2	smc_wrapper.GPIO_PAD[2]	SMC	SPI.DATA[2]	PD	
3	smc_wrapper.GPIO_PAD[3]	SMC	SPI.DATA[3]	PD	
4	smc_wrapper.GPIO_PAD[4]	SMC	SPI.DATA[4]	PD	

Index	Signal	Bump Loc	Function	Recommended Pull	GPIO Notes
5	smc_wrapper.GPIO_PAD[5]	SMC	SPI.DATA[5]	PD	
6	smc_wrapper.GPIO_PAD[6]	SMC	SPI.DATA[6]	PD	
7	smc_wrapper.GPIO_PAD[7]	SMC	SPI.DATA[7]	PD	
8	smc_wrapper.GPIO_PAD[8]	SMC	SPI.CS	PU	
9	smc_wrapper.GPIO_PAD[9]	SMC	SPI.CLK	PD	
10	smc_wrapper.GPIO_PAD[10]	SMC	SPI.DQS	PD	
11	smc_wrapper.GPIO_PAD[11]	SMC	UART[0].RX	PU	
12	smc_wrapper.GPIO_PAD[12]	SMC	UART[0].TX	PU	
13	smc_wrapper.GPIO_PAD[13]	SMC	UART[0].RTS	PD	
14	smc_wrapper.GPIO_PAD[14]	SMC	UART[0].CTS	PD	
15	smc_wrapper.GPIO_PAD[15]	SMC	UART[1].RX	PU	
16	smc_wrapper.GPIO_PAD[16]	SMC	UART[1].TX	PU	
17	smc_wrapper.GPIO_PAD[17]	SMC	UART[1].RTS	PD	
18	smc_wrapper.GPIO_PAD[18]	SMC	UART[1].CTS	PD	
19	smc_wrapper.GPIO_PAD[19]	SMC	UART[2].RX	PU	
20	smc_wrapper.GPIO_PAD[20]	SMC	UART[2].TX	PU	
21	smc_wrapper.GPIO_PAD[21]	SMC	UART[2].RTS	PD	
22	smc_wrapper.GPIO_PAD[22]	SMC	UART[2].CTS	PD	
23	smc_wrapper.GPIO_PAD[23]	SMC	UART[3].RX	PU	
24	smc_wrapper.GPIO_PAD[24]	SMC	UART[3].TX	PU	
25	smc_wrapper.GPIO_PAD[25]	SMC	UART[3].RTS	PD	
26	smc_wrapper.GPIO_PAD[26]	SMC	UART[3].CTS	PD	
27	smc_wrapper.GPIO_PAD[27]	SMC	I3C[0] SCL	PU	
28	smc_wrapper.GPIO_PAD[28]	SMC	I3C[0] SDA	PU	
29	smc_wrapper.GPIO_PAD[29]	SMC	I3C[2] SCL	PU	

Index	Signal	Bump Loc	Function	Recommended Pull	GPIO Notes
30	smc_wrapper.GPIO_PAD[30]	SMC	I3C[2] SDA	PU	
31	smc_wrapper.GPIO_PAD[31]	SMC	I3C[3] SCL	PU	
32	smc_wrapper.GPIO_PAD[32]	SMC	I3C[3] SDA	PU	
33	smc_wrapper.GPIO_PAD[33]	SMC	I3C[4] SCL	PU	
34	smc_wrapper.GPIO_PAD[34]	SMC	I3C[4] SDA	PU	
35	smc_wrapper.GPIO_PAD[35]	SMC	I3C[5] SCL	PU	
36	smc_wrapper.GPIO_PAD[36]	SMC	I3C[5] SDA	PU	
37	smc_wrapper.GPIO_PAD[37]	SMC	I2C[0] SCL	PU	Every I2C can be programmed to act as I2C, SMBus or PMBus
38	smc_wrapper.GPIO_PAD[38]	SMC	I2C[0] SDA	PU	
39	smc_wrapper.GPIO_PAD[39]	SMC	I2C[0] SMB_A	PU	SMBus Alert
40	smc_wrapper.GPIO_PAD[40]	SMC	I2C[0] SMB_D	PU	SMBus Suspend
41	smc_wrapper.GPIO_PAD[41]	SMC	I2C[1] SCL	PU	
42	smc_wrapper.GPIO_PAD[42]	SMC	I2C[1] SDA	PU	
43	smc_wrapper.GPIO_PAD[43]	SMC	I2C[1] SMB_A	PU	SMBus Alert
44	smc_wrapper.GPIO_PAD[44]	SMC	I2C[1] SMB_D	PU	SMBus Suspend
45	smc_wrapper.GPIO_PAD[45]	SMC	I2C[2] SCL	PU	
46	smc_wrapper.GPIO_PAD[46]	SMC	I2C[2] SDA	PU	
47	smc_wrapper.GPIO_PAD[47]	SMC	I2C[2] SMB_A	PU	SMBus Alert
48	smc_wrapper.GPIO_PAD[48]	SMC	I2C[2] SMB_D	PU	SMBus Suspend
49	smc_wrapper.GPIO_PAD[49]	SMC	AVS.CLOCK	PU	
50	smc_wrapper.GPIO_PAD[50]	SMC	AVS.MDATA	PU	
51	smc_wrapper.GPIO_PAD[51]	SMC	AVS.SDATA	PU	
52	smc_wrapper.GPIO_PAD[52]	SMC	Thermal Emergency N	PU	
53	smc_wrapper.GPIO_PAD[53]	SMC	Isolate Request	PD	
54	smc_wrapper.GPIO_PAD[54]	SMC	SPI DQS Loopback	PD	

Index	Signal	Bump Loc	Function	Recommended Pull	GPIO Notes
55	smc_wrapper.GPIO_PAD[55]	SMC	System Timer Sync Load	PD	
56	smc_wrapper.GPIO_PAD[56]	SMC	System Timer Credit Count	PD	
57	smc_wrapper.GPIO_PAD[57]	SMC	Boot Stall	PD	Stall after fuse sensing to override shadow register values. Boot will resume when this GPIO is released. This value can be overridden by the value specified over JTAG using the boot_stall_jtag_ovrd and boot_stall_jtag_val signals from DTP.
58	smc_wrapper.GPIO_PAD[58]	SMC	OCCP Interface	PD	
59	smc_wrapper.GPIO_PAD[59]	SMC	Reserved	PD	
60	smc_wrapper.GPIO_PAD[60]	SMC	Reserved	PD	
61	smc_wrapper.UNBONDED_GPIO[61]	SMC	Cool Reset In	PU	Not packaged out
62	smc_wrapper.UNBONDED_GPIO[62]	SMC	Cool Reset Out	PU	Not packaged out
63	smc_wrapper.UNBONDED_GPIO[63]	SMC	I3C[1] SCL	PU	Not packaged out
64	smc_wrapper.UNBONDED_GPIO[64]	SMC	I3C[1] SDA	PU	Not packaged out
65	smc_wrapper.PAD_JTAG_IN_TCK	?	PTAP TCK		
66	smc_wrapper.PAD_JTAG_IN_TRSTN	?	PTAP TRST		
67	smc_wrapper.PAD_JTAG_IN_TDI	?	PTAP TDI		
68	smc_wrapper.PAD_JTAG_IN_TMS	?	PTAP TMS		
69	smc_wrapper.PAD_JTAG_IN_TDO	?	PTAP TDO		
70	smc_wrapper.PAD_JTAG_OUT_TCK	?	STAP TCK		
71	smc_wrapper.PAD_JTAG_OUT_TRSTN	?	STAP TRST		
72	smc_wrapper.PAD_JTAG_OUT_TDI	?	STAP TDI		
73	smc_wrapper.PAD_JTAG_OUT_TMS	?	STAP TMS		
74	smc_wrapper.PAD_JTAG_OUT_TDO	?	STAP TDO		
75	smc_wrapper.PAD_REFCLK	SMC	BP_REFCLK_VDD_SYS		
76	smc_wrapper.PAD_PRSTN	SMC	BP_RESETN		
77	smc_wrapper.PAD_POWERGOOD	SMC	BP_POWERGOOD		
78		SEP	OTP[0]		
79		SEP	OTP[1]		

Index	Signal	Bump Loc	Function	Recommended Pull	GPIO Notes
80		SEP	OTP[2]		
81		SEP	OTP[3]		
82		SEP	OTP[4]		
83		SEP	OTP[5]		
84		SMC	PVT[0]		
85		SMC	PVT[1]		
86			VDDIO		
87	smc_wrapper.PLL_CLK_OBS_PAD	SMC	PLL clock OBS	PD	PLL clock observation pin
88	smc_wrapper.PVT_CLK_OBS_PAD	SMC	PVT RO	PD	Process sensor RO output
89					

For multi-chiplet systems, the **PRIMARY_CHIPLET** strap (**STRAPS_LO[25]**) determines whether the chiplet operates as primary or secondary. The primary chiplet's System Timer OCTS generates synchronization pulses (**timer_sync_load_o**, **timer_cnt_credit_o**) that secondary chiplets receive to maintain coherent timestamps across the system.

Chapter 5. Debug & Test Ports (DTP)

Integration

5.1. Configuration

The cross-trigger topology is fixed at elaboration by `ntp_pkg`, a committed source file at `hw/sys/ntp/rtl/ntp_pkg.sv`. `DEFAULT_NUM_CTP`, `DEFAULT_NUM_INT_CT`, and `DEFAULT_NUM_CLK_STOP_REQ` there set the `XTRIG_NUM_CTP`, `XTRIG_NUM_INT_CT`, and `XTRIG_NUM_CLK_STOP_REQ` localparams of `ntp`, so a different port count is applied by editing that package rather than by overriding parameters at the instantiation. The remaining DTP parameters, including `XTRIG_INT_CT_MODE` and every `JTAG_*` enable, are set at the instantiation as shown below.

Include the DTP in your build using Bender target `ntp`, which pulls in the DTP RTL together with the JTAG and cross-trigger IPs it instantiates. The legacy filelist `hw/sys/ntp/rtl/config/ntp.f` covers only the JTAG portion of the hierarchy and is not a complete DTP recipe.

5.2. Instantiation

```
ntp #(
    // JTAG Configuration
    .JTAG_BSR_ENABLE      (1'b1),
    .JTAG_TMP_ENABLE      (1'b1),
    .JTAG_SMC_DBG_ENABLE  (1'b1),
    .JTAG_SEP_DBG_ENABLE  (1'b1),
    .JTAG_IDCODE_MFR_ID   (11'h15A),
    .JTAG_IDCODE_PART_NUM (16'h1234),
    .JTAG_IDCODE_SI_REV   (4'h1),
    // Cross Trigger Configuration
    .XTRIG_INT_CT_MODE    (10'b0000000000)
) u_ntp (
    .clk_i                (clk),
    .rst_n_i              (rst_n),
    .pwr_on_rst_ni        (pwr_on_rst_n),
    // JTAG, Boundary Scan, Cross Trigger interfaces...
);
```

5.3. Clock and Reset

- **TCK Domain:** JTAG logic operates on external Test Clock
- **System Clock** (`clk_i`): Cross trigger logic and JTAG2AXI bridges
- **System Reset** (`rst_n_i`): Resets cross trigger and AXI; does not affect TAP controller
- **Power-On Reset** (`pwr_on_rst_ni`): Asynchronous reset for JTAG state machine

5.4. Constraints

- JTAG interface: 10-50 MHz TCK frequency
- Cross trigger signals synchronized to system clock
- DTP remains active during clock stop for debug access
- External CTP signals require pad ring integration with ESD protection

5.5. STAP Scan Chain Topology

The DTP secondary scan path chains multiple STAPs on a single PTAP-managed scan string. The fixed order on this string is: PTAP, I/O STAP (if `JTAG_STAP_IO_ENABLE=1`), SMC debug STAP (if `JTAG_SMC_DBG_ENABLE=1`), SEP debug STAP (if `SEP=1` in the SMU), extra STAP[N-1:0], and return to PTAP.

Both the SMC and SEP debug STAP host interfaces are internal to the SMU and are not exported on the SMU boundary. The SMU wires the SMC debug STAP host outputs to the SMC CPU/system JTAG ports (`smc_cpu_jtag_*`) when `JTAG_SMC_DBG_ENABLE=1`; when disabled, the DTP bypasses this STAP in the secondary scan chain and drives the internal host outputs low. The SEP debug STAP connects to the SEP JTAG debug port when `SEP=1`; when `SEP=0`, the SMU ties `sep_stap_tdo_to_dtp = 1'b0` to bypass the SEP STAP return path.

Each STAP host interface is gated by a field of `dbg_disable_i`, synchronized to TCK inside the DTP. Each field is active-high (1 = path disabled).

STAP	Disable Field
I/O STAP	<code>dbg_disable_i.stap_io</code>
SMC debug STAP	<code>dbg_disable_i.stap_smc</code>
SEP debug STAP	<code>dbg_disable_i.stap_sep</code>
Extra STAPs	<code>dbg_disable_i.stap_extra</code>
External STAP return path	<code>dbg_disable_i.stap_host</code>

The full set of debug-disable-gated paths, including the iJTAG chains and the JTAG2AXI bridges, is tabulated in the DTP JTAG integration section of the TRM.

5.6. DTP Port Interface

The DTP exposes interfaces for JTAG TAP control, boundary scan, multiple STAP host ports, iJTAG scan chains, AXI debug bridges, cross trigger networks, and CTP GPIO pads. The following table defines all DTP top-level ports. Refer to the dedicated DTP documentation in [hw/sys/dtp/doc/](#) for internal design details.

Table 8. DTP Port Declaration

Interface Name	Type	Direction	Width	Description	Connection	Default value (if applicable)
<code>clk_i</code>	logic	Input	1	System clock for cross trigger logic and JTAG2AXI bridges.	System clock	N/A
<code>rst_n_i</code>	logic	Input	1	System reset (active low). Resets cross trigger and AXI logic; does not affect the TAP controller.	System reset	N/A
<code>pwr_on_rst_ni</code>	logic	Input	1	Power-on reset for JTAG state machine (active low, asynchronous).	Power-on reset	N/A

Interface Name	Type	Direction	Width	Description	Connection	Default value (if applicable)
dbg_disable_i	sep_lifecycle_ctrl_pkg::dbg_disable_t	Input	-	Per-path debug/test disables. Active-high (1 = path disabled).	SEP	N/A
jtag_ptap_client_tap_ctrl_i	jtag_tap_ctrl_t	Input	-	Primary JTAG TAP control (TCK, TMS, TRST_N).	External JTAG pads	N/A
jtag_ptap_client_tdi_i	logic	Input	1	Primary JTAG TDI.	External JTAG pads	N/A
jtag_ptap_client_tdo_o	logic	Output	1	Primary JTAG TDO.	External JTAG pads	N/A
jtag_ptap_client_tdo_oen_o	logic	Output	1	Primary JTAG TDO output enable.	External JTAG pads	N/A
jtag_bsr_host_scan_ctrl_o	jtag_scan_ctrl_t	Output	-	Boundary scan control. Tie scan_in to scan_out if BSR is disabled.	Boundary scan chain	N/A
jtag_bsr_host_scan_in_i	logic	Input	1	Boundary scan data in.	Boundary scan chain	N/A
jtag_bsr_host_scan_out_o	logic	Output	1	Boundary scan data out.	Boundary scan chain	N/A
jtag_stap_io_host_tap_ctrl_o	jtag_tap_ctrl_t	Output	-	I/O STAP TAP control for chiplet-to-chiplet connectivity. .tck remains driven when the STAP generate is off.	I/O STAP host	TMS/TRST idle if JTAG_STAP_IO_ENABLE=0
jtag_stap_io_host_tdi_i	logic	Input	1	I/O STAP TDI.	I/O STAP host	Tie to '0 if unused
jtag_stap_io_host_tdo_o	logic	Output	1	I/O STAP TDO.	I/O STAP host	N/A
jtag_stap_io_host_tdo_oen_o	logic	Output	1	I/O STAP TDO output enable.	I/O STAP host	N/A
jtag_stap_smc_host_tap_ctrl_o	jtag_tap_ctrl_t	Output	-	SMC debug STAP TAP control. .tck remains driven when the STAP generate is off.	SMC JTAG port	TMS/TRST idle if JTAG_SMC_DBG_ENABLE=0
jtag_stap_smc_host_tdi_i	logic	Input	1	SMC debug STAP TDI (from SMC TDO).	SMC JTAG port	Tie to '0 if unused
jtag_stap_smc_host_tdo_o	logic	Output	1	SMC debug STAP TDO (to SMC TDI).	SMC JTAG port	N/A
jtag_stap_smc_host_tdo_oen_o	logic	Output	1	SMC debug STAP TDO output enable.	SMC JTAG port	N/A
jtag_stap_sep_host_tap_ctrl_o	jtag_tap_ctrl_t	Output	-	SEP debug STAP TAP control. .tck remains driven when the STAP generate is off.	SEP JTAG port	TMS/TRST idle if JTAG_SEP_DBG_ENABLE=0
jtag_stap_sep_host_tdi_i	logic	Input	1	SEP debug STAP TDI (from SEP TDO).	SEP JTAG port	Tie to '0 if unused
jtag_stap_sep_host_tdo_o	logic	Output	1	SEP debug STAP TDO (to SEP TDI).	SEP JTAG port	N/A
jtag_stap_sep_host_tdo_oen_o	logic	Output	1	SEP debug STAP TDO output enable.	SEP JTAG port	N/A
jtag_stap_extra_host_tap_ctrl_o	jtag_tap_ctrl_t	Output	[JTAG_NUM_EXTRA_STAP_PORTS-1:0]	Extra STAP TAP control array. .tck remains driven when the STAP generate is off.	Extra STAP hosts	TMS/TRST idle if JTAG_NUM_EXTRA_STAPS=0
jtag_stap_extra_host_tdi_i	logic	Input	[JTAG_NUM_EXTRA_STAP_PORTS-1:0]	Extra STAP TDI array.	Extra STAP hosts	Tie to '0 if unused
jtag_stap_extra_host_tdo_o	logic	Output	[JTAG_NUM_EXTRA_STAP_PORTS-1:0]	Extra STAP TDO array.	Extra STAP hosts	N/A

Interface Name	Type	Direction	Width	Description	Connection	Default value (if applicable)
jtag_stap_extra_host_tdo_oen_o	logic	Output	[JTAG_NUM_EXT RA_STAP_PORTS-1:0]	Extra STAP TDO output enable array.	Extra STAP hosts	N/A
jtag_stap_host_scan_ctrl_o	jtag_scan_ctrl_t	Output	-	Extended STAP scan control. Tie scan_in to scan_out if unused.	STAP scan chain	N/A
jtag_stap_host_scan_in_i	logic	Input	1	Extended STAP scan data in.	STAP scan chain	N/A
jtag_stap_host_scan_out_o	logic	Output	1	Extended STAP scan data out.	STAP scan chain	N/A
jtag_dfd_host_scan_ctrl_o	jtag_scan_ctrl_t	Output	-	DFD iJTAG scan control. Tie scan_in to scan_out if unused.	DFD iJTAG chain	N/A
jtag_dfd_host_scan_in_i	logic	Input	1	DFD iJTAG scan data in.	DFD iJTAG chain	N/A
jtag_dfd_host_scan_out_o	logic	Output	1	DFD iJTAG scan data out.	DFD iJTAG chain	N/A
jtag_dft_secure_host_scan_ctrl_o	jtag_scan_ctrl_t	Output	-	Secure DFT iJTAG scan control. Tie scan_in to scan_out if unused.	Secure DFT iJTAG chain	N/A
jtag_dft_secure_host_scan_in_i	logic	Input	1	Secure DFT iJTAG scan data in.	Secure DFT iJTAG chain	N/A
jtag_dft_secure_host_scan_out_o	logic	Output	1	Secure DFT iJTAG scan data out.	Secure DFT iJTAG chain	N/A
jtag_dft_host_scan_ctrl_o	jtag_scan_ctrl_t	Output	-	Non-secure DFT iJTAG scan control. Tie scan_in to scan_out if unused.	Non-secure DFT iJTAG chain	N/A
jtag_dft_host_scan_in_i	logic	Input	1	Non-secure DFT iJTAG scan data in.	Non-secure DFT iJTAG chain	N/A
jtag_dft_host_scan_out_o	logic	Output	1	Non-secure DFT iJTAG scan data out.	Non-secure DFT iJTAG chain	N/A
axi_smc_dbg_req_o	smc_jtag_axi_req_t	Output	-	SMC fabric debug AXI request. Active when JTAG_SMC_DBG_ENABLE=1.	SMC jtag_axi_in_req_i	Tie to '0 if disabled
axi_smc_dbg_resp_i	smc_jtag_axi_resp_t	Input	-	SMC fabric debug AXI response.	SMC jtag_axi_in_resp_o	Tie to '0 if disabled
axil_smc_otp_jtag_req_o	smc_otp_axil_req_t	Output	-	SMC OTP debug AXI-Lite request.	SMC axil_smc_otp_jtag_req_i	Tie to '0 if disabled
axil_smc_otp_jtag_resp_i	smc_otp_axil_resp_t	Input	-	SMC OTP debug AXI-Lite response.	SMC axil_smc_otp_jtag_resp_o	Tie to '0 if disabled
axil_sep_otp_jtag_req_o	sep_otp_axil_req_t	Output	-	SEP OTP debug AXI-Lite request.	SEP axil_sep_otp_jtag_req_i	Tie to '0 if disabled
axil_sep_otp_jtag_resp_i	sep_otp_axil_resp_t	Input	-	SEP OTP debug AXI-Lite response.	SEP axil_sep_otp_jtag_resp_o	Tie to '0 if disabled
stop_clks_o	logic	Output	1	Clock stop output from JTAG DEBUG_CONTROL or CLA clock-stop requests via CTN.	PLL clock gates	N/A
cla_clock_stop_en_o	logic	Output	1	CLA clock stop enable from DEBUG_CONTROL register.	Clock control logic	N/A
jtag_boot_stall_ovrd_o	logic	Output	1	JTAG boot stall override enable.	Boot control	N/A
jtag_boot_stall_o	logic	Output	1	JTAG boot stall value when override is asserted.	Boot control	N/A

Interface Name	Type	Direction	Width	Description	Connection	Default value (if applicable)
jtag_ic_reset_smc_o	ic_reset_smc_t	Output	$\$bits(ic_reset_smc_t)$	SMC IC_RESET override slice. Struct contains <code>.ovrd</code> (override enables) and <code>.val</code> (active-low override values), each sized to match the corresponding SMC reset control struct. Tied to '0 when <code>JTAG_IC_RESET_SMC_ENABLE=0</code> .	SMC <code>jtag_smc_reset_ctrl_i</code>	N/A
jtag_ic_reset_sep_o	ic_reset_sep_t	Output	$\$bits(ic_reset_sep_t)$	SEP IC_RESET override slice. Struct contains <code>.ovrd</code> (override enables) and <code>.val</code> (active-low override values), each sized to match the corresponding SEP reset control struct. Tied to '0 when <code>JTAG_IC_RESET_SEP_ENABLE=0</code> .	SEP <code>jtag_sep_reset_ctrl_i</code>	N/A
jtag_ic_reset_ext_o	ic_reset_ext_t	Output	$\$bits(ic_reset_ext_t)$	External IC_RESET override slice. Struct contains <code>.ovrd</code> (override enables) and <code>.val</code> (active-low override values), each sized per integrator-defined type. Tied to '0 when <code>JTAG_IC_RESET_EXT_ENABLE=0</code> .	Integrator-defined reset overrides for logic outside the SMU	N/A
jtag_ptap_state_o	tap_state_e	Output	-	Current PTAP TAP state.	Debug infrastructure	N/A
jtag_ptap_inst_decoded_o	jtag_instruction_decoded_e	Output	-	Current decoded PTAP instruction.	Debug infrastructure	N/A
axil_xtrig_req_i	xtrig_axil_req_t	Input	-	Cross trigger CSR AXI-Lite request.	SMC <code>axil_dtp_csr_req_o</code>	N/A
axil_xtrig_resp_o	xtrig_axil_resp_t	Output	-	Cross trigger CSR AXI-Lite response.	SMC <code>axil_dtp_csr_resp_i</code>	N/A
xtrig_ctm_src_req_o	logic	Output	$[XTRIG_NUM_INST_CT-1:0]$	Cross trigger source requests from CTM to destination sinks.	Cross trigger network	N/A
xtrig_ctm_src_ack_i	logic	Input	$[XTRIG_NUM_INST_CT-1:0]$	Cross trigger source acknowledges. Unused in pulse-sync mode (mode bit = 0).	Cross trigger network	Tie to '0 in pulse-sync mode
xtrig_ctm_dst_req_i	logic	Input	$[XTRIG_NUM_INST_CT-1:0]$	Cross trigger destination requests from source generators.	Cross trigger network	Tie to '0 if unused
xtrig_ctm_dst_ack_o	logic	Output	$[XTRIG_NUM_INST_CT-1:0]$	Cross trigger destination acknowledges. Unused in pulse-sync mode (mode bit = 0).	Cross trigger network	N/A
xtrig_clk_stop_req_i	logic	Input	$[XTRIG_NUM_CLK_STOP_REQ-1:0]$	Clock stop requests from CLAs or other devices in the chiplet.	Clock stop requesters	Tie to '0 if unused
xtrig_ctp_req_out_dout_o	logic	Output	$[XTRIG_NUM_CTP-1:0]$	CTP request-out data output (to GPIO pad ring).	GPIO pad ring	N/A
xtrig_ctp_req_out_dout_en_o	logic	Output	$[XTRIG_NUM_CTP-1:0]$	CTP request-out data output enable.	GPIO pad ring	N/A
xtrig_ctp_req_out_din_i	logic	Input	$[XTRIG_NUM_CTP-1:0]$	CTP request-out data input (from GPIO pad ring).	GPIO pad ring	Tie to '0 if unused
xtrig_ctp_req_out_din_en_o	logic	Output	$[XTRIG_NUM_CTP-1:0]$	CTP request-out data input enable.	GPIO pad ring	N/A
xtrig_ctp_req_in_dout_o	logic	Output	$[XTRIG_NUM_CTP-1:0]$	CTP request-in data output.	GPIO pad ring	N/A
xtrig_ctp_req_in_dout_en_o	logic	Output	$[XTRIG_NUM_CTP-1:0]$	CTP request-in data output enable.	GPIO pad ring	N/A
xtrig_ctp_req_in_din_i	logic	Input	$[XTRIG_NUM_CTP-1:0]$	CTP request-in data input.	GPIO pad ring	Tie to '0 if unused
xtrig_ctp_req_in_din_en_o	logic	Output	$[XTRIG_NUM_CTP-1:0]$	CTP request-in data input enable.	GPIO pad ring	N/A
xtrig_ctp_ack_in_dout_o	logic	Output	$[XTRIG_NUM_CTP-1:0]$	CTP ack-in data output.	GPIO pad ring	N/A

Interface Name	Type	Direction	Width	Description	Connection	Default value (if applicable)
xtrig_ctp_ack_in_dout_en_o	logic	Output	[XTRIG_NUM_CTP-1:0]	CTP ack-in data output enable.	GPIO pad ring	N/A
xtrig_ctp_ack_in_din_i	logic	Input	[XTRIG_NUM_CTP-1:0]	CTP ack-in data input.	GPIO pad ring	Tie to '0 if unused
xtrig_ctp_ack_in_din_en_o	logic	Output	[XTRIG_NUM_CTP-1:0]	CTP ack-in data input enable.	GPIO pad ring	N/A
xtrig_ctp_ack_out_dout_o	logic	Output	[XTRIG_NUM_CTP-1:0]	CTP ack-out data output.	GPIO pad ring	N/A
xtrig_ctp_ack_out_dout_en_o	logic	Output	[XTRIG_NUM_CTP-1:0]	CTP ack-out data output enable.	GPIO pad ring	N/A
xtrig_ctp_ack_out_din_i	logic	Input	[XTRIG_NUM_CTP-1:0]	CTP ack-out data input.	GPIO pad ring	Tie to '0 if unused
xtrig_ctp_ack_out_din_en_o	logic	Output	[XTRIG_NUM_CTP-1:0]	CTP ack-out data input enable.	GPIO pad ring	N/A

Chapter 6. Security Processor (SEP)

Integration

The Security Processor (SEP) is the Root of Trust for the chiplet, providing a physically isolated execution environment for security-critical services such as secure boot, lifecycle control, device attestation, cryptographic acceleration, and key management. This section provides practical integration procedures for adopters integrating the SEP as part of the SMU or as a standalone out-of-context IP.

For detailed architectural documentation about the SEP internal design, refer to the dedicated SEP documentation located in [hw/sys/sep/doc/](#). The SEP hardware overview and interconnect fabric are described in [hw/sys/sep/doc/overview.adoc](#) and [hw/sys/sep/doc/fabric.adoc](#) respectively.

6.1. Module Overview

The `sep.sv` module provides the complete SEP functionality with logic-level interfaces. Technology-specific components — SRAM, ROM, and eFuse shims — are instantiated by the adopter outside SEP, following the same vendor-neutral philosophy used for the SMC.

Separately, SEP exposes interfaces for supplementary peripherals an adopter may add on rather than substitute: an external TRNG and an additional SPI controller. These are not technology-specific — SEP contains its own entropy source and SPI host — so the interfaces exist to supplement what SEP already provides, and may be left unused.

When integrated inside the SMU, the SEP's external interfaces are passed through the SMU boundary with a `sep_` prefix.

6.2. Clock and Reset Requirements

The SEP requires two clock inputs. Connect `clk_i` to the primary system clock driving all SEP internal logic. Connect `clk_wdt_i` to a 200 kHz clock source for the watchdog timer; this clock must be independent of the system clock so that the WDT can detect system clock failures.

The primary reset `rst_ni` follows the standard active-low, asynchronous assertion / synchronous deassertion convention. The `dbg_rstb_i` input provides a separate reset for the EL2 CPU debug module. The `wdt_rst_ni` input receives the watchdog reset generated by the SMC reset unit. The SEP outputs `wdt_timer_rst_req_o` when the WDT triggers a reset request.

6.3. AXI Interfaces

The SEP connects to the system through three AXI paths. The `smn_outbound_axi` master interface allows SEP firmware to access system resources outside the SEP domain, such as SMC registers or external memory. The `smn_inbound_axi` slave interface accepts requests from system masters requiring access to SEP-managed resources. The `sep_ext_to_smc_axi` output provides a dedicated AXI path for SEP-to-SMC transactions, connecting to the SMC's `sep_axi_in` port.

An additional AXI extension port (`axi_extension_axi`) enables adopters to attach custom peripherals to the SEP interconnect fabric without modifying the SEP core. When unused, tie the response input to return DECERR.

6.4. Memory Interfaces

All SEP memory macros are instantiated externally and connected through dedicated request/response interfaces. The `sep_cpu_tcm` interface provides tightly-coupled memory (ICCM and DCCM) for the VeeR EL2 CPU. The `sep_sram` interface connects scratch SRAM used for firmware data. The `sep_boot_rom` interface provides the BL0 ROM containing the first-stage bootloader.

The crypto subsystem requires additional memory interfaces. `sep_crypto_pka_imem_sram` and `sep_crypto_pka_dmem_sram` connect to the OTBN public key accelerator instruction and data memories respectively. `km_rom_mem` and `km_sram_mem` connect to the Key Manager's dedicated ROM and SRAM macros.

`abr_mem` connects the Adams Bridge working SRAM. On an idle cycle (`re` low), ABR expects the channel's read data to return 0 the following cycle. `SEP_ABR_SRAM_LATENCY` must equal the macros' native registered-read latency (default 1). Word-write channels are full-word `we` / `re` / address / data. `sig_z` and `pk` carry one-bit-per-byte `wstrobe`; map those to the macros' byte-write enables. `SEP_ABR_MASKING_EN` (default 1) selects 2-share DOM: thirteen 1R1W macros versus nine, plus a second NTT. This changes ABR internal behavior (sequencing, SCA, memory topology), not merely throughput. Give the same value to SEP and to the SRAM instances. When it is 0, do not instantiate the four masked coefficient banks; their response fields read as 0.

6.5. Cryptographic Subsystem Connections

The SEP includes an internal entropy source that requires a ring-oscillator sample clock connected to `entropy_rosc_sample_clk_i`. This clock must be asynchronous to `clk_i` and typically runs between 100 and 400 MHz.

6.5.1. External TRNG

For adopters providing an external TRNG, the `ext_trng_axil` AXI-Lite interface connects to the external TRNG's control registers, while the `ext_trng_axis` AXI-Stream interfaces carry entropy data. The `ext_trng_irq_i` input is routed to the PIC.

SEP decodes the 4 kB TRNG aperture (`0x1091_7000` - `0x1091_7FFF`) as a single window and forwards every access on `ext_trng_axil`. It does not decode offsets inside that window: the endpoint is an adopter-defined IP.

The adopter must perform the intra-aperture decode. An address that owns no register must return SLVERR and must not alias onto a live register. When no external TRNG is connected, terminate `ext_trng_axil` with a DECERR slave.

6.6. eFuse and Lifecycle

SEP has its own eFuse bank. Instantiate a separate SHIM and physical eFuse bank; do not share the SMC's. The SHIM contract is [eFuse Interface](#). On `sep.sv` connect `efuse_bank_ctrl_*` and `efuse_shim_command_*`. Through the SMU those ports appear as `sep_efuse_bank_ctrl_*` and `sep_efuse_shim_command_*`.

SEP senses this bank after its own reset. Watch `sep_fuse_sense_done_o`. On `sep.sv`, drive `smc_fuse_sense_done_i` from the SMC so firmware can see when the SMC fabric is out of reset; the SMU wires that input internally.

Lifecycle and test-mode ports on `sep.sv`, and what to do with them. Behaviour is in the Technical Reference Manual, not here.

- `secure_tm_req_i` signals a request to enter secure test mode. SEP latches it into `secure_tm_o` when fuse sensing completes, or at cold-reset release if SEC_DIS is already asserted. Secure test mode forces a no-secret, no-fuse-

program configuration; it is not an authorization bit. See [Test Mode Entry](#) and [secure_tm](#) and the [Secure Scan Chain](#) in the TRM. [secure_tm_o](#) is also an SMU output.

- [security_disable_o](#) is the SEC_DIS token-match result (emergency A0 unlock). On [sep.sv](#), route it to SMC [sep_security_disable_i](#); the SMU does that internally. See [Security Disable](#) in the TRM.
- [lc_state_o](#) is the differentially encoded LC_STATE shadow. [lc_sigint_err_o](#) is the decode integrity error (fail-closed). Both are SMU outputs. See [Life Cycle Controller](#) in the TRM.
- [dbg_disable_o](#) is the typed per-path debug/test disable vector (active-high: 1 = path disabled). On [sep.sv](#), route it to DTP [dbg_disable_i](#); the SMU does that internally.
- [lcc_demote_state_1_o](#) / [lcc_demote_state_2_o](#) are differentially encoded in-field debug demotion. They leave the SMU for adopter lifecycle logic and are not connected to the SMC. See [in-field debug demotion](#) in the TRM.
- [sep_fuse_dft_disable_o](#) / [smc_fuse_dft_disable_o](#) gate DFT-inserted OTP access. Leave them open if no such path is inserted. They are SMU outputs.

OTP debug AXI-Lite ([axil_sep_otp_jtag](#)) is connected to the DTP inside the SMU; when [SEP=0](#) the SMU instantiates an AXI-Lite error slave on that path.

6.7. SPI Host Interface

The SEP provides a SPI host controller through the [sep_io_spi](#) interface, supporting single and quad modes. The controller’s own interrupt leaves the module as the [irq](#) field of [sep_io_spi_req_o](#), so no separate interrupt output is needed.

6.8. Bring-Up Considerations

The SEP boot sequence begins after the SMC completes fuse sensing and releases the SEP reset. The SEP BL0 ROM FW verifies the BL1 software image using non-volatile public keys before transferring control. Feature controls derived from secure boot authentication and lifecycle state govern what operations are permitted after boot.

The [jtag_id](#) input must be tied to an appropriate constant in the top-level integration. A [rst_vec_i](#) port exists on [tb_top.sv](#) for DV reset vector injection; it is not present on [sep.sv](#) itself and requires no integration tie-off.

6.9. SEP Port Interface

The SEP exposes interfaces for clocks, resets, JTAG debug, CPU control, memory macros, AXI bus connections, cryptographic subsystem, eFuse, lifecycle, SPI host, and mailbox. The following table defines all SEP top-level ports.

Table 9. SEP Port Declaration

Interface Name	Type	Direction	Width	Description	Connection	Default value (if applicable)
clk_i	logic	Input	1	Primary SEP clock. All SEP internal logic operates synchronously to this clock.	System clock	N/A
clk_wdt_i	logic	Input	1	200 kHz clock for watchdog timer.	Low-frequency clock source	N/A
rst_ni	logic	Input	1	Primary reset (active low). Asynchronous assertion, synchronous deassertion.	System reset	N/A
dbg_rstb_i	logic	Input	1	EL2 debugger reset (active low).	JTAG debug infrastructure	N/A

Interface Name	Type	Direction	Width	Description	Connection	Default value (if applicable)
wdt_rst_ni	logic	Input	1	Watchdog timer reset from SMC (active low).	SMC reset unit	N/A
wdt_timer_rst_req_o	logic	Output	1	WDT reset request output. Triggers memory interface reset in <code>sep_wrapper</code> .	SEP wrapper	N/A
jtag_tck	logic	Input	1	JTAG test clock.	JTAG pads (via DTP STAP)	N/A
jtag_tms	logic	Input	1	JTAG test mode select.	JTAG pads (via DTP STAP)	N/A
jtag_tdi	logic	Input	1	JTAG test data in.	JTAG pads (via DTP STAP)	N/A
jtag_trst_n	logic	Input	1	JTAG test reset (active low).	JTAG pads (via DTP STAP)	N/A
jtag_tdo	logic	Output	1	JTAG test data out.	JTAG pads (via DTP STAP)	N/A
jtag_tdoEn	logic	Output	1	JTAG test data out enable.	JTAG pads (via DTP STAP)	N/A
axil_sep_otp_jtag_req_i	sep_efuse_pkg::efuse_axil_req_t	Input	-	OTP debug AXI-Lite request from JTAG.	DTP <code>axil_sep_otp_jtag_req_o</code>	Tie to '0 if unused
axil_sep_otp_jtag_resp_o	sep_efuse_pkg::efuse_axil_resp_t	Output	-	OTP debug AXI-Lite response to JTAG.	DTP <code>axil_sep_otp_jtag_resp_i</code>	N/A
mpc_debug_halt_req	logic	Input	1	Async halt request from MPC.	Debug controller	Tie to '0 if unused
mpc_debug_run_req	logic	Input	1	Async run request from MPC.	Debug controller	Tie to '0 if unused
mpc_reset_run_req	logic	Input	1	Run/halt selection after reset.	Debug controller	1'b1
i_cpu_halt_req	logic	Input	1	Async halt request to CPU.	Debug controller	Tie to '0 if unused
i_cpu_run_req	logic	Input	1	Async restart request to CPU.	Debug controller	Tie to '0 if unused
test_en_i	logic	Input	1	DFT/scan test-enable. Drives clock-gater test ports and AXI cell test inputs.	Test controller	1'b0
scan_rst_ni	logic	Input	1	Scan reset (active-low). Bypasses reset synchronizers during DFT.	Test controller	1'b1
ext_boot_seq_done_i	logic	Input	1	External boot sequence completion (memory repair and shadow register override done); gates reset release.	External boot/repair controller	1'b1
dmi_core_enable	logic	Input	1	Enables DMI accesses to the core debug module (addresses 0x00-0x4F). Tied high at SMU; TAP access is already lifecycle-gated.	Debug infrastructure	1'b1
dmi_uncore_enable	logic	Input	1	Enables DMI accesses to an external uncore aperture (addresses 0x50+). Unused: the core debug module AXI master already reaches the SEP fabric.	Debug infrastructure	Tie to '0 if unused
dmi_uncore_en	logic	Output	1	DMI uncore access enable.	Debug infrastructure	N/A
dmi_uncore_wr_en	logic	Output	1	DMI uncore write enable.	Debug infrastructure	N/A
dmi_uncore_addr	logic	Output	[6:0]	DMI uncore address.	Debug infrastructure	N/A

Interface Name	Type	Direction	Width	Description	Connection	Default value (if applicable)
dmi_uncore_wdata	logic	Output	[31:0]	DMI uncore write data.	Debug infrastructure	N/A
dmi_uncore_rdata	logic	Input	[31:0]	DMI uncore read data.	Debug infrastructure	N/A
dmi_active	logic	Output	1	DMI active indicator.	Debug infrastructure	N/A
sep_cpu_trace	sep_cpu_trace_t	Output	-	CPU trace output for debug.	Trace infrastructure	N/A
lockstep_ctrl_i	sep_pkg::sep_lockstep_ctrl_t	Input	-	VeeR lockstep controls: disable corruption detection, and error-injection enable. Inert unless the core is built with RV_LOCKSTEP_ENABLE .	Chip-level RAS control	Tie to '0 if unused
lockstep_status_o	sep_pkg::sep_lockstep_status_t	Output	-	VeeR lockstep status: corruption detected. Reads 0 unless the core is built with RV_LOCKSTEP_ENABLE .	Chip-level RAS aggregation	N/A
jtag_id	logic	Input	[31:1]	JTAG ID value.	Configuration tie-off	N/A
timer_int	logic	Input	1	Timer interrupt.	Internal timer	Tie to '0 if unused
soft_int	logic	Input	1	Software interrupt.	Software IRQ source	Tie to '0 if unused
extintsrc_req	logic	Input	[NUM_EXTERNAL_IRQS-1:0]	External interrupt sources for PIC.	External IRQ sources	Tie to '0 if unused
sep_cpu_tcm_req_o	sep_cpu_tcm_req_t	Output	-	CPU tightly-coupled memory (TCM) request (ICCM + DCCM).	SRAM macros	N/A
sep_cpu_tcm_rsp_i	sep_cpu_tcm_rsp_t	Input	-	CPU TCM response.	SRAM macros	N/A
sep_sram_req	sep_sram_req_t	Output	-	Scratch SRAM request.	SRAM macros	N/A
sep_sram_rsp	sep_sram_rsp_t	Input	-	Scratch SRAM response.	SRAM macros	N/A
sep_boot_rom_req	sep_sram_req_t	Output	-	Boot ROM (BL0) request.	ROM macro	N/A
sep_boot_rom_rsp	sep_sram_rsp_t	Input	-	Boot ROM (BL0) response.	ROM macro	N/A
smn_outbound_axi_req_o	sep_system_peripherals_outbound_axi_req_t	Output	-	SMN outbound AXI request (system bus master).	SMN fabric	N/A
smn_outbound_axi_resp_i	sep_system_peripherals_outbound_axi_resp_t	Input	-	SMN outbound AXI response.	SMN fabric	N/A
smn_inbound_axi_req_i	sep_system_peripherals_internal_axi_req_t	Input	-	SMN inbound AXI request (system bus slave).	SMN fabric	Tie to '0 if unused
smn_inbound_axi_resp_o	sep_system_peripherals_internal_axi_resp_t	Output	-	SMN inbound AXI response.	SMN fabric	N/A
sep_ext_to_smc_axi_req_o	sep_system_peripherals_internal_axi_req_t	Output	-	SEP-to-SMC AXI request. Dedicated path for SEP to access SMC resources.	SMC sep_axi_in_req_i	N/A
sep_ext_to_smc_axi_resp_i	sep_system_peripherals_internal_axi_resp_t	Input	-	SEP-to-SMC AXI response.	SMC sep_axi_in_resp_o	N/A
entropy_rosc_sample_clk_i	logic	Input	1	Ring-oscillator sample clock for entropy source (async vs clk_i ; ~100-400 MHz typical).	Ring oscillator	N/A
sep_crypto_pka_imem_sram_req	sep_crypto_pka_imem_sram_req_t	Output	-	OTBN PKA instruction memory SRAM request.	SRAM macro	N/A

Interface Name	Type	Direction	Width	Description	Connection	Default value (if applicable)
sep_crypto_pka_imem_sram_rsp	sep_crypto_pka_imem_sram_rsp_t	Input	-	OTBN PKA instruction memory SRAM response.	SRAM macro	N/A
sep_crypto_pka_dmem_sram_req	sep_crypto_pka_dmem_sram_req_t	Output	-	OTBN PKA data memory SRAM request.	SRAM macro	N/A
sep_crypto_pka_dmem_sram_rsp	sep_crypto_pka_dmem_sram_rsp_t	Input	-	OTBN PKA data memory SRAM response.	SRAM macro	N/A
ext_trng_axil_req_o	sep_32_32_axil_req_t	Output	-	External TRNG AXI-Lite passthrough request (to sep_ip_integration).	External TRNG shim	N/A
ext_trng_axil_resp_i	sep_32_32_axil_resp_t	Input	-	External TRNG AXI-Lite passthrough response.	External TRNG shim	N/A
ext_trng_axis_req_i	ext_trng_axis_req_t	Input	[EXT_TRNG_NUM_AXIS-1:0]	External TRNG AXI-Stream request array (from sep_ip_integration).	External TRNG shim	N/A
ext_trng_axis_rsp_o	ext_trng_axis_rsp_t	Output	[EXT_TRNG_NUM_AXIS-1:0]	External TRNG AXI-Stream response array.	External TRNG shim	N/A
ext_trng_irq_i	logic	Input	1	External TRNG interrupt (routed to PIC).	External TRNG shim	Tie to '0 if unused
km_rom_mem_req_o	km_intf_pkg::km_rom_mem_req_t	Output	-	Key Manager ROM memory request.	ROM macro	N/A
km_rom_mem_rsp_i	km_intf_pkg::km_rom_mem_rsp_t	Input	-	Key Manager ROM memory response.	ROM macro	N/A
km_sram_mem_req_o	km_intf_pkg::km_sram_mem_req_t	Output	-	Key Manager SRAM memory request.	SRAM macro	N/A
km_sram_mem_rsp_i	km_intf_pkg::km_sram_mem_rsp_t	Input	-	Key Manager SRAM memory response.	SRAM macro	N/A
efuse_bank_ctrl_req_o	sep_efuse_pkg::efuse_axil_req_t	Output	-	eFuse bank control AXI-Lite request.	eFuse shim	N/A
efuse_bank_ctrl_resp_i	sep_efuse_pkg::efuse_axil_resp_t	Input	-	eFuse bank control AXI-Lite response.	eFuse shim	N/A
efuse_shim_command_req_o	sep_efuse_pkg::efuse_command_req_t	Output	-	eFuse command interface request.	eFuse shim	N/A
efuse_shim_command_resp_i	sep_efuse_pkg::efuse_command_resp_t	Input	-	eFuse command interface response.	eFuse shim	N/A
lcc_demote_state_1_o	logic	Output	[1:0]	Lifecycle demote state output 1. Exported at SMU boundary; not currently connected to SMC.	SMU external port	N/A
lcc_demote_state_2_o	logic	Output	[1:0]	Lifecycle demote state output 2. Exported at SMU boundary; not currently connected to SMC.	SMU external port	N/A
sep_io_spi_req_o	sep_io_spi_req_t	Output	-	SPI host controller request.	SPI pad interface	N/A
sep_io_spi_rsp_i	sep_io_spi_rsp_t	Input	-	SPI host controller response.	SPI pad interface	N/A
lc_state_o	logic	Output	[2*LC_STATE_BIT_WIDTH-1:0]	Lifecycle state output (differentially encoded). Routed to SMC and the SMU external output; debug-disable control to DTP is via dbg_disable_o .	SMC, SMU external	N/A
dbg_disable_o	sep_lifecycle_ctrl_pkg::dbg_disable_t	Output	-	Typed debug-disable struct routed by SMU to DTP debug-disable control.	SMU → DTP	N/A
sep_fuse_dft_disable_o	logic	Output	1	Gate for the DFT-inserted access path into the SEP OTP, composed as Case 3 AND SEP_FUSE_DBG . Unconnected in the functional design; an adopter's DFT insertion connects it.	Adopter DFT insertion	Leave open if no path is inserted
smc_fuse_dft_disable_o	logic	Output	1	Gate for the DFT-inserted access path into the SMC OTP, composed as Case 2 AND SMC_FUSE_DBG . Unconnected in the functional design; an adopter's DFT insertion connects it.	Adopter DFT insertion	Leave open if no path is inserted

Interface Name	Type	Direction	Width	Description	Connection	Default value (if applicable)
lc_sigint_err_o	logic	Output	1	Lifecycle signal integrity error.	SMU	N/A
security_disable_o	logic	Output	1	Security disable output.	SMU	N/A
secure_tm_o	logic	Output	1	Secure test mode output.	SMU	N/A
smc_mailbox_interrupt_o	logic	Output	[NUM_MAILBOXES-1:0]	Mailbox interrupt outputs to SMC.	SMC interrupt aggregator	N/A
smc_fuse_sense_done_i	logic	Input	1	SMC fuse sense done indication.	SMC fuse_sense_done_o	N/A
sep_fuse_sense_done_o	logic	Output	1	SEP fuse sense done output.	System integration	N/A
secure_tm_req_i	logic	Input	-	Secure test mode request.	GPIO padding / tie-off	N/A
axi_extension_axi_req_o	sep_32_64_6_12_axi_req_t	Output	-	AXI extension port request for adopter peripheral expansion.	Adopter peripherals	N/A
axi_extension_axi_resp_i	sep_32_64_6_12_axi_resp_t	Input	-	AXI extension port response.	Adopter peripherals	Tie to DECERR if unused
smc_global_base_addr_i	logic	Input	[55:0]	SMC global base address for outbound address translation.	System configuration	N/A
smc_region_size_i	logic	Input	[55:0]	SMC region size for outbound address translation.	SMC smc_region_size_o	N/A
km_unrecoverable_err_o	logic	Output	1	Key Manager unrecoverable error.	RAS / error handling	N/A
km_recoverable_err_o	logic	Output	1	Key Manager recoverable error.	RAS / error handling	N/A
ext_debug_bus_o	logic	Output	[511:0]	External debug observation bus.	Debug infrastructure	N/A

Chapter 7. SMU Composition and Internal Wiring

The System Management Unit (SMU) combines the SMC, DTP, and optionally the SEP into a unified subsystem. The interface descriptions in the preceding sections apply directly when integrating the SMU, since the SMU inherits all three subsystems' ports. This section covers the module variants available to adopters, how the SMU wires its subsystems together internally, and what additional configuration it exposes.

7.1. Module Variants and IP Integration

OCAH core modules (`smc.sv`, `sep.sv`, `dtp.sv`, and the composite `smu.sv`) expose logic-level interfaces only. All technology-specific components — PLLs, PVT sensors, eFuse shims, memory macros, GPIO padrings, SPI controllers, and external TRNG — are instantiated outside the core modules by the adopter. This separation keeps the OCAH deliverable technology-neutral.

The repository provides reference wrappers that demonstrate how to bridge the gap between OCAH core interfaces and adopter-specific IP:

- `smu_wrapper.sv` wraps `smu.sv` with pad-level signal handling for clocks, resets, GPIO, eFuse, and JTAG interfaces. It internally instantiates `smc_ip_integration.sv` for SMC-related vendor IP and (when `SEP=1`) `sep_ip_integration.sv` for SEP-related vendor IP.
- `smc_wrapper.sv` provides an equivalent reference wrapping `smc.sv` alone, useful when integrating the SMC without the DTP/SEP subsystems.

Neither the wrappers nor the IP integration modules are part of the OCAH deliverable; they exist as integration guides and for Tenstorrent internal usage. Adopters must develop their own equivalents following the interface patterns demonstrated in these modules. The interface contracts at the module boundaries ensure technology substitution without modifying the verified OCAH logic.

The figure below illustrates the relationship between the OCAH core modules, the wrapper layer, and the IP integration modules.

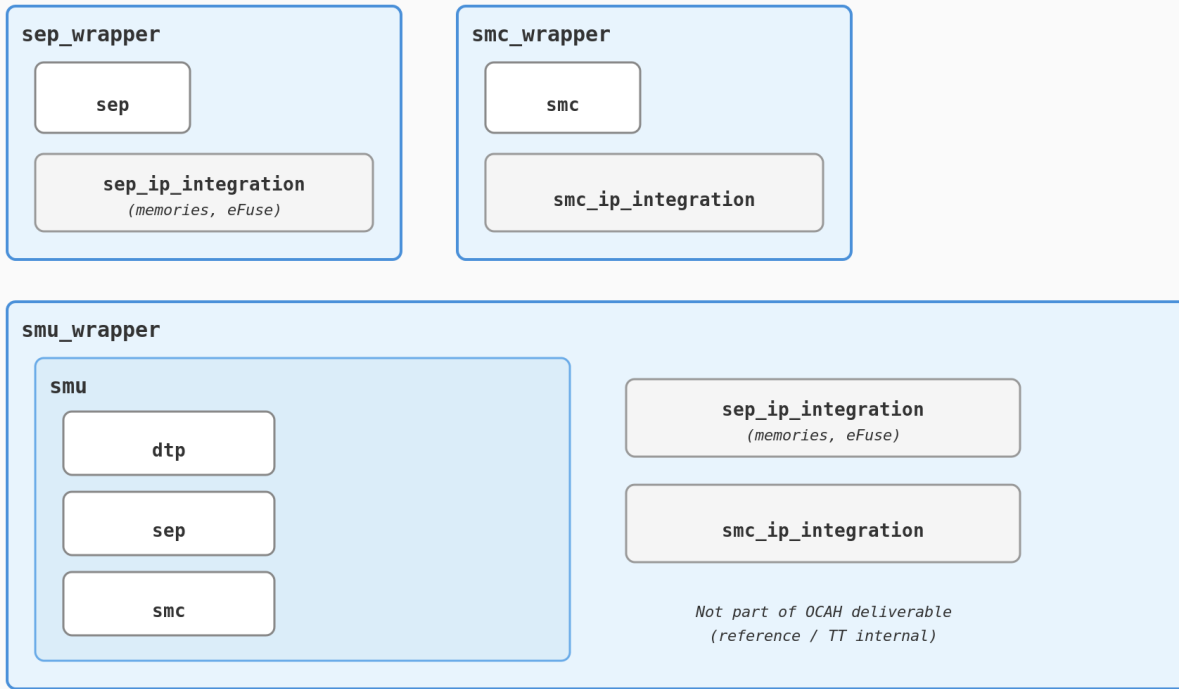


Figure 1. SMU Integration Components

7.1.1. IP Integration Modules

`smc_ip_integration.sv` demonstrates integration of SMC-side technology components: PLL wrappers (generating `pll_cgm_clk_o` and `pll_awm_clk_o`), PVT sensor interfaces, eFuse shims, GPIO padding logic, memory macros (ROM, scratchpad RAM, cache tag and data arrays), and trace memory instances.

`sep_ip_integration.sv` demonstrates integration of SEP-side technology components: SEP memory macros (TCM, scratch SRAM, boot ROM, OTBN IMEM/DMEM, Key Manager ROM/SRAM), eFuse shim, external TRNG, and SPI controller selection.

7.1.2. Wrapper Clock Architecture

The `smu_wrapper.sv` reference wrapper accepts pre-generated clocks directly: `clk_smu_i` (primary), `clk_ref_i` (reference), and `clk_periph_i` (peripheral). The `smc_wrapper.sv` uses `clk_smc_i` for the primary clock. Clock generation is entirely the adopter's responsibility. The `pll_wrap` model included in the DV environment only terminates the SMC's AXI-Lite PLL control interface; it does not generate functional clocks and must not be used as a synthesis model.

7.2. Clock and Reset Architecture

Connect `clk_smu_i` to the primary system clock and `clk_ref_i` to a stable reference source. The DTP operates on TCK for JTAG logic and on the system clock for cross-trigger and AXI bridges. Reset sequencing follows the SMC flow; the DTP JTAG state machine uses `pwr_on_rst_ni`, which the SMU connects to `rst_cold_ni`. The SMU internally connects DTP debug paths to the SMC and optionally instantiates the SEP when the `SEP` parameter is set to 1. The full interconnection details are described in [SMC-DTP Internal Interconnection](#) and [SEP-Conditional Wiring](#) below.

7.3. SMU AXI Crossbar Address Map

Inside the SMU, the `smu_axi_xbar` module routes traffic between three AXI4 manager/subordinate pairs: the SEP outbound master (`sep_out`), the SMC outbound master (`smc_out`), and the external SMU AXI input (`ext_in` / `smu_axi_in`). The corresponding targets are the SEP and SMC inbound subordinates, and the external SMU AXI output (`ext_out` / `smu_axi_out`).

See the *SMU AXI Crossbar* and *OCAH Memory Map* sections of the Technical Reference Manual for connectivity and the responsibility split between hardware-fixed and firmware-programmable apertures.

The crossbar uses a **runtime** address map. Only the SEP and SMC apertures are programmable at runtime; the `ext_out` rule is static:

- `sep_global_base_addr_i` / `sep_region_size_i` come from the `sep_cpu_ctrl` CSRs `SEP_GLOBAL_BASE_ADDR` / `SEP_REGION_SIZE`, exposed at both the `sep.sv` and `smu.sv` boundaries as `sep_global_base_addr_o` / `sep_region_size_o` (both 56-bit). `SEP_REGION_SIZE` is a 32-bit CSR field, zero-extended to 56-bit at the SEP system CSR; the xbar input takes only the lower 32 bits. `SEP_REGION_SIZE` defines the SEP global/chiplet aperture for SMU routing and SEP inbound global-to-local remap. It is distinct from the SEP CPU's architectural local-alias span. `SEP_REGION_SIZE` currently resets to `0x0100_0000` (16 MiB). Tied to `'0` at the `smu.sv` boundary when the `SEP` parameter is `0`.
- `smc_global_base_addr_i` / `smc_region_size_i` come from the SMC CPU control CSRs `GLOBAL_BASE` / `REGION_SIZE`, exposed at both the `smc.sv` and `smu.sv` boundaries as `smc_global_base_o` (56-bit) / `smc_region_size_o` (32-bit). `REGION_SIZE` resets to `0x0100_0000` (16 MiB).

SEP, SMC, and `smu_axi_xbar` all run on `clk_smu_i`, so these quasi-static CSR fields need no clock-domain crossing. The crossbar's address arithmetic is done on 57-bit widened sums. `ext_out` is a catch-all port that carries any outbound SEP/SMC manager request not matched by the programmed apertures; it has no fixed lower-bound address. Unmatched inbound (`ext_in`) requests return a decode error and do not reach `ext_out`.

7.3.1. Firmware programming order

Firmware must program `SEP_GLOBAL_BASE_ADDR` / `SEP_REGION_SIZE` and SMC `GLOBAL_BASE` / `REGION_SIZE` during early boot, **before any cross-subsystem AXI traffic is issued**, and must ensure the two apertures do not overlap and both fall within the chiplet-visible SMU envelope assigned by the integrator. The SMU crossbar does not itself constrain envelope size.

See the *OCAH Memory Map* section of the Technical Reference Manual for that responsibility split.

7.4. SMU Default Parameters

The SMU exposes a set of configurable parameters that control DTP JTAG features, identification, cross trigger, and pipeline depths. The table below lists each parameter with its default value.

Parameter	Value	Description
<code>JTAG_BSR_ENABLE</code>	1	Boundary scan enabled
<code>JTAG_EXTEST_TRAIN_ENABLE</code>	1	EXTEST_TRAIN instruction enabled
<code>JTAG_EXTEST_PULSE_ENABLE</code>	1	EXTEST_PULSE instruction enabled
<code>JTAG_INTEST_ENABLE</code>	1	INTEST instruction enabled
<code>JTAG_CLAMP_ENABLE</code>	1	CLAMP instruction enabled
<code>JTAG_HIGHZ_ENABLE</code>	1	HIGHZ instruction enabled

Parameter	Value	Description
JTAG_RUNBIST_ENABLE	1	RUNBIST instruction enabled
JTAG_TMP_ENABLE	1	TMP controller enabled
JTAG_IC_RESET_ENABLE	1	Enables the external IC_RESET TDR slice (SMU drives this into the DTP's JTAG_IC_RESET_EXT_ENABLE). SMC and SEP slices are enabled unconditionally by the SMU.
JTAG_SMC_DBG_ENABLE	1	SMC debug interface enabled
JTAG_STAP_IO_ENABLE	1	I/O STAP enabled
JTAG_NUM_EXTRA_STAPS	1	Number of additional STAPs
JTAG_IDCODE_MFR_ID	110h000	Manufacturer ID
JTAG_IDCODE_PART_NUM	160h0000	Part number
JTAG_IDCODE_SI_REV	40h0	Silicon revision
JTAG_OCH_VER	80h00	OCAH IP version
XTRIG_INT_CT_MODE	80h00	Internal CT protocol mode bits (0=pulse sync, 1=req/ack)
SMC_OTP_RD_PL_DEPTH	20h3	SMC OTP read pipeline depth
SMC_OTP_WR_PL_DEPTH	20h3	SMC OTP write pipeline depth
SMC_RD_PL_DEPTH	20h3	SMC fabric read pipeline depth
SMC_WR_PL_DEPTH	20h3	SMC fabric write pipeline depth
SEP_ABR_SRAM_LATENCY	1	ABR 1R1W registered-read latency, in clocks
SEP_ABR_MASKING_EN	1	Adams Bridge 2-share DOM masking

SEP-related DTP configuration is not exposed as an SMU config-struct field. The SMU derives SEP debug/STAP enablement from the module parameter `SEP` and wires the corresponding DTP interfaces internally to the SEP block when `SEP=1`.

7.5. IC_RESET TDR Structure

The DTP primary TAP implements the IEEE 1149.1-2013 §17 IC_RESET TDR as three independently enabled slices plus a single `reset_hold` bit nearest TDO. At the SMU the scan order from TDI to TDO is:

TDI → SMC slice → SEP slice → external slice → `reset_hold` → TDO

The SMU enables the SMC slice unconditionally, the SEP slice when `SEP=1` (otherwise that slice has width 0 and is omitted), and the external slice when `JTAG_IC_RESET_ENABLE` is set. Each slice is a packed struct with `.ovrd` and `.val` halves of equal width; `jtag_ptap` sizes the slice from `$bits(type)/2` and interleaves the halves into the `{reset_enable, reset_control}` pair IEEE §17 requires per port. Declaration order within each half is the TDI-to-TDO scan order: the first field is nearest TDI.

Slice	Ports	Defined by	Consumed by
SMC	68	OCAH (<code>smc_pkg::jtag_smc_reset_ctrl_t</code>)	SMC reset unit; SMU-internal, no SMU port
SEP	7 when <code>SEP=1</code> , else 0	OCAH (<code>sep_pkg::jtag_sep_reset_ctrl_t</code>)	SEP reset controller; SMU-internal, no SMU port
External	<code>\$bits(ic_reset_ext_t)/2</code>	Adopter (<code>ic_reset_ext_t</code>)	SMU output <code>jtag_ic_reset_ext_o</code>
<code>reset_hold</code>	1 bit	IEEE 1149.1 §17	Nearest TDO; not a reset port

The TDR length is $2 * (\text{SMC ports} + \text{SEP ports} + \text{external ports}) + 1$. Programming order and `reset_enable` polarity are in the DTP JTAG chapter of the Technical Reference Manual.

7.5.1. SMC slice (TDI to TDO)

The SMC slice covers the SMC reset domains and the 32 managed-subsystem (SS) cold and warm resets. Vector index [31] of each SS field is nearer TDI than [0].

Port	Reset domain
<code>ss_warm_reset_n[31:0]</code>	Per-subsystem warm reset
<code>ss_cold_reset_n[31:0]</code>	Per-subsystem cold reset
<code>cold_reset_n</code>	SMC cold reset
<code>cool_reset_n</code>	SMC cool reset
<code>warm_reset_n</code>	SMC warm reset
<code>fuse_reset_n</code>	Fuse reset (nearest the SEP slice)

7.5.2. SEP slice (TDI to TDO)

When `SEP=1` the SEP slice covers the SEP main reset and the crypto, Key Manager, and TRNG resets consumed by `sep_reset_ctrl`. `trng_jtag_rst_n` is nearest TDI.

Port	Reset domain
<code>trng_jtag_rst_n</code>	TRNG
<code>sep_reset_n</code>	SEP main reset
<code>kmac_jtag_rst_n</code>	KMAC
<code>hmac_jtag_rst_n</code>	HMAC
<code>aes_jtag_rst_n</code>	AES
<code>otbn_jtag_rst_n</code>	OTBN
<code>km_jtag_rst_n</code>	Key Manager (nearest the external slice)

7.5.3. External slice (adopter-defined)

The external slice is reserved for reset overrides on logic instantiated outside the SMU. OCAH does not name its ports. Set the SMU type parameter `ic_reset_ext_t` to a packed struct with `.ovrd` and `.val` halves of equal width, and route `jtag_ic_reset_ext_o` to that logic. The parameter default (`jtag_tap_pkg::jtag_ic_reset_default_t`) is a single-override stub. Clear `JTAG_IC_RESET_ENABLE` when no external overrides are required.

Declare a new external override at each half's MSB so already-assigned TDR positions do not shift. Extra subsystem reset controls beyond the SMC slice use this typed port.

7.6. DTP Parameter Pass-Through

The SMU passes through most DTP parameters to allow integrator customization. Type parameters are set internally based on SMC package types.

7.6.1. JTAG Configuration Parameters

Parameter	SMU Default	Pass-through	Notes
JTAG_BSR_ENABLE	1	Yes	Boundary scan enabled
JTAG_EXTEST_TRAIN_ENABLE	1	Yes	
JTAG_EXTEST_PULSE_ENABLE	1	Yes	
JTAG_INTTEST_ENABLE	1	Yes	
JTAG_CLAMP_ENABLE	1	Yes	
JTAG_HIGHZ_ENABLE	1	Yes	
JTAG_RUNBIST_ENABLE	1	Yes	
JTAG_TMP_ENABLE	1	Yes	
JTAG_IC_RESET_ENABLE	1	No	SMU routes this to the DTP's JTAG_IC_RESET_EXT_ENABLE; SMC and SEP slices are enabled inside the SMU instantiation (SMC unconditionally, SEP when SEP=1)
JTAG_SMC_DBG_ENABLE	1	Yes	
JTAG_SEP_DBG_ENABLE	1 (SEP=1)	No	Derived internally from the SMU module parameter SEP; not exposed in smu_cfg_t
JTAG_STAP_IO_ENABLE	1	Yes	
JTAG_NUM_EXTRA_STAPS	1	Yes	Port array size equals parameter value; when set to 0, array size is 1 (tie-off required)

7.6.2. JTAG ID Parameters

Parameter	SMU Default	Pass-through	Notes
JTAG_IDCODE_MFR_ID	110h000	Yes	Manufacturer ID
JTAG_IDCODE_PART_NUM	160h0000	Yes	Part number
JTAG_IDCODE_SI_REV	40h0	Yes	Silicon revision
JTAG_OCH_VER	80h00	Yes	OCAH IP version

7.6.3. Cross Trigger Parameters

Parameter	SMU Default	DTP Internal	Pass-through	Notes
XTRIG_INT_CT_MODE	[7:0]	[9:0]	Yes	8-bit on SMU; DTP bits [1:0]=0 for SMC

The SMU parameter width is two less than DTP's for cross trigger (8 vs 10) because internal cross trigger ports [1:0] and clock stop request #0 are connected to the SMC internally. The SMU remaps DTP ports [9:2] to SMU external ports [7:0].

7.6.4. Pipeline Depth Parameters

Parameter	SMU Default	Pass-through	Notes
SMC_OTP_RD_PL_DEPTH	20h3	Yes	SMC OTP read pipeline depth
SMC_OTP_WR_PL_DEPTH	20h3	Yes	SMC OTP write pipeline depth
SEP_OTP_RD_PL_DEPTH	20h3	No	Fixed to 20h3 in SMU; used when SEP=1, ignored when SEP=0
SEP_OTP_WR_PL_DEPTH	20h3	No	Fixed to 20h3 in SMU; used when SEP=1, ignored when SEP=0
SMC_RD_PL_DEPTH	20h3	Yes	SMC fabric read pipeline depth

Parameter	SMU Default	Pass-through	Notes
SMC_WR_PL_DEPTH	20h3	Yes	SMC fabric write pipeline depth

7.6.5. Type Parameters

The following type parameters are set internally by the SMU and are not exposed for integrator configuration.

Parameter	Set To	Notes
jtag_tap_ctrl_t	prim_jtag_pkg::jtag_tap_ctrl_t	JTAG TAP control struct
jtag_scan_ctrl_t	prim_jtag_pkg::jtag_scan_ctrl_t	JTAG scan control struct
smc_jtag_axi_req_t	smc_pkg::smc_jtag_56_64_2_12_axi_req_t	SMC debug AXI request
smc_jtag_axi_resp_t	smc_pkg::smc_jtag_56_64_2_12_axi_resp_t	SMC debug AXI response
smc_otp_axil_req_t	smc_efuse_pkg::efuse_axil_req_t	SMC OTP AXI-Lite request
smc_otp_axil_resp_t	smc_efuse_pkg::efuse_axil_resp_t	SMC OTP AXI-Lite response
sep_otp_axil_req_t	smc_efuse_pkg::efuse_axil_req_t	SEP OTP AXI-Lite request (error slave when SEP=0)
sep_otp_axil_resp_t	smc_efuse_pkg::efuse_axil_resp_t	SEP OTP AXI-Lite response (error slave when SEP=0)
xtrig_axil_req_t	smc_pkg::smc_axil_32_32_req_t	Cross trigger CSR request
xtrig_axil_resp_t	smc_pkg::smc_axil_32_32_resp_t	Cross trigger CSR response

7.7. DTP Port Mapping

The following tables define the complete DTP port list as connected within the SMU. Ports marked "SMU external port" are exposed on the SMU boundary for integrator connection. Ports marked with a subsystem name (e.g. SMC, SEP) are wired internally within the SMU.

7.7.1. Clock and Reset

Port	Direction	Width	SMU Connection
clk_i	input	1	SMU clk_smu_i (shared with SMC clk_smc_i)
rst_n_i	input	1	SMC rst_primary_smc_clk_no
pwr_on_rst_ni	input	1	SMU rst_cold_ni (power-on reset for JTAG logic)

7.7.2. Primary JTAG TAP Interface

Port	Direction	Width	SMU Connection
jtag_ptap_client_tap_ctrl_i	input	jtag_tap_ctrl_t	SMU external port
jtag_ptap_client_tdi_i	input	1	SMU external port
jtag_ptap_client_tdo_o	output	1	SMU external port
jtag_ptap_client_tdo_oen_o	output	1	SMU external port

7.7.3. Boundary Scan Interface

Port	Direction	Width	SMU Connection
jtag_bsr_host_scan_ctrl_o	output	jtag_scan_ctrl_t	SMU external port

Port	Direction	Width	SMU Connection
jtag_bsr_host_scan_in_i	input	1	SMU external port
jtag_bsr_host_scan_out_o	output	1	SMU external port

7.7.4. I/O STAP Interface

Port	Direction	Width	SMU Connection
jtag_stap_io_host_tap_ctrl_o	output	jtag_tap_ctrl_t	SMU external port
jtag_stap_io_host_tdi_i	input	1	SMU external port
jtag_stap_io_host_tdo_o	output	1	SMU external port
jtag_stap_io_host_tdo_oen_o	output	1	SMU external port

7.7.5. SMC Debug STAP Interface

Port	Direction	Width	SMU Connection
jtag_stap_smc_host_tap_ctrl_o	output	jtag_tap_ctrl_t	SMC smc_cpu_jtag_{TCK,TMS}_i; trst_n inverted drives SMC smc_cpu_jtag_reset_i when JTAG_SMC_DBG_ENABLE=1, else tie-off
jtag_stap_smc_host_tdi_i	input	1	SMC smc_cpu_jtag_TDO_data_o when JTAG_SMC_DBG_ENABLE=1, else 10b0
jtag_stap_smc_host_tdo_o	output	1	SMC smc_cpu_jtag_TDI_i when JTAG_SMC_DBG_ENABLE=1, else unused
jtag_stap_smc_host_tdo_oen_o	output	1	Internal only; not consumed by SMC

7.7.6. SEP Debug STAP Interface

Port	Direction	Width	SMU Connection
jtag_stap_sep_host_tap_ctrl_o	output	jtag_tap_ctrl_t	SEP jtag_{tck,tms,trst_n} when SEP=1, else unused
jtag_stap_sep_host_tdi_i	input	1	SEP jtag_tdo when SEP=1, else 10b0
jtag_stap_sep_host_tdo_o	output	1	SEP jtag_tdi when SEP=1, else unused
jtag_stap_sep_host_tdo_oen_o	output	1	Internal only; not consumed by SEP at SMU level

7.7.7. Extra STAP Interfaces

Port	Direction	Width	SMU Connection
jtag_stap_extra_host_tap_ctrl_o	output	jtag_tap_ctrl_t[JTAG_NUM_EXTRA_STAP_PORTS-1:0]	SMU external port
jtag_stap_extra_host_tdi_i	input	[JTAG_NUM_EXTRA_STAP_PORTS-1:0]	SMU external port
jtag_stap_extra_host_tdo_o	output	[JTAG_NUM_EXTRA_STAP_PORTS-1:0]	SMU external port
jtag_stap_extra_host_tdo_oen_o	output	[JTAG_NUM_EXTRA_STAP_PORTS-1:0]	SMU external port

7.7.8. Extended STAP Scan Interface

Port	Direction	Width	SMU Connection
jtag_stap_host_scan_ctrl_o	output	jtag_scan_ctrl_t	SMU external port

Port	Direction	Width	SMU Connection
jtag_stap_host_scan_in_i	input	1	SMU external port
jtag_stap_host_scan_out_o	output	1	SMU external port

7.7.9. DFD iJTAG Interface

Port	Direction	Width	SMU Connection
jtag_dfd_host_scan_ctrl_o	output	jtag_scan_ctrl_t	SMU external port
jtag_dfd_host_scan_in_i	input	1	SMU external port
jtag_dfd_host_scan_out_o	output	1	SMU external port

7.7.10. DFT iJTAG Interface

Port	Direction	Width	SMU Connection
jtag_dft_host_scan_ctrl_o	output	jtag_scan_ctrl_t	SMU external port
jtag_dft_host_scan_in_i	input	1	SMU external port
jtag_dft_host_scan_out_o	output	1	SMU external port

7.7.11. SMC Fabric Debug AXI Interface

Port	Direction	Width	SMU Connection
axi_smc_dbg_req_o	output	smc_jtag_axi_req_t	SMC jtag_axi_in_req_i
axi_smc_dbg_resp_i	input	smc_jtag_axi_resp_t	SMC jtag_axi_in_resp_o

7.7.12. SMC OTP Debug AXI-Lite Interface

Port	Direction	Width	SMU Connection
axil_smc_otp_jtag_req_o	output	smc_otp_axil_req_t	SMC axil_smc_otp_jtag_req_i
axil_smc_otp_jtag_resp_i	input	smc_otp_axil_resp_t	SMC axil_smc_otp_jtag_resp_o

7.7.13. SEP OTP Debug AXI-Lite Interface

When `SEP=1`, this interface connects to the SEP `axil_sep_otp_jtag_*` ports. When `SEP=0`, the SMU instantiates `u_sep_otp_axil_err_slv`, which responds with DECERR to all transactions.

Port	Direction	Width	SMU Connection
axil_sep_otp_jtag_req_o	output	sep_otp_axil_req_t	SEP <code>axil_sep_otp_jtag_req_i</code> when <code>SEP=1</code> , else AXI-Lite error slave (<code>u_sep_otp_axil_err_slv</code>)
axil_sep_otp_jtag_resp_i	input	sep_otp_axil_resp_t	SEP <code>axil_sep_otp_jtag_resp_o</code> when <code>SEP=1</code> , else AXI-Lite error slave (<code>u_sep_otp_axil_err_slv</code>)

7.7.14. Clock Control

Port	Direction	Width	SMU Connection
stop_clks_o	output	1	SMU external port: <code>dtb_stop_clks_o</code> (to PLL clock gates)

7.7.15. Boot Stall Control

Port	Direction	Width	SMU Connection
<code>jtag_boot_stall_ovrd_o</code>	output	1	SMC <code>boot_stall_jtag_ovrd_i</code>
<code>jtag_boot_stall_o</code>	output	1	SMC <code>boot_stall_jtag_val_i</code>

7.7.16. JTAG Reset Control

Port	Direction	Width	SMU Connection
<code>jtag_ic_reset_smc_o</code>	output	<code>smc_pkg::jtag_smc_reset_ctrl_t</code>	SMC <code>jtag_smc_reset_ctrl_i</code> (packed struct with <code>.ovrd</code> override enables and <code>.val</code> active-low override values)
<code>jtag_ic_reset_sep_o</code>	output	<code>sep_pkg::jtag_sep_reset_ctrl_t</code>	SEP <code>jtag_sep_reset_ctrl_i</code> (packed struct with <code>.ovrd</code> override enables and <code>.val</code> active-low override values); SMU-internal, no SMU port
<code>jtag_ic_reset_ext_o</code>	output	<code>ic_reset_ext_t</code>	SMU <code>jtag_ic_reset_ext_o</code> external port (integrator-defined packed struct; carries reset overrides for logic outside the SMU)

7.7.17. JTAG State Outputs

Port	Direction	Width	SMU Connection
<code>jtag_ptap_state_o</code>	output	<code>tap_state_e</code>	SMU external port
<code>jtag_ptap_inst_decoded_o</code>	output	<code>jtag_instruction_decoded_e</code>	SMU external port

7.7.18. Cross Trigger CSR AXI-Lite Interface

Port	Direction	Width	SMU Connection
<code>axil_xtrig_req_i</code>	input	<code>xtrig_axil_req_t</code>	SMC <code>axil_dtp_csr_req_o</code>
<code>axil_xtrig_resp_o</code>	output	<code>xtrig_axil_resp_t</code>	SMC <code>axil_dtp_csr_resp_i</code>

7.7.19. Cross Trigger Matrix Interface

Port	Direction	Width	SMU Connection
<code>xtrig_ctm_src_req_o</code>	output	[XTRIG_NUM_INT_CT-1:0]	[1:0]: SMU internal (SMC), [9:2]: SMU external <code>xtrig_ctm_src_req_o[7:0]</code>
<code>xtrig_ctm_src_ack_i</code>	input	[XTRIG_NUM_INT_CT-1:0]	[1:0]: Tie-off (SMC), [9:2]: SMU external <code>xtrig_ctm_src_ack_i[7:0]</code>
<code>xtrig_ctm_dst_req_i</code>	input	[XTRIG_NUM_INT_CT-1:0]	[1:0]: SMC <code>xtrigger_ss_o[1:0]</code> , [9:2]: SMU external <code>xtrig_ctm_dst_req_i[7:0]</code>
<code>xtrig_ctm_dst_ack_o</code>	output	[XTRIG_NUM_INT_CT-1:0]	[1:0]: Unused (SMC connection), [9:2]: SMU external <code>xtrig_ctm_dst_ack_o[7:0]</code>

Internal cross trigger ports [1:0] are reserved for SMC (both bits of `xtrigger_ss_o`). The SMU exposes ports [9:2] as external ports [7:0], so the SMU `XTRIG_NUM_INT_CT` parameter is two less than DTP's (8 vs 10). The SMC uses pulse-synchronization mode, so ack signals for ports [1:0] are unused: `xtrig_ctm_src_ack_i[1:0]` should be tied to `2'b00` and `xtrig_ctm_dst_ack_o[1:0]` are left unconnected. The usage of ack signals depends on the `XTRIG_INT_CT_MODE` parameter: when a mode bit is 0 (pulse synchronization), the corresponding ack is unused; when 1 (req/ack handshaking), the ack must be connected to the cross trigger endpoint.

7.7.20. Clock Stop Request Interface

Port	Direction	Width	SMU Connection
xtrig_clk_stop_req_i	input	[XTRIG_NUM_CLK_STOP_REQ-1:0]	[0]: SMC tdr_dbg_ctrl_clocks_stopped_by_cla_o, [8:1]: SMU external xtrig_clk_stop_req_i[7:0]

Clock stop request port #0 is reserved for SMC. The SMU exposes ports [8:1] as external ports [7:0], so the SMU `XTRIG_NUM_CLK_STOP_REQ` parameter should be one less than DTP's (8 vs 9).

7.7.21. Cross Trigger Port GPIO Interface

The 16 CTP signals from DTP are ported through the SMU and are direct `smu_wrapper` external ports (connected through the `.*` SMU instantiation). The adopter must connect them to GPIO pad logic; no tie-off or dangling is present in the wrapper itself.

Port	Direction	Width	SMU Connection
xtrig_ctp_req_out_dout_o	output	[15:0]	SMU external port; connect to GPIO pad logic
xtrig_ctp_req_out_dout_en_o	output	[15:0]	SMU external port; connect to GPIO pad logic
xtrig_ctp_req_out_din_i	input	[15:0]	SMU external port; connect to GPIO pad logic
xtrig_ctp_req_out_din_en_o	output	[15:0]	SMU external port; connect to GPIO pad logic
xtrig_ctp_req_in_dout_o	output	[15:0]	SMU external port; connect to GPIO pad logic
xtrig_ctp_req_in_dout_en_o	output	[15:0]	SMU external port; connect to GPIO pad logic
xtrig_ctp_req_in_din_i	input	[15:0]	SMU external port; connect to GPIO pad logic
xtrig_ctp_req_in_din_en_o	output	[15:0]	SMU external port; connect to GPIO pad logic
xtrig_ctp_ack_in_dout_o	output	[15:0]	SMU external port; connect to GPIO pad logic
xtrig_ctp_ack_in_dout_en_o	output	[15:0]	SMU external port; connect to GPIO pad logic
xtrig_ctp_ack_in_din_i	input	[15:0]	SMU external port; connect to GPIO pad logic
xtrig_ctp_ack_in_din_en_o	output	[15:0]	SMU external port; connect to GPIO pad logic
xtrig_ctp_ack_out_dout_o	output	[15:0]	SMU external port; connect to GPIO pad logic
xtrig_ctp_ack_out_dout_en_o	output	[15:0]	SMU external port; connect to GPIO pad logic
xtrig_ctp_ack_out_din_i	input	[15:0]	SMU external port; connect to GPIO pad logic
xtrig_ctp_ack_out_din_en_o	output	[15:0]	SMU external port; connect to GPIO pad logic

7.8. SMC Port Mapping

The following tables define the complete SMC port list as connected within the SMU. Ports marked "SMU external port" are exposed on the SMU boundary. Ports marked with "DTP" or "SEP" are wired internally.

7.8.1. Clocks

Port	Direction	Width	SMU Connection
clk_smc_i	input	1	SMU <code>clk_smu_i</code> (shared with DTP <code>clk_i</code>)
clk_periph_i	input	1	SMU external port
clk_ref_i	input	1	SMU external port

7.8.2. Resets

Port	Direction	Width	SMU Connection
<code>rst_cold_ni</code>	input	1	SMU external port
<code>rst_primary_ref_clk_no</code>	output	1	SMU external port
<code>rst_primary_smc_clk_no</code>	output	1	SMU external port + DTP <code>rst_n_i</code>

7.8.3. System AXI Input

Port	Direction	Width	SMU Connection
<code>sys_axi_in_req_i</code>	input	<code>smc_sys_in_56_64_6_12_axi_req_t</code>	SMU external port
<code>sys_axi_in_resp_o</code>	output	<code>smc_sys_in_56_64_6_12_axi_resp_t</code>	SMU external port

7.8.4. JTAG AXI Input

Port	Direction	Width	SMU Connection
<code>jtag_axi_in_req_i</code>	input	<code>smc_jtag_56_64_2_12_axi_req_t</code>	DTP <code>axi_smc_dbg_req_o</code>
<code>jtag_axi_in_resp_o</code>	output	<code>smc_jtag_56_64_2_12_axi_resp_t</code>	DTP <code>axi_smc_dbg_resp_i</code>

7.8.5. SMC OTP JTAG AXI-Lite

Port	Direction	Width	SMU Connection
<code>axil_smc_otp_jtag_req_i</code>	input	<code>efuse_axil_req_t</code>	DTP <code>axil_smc_otp_jtag_req_o</code>
<code>axil_smc_otp_jtag_resp_o</code>	output	<code>efuse_axil_resp_t</code>	DTP <code>axil_smc_otp_jtag_resp_i</code>

7.8.6. SEP AXI Input

When `SEP=0`, the SEP AXI subordinate input is tied off to '0' and the response output is left unconnected. When `SEP=1`, the SMU drives this path from the SEP-to-SMC dedicated AXI connection.

Port	Direction	Width	SMU Connection
<code>sep_axi_in_req_i</code>	input	<code>smc_sep_in_56_64_6_12_axi_req_t</code>	Tied off to '0' (no incoming transactions)
<code>sep_axi_in_resp_o</code>	output	<code>smc_sep_in_56_64_6_12_axi_resp_t</code>	Unconnected (no transactions to respond to)

7.8.7. AXI Output

Port	Direction	Width	SMU Connection
<code>output_axi_req_o</code>	output	<code>smc_sys_out_56_64_8_12_axi_req_t</code>	SMU external port
<code>output_axi_resp_i</code>	input	<code>smc_sys_out_56_64_8_12_axi_resp_t</code>	SMU external port

7.8.8. DTP CSR Interface

Port	Direction	Width	SMU Connection
<code>axil_dtp_csr_req_o</code>	output	<code>smc_axil_32_32_req_t</code>	DTP <code>axil_xtrig_req_i</code>
<code>axil_dtp_csr_resp_i</code>	input	<code>smc_axil_32_32_resp_t</code>	DTP <code>axil_xtrig_resp_o</code>

7.8.9. Adopter Peripheral Window AXI-Lite

Port	Direction	Width	SMU Connection
<code>smc_external_req_o</code>	output	<code>smc_axil_32_32_req_t</code>	SMU external port (to adopter peripherals)
<code>smc_external_resp_i</code>	input	<code>smc_axil_32_32_resp_t</code>	SMU external port (from adopter peripherals)

7.8.10. eFuse Interface

Port	Direction	Width	SMU Connection
<code>efuse_bank_ctrl_req_o</code>	output	<code>efuse_axil_req_t</code>	SMU external port
<code>efuse_bank_ctrl_resp_i</code>	input	<code>efuse_axil_resp_t</code>	SMU external port
<code>efuse_shim_command_req_o</code>	output	<code>fuse_command_req_t</code>	SMU external port
<code>efuse_shim_command_resp_i</code>	input	<code>fuse_command_resp_t</code>	SMU external port
<code>shadow_regs_o</code>	output	<code>efuse_map_t</code>	SMU external port

7.8.11. GPIO Data Signals

Port	Direction	Width	SMU Connection
<code>lsio_interface_select_o</code>	output	[NUM_GPIO_WRAPS-1:0]	SMU external port
<code>pad2core_i</code>	input	[NUM_GPIO_WRAPS-1:0]	SMU external port
<code>core2pad_o</code>	output	[NUM_GPIO_WRAPS-1:0]	SMU external port
<code>pad2core_en_o</code>	output	[NUM_GPIO_WRAPS-1:0]	SMU external port
<code>core2pad_en_o</code>	output	[NUM_GPIO_WRAPS-1:0]	SMU external port

7.8.12. GPIO External Pins

Port	Direction	Width	SMU Connection
<code>rst_cool_n_from_pin_i</code>	input	1	SMU external port

7.8.13. ATB Telemetry

Port	Direction	Width	SMU Connection
<code>clk_telemetry_i</code>	input	1	SMU external port
<code>rst_telemetry_ni</code>	input	1	SMU external port
<code>telemetry_atdata_i</code>	input	<code>telemetry_data_t[NUM_TELEMETRY_RECEIVERS-1:0]</code>	SMU external port
<code>telemetry_atid_i</code>	input	<code>atb_id_t[NUM_TELEMETRY_RECEIVERS-1:0]</code>	SMU external port
<code>telemetry_atready_o</code>	output	[NUM_TELEMETRY_RECEIVERS-1:0]	SMU external port
<code>telemetry_atvalid_i</code>	input	[NUM_TELEMETRY_RECEIVERS-1:0]	SMU external port
<code>telemetry_afvalid_o</code>	output	[NUM_TELEMETRY_RECEIVERS-1:0]	SMU external port
<code>telemetry_afready_i</code>	input	[NUM_TELEMETRY_RECEIVERS-1:0]	SMU external port

7.8.14. DED/WDT

Port	Direction	Width	SMU Connection
<code>smc_cluster_ded_o</code>	output	1	SMU external port
<code>smc_wdt_first_timeout_o</code>	output	1	SMU external port
<code>smc_wdt_second_timeout_o</code>	output	1	SMU external port

7.8.15. Region Size

Port	Direction	Width	SMU Connection
<code>smc_region_size_o</code>	output	[31:0]	SMU external port

7.8.16. External Interrupts

Port	Direction	Width	SMU Connection
<code>smc_ext_interrupts_i</code>	input	[NUM_EXT_INTERRUPTS-1:0]	SMU external port
<code>sep_mailbox_interrupts_i</code>	input	[7:0]	Internal: from SEP <code>smc_mailbox_interrupt_o</code> when SEP=1, else tied to '0
<code>sep_wdt_reset_n_i</code>	input	1	Internal: <code>~sep_wdt_timer_rst_req</code> when SEP=1, else tied to 1b1

7.8.17. Fuse Signals

Port	Direction	Width	SMU Connection
<code>smc_fuse_sense_done_o</code>	output	1	SMU external port
<code>smc_fuse_reset_n_delayed_o</code>	output	1	SMU external port

7.8.18. DFT Signals

Port	Direction	Width	SMU Connection
<code>skip_mem_repair_o</code>	output	1	SMU external port
<code>ext_boot_seq_done_i</code>	input	1	SMU external port

7.8.19. Lifecycle State

Port	Direction	Width	SMU Connection
<code>lc_state_o</code>	output	[2*LC_STATE_WIDTH-1:0]	SEP lifecycle state when SEP=1, else 80hf0; ported through SMU
<code>lc_sigint_err_o</code>	output	1	SEP lifecycle integrity error when SEP=1, else SMC <code>efuse_lc_sigint_err</code>

7.8.20. Mailbox Interrupts

Port	Direction	Width	SMU Connection
<code>smc_ext_mailbox_interrupts_o</code>	output	[NUM_MAILBOXES-1:0]	SMU external port

7.8.21. Reset Unit Signals

Port	Direction	Width	SMU Connection
<code>cfg_flr_pf_active_i</code>	input	1	SMU external port
<code>isolate_req_o</code>	output	[31:0]	SMU external port
<code>ss_reset_complete_i</code>	input	[31:0]	SMU external port
<code>ss_config_o</code>	output	[31:0]	SMU external port
<code>ss_reset_ctrl_o</code>	output	<code>reset_ctrl_t[31:0]</code>	SMU external port
<code>sync_irq_o</code>	output	1	SMU external port

7.8.22. CPU Memory Signals

Port	Direction	Width	SMU Connection
<code>smc_rom_intf_req_o</code>	output	<code>rom_req_t</code>	SMU external port
<code>smc_rom_intf_rsp_i</code>	input	<code>rom_rsp_t</code>	SMU external port
<code>smc_scratch_ram_intf_req_o</code>	output	<code>scratch_ram_req_t[31:0]</code>	SMU external port
<code>smc_scratch_ram_intf_rsp_i</code>	input	<code>scratch_ram_rsp_t[31:0]</code>	SMU external port
<code>smc_l1_icache_tag_intf_req_o</code>	output	<code>l1_icache_tag_req_t[3:0]</code>	SMU external port
<code>smc_l1_icache_tag_intf_rsp_i</code>	input	<code>l1_icache_tag_rsp_t[3:0]</code>	SMU external port
<code>smc_l1_icache_data_intf_req_o</code>	output	<code>l1_icache_data_req_t[7:0]</code>	SMU external port
<code>smc_l1_icache_data_intf_rsp_i</code>	input	<code>l1_icache_data_rsp_t[7:0]</code>	SMU external port
<code>smc_l1_dcache_tag_intf_req_o</code>	output	<code>l1_dcache_tag_req_t[3:0]</code>	SMU external port
<code>smc_l1_dcache_tag_intf_rsp_i</code>	input	<code>l1_dcache_tag_rsp_t[3:0]</code>	SMU external port
<code>smc_l1_dcache_data_intf_req_o</code>	output	<code>l1_dcache_data_req_t[3:0]</code>	SMU external port
<code>smc_l1_dcache_data_intf_rsp_i</code>	input	<code>l1_dcache_data_rsp_t[3:0]</code>	SMU external port

7.8.23. Memory Init

Port	Direction	Width	SMU Connection
<code>smc_disable_sram_auto_init_i</code>	input	1	SMU external port
<code>smc_init_mem_done_o</code>	output	1	SMU external port

7.8.24. System Timer OCTS Interface

Port	Direction	Width	SMU Connection
<code>timer_count_o</code>	output	[63:0]	SMU external port

7.8.25. Reset Overrides (from DTP)

Port	Direction	Width	SMU Connection
<code>jtag_reset_ctrl_i</code>	input	<code>smc_pkg::jtag_smc_reset_ctrl_t</code>	DTP <code>jtag_ic_reset_smc_o</code> (packed struct with <code>.ovrd</code> override enables and <code>.val</code> active-low override values)

7.8.26. DFD Signals

Port	Direction	Width	SMU Connection
<code>cla_gpio_enable_o</code>	output	1	SMU external port
<code>tdr_dbg_ctrl_clock_stop_en_i</code>	input	1	DTP <code>cla_clock_stop_en_o</code>
<code>tdr_dbg_ctrl_clocks_stopped_by_cla_o</code>	output	1	DTP <code>xtrig_clk_stop_req_i[0]</code> (SMU connects SMC output to DTP input)

7.8.27. Cross Trigger Interface

Port	Direction	Width	SMU Connection
<code>xtrigger_ss_i</code>	input	<code>smc_pkg::xtrigger_t</code>	SMU internal: DTP <code>xtrig_ctm_src_req_o[1:0]</code> → SMC. Not an SMU external port.
<code>xtrigger_ss_o</code>	output	<code>smc_pkg::xtrigger_t</code>	SMU internal: SMC → DTP <code>xtrig_ctm_dst_req_i[1:0]</code> . Not an SMU external port.

7.8.28. Trace Memory

Port	Direction	Width	SMU Connection
<code>trace_mem_req_o</code>	output	<code>SinkMemPktIn_s[TRC_RAM_INSTANCES-1:0]</code>	SMU external port
<code>trace_mem_resp_i</code>	input	<code>SinkMemPktOut_s[TRC_RAM_INSTANCES-1:0]</code>	SMU external port

7.8.29. External Debug Bus

Port	Direction	Width	SMU Connection
<code>ext_debug_bus_i</code>	input	[127:0]	SMU external port

7.8.30. Test Mode

Port	Direction	Width	SMU Connection
<code>test_en_i</code>	input	1	SMU external port
<code>scan_rst_ni</code>	input	1	SMU external port

7.9. SMC-DTP Internal Interconnection

The following table summarizes the key internal connections between the DTP and SMC within the SMU. These connections are not visible on the SMU boundary.

Connection	DTP Port	SMC Port	Direction	Notes
AXI Debug Bus	<code>axi_smc_dbg_req_o</code>	<code>jtag_axi_in_req_i</code>	DTP → SMC	
	<code>axi_smc_dbg_resp_i</code>	<code>jtag_axi_in_resp_o</code>	SMC → DTP	
AXI OTP Bus	<code>axil_smc_otp_jtag_req_o</code>	<code>axil_smc_otp_jtag_req_i</code>	DTP → SMC	
	<code>axil_smc_otp_jtag_resp_i</code>	<code>axil_smc_otp_jtag_resp_o</code>	SMC → DTP	
DTP CSR Bus	<code>axil_xtrig_req_i</code>	<code>axil_dtp_csr_req_o</code>	SMC → DTP	

Connection	DTP Port	SMC Port	Direction	Notes
	<code>axil_xtrig_resp_o</code>	<code>axil_dtp_csr_resp_i</code>	DTP → SMC	
JTAG SMC Reset Overrides	<code>jtag_ic_reset_smc_o</code>	<code>jtag_reset_ctrl_i</code>	DTP → SMC	Packed <code>smc_pkg::jtag_smc_reset_ctrl_t</code> struct carrying all SMC reset override enables and active-low values
DTP Reset	<code>rst_n_i</code>	<code>rst_primary_smc_clk_no</code>	SMC → DTP	
Cross Trigger [1:0]	<code>xtrig_ctm_dst_req_i[1:0]</code>	<code>xtrigger_ss_o[1:0]</code>	SMC → DTP	Both bits
Clock Stop #0	<code>xtrig_clk_stop_req_i[0]</code>	<code>tdr_dbg_ctrl_clocks_stopped_by_cla_o</code>	SMC → DTP	
Boot Stall	<code>jtag_boot_stall_ovrd_o</code>	<code>boot_stall_jtag_ovrd_i</code>	DTP → SMC	
	<code>jtag_boot_stall_o</code>	<code>boot_stall_jtag_val_i</code>	DTP → SMC	

7.10. SEP-Conditional Wiring

SEP-related interfaces are handled internally within the SMU. Their behavior depends on the module parameter `SEP`.

Module/Signal	Implementation	Description
SMC SEP AXI Input	<code>sep_axi_in_req_i</code> = SEP traffic when <code>SEP=1</code> , else '0	Dedicated SEP-to-SMC subordinate path
DTP SEP OTP JTAG	SEP <code>axil_sep_otp_jtag_*</code> when <code>SEP=1</code> , else <code>u_sep_otp_axil_err_slv</code>	SEP OTP debug AXI-Lite path
DTP SEP STAP return	SEP <code>jtag_tdo</code> when <code>SEP=1</code> , else <code>sep_stap_tdo_to_dtp = 1'b0</code>	SEP JTAG STAP return path
SMU	<code>sep_mailbox_interrupts</code>	Internal SEP-to-SMC mailbox interrupts when <code>SEP=1</code> , else '0
SMC	<code>sep_wdt_reset_n_i</code> = <code>~sep_wdt_timer_rst_req</code> when <code>SEP=1</code> , else <code>1'b1</code>	SEP watchdog reset input to SMC

7.10.1. Other Internal Tie-offs

Module	Port	Tie-off Value	Reason
DTP	<code>xtrig_ctm_src_ack_i[1:0]</code>	<code>2'b00</code>	SMC uses pulse-sync mode

`xtrig_ctm_src_ack_i[9:2]` (exposed as SMU `xtrig_ctm_src_ack_i[7:0]`) is ported out through the SMU. The integrator should tie off to '0 when using pulse-sync mode (`XTRIG_INT_CT_MODE` bit = 0), or connect to actual ack signals when using req/ack mode (bit = 1).

7.11. SMU Port Interface

The SMU exposes a single consolidated boundary that an adopter connects to at the chip or chiplet level. The following table defines all SMU top-level ports including clock, reset, JTAG, cross trigger, SMC-originated interfaces (AXI, GPIO, eFuse, PLL, PVT, memory), and SEP passthrough interfaces (memory macros, eFuse, crypto SRAM, SPI, AXI extension). Ports prefixed with `sep_` are only active when the module parameter `SEP=1`.

Table 10. SMU Port Declaration

Interface Name	Type	Direction	Width	Description	Connection	Default value (if applicable)
clk_smu_i	logic	Input	1	Primary SMU clock domain. Shared by SMC and DTP system logic.	PLL output	N/A
clk_ref_i	logic	Input	1	Reference clock domain for timing-sensitive operations.	PLL reference clock	N/A
rst_cold_ni	logic	Input	1	Cold reset (active low). Asynchronous assertion, synchronous deassertion. Also serves as DTP power-on reset.	System cold reset	N/A
rst_cold_stable_ref_clk_no	logic	Output	1	Stable cold reset synchronized to reference clock domain (active low).	Downstream subsystems	N/A
powergood_i	logic	Input	1	Power-good indication from supply supervisor.	Power supply supervisor	N/A
jtag_ptap_client_tap_ctrl_i	prim_jtag_pkg::jtag_tap_ctrl_t	Input	-	Primary JTAG TAP control (TCK, TMS, TRST_N).	External JTAG pads	N/A
jtag_ptap_client_tdi_i	logic	Input	1	Primary JTAG TDI.	External JTAG pads	N/A
jtag_ptap_client_tdo_o	logic	Output	1	Primary JTAG TDO.	External JTAG pads	N/A
jtag_ptap_client_tdo_oen_o	logic	Output	1	Primary JTAG TDO output enable.	External JTAG pads	N/A
jtag_bsr_host_scan_ctrl_o	prim_jtag_pkg::jtag_scan_ctrl_t	Output	-	Boundary scan control.	Boundary scan chain	N/A
jtag_bsr_host_scan_in_i	logic	Input	1	Boundary scan data in.	Boundary scan chain	N/A
jtag_bsr_host_scan_out_o	logic	Output	1	Boundary scan data out.	Boundary scan chain	N/A
jtag_stap_io_host_tap_ctrl_o	prim_jtag_pkg::jtag_tap_ctrl_t	Output	-	I/O STAP TAP control.	I/O STAP host	N/A
jtag_stap_io_host_tdi_i	logic	Input	1	I/O STAP TDI.	I/O STAP host	Tie to '0 if unused
jtag_stap_io_host_tdo_o	logic	Output	1	I/O STAP TDO.	I/O STAP host	N/A
jtag_stap_io_host_tdo_oen_o	logic	Output	1	I/O STAP TDO output enable.	I/O STAP host	N/A
jtag_stap_extra_host_tap_ctrl_o	prim_jtag_pkg::jtag_tap_ctrl_t	Output	[JTAG_NUM_EXTRA_STAP_PORTS-1:0]	Extra STAP TAP control array.	Extra STAP hosts	Tie to '0 if unused
jtag_stap_extra_host_tdi_i	logic	Input	[JTAG_NUM_EXTRA_STAP_PORTS-1:0]	Extra STAP TDI array.	Extra STAP hosts	Tie to '0 if unused
jtag_stap_extra_host_tdo_o	logic	Output	[JTAG_NUM_EXTRA_STAP_PORTS-1:0]	Extra STAP TDO array.	Extra STAP hosts	N/A
jtag_stap_extra_host_tdo_oen_o	logic	Output	[JTAG_NUM_EXTRA_STAP_PORTS-1:0]	Extra STAP TDO output enable array.	Extra STAP hosts	N/A
jtag_stap_host_scan_ctrl_o	prim_jtag_pkg::jtag_scan_ctrl_t	Output	-	Extended STAP scan control.	STAP scan chain	N/A
jtag_stap_host_scan_in_i	logic	Input	1	Extended STAP scan data in.	STAP scan chain	N/A
jtag_stap_host_scan_out_o	logic	Output	1	Extended STAP scan data out.	STAP scan chain	N/A

Interface Name	Type	Direction	Width	Description	Connection	Default value (if applicable)
jtag_dfd_host_scan_ctrl_o	prim_jtag_pkg::jtag_scan_ctrl_t	Output	-	DFD iJTAG scan control.	DFD iJTAG chain	N/A
jtag_dfd_host_scan_in_i	logic	Input	1	DFD iJTAG scan data in.	DFD iJTAG chain	N/A
jtag_dfd_host_scan_out_o	logic	Output	1	DFD iJTAG scan data out.	DFD iJTAG chain	N/A
jtag_dft_secure_host_scan_ctrl_o	prim_jtag_pkg::jtag_scan_ctrl_t	Output	-	Secure DFT iJTAG scan control.	Secure DFT iJTAG chain	N/A
jtag_dft_secure_host_scan_in_i	logic	Input	1	Secure DFT iJTAG scan data in.	Secure DFT iJTAG chain	N/A
jtag_dft_secure_host_scan_out_o	logic	Output	1	Secure DFT iJTAG scan data out.	Secure DFT iJTAG chain	N/A
jtag_dft_host_scan_ctrl_o	prim_jtag_pkg::jtag_scan_ctrl_t	Output	-	Non-secure DFT iJTAG scan control.	Non-secure DFT iJTAG chain	N/A
jtag_dft_host_scan_in_i	logic	Input	1	Non-secure DFT iJTAG scan data in.	Non-secure DFT iJTAG chain	N/A
jtag_dft_host_scan_out_o	logic	Output	1	Non-secure DFT iJTAG scan data out.	Non-secure DFT iJTAG chain	N/A
dtp_stop_clks_o	logic	Output	1	Clock stop output from DTP (JTAG_DEBUG_CONTROL or CLA clock-stop).	PLL clock gates	N/A
jtag_ptap_state_o	jtag_tap_pkg::tap_state_e	Output	-	Current PTAP TAP state.	Debug infrastructure	N/A
jtag_ptap_inst_decoded_o	jtag_inst_reg_pkg::jtag_instruction_decoded_e	Output	-	Current decoded PTAP instruction.	Debug infrastructure	N/A
jtag_ic_reset_ext_o	ic_reset_ext_t	Output	$\$bits(ic_reset_ext_t)$	External JTAG IC_RESET override slice. Integrator-defined packed struct with <code>.ovrd</code> override enables and <code>.val</code> active-low override values. Driven by the DTP's <code>jtag_ic_reset_ext_o</code> when <code>Cfg.JTAG_IC_RESET_ENABLE=1</code> , otherwise tied to '0. An integrator needing JTAG reset overrides for logic outside the SMU sets <code>ic_reset_ext_t</code> to their own override struct and routes this port to it; the SMU does not define that type.	Integrator-defined reset overrides	N/A
xtrig_ctm_src_req_o	logic	Output	$[XTRIG_NUM_INT_CT-1:0]$	Cross trigger source requests (SMU external ports [7:0]; DTP [1:0] reserved for SMC).	Cross trigger network	N/A
xtrig_ctm_src_ack_i	logic	Input	$[XTRIG_NUM_INT_CT-1:0]$	Cross trigger source acknowledges. Unused in pulse-sync mode (mode bit = 0).	Cross trigger network	Tie to '0 in pulse-sync mode
xtrig_ctm_dst_req_i	logic	Input	$[XTRIG_NUM_INT_CT-1:0]$	Cross trigger destination requests.	Cross trigger network	Tie to '0 if unused
xtrig_ctm_dst_ack_o	logic	Output	$[XTRIG_NUM_INT_CT-1:0]$	Cross trigger destination acknowledges. Unused in pulse-sync mode.	Cross trigger network	N/A
xtrig_clk_stop_req_i	logic	Input	$[XTRIG_NUM_CLK_STOP_REQ-1:0]$	Clock stop requests (SMU external ports [7:0]; port [0] reserved for SMC internally).	Clock stop requesters	Tie to '0 if unused
xtrig_ctp_req_out_dout_o	logic	Output	$[XTRIG_NUM_CTP-1:0]$	CTP request-out data output.	GPIO pad ring	N/A
xtrig_ctp_req_out_dout_en_o	logic	Output	$[XTRIG_NUM_CTP-1:0]$	CTP request-out data output enable.	GPIO pad ring	N/A
xtrig_ctp_req_out_din_i	logic	Input	$[XTRIG_NUM_CTP-1:0]$	CTP request-out data input.	GPIO pad ring	Tie to '0 if unused

Interface Name	Type	Direction	Width	Description	Connection	Default value (if applicable)
xtrig_ctp_req_out_din_en_o	logic	Output	[XTRIG_NUM_CTP-1:0]	CTP request-out data input enable.	GPIO pad ring	N/A
xtrig_ctp_req_in_dout_o	logic	Output	[XTRIG_NUM_CTP-1:0]	CTP request-in data output.	GPIO pad ring	N/A
xtrig_ctp_req_in_dout_en_o	logic	Output	[XTRIG_NUM_CTP-1:0]	CTP request-in data output enable.	GPIO pad ring	N/A
xtrig_ctp_req_in_din_i	logic	Input	[XTRIG_NUM_CTP-1:0]	CTP request-in data input.	GPIO pad ring	Tie to '0 if unused
xtrig_ctp_req_in_din_en_o	logic	Output	[XTRIG_NUM_CTP-1:0]	CTP request-in data input enable.	GPIO pad ring	N/A
xtrig_ctp_ack_in_dout_o	logic	Output	[XTRIG_NUM_CTP-1:0]	CTP ack-in data output.	GPIO pad ring	N/A
xtrig_ctp_ack_in_dout_en_o	logic	Output	[XTRIG_NUM_CTP-1:0]	CTP ack-in data output enable.	GPIO pad ring	N/A
xtrig_ctp_ack_in_din_i	logic	Input	[XTRIG_NUM_CTP-1:0]	CTP ack-in data input.	GPIO pad ring	Tie to '0 if unused
xtrig_ctp_ack_in_din_en_o	logic	Output	[XTRIG_NUM_CTP-1:0]	CTP ack-in data input enable.	GPIO pad ring	N/A
xtrig_ctp_ack_out_dout_o	logic	Output	[XTRIG_NUM_CTP-1:0]	CTP ack-out data output.	GPIO pad ring	N/A
xtrig_ctp_ack_out_dout_en_o	logic	Output	[XTRIG_NUM_CTP-1:0]	CTP ack-out data output enable.	GPIO pad ring	N/A
xtrig_ctp_ack_out_din_i	logic	Input	[XTRIG_NUM_CTP-1:0]	CTP ack-out data input.	GPIO pad ring	Tie to '0 if unused
xtrig_ctp_ack_out_din_en_o	logic	Output	[XTRIG_NUM_CTP-1:0]	CTP ack-out data input enable.	GPIO pad ring	N/A
rst_primary_ref_clk_no	logic	Output	1	Primary reset synchronized to reference clock domain (active low).	Downstream subsystems	N/A
rst_primary_smc_clk_no	logic	Output	1	Primary reset synchronized to SMC clock domain (active low).	Downstream subsystems	N/A
smu_axi_in_req_i	smu_axi_xbar_pkg::axi_56_64_req_t	Input	-	SMU AXI crossbar inbound request (from SMN).	SMN fabric	Tie to '0 if unused
smu_axi_in_resp_o	smu_axi_xbar_pkg::axi_56_64_resp_t	Output	-	SMU AXI crossbar inbound response.	SMN fabric	N/A
smu_axi_out_req_o	smu_axi_xbar_pkg::axi_out_req_t	Output	-	SMU AXI crossbar outbound request (to SMN).	SMN fabric	N/A
smu_axi_out_resp_i	smu_axi_xbar_pkg::axi_out_resp_t	Input	-	SMU AXI crossbar outbound response.	SMN fabric	Tie to '0 if unused
smc_external_req_o	smc_pkg::smc_axil_32_req_t	Output	-	SMC AXI-Lite external port request for adopter peripheral expansion.	Adopter peripherals	N/A
smc_external_resp_i	smc_pkg::smc_axil_32_resp_t	Input	-	SMC AXI-Lite external port response.	Adopter peripherals	Tie to DECERR if unused
smc_efuse_bank_ctrl_req_o	smc_pkg::smc_axil_32_req_t	Output	-	SMC eFuse bank control AXI-Lite request.	eFuse shim	N/A
smc_efuse_bank_ctrl_resp_i	smc_pkg::smc_axil_32_resp_t	Input	-	SMC eFuse bank control AXI-Lite response.	eFuse shim	N/A
smc_efuse_shim_command_req_o	smc_efuse_pkg::fuse_command_req_t	Output	-	SMC eFuse command interface request.	eFuse shim	N/A
smc_efuse_shim_command_resp_i	smc_efuse_pkg::fuse_command_resp_t	Input	-	SMC eFuse command interface response.	eFuse shim	N/A

Interface Name	Type	Direction	Width	Description	Connection	Default value (if applicable)
smc_shadow_regs_o	smc_efuse_pkg::efuse_map_t	Output	-	SMC eFuse shadow register output.	External systems	N/A
pll_clk_obs_i	logic	Input	1	PLL clock observation input.	PLL shim	N/A
pll_clk_obs_en_i	logic	Input	1	PLL clock observation enable.	Control logic	N/A
pvt_process_clk_obs_i	logic	Input	1	PVT process monitor clock observation input.	PVT shim	N/A
pvt_process_clk_obs_en_i	logic	Input	1	PVT process monitor clock observation enable.	Control logic	N/A
cat_therm_i	logic	Input	1	CAT thermal sensor input.	CAT thermal sensor	Tie to '0 if unused
lsio_interface_select_o	logic	Output	[NUM_GPIO_WRAP S-1:0]	LSIO interface selection.	GPIO padring	N/A
pad2core_i	logic	Input	[NUM_GPIO_WRAP S-1:0]	GPIO input data from pad ring to core.	GPIO padring → SMU	N/A
core2pad_o	logic	Output	[NUM_GPIO_WRAP S-1:0]	GPIO output data from core to pad ring.	SMU → GPIO padring	N/A
pad2core_en_o	logic	Output	[NUM_GPIO_WRAP S-1:0]	GPIO pad-to-core path enable.	SMU → GPIO padring	N/A
core2pad_en_o	logic	Output	[NUM_GPIO_WRAP S-1:0]	GPIO core-to-pad path enable.	SMU → GPIO padring	N/A
rst_cool_n_from_pin_i	logic	Input	1	Cool reset input from GPIO pin.	GPIO pin	N/A
clk_telemetry_i	logic	Input	1	Telemetry clock domain for ATB data collection.	Telemetry clock source	N/A
rst_telemetry_n_i	logic	Input	1	Telemetry reset (active low).	Telemetry reset source	N/A
telemetry_atdata_i	telemetry_receiver_pkg::telemetry_data_t	Input	[NUM_TELEMETRY_RECEIVERS-1:0]	ATB telemetry data input array.	ATB sources	N/A
telemetry_atid_i	telemetry_receiver_pkg::atb_id_t	Input	[NUM_TELEMETRY_RECEIVERS-1:0]	ATB telemetry ID input array.	ATB sources	N/A
telemetry_atready_o	logic	Output	[NUM_TELEMETRY_RECEIVERS-1:0]	ATB telemetry ready output.	ATB sources	N/A
telemetry_atvalid_i	logic	Input	[NUM_TELEMETRY_RECEIVERS-1:0]	ATB telemetry valid input.	ATB sources	N/A
telemetry_atflushvalid_o	logic	Output	[NUM_TELEMETRY_RECEIVERS-1:0]	ATB flush valid output.	ATB sources	N/A
telemetry_atflushready_i	logic	Input	[NUM_TELEMETRY_RECEIVERS-1:0]	ATB flush ready input.	ATB sources	N/A
smc_cluster_double_error_o	logic	Output	1	Cluster double error detection output.	External systems	N/A
smc_wdt_first_timeout_o	logic	Output	1	First watchdog timeout signal.	Reset unit	N/A
smc_wdt_second_timeout_o	logic	Output	1	Second watchdog timeout signal.	External systems	N/A
smc_region_size_o	logic	Output	[31:0]	SMC address region size output.	External systems	N/A

Interface Name	Type	Direction	Width	Description	Connection	Default value (if applicable)
smc_ext_interrupts_i	logic	Input	[Cfg.NUM_INT_TO_SMC-1:0]	External interrupt inputs to SMC. Active-high level or a pulse long enough to be sampled on <code>clk_smc</code> .	External interrupt sources	Tie to '0 if unused
smc_fuse_sense_done_o	logic	Output	1	SMC fuse sense completion output.	Memory repair logic	N/A
smc_fuse_reset_n_delayed_o	logic	Output	1	Delayed fuse reset output.	External systems	N/A
skip_mem_repair_o	logic	Output	1	Skip memory repair output.	Memory repair logic	N/A
ext_boot_seq_done_i	logic	Input	1	External boot sequence completion input (memory repair and shadow register override done); gates reset release.	External boot/repair controller	N/A
lc_state_o	logic	Output	[2*LC_STATE_WIDTH-1:0]	Lifecycle state output (driven by SEP when <code>SEP=1</code> , else <code>80hf0</code>).	External systems	N/A
lc_sigint_err_o	logic	Output	1	Lifecycle signal integrity error.	External systems	N/A
smc_ndmreset_request_i	logic	Input	[CPU_CLUSTER_COUNT-1:0]	Non-debug-module reset requests.	Debug infrastructure	Tie to '0 if unused
smc_ndmreset_process_o	logic	Output	[CPU_CLUSTER_COUNT-1:0]	Non-debug-module reset process indicators.	Debug infrastructure	N/A
smc_ext_mailbox_interrupts_o	logic	Output	[NUM_MAILBOXES-1:0]	External mailbox interrupt outputs.	External targets	N/A
cfg_flr_pf_active_i	logic	Input	1	Function Level Reset (FLR) PF active signal.	PCIe / system	Tie to '0 if unused
isolate_req_o	logic	Output	[31:0]	Isolation request output for 32 subsystems.	Subsystems	N/A
ss_reset_complete_i	logic	Input	[31:0]	Subsystem reset completion status.	Subsystems	32'hFFFFFFFF
ss_config_o	logic	Output	[31:0]	Subsystem configuration output.	Subsystems	N/A
ss_reset_ctrl_o	smc_reset_unit_pkg::reset_ctrl_t	Output	[31:0]	Subsystem reset control output array.	Subsystems	N/A
sync_irq_o	logic	Output	1	Software-controlled global synchronisation bit (<code>SYNC_REG.sync</code> in the SMC reset unit). Not an interrupt aggregate output.	External systems	N/A
gpio_interrupt_o	logic	Output	[NUM_GPIO_WRAPS-1:0]	Raw GPIO interrupt vector from the padding, one bit per GPIO wrap (bonded + unbonded). Passed through from SMC. Software reads GPIO status registers to identify the interrupt source.	SMC → external consumers	N/A, leave floating if unused
uart_interrupt_o	logic	Output	[NUM_UART-1:0]	Raw UART interrupt outputs, one bit per UART instance, in the peripheral clock domain. Passed through from SMC.	SMC → external consumers	N/A, leave floating if unused
smc_rom_intf_req_o	rom_req_t	Output	-	SMC ROM memory interface request.	Boot ROM	N/A
smc_rom_intf_rsp_i	rom_rsp_t	Input	-	SMC ROM memory interface response.	Boot ROM	N/A
smc_scratch_ram_intf_req_o	scratch_ram_req_t	Output	[31:0]	SMC scratch RAM interface requests.	Scratch RAM banks	N/A
smc_scratch_ram_intf_rsp_i	scratch_ram_rsp_t	Input	[31:0]	SMC scratch RAM interface responses.	Scratch RAM banks	N/A

Interface Name	Type	Direction	Width	Description	Connection	Default value (if applicable)
smc_l1_icache_tag_intf_req_o	l1_icache_tag_req_t	Output	[3:0]	SMC L1 I-cache tag interface requests.	I-cache tag banks	N/A
smc_l1_icache_tag_intf_rsp_i	l1_icache_tag_rsp_t	Input	[3:0]	SMC L1 I-cache tag interface responses.	I-cache tag banks	N/A
smc_l1_icache_data_intf_req_o	l1_icache_data_req_t	Output	[7:0]	SMC L1 I-cache data interface requests.	I-cache data banks	N/A
smc_l1_icache_data_intf_rsp_i	l1_icache_data_rsp_t	Input	[7:0]	SMC L1 I-cache data interface responses.	I-cache data banks	N/A
smc_l1_dcache_tag_intf_req_o	l1_dcache_tag_req_t	Output	[3:0]	SMC L1 D-cache tag interface requests.	D-cache tag banks	N/A
smc_l1_dcache_tag_intf_rsp_i	l1_dcache_tag_rsp_t	Input	[3:0]	SMC L1 D-cache tag interface responses.	D-cache tag banks	N/A
smc_l1_dcache_data_intf_req_o	l1_dcache_data_req_t	Output	[3:0]	SMC L1 D-cache data interface requests.	D-cache data banks	N/A
smc_l1_dcache_data_intf_rsp_i	l1_dcache_data_rsp_t	Input	[3:0]	SMC L1 D-cache data interface responses.	D-cache data banks	N/A
smc_disable_sram_auto_init_i	logic	Input	1	Disable SRAM automatic initialization.	Control logic	1'b0
smc_init_mem_done_o	logic	Output	1	Memory initialization completion signal.	Control logic	N/A
chiplet_is_primary_i	logic	Input	1	Chiplet is primary (for System Timer OCTS).	GPIO padring straps	N/A
timer_count_o	logic	Output	[63:0]	64-bit system timer count output (OCTS).	External systems	N/A
trace_mem_req_o	dfd_trace_mem_pkg::SinkMemPktIn_s	Output	[TRC_RAM_INSTANCES-1:0]	Trace memory interface requests.	Trace memory	N/A
trace_mem_resp_i	dfd_trace_mem_pkg::SinkMemPktOut_s	Input	[TRC_RAM_INSTANCES-1:0]	Trace memory interface responses.	Trace memory	N/A
test_en_i	logic	Input	1	DFT/scan test-enable. Drives clock-gater test ports and AXI cell test inputs.	Test controller	1'b0
scan_rst_ni	logic	Input	1	Scan reset (active-low). Bypasses reset synchronizers during DFT.	Test controller	1'b1
mem_repair_done_i	logic	Input	1	Memory repair done indicator.	DFT controller	1'b0
mem_repair_success_i	logic	Input	1	Memory repair success indicator.	DFT controller	1'b0
mem_repair_abort_i	logic	Input	1	Memory repair abort indicator.	DFT controller	1'b0
mbist_done_i	logic	Input	1	MBIST done indicator.	DFT controller	1'b0
mbist_pass_i	logic	Input	1	MBIST pass indicator.	DFT controller	1'b0
mbist_abort_i	logic	Input	1	MBIST abort indicator.	DFT controller	1'b0
sep_sram_req_o	sep_pkg::sep_sram_req_t	Output	-	SEP scratch SRAM request passthrough.	SEP SRAM macros	N/A
sep_sram_rsp_i	sep_pkg::sep_sram_rsp_t	Input	-	SEP scratch SRAM response passthrough.	SEP SRAM macros	N/A
sep_boot_rom_req_o	sep_pkg::sep_sram_req_t	Output	-	SEP boot ROM request passthrough.	SEP ROM macro	N/A
sep_boot_rom_rsp_i	sep_pkg::sep_sram_rsp_t	Input	-	SEP boot ROM response passthrough.	SEP ROM macro	N/A

Interface Name	Type	Direction	Width	Description	Connection	Default value (if applicable)
sep_cpu_tcm_req_o	sep_pkg::sep_cpu_tcm_req_t	Output	-	SEP CPU TCM request passthrough (ICCM + DCCM).	SEP SRAM macros	N/A
sep_cpu_tcm_rsp_i	sep_pkg::sep_cpu_tcm_rsp_t	Input	-	SEP CPU TCM response passthrough.	SEP SRAM macros	N/A
sep_efuse_bank_ctrl_req_o	sep_efuse_pkg::efuse_axil_req_t	Output	-	SEP eFuse bank control AXI-Lite request passthrough.	SEP eFuse shim	N/A
sep_efuse_bank_ctrl_rsp_i	sep_efuse_pkg::efuse_axil_rsp_t	Input	-	SEP eFuse bank control AXI-Lite response passthrough.	SEP eFuse shim	N/A
sep_efuse_shim_command_req_o	sep_efuse_pkg::fuse_command_req_t	Output	-	SEP eFuse command interface request passthrough.	SEP eFuse shim	N/A
sep_efuse_shim_command_rsp_i	sep_efuse_pkg::fuse_command_rsp_t	Input	-	SEP eFuse command interface response passthrough.	SEP eFuse shim	N/A
sep_crypto_pka_imem_sram_req_o	sep_crypto_pkg::sep_crypto_pka_imem_sram_req_t	Output	-	SEP OTBN PKA instruction memory SRAM request passthrough.	SRAM macro	N/A
sep_crypto_pka_imem_sram_rsp_i	sep_crypto_pkg::sep_crypto_pka_imem_sram_rsp_t	Input	-	SEP OTBN PKA instruction memory SRAM response passthrough.	SRAM macro	N/A
sep_crypto_pka_dmem_sram_req_o	sep_crypto_pkg::sep_crypto_pka_dmem_sram_req_t	Output	-	SEP OTBN PKA data memory SRAM request passthrough.	SRAM macro	N/A
sep_crypto_pka_dmem_sram_rsp_i	sep_crypto_pkg::sep_crypto_pka_dmem_sram_rsp_t	Input	-	SEP OTBN PKA data memory SRAM response passthrough.	SRAM macro	N/A
sep_km_rom_mem_req_o	km_intf_pkg::km_rom_mem_req_t	Output	-	SEP Key Manager ROM memory request passthrough.	ROM macro	N/A
sep_km_rom_mem_rsp_i	km_intf_pkg::km_rom_mem_rsp_t	Input	-	SEP Key Manager ROM memory response passthrough.	ROM macro	N/A
sep_km_sram_mem_req_o	km_intf_pkg::km_sram_mem_req_t	Output	-	SEP Key Manager SRAM memory request passthrough.	SRAM macro	N/A
sep_km_sram_mem_rsp_i	km_intf_pkg::km_sram_mem_rsp_t	Input	-	SEP Key Manager SRAM memory response passthrough.	SRAM macro	N/A
sep_external_req_o	sep_pkg::sep_32_64_12_axi_req_t	Output	-	SEP AXI extension port request passthrough.	Adopter peripherals	N/A
sep_external_rsp_i	sep_pkg::sep_32_64_12_axi_rsp_t	Input	-	SEP AXI extension port response passthrough.	Adopter peripherals	Tie to DECERR if unused
sep_cpu_trace_o	sep_pkg::sep_cpu_trace_t	Output	-	SEP CPU trace output.	Trace infrastructure	N/A
sep_lockstep_ctrl_i	sep_pkg::sep_lockstep_ctrl_t	Input	-	SEP CPU lockstep controls, passed through to the SEP. Inert unless the SEP core is built with RV_LOCKSTEP_ENABLE .	Chip-level RAS control	Tie to '0 if unused
sep_lockstep_status_o	sep_pkg::sep_lockstep_status_t	Output	-	SEP CPU lockstep status. Reads 0 when the SEP is absent (SEP=0) or the core is built without RV_LOCKSTEP_ENABLE .	Chip-level RAS aggregation	N/A
lcc_demote_state_1_o	logic	Output	[1:0]	SEP lifecycle demote state 1.	External lifecycle logic	N/A
lcc_demote_state_2_o	logic	Output	[1:0]	SEP lifecycle demote state 2.	External lifecycle logic	N/A
sep_fuse_sense_done_o	logic	Output	1	SEP fuse sense done output.	System integration	N/A
clk_sep_wdt_i	logic	Input	1	SEP watchdog timer clock passthrough.	Low-frequency clock source	N/A

Interface Name	Type	Direction	Width	Description	Connection	Default value (if applicable)
secure_tm_req_i	logic	Input	-	Secure test mode request, passthrough to SEP.	GPIO padring / tie-off	N/A

System Management Network (SMN) Integration

Chapter 8. Status

WARNING

This section is currently under development. Content will be added to describe SMN integration procedures, network topology, and management interfaces.

AXI-over-UCIe Bridge (AoU) Integration

Parameters, clocks, resets, and bring-up for the vendored AXI-over-UCIe bridge.

Chapter 9. Integration guide

References

1. AXI over UCIe (AoU) Protocol Specification, v0.7 (<https://cdn.sanity.io/files/jpb4ed5r/production/728b2f8cfc09023466cf350db53764890b4f2343.pdf>)
2. AXI over UCIe (AoU) Protocol Specification, v0.5
3. Universal Chiplet Interconnect Express (UCIe) Specification, Revision 3.0 (<https://www.uciexpress.org/>)
4. Arm AMBA AXI and ACE Protocol Specification (AXI4) (<https://developer.arm.com>)
5. Arm AMBA APB Protocol Specification (<https://developer.arm.com>)

Arm, AMBA, AXI, APB, and ACE are registered trademarks or trademarks of Arm Limited (or its subsidiaries) in the US and/or elsewhere. Universal Chiplet Interconnect Express (UCIe) is a trademark of the UCIe Consortium. All other trademarks are the property of their respective owners.

Integration Options

The AOU IP can be integrated at two levels. Choose the option that matches your system's FDI bringup strategy:

Option	Module	When to use	FDI bringup	Additional ports
A (recommended)	AOU_TOP	Turn-key FDI bringup control is desired	Handled internally by AOU_FDI_BRINGUP_CTRL	FDI bringup control, SW bringup control, bringup status
B	AOU_CORE_TOP	You have an external UCIe controller or custom FDI state machine	Must be handled externally	I_INT_FSM_IN_ACTIVE, O_AOU_ACTIVATE_ST_*, O_AOU_REQ_LINKRESET

Note: All AXI, APB, FDI datapath, interrupt, and DFT interfaces are identical between AOU_TOP and AOU_CORE_TOP. The sections below that document these interfaces (Sections 2-8) apply to both modules unless otherwise noted.

For detailed micro-architecture information—including datapath internals, error handling, debugging features, and credit management—refer to the *AOU_CORE Micro-Architecture Specification* (DOC/MAS/index.adoc).

1. Module Overview

1.1 AOU_TOP

AOU_TOP is the recommended top-level integration module. It instantiates two submodules:

- **AOU_FDI_BRINGUP_CTRL**— A UCIe 3.0 FDI state machine that manages the four FDI handshake pairs (wake, clock, state negotiation, RX activation) required to bring the FDI link from RESET to ACTIVE and handle teardown, LinkError recovery, Retrain, and L1 entry/exit.
- **AOU_CORE_TOP**— The AXI-over-UCIe protocol engine described in [Section 1.2](#).

manner, without converting them to 256-byte flit data. It receives AXI messages from its own AXI slave interface, packs them into FDI-width chunks, and transmits these chunks to the remote AoU device via UCIE. The remote AoU receives these FDI-width chunks from the UCIE FDI interface, unpacks them into AXI messages, and delivers the data through its AXI master interface. It supports flow control for all exceptional cases defined in the UCIE standard. First, it handles the chunk valid/cancel signal, including the alternative implementation method described in the UCIE specification. Second, it handles the stall request signal received from the D2D Adapter while maintaining the Flit-aligned boundary.

Interoperability is also supported when the remote device uses a different AXI data width. AOU_CORE supports a configurable number of Resource Plane(RPs), with both the number of RPs and each RP's AXI data width fully parameterizable. A dedicated field in the SFR allows software to configure the target RP, enabling flexible RP mapping. For each RP, the AW, W and AR channel support three arbitration modes: Round Robin, AXI QoS scheme, and Port QoS scheme. Additionally, a starvation-prevention mechanism is implemented to ensure fair arbitration across all RP channels.

AOU_CORE_TOP implements the subset of FDI signals required specifically for transporting AXI across UCIE. FDI bringup/teardown and FDI sideband flows are expected to be handled by other components.

The block consists of the following sub blocks

- AOU_CORE
 - AOU_CORE_RP Manages a AXI interface for write request, read request, write data, read data and write response busses
 - AOU_CORE_SFR This implements control and status register of the AOU core. It has a 32bit APB interface for programming. It configures all the blocks in the core.
 - AOU_TX_CORE This block packs the arbitrated AXI channels, credits, and activation messages into FDI-width chunks (32, 64, or 128 bytes per FDI_CONFIG). It follows AOU specifications to pack the messages into 256 byte flit data. It then passes it onto UCIE controller over the FDI interface for transmission.
 - AOU_CRD_CTRL This block manages credits available for TX. It gets remote credits available from AOU_RX_CORE, and used credits from AOU_TX_CORE and creates final credits that can be used for TX.
 - AOU_RX_CORE This block processes FDI-width chunks (32, 64, or 128 bytes per FDI_CONFIG) received by UCIE controller and passed to the core over the FDI interface. It decodes different message types which encapsulate different AXI channel transactions. These messages are buffered and then passed onto AOU_CORE_RP for presenting the transaction to its corresponding AXI interface.
 - AOU_TX_FDI_IF This block receives FDI-width data chunks from AOU_TX_CORE and buffers them. It does handshake with UCIE controller FDI RX interface and passes the data chunks downstream to be sent to remote chiplet.
 - AOU_ACT_CTRL This block manages activation and deactivation control of the AOU bridge. It initiates activate and deactivate messages to remote AOU bridge when configured via APB.
- AOU_FIFO_RP This block buffers decoded messages from AOU_RX_CORE. It separates the messages based on resource plane (RP) indicator and writes them into dedicated FIFOs. These FIFOs feed the corresponding AOU_CORE_RP which manage a single AXI interface.
- ASYNC_APB_BRIDGE This block synchronizes APB transactions to the local core clock.

When using AOU_CORE_TOP directly, the integrator must provide an external FDI state machine that drives I_INT_FSM_IN_ACTIVE and the associated control/status signals listed in [Section 3.12](#).

1.2.2 Key Features

- Single APB interface Configuration/control/status register access
- Multiple AXI master & slave interface
 - Configurable RP port & RP remapping supported
 - Supports variable data widths and burst length requests. Configurable FIFO Depth
- UCIE 256B latency-optimized flit(Format 6) support only
- Message packing and unpacking are handled in variable-sized units of 32, 64, or 128 bytes, corresponding to the FDI data width selected by FDI_CONFIG.
- Selectable Early response by setting SFR8
- Selectable 32B / 64B / 128B single-PHY and 32B+64B / 64B+128B two-PHY FDI configurations via the FDI_CONFIG parameter (see [Section 2](#)). Two-PHY variants additionally require the +define+TWO_PHY build flag so the second-PHY ports physically exist.
- Parameterized number of Resource Plane and each RP's AXI data width
- RP Remapping
- QoS scheme between RP with AW, W, AR channel
- Interoperability with different data width remote die
- Handling of flit cancel and stall request as specified in the UCIE specification
- Selectable AXI Aggregator added for BUS efficiency

2. Parameter List

Parameter	Type	Default / Note	Description
RP_COUNT	parameter	1	Number of receive ports (AXI M/S pairs). Parameterizable up to 4.
FDI_CONFIG	parameter (int)	FDI_CFG_SP_32B	FDI width selector. See <i>FDI_CONFIG values</i> below. Two-PHY values additionally require +define+TWO_PHY at compile time.
RP0_RX_AW_FIFO_DEPTH	parameter	44	RX AW FIFO depth for RP0. The depth of each RP*_RX*_FIFO_DEPTH parameter should be determined by considering the Turn-Around-Time (TAT) between the local die and the remote die, so that no performance drop occurs due to AoU — TAT being the time, in a UCIE-integrated environment, from when the local die sends a message until the credit is received back from the remote die.
RP0_RX_AR_FIFO_DEPTH	parameter	44	RX AR FIFO depth for RP0.
RP0_RX_W_FIFO_DEPTH	parameter	88 / 140	RX W FIFO depth for RP0. Default is 140 when FDI_CONFIG selects a 1024b interface (FDI_CFG_SP_128B / FDI_CFG_TP_64B_128B); 88 otherwise.

Parameter	Type	Default / Note	Description
RP0_RX_R_FIFO_DEPTH	parameter	88 / 140	RX R FIFO depth for RP0. Same FDI-aware default as RP0_RX_W_FIFO_DEPTH.
RP0_RX_B_FIFO_DEPTH	parameter	44	RX B FIFO depth for RP0.
RP1_RX_AW_FIFO_DEPTH	parameter	44	RX AW FIFO depth for RP1.
RP1_RX_AR_FIFO_DEPTH	parameter	44	RX AR FIFO depth for RP1.
RP1_RX_W_FIFO_DEPTH	parameter	88 / 140	RX W FIFO depth for RP1 (FDI-aware default; see RP0).
RP1_RX_R_FIFO_DEPTH	parameter	88 / 140	RX R FIFO depth for RP1 (FDI-aware default; see RP0).
RP1_RX_B_FIFO_DEPTH	parameter	44	RX B FIFO depth for RP1.
RP2_RX_AW_FIFO_DEPTH	parameter	44	RX AW FIFO depth for RP2.
RP2_RX_AR_FIFO_DEPTH	parameter	44	RX AR FIFO depth for RP2.
RP2_RX_W_FIFO_DEPTH	parameter	88 / 140	RX W FIFO depth for RP2 (FDI-aware default; see RP0).
RP2_RX_R_FIFO_DEPTH	parameter	88 / 140	RX R FIFO depth for RP2 (FDI-aware default; see RP0).
RP2_RX_B_FIFO_DEPTH	parameter	44	RX B FIFO depth for RP2.
RP3_RX_AW_FIFO_DEPTH	parameter	44	RX AW FIFO depth for RP3.
RP3_RX_AR_FIFO_DEPTH	parameter	44	RX AR FIFO depth for RP3.
RP3_RX_W_FIFO_DEPTH	parameter	88 / 140	RX W FIFO depth for RP3 (FDI-aware default; see RP0).
RP3_RX_R_FIFO_DEPTH	parameter	88 / 140	RX R FIFO depth for RP3 (FDI-aware default; see RP0).
RP3_RX_B_FIFO_DEPTH	parameter	44	RX B FIFO depth for RP3.
RX_AW_FIFO_RS_EN	parameter	1	When 1, inserts an output register-slice on the RX AW FIFO read port. Trades latency (+1 cycle) for timing closure.
RX_AR_FIFO_RS_EN	parameter	1	RX AR FIFO output register-slice enable (see RX_AW_FIFO_RS_EN).
RX_W_FIFO_RS_EN	parameter	1	RX W FIFO output register-slice enable (see RX_AW_FIFO_RS_EN).
RX_R_FIFO_RS_EN	parameter	1	RX R FIFO output register-slice enable (see RX_AW_FIFO_RS_EN).
RX_B_FIFO_RS_EN	parameter	1	RX B FIFO output register-slice enable (see RX_AW_FIFO_RS_EN).
RP0_AXI_DATA_WD	parameter	512	AXI data width for RP0 (bits).
RP1_AXI_DATA_WD	parameter	512	AXI data width for RP1 (bits).
RP2_AXI_DATA_WD	parameter	512	AXI data width for RP2 (bits).
RP3_AXI_DATA_WD	parameter	512	AXI data width for RP3 (bits).
AXI_PEER_DIE_MAX_DATA_WD	parameter	1024	Maximum peer data width (bits).
APB_ADDR_WD	parameter	32	APB address width.
APB_DATA_WD	parameter	32	APB data width.
S_RD_MO_CNT	parameter	32	Slave read outstanding count.
S_WR_MO_CNT	parameter	32	Slave write outstanding count.
M_RD_MO_CNT	parameter	32	Master read outstanding count.

Parameter	Type	Default / Note	Description
M_WR_MO_CNT	parameter	32	Master write outstanding count.

FDI_CONFIG values

FDI_CONFIG is a single integer parameter that selects the FDI data width pair forwarded to the internal hierarchy. Named constants are declared in [RTL/packet_def_pkg.sv](#) and should be used at the instantiation site:

FDI_CONFIG value	PHY0 width (FDI_IF_WD0)	PHY1 width (FDI_IF_WD1)	PHY count	Build flag
FDI_CFG_SP_32B (default)	256	512 (internal decode)	Single PHY	none
FDI_CFG_SP_64B	512	512 (internal decode)	Single PHY	none
FDI_CFG_SP_128B	1024	1024 (internal decode)	Single PHY	none
FDI_CFG_TP_32B_64B	256	512	Two PHY	+define+TWO_PHY
FDI_CFG_TP_64B_128B	512	1024	Two PHY	+define+TWO_PHY

Notes:

- For single-PHY values, only the PHY0 ports (I_FDI_PL_0_* / O_FDI_LP_0_*) carry traffic. The PHY1 internal width is used only as the RX-side decode width.
- The two-PHY values (FDI_CFG_TP_*) are valid **only** when the design is built with +define+TWO_PHY. The build flag gates the physical presence of the PHY1 ports (I_FDI_PL_1_*, O_FDI_LP_1_*) and the I_PHY_TYPE selector on both AOU_TOP and AOU_CORE_TOP. Mixing a FDI_CFG_TP_* value with a build that omits +define+TWO_PHY (or vice-versa) is an integration error; the design does **not** enforce this consistency at elaboration time.
- The FDI_CFG_TP_32B_128B (256b + 1024b) combination is **not** supported by the design: AOU_RX_CORE_IN_MUX requires $\text{FDI_IF_WD0} == \text{FDI_IF_WD1} / 2$ for two-PHY accumulation.

Build flags

Flag	Effect
+define+TWO_PHY	Compile-time switch that adds the second-PHY ports (I_FDI_PL_1_*, O_FDI_LP_1_*) and the I_PHY_TYPE selector to both AOU_TOP and AOU_CORE_TOP. Required for FDI_CFG_TP_* values of FDI_CONFIG.

3. Interface Signals

3.1 Clock and Reset

Signal	Direction	Width	Description
I_CLK	input	1	Core system clock (AOU_CORE and AOU_FIFO_RP).
I_RESETN	input	1	Active-low asynchronous reset.
I_PCLK	input	1	APB clock (slave side of async bridge).
I_PRESETN	input	1	APB domain reset.

3.2 APB Slave Interface

Signal	Direction	Width	Description
I_AOU_APB_SIO_PSEL	input	1	APB select.
I_AOU_APB_SIO_PENABLE	input	1	APB enable.
I_AOU_APB_SIO_PADDR	input	APB_ADDR_WD	APB address.
I_AOU_APB_SIO_PWRITE	input	1	APB write.
I_AOU_APB_SIO_PWDATA	input	APB_DATA_WD	APB write data.
O_AOU_APB_SIO_PRDATA	output	APB_DATA_WD	APB read data.
O_AOU_APB_SIO_PREADY	output	1	APB ready.
O_AOU_APB_SIO_PSLVERR	output	1	APB slave error.

3.3 AXI Master (RX) – AR Channel

Signal	Direction	Width	Description
O_AOU_RX_AXI_M_ARID	output	[RP_COUNT-1:0][AXI_ID_WD-1:0]	Read address ID.
O_AOU_RX_AXI_M_ARADDR	output	[RP_COUNT-1:0][AXI_ADDR_WD-1:0]	Read address.
O_AOU_RX_AXI_M_ARLEN	output	[RP_COUNT-1:0][AXI_LEN_WD-1:0]	Burst length.
O_AOU_RX_AXI_M_ARSIZE	output	[RP_COUNT-1:0][2:0]	Transfer size.
O_AOU_RX_AXI_M_ARBURST	output	[RP_COUNT-1:0][1:0]	Burst type.
O_AOU_RX_AXI_M_ARLOCK	output	[RP_COUNT-1:0]	Lock.
O_AOU_RX_AXI_M_ARCACHE	output	[RP_COUNT-1:0][3:0]	Cache attributes.
O_AOU_RX_AXI_M_ARPROT	output	[RP_COUNT-1:0][2:0]	Protection.
O_AOU_RX_AXI_M_ARQOS	output	[RP_COUNT-1:0][3:0]	QoS.
O_AOU_RX_AXI_M_ARVALID	output	[RP_COUNT-1:0]	AR valid.
I_AOU_RX_AXI_M_ARREADY	input	[RP_COUNT-1:0]	AR ready.

3.4 AXI Master (RX) – R Channel

Signal	Direction	Width	Description
I_AOU_TX_AXI_M_RID	input	[RP_COUNT-1:0][AXI_ID_WD-1:0]	Read data ID.
I_AOU_TX_AXI_M_RDATA	input	[RP_COUNT-1:0][RP_AXI_DATA_WD_MAX-1:0]	Read data.
I_AOU_TX_AXI_M_RRESP	input	[RP_COUNT-1:0][1:0]	Read response.
I_AOU_TX_AXI_M_RLAST	input	[RP_COUNT-1:0]	Read last.
I_AOU_TX_AXI_M_RVALID	input	[RP_COUNT-1:0]	R valid.
O_AOU_TX_AXI_M_RREADY	output	[RP_COUNT-1:0]	R ready.

3.5 AXI Master (RX) – AW Channel

Signal	Direction	Width	Description
O_AOU_RX_AXI_M_AWID	output	[RP_COUNT-1:0][AXI_ID_WD-1:0]	Write address ID.
O_AOU_RX_AXI_M_AWADDR	output	[RP_COUNT-1:0][AXI_ADDR_WD-1:0]	Write address.
O_AOU_RX_AXI_M_AWLEN	output	[RP_COUNT-1:0][AXI_LEN_WD-1:0]	Burst length.

Signal	Direction	Width	Description
O_AOU_RX_AXI_M_AWSIZE	output	[RP_COUNT-1:0][2:0]	Transfer size.
O_AOU_RX_AXI_M_AWBURST	output	[RP_COUNT-1:0][1:0]	Burst type.
O_AOU_RX_AXI_M_AWLOCK	output	[RP_COUNT-1:0]	Lock.
O_AOU_RX_AXI_M_AWCACHE	output	[RP_COUNT-1:0][3:0]	Cache attributes.
O_AOU_RX_AXI_M_AWPROT	output	[RP_COUNT-1:0][2:0]	Protection.
O_AOU_RX_AXI_M_AWQOS	output	[RP_COUNT-1:0][3:0]	QoS.
O_AOU_RX_AXI_M_AWVALID	output	[RP_COUNT-1:0]	AW valid.
I_AOU_RX_AXI_M_AWREADY	input	[RP_COUNT-1:0]	AW ready.

3.6 AXI Master (RX) – W and B Channels

Signal	Direction	Width	Description
O_AOU_RX_AXI_M_WDATA	output	[RP_COUNT-1:0][RP_AXI_DATA_WD_MAX-1:0]	Write data.
O_AOU_RX_AXI_M_WSTRB	output	[RP_COUNT-1:0][RP_AXI_STRB_WD_MAX-1:0]	Write strobe.
O_AOU_RX_AXI_M_WLAST	output	[RP_COUNT-1:0]	Write last.
O_AOU_RX_AXI_M_WVALID	output	[RP_COUNT-1:0]	W valid.
I_AOU_RX_AXI_M_WREADY	input	[RP_COUNT-1:0]	W ready.
I_AOU_TX_AXI_M_BID	input	[RP_COUNT-1:0][AXI_ID_WD-1:0]	Write response ID.
I_AOU_TX_AXI_M_BRESP	input	[RP_COUNT-1:0][1:0]	Write response.
I_AOU_TX_AXI_M_BVALID	input	[RP_COUNT-1:0]	B valid.
O_AOU_TX_AXI_M_BREADY	output	[RP_COUNT-1:0]	B ready.

3.7 AXI Slave (TX) – AR Channel

Signal	Direction	Width	Description
I_AOU_TX_AXI_S_ARID	input	[RP_COUNT-1:0][AXI_ID_WD-1:0]	Read address ID.
I_AOU_TX_AXI_S_ARADDR	input	[RP_COUNT-1:0][AXI_ADDR_WD-1:0]	Read address.
I_AOU_TX_AXI_S_ARLEN	input	[RP_COUNT-1:0][AXI_LEN_WD-1:0]	Burst length.
I_AOU_TX_AXI_S_ARSIZE	input	[RP_COUNT-1:0][2:0]	Transfer size.
I_AOU_TX_AXI_S_ARBURST	input	[RP_COUNT-1:0][1:0]	Burst type.
I_AOU_TX_AXI_S_ARLOCK	input	[RP_COUNT-1:0]	Lock.
I_AOU_TX_AXI_S_ARCACHE	input	[RP_COUNT-1:0][3:0]	Cache attributes.
I_AOU_TX_AXI_S_ARPROT	input	[RP_COUNT-1:0][2:0]	Protection.
I_AOU_TX_AXI_S_ARQOS	input	[RP_COUNT-1:0][3:0]	QoS.
I_AOU_TX_AXI_S_ARVALID	input	[RP_COUNT-1:0]	AR valid.
O_AOU_TX_AXI_S_ARREADY	output	[RP_COUNT-1:0]	AR ready.

3.8 AXI Slave (TX) – R Channel

Signal	Direction	Width	Description
O_AOU_RX_AXI_S_RID	output	[RP_COUNT-1:0][AXI_ID_WD-1:0]	Read data ID.

Signal	Direction	Width	Description
O_AOU_RX_AXI_S_RDATA	output	[RP_COUNT-1:0][RP_AXI_DATA_WD_MAX-1:0]	Read data.
O_AOU_RX_AXI_S_RRESP	output	[RP_COUNT-1:0][1:0]	Read response.
O_AOU_RX_AXI_S_RLAST	output	[RP_COUNT-1:0]	Read last.
O_AOU_RX_AXI_S_RVALID	output	[RP_COUNT-1:0]	R valid.
I_AOU_RX_AXI_S_RREADY	input	[RP_COUNT-1:0]	R ready.

3.9 AXI Slave (TX) – AW, W, B Channels

Signal	Direction	Width	Description
I_AOU_TX_AXI_S_AWID	input	[RP_COUNT-1:0][AXI_ID_WD-1:0]	Write address ID.
I_AOU_TX_AXI_S_AWADDR	input	[RP_COUNT-1:0][AXI_ADDR_WD-1:0]	Write address.
I_AOU_TX_AXI_S_AWLEN	input	[RP_COUNT-1:0][AXI_LEN_WD-1:0]	Burst length.
I_AOU_TX_AXI_S_AWSIZE	input	[RP_COUNT-1:0][2:0]	Transfer size.
I_AOU_TX_AXI_S_AWBURST	input	[RP_COUNT-1:0][1:0]	Burst type.
I_AOU_TX_AXI_S_AWLOCK	input	[RP_COUNT-1:0]	Lock.
I_AOU_TX_AXI_S_AWCACHE	input	[RP_COUNT-1:0][3:0]	Cache attributes.
I_AOU_TX_AXI_S_AWPROT	input	[RP_COUNT-1:0][2:0]	Protection.
I_AOU_TX_AXI_S_AWQOS	input	[RP_COUNT-1:0][3:0]	QoS.
I_AOU_TX_AXI_S_AWVALID	input	[RP_COUNT-1:0]	AW valid.
O_AOU_TX_AXI_S_AWREADY	output	[RP_COUNT-1:0]	AW ready.
I_AOU_TX_AXI_S_WDATA	input	[RP_COUNT-1:0][RP_AXI_DATA_WD_MAX-1:0]	Write data.
I_AOU_TX_AXI_S_WSTRB	input	[RP_COUNT-1:0][RP_AXI_STRB_WD_MAX-1:0]	Write strobe.
I_AOU_TX_AXI_S_WLAST	input	[RP_COUNT-1:0]	Write last.
I_AOU_TX_AXI_S_WVALID	input	[RP_COUNT-1:0]	W valid.
O_AOU_TX_AXI_S_WREADY	output	[RP_COUNT-1:0]	W ready.
O_AOU_RX_AXI_S_BID	output	[RP_COUNT-1:0][AXI_ID_WD-1:0]	Write response ID.
O_AOU_RX_AXI_S_BRESP	output	[RP_COUNT-1:0][1:0]	Write response.
O_AOU_RX_AXI_S_BVALID	output	[RP_COUNT-1:0]	B valid.
I_AOU_RX_AXI_S_BREADY	input	[RP_COUNT-1:0]	B ready.

3.10 PHY and FDI (Flit Data Interface)

The FDI port set is split into two banks: PHY0 (always present) and PHY1 (present only when the design is built with +define+TWO_PHY). Both banks use the parameterized widths derived from FDI_CONFIG (see [Section 2 - FDI_CONFIG values](#)).

FDI_CONFIG	FDI_IF_WD0 (PHY0 width)	FDI_IF_WD1 (PHY1 width)	PHY1 ports present
FDI_CFG_SP_32B	256	512 (internal decode)	no
FDI_CFG_SP_64B	512	512 (internal decode)	no
FDI_CFG_SP_128B	1024	1024 (internal decode)	no
FDI_CFG_TP_32B_64B	256	512	yes (+define+TWO_PHY)

FDI_CONFIG	FDI_IF_WD0 (PHY0 width)	FDI_IF_WD1 (PHY1 width)	PHY1 ports present
FDI_CFG_TP_64B_128B	512	1024	yes (+define+TWO_PHY)

PHY0 (always present)

Signal	Direction	Width	Description
I_FDI_PL_0_VALID	input	1	PHY0 flit valid from PHY.
I_FDI_PL_0_DATA	input	FDI_IF_WD0	PHY0 flit data.
I_FDI_PL_0_FLIT_CANCEL	input	1	PHY0 flit cancel.
I_FDI_PL_0_TRDY	input	1	PHY0 ready.
I_FDI_PL_0_STALLREQ	input	1	PHY0 stall request.
I_FDI_PL_0_STATE_STS	input	[3:0]	PHY0 state status.
O_FDI_LP_0_DATA	output	FDI_IF_WD0	PHY0 flit data to PHY.
O_FDI_LP_0_VALID	output	1	PHY0 flit valid.
O_FDI_LP_0_IRDY	output	1	PHY0 link ready.
O_FDI_LP_0_STALLACK	output	1	PHY0 stall acknowledge.

PHY1 (present only when +define+TWO_PHY)

Signal	Direction	Width	Description
I_FDI_PL_1_VALID	input	1	PHY1 flit valid from PHY.
I_FDI_PL_1_DATA	input	FDI_IF_WD1	PHY1 flit data.
I_FDI_PL_1_FLIT_CANCEL	input	1	PHY1 flit cancel.
I_FDI_PL_1_TRDY	input	1	PHY1 ready.
I_FDI_PL_1_STALLREQ	input	1	PHY1 stall request.
I_FDI_PL_1_STATE_STS	input	[3:0]	PHY1 state status.
O_FDI_LP_1_DATA	output	FDI_IF_WD1	PHY1 flit data to PHY.
O_FDI_LP_1_VALID	output	1	PHY1 flit valid.
O_FDI_LP_1_IRDY	output	1	PHY1 link ready.
O_FDI_LP_1_STALLACK	output	1	PHY1 stall acknowledge.

PHY type select (present only when +define+TWO_PHY)

Signal	Direction	Width	Description
I_PHY_TYPE	input	1	PHY selector for state-status / stall-request multiplexing: 0 = PHY0, 1 = PHY1. See Section 6.6.4 .

3.11 Interrupt and Error (to Error Handler)

Signal	Direction	Width	Description
INT_REQ_LINKRESET	output	1	Link reset request.
INT_SIO_ID_MISMATCH	output	1	Slave interface ID mismatch.
INT_MIO_ID_MISMATCH	output	1	Master interface ID mismatch.
INT_EARLY_RESP_ERR	output	1	Early response error.

Signal	Direction	Width	Description
INT_ACTIVATE_START	output	1	Activate start.
INT_DEACTIVATE_START	output	1	Deactivate start.

3.12 UCIE / External Control and Status

AOU_TOP users: The signals in this table are present on AOU_CORE_TOP only. When integrating via AOU_TOP, these signals are consumed/generated internally by AOU_FDI_BRINGUP_CTRL and are not exposed as top-level ports. See [Section 3.17](#).

Signal	Direction	Width	Description
I_INT_FSM_IN_ACTIVE	input	1	Initialization done / FSM in active state indicator.
I_MST_BUS_CLEANY_COMPLETE	input	1	Master bus cleany complete.
I_SLV_BUS_CLEANY_COMPLETE	input	1	Slave bus cleany complete.
O_AOU_ACTIVATE_ST_DISABLED	output	1	Activation state disabled.
O_AOU_ACTIVATE_ST_ENABLED	output	1	Activation state enabled.
O_AOU_REQ_LINKRESET	output	1	AOU link reset request.


- I_INT_FSM_IN_ACTIVE is an input signal that indicates that the link up is complete. When starting the test, I_INT_FSM_IN_ACTIVE should be 0, and when you want to activate AOU_CORE, I_INT_FSM_IN_ACTIVE should be 1. When testing with IP standalone, you must force I_INT_FSM_IN_ACTIVE.
- I_MST_BUS_CLEANY_COMPLETE is asserted when all responses to the remote die's requests have been completed. The signal originates from the BUS_CLEANY. If the BUS_CLEANY feature is not used, the corresponding port must be tied to 1.
- I_SLV_BUS_CLEANY_COMPLETE is asserted when all responses from the remote die have been received for the requests sent by the local die. The signal originates from the BUS_CLEANY. If the BUS_CLEANY feature is not used, the corresponding port must be tied to 1.
- After AOU_CORE deactivation, the activation status transitions to DISABLED, allowing the UCIE link to go down. Once deactivation completes, O_AOU_ACTIVATE_ST_DISABLED is asserted to notify the UCIE_CORE.
- When the AOU_CORE is in the ENABLED state, O_AOU_ACTIVATE_ST_ENABLED is asserted to notify the UCIE_CORE.
- O_AOU_REQ_LINKRESET is asserted together with INT_REQ_LINKRESET when the AOU_CORE detects an AoU protocol violation, to notify the UCIE_CORE.

3.13 DFT

Signal	Direction	Width	Description
TIEL_DFT_MODESCAN	input	1	Scan-mode indicator. Tie low in functional operation; assert high from the SoC scan controller during scan shift and capture.

3.13.1 TIEL_DFT_MODESCAN Usage

TIEL_DFT_MODESCAN controls a glitch-free mux (u_sw_reset_mux, instance of AOU_SOC_GFMUX_LVT) that selects the reset source for AOU_CORE:

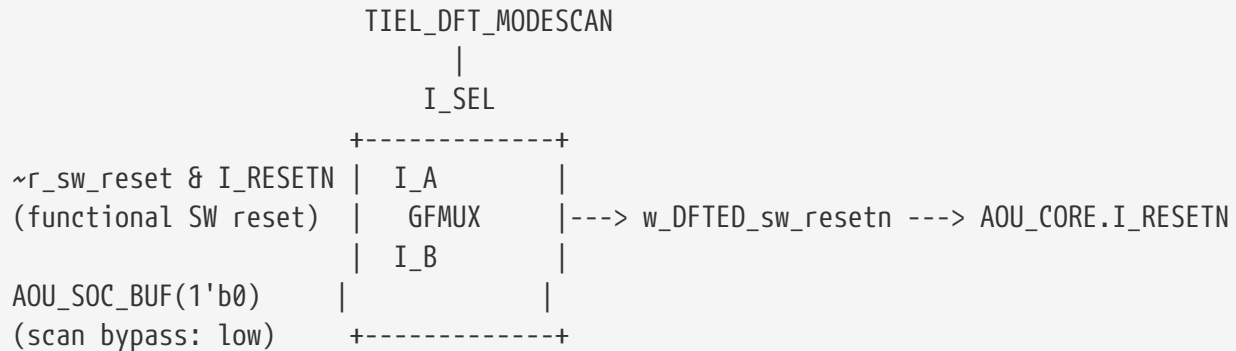

- **Functional mode** (TIEL_DFT_MODESCAN = 0): The mux selects I_A, the functional software-controlled reset path (~r_sw_reset & I_RESETN). This allows the CSR-writable SW reset to combine with the hardware reset.
- **Scan mode** (TIEL_DFT_MODESCAN = 1): The mux selects I_B, a constant 1'b0 driven through AOU_SOC_BUF (dft_persistent_buf_scan_resetn_sw). This value de-asserts the active-low SW reset, neutralizing it so that scan chains can shift freely without the software reset logic interfering with controllability or observability.

The AOU_SOC_BUF instance exists solely to prevent the synthesis tool from optimizing away the tied-low constant; it must be preserved as a persistent buffer (see [Section 8.7](#)).

The SDC file (INTEG/constraints/ao_core_top.sdc) constrains this pin with set_case_analysis 0 in functional timing mode.

3.13.2 Integrator DFT Responsibilities

The design provides internal DFT muxing only for the software-controlled reset path (w_DFTED_sw_resetn). The two primary hardware resets and all scan infrastructure are the integrator's responsibility:

Responsibility	Detail
HW reset DFT muxes	I_RESETN and I_PRESETN have no internal scan-mode bypass. The integrator must add external DFT muxes (or equivalent) on both resets so they can be held inactive (high) during scan shift and capture. Without this, all flip-flops using these resets will be uncontrollable during ATPG.
Scan chain insertion	The design has no SCAN_EN, SCAN_IN, or SCAN_OUT ports. The integrator must insert scan chains via the synthesis tool's DFT insertion flow or by adding scan ports manually.
Multi-clock scan definition	I_CLK (1 GHz core) and I_PCLK (100 MHz APB) must be defined as separate scan clocks. The ATPG tool must not shift both domains simultaneously, or lockup latches must be inserted at domain boundaries.
I/O constraints during scan	AXI and FDI interface ports should be constrained to safe values during scan (via wrapper cells or top-level scan constraints) to prevent unintended activity on external buses.
CDC synchronizer handling	The AOU_SOC_SYNCHSR instances in the ASYNC_APB_BRIDGE require scan-safe treatment. See Section 8.7 for replacement cell requirements.

3.14 FDI Bringup Control Interface (AOU_TOP only)

These signals connect AOU_TOP to the D2D adapter's physical layer for FDI bringup control. They are not present on AOU_CORE_TOP.

Signal	Direction	Width	Description
I_PL_INBAND_PRES	input	1	Inband presence detect from PL. The bringup FSM waits for this before initiating the wake handshake.
I_PL_CLK_REQ	input	1	PL clock request. LP responds with O_LP_CLK_ACK.
I_PL_WAKE_ACK	input	1	PL acknowledgement of LP wake request.
I_PL_RX_ACTIVE_REQ	input	1	PL requests RX activation. LP responds with O_LP_RX_ACTIVE_STS.
O_LP_STATE_REQ	output	[3:0]	LP state request (RESET=0, ACTIVE=1, LinkError=2, Retrain=3, L1=4).
O_LP_WAKE_REQ	output	1	LP-initiated wake request.
O_LP_CLK_ACK	output	1	LP acknowledgement of PL clock request.
O_LP_RX_ACTIVE_STS	output	1	LP RX active status in response to I_PL_RX_ACTIVE_REQ.

The four handshake pairs correspond to UCIE 3.0 FDI bringup control signals:

Handshake	LP signal	PL signal	Purpose
Wake	O_LP_WAKE_REQ	I_PL_WAKE_ACK	LP-initiated link wake from low-power
Clock	O_LP_CLK_ACK	I_PL_CLK_REQ	PL-initiated clock request
State	O_LP_STATE_REQ	(via I_FDI_PL_*_STATE_STS)	State negotiation
RX Active	O_LP_RX_ACTIVE_STS	I_PL_RX_ACTIVE_REQ	RX path activation

3.15 FDI Bringup Software Control (AOU_TOP only)

These top-level ports provide direct software control over the FDI bringup FSM. They are **not SFR-mapped**; the integrator must drive them from external logic or tie them as needed.

Signal	Direction	Width	Description
I_SW_ACTIVATE_START	input	1	Trigger FDI bringup (RESET to ACTIVE). ORed internally with the core's INT_ACTIVATE_START.
I_SW_DEACTIVATE_START	input	1	Trigger FDI teardown. ORed internally with the core's INT_DEACTIVATE_START.
I_SW_RETRAIN_REQ	input	1	Request link retrain (LP-initiated).
I_SW_LINKERROR_INJECT	input	1	Force the bringup FSM into LinkError state for debug/test.

3.16 FDI Bringup Status (AOU_TOP only)

Signal	Direction	Width	Description
O_FDI_FSM_STATE	output	[3:0]	Current FDI state. Encoding matches UCle 3.0: RESET=0, ACTIVE=1, LinkError=2, Retrain=3, L1=4, L2=5, Disabled=6.
O_FDI_LINK_UP	output	1	Asserted when the FDI bringup FSM is in the ACTIVE state.

3.17 AOU_CORE_TOP-only Ports (not on AOU_TOP)

The following signals are present on AOU_CORE_TOP but are **not** exposed on AOU_TOP. In AOU_TOP, they are consumed or generated internally by AOU_FDI_BRINGUP_CTRL.

Signal	Direction (on AOU_CORE_TOP)	Description
I_INT_FSM_IN_ACTIVE	input	FDI link active indicator. Driven by the bringup FSM's O_INT_FSM_IN_ACTIVE inside AOU_TOP.
O_AOU_ACTIVATE_ST_DISABLED	output	Protocol activation state: disabled. Fed back to bringup FSM.
O_AOU_ACTIVATE_ST_ENABLED	output	Protocol activation state: enabled. Fed back to bringup FSM.
O_AOU_REQ_LINKRESET	output	Protocol-level LinkReset request. Fed back to bringup FSM.

4. Software operation Guide

This section gives information about operation guide for the AOU_CORE.

4.1 Register Map

The complete register map — address offsets, field definitions, access types, and reset values — is generated from the SystemRDL source and maintained separately:

- [AOU Core CSR Reference](#) (generated from csr/aou-core.rdl)

To regenerate after editing the RDL source, see [DOC/csr/README.md](#).

5. Interrupts

- **INT_ACTIVATE_START** An interrupt that occurs when activation of the AoU Protocol layer is required. The interrupt can be cleared by writing '1' to the AOU_CORE.AOU_INIT.INT_ACTIVATE_START SFR.
- **INT_DEACTIVATE_START** An interrupt that occurs when deactivation of the AoU Protocol layer is required. The interrupt can be cleared by writing '1' to the AOU_CORE.AOU_INIT.INT_DEACTIVATE_START SFR.
- **INT_SIO_ID_MISMATCH** An interrupt that occurs on the AXI Slave Interface when a B or R channel response is received with an ID that was not previously issued as a request. SW can check the mismatched AXI ID by reading AOU_CORE.AXI_SLV_ID_MISMATCH_ERR SFR. The interrupt can be cleared by writing '1' to the AOU_CORE.AXI_SLV_ID_MISMATCH_ERR.SLV_B/RRESP_ERR SFR.

- **INT_MIO_ID_MISMATCH** An interrupt that occurs on the AXI Master Interface when a B or R channel response is received with an ID that was not previously issued as a request. SW can check the mismatched AXI ID by reading AOU_CORE.ERROR_INFO SFR. The interrupt can be cleared by writing '1' to the AOU_CORE.ERROR_INFO.SPLIT_B/RID_MISMATCH_ERR SFR.
- **INT_EARLY_RESP_ERR** An interrupt that occurs when, due to the Write Early Response feature, a B response has already been sent through the AXI Slave Interface, and a subsequent actual B response arrives with an Error. SW can check the ID and error type of the transaction in which the error occurred by reading AOU_CORE.WRITE_EARLY_RESPONSE SFR. The interrupt can be cleared by writing '1' to the AOU_CORE.WRITE_EARLY_RESPONSE.WRITE_RESP_ERR SFR.
- **INT_REQ_LINKRESET** An interrupt that occurs when AOU_CORE receives a protocol violation. Refer to the *AOU_CORE Micro-Architecture Specification* (DOC/MAS/interrupts-errors.adoc) for debugging details. When AOU_CORE receives a protocol violation, SW needs to do SW reset AOU_CORE and re-enter the activation sequence.

6. Activation Flow

AOU_TOP users: When using AOU_TOP, FDI bringup (RESET to ACTIVE) is handled by AOU_FDI_BRINGUP_CTRL before protocol-level activation begins. The protocol activation described in this section occurs after O_FDI_LINK_UP is asserted. See [Section 6.6](#) for the FDI bringup sequence.

The Activation of AOU_CORE begins after the UCIE Link-up process has been successfully completed. The completion of UCIE link-up is indicated by the **I_INT_FSM_IN_ACTIVE** signal of the **AOU_CORE_TOP**. There is no dependency between the activation of the local die and the remote die. Each die may initiate the activation sequence independently, which means the timing of sending **ActivateReq** can differ. Both dies must exchange **ActivateReq** and **ActivateAck** messages to transition to the **ENABLED** state, at which point credited messages can be transmitted.

Regardless of its own activation state, a die must send an **ActivateAck** in response to an **ActivateReq** from the other die, to acknowledge receipt of the request.

6.1 Credit Management Type

There are two types of Credit Management Type. Since current AOU_SPEC cannot resolve pending AXI response without Activate again. When Credit Management type is set to 1, during Deactivated state, AOU_CORE can resolve pending AXI response itself.

It can be configured through AOU_CON0.CREDIT_MANAGE, and the default value is 1.

Credit Management Type	Specification	Description
0	Based on AoU v0.5	After deactivation, if a new request is received from the remote die, no response message can be sent. To deliver the corresponding response, the system must go through activation again after deactivation. Credit management and transmission availability for both Request-related messages and Response-related messages are controlled together. Credited messages must not be sent, after the DeactivateReq message is sent. Credits must not be sent after the DeactivateAck message is sent. The Activate Interrupt and Deactivate Interrupt that occur in the process of resuming the exchange of response messages impose mandatory requirements to set Activate and Deactivate SFR.
1 (default)	Proposal by BOS	When the AoU Activity state is DEACTIVATE, manage Request-related messages (WREQ, RREQ, WDATA) and Response-related messages (RDATA, WRESP) separately. RDATA, WRESP Credited messages can be sent, after the DeactivateReq message is sent. Credits for RDATA, WRESP messages must be sent after the DeactivateAck message is sent. The Deactivate interrupt only provides a hint indicating that the remote die has started to activate / deactivate.

6.2 Activation Start

Activation can be initiated by setting `ACTIVATE_START` SFR: In the current implementation, credits are granted based on the depth of the RX FIFO, so it is required to ensure that all messages in the RX FIFO are popped before sending the `ActivateReq` message.

Activation START (via SFR `AOU_INIT.ACTIVATE_START` SFR)

- Activation can be triggered by setting `ACTIVATE_START`.
- Activation does not proceed until `I_INT_FSM_IN_ACTIVE` is asserted, since no flits can be transmitted beforehand. Therefore, it is allowed to set the `ACTIVATE_START` SFR before `I_INT_FSM_IN_ACTIVE` is asserted. If it is set before the assertion, the activation process will automatically proceed after `I_INT_FSM_IN_ACTIVE` becomes asserted.
- `AOU_INIT.ACTIVATE_START` SFR is automatically cleared to 0 once the activation is completed and `AOU_ACTIVATE_STATE` transitions to `ENABLED`.

6.3 Deactivation Start

Deactivation is initiated by setting the `AOU_INIT.DEACTIVATE_START` register. Setting this register does not immediately trigger sending a `DeactivateReq` message. The detailed conditions and sequence for deactivation can be found in the **Deactivation Sequence Flow** section. This section will only describe `AOU_INIT.DEACTIVATE_TIME_OUT_VALUE` SFR.

- When software initiates a `DeactivateReq` by setting the SFR, there may still be outstanding requests that have not yet left `AOU_CORE` FDI outputs.
- To handle this safely, a timeout mechanism is implemented to ensure that no valid packets remain in the `AOU_TX_CORE`.
- If software guarantees that all responses to its issued requests have been received before setting the deactivation start SFR, the `deactivate TIME_OUT_VALUE` (`AOU_INIT.DEACTIVATE_TIME_OUT_VALUE` SFR) can be safely

configured to a shorter duration.

The ACTIVATION_OP field encodes deactivation messages as follows:

- 2 = DeactivateReq
- 3 = DeactivateAck

6.3.1 Deactivation Sequence Flow


Once the local die issues a DeactivateReq, it can no longer provide responses to transactions initiated by the remote die. If the remote die continues to send requests or waits for responses without being notified, it may enter a hang state.


To manage this safely, the remote die must take explicit action upon receiving a DeactivateReq:

1. Immediately generate an interrupt to the CPU to inform the system software that a DeactivateReq has been received and that it must set the DEACTIVATE_START SFR. Although deactivation of the local die and the remote die operate independently, it is essential at the system level to communicate the deactivation & activation state through interrupts. This ensures that system software is explicitly informed of deactivation events and prevents the remote die from continuing to expect a response that will never arrive, thereby avoiding hang conditions.
2. This approach guarantees that once deactivation is initiated, both dies can coordinate the transition into safe and consistent DISABLED state.
3. If the software on both dies can explicitly coordinate to guarantee that all outstanding transactions have been completed and that no new transactions will be issued, then such a complicated implementation would not be necessary.

1.1. There are no new AR/AW requests to send.

1.2. Set AOU_INIT.DEACTIVATE_START_SFR

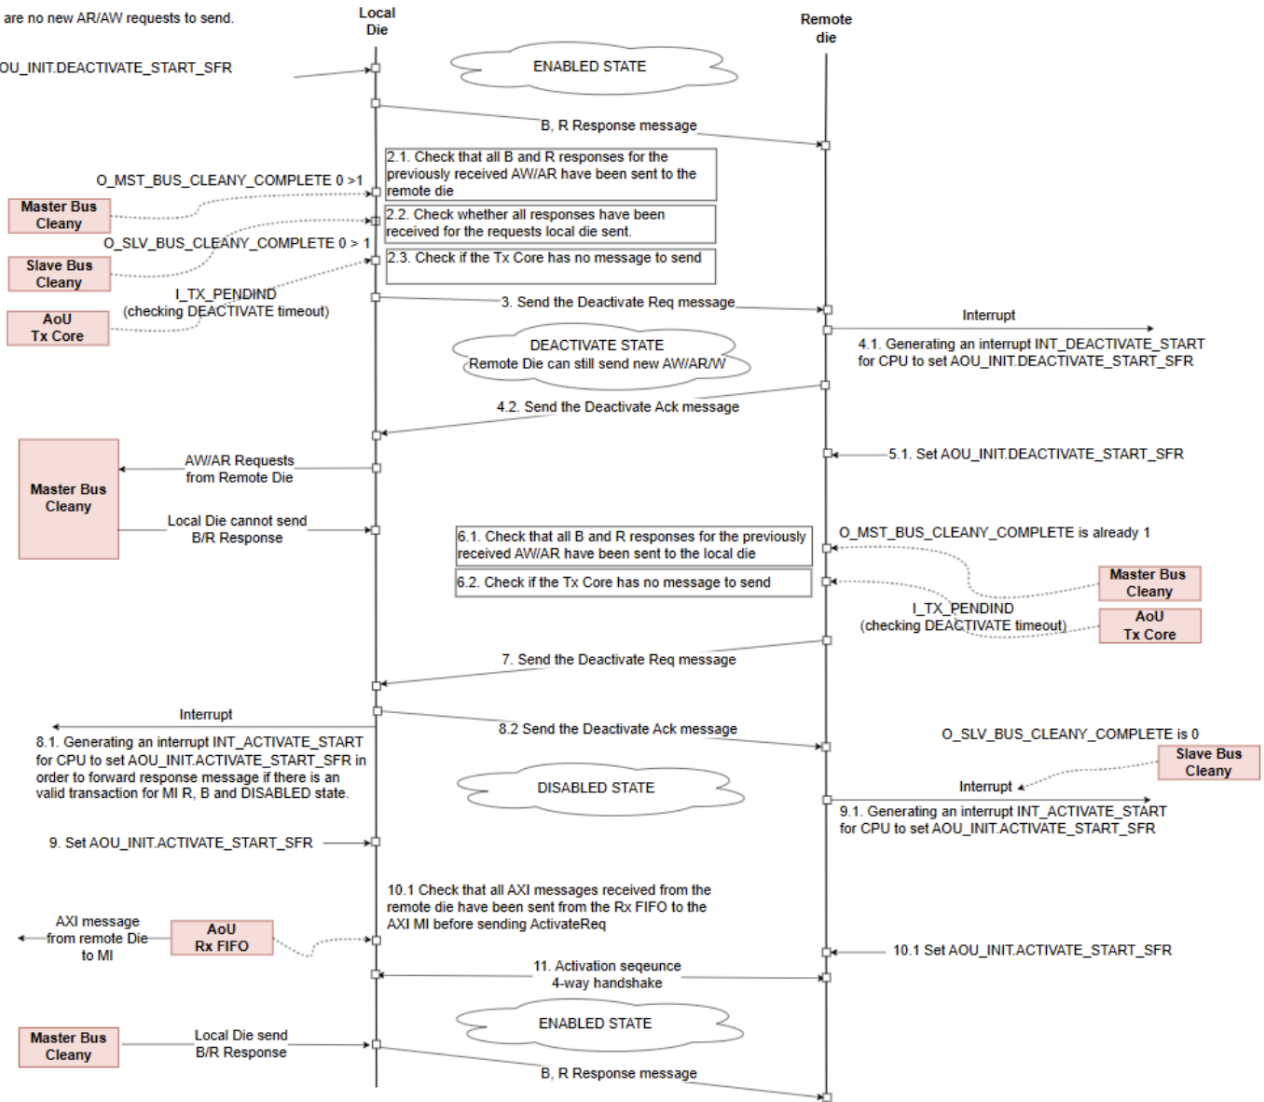

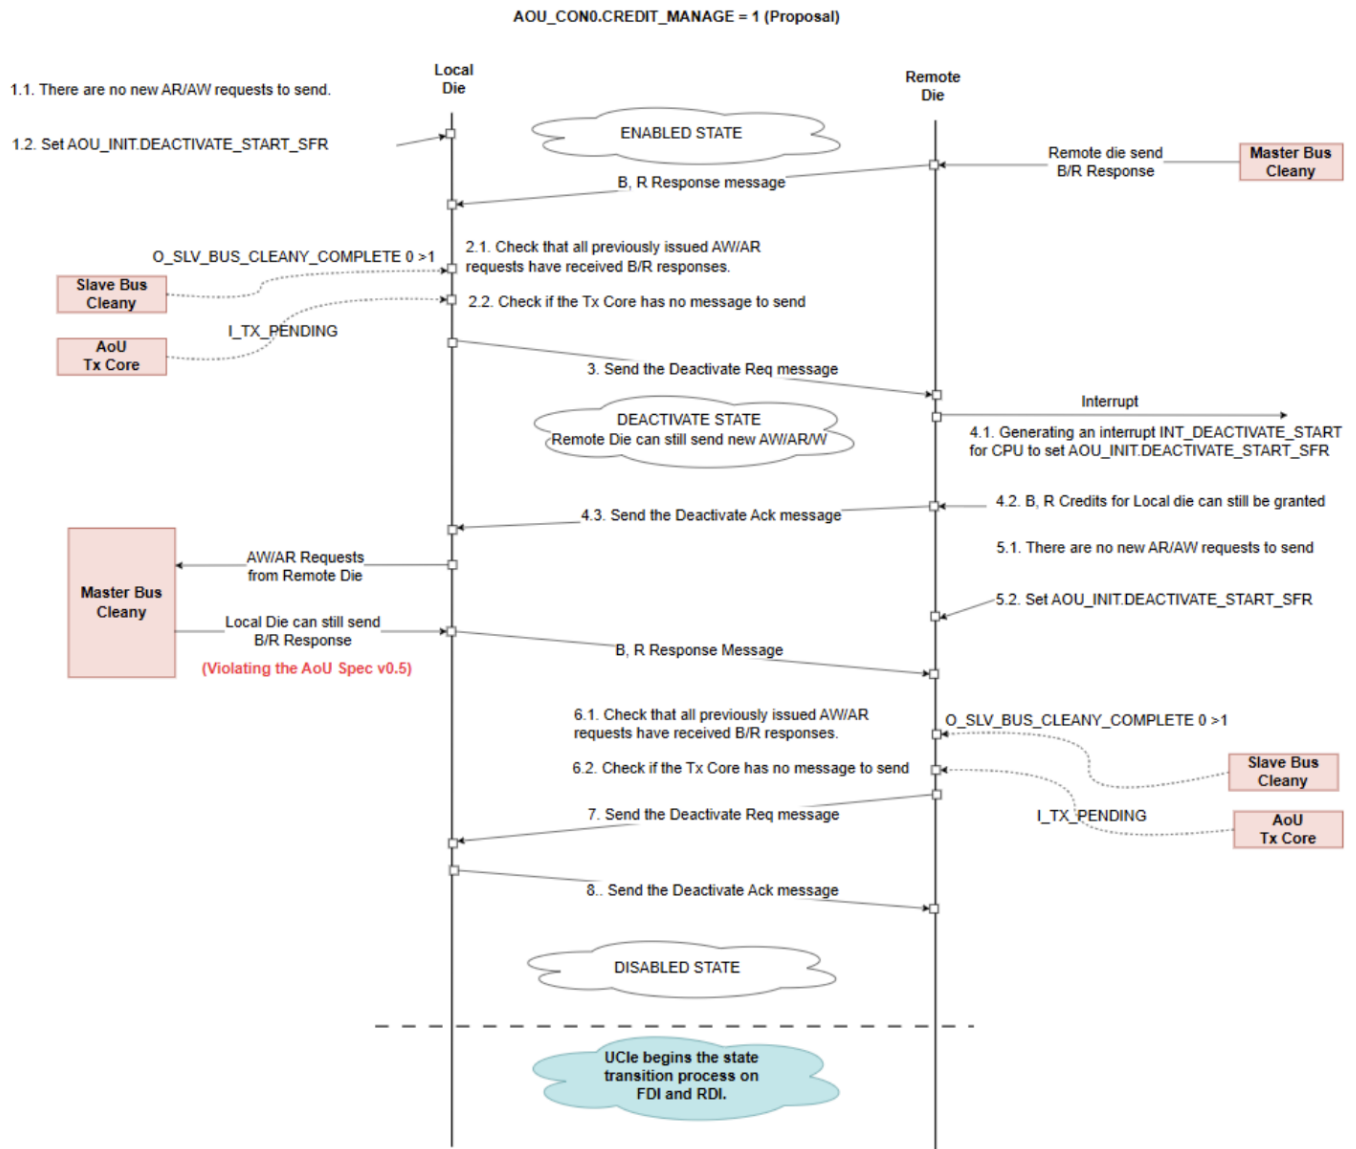

This system provides a bus cleanly-completion mechanism:

- Slave bus cleanly indicates whether the local die has received all responses to the requests it sent to the remote die.
- Master bus cleanly indicates whether the remote die has received all responses to the requests it sent to the local die.

After the local die sends a DeactivateReq, if the remote die issues a new request and expects a response, the system must re-enter the activation sequence before any response can be provided. Before sending a new ActivateReq, the Rx FIFO must be completely emptied – that is, all messages must be popped.

After deactivation, the credit count is reset, and during the subsequent activation process, credits are advertised based on the RX FIFO depth.

Therefore, before sending an ActivateReq, the local die must confirm, as described in the local die's sequence 10.1, that all messages in the RX FIFO have been popped.

To meet satisfy the condition in the local die's sequence 10.1, no backpressure must occur on the local die's MI AW/AR/W channels.

6.4 Activation/Deactivation Interrupt

Interrupt	Description
INT_ACTIVATE_START	When this interrupt is detected, either the AOU_INIT.ACTIVATE_START SFR must be set to 1. When AOU_INIT.ACTIVATE_STATE_ENABLED becomes 1, you must write 1 to the AOU_INIT.INT_ACTIVATE_START W1C SFR must be set to 1. An interrupt occurs when the following conditions are met while both AOU_INIT.ACTIVATE_START SFR is not set. There is a message to send When AOU_CON0.CREDIT_MANAGE is set to 0, if a new request arrives from the remote die after the local die has sent a DeactivateReq, this interrupt is asserted because the local die is required to return a response to the remote die. When AOU_CON0.CREDIT_MANAGE is set to 1, this interrupt can also be asserted if a new request after the remote die has sent a DeactivateReq. There is a response to be received (I_SLV_BUS_CLEANY_COMPLETE == 0) When AOU_CON0.CREDIT_MANAGE is set to 0, this interrupt can be asserted if the local die issues new AXI requests after the remote die has sent a DeactivateReq. An ActivateReq message is received from the remote die.
INT_DEACTIVATE_START	When AOU_CON0.CREDIT_MANAGE is set to 0, if the interrupt is detected, the master IP must stop sending new request messages and the AOU_INIT.DEACTIVATE_START SFR must be set to 1. When AOU_CON0.CREDIT_MANAGE is set to 1, if the interrupt is detected, this interrupt serves only as a hint that the remote die intends to deactivate. The local die can continue sending request messages. Once all messages have been sent, the AOU_INIT.DEACTIVATE_START SFR must be set. Otherwise, the remote die may end up in a state where it can never send requests again. When AOU_INIT.ACTIVATE_STATE_DISABLED becomes 1, SW must write 1 to the AOU_INIT.INT_DEACTIVATE_START W1C SFR must be set to 1. An interrupt can be asserted when AOU_INIT.DEACTIVATE_START SFR is not set and the local die receives a DeactivateReq message from the remote die.


6.5 PM Entry / LinkReset / LinkDisabled Sequence

For PM entry / LinkReset / LinkDisable entry sequence, UCIE_CORE should check AOU_CORE state and try to change state. For this sequence, resolving pending AXI transactions is necessary.

Since current AOU SPEC has no way to send AXI responses after sending DeactiveReq. CREDIT_MANAGE = 0 (Type 0) is matched with current AOU_SPEC. For this case, SW needs to check whether there is pending AXI transaction.

6.5.1 PM Entry SW Sequence

1. Write AOU_INIT.DEACTIVATE_START to 1.
2. Polling AOU_INIT.ACTIVATE_STATE_DISABLED and AOU_INIT.SLV_TR_COMPLETE & AOU_INIT.MST_TR_COMPLETE.
 - 2.1 Although AOU_CORE state becomes DISABLED, there may be pending AXI transactions.
 - 2.2 AOU_CORE issues Interrupt for resolving pending AXI transactions.
 - 2.3 Activate AOU_CORE and resolve pending AXI transactions.
 - 2.4 Deactivate AOU_CORE
3. Polling AOU_INIT.ACTIVATE_STATE_DISABLED and AOU_INIT.SLV_TR_COMPLETE & AOU_INIT.MST_TR_COMPLETE.
4. Do PM Entry Sequence on UCIE_CORE.

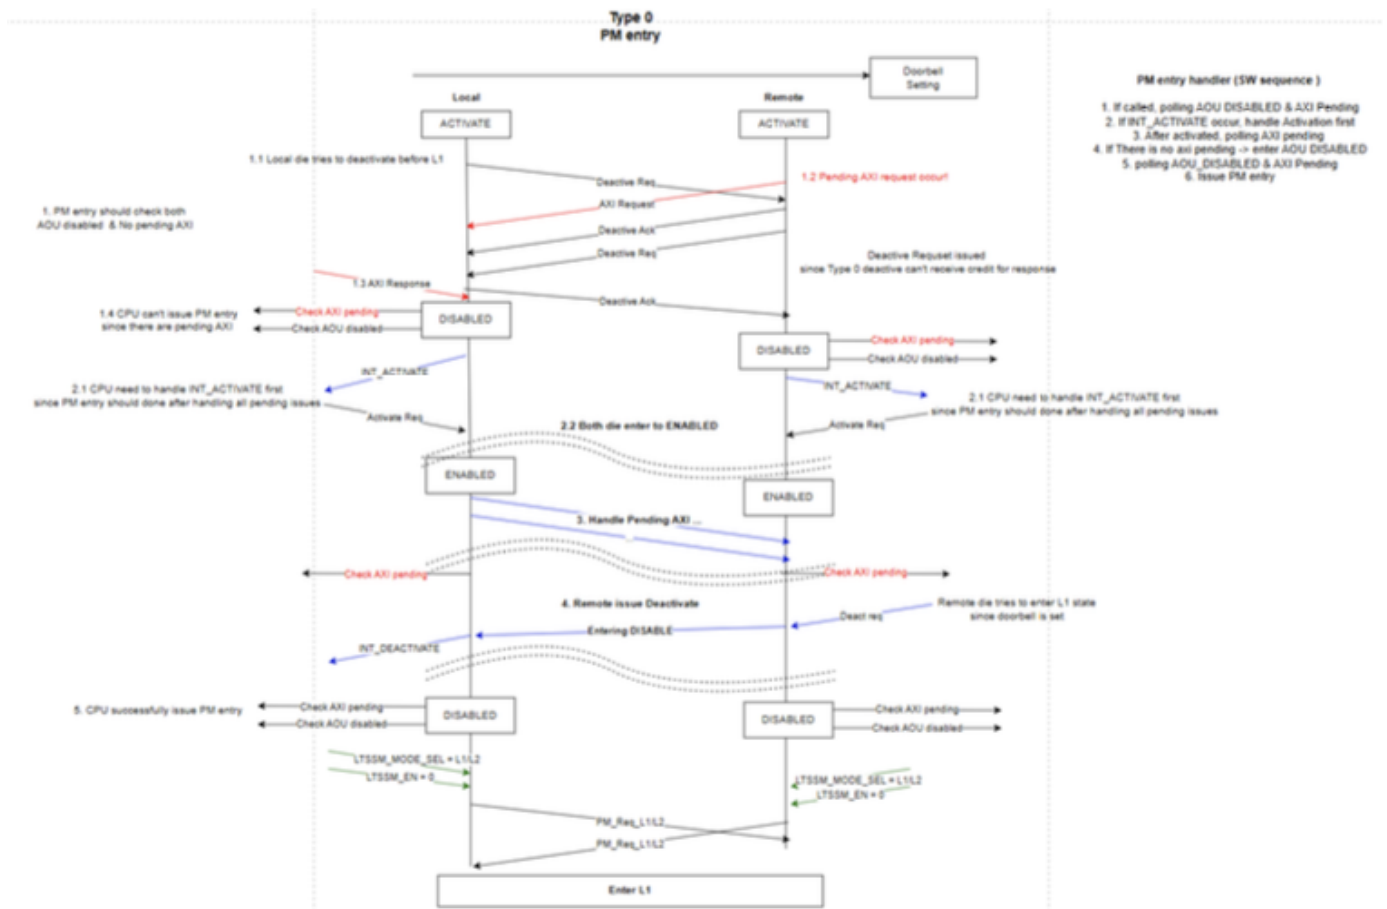

6.5.2 Link Disable SW Sequence

Same as PM entry, before doing UCIE state transition, AOU_CORE needs to be Disabled properly.

1. Write AOU_INIT.DEACTIVATE_START to 1.
2. Polling AOU_INIT.ACTIVATE_STATE_DISABLED and AOU_INIT.SLV_TR_COMPLETE & AOU_INIT.MST_TR_COMPLETE.
 - 2.1 Although AOU_CORE state becomes DISABLED, there may be pending AXI transactions. 2.2 AOU_CORE issues Interrupt for resolving pending AXI transactions. 2.3 Activate AOU_CORE and resolve pending AXI transactions. 2.4 Deactivate AOU_CORE
3. Polling AOU_INIT.ACTIVATE_STATE_DISABLED and AOU_INIT.SLV_TR_COMPLETE & AOU_INIT.MST_TR_COMPLETE.
4. Do LinkReset / LinkDisable Sequence on UCIE_CORE.

6.5.3 Link Reset SW Sequence

If AOU_CORE faces an uncorrectable error (ex. AOU SPEC violation), AOU_CORE sends LinkReset to CPU and D2D adapter. LinkReset indicates that an error has occurred which requires the Link to go down.

While handling LinkReset, SW needs to do AOU_CORE SW reset by setting AOU_CON0.AOU_SW_RESET.

6.6 FDI Bringup Flow (AOU_TOP only)

This section applies **only** when integrating via AOU_TOP. If you are using

AOU_CORE_TOP directly, you must implement an equivalent FDI state machine externally.

6.6.1 Overview


AOU_FDI_BRINGUP_CTRL manages the UCIE 3.0 FDI state machine, handling the four handshake pairs required to bring the FDI link from RESET to ACTIVE and to manage teardown, LinkError recovery, Retrain, and L1 entry/exit.

The bringup FSM operates in the I_CLK domain and uses 12 internal states. The status output O_FDI_FSM_STATE maps these to the standard UCIE 3.0 FDI state encoding.

Once the bringup FSM reaches ACTIVE, it asserts O_INT_FSM_IN_ACTIVE into AOU_CORE_TOP, which enables protocol-level activation as described in [Section 6](#).

6.6.2 Bringup Sequence

The normal (happy-path) bringup from cold reset proceeds as follows:

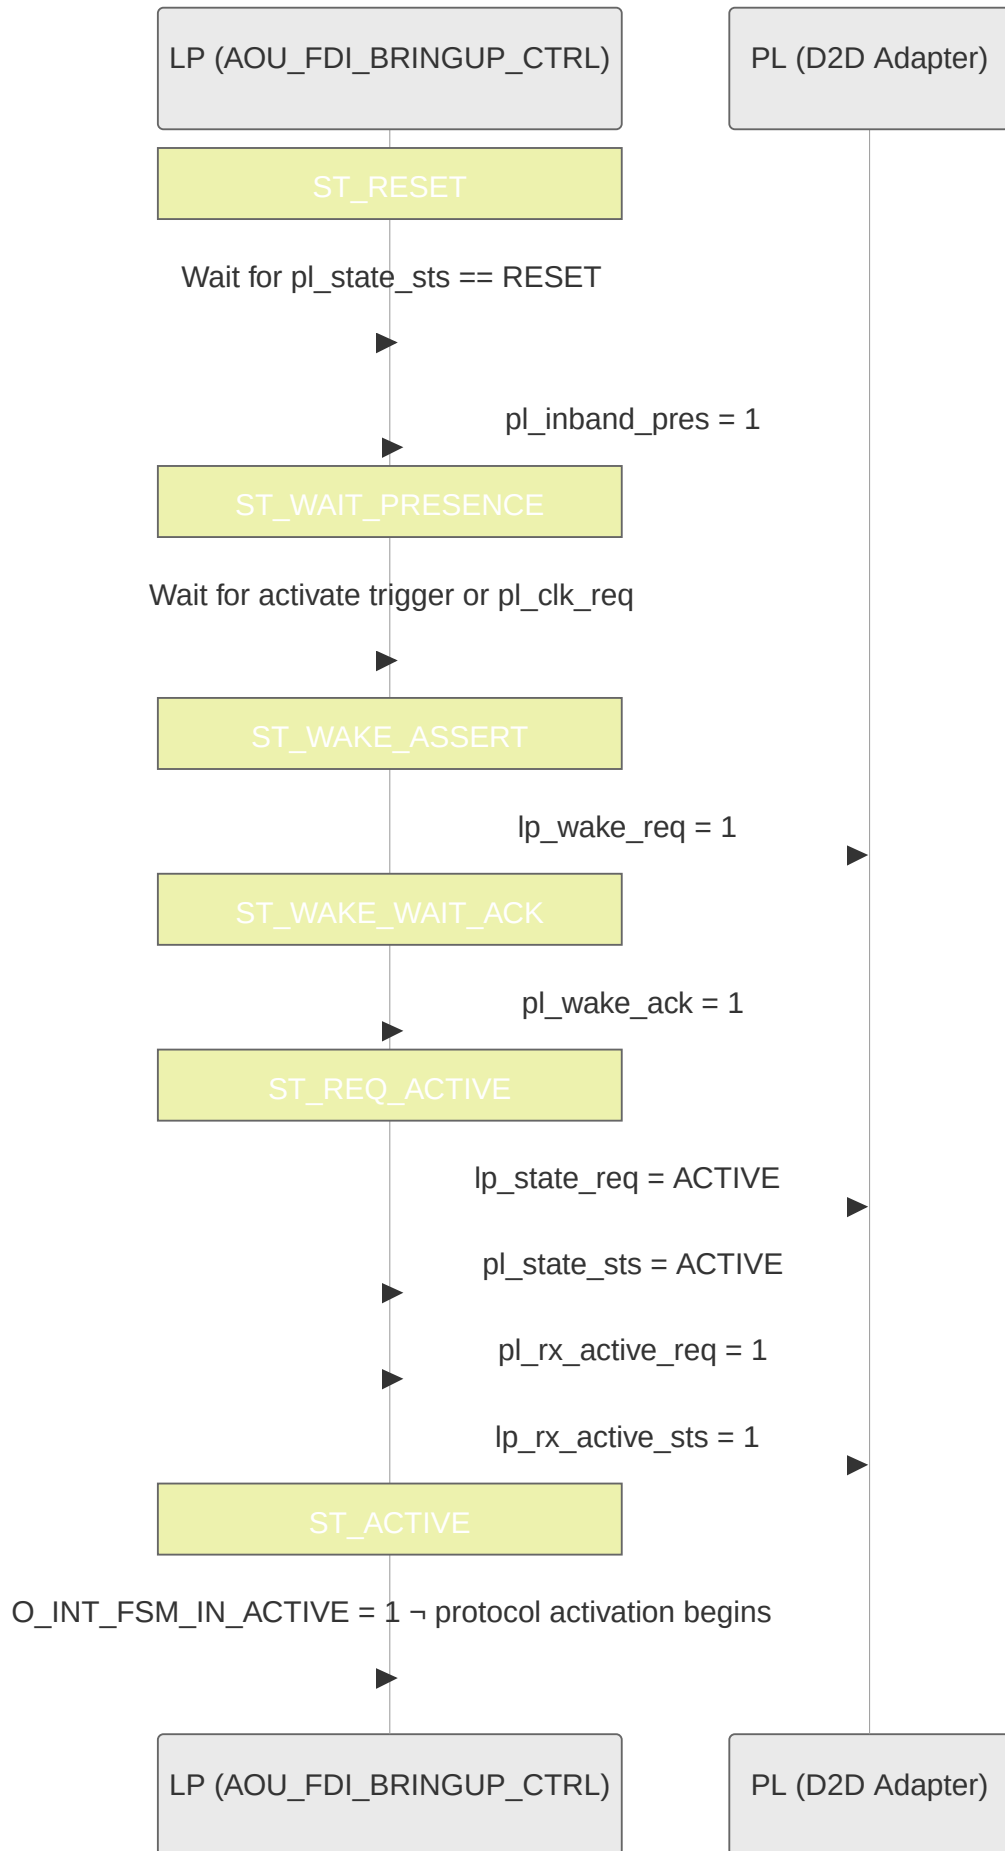

The steps in detail:

1. **RESET:** After hardware reset, the FSM waits for PL to report `pl_state_sts = RESET` and assert `pl_inband_pres` (remote die detected).
2. **WAIT_PRESENCE:** Remote die is present. The FSM asserts `lp_rx_active_sts` (if PL requests it) and waits for an activation trigger. The trigger can be:
 - `I_SW_ACTIVATE_START` (top-level port)
 - `I_INT_ACTIVATE_START` (from the core's activation controller)
 - `I_PL_CLK_REQ` (PL-initiated clock request)
3. **WAKE_ASSERT / WAKE_WAIT_ACK:** The LP-initiated wake handshake. `lp_wake_req` is asserted and the FSM waits for `pl_wake_ack`.
4. **REQ_ACTIVE:** Wake handshake complete. The FSM drives `lp_state_req = ACTIVE` and waits for both `pl_state_sts = ACTIVE` and `pl_rx_active_req = 1`.
5. **ACTIVE:** The FDI link is up. `O_FDI_LINK_UP` and `O_INT_FSM_IN_ACTIVE` are asserted. Protocol-level activation (Section 6) can now proceed.

6.6.3 Supported State Transitions

From	To	Trigger
ACTIVE	LINKERROR	<code>pl_state_sts = LinkError</code> , <code>I_AOU_REQ_LINKRESET</code> , or <code>I_SW_LINKERROR_INJECT</code>
ACTIVE	RETRAIN	<code>pl_state_sts = Retrain</code> or <code>I_SW_RETRAIN_REQ</code>
ACTIVE	DEACTIVATE	Deactivate request AND <code>AOU_ACTIVATE_ST_DISABLED</code>
ACTIVE	L1	<code>pl_state_sts = L1</code> (PL-initiated only)
LINKERROR	RESET	<code>pl_state_sts = RESET</code>
RETRAIN	ACTIVE	<code>pl_state_sts = ACTIVE</code>
RETRAIN	LINKERROR	<code>pl_state_sts = LinkError</code>
DEACTIVATE	UNWAKE_WAIT	Unconditional (1 cycle)
UNWAKE_WAIT	RESET	<code>pl_wake_ack = 0</code> AND <code>pl_state_sts = RESET</code>
L1	L1_CLK_WAKE	<code>pl_clk_req = 1</code>
L1	WAKE_ASSERT	Activate request
L1_CLK_WAKE	WAKE_ASSERT	Unconditional (1 cycle, asserts <code>lp_clk_ack</code>)

6.6.4 PHY Type Mux

Note: This PHY-type multiplexer is only present in builds compiled with `+define+TWO_PHY`. In single-PHY builds, the `pl_state_sts` and `pl_stallreq` signals routed to the bringup controller come from PHY0 unconditionally; the `I_PHY_TYPE` port and the PHY1-side ports do not exist on the module boundary.

When built with `+define+TWO_PHY`, `AOU_TOP` includes a PHY-type multiplexer controlled by `I_PHY_TYPE`:

I_PHY_TYPE	Selected PHY	pl_state_sts source	pl_stallreq source
0	PHY0 (FDI_IF_WD0)	I_FDI_PL_0_STATE_STS	I_FDI_PL_0_STALLREQ
1	PHY1 (FDI_IF_WD1)	I_FDI_PL_1_STATE_STS	I_FDI_PL_1_STALLREQ

The muxed pl_state_sts and pl_stallreq are routed to the bringup controller. FDI datapath signals (data, valid, trdy, etc.) pass through to AOU_CORE_TOP unchanged — the core's AOU_TX_FDI_IF and AOU_RX_FDI_IF handle per-PHY data-path switching internally.

6.6.5 Software Bringup Control

The I_SW_ACTIVATE_START and I_SW_DEACTIVATE_START ports on AOU_TOP are **not SFR-mapped**. They are top-level pins that must be driven by external logic (e.g. a system controller or GPIO). The bringup FSM ORs I_SW_ACTIVATE_START with the core's internal INT_ACTIVATE_START to form the combined activation trigger.

Note (GAP-15): The SFR register at address 0x8 bit[0] (activate_start) feeds the protocol-level activation controller, not the FDI bringup FSM. Writing this bit has no effect until the FDI link is already in the ACTIVE state. To trigger cold-start FDI bringup via software, assert I_SW_ACTIVATE_START on the AOU_TOP port or arrange for PL to drive pl_clk_req.

6.6.6 Known Limitations

The current implementation covers the core FDI bringup happy path. The following limitations apply (see RTL/fdi-bringup-todo.md for the full gap analysis):


ID	Description
GAP-1	No wake handshake timeout. If pl_wake_ack never arrives, the FSM hangs in ST_WAKE_WAIT_ACK indefinitely.
GAP-3	L2 (deep low-power) state is not implemented.
GAP-4	Disabled state is not implemented.
GAP-9	LP-initiated L1 entry is not supported (L1 entry is PL-initiated only).
GAP-15	SFR activate_start (0x8 bit[0]) is disconnected from the FDI bringup FSM.

7 Verification Testbench

The verification flow is built on [cocotb](#) and [cocotbext-axi](#). All verification IP is fetched from PyPI at install time — no commercial VIP is required and no AXI VIP source is vendored into this repository. The default simulator is [Verilator](#) (open source); Synopsys VCS is supported transparently for users with a commercial license.

The harness (VERIF/aou_cocotb_top.sv) instantiates two AOU_CORE_TOP cores back-to-back via their 32B (256b) single-PHY FDI interfaces. Each DUT is overridden with .FDI_CONFIG(packet_def_pkg::FDI_CFG_SP_32B) and the build does not define +define+TWO_PHY, so only the PHY0 ports are connected. The two DUT instances use different AXI data widths (512b and 256b) to exercise the width-interoperability path. The four AXI buses and two APB slave buses are exposed as flat top-level ports using cocotbext-axi's canonical signal naming (s_axi_d1_*, m_axi_d1_*, s_axi_d2_*, m_axi_d2_*, apb1_*, apb2_*) so the Python tests can use AxiBus.from_prefix(dut, "<prefix>") and ApbBus.from_prefix(dut, "<prefix>") directly. Refer to [VERIF/README.md](#) for setup, watchdogs, and the test list.

7.1 Architecture

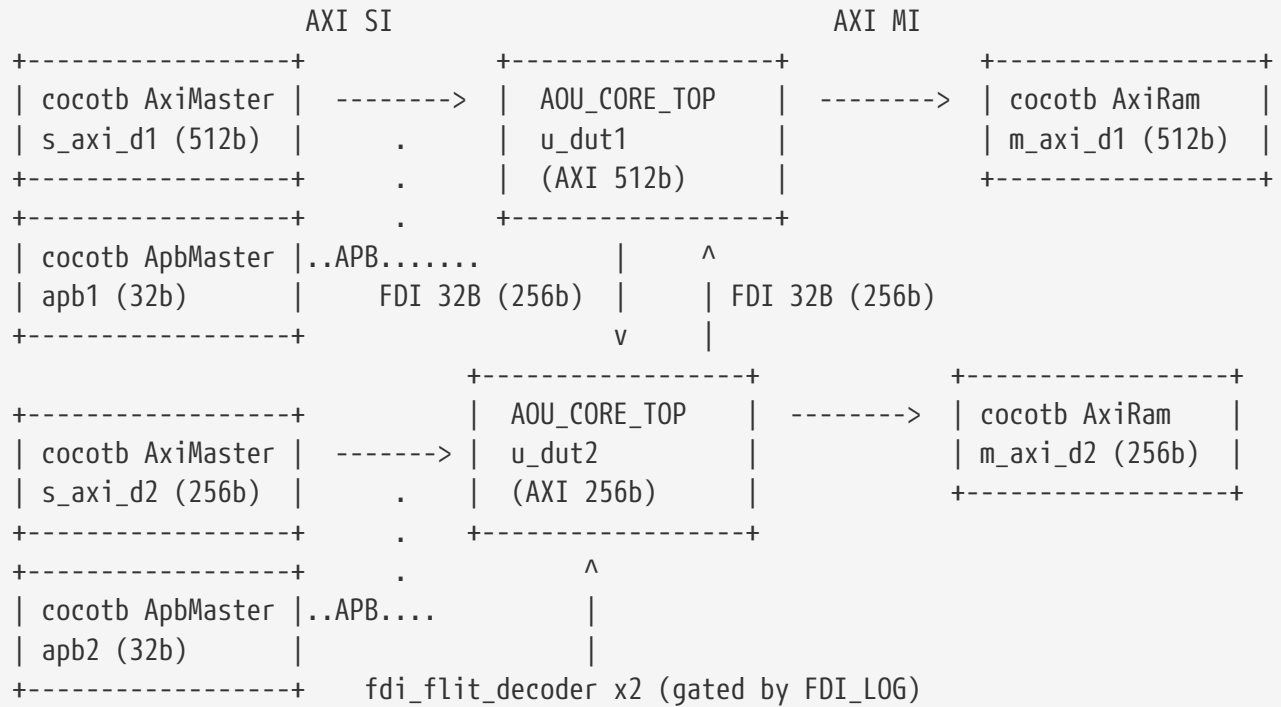

The data flow for a write transaction initiated on u_dut1's AXI slave interface is:

1. The cocotb AxiMaster on s_axi_d1 issues a 512b write.
2. u_dut1 packs the AXI transaction into AOU flit(s) and transmits via the 32B (256b) PHY0 FDI port.
3. u_dut2 receives the FDI data, unpacks it, and presents the transaction on its AXI MI.
4. The cocotb AxiRam on m_axi_d2 accepts the write into its internal memory model.
5. A subsequent read to the same address returns the stored data back through the reverse FDI path.
6. The Python test compares the read data against the originally written payload byte-for-byte.

The reverse direction (initiated from s_axi_d2 to m_axi_d1) operates symmetrically.

A separate test (`test_csr_reset_values`) reads every register defined in `csr/aou-core.rdl` over APB on both DUTs immediately after reset and *before* APB activation, verifying that every sw-readable, reset-bearing field matches its RDL-defined reset value. The expected values are built at runtime by `systemrdl-compiler`, so the check self-updates whenever the RDL changes and surfaces RDL $\neq$ RTL drift on every run.

7.2 Components

Component	Instance / role	Description
AOU_CORE_TOP	u_dut1	DUT instance 1. AXI data width = 512b (default parameters). FDI_CONFIG = FDI_CFG_SP_32B (256b PHY0; no TWO_PHY).
AOU_CORE_TOP	u_dut2	DUT instance 2. RP0-RP3 AXI data widths overridden to 256b. FDI_CONFIG = FDI_CFG_SP_32B.

Component	Instance / role	Description
cocotbext.axi.AxiMaster	s_axi_d1, s_axi_d2	Drives AXI writes/reads on each DUT's slave interface.
cocotbext.axi.AxiRam	m_axi_d1, m_axi_d2	Memory-backed AXI slave attached to each DUT's master interface. Stores writes and serves reads.
cocotbext.axi.ApbMaster	apb1, apb2	Drives the AOU activate write (paddr=0x8, pwrdata=0x1) on each DUT after reset, and reads CSRs for the reset-value test.
fdi_flit_decoder	u_fdi_dec1, u_fdi_dec2	Passive FDI decoders. Log decoded flits to dut1_fdi.log / dut2_fdi.log. Built only when FDI_LOG=1 is passed to make.

Key testbench parameters:

Parameter	Value	Description
CORE_CLK_PERIOD_NS	1 ns	Core clock period (AXI/FDI domain).
APB_CLK_PERIOD_NS	10 ns	APB clock period.
D1_AXI_DATA_WIDTH	512	u_dut1 AXI data width (bits).
D2_AXI_DATA_WIDTH	256	u_dut2 AXI data width (bits).
AXI_ADDR_WIDTH	64	AXI address width.
AXI_ID_WIDTH	10	AXI ID width.
APB_ADDR_WIDTH / APB_DATA_WIDTH	32 / 32	APB widths on both DUT slaves.
OVERALL_TIMEOUT_US	500	Per-test sim-time backstop.

7.3 Running the Testbench

From the repository root, set up the Python environment once and then invoke the testbench:

```
cd VERIF
bash setup_cocotb_env.sh      # creates VERIF/venv/, installs cocotb + deps
source venv/bin/activate
make                          # Verilator (default), 8 parallel C++ jobs
make SIM=vcs                  # Synopsys VCS
make WAVES=1                  # waveform dump (FST/VCD or FSDB/VPD)
make FDI_LOG=1                # enable fdi_flit_decoder logs
make clean                    # remove sim_build/ and generated artefacts
```

A successful run prints ***** SIMULATION PASSED ***** and writes results.xml (junit). Per-phase watchdogs (reset, APB activate, APB read, AXI write, AXI read) name the stuck phase explicitly on stalls and dump a snapshot of the relevant signal values so the simulator never spins silently.

You can also drive the flow via pytest, which calls cocotb's runner API and parametrises across every simulator on PATH:

```
pytest -v                      # all available simulators
pytest -v -k verilator         # only Verilator
```

8. IP Integration Collateral

Machine-readable integration collateral is generated from the SystemRDL register source (`csr/aou-core.rdl`) using PeakRDL. This section describes the available outputs, the single-source workflow, and regeneration instructions.

8.1 Generated Outputs (Phase 1)

Output	Path	Audience
IP-XACT register map (IEEE 1685-2014)	INTEG/ipxact/gen/aou_core_regmap.xml	SoC integration tools (register only — memoryMaps element)
C header	DOC/csr/aou_core_csr.h	Firmware / driver developers (#define macros for offsets and field masks)
Interactive HTML docs	DOC/csr/html/	Browsable register reference (any team)
UVM register model	INTEG/uvm/aou_core_csr_uvm_pkg.sv	Verification (UVM uvm_reg_block package) — drop into your UVM env's RAL tier.
Markdown register docs	DOC/csr/aou-core-csrs.md	Quick reference (also linked from Section 4.1)

Note: the in-repo cocotb testbench (Section 7) does not consume the generated UVM package — it parses `csr/aou-core.rdl` directly via `systemrdl-compiler` at runtime. The UVM package is shipped as collateral for integrators whose own verification environments are UVM-based.

8.2 Single Source of Truth

All register information lives in the SystemRDL source file `csr/aou-core.rdl`. Every output listed above is derived from this single file — there is no separate register spreadsheet or hand-maintained IP-XACT register map.

```

csr/aou-core.rdl  —(peakrdl)—> IP-XACT register map  (INTEG/ipxact/gen/)
                  —(peakrdl)—> C header              (DOC/csr/)
                  —(peakrdl)—> Markdown              (DOC/csr/)
                  —(peakrdl)—> Interactive HTML       (DOC/csr/html/)
                  —(peakrdl)—> UVM register model     (INTEG/uvm/)
                  —(systemrdl-compiler, runtime)—> CSR reset readback test
(VERIF/)

```

To modify register definitions (addresses, field widths, access types, reset values, descriptions), edit `csr/aou-core.rdl` and regenerate. **IMPORTANT:** RTL is not generated from RDL so any modification to RDL files will not be reflected in the design.

8.3 Regeneration

From the repository root, activate the Python virtual environment and run the generation script:

```
source venv/bin/activate
```

```
bash scripts/gen_collateral.sh
```

The generation script automatically validates the IP-XACT output against the official Accellera IEEE 1685-2014 XSD schema after generation. The schema files are fetched from accellera.org on first run and cached locally (in `INTEG/ipxact/schema/`, gitignored).

To validate IP-XACT files independently:

```
python3 scripts/validate_ipxact.py INTEG/ipxact/gen/aou_core_regmap.xml
```

See [DOC/csr/README.md](#) for a description of each output file and the top-level [README.md](#) for virtual-environment setup.

8.4 Planned: Full IP-XACT Component (Phase 2)

The Phase 1 IP-XACT output contains the `<memoryMaps>` element only (registers, fields, access types, reset values). A full IP-XACT component—including `<busInterfaces>` (ARM AMBA AXI4 and APB3), `<ports>`, and `<model>` parameters—is planned for a later phase.

This is deferred because `AOU_CORE_TOP.sv` uses SystemVerilog 2D packed arrays for its per-RP AXI ports (e.g., `[RP_COUNT-1:0][AXI_ID_WD-1:0]`), which have no clean single-dimension representation in IP-XACT. Once a wrapper module (`AOU_CORE_TOP_WRAP`) is created that flattens these into individual per-RP port signals, the full IP-XACT component will be generated by merging the PeakRDL register map into a hand-authored component template via `scripts/merge_ipxact.py`.

8.5 Timing Constraints (SDC)

Constraint files are located in `INTEG/constraints/`.

File	Purpose
<code>aou_core_top.sdc</code>	Clock definitions, I/O delays, CDC, false paths
<code>aou_core_top.upf</code>	Power domain and supply network

The SDC file defines timing constraints for synthesis and STA. All delay budget variables are declared at the top of the file and can be overridden by the integrating project.

8.5.1 Clock Definitions

Clock	Port	Frequency	Period
<code>clk_core</code>	<code>I_CLK</code>	1 GHz	1.000 ns
<code>clk_apb</code>	<code>I_PCLK</code>	100 MHz	10.000 ns

Both resets (`I_RESETN`, `I_PRESETN`) are constrained with `set_false_path` and should be synchronised externally or by the integrating design. The DFT scan-mode pin (`TIEL_DFT_MODESCAN`) is held at 0 via `set_case_analysis` in functional mode.

8.5.2 I/O Delay Budgeting Strategy

Two budgeting categories are used, based on whether the path between the I/O port and the nearest internal flop is

combinational or registered:

Path type	Internal budget	External budget	Rationale
Combinational	50% of clock period	50% of clock period	Mux/decode logic inside RTL takes some portion of cycle
Registered	30% of clock period	70% of clock period	Short wire path to first flop; external block gets more margin

Interface classification summary:

- **APB Slave:** Registered (via ASYNC_APB_BRIDGE 2-flop synchroniser on both sides). Constrained to clk_apb.
- **AXI Slave inputs** (address, data, handshake to FIFOs): Registered — input data is captured directly into FIFO register arrays.
- **AXI Slave outputs** (READY signals, read/bresp data): Combinational — passes through arbitration muxes.
- **AXI Master outputs** (AR/AW/W channels): Combinational — data passes through FIFO read mux, arbitration mux (AXI4MUX_3X1), and REV_RS mux.
- **AXI Master inputs** (R/B data, READY feedback): Combinational — feeds control logic and FIFO write.
- **FDI TX outputs** (DATA, VALID, IRDY): Combinational. STALLACK outputs are registered.
- **FDI RX inputs:** Combinational — data/valid pass through an input mux. FLIT_CANCEL drives both sequential and combinational logic.
- **Interrupt/control signals:** Combinational.

8.5.3 Clock Domain Crossings

The only CDC in AOU_CORE_TOP is between clk_core and clk_apb, handled by the ASYNC_APB_BRIDGE module which uses AOU_SOC_SYNCHSR (2-flop) synchronisers. The SDC uses set_clock_groups -asynchronous to exclude cross-domain paths from STA.

8.6 UPF Power Intent

The current UPF defines a single always-on power domain (PD_AOU_TOP) covering the integration scope (the AOU_TOP instance, which includes AOU_CORE_TOP and AOU_FDI_BRINGUP_CTRL, when integrating via AOU_TOP; or the AOU_CORE_TOP instance when integrating via AOU_CORE_TOP directly) with a VDD/VSS supply pair. No isolation, retention, or level-shifting strategies are required at this time. When power domains are introduced in the future, the UPF should be extended with create_power_domain for each switchable domain, along with appropriate isolation and retention strategies.

8.7 Library Cell Replacement

The RTL/LIB/ directory contains three behavioral reference models that are used by the design for reset infrastructure and clock-domain crossing. These models are functionally correct for simulation but **must be replaced** with process-appropriate implementations before synthesis or tapeout.

Module	File	Parameters	Ports	Behavioral function	Where instantiated
AOU_SOC_SYNCHSR	RTL/LIB/AOU_SOC_SYNCHSR.v	DW (width), RST_VAL (reset value), DEPTH (2/3/4)	I_CLK, I_RESETN, I_D[DW-1:0] → O_Q[DW-1:0]	Multi-stage synchroniser: per-bit shift register of depth DEPTH with async active-low reset to RST_VAL	ASYNC_APB_BRIDGE_SI, ASYNC_APB_BRIDGE_MI (CDC synchronisation)
AOU_SOC_GFMUX_LVT	RTL/LIB/AOU_SOC_GFMUX_LVT.v	DW (width)	I_SEL, I_A[DW-1:0], I_B[DW-1:0] → O_Y[DW-1:0]	Glitch-free 2:1 mux (I_SEL=0 selects I_A, I_SEL=1 selects I_B)	AOU_CORE_TOP as u_sw_reset_mux (SW reset selection)
AOU_SOC_BUF	RTL/LIB/AOU_SOC_BUF.v	DW (width)	I_A[DW-1:0] → O_Y[DW-1:0]	Non-inverting buffer (identity: O_Y = I_A)	AOU_CORE_TOP as dft_persistent_buf_scan_resetr_sw (DFT persistent buffer on scan reset)

Replacement approaches:

1. **Drop-in replacement** — Create new module definitions with the same module names and identical port/parameter interfaces, backed by standard cells or hard macros from the target process library. Replace the corresponding files in the filelist (RTL/LIB/filelist.f) with the new implementations.
2. **In-place wrapper** — Edit the provided module shells directly, replacing the behavioral assign/always bodies with instantiations of target-library primitives while keeping the module name and port interface unchanged.

Important considerations:

- AOU_SOC_SYNCHSR is on the CDC path and must be replaced with a foundry-qualified synchroniser cell (or equivalent hardened multi-flop structure) to meet metastability MTBF requirements. The DEPTH parameter must be honoured.
- AOU_SOC_GFMUX_LVT is on the reset mux path and must be replaced with a glitch-free clock/reset mux cell to avoid glitches during reset switching.
- AOU_SOC_BUF is on the DFT scan-reset path. Replace with a buffer cell that will be preserved through synthesis optimisation (typically via a dont_touch or equivalent attribute).
- The behavioral models can serve as a golden reference for verifying functional equivalence of the replacements.

8.7.1 Scan-Friendly Cell Requirements

Beyond functional correctness, each replacement cell must be compatible with ATPG scan insertion and pattern generation. The behavioral models have no scan awareness; the replacements must address this.

AOU_SOC_SYNCHSR — Scan-safe synchronizer

Standard multi-flop synchronizers cause X-propagation during scan shift because the asynchronous input crossing from the other clock domain is not controllable by the ATPG tool. The replacement synchronizer must be **scan-safe** via one of the following approaches:

1. **Built-in scan bypass mux** (preferred): The synchronizer cell includes a scan-mode mux that bypasses the asynchronous first-stage flop during shift. The ATPG tool holds the bypass active during shift and restores normal operation for capture. This is the standard approach used by foundry-provided synchronizer cells (e.g., Sdff-based sync cells with a scan-enable input).
2. **ATPG tool constraint**: If the replacement cell does not have a built-in bypass, the integrator must declare it as a synchronizer in the ATPG tool so the tool forces the input to a known value during shift (e.g., Synopsys set_dft_signal

-type constant on the synchronizer input).

Foundry-provided synchronizer cells are strongly preferred because they are pre-characterized for both metastability MTBF and scan testability.

AOU_SOC_GFMUX_LVT — Clock/reset mux recognition

This cell sits on the scan-mode reset mux path (see [Section 3.13.1](#)). The replacement must be recognized by the ATPG tool as a **clock or reset mux cell**, not a generic data mux. If the tool treats it as a regular mux, it may toggle I_SEL during scan patterns, causing reset glitches that corrupt shift-register state and invalidate test patterns.

The integrator should:

- Use a process library cell explicitly categorized as a clock/reset mux (e.g., a cell from the library's ICG or clock-mux family).
- Apply the appropriate DFT tool attribute to prevent I_SEL toggling during scan. For example, in Synopsys DFT Compiler: `set_dft_signal -view existing_dft -type ScanMux -port u_sw_reset_mux/I_SEL`.
- Verify in the ATPG tool's DFT rule check that the mux select is classified as a test-mode signal, not a scannable data input.

AOU_SOC_BUF — Optimization protection

This buffer drives the tied-low scan-reset bypass value into `u_sw_reset_mux`. Without protection, the synthesis tool will optimize it away (replacing it with a direct tie-off), which may cause the downstream reset mux to be optimized or restructured in ways that break the intended DFT architecture.

The replacement buffer must carry a `dont_touch` or `size_only` attribute (the specific attribute name depends on the synthesis tool) to ensure it survives all optimization passes, including:

- Logic optimization and constant propagation
- Incremental optimization during place-and-route
- Post-route optimization

Project Defines

Compile-time defines that apply across OCAH rather than to a single block.

Chapter 10. SIMULATION

SIMULATION selects the verification view of OCAH RTL. Set it on every simulation compile and on no other kind of build:

```
+define+SIMULATION    # VCS, Xcelium
-DSIMULATION          # Verilator, Icarus
```

OCAH's own DV flows set it; a compile driven by an adopter's testbench does not.

WARNING

Do not let **SIMULATION** reach synthesis, formal, or a gate-level flow. It enables **initial** blocks, **\$readmemh**, **\$random** and DPI exports; a tool that skips those rather than rejecting them yields a netlist that does not correspond to the RTL you verified.

Without the define, these testbench hooks are not compiled in and the plusargs are silently ignored:

Plusarg	Effect
+skip_fuse_sense	efuse_shadow_regs reports fuse sense complete immediately rather than sensing the bank through the adopter's SHIM.
+smc_shadow_reg_preload=<file> , +sep_shadow_reg_preload=<file>	Loads the shadow registers from a hex image. Takes effect only alongside +skip_fuse_sense .
+rom_bin64=<file> , +rom_hex=<file>	Preloads OCAH4CORECluster_rom_ext , the SMC CPU ROM simulation model. Applies only to integrations that use the reference memory swaps.

The define also zeroes the RMA and security-disable token and digest bits in **efuse_token_processing** at time 0, which have no reset and otherwise power up X, and routes OpenTitan assertion failures in the SEP **prim_assert** shim to **\$error** on non-UVM runs.

Two model families it enables make simulation deliberately non-deterministic: **prim_flop_2sync** and its Caliptra and Adams Bridge equivalents insert **prim_cdc_rand_delay** ahead of the synchronizer, and **prim_lfsr** and **prim_double_lfsr** randomize their default seed on simulators other than Verilator (**+prim_lfsr_use_default_seed=1** pins it). Two runs of one test are therefore not identical unless the simulator seed is fixed; record the seed with any failure you intend to reproduce.

Prim Cell Replacement and Don't-Touch Constraints

OCAH primitives (`prim_stdbuf`, `prim_and2`, `prim_clkgater`, the `prim_flop_*sync*` family, and so on) ship as behavioral models with a reference technology mapping. Adopters replace them with cells from their own library.

Two rules govern those replacements. Both are the adopter's responsibility — OCAH provides the instance names, but the names have no effect until the adopter's synthesis and place-and-route flows constrain them.

Chapter 11. Naming Requirement

Every library cell instantiated inside a replacement primitive must have `d0nt_` in its instance name.

The marker is deliberately misspelled with a zero. `dont_touch` is a reserved keyword in several tools and a common substring in ordinary comments and signal names; `d0nt_` occurs only where the protection is intended, so a name-based match cannot pick up unrelated cells.

Clock-path cells take the extended prefix `d0nt_clk`, which selects the stricter rule below. The `d0nt_*` naming convention appears in the eFuse IP (`efuse_token_digest_sha256`, `efuse_triple_redundant_comparator`) as the primary example. The adopter is expected to carry the same convention into any technology-mapped primitive wrapper they deliver. The intended name assignments are:

Instance name	Rule	Primitive
<code>d0nt_clkgate</code>	Don't touch	<code>prim_clkgater</code>
<code>d0nt_clkbuf</code>	Don't touch	<code>prim_clock_buf</code>
<code>d0nt_clkinv</code>	Don't touch	<code>prim_clock_inv</code>
<code>d0nt_clkmux</code>	Don't touch	<code>prim_clock_mux2</code>
<code>d0nt_clknand</code>	Don't touch	<code>prim_clock_nand2</code>
<code>d0nt_clkxor</code>	Don't touch	<code>prim_xor2</code>
<code>d0nt_stdbuf</code>	Size only	<code>prim_stdbuf</code>
<code>d0nt_stdinv</code>	Size only	<code>prim_flop_sync_*</code> reset inverter
<code>d0nt_an</code>	Size only	<code>prim_and2</code>
<code>d0nt_ao222</code>	Size only	<code>prim_ao222</code>
<code>d0nt_wrap_sync</code>	Size only	<code>prim_flop_sync_*</code> synchronizer flops

Keep the same names when substituting your own cells. Adopters who rename must apply the equivalent constraints to whatever names they use.

Chapter 12. Constraint Requirement

In synthesis, apply `set_size_only` to every cell matching `d0nt_*`, then `set_dont_touch` to every cell matching `d0nt_clk`. Every step after synthesis needs `size_only` alone — on all `d0nt_*` cells, clock cells included.

```
# Order matters: d0nt_clk* also matches d0nt_*, so the clock rule is applied
# second and overrides size-only for those cells.
set_size_only [get_cells -hierarchical -filter "full_name =~ *d0nt_*"]
set_dont_touch [get_cells -hierarchical -filter "full_name =~ *d0nt_clk*"]
```

`size_only` keeps the instance in the netlist—the tool may not delete, merge, absorb, restructure, or buffer through it—while still allowing it to be swapped for another library cell of the same logic function, typically to change drive strength or threshold-voltage flavor for timing, area, and EM closure. That is the intent for every replacement cell: these primitives exist because the structure matters, not because the logic function could not be inferred. Synthesis will otherwise remove them—an inverter pair that cancels, redundant AND gates that always agree, a buffer driving a single load are all dead weight to an optimizer.

Clock cells need the stronger `dont_touch` because that swap is exactly the problem. Under `size_only` the tool treats the logic function as the contract and every other property of the cell as free to change. On the clock path the function is the least of the reasons the cell was chosen. Clock buffers, inverters, muxes, and gates are picked for electrical characteristics the function does not capture—matched rise and fall times above all, and with them duty-cycle preservation, balanced input-to-output delay, and low delay variation across PVT. A functionally identical cell pulled from the general-purpose library guarantees none of that. The netlist still says "inverter", functional simulation still passes, and the duty-cycle distortion shows up only in silicon or in a timing run late enough to be expensive.

`dont_touch` removes the tool's discretion: the cell the designer selected is the cell that reaches the netlist. Sizing and insertion-delay decisions on the clock path belong to clock tree synthesis, which owns them explicitly, rather than to a logic-optimization pass making a substitution it believes is free.

12.1. After Synthesis

The `dont_touch` on `d0nt_clk*` is a synthesis-only constraint. Once synthesis has handed off the netlist, release the clock cells to `size_only` and carry that—and nothing stronger—through placement, clock tree synthesis, routing, and optimization:

```
# Post-synthesis: uniform size_only, clock cells included.
set_dont_touch [get_cells -hierarchical -filter "full_name =~ *d0nt_clk*"] false
set_size_only [get_cells -hierarchical -filter "full_name =~ *d0nt_*"]
```

The stricter rule exists to stop logic optimization from choosing the cell. Downstream, clock cell sizing is CTS's job: it cannot balance skew or close transition violations with the cells it needs to resize frozen, and freezing them there buys nothing. Keeping `size_only` in place still prevents deletion, merging, and restructuring for the rest of the flow.

Restrict the physical flow to the library's clock-cell list so a resize stays inside the same clock cell family. Sizing a `CLKBUF_D4` up to a `CLKBUF_D8` keeps the matched rise and fall behavior the cell was chosen for; substituting a general-purpose buffer of equivalent drive does not.

Additional requirements:

- **Carry `size_only` through PnR.** The `dont_touch` is synthesis-only, but `size_only` is not. A cell protected in synthesis and left entirely unprotected downstream is not protected.
- **Verify the match is non-zero.** A typo in the filter, or a flow that renames instances before the constraint is read, silently protects nothing. Check the collection size and error out if it is empty.
- **Preserve the names.** Uniquification, flattening, and name mapping must not strip the `d0nt_` substring. If your flow renames instances, derive the collections before flattening and carry them forward.
- **Restore protection after ECOs.** Flows that relax preservation constraints for clock-tree or filler ECOs — clearing `eco_honor_dont_touch`, for example — must restore `size_only` before any subsequent optimization pass.
- **Check the final netlist,** not just the post-synthesis one.

Flows other than Design Compiler and Fusion Compiler must apply the equivalent `size_only` and `dont_touch` attributes to the same collections.

Chapter 13. Simulation

These constraints have no functional effect and no simulation impact. RTL simulation compiles the technology-independent primitive models (`not(synth)`). Library cells are not on that filelist, so a simulator never elaborates them.

Confirming that the protected cells survived is therefore a gate-level netlist check. RTL simulation cannot detect their loss.

CDC Timing Constraints

OCAH ships synthesis constraints that bound the enumerated synchronization structures in the SMC, SEP, DTP and SMU. Independent CDC sign-off is still required for the assembled SoC. This section explains what those constraints do, how they are produced, and what an adopter has to change when integrating OCAH into their own flow and cell library.

The collateral ships with the harness. `integration/constraint/<block>/synth/` groups it by system while preserving the original filenames and relative path depth:

- `constraints.sdc` — the block's full timing intent, including the clock definitions and the asynchronous clock groups. It sources the two files below.
- `<block>_cdc_max_delay.tcl` — generated-clock periods and any hand-written overrides.
- `<block>_cdc_max_delay_generated.tcl` — the per-instance calls.

The shared `async_clock_groups.tcl` and `cdc_max_delay_procs.tcl` helpers are under `integration/constraint/shared/`. These are symlink indexes: the canonical per-system files remain under `hw/sys/<block>/synth/`, and the canonical shared helpers remain under `flows/synth/constraints/`. Regenerate the index with `python3 scripts/collect_integration.py` after changing the collateral inventory.

Chapter 14. Why crossings are bounded rather than timed

A clock-domain crossing has no fixed phase relationship, so it cannot be timed against a capture edge. Its correctness still depends on delay, though: every CDC element assumes the data reaches the receiver within a bounded time.

OCAH therefore keeps the crossings visible to the tool and gives each one an explicit upper bound, sized from the clock that captures it. This asserts no phase relationship—it states only how much delay the crossing tolerates while its CDC element's guarantee still holds.

Chapter 15. What is constrained

Each enumerated CDC element in each block is given its own `set_max_delay`, sized from the clock that actually captures it as read from the netlist. Muxed domains resolve to several clocks; the tightest period wins.

The elements covered are `prim_sync2/3/4` and their reset and set variants, the pulp `sync` shim, `prim_sync_reset`, `prim_sync3_pulse`, `prim_fifo_async`, `avsbus_async_fifo`, `cdc_fifo_gray`, `axi_cdc`, `prim_reg_cdc`, `prim_sync_reqack_data`, `prim_sync_data_autohs`, `cdc_2phase`, `dmi_wrapper` and Rocket `AsyncQueue`.

The bound depends on what protects the crossing:

Kind of path	Bound	Reason
Synchronizer data input	$0.5 * T_{dst}$	Leaves half a destination period of settling margin before the capture edge the synchronizer relies on.
Protocol-protected data	$1.0 * T_{dst}$	Conservative. The requirement is set by the pointer synchronizer's depth — see below.
Two-phase handshake nets	$\min(T_{src}, T_{dst})$	<code>cdc_2phase</code> runs the handshake in both directions, so the tighter domain governs. This is the module's own stated requirement.

T_{dst} rather than $\min(T_{src}, T_{dst})$ in the general case because the gating synchronizer is clocked by the destination, so its settling window is $S * T_{dst}$ and T_{src} does not enter the guarantee. This makes slow-to-fast and fast-to-slow equally safe.

15.1. Why protocol-protected data still needs a bound

The payload of a gray-pointer FIFO or a req/ack handshake never passes through a synchronizer — only the pointer or request does. So this is not a metastability constraint, and it is reasonable to ask why such a path needs a bound at all, or why a single blanket bound covering every crossing in the design would not be enough.

Because the protocol guarantees **ordering**, not **arrival**. The read side will not look at an entry until the write pointer has crossed, which takes `SYNC_STAGES` destination cycles, where `SYNC_STAGES` is the depth of the pointer synchronizer. Nothing in the protocol ensures the data physically arrived within that window; that is a timing property, and only a `max_delay` states it. Miss it and the consumer samples the entry's previous contents. There is no violation report and no metastability event, just wrong data.

So the requirement is `data path < SYNC_STAGES * T_dst`. It is not a fixed number of nanoseconds: it scales with the clock that captures the crossing, and the destination periods within one design span an order of magnitude.

Destination period	Guarantee at 3 stages
1 ns	3 ns
5 ns	15 ns
10 ns	30 ns

That is why the bound is applied per instance rather than as one global value. A single blanket `max_delay` has to be chosen once for the whole design: loose enough to be feasible on the slowest domains, it permits several times more delay than a fast crossing's pointer scheme tolerates; tight enough for the fastest domain, it over-constrains every slow crossing and burns effort closing paths that were never at risk. Sizing each crossing from its own capturing clock is the only bound that tracks the requirement.

The blanket default that the clock-group layer applies (see [The two layers](#)) is deliberately on the loose side, and for slow destination domains it is already sufficient—there the explicit per-instance constraint is redundant. It is the fast crossings that need it.

$1.0 * T_{dst}$ is therefore conservative by a factor of two to three. It is kept simple deliberately, but if wide payloads such as AXI data will not close, raising `cdc_data_delay` to $2.0 * T_{dst}$ stays inside a three-stage guarantee with a cycle to spare. An adopter whose synchronizer cells use a different depth should recompute from their own `SYNC_STAGES` rather than inheriting this factor.

Enumeration and clock resolution run once, offline, against an elaborated design, and their output is an explicit per-block file of constraint calls that is reviewed and checked in. The flow itself does no discovery. This matters to an integrator because those files are written against the OCAH hierarchy and OCAH's clock names. If you instantiate a block as delivered, you do not need to regenerate or hand-edit them: set `::cdc_hier_prefix` to where the block sits in your hierarchy, and optionally `::cdc_clock_alias` to map OCAH clock names onto your own. Regeneration is needed only when the block is reconfigured in a way that changes which CDC elements exist, since no prefix can conjure constraints for elements the file never listed (see [Integration checklist](#) item 2).

Chapter 16. The two layers

The per-instance bounds take effect only on top of a correctly configured clock-group layer. That layer decides whether the tool considers inter-domain paths at all, so it must be established first; the per-instance exceptions then refine it.

Layer 1 is `set_async_clock_groups`, defined in `flows/synth/constraints/async_clock_groups.tcl` and called from each block's `constraints.sdc`. It declares the asynchronous groups **with** `-allow_paths` and applies a loose 20 ns / -20 ns default to every inter-group clock pair.

IMPORTANT

`-allow_paths` is a prerequisite, not a refinement. In DC and PrimeTime exception priority, `set_false_path` outranks `set_max_delay` regardless of which is more specific, so a bare `set_clock_groups -asynchronous` silently masks **every** per-instance constraint. There is no warning; the exceptions simply have no effect.

The 20 ns default is what makes `-allow_paths` safe to enable. Once paths are allowed, every crossing without a specific constraint would otherwise be timed against a meaningless launch-capture relationship and fail. The default bounds them loosely so that only deliberately tightened paths appear as real requirements. It is emitted per ordered clock pair, never group-wide, because a 20 ns bound inside a group would mask genuine setup failures on synchronous paths.

Layer 2 is the per-instance `set_max_delay` output of the three steps above, with two deliberate carve-outs:

- **Paths from primary inputs revert to the default.** A synchronizer input reachable from a top-level port carries that port's `set_input_delay`, which is a budget figure rather than real logic and can alone exceed the tightened bound. Only the parent block sees both ends, so there is nothing to tighten at block level.
- **Same-clock instances are skipped.** A two-clock element wired to one clock is not a crossing, and applying `set_max_delay -ignore_clock_latency` there would replace a proper setup check with a flat budget that discards skew and uncertainty. These are emitted commented out. OCAH has five, where OpenTitan AES, KMAC and OTBN instantiate `prim_sync_reqack_data` on EDN and OTP interfaces that are separate domains upstream but share a clock in SEP.

Chapter 17. What is covered

Block	CDC elements constrained	Exceptions emitted
SMC	365	412
SEP	18	21
DTP	250	270
SMU	758	838

SMU is a flat build containing the other three, so its instance paths carry `u_smc/`, `gen_sep.u_sep/` and `u_dtp/` prefixes. It is not the sum of the parts: DTP contributes 375 elements inside SMU against 250 standalone, because it instantiates three JTAG2AXI bridges in the SMU configuration and two on its own.

Chapter 18. Integration checklist

Five things must change, three should be checked. None of them requires editing per-instance data by hand; every change is either a one-line policy edit or a regeneration.

18.1. 1. Repoint the constraints at the pin of the cell inside the prim wrapper

This is the most important change.

As shipped, the procs target the prim wrapper's own port, `prim_sync3/i_d`. That port exists only as long as the wrapper survives as a hierarchical boundary, and a prim cell is ordinary RTL: nothing stops synthesis from ungrouping it and dissolving its ports.

WARNING

Do not rely on the wrapper port surviving. Anchor the constraint to the pin of the cell instantiated **inside** the wrapper. When you swap in your own synchronizer, that cell is a real library cell or macro—a leaf that cannot be flattened—so its pins persist through optimisation regardless of what happens to the RTL hierarchy around it.

```
proc set_cdc_max_delay_prim_sync3 { inst dst_clk {delay {}} } {  
    cdc_emit "prim_sync3 $inst" [cdc_sync_delay $dst_clk $delay] to \  
        {} [get_pins "$inst/u_my_sync_cell/D" -quiet]  
}
```

`$inst` stays the wrapper instance path the generator recorded; you extend it down to the leaf. If your cell is instantiated in a generate loop or per bit, the path needs a glob. Note that generate scopes are separated by `.`, not `/`:

```
[get_pins "$inst/g_bits*.u_my_sync_cell/D" -quiet]
```

Anchoring this way makes hierarchy preservation a safety margin rather than a load-bearing dependency.

If you keep the prim wrappers unchanged, the shipped port names work as-is, but your flow must then preserve those wrapper boundaries. A `destination empty` warning appearing after `compile` where there was none at constraint-load time means a boundary was dissolved.

If you go further and replace a wrapper with a module of your own name, the enumeration that produced `<block>_cdc_max_delay_generated.tcl` knows nothing about it and those crossings end up with no per-instance bound at all. Nothing warns—an element that was never listed cannot report itself missing. Add the calls for it to `<block>_cdc_max_delay.tcl` by hand; the procs take an instance path and the capturing clock regardless of the module they were named after.

18.2. 2. Point the files at your hierarchy, or regenerate

The checked-in `<block>_cdc_max_delay_generated.tcl` files are written against the OCAH hierarchy, with paths relative to the block's own top and clocks named as OCAH names them. Two ways to make them apply to your design.

If you instantiate the block as delivered, reuse the files and set two variables. Both default to no-ops, so leaving them alone reproduces the shipped behaviour exactly.

```
# where the block sits in your hierarchy, with a trailing slash
set ::cdc_hier_prefix "u_chiplet/u_mgmt/u_smc/"

# optional: map an OCAH clock name onto the clock you actually drive it with
set ::cdc_clock_alias(SMCCLK) MY_SYS_CLK
```

The prefix is prepended to every instance path. The alias is applied wherever a clock name reaches the tool, so OCAH's names become labels in your design. You can also skip the alias and supply the period directly with `set ::cdc_clock_period(SMCCLK) <ps>`, which is enough for the synchronizer constraints; the alias additionally matters for the data-path constraints, which name the destination clock as a timing endpoint and so need it to exist.

If you reconfigure the block, regenerate instead. Changing parameters that add or remove CDC elements makes the shipped file stale in the silent direction—the constraints that should exist for new elements simply will not, and nothing warns. The prefix does not help with that.

A wrong prefix fails loudly: every path resolves to nothing, so you get a warning per constraint against a zero exception count, and `SUMMARY 0 exceptions` is itself reported as a setup failure.

Regeneration is also the right answer whenever a parent build contains the block. Instance counts there can differ from the standalone build, so a parent's file is not the child's file with a prefix.

18.3. 3. Set the default bound

The 20 ns / -20 ns figures are a starting point. Both are `info exists`-guarded in `flows/synth/constraints/async_clock_groups.tcl`, so setting them before that file is sourced overrides without editing it. `set_async_clock_groups` also accepts per-call overrides, which is the cleaner way to give one block a different default:

```
set_async_clock_groups { {CLK_A} {CLK_B} } -max_delay 8000 -min_delay -8000
```

Two constraints on the choice. The default must exceed every per-instance bound you tighten, because it also governs paths from primary inputs into synchronizers; if it is tighter than $0.5 * T_{dst}$ it becomes the binding constraint there. And tighter is not automatically better: this is a net for crossings you have not enumerated, so set it loose enough that those do not fail and rely on layer 2 for the paths that matter.

The minimum is negative deliberately. With `-allow_paths` a crossing has no meaningful hold relationship, and a zero floor would report hold violations where hold is not a real requirement.

18.4. 4. Declare your own clock groups

`set_async_clock_groups` is called from each block's `constraints.sdc` with that block's group list. Each inner list is one asynchronous group and globs are allowed. Globs resolve when the call runs, so it has to come after every `create_clock` and `create_generated_clock` it is meant to cover.

```
set_async_clock_groups {
```

```
{CLK_A CLK_A_DERIVED_*}  
{CLK_B}  
{JTAG_TCK}  
} -exclude {{PATTERN_X* PATTERN_Y*}}
```

`-exclude` takes pairs of patterns and suppresses that part of the cross product, for clock pairs that already have a `-logically_exclusive` or `-physically_exclusive` relationship that `-allow_paths` would contradict. Omit it unless you hit a TIM-184 conflict.

18.5. 5. Declare periods for generated clocks

A generated clock exposes no readable `period` attribute in Design Compiler, so any generated clock that clocks a CDC element needs an explicit entry in `<block>_cdc_max_delay.tcl`:

```
set ::cdc_clock_period(MY_DIV_CLK) [expr {4 * $clock_periods(MY_MASTER_PERIOD)}]
```

Omitting one is loud — a `no period for clock` warning per affected element — so a clean run means you have them all. Keep them in step with your `create_generated_clock` divide factors; nothing cross-checks them.

18.6. Also check

Hierarchy preservation. The reference flow applies `set_ungroup false` and `set_boundary_optimization false` to the CDC designs before `compile`. How much this matters depends on item 1: with leaf cell pins it is a safety margin, with wrapper ports it is load-bearing. Either way, your flow needs the equivalent, and it needs to name your cells rather than OCAH's.

Delay factors. `0.5 * T_dst` and `1.0 * T_dst` are policy, not physics. If your methodology wants more settling margin, change `cdc_sync_delay` and `cdc_data_delay` in `flows/synth/constraints/cdc_max_delay_procs.tcl`. Per-instance overrides are also available without editing procs: every proc takes an optional trailing delay in picoseconds, and re-stating a call in `<block>_cdc_max_delay.tcl` after the `source` wins.

Tool differences. Two Design Compiler specific choices to revisit under PrimeTime. `get_attribute <pin> clocks` is used because `get_clocks -of_objects` is PrimeTime-only, and generated clocks may expose a readable `period` in PrimeTime, making item 5 unnecessary.

Chapter 19. Confirming it worked

Load the constraints and check the summary:

```
INFO: cdc_max_delay: SUMMARY <n> exceptions, 0 warnings
```

Zero warnings is necessary but not sufficient. A pin pattern that matches nothing warns, but one that matches the **wrong** thing does not. Two stronger checks:

- **Predict the count.** Multiply each proc's number of emitted exceptions by its number of calls and compare against the summary. A mismatch localises the failure, because the size of the shortfall identifies which proc did not fire.
- **Confirm the precedence.** Layer 2 is on pins and layer 1 on clocks, and the design assumes the more specific specification wins. Verify once in your tool:

```
report_timing -to [get_pins <a synchronizer>/i_d] -nworst 1
```

The `max_delay` line must show your `0.5 * T_dst` value rather than the default. If it shows the default, layer 2 is inert and nothing else in this section applies.

`SUMMARY 0 exceptions` is treated as a setup failure and warns as such. It means the constraints did not load, not that the design has no crossings.

Chapter 20. Scope and limitations

The 20 ns default is loose by design. Against a 1 ns clock it permits twenty clock periods of delay into a synchronizer input. It is a safety net that keeps `-allow_paths` usable, not a real constraint; any crossing that matters belongs in layer 2.

Enumeration works from a fixed list of module names, so a hand-written two-flop synchronizer that uses none of them will not be found. Structural detection of crossings is what a static CDC tool does, and this flow does not attempt it. These constraints time crossings already known to exist; they are not a substitute for CDC signoff.

Because the instance list is generated offline, removals are loud but additions are silent. A stale instance path warns, but a synchronizer added without regenerating produces no warning: the constraint never exists, the path falls back to the default, and it passes timing. Regenerate and diff the result against what is checked in whenever the RTL changes.

Revision History

Chapter 21. Document history

This document tracks major revisions and updates to the OCAH Integrator Guide.

Table 11. Revision History

Version	Date	Author	Description
0.0.1	2026-06-17	Alessandro Ottaviano	Initial integrator guide draft
0.0.2	2026-08-13	Alessandro Ottaviano	Completed the documentation migration: added primitive-cell replacement and CDC constraint guidance, corrected DTP/JTAG integration, and aligned SMC/SEP paths, GPIO and DFX status descriptions, and cross-guide references with the current tree.
0.0.3	2026-08-21	Ben Melton	Added a Project Defines section covering compile-time defines that apply across OCAH, starting with SIMULATION : how to set it, the testbench hooks and models it enables, and the flows it must not reach.
0.0.4	2026-08-31	Ben Melton	Documented the SMU IC_RESET TDR slice layout (SMC, SEP, external) and marked the external slice as adopter-defined.
0.0.5	2026-09-02	Alessandro Ottaviano	Consolidated immutable ROM FW integration guidance, including the generic weak-symbol override method and SMC, SEP, and Key Manager ROM FW integration sections.
0.0.6	2026-09-10	Ben Melton	Documented the external TRNG aperture as a full-window AXI-Lite passthrough whose intra-aperture decode (SLVERR on unmapped offsets, no aliasing onto live registers) is an adopter constraint.
0.0.7	2026-09-11	Alessandro Ottaviano	Noted that smc_ext_interrupts_i is an active-high level or a pulse long enough to be sampled on clk_smc .

Chapter 22. SMU Top-Level Integration

The System Management Unit (SMU) comprises three peer subsystems: the System Management Controller (SMC), the Debug & Test Ports (DTP), and the Security Processor (SEP). The subsections below describe each subsystem’s interfaces independently, followed by the [SMU Composition](#) section that explains how they are wired together inside the SMU and how to select between the [smu.sv](#) logic-level core and the [smu_wrapper.sv](#) reference integration.

22.1. Address Map Integration

The OCAH address map has three levels, and the assignment contract splits across the integrator, SEP firmware, and SMC firmware. Assign and program them from this section; the deeper subsystem and crossbar sections referenced below give the per-block detail.

- **Chiplet envelope (integrator).** The SoC/chiplet address map assigns each subsystem a global base and reserved size, and the adopter’s fabric decoder routes those ranges to the SMU. The SMU crossbar preserves offsets and does not constrain envelope size, so the integrator owns non-overlap and containment at the SoC level.
- **SEP and SMC chiplet apertures (firmware).** Each subsystem exposes a chiplet-visible aperture whose base and size are programmable at runtime. Inbound transactions to an aperture are remapped global-to-local before they reach the subsystem.
- **Local-alias views (fixed in RTL).** Internally each subsystem addresses its own resources through a fixed local map: the SMC at [0xC000_0000](#) (see [Address Map and Aperture](#)), the SEP through its own local map. These are RTL-fixed and not integrator-assigned.

Table 12. Address-map assignment contract

Level	Owner	Assigned / programmed by
Chiplet envelope	Integrator	SoC/chiplet address map + adopter fabric decode
SEP chiplet aperture	SEP firmware	SEP_GLOBAL_BASE_ADDR / SEP_REGION_SIZE (the sep_cpu_ctrl CSRs)
SMC chiplet aperture	SMC firmware	GLOBAL_BASE / REGION_SIZE (the SMC CPU Control CSRs at 0xC001_0000)
SEP / SMC local view	Fixed (RTL)	Offsets within each subsystem’s local map (SMC local base 0xC000_0000)

Programming order and constraints: firmware programs the SEP and SMC aperture CSRs during early boot, **before any cross-subsystem AXI traffic is issued**, and must keep the two apertures non-overlapping and inside the chiplet envelope the integrator assigned. The full runtime crossbar behaviour and the exact CSR plumbing are in [Firmware programming order](#) under [SMU Composition and Internal Wiring](#).

22.1.1. Register collateral

The machine-readable address map ships in the repository tree; integrators consume it from the release checkout or tarball rather than a separate package. The source of truth is distributed by ownership: each subsystem or IP keeps its canonical register sources and generated outputs beside its implementation. The [integration/](#) directory centralizes symlinks to that distributed collateral so an integrator does not have to discover every owner-local path.

[integration/rdl/<subsystem>/](#) is a flat, self-contained list of the SystemRDL files required by that subsystem. Filenames remain unchanged, and shared dependencies appear in every subsystem that needs them. Non-RDL support files needed by relative includes remain at the [integration/rdl/](#) root—for example, [integration/rdl/i3c_defines.svh](#) sits there because both [integration/rdl/smc/registers.rdl](#) and [integration/rdl/smu/registers.rdl](#) reach it through the I3C core’s own parent-relative include ([../i3c_defines.svh](#)), and that relative path only resolves if the header is one directory above every subsystem folder that needs it. The matching generated IEEE 1685-2014 component descriptions

use the same flat subsystem organization under `integration/ipxact/<subsystem>/`.

These directories are generated symlink indexes; run `python3 scripts/collect_integration.py` after adding or moving collateral. Their canonical targets remain under `hw/sys/<sys>/regs/`, `hw/ip/<ip>/regs/`, `hw/common/axi/`, and `vendor/...` —the `regs/` element of every component’s directory layout, described in the *Getting Started Guide*. Other generated outputs remain under each owner’s `regs/gen/{c,sv,svh,py,ral,adoc,html,ipxact}/` directory.

For the architecture-level responsibility split between the integrator, firmware, and the internal SEP/SMC maps, see the *OCAH Memory Map* section of the Technical Reference Manual.

22.2. Immutable ROM FW Integration

OCAH contains three immutable ROM FW images: the SMC production ROM FW, the SEP production ROM FW, and the Key Manager production ROM FW. Each image has two integration contracts. The adopter connects and configures the corresponding ROM macro, and the final ROM FW image must be present before its processor leaves reset. Where ROM FW must initialize or access an adopter-owned peripheral outside OCAH, the image may also expose build-time integration hooks.

22.2.1. Weak-symbol override method

An immutable ROM FW image may provide selected vendor-neutral integration hooks as weak symbols. Supply an adopter implementation as a strong definition of the same symbol before the final image is frozen. The strong implementation must program the same adopter-owned IP instantiated by the RTL integration, and its signature, ABI, return values, and documented semantics must match the weak declaration.

This mechanism applies only when the ROM FW needs to interact with a peripheral outside OCAH. It is a build-time image-composition mechanism, not a runtime extension mechanism. Include the adopter implementation in the final ROM FW build so that it replaces the weak definition at link time.

Inspect the final ELF or linker map after linking. For example, `riscv64-unknown-elf-nm` must report each selected implementation as a strong symbol rather than `W`; successful linking alone does not prove that the weak default was replaced.

22.2.2. SMC ROM FW integration

Connect `smc_rom_intf_req_o` and `smc_rom_intf_rsp_i` to the adopter’s ROM implementation. In the current four-core configuration, the request provides the ROM clock, enable, and 14-bit 64-bit-word address, and the response returns one 64-bit word. This is a direct memory interface, not AXI-Lite. The 128 KiB ROM FW image must be present before the first boot; its build is under `hw/sys/smc/bootrom/prod/`.

Connect the ROM macro configuration input reached as `rom_cfg_i` and `mem_cfg_i` according to the selected macro’s contract. OCAH forwards these 11 bits without assigning technology-specific semantics; the reference `smc_ip_integration.sv` ties them to zero. Set the eFuse shadow value that drives the CPU’s `rom_flip_endianness_i` path to match the byte order of the image and ROM macro. Deasserted passes each 64-bit read word unchanged; asserted reverses its eight bytes.

Table 13. SMC ROM FW override inventory

Hook	Weak default	Rationale	Override and integration action
<code>smc_pll_init()</code>	Returns <code>SMC_PLL_SUCCESS</code> without programming PLL hardware.	PLL implementation is technology- and vendor-specific, so OCAH does not include a vendor-specific PLL driver.	Override when <code>BL0_PLLCLK</code> is asserted and the adopter's PLL requires ROM-time configuration. Provide the same <code>smc_pll_result_t smc_pll_init(void)</code> signature in the final ROM FW build. Any result other than <code>SMC_PLL_SUCCESS</code> is fatal: the ROM FW records an interface error and remains in <code>wfi</code> .
<code>i3c_release_reset()</code> , <code>cfg_ps()</code> , <code>init_i3c_ctrl()</code> , and <code>I3C_GetDriverInstance()</code>	Permit the ROM FW to boot without an active I3C implementation; I3C data operations report a hardware error.	OCAH includes an I3C implementation, but the adopter may select a different I3C target and driver for the final system.	When the ROM FW must use an active I3C target, select the open HCI implementation with <code>I3C_CORE=swap</code> , or connect the adopter's I3C target through the SMC external AXI-Lite master (<code>smc_external_req_o</code> and <code>smc_external_resp_i</code>) and link strong implementations that conform to <code>drivers/include/i3c_target_driver.h</code> .

22.2.3. SEP ROM FW integration

The SEP exposes the `sep_boot_rom` memory interface for its production ROM FW image. The detailed ROM-macro configuration, image-loading contract, and adopter override inventory are not yet documented here.

Table 14. SEP ROM FW override inventory

Hook	Status
<i>To be documented</i>	No adopter override requirement is defined here yet.

22.2.4. Key Manager ROM FW integration

The Key Manager exposes the `km_rom_mem` interface through SEP for its production ROM FW image. The detailed ROM-macro configuration, image-loading contract, and adopter override inventory are not yet documented here.

Table 15. Key Manager ROM FW override inventory

Hook	Status
<i>To be documented</i>	No adopter override requirement is defined here yet.

22.3. System Management Controller (SMC) Integration

The System Management Controller (SMC) is a subsystem responsible for power management, clock control, reset sequencing, and peripheral interface coordination. The `smc.sv` module exposes logic-level interfaces; all technology-specific components (PLLs, PVT sensors, eFuses, memory macros, GPIO padings) are instantiated externally by the adopter. See the [SMU Module Variants](#) section for how the reference wrappers demonstrate this integration.

For detailed architectural documentation about the SMC internal design, refer to [hw/sys/smc/doc/](#). The public integration examples are [hw/top/smc_wrapper.sv](#) and [hw/top/smc_ip_integration.sv](#).

22.3.1. Clock and Reset

The SMC requires three external clock inputs: `clk_smc_i` (primary system clock driving the CPU cluster, fabric, and peripherals), `clk_periph_i` (peripheral clock driving the peripherals), and `clk_ref_i` (reference clock for timing-sensitive operations). All must be generated externally by the adopter's PLL infrastructure; the SMC provides AXI-Lite control outputs for PLL configuration (see [Peripheral Interface Connections](#)). The peripheral clock is used to drive the I3C interface, I2C interface, UART interface, and AVSBus interface.

Hold `rst_cold_ni` asserted (low) while power supplies and clocks stabilize. Assert `powergood_i` once supplies reach nominal, then deassert `rst_cold_ni` (drive high) to start the boot sequence.

The SMC generates AASD (async-assert / sync-deassert) reset outputs: `rst_primary_smc_clk_no` for the main clock domain, `rst_primary_periph_clk_no` for the peripheral clock domain, and `rst_primary_ref_clk_no` for the reference clock domain. These ensure clean reset release without metastability across the system hierarchy.

Reset domain overrides are delivered through a single typed input, `jtag_reset_ctrl_i` (`smc_pkg::jtag_smc_reset_ctrl_t`), which carries all SMC reset override enables and active-low values. The DTP drives this input through the JTAG IC_RESET mechanism (see [SMC-DTP Internal Interconnection](#)); most integrations leave all override enables deasserted.

22.3.2. Address Map and Aperture

The SMC has a chiplet-visible aperture and an internal local address view. Internally, the SMC uses a fixed local base address of `0xC000_0000` and a fixed local window size of 16 MiB. SMC-local addresses (registers, memories, remapped regions) are defined as offsets from that base. The chiplet-visible aperture is adopter-defined: the chiplet or SoC address map assigns the global base and size that external masters can use to reach SMC through the SMU crossbar.

When integrating the SMC into a chiplet or SoC, the adopter assigns a system base address and reserved size for the SMC window. The system base (e.g. `0x0800_0000` in a chiplet address map) may be different from the SMC-local base `0xC000_0000`. Firmware programs the SMC `GLOBAL_BASE` / `REGION_SIZE` CSRs during early boot to match that assignment. The adopter's fabric or address decoder must route the reserved system range to the SMC block so that offsets are preserved: system base + offset maps to SMC-local `0xC000_0000` + offset.

Table 16. Address Base Mapping

View	Base Address	Description
SMC-local (internal)	<code>0xC000_0000</code>	Local alias address (fixed). Used by SMC CPU, firmware, and fabric.
System (adopter)	Adopter-defined	Base of the chiplet/SoC aperture assigned to SMC.

The SMC fabric uses three registers in the CPU Control block (`0xC001_0000`) to distinguish local from remote addresses:

- `LOCAL_BASE` (read-only, fixed at `0xC000_0000`): The local alias base. Together with `REGION_SIZE`, this is the address space the SMC CPU and internal fabric use to access SMC resources.
- `GLOBAL_BASE` (read-write, defaults to `0x4000_0000`): The system-level base address. Firmware must program this during early boot to match the adopter's system address assignment, enabling the SMC to issue outbound transactions using global system addresses.
- `REGION_SIZE` (read-write, resets to `0x0100_0000` / 16 MiB): The size of both the local alias window and the global aperture. It sizes the SMC input fabric's local/global split as well as SMU-level routing and SEP-to-SMC decode. Firmware must not program it to zero, and must keep `LOCAL_BASE + REGION_SIZE` inside the 32-bit SMC-local address space.

For full details on alias remapping and outbound routing, see the SMC Fabric documentation ([hw/sys/smc/doc/fabric.adoc](#)).

For a detailed breakdown of all components within the SMC local map, refer to the SMC Memory Map documentation ([hw/sys/smc/doc/memmap.adoc](#)).

22.3.3. AXI Interface Configuration

The SMC provides three distinct AXI interface groups serving different access paths. The `sys_axi_in` interface accepts requests from external system masters requiring access to SMC-managed resources. This interface uses a 56-bit address space with 64-bit data width and 6-bit transaction IDs. Connect this interface to your system fabric for normal operational access from application processors or DMA controllers.

The `sep_axi_in` interface provides dedicated access from the Security Processor (SEP) subsystem. This interface shares the same sizing parameters as the system input but operates independently to maintain security domain separation. Use this interface only when integrating alongside the SEP subsystem. The interface may remain unconnected if your integration does not include SEP.

The `output_axi` interface carries filtered and remapped requests from the SMC to external system resources. This interface uses an 8-bit transaction ID field to accommodate merged traffic from multiple input paths. Connect this interface to your system interconnect to allow SMC components access to external memory and peripherals. An AXI VIP or equivalent BFM is a suitable stand-in during integration verification before the real system fabric is available.

The `jtag_axi_in` interface provides debug access through JTAG mechanisms. This interface uses reduced 2-bit transaction IDs and connects to your JTAG debug infrastructure.

22.3.4. GPIO Pad Integration

GPIO pad integration requires careful attention to function assignment and pull requirements. The GPIO table below lists each signal, bump location, function, recommended pull, and integration notes. Default input/output direction is defined by `smc_pading_pkg::DefaultDirectionMap`, not by the table.

The public `hw/top/smc_wrapper.sv` and `hw/top/smc_ip_integration.sv` examples show the pad connections. For bidirectional pins, implement proper tri-state buffers controlled by the `core2pad_en_o` signals. Connect multiplexed UART, I2C, I3C, and SPI pins to external devices according to the function assignments in the GPIO table.

Configuration straps are captured separately from the GPIO table. Establish them before cold reset deassertion and keep them stable during capture. The generated reset-unit `STRAPS_LO` and `STRAPS_HI` register descriptions define the decoded bit assignments, including `BYPASS_SRAM_REPAIR` at `STRAPS_LO[13]` and `TEST_EN` at `STRAPS_LO[14]`.

22.3.5. Peripheral Interface Connections

The SMC exposes logic-level interfaces to several technology-specific subsystem components that the adopter instantiates externally. The subsections below describe each connection in turn.

Adopter Peripheral Window

The `smc_external_req_o` and `smc_external_resp_i` signals form a 32-bit AXI-Lite interface to the adopter's own peripheral register maps. Any technology- or product-specific block that SMC firmware needs to reach sits behind this window rather than on a dedicated per-peripheral port.

The window is the recommended home for the control/status registers of logic that the SMC must configure or monitor but that the SMC itself does not implement—padding configuration logic, clock generation, on-die sensors, memory-technology SHIMs, and similar adopter-owned blocks are typical examples. For example, runtime reconfiguration of pin directions, pull settings, and peripheral multiplexing is expected to be reachable here. The SMC decodes the aperture and forwards the transaction; what lives behind it is entirely adopter-defined.

The window is split into a mandatory region, whose contents and placement the SMC memory map fixes and every

integration must implement, and a supplementary region for anything else the adopter chooses to expose. For placement and the full register layout, refer to the SMC Memory Map documentation (hw/sys/smc/doc/memmap.adoc).

eFuse Interface

NOTE

This guide uses **eFuse** and **OTP** interchangeably for the same one-time programmable bank and the SHIM that fronts it. Port names mix both (`efuse_*`, `otp`); they refer to the same interface.

The eFuse interface consists of two parts:

- `efuse_bank_ctrl` — a 32-bit AXI-Lite interface used to access the SHIM control CSRs (for example, foundry-specific bank timing such as the initialization delay before sensing can begin).
- `efuse_shim_command` — the custom fuse command interface used to issue read, program, and program/read-back operations to the eFuse bank.

Adopter responsibility. The `efuse_shim_command` interface is intentionally generic and technology-neutral. The adopter must implement an Interface SHIM that converts these generic commands into the hardware signals required by their OTP macro. The conversion is driven by the adopter's own read and program state machines inside the SHIM; OCAH only defines the command/response contract, not the macro-side signaling.

The command and response payloads are exchanged as packed structs:

```
// Controller -> SHIM
typedef struct packed {
    addr_t      address;           // Target address (in bits)
    logic       program_data;      // Data to program (when programming)
    access_length_words_t access_length_words; // Number of WORD_WIDTH words to access
    command_t   command;          // READ / PROGRAM / PROGRAM_READ_BACK
    logic       valid;             // Request valid
} fuse_command_req_t;

// SHIM -> Controller
typedef struct packed {
    data_t data; // Read data (one WORD_WIDTH word)
    logic  status; // Operation status (0 = OK, 1 = error)
    logic  valid; // Response valid (qualifies `data` for one cycle)
} fuse_command_resp_t;
```

Fuse sensing protocol. During automatic sensing the controller issues a single read with `access_length_words` set to the entire bank (all `NUM_WORDS` words). The SHIM is expected to stream the bank back one `WORD_WIDTH` word at a time: for each OTP access it drives the read `data` onto `fuse_command_resp_o.data` and asserts `valid` for **exactly one cycle**. The controller consumes one word per cycle that `valid` is high, advancing to the next eFuse word on each assertion.

WARNING

`valid` must be asserted for only a single cycle per returned word. If the SHIM holds `valid` high for two cycles, the controller will sample the same `data` value a second time and count it as the data for the **next** eFuse word, shifting all subsequent words and corrupting the sensed shadow contents. The adopter's SHIM FSM is responsible for producing a clean one-cycle `valid` strobe per `WORD_WIDTH` access.

The `shadow_regs_o` output provides read-only access to the sensed fuse values. During bring-up the SMC automatically senses the fuse contents and propagates them through the shadow registers; the `smc_fuse_sense_done_o` signal indicates completion of this sensing operation.

22.3.6. Memory Subsystem Integration

The SMC includes an embedded RISC-V CPU cluster with associated memory interfaces. See [Immutable ROM FW Integration](#) for the ROM FW integration contract.

SRAM and Cache Array Integration

Scratch RAM interfaces (`smc_scratch_ram_intf_req_o` and `smc_scratch_ram_intf_rsp_i`) connect to 32 independent RAM banks totaling the scratchpad memory space. Cache memory interfaces for L1 instruction and data caches (`smc_l1_icache_*` and `smc_l1_dcache_*`) connect to tag and data RAM banks as specified in the port table.

The `smc_disable_sram_auto_init_i` input controls automatic memory initialization behavior. When deasserted, the SMC automatically zeroes all SRAM contents during bring-up. The `smc_init_mem_done_o` output indicates completion of this initialization sequence. The `SRAM_AUTO_ZERO_DISABLE` strap (`STRAPS_LO[26]`) can disable this automatic zeroing behavior if your integration requires preserved SRAM contents across resets.

22.3.7. Memory Repair Integration

The SMC implements Built-In Redundancy Analysis (BIRA) memory repair to address manufacturing defects in SRAM arrays. Repair uses redundant memory elements configured by an external repair controller, replacing defective cells detected during manufacturing test.

Memory repair executes automatically during boot after eFuse sensing completes and before MBIST operations. The process must complete successfully before the CPU cluster can safely access SRAM arrays. Repair is required on every cold reset but can be bypassed during Function Level Reset (FLR) operations for faster recovery.

Control Signals:

- `smc_fuse_sense_done_o`: eFuse controller output indicating fuse sensing completion. External DFT logic monitors this signal to trigger repair operations.
- `skip_mem_repair_o`: Reset unit output indicating repair should be bypassed. It is driven by the isolation request inputs (`isolate_req_pin_sync_smc` or the SMC isolation register), not directly by the strap. When asserted, external repair logic should skip operations and immediately assert completion status.
- `ext_boot_seq_done_i`: External signal indicating the external boot sequence (memory repair and shadow register override) is complete. Held low to pause reset release until the external agent gives the go-ahead; required before the system can continue its boot sequence

Repair Data:

The SMC fuse map does not allocate storage for repair data. Your external memory repair controller must source it from wherever your manufacturing flow keeps it and apply it to SRAM arrays according to your memory architecture.

Status Monitoring:

Repair completion and success are reported through `DFX_CTRL_STATUS.STATUS_SMU` at `0xC000_B800`. The `mem_repair_done` bit indicates completion regardless of success, while `mem_repair_success` indicates successful repair. Both bits are set by the external repair controller. The SMC ROM FW monitors these bits during initialization to verify repair completion.

Bypass Configuration:

The `BYPASS_SRAM_REPAIR` configuration strap (`STRAPS_LO[13]`) is captured into the reset-unit strap registers. Keep these three mechanisms distinct:

- No RTL path drives `skip_mem_repair_o` from this strap directly. `skip_mem_repair_o` is driven from the isolation request path.
- Production ROM reads the strap and, when asserted, skips repair-status validation and writes `MBIST_STATUS_MEM_REPAIR_BYPASSED` to scratchpad register 15 (`SMC_SCRATCH_MBIST_STATUS`, `0xC003_90F8`). It does not cause the external repair controller to skip physical repair.
- External repair logic independently honors `skip_mem_repair_o` to decide whether to bypass physical repair operations.

Use bypass mode only when SRAM arrays are guaranteed defect-free, such as during development or with known-good components.

Integration Requirements:

Provide an external memory repair controller that monitors `smc_fuse_sense_done_o` to initiate repair, respects `skip_mem_repair_o` for bypass control, reads repair data from eFuse shadow registers, applies repair configuration to SRAM arrays, asserts `ext_boot_seq_done_i` and updates DFT Control Status registers with completion status. The controller operates independently of the SMC core and must complete before the CPU cluster accesses SRAM.

For direct access to the eFuse besides from the shim, i.e. from a DFT fuse controller, adopters must ensure the integrated logic will not interfere with accesses from the OCAH's efuse interface.

During FLR operations, the isolation request path asserts `skip_mem_repair_o` to bypass repair for rapid reset sequences. Normal cold reset sequences always execute repair unless isolation is already asserted.

22.3.8. Interrupt Integration

The SMC aggregates interrupts from multiple sources into `cpu_interrupts_o`, which feeds the PLIC of the embedded RISC-V CPU cluster. The interrupt vector is assembled in `hw/sys/smc/rtl/smc_base.sv` and `hw/sys/smc/rtl/smc_peripherals/rtl/smc_peripherals.sv`. The authoritative bit-level map (RTL trace and PLIC source ID note) is maintained in a single place:

See the *SMC CPU interrupt vector map* in the Technical Reference Manual.

The SMC PLIC and CPU interrupt vector are internal. `sync_irq_o` is **not** the interrupt aggregate—it is the software-controlled `SYNC_REG.sync` global synchronisation bit in the reset unit, unrelated to PLIC interrupt delivery. Do not connect an external interrupt controller to `sync_irq_o`.

External interrupt sources visible to the adopter are `smc_ext_interrupts_i` (SMC external interrupt input vector, width `NUM_INT_TO_SMC`), `smc_ext_mailbox_interrupts_o` (outbound mailbox notifications, width `NUM_MAILBOXES`), `gpio_interrupt_o` (GPIO edge/level events, width `NUM_GPIO_WRAPS`), and `uart_interrupt_o` (UART TX/RX events, width `NUM_UART`). Drive `smc_ext_interrupts_i` as an active-high level or as a pulse that stays high long enough to be sampled on `clk_smc`. The pin is three-flop synchronized; a short asynchronous pulse can be lost. There is no edge-triggered mode. For the full PLIC source map see the SMC Technical Reference Manual.

22.3.9. Telemetry and Debug Integration

For system-level debug and telemetry, the SMC implements ATB (Advanced Trace Bus) receiver interfaces. The telemetry interface group (`telemetry_atdata_i`, `telemetry_atid_i`, `telemetry_atvalid_i`, `telemetry_atready_o`) operates in a dedicated `clk_telemetry_i` clock domain with separate `rst_telemetry_ni` reset. Connect these signals to ATB trace sources for debug data collection.

At the SMC boundary, `ext_debug_bus_i` is 512 bits wide; the SMU concatenates the adopter-visible 128-bit input with the SEP's internal 384-bit bus before driving SMC. The typed `xtrigger_ss_i` / `xtrigger_ss_o` ports are the only cross-trigger signals at the SMC boundary. The adopter-visible SMU cross-trigger interfaces are `xtrig_ctm_*`, `xtrig_clk_stop_req_i`, and the CTP groups.

Trace memory interfaces (`trace_mem_req_o` and `trace_mem_resp_i`) connect to trace RAM instances for storing captured debug data. `smc_ip_integration.sv` shows an example set of RAM instances that can be adapted to your debug requirements.

22.3.10. Bring-Up Sequence

The recommended bring-up sequence begins with asserting `rst_cold_ni` while stabilizing power supplies and clocks. Once all supplies reach nominal voltages, deassert `rst_cold_ni` to initiate the SMC boot sequence. The SMC immediately begins fuse sensing to read configuration values and security credentials.

Monitor the `smc_fuse_sense_done_o` signal to detect completion of fuse sensing. Configuration straps sampled during this phase determine boot modes and operational settings. After fuse sensing completes, the SMC releases internal subsystem resets based on the programmed reset sequencing configuration.

The CPU cluster begins executing the ROM FW after reset release. The ROM FW performs additional initialization including peripheral configuration, memory testing (unless disabled), and system health checks. The `smc_init_mem_done_o` signal indicates completion of memory initialization if automatic SRAM zeroing is enabled.

To support Function Level Reset (FLR), assert `cfg_flr_pf_active_i` to trigger a warm reset sequence. The SMC asserts `isolate_req_o` bits for the affected subsystem indices. The adopter's power controller drives `ss_reset_complete_i` high once the subsystem reset is complete; the SMC synchronizes this into the readable `SS_RESET_COMPLETE` register. Isolation remains asserted until cleared by software: SMC firmware must poll `SS_RESET_COMPLETE` and then write `ISOLATE_REQ_SMC_REG` to clear the FLR isolation latch. Do not assume isolation releases automatically on `ss_reset_complete_i`.

See `hw/top/smu_wrapper.sv` and `hw/top/smc_ip_integration.sv` for reference bring-up wiring examples covering clock, reset, strap, and peripheral connections.

22.3.11. SMC Port Interface

The SMC exposes a comprehensive set of interfaces for system integration. The following table defines all SMC top-level ports including clocks, resets, AXI interfaces, peripheral connections, and control signals. Refer to the detailed SMC documentation for internal signal descriptions and timing requirements.

Table 17. SMC Port Declaration

Interface Name	Type	Direction	Width	Description	Connection	Default value (if applicable)
<code>clk_smc_i</code>	logic	Input	1	Primary SMC clock domain. All SMC internal logic operates synchronously to this clock.	PLL output	N/A

Interface Name	Type	Direction	Width	Description	Connection	Default value (if applicable)
clk_ref_i	logic	Input	1	Reference clock domain. Used for timing-sensitive operations and peripheral interfaces.	PLL reference clock	N/A
clk_periph_i	logic	Input	1	Peripheral clock domain.	PLL peripheral clock	N/A
powergood_i	logic	Input	1	Power-good indication. Assert after supply voltages stabilize.	Power management controller	N/A
powergood_stable_o	logic	Output	1	Stabilized power-good output. Debounced version of <code>powergood_i</code> .	Reset unit → External systems	N/A
rst_cold_ni	logic	Input	1	Cold reset input (active low). Asynchronous assertion, synchronous deassertion.	System cold reset	N/A
rst_primary_ref_clk_no	logic	Output	1	Primary reset synchronized to reference clock domain (active low).	To subsystems using ref clock	N/A
rst_primary_smc_clk_no	logic	Output	1	Primary reset synchronized to SMC clock domain (active low).	To subsystems using SMC clock	N/A
sys_axi_in_req_i	smc_sys_in_56_64_12_axi_req_t	Input	-	System AXI input request (56-bit addr, 64-bit data, 6-bit ID, 12-bit user).	External system masters → Input Fabric	N/A, tie to '0 if unused
sys_axi_in_resp_o	smc_sys_in_56_64_12_axi_resp_t	Output	-	System AXI input response.	Input Fabric → External system masters	N/A, leave floating if unused
jtag_axi_in_req_i	smc_jtag_56_64_12_axi_req_t	Input	-	JTAG debug AXI request (56-bit addr, 64-bit data, 2-bit ID, 12-bit user).	JTAG debug port → Input Fabric	N/A, tie to '0 if unused
jtag_axi_in_resp_o	smc_jtag_56_64_12_axi_resp_t	Output	-	JTAG debug AXI response.	Input Fabric → JTAG debug port	N/A, leave floating if unused
axil_smc_otp_jtag_req_i	smc_pkg::smc_axil_32_32_req_t	Input	-	eFuse OTP/JTAG AXI-Lite request.	JTAG → eFuse controller	N/A, tie to '0 if unused
axil_smc_otp_jtag_resp_o	smc_pkg::smc_axil_32_32_resp_t	Output	-	eFuse OTP/JTAG AXI-Lite response.	eFuse controller → JTAG	N/A, leave floating if unused
sep_axi_in_req_i	smc_sep_in_56_64_12_axi_req_t	Input	-	SEP AXI request (56-bit addr, 64-bit data, 6-bit ID, 12-bit user).	SEP → Input Fabric	N/A, tie to '0 if unused
sep_axi_in_resp_o	smc_sep_in_56_64_12_axi_resp_t	Output	-	SEP AXI response.	Input Fabric → SEP	N/A, leave floating if unused
output_axi_req_o	smc_sys_out_56_64_8_12_axi_req_t	Output	-	Filtered and remapped AXI output request (56-bit addr, 64-bit data, 8-bit ID, 12-bit user).	Output Fabric → External system resources	N/A, leave floating if unused
output_axi_resp_i	smc_sys_out_56_64_8_12_axi_resp_t	Input	-	Filtered and remapped AXI output response.	External system resources → Output Fabric	N/A, tie to '0 if unused
efuse_bank_ctrl_req_o	smc_pkg::smc_axil_32_32_req_t	Output	-	eFuse bank control AXI-Lite request.	eFuse controller → eFuse Shim	N/A
efuse_bank_ctrl_resp_i	smc_pkg::smc_axil_32_32_resp_t	Input	-	eFuse bank control AXI-Lite response.	eFuse Shim → eFuse controller	N/A
efuse_shim_command_req_o	smc_efuse_pkg::fuse_command_req_t	Output	-	eFuse command interface request.	eFuse controller → eFuse Shim	N/A
efuse_shim_command_resp_i	smc_efuse_pkg::fuse_command_resp_t	Input	-	eFuse command interface response.	eFuse Shim → eFuse controller	N/A
shadow_regs_o	smc_efuse_pkg::efuse_map_t	Output	-	eFuse shadow register output.	eFuse controller → External systems	N/A
pll_clk_obs_i	logic	Input	1	PLL clock observation input.	PLL → GPIO padding (muxed)	N/A
pll_clk_obs_en_i	logic	Input	1	PLL clock observation enable.	Control logic → GPIO padding	N/A

Interface Name	Type	Direction	Width	Description	Connection	Default value (if applicable)
pvt_process_clk_obs_i	logic	Input	1	PVT process monitor clock observation input.	PVT → GPIO padding (muxed)	N/A
pvt_process_clk_obs_en_i	logic	Input	1	PVT process monitor clock observation enable.	Control logic → GPIO padding	N/A
cat_therm_i	logic	Input	1	CAT thermal sensor input.	CAT thermal sensor → PVT wrap	N/A, tie to '0 if unused
lsio_interface_select_o	logic	Output	[NUM_GPIO_WRAPS-1:0]	LSIO interface selection for each GPIO wrap.	GPIO padding → GPIO wraps	N/A
pad2core_i	logic	Input	[NUM_GPIO_WRAPS-1:0]	GPIO input data from pad ring to core.	GPIO padding → SMC	N/A
core2pad_o	logic	Output	[NUM_GPIO_WRAPS-1:0]	GPIO output data from core to pad ring.	SMC → GPIO padding	N/A
pad2core_en_o	logic	Output	[NUM_GPIO_WRAPS-1:0]	GPIO pad-to-core path enable.	SMC → GPIO padding	N/A
core2pad_en_o	logic	Output	[NUM_GPIO_WRAPS-1:0]	GPIO core-to-pad path enable.	SMC → GPIO padding	N/A
rst_cool_n_from_pin_i	logic	Input	1	Cool reset input from GPIO pin 61.	GPIO pin 61 → Reset Unit	N/A
clk_telemetry_i	logic	Input	1	Telemetry clock domain. Separate clock for ATB telemetry data collection.	Telemetry clock source	N/A
rst_telemetry_n_i	logic	Input	1	Telemetry reset (active low). Resets telemetry receiver logic.	Telemetry reset source	N/A
telemetry_atdata_i	telemetry_receiver_pkg::telemetry_data_t	Input	[NUM_TELMETRY_RECEIVERS-1:0]	ATB telemetry data input array.	ATB sources → Telemetry receivers	N/A
telemetry_atid_i	telemetry_receiver_pkg::atb_id_t	Input	[NUM_TELMETRY_RECEIVERS-1:0]	ATB telemetry ID input array.	ATB sources → Telemetry receivers	N/A
telemetry_atready_o	logic	Output	[NUM_TELMETRY_RECEIVERS-1:0]	ATB telemetry ready output.	Telemetry receivers → ATB sources	N/A
telemetry_atvalid_i	logic	Input	[NUM_TELMETRY_RECEIVERS-1:0]	ATB telemetry valid input.	ATB sources → Telemetry receivers	N/A
telemetry_atflushvalid_o	logic	Output	[NUM_TELMETRY_RECEIVERS-1:0]	ATB flush valid output.	Telemetry receivers → ATB sources	N/A
telemetry_atflushready_i	logic	Input	[NUM_TELMETRY_RECEIVERS-1:0]	ATB flush ready input.	ATB sources → Telemetry receivers	N/A
smc_cluster_double_error_o	logic	Output	1	Cluster double error detection output.	CPU cluster → External systems	N/A
smc_wdt_first_timeout_o	logic	Output	1	First watchdog timeout signal.	CPU cluster WDT → Reset Unit	N/A
smc_wdt_second_timeout_o	logic	Output	1	Second watchdog timeout signal.	Reset Unit → External systems	N/A
smc_region_size_o	logic	Output	[31:0]	SMC address region size output.	SMC Internal Registers → External systems	N/A
smc_ext_interrupts_i	logic	Input	[NUM_EXT_INTERRUPTS-1:0]	External interrupt inputs. Width is 256. Active-high level or a pulse long enough to be sampled on <code>clk_smc</code> . Synchronized to <code>clk_smc</code> (3-stage) in <code>smc_base</code> ; a short asynchronous pulse can be lost.	External sources → Interrupt aggregator	N/A, tie to '0 if unused

Interface Name	Type	Direction	Width	Description	Connection	Default value (if applicable)
sep_mailbox_interrupts_i	logic	Input	[7:0]	SEP → SMC mailbox interrupt inputs (8 channels). Routed to internal interrupts to the SMC CPU.	SEP → Interrupt aggregator	N/A, tie to '0 if unused
sep_wdt_reset_n_i	logic	Input	1	SEP watchdog reset (active low). Active-low polarity is inverted before routing to internal interrupts to the SMC CPU.	SEP → Interrupt aggregator	N/A
smc_fuse_sense_done_o	logic	Output	1	Fuse sense completion output.	eFuse controller → Memory repair logic	N/A
smc_fuse_reset_n_delayed_o	logic	Output	1	Delayed fuse reset output (after 16 pipeline stages).	eFuse controller → External systems	N/A
skip_mem_repair_o	logic	Output	1	Skip memory repair output.	Reset Unit → Memory repair logic	N/A
ext_boot_seq_done_i	logic	Input	1	External boot sequence completion input (memory repair and shadow register override done); gates reset release.	External boot/repair controller → eFuse controller	N/A
lc_state_i	logic	Input	[2*LC_STATE_WIDTH-1:0] (8 bits)	Lifecycle state input, differentially encoded.	Lifecycle controller → SMC Internal Registers	From SEP; tie to 8'hf0 if unused (encoded TEST_DEV)
smc_ext_mailbox_interrupts_o	logic	Output	[NUM_MAILBOXES-1:0]	External mailbox interrupt outputs (32 interrupts, mapped to IDs 156-187).	Mailbox controller → External targets	N/A
cfg_flr_pf_active_i	logic	Input	1	Function Level Reset (FLR) PF active signal.	PCIe/System → Reset Unit	N/A, tie to '0 if unused
isolate_req_o	logic	Output	[31:0]	Isolation request output for 32 subsystems.	Reset Unit → 32 subsystems	N/A
ss_reset_complete_i	logic	Input	[31:0]	Subsystem reset completion status.	32 subsystems → Reset Unit	32'hFFFFFFFF
ss_config_o	logic	Output	[31:0]	Subsystem configuration output.	Reset Unit → 32 subsystems	N/A
ss_reset_ctrl_o	smc_reset_unit_pkg::reset_ctrl_t	Output	[31:0]	Subsystem reset control output array.	Reset Unit → 32 subsystems	N/A
sync_irq_o	logic	Output	1	Software-controlled global synchronisation bit (SYNC_REG.sync in the reset unit). Not an interrupt aggregate output.	Reset unit → External	N/A
gpio_interrupt_o	logic	Output	[NUM_GPIO_WRAPS-1:0]	Raw GPIO interrupt vector from the padding, one bit per GPIO wrap (bonded + unbonded). Software reads GPIO status registers to identify the interrupt source. Already OR-reduced into peripheral_interrupts_o[30:29] internally.	smc_padding → external consumers	N/A, leave floating if unused
uart_interrupt_o	logic	Output	[NUM_UART-1:0]	Raw UART interrupt outputs, one bit per UART instance, in the peripheral clock domain. Already aggregated into peripheral_interrupts_o[21:18] internally via CDC.	uart_wrap → external consumers	N/A, leave floating if unused
smc_rom_intf_req_o	rom_req_t	Output	-	ROM memory interface request. Width depends on CPU cluster configuration	CPU cluster → Boot ROM	N/A
smc_rom_intf_rsp_i	rom_rsp_t	Input	-	ROM memory interface response. Width depends on CPU cluster configuration	Boot ROM → CPU cluster	N/A
smc_scratch_ram_intf_req_o	scratch_ram_req_t	Output	[NUM_SRAM_BANKS2-1:0]	Scratch RAM interface requests. Width depends on CPU cluster configuration	CPU cluster → Scratch RAM banks	N/A
smc_scratch_ram_intf_rsp_i	scratch_ram_rsp_t	Input	[NUM_SRAM_BANKS2-1:0]	Scratch RAM interface responses. Width depends on CPU cluster configuration	Scratch RAM banks → CPU cluster	N/A

Interface Name	Type	Direction	Width	Description	Connection	Default value (if applicable)
smc_l1_icache_tag_intf_req_o	l1_icache_tag_req_t	Output	[NUM_ICACHE_TAG_BANKS-1:0]	L1 I-cache tag interface requests. Width depends on CPU cluster configuration	CPU cluster → L1 I-cache tag banks	N/A
smc_l1_icache_tag_intf_rsp_i	l1_icache_tag_rsp_t	Input	[NUM_ICACHE_TAG_BANKS-1:0]	L1 I-cache tag interface responses. Width depends on CPU cluster configuration	L1 I-cache tag banks → CPU cluster	N/A
smc_l1_icache_data_intf_req_o	l1_icache_data_req_t	Output	[NUM_ICACHE_DATA_BANKS-1:0]	L1 I-cache data interface requests. Width depends on CPU cluster configuration	CPU cluster → L1 I-cache data banks	N/A
smc_l1_icache_data_intf_rsp_i	l1_icache_data_rsp_t	Input	[NUM_ICACHE_DATA_BANKS-1:0]	L1 I-cache data interface responses. Width depends on CPU cluster configuration	L1 I-cache data banks → CPU cluster	N/A
smc_l1_dcache_tag_intf_req_o	l1_dcache_tag_req_t	Output	[NUM_DCACHE_TAG_BANKS-1:0]	L1 D-cache tag interface requests. Width depends on CPU cluster configuration	CPU cluster → L1 D-cache tag banks	N/A
smc_l1_dcache_tag_intf_rsp_i	l1_dcache_tag_rsp_t	Input	[NUM_DCACHE_TAG_BANKS-1:0]	L1 D-cache tag interface responses. Width depends on CPU cluster configuration	L1 D-cache tag banks → CPU cluster	N/A
smc_l1_dcache_data_intf_req_o	l1_dcache_data_req_t	Output	[NUM_DCACHE_DATA_BANKS-1:0]	L1 D-cache data interface requests. Width depends on CPU cluster configuration	CPU cluster → L1 D-cache data banks	N/A
smc_l1_dcache_data_intf_rsp_i	l1_dcache_data_rsp_t	Input	[NUM_DCACHE_DATA_BANKS-1:0]	L1 D-cache data interface responses. Width depends on CPU cluster configuration	L1 D-cache data banks → CPU cluster	N/A
smc_disable_sram_auto_init_i	logic	Input	1	Disable SRAM automatic initialization.	Control logic → CPU cluster	1'b0
smc_init_mem_done_o	logic	Output	1	Memory initialization completion signal.	CPU cluster → Control logic	N/A
chiplet_is_primary_i	logic	Input	1	Chiplet is primary signal. Used for System Timer OCTS	GPIO Pading Straps (strap 25) → SMC	N/A
timer_count_o	logic	Output	[63:0]	64-bit system timer count output for Open Chiplet Time Synchronization (OCTS).	System Timer OCTS → External systems	N/A
jtag_reset_ctrl_i	smc_pkg::jtag_smc_reset_ctrl_t	Input	-	Typed reset-override control struct carrying all SMC reset override enables and active-low values. Driven by DTP via JTAG IC_RESET. Tie all enables to 0 when not used.	DTP → SMC reset unit	All enables 0
cla_gpio_enable_o	logic	Output	1	CLA GPIO enable output.	DFD controller → CLA	N/A
tdr_dbg_ctrl_clock_stop_en_i	logic	Input	1	DEBUG_CONTROL CLA clock-stop enable.	DTP → DFD	1'b0
tdr_dbg_ctrl_clocks_stopped_by_cla_o	logic	Output	1	CLA halt-clock status under enable; also drives <code>cpu_interrupts_o[NUM_EXT_INTERRUPTS+64]</code> (internal interrupt 0), bit 320.	DFD → DTP / interrupt	N/A
xtrigger_ss_i	smc_pkg::xtrigger_t	Input	-	Cross-trigger subsystem input. SMU drives from <code>dtp_xtrig_ctm_src_req[1:0]</code> . Internal SMU connection; not an SMU external port.	SMU internal: DTP <code>xtrig_ctm_src_req_o[1:0]</code> → SMC	N/A
xtrigger_ss_o	smc_pkg::xtrigger_t	Output	-	Cross-trigger subsystem output. SMU routes to <code>dtp_xtrig_ctm_dst_req[1:0]</code> . Internal SMU connection; not an SMU external port.	SMU internal: SMC → DTP <code>xtrig_ctm_dst_req_i[1:0]</code>	N/A
trace_mem_req_o	dfd_trace_mem_pkg::SinkMemPktIn_s	Output	[TRC_RAM_INSTANCES-1:0]	Trace memory interface requests.	DFD controller → Trace memory	N/A, leave floating if unused
trace_mem_resp_i	dfd_trace_mem_pkg::SinkMemPktOut_s	Input	[TRC_RAM_INSTANCES-1:0]	Trace memory interface responses.	Trace memory → DFD controller	N/A, tie to '0 if unused
ext_debug_bus_i	logic	Input	[511:0]	External debug bus input (512 bits, 16-bit aligned).	External debug sources → Debug bus aggregator	N/A, tie to '0 if unused

Interface Name	Type	Direction	Width	Description	Connection	Default value (if applicable)
test_en_i	logic	Input	1	DFT/scan test-enable. Drives clock-gater test ports and AXI cell test inputs.	Test controller → All modules	1'b0
scan_rst_ni	logic	Input	1	Scan reset (active-low). Bypasses reset synchronizers during DFT.	Test controller → All modules	1'b1

22.3.12. GPIO Pin Requirements

The SMC provides GPIO functionality with multiplexed peripheral functions and test interfaces. The following table lists the signal and bump location, assigned function, recommended pull, and GPIO-specific notes. It does not define default direction or decode configuration straps; use `smc_padrng_pkg::DefaultDirectionMap` and the generated reset-unit `STRAPS_LO` and `STRAPS_HI` register descriptions for those.

Table 18. OCAH GPIO Requirements

Index	Signal	Bump Loc	Function	Recommended Pull	GPIO Notes
0	smc_wrapper.GPIO_PAD[0]	SMC	SPI.DATA[0]	PD	
1	smc_wrapper.GPIO_PAD[1]	SMC	SPI.DATA[1]	PD	
2	smc_wrapper.GPIO_PAD[2]	SMC	SPI.DATA[2]	PD	
3	smc_wrapper.GPIO_PAD[3]	SMC	SPI.DATA[3]	PD	
4	smc_wrapper.GPIO_PAD[4]	SMC	SPI.DATA[4]	PD	
5	smc_wrapper.GPIO_PAD[5]	SMC	SPI.DATA[5]	PD	
6	smc_wrapper.GPIO_PAD[6]	SMC	SPI.DATA[6]	PD	
7	smc_wrapper.GPIO_PAD[7]	SMC	SPI.DATA[7]	PD	
8	smc_wrapper.GPIO_PAD[8]	SMC	SPI.CS	PU	
9	smc_wrapper.GPIO_PAD[9]	SMC	SPI.CLK	PD	
10	smc_wrapper.GPIO_PAD[10]	SMC	SPI.DQS	PD	
11	smc_wrapper.GPIO_PAD[11]	SMC	UART[0].RX	PU	
12	smc_wrapper.GPIO_PAD[12]	SMC	UART[0].TX	PU	
13	smc_wrapper.GPIO_PAD[13]	SMC	UART[0].RTS	PD	
14	smc_wrapper.GPIO_PAD[14]	SMC	UART[0].CTS	PD	
15	smc_wrapper.GPIO_PAD[15]	SMC	UART[1].RX	PU	
16	smc_wrapper.GPIO_PAD[16]	SMC	UART[1].TX	PU	

Index	Signal	Bump Loc	Function	Recommended Pull	GPIO Notes
17	smc_wrapper.GPIO_PAD[17]	SMC	UART[1].RTS	PD	
18	smc_wrapper.GPIO_PAD[18]	SMC	UART[1].CTS	PD	
19	smc_wrapper.GPIO_PAD[19]	SMC	UART[2].RX	PU	
20	smc_wrapper.GPIO_PAD[20]	SMC	UART[2].TX	PU	
21	smc_wrapper.GPIO_PAD[21]	SMC	UART[2].RTS	PD	
22	smc_wrapper.GPIO_PAD[22]	SMC	UART[2].CTS	PD	
23	smc_wrapper.GPIO_PAD[23]	SMC	UART[3].RX	PU	
24	smc_wrapper.GPIO_PAD[24]	SMC	UART[3].TX	PU	
25	smc_wrapper.GPIO_PAD[25]	SMC	UART[3].RTS	PD	
26	smc_wrapper.GPIO_PAD[26]	SMC	UART[3].CTS	PD	
27	smc_wrapper.GPIO_PAD[27]	SMC	I3C[0] SCL	PU	
28	smc_wrapper.GPIO_PAD[28]	SMC	I3C[0] SDA	PU	
29	smc_wrapper.GPIO_PAD[29]	SMC	I3C[2] SCL	PU	
30	smc_wrapper.GPIO_PAD[30]	SMC	I3C[2] SDA	PU	
31	smc_wrapper.GPIO_PAD[31]	SMC	I3C[3] SCL	PU	
32	smc_wrapper.GPIO_PAD[32]	SMC	I3C[3] SDA	PU	
33	smc_wrapper.GPIO_PAD[33]	SMC	I3C[4] SCL	PU	
34	smc_wrapper.GPIO_PAD[34]	SMC	I3C[4] SDA	PU	
35	smc_wrapper.GPIO_PAD[35]	SMC	I3C[5] SCL	PU	
36	smc_wrapper.GPIO_PAD[36]	SMC	I3C[5] SDA	PU	
37	smc_wrapper.GPIO_PAD[37]	SMC	I2C[0] SCL	PU	Every I2C can be programmed to act as I2C, SMBus or PMBus
38	smc_wrapper.GPIO_PAD[38]	SMC	I2C[0] SDA	PU	
39	smc_wrapper.GPIO_PAD[39]	SMC	I2C[0] SMB_A	PU	SMBus Alert
40	smc_wrapper.GPIO_PAD[40]	SMC	I2C[0] SMB_D	PU	SMBus Suspend
41	smc_wrapper.GPIO_PAD[41]	SMC	I2C[1] SCL	PU	

Index	Signal	Bump Loc	Function	Recommended Pull	GPIO Notes
42	smc_wrapper.GPIO_PAD[42]	SMC	I2C[1] SDA	PU	
43	smc_wrapper.GPIO_PAD[43]	SMC	I2C[1] SMB_A	PU	SMBus Alert
44	smc_wrapper.GPIO_PAD[44]	SMC	I2C[1] SMB_D	PU	SMBus Suspend
45	smc_wrapper.GPIO_PAD[45]	SMC	I2C[2] SCL	PU	
46	smc_wrapper.GPIO_PAD[46]	SMC	I2C[2] SDA	PU	
47	smc_wrapper.GPIO_PAD[47]	SMC	I2C[2] SMB_A	PU	SMBus Alert
48	smc_wrapper.GPIO_PAD[48]	SMC	I2C[2] SMB_D	PU	SMBus Suspend
49	smc_wrapper.GPIO_PAD[49]	SMC	AVS.CLOCK	PU	
50	smc_wrapper.GPIO_PAD[50]	SMC	AVS.MDATA	PU	
51	smc_wrapper.GPIO_PAD[51]	SMC	AVS.SDATA	PU	
52	smc_wrapper.GPIO_PAD[52]	SMC	Thermal Emergency N	PU	
53	smc_wrapper.GPIO_PAD[53]	SMC	Isolate Request	PD	
54	smc_wrapper.GPIO_PAD[54]	SMC	SPI DQS Loopback	PD	
55	smc_wrapper.GPIO_PAD[55]	SMC	System Timer Sync Load	PD	
56	smc_wrapper.GPIO_PAD[56]	SMC	System Timer Credit Count	PD	
57	smc_wrapper.GPIO_PAD[57]	SMC	Boot Stall	PD	Stall after fuse sensing to override shadow register values. Boot will resume when this GPIO is released. This value can be overridden by the value specified over JTAG using the boot_stall_jtag_ovrd and boot_stall_jtag_val signals from DTP.
58	smc_wrapper.GPIO_PAD[58]	SMC	OCCP Interface	PD	
59	smc_wrapper.GPIO_PAD[59]	SMC	Reserved	PD	
60	smc_wrapper.GPIO_PAD[60]	SMC	Reserved	PD	
61	smc_wrapper.UNBONDED_GPIO[61]	SMC	Cool Reset In	PU	Not packaged out
62	smc_wrapper.UNBONDED_GPIO[62]	SMC	Cool Reset Out	PU	Not packaged out
63	smc_wrapper.UNBONDED_GPIO[63]	SMC	I3C[1] SCL	PU	Not packaged out
64	smc_wrapper.UNBONDED_GPIO[64]	SMC	I3C[1] SDA	PU	Not packaged out
65	smc_wrapper.PAD_JTAG_IN_TCK	?	PTAP TCK		

Index	Signal	Bump Loc	Function	Recommended Pull	GPIO Notes
66	smc_wrapper.PAD_JTAG_IN_TRSTN	?	PTAP TRST		
67	smc_wrapper.PAD_JTAG_IN_TDI	?	PTAP TDI		
68	smc_wrapper.PAD_JTAG_IN_TMS	?	PTAP TMS		
69	smc_wrapper.PAD_JTAG_IN_TDO	?	PTAP TDO		
70	smc_wrapper.PAD_JTAG_OUT_TCK	?	STAP TCK		
71	smc_wrapper.PAD_JTAG_OUT_TRSTN	?	STAP TRST		
72	smc_wrapper.PAD_JTAG_OUT_TDI	?	STAP TDI		
73	smc_wrapper.PAD_JTAG_OUT_TMS	?	STAP TMS		
74	smc_wrapper.PAD_JTAG_OUT_TDO	?	STAP TDO		
75	smc_wrapper.PAD_REFCLK	SMC	BP_REFCLK_VDD_SYS		
76	smc_wrapper.PAD_RESETN	SMC	BP_RESETN		
77	smc_wrapper.PAD_POWERGOOD	SMC	BP_POWERGOOD		
78		SEP	OTP[0]		
79		SEP	OTP[1]		
80		SEP	OTP[2]		
81		SEP	OTP[3]		
82		SEP	OTP[4]		
83		SEP	OTP[5]		
84		SMC	PVT[0]		
85		SMC	PVT[1]		
86			VDDIO		
87	smc_wrapper.PLL_CLK_OBS_PAD	SMC	PLL clock OBS	PD	PLL clock observation pin
88	smc_wrapper.PVT_CLK_OBS_PAD	SMC	PVT RO	PD	Process sensor RO output
89					

For multi-chiplet systems, the **PRIMARY_CHIPLET** strap (**STRAPS_LO[25]**) determines whether the chiplet operates as primary or secondary. The primary chiplet's System Timer OCTS generates synchronization pulses (**timer_sync_load_o**, **timer_cnt_credit_o**) that secondary chiplets receive to maintain coherent timestamps across the system.

22.4. Debug & Test Ports (DTP) Integration

22.4.1. Configuration

The cross-trigger topology is fixed at elaboration by `ntp_pkg`, a committed source file at `hw/sys/ntp/rtl/ntp_pkg.sv`. `DEFAULT_NUM_CTP`, `DEFAULT_NUM_INT_CT`, and `DEFAULT_NUM_CLK_STOP_REQ` there set the `XTRIG_NUM_CTP`, `XTRIG_NUM_INT_CT`, and `XTRIG_NUM_CLK_STOP_REQ` localparams of `ntp`, so a different port count is applied by editing that package rather than by overriding parameters at the instantiation. The remaining DTP parameters, including `XTRIG_INT_CT_MODE` and every `JTAG_*` enable, are set at the instantiation as shown below.

Include the DTP in your build using Bender target `ntp`, which pulls in the DTP RTL together with the JTAG and cross-trigger IPs it instantiates. The legacy filelist `hw/sys/ntp/rtl/config/ntp.f` covers only the JTAG portion of the hierarchy and is not a complete DTP recipe.

22.4.2. Instantiation

```
ntp #(
    // JTAG Configuration
    .JTAG_BSR_ENABLE      (1'b1),
    .JTAG_TMP_ENABLE      (1'b1),
    .JTAG_SMC_DBG_ENABLE  (1'b1),
    .JTAG_SEP_DBG_ENABLE  (1'b1),
    .JTAG_IDCODE_MFR_ID   (11'h15A),
    .JTAG_IDCODE_PART_NUM (16'h1234),
    .JTAG_IDCODE_SI_REV   (4'h1),
    // Cross Trigger Configuration
    .XTRIG_INT_CT_MODE    (10'b0000000000)
) u_ntp (
    .clk_i      (clk),
    .rst_n_i    (rst_n),
    .pwr_on_rst_ni (pwr_on_rst_n),
    // JTAG, Boundary Scan, Cross Trigger interfaces...
);
```

22.4.3. Clock and Reset

- **TCK Domain:** JTAG logic operates on external Test Clock
- **System Clock** (`clk_i`): Cross trigger logic and JTAG2AXI bridges
- **System Reset** (`rst_n_i`): Resets cross trigger and AXI; does not affect TAP controller
- **Power-On Reset** (`pwr_on_rst_ni`): Asynchronous reset for JTAG state machine

22.4.4. Constraints

- JTAG interface: 10-50 MHz TCK frequency
- Cross trigger signals synchronized to system clock
- DTP remains active during clock stop for debug access
- External CTP signals require pad ring integration with ESD protection

22.4.5. STAP Scan Chain Topology

The DTP secondary scan path chains multiple STAPs on a single PTAP-managed scan string. The fixed order on this string is: PTAP, I/O STAP (if `JTAG_STAP_IO_ENABLE=1`), SMC debug STAP (if `JTAG_SMC_DBG_ENABLE=1`), SEP debug STAP (if `SEP=1` in the SMU), extra STAP[N-1:0], and return to PTAP.

Both the SMC and SEP debug STAP host interfaces are internal to the SMU and are not exported on the SMU boundary. The SMU wires the SMC debug STAP host outputs to the SMC CPU/system JTAG ports (`smc_cpu_jtag_*`) when `JTAG_SMC_DBG_ENABLE=1`; when disabled, the DTP bypasses this STAP in the secondary scan chain and drives the internal host outputs low. The SEP debug STAP connects to the SEP JTAG debug port when `SEP=1`; when `SEP=0`, the SMU ties `sep_stap_tdo_to_dtp = 10b0` to bypass the SEP STAP return path.

Each STAP host interface is gated by a field of `dbg_disable_i`, synchronized to TCK inside the DTP. Each field is active-high (1 = path disabled).

STAP	Disable Field
I/O STAP	<code>dbg_disable_i.stap_io</code>
SMC debug STAP	<code>dbg_disable_i.stap_smc</code>
SEP debug STAP	<code>dbg_disable_i.stap_sep</code>
Extra STAPs	<code>dbg_disable_i.stap_extra</code>
External STAP return path	<code>dbg_disable_i.stap_host</code>

The full set of debug-disable-gated paths, including the iJTAG chains and the JTAG2AXI bridges, is tabulated in the DTP JTAG integration section of the TRM.

22.4.6. DTP Port Interface

The DTP exposes interfaces for JTAG TAP control, boundary scan, multiple STAP host ports, iJTAG scan chains, AXI debug bridges, cross trigger networks, and CTP GPIO pads. The following table defines all DTP top-level ports. Refer to the dedicated DTP documentation in [hw/sys/dtp/doc/](#) for internal design details.

Table 19. DTP Port Declaration

Interface Name	Type	Direction	Width	Description	Connection	Default value (if applicable)
<code>clk_i</code>	logic	Input	1	System clock for cross trigger logic and JTAG2AXI bridges.	System clock	N/A
<code>rst_n_i</code>	logic	Input	1	System reset (active low). Resets cross trigger and AXI logic; does not affect the TAP controller.	System reset	N/A
<code>pwr_on_rst_ni</code>	logic	Input	1	Power-on reset for JTAG state machine (active low, asynchronous).	Power-on reset	N/A
<code>dbg_disable_i</code>	<code>sep_lifecycle_ctrl_pkg::dbg_disable_t</code>	Input	-	Per-path debug/test disables. Active-high (1 = path disabled).	SEP	N/A
<code>jtag_ptap_client_tap_ctrl_i</code>	<code>jtag_tap_ctrl_t</code>	Input	-	Primary JTAG TAP control (TCK, TMS, TRST_N).	External JTAG pads	N/A
<code>jtag_ptap_client_tdi_i</code>	logic	Input	1	Primary JTAG TDI.	External JTAG pads	N/A
<code>jtag_ptap_client_tdo_o</code>	logic	Output	1	Primary JTAG TDO.	External JTAG pads	N/A
<code>jtag_ptap_client_tdo_oe_o</code>	logic	Output	1	Primary JTAG TDO output enable.	External JTAG pads	N/A

Interface Name	Type	Direction	Width	Description	Connection	Default value (if applicable)
jtag_bsr_host_scan_ctrl_o	jtag_scan_ctrl_t	Output	-	Boundary scan control. Tie scan_in to scan_out if BSR is disabled.	Boundary scan chain	N/A
jtag_bsr_host_scan_in_i	logic	Input	1	Boundary scan data in.	Boundary scan chain	N/A
jtag_bsr_host_scan_out_o	logic	Output	1	Boundary scan data out.	Boundary scan chain	N/A
jtag_stap_io_host_tap_ctrl_o	jtag_tap_ctrl_t	Output	-	I/O STAP TAP control for chiplet-to-chiplet connectivity. .tck remains driven when the STAP generate is off.	I/O STAP host	TMS/TRST idle if JTAG_STAP_IO_ENABLE=0
jtag_stap_io_host_tdi_i	logic	Input	1	I/O STAP TDI.	I/O STAP host	Tie to '0 if unused
jtag_stap_io_host_tdo_o	logic	Output	1	I/O STAP TDO.	I/O STAP host	N/A
jtag_stap_io_host_tdo_oen_o	logic	Output	1	I/O STAP TDO output enable.	I/O STAP host	N/A
jtag_stap_smc_host_tap_ctrl_o	jtag_tap_ctrl_t	Output	-	SMC debug STAP TAP control. .tck remains driven when the STAP generate is off.	SMC JTAG port	TMS/TRST idle if JTAG_SMC_DBG_ENABLE=0
jtag_stap_smc_host_tdi_i	logic	Input	1	SMC debug STAP TDI (from SMC TDO).	SMC JTAG port	Tie to '0 if unused
jtag_stap_smc_host_tdo_o	logic	Output	1	SMC debug STAP TDO (to SMC TDI).	SMC JTAG port	N/A
jtag_stap_smc_host_tdo_oen_o	logic	Output	1	SMC debug STAP TDO output enable.	SMC JTAG port	N/A
jtag_stap_sep_host_tap_ctrl_o	jtag_tap_ctrl_t	Output	-	SEP debug STAP TAP control. .tck remains driven when the STAP generate is off.	SEP JTAG port	TMS/TRST idle if JTAG_SEP_DBG_ENABLE=0
jtag_stap_sep_host_tdi_i	logic	Input	1	SEP debug STAP TDI (from SEP TDO).	SEP JTAG port	Tie to '0 if unused
jtag_stap_sep_host_tdo_o	logic	Output	1	SEP debug STAP TDO (to SEP TDI).	SEP JTAG port	N/A
jtag_stap_sep_host_tdo_oen_o	logic	Output	1	SEP debug STAP TDO output enable.	SEP JTAG port	N/A
jtag_stap_extra_host_tap_ctrl_o	jtag_tap_ctrl_t	Output	[JTAG_NUM_EXTRA_STAP_PORTS-1:0]	Extra STAP TAP control array. .tck remains driven when the STAP generate is off.	Extra STAP hosts	TMS/TRST idle if JTAG_NUM_EXTRA_STAPS=0
jtag_stap_extra_host_tdi_i	logic	Input	[JTAG_NUM_EXTRA_STAP_PORTS-1:0]	Extra STAP TDI array.	Extra STAP hosts	Tie to '0 if unused
jtag_stap_extra_host_tdo_o	logic	Output	[JTAG_NUM_EXTRA_STAP_PORTS-1:0]	Extra STAP TDO array.	Extra STAP hosts	N/A
jtag_stap_extra_host_tdo_oen_o	logic	Output	[JTAG_NUM_EXTRA_STAP_PORTS-1:0]	Extra STAP TDO output enable array.	Extra STAP hosts	N/A
jtag_stap_host_scan_ctrl_o	jtag_scan_ctrl_t	Output	-	Extended STAP scan control. Tie scan_in to scan_out if unused.	STAP scan chain	N/A
jtag_stap_host_scan_in_i	logic	Input	1	Extended STAP scan data in.	STAP scan chain	N/A
jtag_stap_host_scan_out_o	logic	Output	1	Extended STAP scan data out.	STAP scan chain	N/A
jtag_dfd_host_scan_ctrl_o	jtag_scan_ctrl_t	Output	-	DFD iJTAG scan control. Tie scan_in to scan_out if unused.	DFD iJTAG chain	N/A

Interface Name	Type	Direction	Width	Description	Connection	Default value (if applicable)
jtag_dfd_host_scan_in_i	logic	Input	1	DFD iJTAG scan data in.	DFD iJTAG chain	N/A
jtag_dfd_host_scan_out_o	logic	Output	1	DFD iJTAG scan data out.	DFD iJTAG chain	N/A
jtag_dft_secure_host_scan_ctrl_o	jtag_scan_ctrl_t	Output	-	Secure DFT iJTAG scan control. Tie scan_in to scan_out if unused.	Secure DFT iJTAG chain	N/A
jtag_dft_secure_host_scan_in_i	logic	Input	1	Secure DFT iJTAG scan data in.	Secure DFT iJTAG chain	N/A
jtag_dft_secure_host_scan_out_o	logic	Output	1	Secure DFT iJTAG scan data out.	Secure DFT iJTAG chain	N/A
jtag_dft_host_scan_ctrl_o	jtag_scan_ctrl_t	Output	-	Non-secure DFT iJTAG scan control. Tie scan_in to scan_out if unused.	Non-secure DFT iJTAG chain	N/A
jtag_dft_host_scan_in_i	logic	Input	1	Non-secure DFT iJTAG scan data in.	Non-secure DFT iJTAG chain	N/A
jtag_dft_host_scan_out_o	logic	Output	1	Non-secure DFT iJTAG scan data out.	Non-secure DFT iJTAG chain	N/A
axi_smc_dbg_req_o	smc_jtag_axi_req_t	Output	-	SMC fabric debug AXI request. Active when JTAG_SMC_DBG_ENABLE=1.	SMC jtag_axi_in_req_i	Tie to '0 if disabled
axi_smc_dbg_resp_i	smc_jtag_axi_resp_t	Input	-	SMC fabric debug AXI response.	SMC jtag_axi_in_resp_o	Tie to '0 if disabled
axil_smc_otp_jtag_req_o	smc_otp_axil_req_t	Output	-	SMC OTP debug AXI-Lite request.	SMC axil_smc_otp_jtag_req_i	Tie to '0 if disabled
axil_smc_otp_jtag_resp_i	smc_otp_axil_resp_t	Input	-	SMC OTP debug AXI-Lite response.	SMC axil_smc_otp_jtag_resp_o	Tie to '0 if disabled
axil_sep_otp_jtag_req_o	sep_otp_axil_req_t	Output	-	SEP OTP debug AXI-Lite request.	SEP axil_sep_otp_jtag_req_i	Tie to '0 if disabled
axil_sep_otp_jtag_resp_i	sep_otp_axil_resp_t	Input	-	SEP OTP debug AXI-Lite response.	SEP axil_sep_otp_jtag_resp_o	Tie to '0 if disabled
stop_clks_o	logic	Output	1	Clock stop output from JTAG_DEBUG_CONTROL or CLA clock-stop requests via CTN.	PLL clock gates	N/A
cla_clock_stop_en_o	logic	Output	1	CLA clock stop enable from DEBUG_CONTROL register.	Clock control logic	N/A
jtag_boot_stall_ovrd_o	logic	Output	1	JTAG boot stall override enable.	Boot control	N/A
jtag_boot_stall_o	logic	Output	1	JTAG boot stall value when override is asserted.	Boot control	N/A
jtag_ic_reset_smc_o	ic_reset_smc_t	Output	\$bits(ic_reset_smc_t)	SMC IC_RESET override slice. Struct contains .ovrd (override enables) and .val (active-low override values), each sized to match the corresponding SMC reset control struct. Tied to '0 when JTAG_IC_RESET_SMC_ENABLE=0.	SMC jtag_smc_reset_ctrl_i	N/A
jtag_ic_reset_sep_o	ic_reset_sep_t	Output	\$bits(ic_reset_sep_t)	SEP IC_RESET override slice. Struct contains .ovrd (override enables) and .val (active-low override values), each sized to match the corresponding SEP reset control struct. Tied to '0 when JTAG_IC_RESET_SEP_ENABLE=0.	SEP jtag_sep_reset_ctrl_i	N/A

Interface Name	Type	Direction	Width	Description	Connection	Default value (if applicable)
jtag_ic_reset_ext_o	ic_reset_ext_t	Output	\$bits(ic_reset_ext_t)	External IC_RESET override slice. Struct contains .ovrd (override enables) and .val (active-low override values), each sized per integrator-defined type. Tied to '0 when JTAG_IC_RESET_EXT_ENABLE=0.	Integrator-defined reset overrides for logic outside the SMU	N/A
jtag_ptap_state_o	tap_state_e	Output	-	Current PTAP TAP state.	Debug infrastructure	N/A
jtag_ptap_inst_decoded_o	jtag_instruction_decoded_e	Output	-	Current decoded PTAP instruction.	Debug infrastructure	N/A
axil_xtrig_req_i	xtrig_axil_req_t	Input	-	Cross trigger CSR AXI-Lite request.	SMC axil_dtp_csr_req_o	N/A
axil_xtrig_resp_o	xtrig_axil_resp_t	Output	-	Cross trigger CSR AXI-Lite response.	SMC axil_dtp_csr_resp_i	N/A
xtrig_ctm_src_req_o	logic	Output	[XTRIG_NUM_IN_T_CT-1:0]	Cross trigger source requests from CTM to destination sinks.	Cross trigger network	N/A
xtrig_ctm_src_ack_i	logic	Input	[XTRIG_NUM_IN_T_CT-1:0]	Cross trigger source acknowledges. Unused in pulse-sync mode (mode bit = 0).	Cross trigger network	Tie to '0 in pulse-sync mode
xtrig_ctm_dst_req_i	logic	Input	[XTRIG_NUM_IN_T_CT-1:0]	Cross trigger destination requests from source generators.	Cross trigger network	Tie to '0 if unused
xtrig_ctm_dst_ack_o	logic	Output	[XTRIG_NUM_IN_T_CT-1:0]	Cross trigger destination acknowledges. Unused in pulse-sync mode (mode bit = 0).	Cross trigger network	N/A
xtrig_clk_stop_req_i	logic	Input	[XTRIG_NUM_CLK_STOP_REQ-1:0]	Clock stop requests from CLAs or other devices in the chiplet.	Clock stop requesters	Tie to '0 if unused
xtrig_ctp_req_out_dout_o	logic	Output	[XTRIG_NUM_CTP_P-1:0]	CTP request-out data output (to GPIO pad ring).	GPIO pad ring	N/A
xtrig_ctp_req_out_dout_en_o	logic	Output	[XTRIG_NUM_CTP_P-1:0]	CTP request-out data output enable.	GPIO pad ring	N/A
xtrig_ctp_req_out_din_i	logic	Input	[XTRIG_NUM_CTP_P-1:0]	CTP request-out data input (from GPIO pad ring).	GPIO pad ring	Tie to '0 if unused
xtrig_ctp_req_out_din_en_o	logic	Output	[XTRIG_NUM_CTP_P-1:0]	CTP request-out data input enable.	GPIO pad ring	N/A
xtrig_ctp_req_in_dout_o	logic	Output	[XTRIG_NUM_CTP_P-1:0]	CTP request-in data output.	GPIO pad ring	N/A
xtrig_ctp_req_in_dout_en_o	logic	Output	[XTRIG_NUM_CTP_P-1:0]	CTP request-in data output enable.	GPIO pad ring	N/A
xtrig_ctp_req_in_din_i	logic	Input	[XTRIG_NUM_CTP_P-1:0]	CTP request-in data input.	GPIO pad ring	Tie to '0 if unused
xtrig_ctp_req_in_din_en_o	logic	Output	[XTRIG_NUM_CTP_P-1:0]	CTP request-in data input enable.	GPIO pad ring	N/A
xtrig_ctp_ack_in_dout_o	logic	Output	[XTRIG_NUM_CTP_P-1:0]	CTP ack-in data output.	GPIO pad ring	N/A
xtrig_ctp_ack_in_dout_en_o	logic	Output	[XTRIG_NUM_CTP_P-1:0]	CTP ack-in data output enable.	GPIO pad ring	N/A
xtrig_ctp_ack_in_din_i	logic	Input	[XTRIG_NUM_CTP_P-1:0]	CTP ack-in data input.	GPIO pad ring	Tie to '0 if unused
xtrig_ctp_ack_in_din_en_o	logic	Output	[XTRIG_NUM_CTP_P-1:0]	CTP ack-in data input enable.	GPIO pad ring	N/A
xtrig_ctp_ack_out_dout_o	logic	Output	[XTRIG_NUM_CTP_P-1:0]	CTP ack-out data output.	GPIO pad ring	N/A

Interface Name	Type	Direction	Width	Description	Connection	Default value (if applicable)
<code>xtrig_ctp_ack_out_dout_en_o</code>	logic	Output	[XTRIG_NUM_CTP-1:0]	CTP ack-out data output enable.	GPIO pad ring	N/A
<code>xtrig_ctp_ack_out_din_i</code>	logic	Input	[XTRIG_NUM_CTP-1:0]	CTP ack-out data input.	GPIO pad ring	Tie to '0 if unused
<code>xtrig_ctp_ack_out_din_en_o</code>	logic	Output	[XTRIG_NUM_CTP-1:0]	CTP ack-out data input enable.	GPIO pad ring	N/A

22.5. Security Processor (SEP) Integration

The Security Processor (SEP) is the Root of Trust for the chiplet, providing a physically isolated execution environment for security-critical services such as secure boot, lifecycle control, device attestation, cryptographic acceleration, and key management. This section provides practical integration procedures for adopters integrating the SEP as part of the SMU or as a standalone out-of-context IP.

For detailed architectural documentation about the SEP internal design, refer to the dedicated SEP documentation located in `hw/sys/sep/doc/`. The SEP hardware overview and interconnect fabric are described in `hw/sys/sep/doc/overview.adoc` and `hw/sys/sep/doc/fabric.adoc` respectively.

22.5.1. Module Overview

The `sep.sv` module provides the complete SEP functionality with logic-level interfaces. Technology-specific components—SRAM, ROM, and eFuse shims—are instantiated by the adopter outside SEP, following the same vendor-neutral philosophy used for the SMC.

Separately, SEP exposes interfaces for supplementary peripherals an adopter may add on rather than substitute: an external TRNG and an additional SPI controller. These are not technology-specific—SEP contains its own entropy source and SPI host—so the interfaces exist to supplement what SEP already provides, and may be left unused.

When integrated inside the SMU, the SEP's external interfaces are passed through the SMU boundary with a `sep_` prefix.

22.5.2. Clock and Reset Requirements

The SEP requires two clock inputs. Connect `clk_i` to the primary system clock driving all SEP internal logic. Connect `clk_wdt_i` to a 200 kHz clock source for the watchdog timer; this clock must be independent of the system clock so that the WDT can detect system clock failures.

The primary reset `rst_ni` follows the standard active-low, asynchronous assertion / synchronous deassertion convention. The `dbg_rstb_i` input provides a separate reset for the EL2 CPU debug module. The `wdt_rst_ni` input receives the watchdog reset generated by the SMC reset unit. The SEP outputs `wdt_timer_rst_req_o` when the WDT triggers a reset request.

22.5.3. AXI Interfaces

The SEP connects to the system through three AXI paths. The `smn_outbound_axi` master interface allows SEP firmware to access system resources outside the SEP domain, such as SMC registers or external memory. The `smn_inbound_axi` slave interface accepts requests from system masters requiring access to SEP-managed resources. The `sep_ext_to_smc_axi` output provides a dedicated AXI path for SEP-to-SMC transactions, connecting to the SMC's `sep_axi_in` port.

An additional AXI extension port (`axi_extension_axi`) enables adopters to attach custom peripherals to the SEP

interconnect fabric without modifying the SEP core. When unused, tie the response input to return DECERR.

22.5.4. Memory Interfaces

All SEP memory macros are instantiated externally and connected through dedicated request/response interfaces. The `sep_cpu_tcm` interface provides tightly-coupled memory (ICCM and DCCM) for the VeeR EL2 CPU. The `sep_sram` interface connects scratch SRAM used for firmware data. The `sep_boot_rom` interface provides the BL0 ROM containing the first-stage bootloader.

The crypto subsystem requires additional memory interfaces. `sep_crypto_pka_imem_sram` and `sep_crypto_pka_dmem_sram` connect to the OTBN public key accelerator instruction and data memories respectively. `km_rom_mem` and `km_sram_mem` connect to the Key Manager's dedicated ROM and SRAM macros.

`abr_mem` connects the Adams Bridge working SRAM. On an idle cycle (`re` low), ABR expects the channel's read data to return 0 the following cycle. `SEP_ABR_SRAM_LATENCY` must equal the macros' native registered-read latency (default 1). Word-write channels are full-word `we` / `re` / address / data. `sig_z` and `pk` carry one-bit-per-byte `wstrobe`; map those to the macros' byte-write enables. `SEP_ABR_MASKING_EN` (default 1) selects 2-share DOM: thirteen 1R1W macros versus nine, plus a second NTT. This changes ABR internal behavior (sequencing, SCA, memory topology), not merely throughput. Give the same value to SEP and to the SRAM instances. When it is 0, do not instantiate the four masked coefficient banks; their response fields read as 0.

22.5.5. Cryptographic Subsystem Connections

The SEP includes an internal entropy source that requires a ring-oscillator sample clock connected to `entropy_rosc_sample_clk_i`. This clock must be asynchronous to `clk_i` and typically runs between 100 and 400 MHz.

External TRNG

For adopters providing an external TRNG, the `ext_trng_axil` AXI-Lite interface connects to the external TRNG's control registers, while the `ext_trng_axis` AXI-Stream interfaces carry entropy data. The `ext_trng_irq_i` input is routed to the PIC; `ext_trng_alarm_i` is reserved for RAS.

SEP decodes the 4 kB TRNG aperture (`0x1091_7000` - `0x1091_7FFF`) as a single window and forwards every access on `ext_trng_axil`. It does not decode offsets inside that window: the endpoint is an adopter-defined IP.

The adopter must perform the intra-aperture decode. An address that owns no register must return SLVERR and must not alias onto a live register. When no external TRNG is connected, terminate `ext_trng_axil` with a DECERR slave.

22.5.6. eFuse and Lifecycle

SEP has its own eFuse bank. Instantiate a separate SHIM and physical eFuse bank; do not share the SMC's. The SHIM contract is [eFuse Interface](#). On `sep.sv` connect `efuse_bank_ctrl_*` and `efuse_shim_command_*`. Through the SMU those ports appear as `sep_efuse_bank_ctrl_*` and `sep_efuse_shim_command_*`.

SEP senses this bank after its own reset. Watch `sep_fuse_sense_done_o`. On `sep.sv`, drive `smc_fuse_sense_done_i` from the SMC so firmware can see when the SMC fabric is out of reset; the SMU wires that input internally.

Lifecycle and test-mode ports on `sep.sv`, and what to do with them. Behaviour is in the Technical Reference Manual, not here.

- `secure_tm_req_i` signals a request to enter secure test mode. SEP latches it into `secure_tm_o` when fuse sensing completes, or at cold-reset release if SEC_DIS is already asserted. Secure test mode forces a no-secret, no-fuse-

program configuration; it is not an authorization bit. See [Test Mode Entry](#) and [secure_tm](#) and the [Secure Scan Chain](#) in the TRM. [secure_tm_o](#) is also an SMU output.

- [security_disable_o](#) is the SEC_DIS token-match result (emergency A0 unlock). On [sep.sv](#), route it to SMC [sep_security_disable_i](#); the SMU does that internally. See [Security Disable](#) in the TRM.
- [lc_state_o](#) is the differentially encoded LC_STATE shadow. [lc_sigint_err_o](#) is the decode integrity error (fail-closed). Both are SMU outputs. See [Life Cycle Controller](#) in the TRM.
- [dbg_disable_o](#) is the typed per-path debug/test disable vector (active-high: 1 = path disabled). On [sep.sv](#), route it to DTP [dbg_disable_i](#); the SMU does that internally.
- [lcc_demote_state_1_o](#) / [lcc_demote_state_2_o](#) are differentially encoded in-field debug demotion. They leave the SMU for adopter lifecycle logic and are not connected to the SMC. See [in-field debug demotion](#) in the TRM.
- [sep_fuse_dft_disable_o](#) / [smc_fuse_dft_disable_o](#) gate DFT-inserted OTP access. Leave them open if no such path is inserted. They are SMU outputs.

OTP debug AXI-Lite ([axil_sep_otp_jtag](#)) is connected to the DTP inside the SMU; when [SEP=0](#) the SMU instantiates an AXI-Lite error slave on that path.

22.5.7. SPI Host Interface

The SEP provides a SPI host controller through the [sep_io_spi](#) interface, supporting single and quad modes. The controller’s own interrupt leaves the module as the [irq](#) field of [sep_io_spi_req_o](#), so no separate interrupt output is needed.

22.5.8. Bring-Up Considerations

The SEP boot sequence begins after the SMC completes fuse sensing and releases the SEP reset. The SEP BL0 ROM FW verifies the BL1 software image using non-volatile public keys before transferring control. Feature controls derived from secure boot authentication and lifecycle state govern what operations are permitted after boot.

The [jtag_id](#) input must be tied to an appropriate constant in the top-level integration. A [rst_vec_i](#) port exists on [tb_top.sv](#) for DV reset vector injection; it is not present on [sep.sv](#) itself and requires no integration tie-off.

22.5.9. SEP Port Interface

The SEP exposes interfaces for clocks, resets, JTAG debug, CPU control, memory macros, AXI bus connections, cryptographic subsystem, eFuse, lifecycle, SPI host, and mailbox. The following table defines all SEP top-level ports.

Table 20. SEP Port Declaration

Interface Name	Type	Direction	Width	Description	Connection	Default value (if applicable)
clk_i	logic	Input	1	Primary SEP clock. All SEP internal logic operates synchronously to this clock.	System clock	N/A
clk_wdt_i	logic	Input	1	200 kHz clock for watchdog timer.	Low-frequency clock source	N/A
rst_ni	logic	Input	1	Primary reset (active low). Asynchronous assertion, synchronous deassertion.	System reset	N/A
dbg_rstb_i	logic	Input	1	EL2 debugger reset (active low).	JTAG debug infrastructure	N/A
wdt_rst_ni	logic	Input	1	Watchdog timer reset from SMC (active low).	SMC reset unit	N/A

Interface Name	Type	Direction	Width	Description	Connection	Default value (if applicable)
wdt_timer_rst_req_o	logic	Output	1	WDT reset request output. Triggers memory interface reset in sep_wrapper .	SEP wrapper	N/A
jtag_tck	logic	Input	1	JTAG test clock.	JTAG pads (via DTP STAP)	N/A
jtag_tms	logic	Input	1	JTAG test mode select.	JTAG pads (via DTP STAP)	N/A
jtag_tdi	logic	Input	1	JTAG test data in.	JTAG pads (via DTP STAP)	N/A
jtag_trst_n	logic	Input	1	JTAG test reset (active low).	JTAG pads (via DTP STAP)	N/A
jtag_tdo	logic	Output	1	JTAG test data out.	JTAG pads (via DTP STAP)	N/A
jtag_tdoEn	logic	Output	1	JTAG test data out enable.	JTAG pads (via DTP STAP)	N/A
axil_sep_otp_jtag_req_i	sep_efuse_pkg::efuse_axil_req_t	Input	-	OTP debug AXI-Lite request from JTAG.	DTP axil_sep_otp_jtag_req_o	Tie to '0 if unused
axil_sep_otp_jtag_resp_o	sep_efuse_pkg::efuse_axil_resp_t	Output	-	OTP debug AXI-Lite response to JTAG.	DTP axil_sep_otp_jtag_resp_i	N/A
mpc_debug_halt_req	logic	Input	1	Async halt request from MPC.	Debug controller	Tie to '0 if unused
mpc_debug_run_req	logic	Input	1	Async run request from MPC.	Debug controller	Tie to '0 if unused
mpc_reset_run_req	logic	Input	1	Run/halt selection after reset.	Debug controller	1'b1
i_cpu_halt_req	logic	Input	1	Async halt request to CPU.	Debug controller	Tie to '0 if unused
i_cpu_run_req	logic	Input	1	Async restart request to CPU.	Debug controller	Tie to '0 if unused
test_en_i	logic	Input	1	DFT/scan test-enable. Drives clock-gater test ports and AXI cell test inputs.	Test controller	1'b0
scan_rst_ni	logic	Input	1	Scan reset (active-low). Bypasses reset synchronizers during DFT.	Test controller	1'b1
ext_boot_seq_done_i	logic	Input	1	External boot sequence completion (memory repair and shadow register override done); gates reset release.	External boot/repair controller	1'b1
dmi_core_enable	logic	Input	1	Enables DMI accesses to the core debug module (addresses 0x00-0x4F). Tied high at SMU; TAP access is already lifecycle-gated.	Debug infrastructure	1'b1
dmi_uncore_enable	logic	Input	1	Enables DMI accesses to an external uncore aperture (addresses 0x50+). Unused: the core debug module AXI master already reaches the SEP fabric.	Debug infrastructure	Tie to '0 if unused
dmi_uncore_en	logic	Output	1	DMI uncore access enable.	Debug infrastructure	N/A
dmi_uncore_wr_en	logic	Output	1	DMI uncore write enable.	Debug infrastructure	N/A
dmi_uncore_addr	logic	Output	[6:0]	DMI uncore address.	Debug infrastructure	N/A
dmi_uncore_wdata	logic	Output	[31:0]	DMI uncore write data.	Debug infrastructure	N/A

Interface Name	Type	Direction	Width	Description	Connection	Default value (if applicable)
dmi_uncore_read_data	logic	Input	[31:0]	DMI uncore read data.	Debug infrastructure	N/A
dmi_active	logic	Output	1	DMI active indicator.	Debug infrastructure	N/A
sep_cpu_trace	sep_cpu_trace_t	Output	-	CPU trace output for debug.	Trace infrastructure	N/A
lockstep_ctrl_i	sep_pkg::sep_lockstep_ctrl_t	Input	-	VeeR lockstep controls: disable corruption detection, and error-injection enable. Inert unless the core is built with RV_LOCKSTEP_ENABLE .	Chip-level RAS control	Tie to '0 if unused
lockstep_status_o	sep_pkg::sep_lockstep_status_t	Output	-	VeeR lockstep status: corruption detected. Reads 0 unless the core is built with RV_LOCKSTEP_ENABLE .	Chip-level RAS aggregation	N/A
jtag_id	logic	Input	[31:1]	JTAG ID value.	Configuration tie-off	N/A
timer_int	logic	Input	1	Timer interrupt.	Internal timer	Tie to '0 if unused
soft_int	logic	Input	1	Software interrupt.	Software IRQ source	Tie to '0 if unused
extintsrc_req	logic	Input	[NUM_EXTERNAL_IRQS-1:0]	External interrupt sources for PIC.	External IRQ sources	Tie to '0 if unused
sep_cpu_tcm_req_o	sep_cpu_tcm_req_t	Output	-	CPU tightly-coupled memory (TCM) request (ICCM + DCCM).	SRAM macros	N/A
sep_cpu_tcm_rsp_i	sep_cpu_tcm_rsp_t	Input	-	CPU TCM response.	SRAM macros	N/A
sep_sram_req	sep_sram_req_t	Output	-	Scratch SRAM request.	SRAM macros	N/A
sep_sram_rsp	sep_sram_rsp_t	Input	-	Scratch SRAM response.	SRAM macros	N/A
sep_boot_rom_req	sep_sram_req_t	Output	-	Boot ROM (BL0) request.	ROM macro	N/A
sep_boot_rom_rsp	sep_sram_rsp_t	Input	-	Boot ROM (BL0) response.	ROM macro	N/A
smn_outbound_axi_req_o	sep_system_peripherals_outbound_axi_req_t	Output	-	SMN outbound AXI request (system bus master).	SMN fabric	N/A
smn_outbound_axi_resp_i	sep_system_peripherals_outbound_axi_resp_t	Input	-	SMN outbound AXI response.	SMN fabric	N/A
smn_inbound_axi_req_i	sep_system_peripherals_internal_axi_req_t	Input	-	SMN inbound AXI request (system bus slave).	SMN fabric	Tie to '0 if unused
smn_inbound_axi_resp_o	sep_system_peripherals_internal_axi_resp_t	Output	-	SMN inbound AXI response.	SMN fabric	N/A
sep_ext_to_smc_axi_req_o	sep_system_peripherals_internal_axi_req_t	Output	-	SEP-to-SMC AXI request. Dedicated path for SEP to access SMC resources.	SMC sep_axi_in_req_i	N/A
sep_ext_to_smc_axi_resp_i	sep_system_peripherals_internal_axi_resp_t	Input	-	SEP-to-SMC AXI response.	SMC sep_axi_in_resp_o	N/A
entropy_rosc_sample_clk_i	logic	Input	1	Ring-oscillator sample clock for entropy source (async vs clk_i ; ~100-400 MHz typical).	Ring oscillator	N/A
sep_crypto_pka_imem_sram_req	sep_crypto_pka_imem_sram_req_t	Output	-	OTBN PKA instruction memory SRAM request.	SRAM macro	N/A
sep_crypto_pka_imem_sram_rsp	sep_crypto_pka_imem_sram_rsp_t	Input	-	OTBN PKA instruction memory SRAM response.	SRAM macro	N/A

Interface Name	Type	Direction	Width	Description	Connection	Default value (if applicable)
sep_crypto_pka_dmem_sram_req	sep_crypto_pka_dmem_sram_req_t	Output	-	OTBN PKA data memory SRAM request.	SRAM macro	N/A
sep_crypto_pka_dmem_sram_rsp	sep_crypto_pka_dmem_sram_rsp_t	Input	-	OTBN PKA data memory SRAM response.	SRAM macro	N/A
ext_trng_axil_req_o	sep_32_32_axil_req_t	Output	-	External TRNG AXI-Lite passthrough request (to sep_ip_integration).	External TRNG shim	N/A
ext_trng_axil_resp_i	sep_32_32_axil_resp_t	Input	-	External TRNG AXI-Lite passthrough response.	External TRNG shim	N/A
ext_trng_axis_req_i	ext_trng_axis_req_t	Input	[EXT_TRNG_NUM_AXIS-1:0]	External TRNG AXI-Stream request array (from sep_ip_integration).	External TRNG shim	N/A
ext_trng_axis_rsp_o	ext_trng_axis_rsp_t	Output	[EXT_TRNG_NUM_AXIS-1:0]	External TRNG AXI-Stream response array.	External TRNG shim	N/A
ext_trng_irq_i	logic	Input	1	External TRNG interrupt (routed to PIC).	External TRNG shim	Tie to '0 if unused
km_rom_mem_req_o	km_intf_pkg::km_rom_mem_req_t	Output	-	Key Manager ROM memory request.	ROM macro	N/A
km_rom_mem_rsp_i	km_intf_pkg::km_rom_mem_rsp_t	Input	-	Key Manager ROM memory response.	ROM macro	N/A
km_sram_mem_req_o	km_intf_pkg::km_sram_mem_req_t	Output	-	Key Manager SRAM memory request.	SRAM macro	N/A
km_sram_mem_rsp_i	km_intf_pkg::km_sram_mem_rsp_t	Input	-	Key Manager SRAM memory response.	SRAM macro	N/A
efuse_bank_ctrl_req_o	sep_efuse_pkg::efuse_axil_req_t	Output	-	eFuse bank control AXI-Lite request.	eFuse shim	N/A
efuse_bank_ctrl_resp_i	sep_efuse_pkg::efuse_axil_resp_t	Input	-	eFuse bank control AXI-Lite response.	eFuse shim	N/A
efuse_shim_command_req_o	sep_efuse_pkg::efuse_command_req_t	Output	-	eFuse command interface request.	eFuse shim	N/A
efuse_shim_command_resp_i	sep_efuse_pkg::efuse_command_resp_t	Input	-	eFuse command interface response.	eFuse shim	N/A
lcc_demote_state_1_o	logic	Output	[1:0]	Lifecycle demote state output 1. Exported at SMU boundary; not currently connected to SMC.	SMU external port	N/A
lcc_demote_state_2_o	logic	Output	[1:0]	Lifecycle demote state output 2. Exported at SMU boundary; not currently connected to SMC.	SMU external port	N/A
sep_io_spi_req_o	sep_io_spi_req_t	Output	-	SPI host controller request.	SPI pad interface	N/A
sep_io_spi_rsp_i	sep_io_spi_rsp_t	Input	-	SPI host controller response.	SPI pad interface	N/A
lc_state_o	logic	Output	[2*LC_STATE_BIT_WIDTH-1:0]	Lifecycle state output (differentially encoded). Routed to SMC and the SMU external output; debug-disable control to DTP is via dbg_disable_o .	SMC, SMU external	N/A
dbg_disable_o	sep_lifecycle_ctrl_pkg::dbg_disable_t	Output	-	Typed debug-disable struct routed by SMU to DTP debug-disable control.	SMU → DTP	N/A
sep_fuse_dft_disable_o	logic	Output	1	Gate for the DFT-inserted access path into the SEP OTP, composed as Case 3 AND SEP_FUSE_DBG . Unconnected in the functional design; an adopter's DFT insertion connects it.	Adopter DFT insertion	Leave open if no path is inserted
smc_fuse_dft_disable_o	logic	Output	1	Gate for the DFT-inserted access path into the SMC OTP, composed as Case 2 AND SMC_FUSE_DBG . Unconnected in the functional design; an adopter's DFT insertion connects it.	Adopter DFT insertion	Leave open if no path is inserted

Interface Name	Type	Direction	Width	Description	Connection	Default value (if applicable)
lc_sigint_err_o	logic	Output	1	Lifecycle signal integrity error.	SMU	N/A
security_disable_o	logic	Output	1	Security disable output.	SMU	N/A
secure_tm_o	logic	Output	1	Secure test mode output.	SMU	N/A
smc_mailbox_interrupt_o	logic	Output	[NUM_MAILBOXES-1:0]	Mailbox interrupt outputs to SMC.	SMC interrupt aggregator	N/A
smc_fuse_sense_done_i	logic	Input	1	SMC fuse sense done indication.	SMC fuse_sense_done_o	N/A
sep_fuse_sense_done_o	logic	Output	1	SEP fuse sense done output.	System integration	N/A
secure_tm_req_i	logic	Input	-	Secure test mode request.	GPIO padding / tie-off	N/A
axi_extension_axi_req_o	sep_32_64_6_12_axi_req_t	Output	-	AXI extension port request for adopter peripheral expansion.	Adopter peripherals	N/A
axi_extension_axi_resp_i	sep_32_64_6_12_axi_resp_t	Input	-	AXI extension port response.	Adopter peripherals	Tie to DECERR if unused
smc_global_base_addr_i	logic	Input	[55:0]	SMC global base address for outbound address translation.	System configuration	N/A
smc_region_size_i	logic	Input	[55:0]	SMC region size for outbound address translation.	SMC smc_region_size_o	N/A
km_unrecoverable_err_o	logic	Output	1	Key Manager unrecoverable error.	RAS / error handling	N/A
km_recoverable_err_o	logic	Output	1	Key Manager recoverable error.	RAS / error handling	N/A
ext_debug_bus_o	logic	Output	[511:0]	External debug observation bus.	Debug infrastructure	N/A

22.6. SMU Composition and Internal Wiring

The System Management Unit (SMU) combines the SMC, DTP, and optionally the SEP into a unified subsystem. The interface descriptions in the preceding sections apply directly when integrating the SMU, since the SMU inherits all three subsystems' ports. This section covers the module variants available to adopters, how the SMU wires its subsystems together internally, and what additional configuration it exposes.

22.6.1. Module Variants and IP Integration

OCAH core modules (`smc.sv`, `sep.sv`, `dtp.sv`, and the composite `smu.sv`) expose logic-level interfaces only. All technology-specific components—PLLs, PVT sensors, eFuse shims, memory macros, GPIO padings, SPI controllers, and external TRNG—are instantiated outside the core modules by the adopter. This separation keeps the OCAH deliverable technology-neutral.

The repository provides reference wrappers that demonstrate how to bridge the gap between OCAH core interfaces and adopter-specific IP:

- `smu_wrapper.sv` wraps `smu.sv` with pad-level signal handling for clocks, resets, GPIO, eFuse, and JTAG interfaces. It internally instantiates `smc_ip_integration.sv` for SMC-related vendor IP and (when `SEP=1`) `sep_ip_integration.sv` for

SEP-related vendor IP.

- `smc_wrapper.sv` provides an equivalent reference wrapping `smc.sv` alone, useful when integrating the SMC without the DTP/SEP subsystems.

Neither the wrappers nor the IP integration modules are part of the OCAH deliverable; they exist as integration guides and for Tenstorrent internal usage. Adopters must develop their own equivalents following the interface patterns demonstrated in these modules. The interface contracts at the module boundaries ensure technology substitution without modifying the verified OCAH logic.

The figure below illustrates the relationship between the OCAH core modules, the wrapper layer, and the IP integration modules.

[SMU Integration Components] | *smu_integration_components.png*

Figure 2. SMU Integration Components

IP Integration Modules

`smc_ip_integration.sv` demonstrates integration of SMC-side technology components: PLL wrappers (generating `pll_cgm_clk_o` and `pll_awm_clk_o`), PVT sensor interfaces, eFuse shims, GPIO padding logic, memory macros (ROM, scratchpad RAM, cache tag and data arrays), and trace memory instances.

`sep_ip_integration.sv` demonstrates integration of SEP-side technology components: SEP memory macros (TCM, scratch SRAM, boot ROM, OTBN IMEM/DMEM, Key Manager ROM/SRAM), eFuse shim, external TRNG, and SPI controller selection.

Wrapper Clock Architecture

The `smu_wrapper.sv` reference wrapper accepts pre-generated clocks directly: `clk_smu_i` (primary), `clk_ref_i` (reference), and `clk_periph_i` (peripheral). The `smc_wrapper.sv` uses `clk_smc_i` for the primary clock. Clock generation is entirely the adopter's responsibility. The `pll_wrap` model included in the DV environment only terminates the SMC's AXI-Lite PLL control interface; it does not generate functional clocks and must not be used as a synthesis model.

22.6.2. Clock and Reset Architecture

Connect `clk_smu_i` to the primary system clock and `clk_ref_i` to a stable reference source. The DTP operates on TCK for JTAG logic and on the system clock for cross-trigger and AXI bridges. Reset sequencing follows the SMC flow; the DTP JTAG state machine uses `pwr_on_rst_ni`, which the SMU connects to `rst_cold_ni`. The SMU internally connects DTP debug paths to the SMC and optionally instantiates the SEP when the `SEP` parameter is set to 1. The full interconnection details are described in [SMC-DTP Internal Interconnection](#) and [SEP-Conditional Wiring](#) below.

22.6.3. SMU AXI Crossbar Address Map

Inside the SMU, the `smu_axi_xbar` module routes traffic between three AXI4 manager/subordinate pairs: the SEP outbound master (`sep_out`), the SMC outbound master (`smc_out`), and the external SMU AXI input (`ext_in` / `smu_axi_in`). The corresponding targets are the SEP and SMC inbound subordinates, and the external SMU AXI output (`ext_out` / `smu_axi_out`).

See the *SMU AXI Crossbar* and *OCAH Memory Map* sections of the Technical Reference Manual for connectivity and the responsibility split between hardware-fixed and firmware-programmable apertures.

The crossbar uses a **runtime** address map. Only the SEP and SMC apertures are programmable at runtime; the `ext_out`

rule is static:

- `sep_global_base_addr_i` / `sep_region_size_i` come from the `sep_cpu_ctrl` CSRs `SEP_GLOBAL_BASE_ADDR` / `SEP_REGION_SIZE`, exposed at both the `sep.sv` and `smu.sv` boundaries as `sep_global_base_addr_o` / `sep_region_size_o` (both 56-bit). `SEP_REGION_SIZE` is a 32-bit CSR field, zero-extended to 56-bit at the SEP system CSR; the xbar input takes only the lower 32 bits. `SEP_REGION_SIZE` defines the SEP global/chiplet aperture for SMU routing and SEP inbound global-to-local remap. It is distinct from the SEP CPU's architectural local-alias span. `SEP_REGION_SIZE` currently resets to `0x0100_0000` (16 MiB). Tied to '0' at the `smu.sv` boundary when the `SEP` parameter is 0.
- `smc_global_base_addr_i` / `smc_region_size_i` come from the SMC CPU control CSRs `GLOBAL_BASE` / `REGION_SIZE`, exposed at both the `smc.sv` and `smu.sv` boundaries as `smc_global_base_o` (56-bit) / `smc_region_size_o` (32-bit). `REGION_SIZE` resets to `0x0100_0000` (16 MiB).

SEP, SMC, and `smu_axi_xbar` all run on `clk_smu_i`, so these quasi-static CSR fields need no clock-domain crossing. The crossbar's address arithmetic is done on 57-bit widened sums. `ext_out` is a catch-all port that carries any outbound SEP/SMC manager request not matched by the programmed apertures; it has no fixed lower-bound address. Unmatched inbound (`ext_in`) requests return a decode error and do not reach `ext_out`.

Firmware programming order

Firmware must program `SEP_GLOBAL_BASE_ADDR` / `SEP_REGION_SIZE` and SMC `GLOBAL_BASE` / `REGION_SIZE` during early boot, **before any cross-subsystem AXI traffic is issued**, and must ensure the two apertures do not overlap and both fall within the chiplet-visible SMU envelope assigned by the integrator. The SMU crossbar does not itself constrain envelope size.

See the *OCAH Memory Map* section of the Technical Reference Manual for that responsibility split.

22.6.4. SMU Default Parameters

The SMU exposes a set of configurable parameters that control DTP JTAG features, identification, cross trigger, and pipeline depths. The table below lists each parameter with its default value.

Parameter	Value	Description
<code>JTAG_BSR_ENABLE</code>	1	Boundary scan enabled
<code>JTAG_EXTTEST_TRAIN_ENABLE</code>	1	EXTTEST_TRAIN instruction enabled
<code>JTAG_EXTTEST_PULSE_ENABLE</code>	1	EXTTEST_PULSE instruction enabled
<code>JTAG_INTEST_ENABLE</code>	1	INTEST instruction enabled
<code>JTAG_CLAMP_ENABLE</code>	1	CLAMP instruction enabled
<code>JTAG_HIGHZ_ENABLE</code>	1	HIGHZ instruction enabled
<code>JTAG_RUNBIST_ENABLE</code>	1	RUNBIST instruction enabled
<code>JTAG_TMP_ENABLE</code>	1	TMP controller enabled
<code>JTAG_IC_RESET_ENABLE</code>	1	Enables the external IC_RESET TDR slice (SMU drives this into the DTP's <code>JTAG_IC_RESET_EXT_ENABLE</code>). SMC and SEP slices are enabled unconditionally by the SMU.
<code>JTAG_SMC_DBG_ENABLE</code>	1	SMC debug interface enabled
<code>JTAG_STAP_IO_ENABLE</code>	1	I/O STAP enabled
<code>JTAG_NUM_EXTRA_STAPS</code>	1	Number of additional STAPs
<code>JTAG_IDCODE_MFR_ID</code>	<code>110h000</code>	Manufacturer ID
<code>JTAG_IDCODE_PART_NUM</code>	<code>160h0000</code>	Part number

Parameter	Value	Description
JTAG_IDCODE_SI_REV	40h0	Silicon revision
JTAG_OCH_VER	80h00	OCAH IP version
XTRIG_INT_CT_MODE	80h00	Internal CT protocol mode bits (0=pulse sync, 1=req/ack)
SMC_OTP_RD_PL_DEPTH	20h3	SMC OTP read pipeline depth
SMC_OTP_WR_PL_DEPTH	20h3	SMC OTP write pipeline depth
SMC_RD_PL_DEPTH	20h3	SMC fabric read pipeline depth
SMC_WR_PL_DEPTH	20h3	SMC fabric write pipeline depth
SEP_ABR_SRAM_LATENCY	1	ABR 1R1W registered-read latency, in clocks
SEP_ABR_MASKING_EN	1	Adams Bridge 2-share DOM masking

SEP-related DTP configuration is not exposed as an SMU config-struct field. The SMU derives SEP debug/STAP enablement from the module parameter `SEP` and wires the corresponding DTP interfaces internally to the SEP block when `SEP=1`.

22.6.5. IC_RESET TDR Structure

The DTP primary TAP implements the IEEE 1149.1-2013 §17 IC_RESET TDR as three independently enabled slices plus a single `reset_hold` bit nearest TDO. At the SMU the scan order from TDI to TDO is:

TDI → SMC slice → SEP slice → external slice → reset_hold → TDO

The SMU enables the SMC slice unconditionally, the SEP slice when `SEP=1` (otherwise that slice has width 0 and is omitted), and the external slice when `JTAG_IC_RESET_ENABLE` is set. Each slice is a packed struct with `.ovrd` and `.val` halves of equal width; `jtag_ptap` sizes the slice from $\$bits(type)/2$ and interleaves the halves into the `{reset_enable, reset_control}` pair IEEE §17 requires per port. Declaration order within each half is the TDI-to-TDO scan order: the first field is nearest TDI.

Slice	Ports	Defined by	Consumed by
SMC	68	OCAH (<code>smc_pkg::jtag_smc_reset_ctrl_t</code>)	SMC reset unit; SMU-internal, no SMU port
SEP	7 when <code>SEP=1</code> , else 0	OCAH (<code>sep_pkg::jtag_sep_reset_ctrl_t</code>)	SEP reset controller; SMU-internal, no SMU port
External	$\$bits(ic_reset_ext_t)/2$	Adopter (<code>ic_reset_ext_t</code>)	SMU output <code>jtag_ic_reset_ext_o</code>
<code>reset_hold</code>	1 bit	IEEE 1149.1 §17	Nearest TDO; not a reset port

The TDR length is $2 * (\text{SMC ports} + \text{SEP ports} + \text{external ports}) + 1$. Programming order and `reset_enable` polarity are in the DTP JTAG chapter of the Technical Reference Manual.

SMC slice (TDI to TDO)

The SMC slice covers the SMC reset domains and the 32 managed-subsystem (SS) cold and warm resets. Vector index `[31]` of each SS field is nearer TDI than `[0]`.

Port	Reset domain
<code>ss_warm_reset_n[31:0]</code>	Per-subsystem warm reset
<code>ss_cold_reset_n[31:0]</code>	Per-subsystem cold reset

Port	Reset domain
<code>cold_reset_n</code>	SMC cold reset
<code>cool_reset_n</code>	SMC cool reset
<code>warm_reset_n</code>	SMC warm reset
<code>fuse_reset_n</code>	Fuse reset (nearest the SEP slice)

SEP slice (TDI to TDO)

When `SEP=1` the SEP slice covers the SEP main reset and the crypto, Key Manager, and TRNG resets consumed by `sep_reset_ctrl`. `trng_jtag_rst_n` is nearest TDI.

Port	Reset domain
<code>trng_jtag_rst_n</code>	TRNG
<code>sep_reset_n</code>	SEP main reset
<code>kmac_jtag_rst_n</code>	KMAC
<code>hmac_jtag_rst_n</code>	HMAC
<code>aes_jtag_rst_n</code>	AES
<code>otbn_jtag_rst_n</code>	OTBN
<code>km_jtag_rst_n</code>	Key Manager (nearest the external slice)

External slice (adopter-defined)

The external slice is reserved for reset overrides on logic instantiated outside the SMU. OCAH does not name its ports. Set the SMU type parameter `ic_reset_ext_t` to a packed struct with `.ovrd` and `.val` halves of equal width, and route `jtag_ic_reset_ext_o` to that logic. The parameter default (`jtag_tap_pkg::jtag_ic_reset_default_t`) is a single-override stub. Clear `JTAG_IC_RESET_ENABLE` when no external overrides are required.

Declare a new external override at each half's MSB so already-assigned TDR positions do not shift. Extra subsystem reset controls beyond the SMC slice use this typed port.

22.6.6. DTP Parameter Pass-Through

The SMU passes through most DTP parameters to allow integrator customization. Type parameters are set internally based on SMC package types.

JTAG Configuration Parameters

Parameter	SMU Default	Pass-through	Notes
<code>JTAG_BSR_ENABLE</code>	1	Yes	Boundary scan enabled
<code>JTAG_EXTTEST_TRAIN_ENABLE</code>	1	Yes	
<code>JTAG_EXTTEST_PULSE_ENABLE</code>	1	Yes	
<code>JTAG_INTTEST_ENABLE</code>	1	Yes	
<code>JTAG_CLAMP_ENABLE</code>	1	Yes	
<code>JTAG_HIGHZ_ENABLE</code>	1	Yes	
<code>JTAG_RUNBIST_ENABLE</code>	1	Yes	
<code>JTAG_TMP_ENABLE</code>	1	Yes	

Parameter	SMU Default	Pass-through	Notes
JTAG_IC_RESET_ENABLE	1	No	SMU routes this to the DTP's JTAG_IC_RESET_EXT_ENABLE; SMC and SEP slices are enabled inside the SMU instantiation (SMC unconditionally, SEP when SEP=1)
JTAG_SMC_DBG_ENABLE	1	Yes	
JTAG_SEP_DBG_ENABLE	1 (SEP=1)	No	Derived internally from the SMU module parameter SEP; not exposed in smu_cfg_t
JTAG_STAP_IO_ENABLE	1	Yes	
JTAG_NUM_EXTRA_STAPS	1	Yes	Port array size equals parameter value; when set to 0, array size is 1 (tie-off required)

JTAG ID Parameters

Parameter	SMU Default	Pass-through	Notes
JTAG_IDCODE_MFR_ID	110h000	Yes	Manufacturer ID
JTAG_IDCODE_PART_NUM	160h0000	Yes	Part number
JTAG_IDCODE_SI_REV	40h0	Yes	Silicon revision
JTAG_OCH_VER	80h00	Yes	OCAH IP version

Cross Trigger Parameters

Parameter	SMU Default	DTP Internal	Pass-through	Notes
XTRIG_INT_CT_MODE	[7:0]	[9:0]	Yes	8-bit on SMU; DTP bits [1:0]=0 for SMC

The SMU parameter width is two less than DTP's for cross trigger (8 vs 10) because internal cross trigger ports [1:0] and clock stop request #0 are connected to the SMC internally. The SMU remaps DTP ports [9:2] to SMU external ports [7:0].

Pipeline Depth Parameters

Parameter	SMU Default	Pass-through	Notes
SMC_OTP_RD_PL_DEPTH	20h3	Yes	SMC OTP read pipeline depth
SMC_OTP_WR_PL_DEPTH	20h3	Yes	SMC OTP write pipeline depth
SEP_OTP_RD_PL_DEPTH	20h3	No	Fixed to 20h3 in SMU; used when SEP=1, ignored when SEP=0
SEP_OTP_WR_PL_DEPTH	20h3	No	Fixed to 20h3 in SMU; used when SEP=1, ignored when SEP=0
SMC_RD_PL_DEPTH	20h3	Yes	SMC fabric read pipeline depth
SMC_WR_PL_DEPTH	20h3	Yes	SMC fabric write pipeline depth

Type Parameters

The following type parameters are set internally by the SMU and are not exposed for integrator configuration.

Parameter	Set To	Notes
jtag_tap_ctrl_t	prim_jtag_pkg::jtag_tap_ctrl_t	JTAG TAP control struct
jtag_scan_ctrl_t	prim_jtag_pkg::jtag_scan_ctrl_t	JTAG scan control struct
smc_jtag_axi_req_t	smc_pkg::smc_jtag_56_64_2_12_axi_req_t	SMC debug AXI request
smc_jtag_axi_resp_t	smc_pkg::smc_jtag_56_64_2_12_axi_resp_t	SMC debug AXI response
smc_otp_axil_req_t	smc_efuse_pkg::efuse_axil_req_t	SMC OTP AXI-Lite request

Parameter	Set To	Notes
smc_otp_axil_resp_t	smc_efuse_pkg::efuse_axil_resp_t	SMC OTP AXI-Lite response
sep_otp_axil_req_t	smc_efuse_pkg::efuse_axil_req_t	SEP OTP AXI-Lite request (error slave when SEP=0)
sep_otp_axil_resp_t	smc_efuse_pkg::efuse_axil_resp_t	SEP OTP AXI-Lite response (error slave when SEP=0)
xtrig_axil_req_t	smc_pkg::smc_axil_32_32_req_t	Cross trigger CSR request
xtrig_axil_resp_t	smc_pkg::smc_axil_32_32_resp_t	Cross trigger CSR response

22.6.7. DTP Port Mapping

The following tables define the complete DTP port list as connected within the SMU. Ports marked "SMU external port" are exposed on the SMU boundary for integrator connection. Ports marked with a subsystem name (e.g. SMC, SEP) are wired internally within the SMU.

Clock and Reset

Port	Direction	Width	SMU Connection
clk_i	input	1	SMU clk_smu_i (shared with SMC clk_smc_i)
rst_n_i	input	1	SMC rst_primary_smc_clk_no
pwr_on_rst_ni	input	1	SMU rst_cold_ni (power-on reset for JTAG logic)

Primary JTAG TAP Interface

Port	Direction	Width	SMU Connection
jtag_ptap_client_tap_ctrl_i	input	jtag_tap_ctrl_t	SMU external port
jtag_ptap_client_tdi_i	input	1	SMU external port
jtag_ptap_client_tdo_o	output	1	SMU external port
jtag_ptap_client_tdo_oen_o	output	1	SMU external port

Boundary Scan Interface

Port	Direction	Width	SMU Connection
jtag_bsr_host_scan_ctrl_o	output	jtag_scan_ctrl_t	SMU external port
jtag_bsr_host_scan_in_i	input	1	SMU external port
jtag_bsr_host_scan_out_o	output	1	SMU external port

I/O STAP Interface

Port	Direction	Width	SMU Connection
jtag_stap_io_host_tap_ctrl_o	output	jtag_tap_ctrl_t	SMU external port
jtag_stap_io_host_tdi_i	input	1	SMU external port
jtag_stap_io_host_tdo_o	output	1	SMU external port
jtag_stap_io_host_tdo_oen_o	output	1	SMU external port

SMC Debug STAP Interface

Port	Direction	Width	SMU Connection
jtag_stap_smc_host_tap_ctrl_o	output	jtag_tap_ctrl_t	SMC smc_cpu_jtag_{TCK,TMS}_i; trst_n inverted drives SMC smc_cpu_jtag_reset_i when JTAG_SMC_DBG_ENABLE=1, else tie-off
jtag_stap_smc_host_tdi_i	input	1	SMC smc_cpu_jtag_TDO_data_o when JTAG_SMC_DBG_ENABLE=1, else 1'b0
jtag_stap_smc_host_tdo_o	output	1	SMC smc_cpu_jtag_TDI_i when JTAG_SMC_DBG_ENABLE=1, else unused
jtag_stap_smc_host_tdo_oen_o	output	1	Internal only; not consumed by SMC

SEP Debug STAP Interface

Port	Direction	Width	SMU Connection
jtag_stap_sep_host_tap_ctrl_o	output	jtag_tap_ctrl_t	SEP jtag_{tck,tms,trst_n} when SEP=1, else unused
jtag_stap_sep_host_tdi_i	input	1	SEP jtag_tdo when SEP=1, else 1'b0
jtag_stap_sep_host_tdo_o	output	1	SEP jtag_tdi when SEP=1, else unused
jtag_stap_sep_host_tdo_oen_o	output	1	Internal only; not consumed by SEP at SMU level

Extra STAP Interfaces

Port	Direction	Width	SMU Connection
jtag_stap_extra_host_tap_ctrl_o	output	jtag_tap_ctrl_t[JTAG_NUM_EXTRA_STAP_PORTS-1:0]	SMU external port
jtag_stap_extra_host_tdi_i	input	[JTAG_NUM_EXTRA_STAP_PORTS-1:0]	SMU external port
jtag_stap_extra_host_tdo_o	output	[JTAG_NUM_EXTRA_STAP_PORTS-1:0]	SMU external port
jtag_stap_extra_host_tdo_oen_o	output	[JTAG_NUM_EXTRA_STAP_PORTS-1:0]	SMU external port

Extended STAP Scan Interface

Port	Direction	Width	SMU Connection
jtag_stap_host_scan_ctrl_o	output	jtag_scan_ctrl_t	SMU external port
jtag_stap_host_scan_in_i	input	1	SMU external port
jtag_stap_host_scan_out_o	output	1	SMU external port

DFD iJTAG Interface

Port	Direction	Width	SMU Connection
jtag_dfd_host_scan_ctrl_o	output	jtag_scan_ctrl_t	SMU external port
jtag_dfd_host_scan_in_i	input	1	SMU external port
jtag_dfd_host_scan_out_o	output	1	SMU external port

DFT iJTAG Interface

Port	Direction	Width	SMU Connection
jtag_dft_host_scan_ctrl_o	output	jtag_scan_ctrl_t	SMU external port

Port	Direction	Width	SMU Connection
jtag_dft_host_scan_in_i	input	1	SMU external port
jtag_dft_host_scan_out_o	output	1	SMU external port

SMC Fabric Debug AXI Interface

Port	Direction	Width	SMU Connection
axi_smc_dbg_req_o	output	smc_jtag_axi_req_t	SMC jtag_axi_in_req_i
axi_smc_dbg_resp_i	input	smc_jtag_axi_resp_t	SMC jtag_axi_in_resp_o

SMC OTP Debug AXI-Lite Interface

Port	Direction	Width	SMU Connection
axil_smc_otp_jtag_req_o	output	smc_otp_axil_req_t	SMC axil_smc_otp_jtag_req_i
axil_smc_otp_jtag_resp_i	input	smc_otp_axil_resp_t	SMC axil_smc_otp_jtag_resp_o

SEP OTP Debug AXI-Lite Interface

When `SEP=1`, this interface connects to the SEP `axil_sep_otp_jtag_*` ports. When `SEP=0`, the SMU instantiates `u_sep_otp_axil_err_slv`, which responds with DECERR to all transactions.

Port	Direction	Width	SMU Connection
axil_sep_otp_jtag_req_o	output	sep_otp_axil_req_t	SEP <code>axil_sep_otp_jtag_req_i</code> when <code>SEP=1</code> , else AXI-Lite error slave (<code>u_sep_otp_axil_err_slv</code>)
axil_sep_otp_jtag_resp_i	input	sep_otp_axil_resp_t	SEP <code>axil_sep_otp_jtag_resp_o</code> when <code>SEP=1</code> , else AXI-Lite error slave (<code>u_sep_otp_axil_err_slv</code>)

Clock Control

Port	Direction	Width	SMU Connection
stop_clks_o	output	1	SMU external port: <code>dtb_stop_clks_o</code> (to PLL clock gates)

Boot Stall Control

Port	Direction	Width	SMU Connection
jtag_boot_stall_ovrd_o	output	1	SMC <code>boot_stall_jtag_ovrd_i</code>
jtag_boot_stall_o	output	1	SMC <code>boot_stall_jtag_val_i</code>

JTAG Reset Control

Port	Direction	Width	SMU Connection
jtag_ic_reset_smc_o	output	smc_pkg::jtag_smc_reset_ctrl_t	SMC <code>jtag_smc_reset_ctrl_i</code> (packed struct with <code>.ovrd</code> override enables and <code>.val</code> active-low override values)
jtag_ic_reset_sep_o	output	sep_pkg::jtag_sep_reset_ctrl_t	SEP <code>jtag_sep_reset_ctrl_i</code> (packed struct with <code>.ovrd</code> override enables and <code>.val</code> active-low override values); SMU-internal, no SMU port
jtag_ic_reset_ext_o	output	ic_reset_ext_t	SMU <code>jtag_ic_reset_ext_o</code> external port (integrator-defined packed struct; carries reset overrides for logic outside the SMU)

JTAG State Outputs

Port	Direction	Width	SMU Connection
jtag_ptap_state_o	output	tap_state_e	SMU external port
jtag_ptap_inst_decoded_o	output	jtag_instruction_decoded_e	SMU external port

Cross Trigger CSR AXI-Lite Interface

Port	Direction	Width	SMU Connection
axil_xtrig_req_i	input	xtrig_axil_req_t	SMC axil_dtp_csr_req_o
axil_xtrig_resp_o	output	xtrig_axil_resp_t	SMC axil_dtp_csr_resp_i

Cross Trigger Matrix Interface

Port	Direction	Width	SMU Connection
xtrig_ctm_src_req_o	output	[XTRIG_NUM_INT_CT-1:0]	[1:0]: SMU internal (SMC), [9:2]: SMU external xtrig_ctm_src_req_o[7:0]
xtrig_ctm_src_ack_i	input	[XTRIG_NUM_INT_CT-1:0]	[1:0]: Tie-off (SMC), [9:2]: SMU external xtrig_ctm_src_ack_i[7:0]
xtrig_ctm_dst_req_i	input	[XTRIG_NUM_INT_CT-1:0]	[1:0]: SMC xtrigger_ss_o[1:0], [9:2]: SMU external xtrig_ctm_dst_req_i[7:0]
xtrig_ctm_dst_ack_o	output	[XTRIG_NUM_INT_CT-1:0]	[1:0]: Unused (SMC connection), [9:2]: SMU external xtrig_ctm_dst_ack_o[7:0]

Internal cross trigger ports [1:0] are reserved for SMC (both bits of `xtrigger_ss_o`). The SMU exposes ports [9:2] as external ports [7:0], so the SMU `XTRIG_NUM_INT_CT` parameter is two less than DTP's (8 vs 10). The SMC uses pulse-synchronization mode, so ack signals for ports [1:0] are unused: `xtrig_ctm_src_ack_i[1:0]` should be tied to `2'b00` and `xtrig_ctm_dst_ack_o[1:0]` are left unconnected. The usage of ack signals depends on the `XTRIG_INT_CT_MODE` parameter: when a mode bit is 0 (pulse synchronization), the corresponding ack is unused; when 1 (req/ack handshaking), the ack must be connected to the cross trigger endpoint.

Clock Stop Request Interface

Port	Direction	Width	SMU Connection
xtrig_clk_stop_req_i	input	[XTRIG_NUM_CLK_STOP_REQ-1:0]	[0]: SMC tdr_dbg_ctrl_clocks_stopped_by_cla_o, [8:1]: SMU external xtrig_clk_stop_req_i[7:0]

Clock stop request port #0 is reserved for SMC. The SMU exposes ports [8:1] as external ports [7:0], so the SMU `XTRIG_NUM_CLK_STOP_REQ` parameter should be one less than DTP's (8 vs 9).

Cross Trigger Port GPIO Interface

The 16 CTP signals from DTP are ported through the SMU and are direct `smu_wrapper` external ports (connected through the `.*` SMU instantiation). The adopter must connect them to GPIO pad logic; no tie-off or dangling is present in the wrapper itself.

Port	Direction	Width	SMU Connection
xtrig_ctp_req_out_dout_o	output	[15:0]	SMU external port; connect to GPIO pad logic
xtrig_ctp_req_out_dout_en_o	output	[15:0]	SMU external port; connect to GPIO pad logic

Port	Direction	Width	SMU Connection
xtrig_ctp_req_out_din_i	input	[15:0]	SMU external port; connect to GPIO pad logic
xtrig_ctp_req_out_din_en_o	output	[15:0]	SMU external port; connect to GPIO pad logic
xtrig_ctp_req_in_dout_o	output	[15:0]	SMU external port; connect to GPIO pad logic
xtrig_ctp_req_in_dout_en_o	output	[15:0]	SMU external port; connect to GPIO pad logic
xtrig_ctp_req_in_din_i	input	[15:0]	SMU external port; connect to GPIO pad logic
xtrig_ctp_req_in_din_en_o	output	[15:0]	SMU external port; connect to GPIO pad logic
xtrig_ctp_ack_in_dout_o	output	[15:0]	SMU external port; connect to GPIO pad logic
xtrig_ctp_ack_in_dout_en_o	output	[15:0]	SMU external port; connect to GPIO pad logic
xtrig_ctp_ack_in_din_i	input	[15:0]	SMU external port; connect to GPIO pad logic
xtrig_ctp_ack_in_din_en_o	output	[15:0]	SMU external port; connect to GPIO pad logic
xtrig_ctp_ack_out_dout_o	output	[15:0]	SMU external port; connect to GPIO pad logic
xtrig_ctp_ack_out_dout_en_o	output	[15:0]	SMU external port; connect to GPIO pad logic
xtrig_ctp_ack_out_din_i	input	[15:0]	SMU external port; connect to GPIO pad logic
xtrig_ctp_ack_out_din_en_o	output	[15:0]	SMU external port; connect to GPIO pad logic

22.6.8. SMC Port Mapping

The following tables define the complete SMC port list as connected within the SMU. Ports marked "SMU external port" are exposed on the SMU boundary. Ports marked with "DTP" or "SEP" are wired internally.

Clocks

Port	Direction	Width	SMU Connection
clk_smc_i	input	1	SMU <code>clk_smu_i</code> (shared with DTP <code>clk_i</code>)
clk_periph_i	input	1	SMU external port
clk_ref_i	input	1	SMU external port

Resets

Port	Direction	Width	SMU Connection
rst_cold_ni	input	1	SMU external port
rst_primary_ref_clk_no	output	1	SMU external port
rst_primary_smc_clk_no	output	1	SMU external port + DTP <code>rst_n_i</code>

System AXI Input

Port	Direction	Width	SMU Connection
sys_axi_in_req_i	input	<code>smc_sys_in_56_64_6_12_axi_req_t</code>	SMU external port
sys_axi_in_resp_o	output	<code>smc_sys_in_56_64_6_12_axi_resp_t</code>	SMU external port

JTAG AXI Input

Port	Direction	Width	SMU Connection
jtag_axi_in_req_i	input	<code>smc_jtag_56_64_2_12_axi_req_t</code>	DTP <code>axi_smc_dbg_req_o</code>

Port	Direction	Width	SMU Connection
jtag_axi_in_resp_o	output	smc_jtag_56_64_2_12_axi_resp_t	DTP axi_smc_dbg_resp_i

SMC OTP JTAG AXI-Lite

Port	Direction	Width	SMU Connection
axil_smc_otp_jtag_req_i	input	efuse_axil_req_t	DTP axil_smc_otp_jtag_req_o
axil_smc_otp_jtag_resp_o	output	efuse_axil_resp_t	DTP axil_smc_otp_jtag_resp_i

SEP AXI Input

When **SEP=0**, the SEP AXI subordinate input is tied off to '0' and the response output is left unconnected. When **SEP=1**, the SMU drives this path from the SEP-to-SMC dedicated AXI connection.

Port	Direction	Width	SMU Connection
sep_axi_in_req_i	input	smc_sep_in_56_64_6_12_axi_req_t	Tied off to '0' (no incoming transactions)
sep_axi_in_resp_o	output	smc_sep_in_56_64_6_12_axi_resp_t	Unconnected (no transactions to respond to)

AXI Output

Port	Direction	Width	SMU Connection
output_axi_req_o	output	smc_sys_out_56_64_8_12_axi_req_t	SMU external port
output_axi_resp_i	input	smc_sys_out_56_64_8_12_axi_resp_t	SMU external port

DTP CSR Interface

Port	Direction	Width	SMU Connection
axil_dtp_csr_req_o	output	smc_axil_32_32_req_t	DTP axil_xtrig_req_i
axil_dtp_csr_resp_i	input	smc_axil_32_32_resp_t	DTP axil_xtrig_resp_o

Adopter Peripheral Window AXI-Lite

Port	Direction	Width	SMU Connection
smc_external_req_o	output	smc_axil_32_32_req_t	SMU external port (to adopter peripherals)
smc_external_resp_i	input	smc_axil_32_32_resp_t	SMU external port (from adopter peripherals)

eFuse Interface

Port	Direction	Width	SMU Connection
efuse_bank_ctrl_req_o	output	efuse_axil_req_t	SMU external port
efuse_bank_ctrl_resp_i	input	efuse_axil_resp_t	SMU external port
efuse_shim_command_req_o	output	fuse_command_req_t	SMU external port
efuse_shim_command_resp_i	input	fuse_command_resp_t	SMU external port
shadow_regs_o	output	efuse_map_t	SMU external port

GPIO Data Signals

Port	Direction	Width	SMU Connection
lsio_interface_select_o	output	[NUM_GPIO_WRAPS-1:0]	SMU external port
pad2core_i	input	[NUM_GPIO_WRAPS-1:0]	SMU external port
core2pad_o	output	[NUM_GPIO_WRAPS-1:0]	SMU external port
pad2core_en_o	output	[NUM_GPIO_WRAPS-1:0]	SMU external port
core2pad_en_o	output	[NUM_GPIO_WRAPS-1:0]	SMU external port

GPIO External Pins

Port	Direction	Width	SMU Connection
rst_cool_n_from_pin_i	input	1	SMU external port

ATB Telemetry

Port	Direction	Width	SMU Connection
clk_telemetry_i	input	1	SMU external port
rst_telemetry_ni	input	1	SMU external port
telemetry_atdata_i	input	telemetry_data_t[NUM_TELEMETRY_RECEIVERS-1:0]	SMU external port
telemetry_atid_i	input	atb_id_t[NUM_TELEMETRY_RECEIVERS-1:0]	SMU external port
telemetry_atready_o	output	[NUM_TELEMETRY_RECEIVERS-1:0]	SMU external port
telemetry_atvalid_i	input	[NUM_TELEMETRY_RECEIVERS-1:0]	SMU external port
telemetry_afvalid_o	output	[NUM_TELEMETRY_RECEIVERS-1:0]	SMU external port
telemetry_afready_i	input	[NUM_TELEMETRY_RECEIVERS-1:0]	SMU external port

DED/WDT

Port	Direction	Width	SMU Connection
smc_cluster_ded_o	output	1	SMU external port
smc_wdt_first_timeout_o	output	1	SMU external port
smc_wdt_second_timeout_o	output	1	SMU external port

Region Size

Port	Direction	Width	SMU Connection
smc_region_size_o	output	[31:0]	SMU external port

External Interrupts

Port	Direction	Width	SMU Connection
smc_ext_interrupts_i	input	[NUM_EXT_INTERRUPTS-1:0]	SMU external port
sep_mailbox_interrupts_i	input	[7:0]	Internal: from SEP smc_mailbox_interrupt_o when SEP=1, else tied to '0

Port	Direction	Width	SMU Connection
sep_wdt_reset_n_i	input	1	Internal: ~sep_wdt_timer_rst_req when SEP=1, else tied to 10b1

Fuse Signals

Port	Direction	Width	SMU Connection
smc_fuse_sense_done_o	output	1	SMU external port
smc_fuse_reset_n_delayed_o	output	1	SMU external port

DFT Signals

Port	Direction	Width	SMU Connection
skip_mem_repair_o	output	1	SMU external port
ext_boot_seq_done_i	input	1	SMU external port

Lifecycle State

Port	Direction	Width	SMU Connection
lc_state_o	output	[2*LC_STATE_WIDTH-1:0]	SEP lifecycle state when SEP=1, else 80hf0; ported through SMU
lc_sigint_err_o	output	1	SEP lifecycle integrity error when SEP=1, else SMC efuse_lc_sigint_err

Mailbox Interrupts

Port	Direction	Width	SMU Connection
smc_ext_mailbox_interrupts_o	output	[NUM_MAILBOXES-1:0]	SMU external port

Reset Unit Signals

Port	Direction	Width	SMU Connection
cfg_flr_pf_active_i	input	1	SMU external port
isolate_req_o	output	[31:0]	SMU external port
ss_reset_complete_i	input	[31:0]	SMU external port
ss_config_o	output	[31:0]	SMU external port
ss_reset_ctrl_o	output	reset_ctrl_t[31:0]	SMU external port
sync_irq_o	output	1	SMU external port

CPU Memory Signals

Port	Direction	Width	SMU Connection
smc_rom_intf_req_o	output	rom_req_t	SMU external port
smc_rom_intf_rsp_i	input	rom_rsp_t	SMU external port
smc_scratch_ram_intf_req_o	output	scratch_ram_req_t[31:0]	SMU external port
smc_scratch_ram_intf_rsp_i	input	scratch_ram_rsp_t[31:0]	SMU external port
smc_l1_icache_tag_intf_req_o	output	l1_icache_tag_req_t[3:0]	SMU external port

Port	Direction	Width	SMU Connection
<code>smc_l1_icache_tag_intf_rsp_i</code>	input	<code>l1_icache_tag_rsp_t[3:0]</code>	SMU external port
<code>smc_l1_icache_data_intf_req_o</code>	output	<code>l1_icache_data_req_t[7:0]</code>	SMU external port
<code>smc_l1_icache_data_intf_rsp_i</code>	input	<code>l1_icache_data_rsp_t[7:0]</code>	SMU external port
<code>smc_l1_dcache_tag_intf_req_o</code>	output	<code>l1_dcache_tag_req_t[3:0]</code>	SMU external port
<code>smc_l1_dcache_tag_intf_rsp_i</code>	input	<code>l1_dcache_tag_rsp_t[3:0]</code>	SMU external port
<code>smc_l1_dcache_data_intf_req_o</code>	output	<code>l1_dcache_data_req_t[3:0]</code>	SMU external port
<code>smc_l1_dcache_data_intf_rsp_i</code>	input	<code>l1_dcache_data_rsp_t[3:0]</code>	SMU external port

Memory Init

Port	Direction	Width	SMU Connection
<code>smc_disable_sram_auto_init_i</code>	input	1	SMU external port
<code>smc_init_mem_done_o</code>	output	1	SMU external port

System Timer OCTS Interface

Port	Direction	Width	SMU Connection
<code>timer_count_o</code>	output	[63:0]	SMU external port

Reset Overrides (from DTP)

Port	Direction	Width	SMU Connection
<code>jtag_reset_ctrl_i</code>	input	<code>smc_pkg::jtag_smc_reset_ctrl_t</code>	DTP <code>jtag_ic_reset_smc_o</code> (packed struct with <code>.ovrd</code> override enables and <code>.val</code> active-low override values)

DFD Signals

Port	Direction	Width	SMU Connection
<code>cla_gpio_enable_o</code>	output	1	SMU external port
<code>tdr_dbg_ctrl_clock_stop_en_i</code>	input	1	DTP <code>cla_clock_stop_en_o</code>
<code>tdr_dbg_ctrl_clocks_stopped_by_cla_o</code>	output	1	DTP <code>xtrig_clk_stop_req_i[0]</code> (SMU connects SMC output to DTP input)

Cross Trigger Interface

Port	Direction	Width	SMU Connection
<code>xtrigger_ss_i</code>	input	<code>smc_pkg::xtrigger_t</code>	SMU internal: DTP <code>xtrig_ctm_src_req_o[1:0]</code> → SMC. Not an SMU external port.
<code>xtrigger_ss_o</code>	output	<code>smc_pkg::xtrigger_t</code>	SMU internal: SMC → DTP <code>xtrig_ctm_dst_req_i[1:0]</code> . Not an SMU external port.

Trace Memory

Port	Direction	Width	SMU Connection
<code>trace_mem_req_o</code>	output	<code>SinkMemPktIn_s[TRC_RAM_INSTANCES-1:0]</code>	SMU external port

Port	Direction	Width	SMU Connection
<code>trace_mem_resp_i</code>	input	<code>SinkMemPktOut_s[TRC_RAM_INSTANCES-1:0]</code>	SMU external port

External Debug Bus

Port	Direction	Width	SMU Connection
<code>ext_debug_bus_i</code>	input	[127:0]	SMU external port

Test Mode

Port	Direction	Width	SMU Connection
<code>test_en_i</code>	input	1	SMU external port
<code>scan_rst_ni</code>	input	1	SMU external port

22.6.9. SMC-DTP Internal Interconnection

The following table summarizes the key internal connections between the DTP and SMC within the SMU. These connections are not visible on the SMU boundary.

Connection	DTP Port	SMC Port	Direction	Notes
AXI Debug Bus	<code>axi_smc_dbg_req_o</code>	<code>jtag_axi_in_req_i</code>	DTP → SMC	
	<code>axi_smc_dbg_resp_i</code>	<code>jtag_axi_in_resp_o</code>	SMC → DTP	
AXI OTP Bus	<code>axil_smc_otp_jtag_req_o</code>	<code>axil_smc_otp_jtag_req_i</code>	DTP → SMC	
	<code>axil_smc_otp_jtag_resp_i</code>	<code>axil_smc_otp_jtag_resp_o</code>	SMC → DTP	
DTP CSR Bus	<code>axil_xtrig_req_i</code>	<code>axil_dtp_csr_req_o</code>	SMC → DTP	
	<code>axil_xtrig_resp_o</code>	<code>axil_dtp_csr_resp_i</code>	DTP → SMC	
JTAG SMC Reset Overrides	<code>jtag_ic_reset_smc_o</code>	<code>jtag_reset_ctrl_i</code>	DTP → SMC	Packed <code>smc_pkg::jtag_smc_reset_ctrl_t</code> struct carrying all SMC reset override enables and active-low values
DTP Reset	<code>rst_n_i</code>	<code>rst_primary_smc_clk_no</code>	SMC → DTP	
Cross Trigger [1:0]	<code>xtrig_ctm_dst_req_i[1:0]</code>	<code>xtrigger_ss_o[1:0]</code>	SMC → DTP	Both bits
Clock Stop #0	<code>xtrig_clk_stop_req_i[0]</code>	<code>tdr_dbg_ctrl_clocks_stopped_by_cla_o</code>	SMC → DTP	
Boot Stall	<code>jtag_boot_stall_ovrd_o</code>	<code>boot_stall_jtag_ovrd_i</code>	DTP → SMC	
	<code>jtag_boot_stall_o</code>	<code>boot_stall_jtag_val_i</code>	DTP → SMC	

22.6.10. SEP-Conditional Wiring

SEP-related interfaces are handled internally within the SMU. Their behavior depends on the module parameter `SEP`.

Module/Signal	Implementation	Description
SMC SEP AXI Input	<code>sep_axi_in_req_i</code> = SEP traffic when <code>SEP=1</code> , else '0	Dedicated SEP-to-SMC subordinate path
DTP SEP OTP JTAG	SEP <code>axil_sep_otp_jtag_*</code> when <code>SEP=1</code> , else <code>u_sep_otp_axil_err_slv</code>	SEP OTP debug AXI-Lite path
DTP SEP STAP return	SEP <code>jtag_tdo</code> when <code>SEP=1</code> , else <code>sep_stap_tdo_to_dtp = 10b0</code>	SEP JTAG STAP return path

Module/Signal	Implementation	Description
SMU	<code>sep_mailbox_interrupts</code>	Internal SEP-to-SMC mailbox interrupts when <code>SEP=1</code> , else '0
SMC	<code>sep_wdt_reset_n_i</code> = <code>~sep_wdt_timer_rst_req</code> when <code>SEP=1</code> , else 1'b1	SEP watchdog reset input to SMC

Other Internal Tie-offs

Module	Port	Tie-off Value	Reason
DTP	<code>xtrig_ctm_src_ack_i[1:0]</code>	2'b00	SMC uses pulse-sync mode

`xtrig_ctm_src_ack_i[9:2]` (exposed as SMU `xtrig_ctm_src_ack_i[7:0]`) is ported out through the SMU. The integrator should tie off to '0 when using pulse-sync mode (`XTRIG_INT_CT_MODE` bit = 0), or connect to actual ack signals when using req/ack mode (bit = 1).

22.6.11. SMU Port Interface

The SMU exposes a single consolidated boundary that an adopter connects to at the chip or chiplet level. The following table defines all SMU top-level ports including clock, reset, JTAG, cross trigger, SMC-originated interfaces (AXI, GPIO, eFuse, PLL, PVT, memory), and SEP passthrough interfaces (memory macros, eFuse, crypto SRAM, SPI, AXI extension). Ports prefixed with `sep_` are only active when the module parameter `SEP=1`.

Table 21. SMU Port Declaration

Interface Name	Type	Direction	Width	Description	Connection	Default value (if applicable)
<code>clk_smu_i</code>	logic	Input	1	Primary SMU clock domain. Shared by SMC and DTP system logic.	PLL output	N/A
<code>clk_ref_i</code>	logic	Input	1	Reference clock domain for timing-sensitive operations.	PLL reference clock	N/A
<code>rst_cold_ni</code>	logic	Input	1	Cold reset (active low). Asynchronous assertion, synchronous deassertion. Also serves as DTP power-on reset.	System cold reset	N/A
<code>rst_cold_stable_ref_clk_no</code>	logic	Output	1	Stable cold reset synchronized to reference clock domain (active low).	Downstream subsystems	N/A
<code>powergood_i</code>	logic	Input	1	Power-good indication from supply supervisor.	Power supply supervisor	N/A
<code>jtag_ptap_client_tap_ctrl_i</code>	<code>prim_jtag_pkg::jtag_tap_ctrl_t</code>	Input	-	Primary JTAG TAP control (TCK, TMS, TRST_N).	External JTAG pads	N/A
<code>jtag_ptap_client_tdi_i</code>	logic	Input	1	Primary JTAG TDI.	External JTAG pads	N/A
<code>jtag_ptap_client_tdo_o</code>	logic	Output	1	Primary JTAG TDO.	External JTAG pads	N/A
<code>jtag_ptap_client_tdo_oen_o</code>	logic	Output	1	Primary JTAG TDO output enable.	External JTAG pads	N/A
<code>jtag_bsr_host_scan_ctrl_o</code>	<code>prim_jtag_pkg::jtag_scan_ctrl_t</code>	Output	-	Boundary scan control.	Boundary scan chain	N/A
<code>jtag_bsr_host_scan_in_i</code>	logic	Input	1	Boundary scan data in.	Boundary scan chain	N/A
<code>jtag_bsr_host_scan_out_o</code>	logic	Output	1	Boundary scan data out.	Boundary scan chain	N/A

Interface Name	Type	Direction	Width	Description	Connection	Default value (if applicable)
jtag_stap_io_host_tap_ctrl_o	prim_jtag_pkg::jtag_tap_ctrl_t	Output	-	I/O STAP TAP control.	I/O STAP host	N/A
jtag_stap_io_host_tdi_i	logic	Input	1	I/O STAP TDI.	I/O STAP host	Tie to '0 if unused
jtag_stap_io_host_tdo_o	logic	Output	1	I/O STAP TDO.	I/O STAP host	N/A
jtag_stap_io_host_tdo_oen_o	logic	Output	1	I/O STAP TDO output enable.	I/O STAP host	N/A
jtag_stap_extra_host_tap_ctrl_o	prim_jtag_pkg::jtag_tap_ctrl_t	Output	[JTAG_NUM_EXTRA_STAP_PORTS-1:0]	Extra STAP TAP control array.	Extra STAP hosts	Tie to '0 if unused
jtag_stap_extra_host_tdi_i	logic	Input	[JTAG_NUM_EXTRA_STAP_PORTS-1:0]	Extra STAP TDI array.	Extra STAP hosts	Tie to '0 if unused
jtag_stap_extra_host_tdo_o	logic	Output	[JTAG_NUM_EXTRA_STAP_PORTS-1:0]	Extra STAP TDO array.	Extra STAP hosts	N/A
jtag_stap_extra_host_tdo_oen_o	logic	Output	[JTAG_NUM_EXTRA_STAP_PORTS-1:0]	Extra STAP TDO output enable array.	Extra STAP hosts	N/A
jtag_stap_host_scan_ctrl_o	prim_jtag_pkg::jtag_scan_ctrl_t	Output	-	Extended STAP scan control.	STAP scan chain	N/A
jtag_stap_host_scan_in_i	logic	Input	1	Extended STAP scan data in.	STAP scan chain	N/A
jtag_stap_host_scan_out_o	logic	Output	1	Extended STAP scan data out.	STAP scan chain	N/A
jtag_dfd_host_scan_ctrl_o	prim_jtag_pkg::jtag_scan_ctrl_t	Output	-	DFD iJTAG scan control.	DFD iJTAG chain	N/A
jtag_dfd_host_scan_in_i	logic	Input	1	DFD iJTAG scan data in.	DFD iJTAG chain	N/A
jtag_dfd_host_scan_out_o	logic	Output	1	DFD iJTAG scan data out.	DFD iJTAG chain	N/A
jtag_dft_secure_host_scan_ctrl_o	prim_jtag_pkg::jtag_scan_ctrl_t	Output	-	Secure DFT iJTAG scan control.	Secure DFT iJTAG chain	N/A
jtag_dft_secure_host_scan_in_i	logic	Input	1	Secure DFT iJTAG scan data in.	Secure DFT iJTAG chain	N/A
jtag_dft_secure_host_scan_out_o	logic	Output	1	Secure DFT iJTAG scan data out.	Secure DFT iJTAG chain	N/A
jtag_dft_host_scan_ctrl_o	prim_jtag_pkg::jtag_scan_ctrl_t	Output	-	Non-secure DFT iJTAG scan control.	Non-secure DFT iJTAG chain	N/A
jtag_dft_host_scan_in_i	logic	Input	1	Non-secure DFT iJTAG scan data in.	Non-secure DFT iJTAG chain	N/A
jtag_dft_host_scan_out_o	logic	Output	1	Non-secure DFT iJTAG scan data out.	Non-secure DFT iJTAG chain	N/A
dtp_stop_clks_o	logic	Output	1	Clock stop output from DTP (JTAG DEBUG_CONTROL or CLA clock-stop).	PLL clock gates	N/A
jtag_ptap_state_o	jtag_tap_pkg::tap_state_e	Output	-	Current PTAP TAP state.	Debug infrastructure	N/A
jtag_ptap_inst_decoded_o	jtag_inst_reg_pkg::jtag_instruction_decoded_e	Output	-	Current decoded PTAP instruction.	Debug infrastructure	N/A

Interface Name	Type	Direction	Width	Description	Connection	Default value (if applicable)
jtag_ic_reset_ext_o	ic_reset_ext_t	Output	\$bits(ic_reset_ext_t)	External JTAG IC_RESET override slice. Integrator-defined packed struct with .ovrd override enables and .val active-low override values. Driven by the DTP's jtag_ic_reset_ext_o when Cfg.JTAG_IC_RESET_ENABLE=1, otherwise tied to '0. An integrator needing JTAG reset overrides for logic outside the SMU sets ic_reset_ext_t to their own override struct and routes this port to it; the SMU does not define that type.	Integrator-defined reset overrides	N/A
xtrig_ctm_src_req_o	logic	Output	[XTRIG_NUM_INT_CT-1:0]	Cross trigger source requests (SMU external ports [7:0]; DTP [1:0] reserved for SMC).	Cross trigger network	N/A
xtrig_ctm_src_ack_i	logic	Input	[XTRIG_NUM_INT_CT-1:0]	Cross trigger source acknowledges. Unused in pulse-sync mode (mode bit = 0).	Cross trigger network	Tie to '0 in pulse-sync mode
xtrig_ctm_dst_req_i	logic	Input	[XTRIG_NUM_INT_CT-1:0]	Cross trigger destination requests.	Cross trigger network	Tie to '0 if unused
xtrig_ctm_dst_ack_o	logic	Output	[XTRIG_NUM_INT_CT-1:0]	Cross trigger destination acknowledges. Unused in pulse-sync mode.	Cross trigger network	N/A
xtrig_clk_stop_req_i	logic	Input	[XTRIG_NUM_CLK_STOP_REQ-1:0]	Clock stop requests (SMU external ports [7:0]; port [0] reserved for SMC internally).	Clock stop requesters	Tie to '0 if unused
xtrig_ctp_req_out_dout_o	logic	Output	[XTRIG_NUM_CTP-1:0]	CTP request-out data output.	GPIO pad ring	N/A
xtrig_ctp_req_out_dout_en_o	logic	Output	[XTRIG_NUM_CTP-1:0]	CTP request-out data output enable.	GPIO pad ring	N/A
xtrig_ctp_req_out_din_i	logic	Input	[XTRIG_NUM_CTP-1:0]	CTP request-out data input.	GPIO pad ring	Tie to '0 if unused
xtrig_ctp_req_out_din_en_o	logic	Output	[XTRIG_NUM_CTP-1:0]	CTP request-out data input enable.	GPIO pad ring	N/A
xtrig_ctp_req_in_dout_o	logic	Output	[XTRIG_NUM_CTP-1:0]	CTP request-in data output.	GPIO pad ring	N/A
xtrig_ctp_req_in_dout_en_o	logic	Output	[XTRIG_NUM_CTP-1:0]	CTP request-in data output enable.	GPIO pad ring	N/A
xtrig_ctp_req_in_din_i	logic	Input	[XTRIG_NUM_CTP-1:0]	CTP request-in data input.	GPIO pad ring	Tie to '0 if unused
xtrig_ctp_req_in_din_en_o	logic	Output	[XTRIG_NUM_CTP-1:0]	CTP request-in data input enable.	GPIO pad ring	N/A
xtrig_ctp_ack_in_dout_o	logic	Output	[XTRIG_NUM_CTP-1:0]	CTP ack-in data output.	GPIO pad ring	N/A
xtrig_ctp_ack_in_dout_en_o	logic	Output	[XTRIG_NUM_CTP-1:0]	CTP ack-in data output enable.	GPIO pad ring	N/A
xtrig_ctp_ack_in_din_i	logic	Input	[XTRIG_NUM_CTP-1:0]	CTP ack-in data input.	GPIO pad ring	Tie to '0 if unused
xtrig_ctp_ack_in_din_en_o	logic	Output	[XTRIG_NUM_CTP-1:0]	CTP ack-in data input enable.	GPIO pad ring	N/A
xtrig_ctp_ack_out_dout_o	logic	Output	[XTRIG_NUM_CTP-1:0]	CTP ack-out data output.	GPIO pad ring	N/A
xtrig_ctp_ack_out_dout_en_o	logic	Output	[XTRIG_NUM_CTP-1:0]	CTP ack-out data output enable.	GPIO pad ring	N/A
xtrig_ctp_ack_out_din_i	logic	Input	[XTRIG_NUM_CTP-1:0]	CTP ack-out data input.	GPIO pad ring	Tie to '0 if unused

Interface Name	Type	Direction	Width	Description	Connection	Default value (if applicable)
xtrig_ctp_ack_out_din_en_o	logic	Output	[XTRIG_NUM_CTP-1:0]	CTP ack-out data input enable.	GPIO pad ring	N/A
rst_primary_ref_clk_no	logic	Output	1	Primary reset synchronized to reference clock domain (active low).	Downstream subsystems	N/A
rst_primary_smc_clk_no	logic	Output	1	Primary reset synchronized to SMC clock domain (active low).	Downstream subsystems	N/A
smu_axi_in_req_i	smu_axi_xbar_pkg::axi_56_64_req_t	Input	-	SMU AXI crossbar inbound request (from SMN).	SMN fabric	Tie to '0 if unused
smu_axi_in_resp_o	smu_axi_xbar_pkg::axi_56_64_resp_t	Output	-	SMU AXI crossbar inbound response.	SMN fabric	N/A
smu_axi_out_req_o	smu_axi_xbar_pkg::axi_out_req_t	Output	-	SMU AXI crossbar outbound request (to SMN).	SMN fabric	N/A
smu_axi_out_resp_i	smu_axi_xbar_pkg::axi_out_resp_t	Input	-	SMU AXI crossbar outbound response.	SMN fabric	Tie to '0 if unused
smc_external_req_o	smc_pkg::smc_axil_32_req_t	Output	-	SMC AXI-Lite external port request for adopter peripheral expansion.	Adopter peripherals	N/A
smc_external_resp_i	smc_pkg::smc_axil_32_resp_t	Input	-	SMC AXI-Lite external port response.	Adopter peripherals	Tie to DECERR if unused
smc_efuse_bank_ctrl_req_o	smc_pkg::smc_axil_32_req_t	Output	-	SMC eFuse bank control AXI-Lite request.	eFuse shim	N/A
smc_efuse_bank_ctrl_resp_i	smc_pkg::smc_axil_32_resp_t	Input	-	SMC eFuse bank control AXI-Lite response.	eFuse shim	N/A
smc_efuse_shim_command_req_o	smc_efuse_pkg::fuse_command_req_t	Output	-	SMC eFuse command interface request.	eFuse shim	N/A
smc_efuse_shim_command_resp_i	smc_efuse_pkg::fuse_command_resp_t	Input	-	SMC eFuse command interface response.	eFuse shim	N/A
smc_shadow_regs_o	smc_efuse_pkg::efuse_map_t	Output	-	SMC eFuse shadow register output.	External systems	N/A
pll_clk_obs_i	logic	Input	1	PLL clock observation input.	PLL shim	N/A
pll_clk_obs_en_i	logic	Input	1	PLL clock observation enable.	Control logic	N/A
pvt_process_clk_obs_i	logic	Input	1	PVT process monitor clock observation input.	PVT shim	N/A
pvt_process_clk_obs_en_i	logic	Input	1	PVT process monitor clock observation enable.	Control logic	N/A
cat_therm_i	logic	Input	1	CAT thermal sensor input.	CAT thermal sensor	Tie to '0 if unused
lsio_interface_select_o	logic	Output	[NUM_GPIO_WRAPS-1:0]	LSIO interface selection.	GPIO padding	N/A
pad2core_i	logic	Input	[NUM_GPIO_WRAPS-1:0]	GPIO input data from pad ring to core.	GPIO padding → SMU	N/A
core2pad_o	logic	Output	[NUM_GPIO_WRAPS-1:0]	GPIO output data from core to pad ring.	SMU → GPIO padding	N/A
pad2core_en_o	logic	Output	[NUM_GPIO_WRAPS-1:0]	GPIO pad-to-core path enable.	SMU → GPIO padding	N/A
core2pad_en_o	logic	Output	[NUM_GPIO_WRAPS-1:0]	GPIO core-to-pad path enable.	SMU → GPIO padding	N/A
rst_cool_n_from_pin_i	logic	Input	1	Cool reset input from GPIO pin.	GPIO pin	N/A
clk_telemetry_i	logic	Input	1	Telemetry clock domain for ATB data collection.	Telemetry clock source	N/A

Interface Name	Type	Direction	Width	Description	Connection	Default value (if applicable)
rst_telemetry_ni	logic	Input	1	Telemetry reset (active low).	Telemetry reset source	N/A
telemetry_atdata_i	telemetry_receiver_pkg::telemetry_data_t	Input	[NUM_TELEMETRY_RECEIVERS-1:0]	ATB telemetry data input array.	ATB sources	N/A
telemetry_atid_i	telemetry_receiver_pkg::atb_id_t	Input	[NUM_TELEMETRY_RECEIVERS-1:0]	ATB telemetry ID input array.	ATB sources	N/A
telemetry_atready_o	logic	Output	[NUM_TELEMETRY_RECEIVERS-1:0]	ATB telemetry ready output.	ATB sources	N/A
telemetry_atvalid_i	logic	Input	[NUM_TELEMETRY_RECEIVERS-1:0]	ATB telemetry valid input.	ATB sources	N/A
telemetry_avalid_o	logic	Output	[NUM_TELEMETRY_RECEIVERS-1:0]	ATB flush valid output.	ATB sources	N/A
telemetry_aflush_ready_i	logic	Input	[NUM_TELEMETRY_RECEIVERS-1:0]	ATB flush ready input.	ATB sources	N/A
smc_cluster_double_error_o	logic	Output	1	Cluster double error detection output.	External systems	N/A
smc_wdt_first_timeout_o	logic	Output	1	First watchdog timeout signal.	Reset unit	N/A
smc_wdt_second_timeout_o	logic	Output	1	Second watchdog timeout signal.	External systems	N/A
smc_region_size_o	logic	Output	[31:0]	SMC address region size output.	External systems	N/A
smc_ext_interrupts_i	logic	Input	[Cfg.NUM_INT_T0_SMC-1:0]	External interrupt inputs to SMC. Active-high level or a pulse long enough to be sampled on <code>clk_smc</code> .	External interrupt sources	Tie to '0 if unused
smc_fuse_sense_done_o	logic	Output	1	SMC fuse sense completion output.	Memory repair logic	N/A
smc_fuse_reset_n_delayed_o	logic	Output	1	Delayed fuse reset output.	External systems	N/A
skip_mem_repair_o	logic	Output	1	Skip memory repair output.	Memory repair logic	N/A
ext_boot_seq_done_i	logic	Input	1	External boot sequence completion input (memory repair and shadow register override done); gates reset release.	External boot/repair controller	N/A
lc_state_o	logic	Output	[2*LC_STATE_WIDTH-1:0]	Lifecycle state output (driven by SEP when <code>SEP=1</code> , else <code>8'hf0</code>).	External systems	N/A
lc_sigint_err_o	logic	Output	1	Lifecycle signal integrity error.	External systems	N/A
smc_ndmreset_request_i	logic	Input	[CPU_CLUSTER_COUNT-1:0]	Non-debug-module reset requests.	Debug infrastructure	Tie to '0 if unused
smc_ndmreset_process_o	logic	Output	[CPU_CLUSTER_COUNT-1:0]	Non-debug-module reset process indicators.	Debug infrastructure	N/A
smc_ext_mailbox_interrupts_o	logic	Output	[NUM_MAILBOXES-1:0]	External mailbox interrupt outputs.	External targets	N/A
cfg_flr_pf_active_i	logic	Input	1	Function Level Reset (FLR) PF active signal.	PCIe / system	Tie to '0 if unused

Interface Name	Type	Direction	Width	Description	Connection	Default value (if applicable)
isolate_req_o	logic	Output	[31:0]	Isolation request output for 32 subsystems.	Subsystems	N/A
ss_reset_complete_i	logic	Input	[31:0]	Subsystem reset completion status.	Subsystems	32'hFFFFFFFF
ss_config_o	logic	Output	[31:0]	Subsystem configuration output.	Subsystems	N/A
ss_reset_ctrl_o	smc_reset_unit_pkg::reset_ctrl_t	Output	[31:0]	Subsystem reset control output array.	Subsystems	N/A
sync_irq_o	logic	Output	1	Software-controlled global synchronisation bit (SYNC_REG.sync in the SMC reset unit). Not an interrupt aggregate output.	External systems	N/A
gpio_interrupt_o	logic	Output	[NUM_GPIO_WRAP-1:0]	Raw GPIO interrupt vector from the padding, one bit per GPIO wrap (bonded + unbonded). Passed through from SMC. Software reads GPIO status registers to identify the interrupt source.	SMC → external consumers	N/A, leave floating if unused
uart_interrupt_o	logic	Output	[NUM_UART-1:0]	Raw UART interrupt outputs, one bit per UART instance, in the peripheral clock domain. Passed through from SMC.	SMC → external consumers	N/A, leave floating if unused
smc_rom_intf_req_o	rom_req_t	Output	-	SMC ROM memory interface request.	Boot ROM	N/A
smc_rom_intf_rsp_i	rom_rsp_t	Input	-	SMC ROM memory interface response.	Boot ROM	N/A
smc_scratch_ram_intf_req_o	scratch_ram_req_t	Output	[31:0]	SMC scratch RAM interface requests.	Scratch RAM banks	N/A
smc_scratch_ram_intf_rsp_i	scratch_ram_rsp_t	Input	[31:0]	SMC scratch RAM interface responses.	Scratch RAM banks	N/A
smc_l1_icache_tag_intf_req_o	l1_icache_tag_req_t	Output	[3:0]	SMC L1 I-cache tag interface requests.	I-cache tag banks	N/A
smc_l1_icache_tag_intf_rsp_i	l1_icache_tag_rsp_t	Input	[3:0]	SMC L1 I-cache tag interface responses.	I-cache tag banks	N/A
smc_l1_icache_data_intf_req_o	l1_icache_data_req_t	Output	[7:0]	SMC L1 I-cache data interface requests.	I-cache data banks	N/A
smc_l1_icache_data_intf_rsp_i	l1_icache_data_rsp_t	Input	[7:0]	SMC L1 I-cache data interface responses.	I-cache data banks	N/A
smc_l1_dcache_tag_intf_req_o	l1_dcache_tag_req_t	Output	[3:0]	SMC L1 D-cache tag interface requests.	D-cache tag banks	N/A
smc_l1_dcache_tag_intf_rsp_i	l1_dcache_tag_rsp_t	Input	[3:0]	SMC L1 D-cache tag interface responses.	D-cache tag banks	N/A
smc_l1_dcache_data_intf_req_o	l1_dcache_data_req_t	Output	[3:0]	SMC L1 D-cache data interface requests.	D-cache data banks	N/A
smc_l1_dcache_data_intf_rsp_i	l1_dcache_data_rsp_t	Input	[3:0]	SMC L1 D-cache data interface responses.	D-cache data banks	N/A
smc_disable_sram_auto_init_i	logic	Input	1	Disable SRAM automatic initialization.	Control logic	1'b0
smc_init_mem_done_o	logic	Output	1	Memory initialization completion signal.	Control logic	N/A
chiplet_is_primary_i	logic	Input	1	Chiplet is primary (for System Timer OCTS).	GPIO padding straps	N/A
timer_count_o	logic	Output	[63:0]	64-bit system timer count output (OCTS).	External systems	N/A

Interface Name	Type	Direction	Width	Description	Connection	Default value (if applicable)
trace_mem_req_o	dfd_trace_mem_pkg::SinkMemPktIn_s	Output	[TRC_RAM_INSTANCES-1:0]	Trace memory interface requests.	Trace memory	N/A
trace_mem_resp_i	dfd_trace_mem_pkg::SinkMemPktOut_s	Input	[TRC_RAM_INSTANCES-1:0]	Trace memory interface responses.	Trace memory	N/A
test_en_i	logic	Input	1	DFT/scan test-enable. Drives clock-gater test ports and AXI cell test inputs.	Test controller	1'b0
scan_rst_ni	logic	Input	1	Scan reset (active-low). Bypasses reset synchronizers during DFT.	Test controller	1'b1
mem_repair_done_i	logic	Input	1	Memory repair done indicator.	DFT controller	1'b0
mem_repair_success_i	logic	Input	1	Memory repair success indicator.	DFT controller	1'b0
mem_repair_abort_i	logic	Input	1	Memory repair abort indicator.	DFT controller	1'b0
mbist_done_i	logic	Input	1	MBIST done indicator.	DFT controller	1'b0
mbist_pass_i	logic	Input	1	MBIST pass indicator.	DFT controller	1'b0
mbist_abort_i	logic	Input	1	MBIST abort indicator.	DFT controller	1'b0
sep_sram_req_o	sep_pkg::sep_sram_req_t	Output	-	SEP scratch SRAM request passthrough.	SEP SRAM macros	N/A
sep_sram_rsp_i	sep_pkg::sep_sram_rsp_t	Input	-	SEP scratch SRAM response passthrough.	SEP SRAM macros	N/A
sep_boot_rom_req_o	sep_pkg::sep_sram_req_t	Output	-	SEP boot ROM request passthrough.	SEP ROM macro	N/A
sep_boot_rom_rsp_i	sep_pkg::sep_sram_rsp_t	Input	-	SEP boot ROM response passthrough.	SEP ROM macro	N/A
sep_cpu_tcm_req_o	sep_pkg::sep_cpu_tcm_req_t	Output	-	SEP CPU TCM request passthrough (ICCM + DCCM).	SEP SRAM macros	N/A
sep_cpu_tcm_rsp_i	sep_pkg::sep_cpu_tcm_rsp_t	Input	-	SEP CPU TCM response passthrough.	SEP SRAM macros	N/A
sep_efuse_bank_ctrl_req_o	sep_efuse_pkg::efuse_axil_req_t	Output	-	SEP eFuse bank control AXI-Lite request passthrough.	SEP eFuse shim	N/A
sep_efuse_bank_ctrl_rsp_i	sep_efuse_pkg::efuse_axil_rsp_t	Input	-	SEP eFuse bank control AXI-Lite response passthrough.	SEP eFuse shim	N/A
sep_efuse_shim_command_req_o	sep_efuse_pkg::fuse_command_req_t	Output	-	SEP eFuse command interface request passthrough.	SEP eFuse shim	N/A
sep_efuse_shim_command_rsp_i	sep_efuse_pkg::fuse_command_rsp_t	Input	-	SEP eFuse command interface response passthrough.	SEP eFuse shim	N/A
sep_crypto_pkaimem_sram_req_o	sep_crypto_pkg::sep_crypto_pkaimem_sram_req_t	Output	-	SEP OTBN PKA instruction memory SRAM request passthrough.	SRAM macro	N/A
sep_crypto_pkaimem_sram_rsp_i	sep_crypto_pkg::sep_crypto_pkaimem_sram_rsp_t	Input	-	SEP OTBN PKA instruction memory SRAM response passthrough.	SRAM macro	N/A
sep_crypto_pkadmem_sram_req_o	sep_crypto_pkg::sep_crypto_pkadmem_sram_req_t	Output	-	SEP OTBN PKA data memory SRAM request passthrough.	SRAM macro	N/A
sep_crypto_pkadmem_sram_rsp_i	sep_crypto_pkg::sep_crypto_pkadmem_sram_rsp_t	Input	-	SEP OTBN PKA data memory SRAM response passthrough.	SRAM macro	N/A
sep_km_rom_mem_req_o	km_intf_pkg::km_rom_mem_req_t	Output	-	SEP Key Manager ROM memory request passthrough.	ROM macro	N/A

Interface Name	Type	Direction	Width	Description	Connection	Default value (if applicable)
sep_km_rom_mem_rsp_i	km_intf_pkg::km_rom_mem_rsp_t	Input	-	SEP Key Manager ROM memory response passthrough.	ROM macro	N/A
sep_km_sram_mem_req_o	km_intf_pkg::km_sram_mem_req_t	Output	-	SEP Key Manager SRAM memory request passthrough.	SRAM macro	N/A
sep_km_sram_mem_rsp_i	km_intf_pkg::km_sram_mem_rsp_t	Input	-	SEP Key Manager SRAM memory response passthrough.	SRAM macro	N/A
sep_external_req_o	sep_pkg::sep_32_64_6_12_axi_req_t	Output	-	SEP AXI extension port request passthrough.	Adopter peripherals	N/A
sep_external_resp_i	sep_pkg::sep_32_64_6_12_axi_resp_t	Input	-	SEP AXI extension port response passthrough.	Adopter peripherals	Tie to DECERR if unused
sep_cpu_trace_o	sep_pkg::sep_cpu_trace_t	Output	-	SEP CPU trace output.	Trace infrastructure	N/A
sep_lockstep_ctrl_i	sep_pkg::sep_lockstep_ctrl_t	Input	-	SEP CPU lockstep controls, passed through to the SEP. Inert unless the SEP core is built with RV_LOCKSTEP_ENABLE .	Chip-level RAS control	Tie to '0 if unused
sep_lockstep_status_o	sep_pkg::sep_lockstep_status_t	Output	-	SEP CPU lockstep status. Reads 0 when the SEP is absent (SEP=0) or the core is built without RV_LOCKSTEP_ENABLE .	Chip-level RAS aggregation	N/A
lcc_demote_state_1_o	logic	Output	[1:0]	SEP lifecycle demote state 1.	External lifecycle logic	N/A
lcc_demote_state_2_o	logic	Output	[1:0]	SEP lifecycle demote state 2.	External lifecycle logic	N/A
sep_fuse_sense_done_o	logic	Output	1	SEP fuse sense done output.	System integration	N/A
clk_sep_wdt_i	logic	Input	1	SEP watchdog timer clock passthrough.	Low-frequency clock source	N/A
secure_tm_req_i	logic	Input	-	Secure test mode request, passthrough to SEP.	GPIO padding / tie-off	N/A

Chapter 23. System Management Network (SMN) Integration

WARNING

This section is currently under development. Content will be added to describe SMN integration procedures, network topology, and management interfaces.

Chapter 24. Project Defines

Compile-time defines that apply across OCAH rather than to a single block.

24.1. SIMULATION

SIMULATION selects the verification view of OCAH RTL. Set it on every simulation compile and on no other kind of build:

```
+define+SIMULATION    # VCS, Xcelium
-DSIMULATION          # Verilator, Icarus
```

OCAH's own DV flows set it; a compile driven by an adopter's testbench does not.

WARNING

Do not let **SIMULATION** reach synthesis, formal, or a gate-level flow. It enables **initial** blocks, **\$readmemh**, **\$random** and DPI exports; a tool that skips those rather than rejecting them yields a netlist that does not correspond to the RTL you verified.

Without the define, these testbench hooks are not compiled in and the plusargs are silently ignored:

Plusarg	Effect
+skip_fuse_sense	efuse_shadow_regs reports fuse sense complete immediately rather than sensing the bank through the adopter's SHIM.
+smc_shadow_reg_preload=<file>, +sep_shadow_reg_preload=<file>	Loads the shadow registers from a hex image. Takes effect only alongside +skip_fuse_sense.
+rom_bin64=<file>, +rom_hex=<file>	Preloads OCAH4CORECluster_rom_ext , the SMC CPU ROM simulation model. Applies only to integrations that use the reference memory swaps.

The define also zeroes the RMA and security-disable token and digest bits in **efuse_token_processing** at time 0, which have no reset and otherwise power up X, and routes OpenTitan assertion failures in the SEP **prim_assert** shim to **\$error** on non-UVM runs.

Two model families it enables make simulation deliberately non-deterministic: **prim_flop_2sync** and its Caliptra and Adams Bridge equivalents insert **prim_cdc_rand_delay** ahead of the synchronizer, and **prim_lfsr** and **prim_double_lfsr** randomize their default seed on simulators other than Verilator (+**prim_lfsr_use_default_seed**=1 pins it). Two runs of one test are therefore not identical unless the simulator seed is fixed; record the seed with any failure you intend to reproduce.

Chapter 25. Prim Cell Replacement and Don't-Touch Constraints

OCAH primitives (`prim_stdbuf`, `prim_and2`, `prim_clkgater`, the `prim_flop_*sync*` family, and so on) ship as behavioral models with a reference technology mapping. Adopters replace them with cells from their own library.

Two rules govern those replacements. Both are the adopter's responsibility — OCAH provides the instance names, but the names have no effect until the adopter's synthesis and place-and-route flows constrain them.

25.1. Naming Requirement

Every library cell instantiated inside a replacement primitive must have `d0nt_` in its instance name.

The marker is deliberately misspelled with a zero. `dont_touch` is a reserved keyword in several tools and a common substring in ordinary comments and signal names; `d0nt_` occurs only where the protection is intended, so a name-based match cannot pick up unrelated cells.

Clock-path cells take the extended prefix `d0nt_clk`, which selects the stricter rule below. The `d0nt_*` naming convention appears in the eFuse IP (`efuse_token_digest_sha256`, `efuse_triple_redundant_comparator`) as the primary example. The adopter is expected to carry the same convention into any technology-mapped primitive wrapper they deliver. The intended name assignments are:

Instance name	Rule	Primitive
<code>d0nt_clkgate</code>	Don't touch	<code>prim_clkgater</code>
<code>d0nt_clkbuf</code>	Don't touch	<code>prim_clock_buf</code>
<code>d0nt_clkinv</code>	Don't touch	<code>prim_clock_inv</code>
<code>d0nt_clkmux</code>	Don't touch	<code>prim_clock_mux2</code>
<code>d0nt_clknand</code>	Don't touch	<code>prim_clock_nand2</code>
<code>d0nt_clkxor</code>	Don't touch	<code>prim_xor2</code>
<code>d0nt_stdbuf</code>	Size only	<code>prim_stdbuf</code>
<code>d0nt_stdinv</code>	Size only	<code>prim_flop_*sync_*</code> reset inverter
<code>d0nt_an</code>	Size only	<code>prim_and2</code>
<code>d0nt_ao222</code>	Size only	<code>prim_ao222</code>
<code>d0nt_wrap_sync</code>	Size only	<code>prim_flop_*sync_*</code> synchronizer flops

Keep the same names when substituting your own cells. Adopters who rename must apply the equivalent constraints to whatever names they use.

25.2. Constraint Requirement

In synthesis, apply `set_size_only` to every cell matching `d0nt_`, then `set_dont_touch` to every cell matching `d0nt_clk`. Every step after synthesis needs `size_only` alone — on all `d0nt_` cells, clock cells included.

```
# Order matters: d0nt_clk* also matches d0nt_*, so the clock rule is applied
# second and overrides size-only for those cells.
```

```
set_size_only [get_cells -hierarchical -filter "full_name =~ *d0nt_*"]
set_dont_touch [get_cells -hierarchical -filter "full_name =~ *d0nt_clk*"]
```

size_only keeps the instance in the netlist—the tool may not delete, merge, absorb, restructure, or buffer through it—while still allowing it to be swapped for another library cell of the same logic function, typically to change drive strength or threshold-voltage flavor for timing, area, and EM closure. That is the intent for every replacement cell: these primitives exist because the structure matters, not because the logic function could not be inferred. Synthesis will otherwise remove them—an inverter pair that cancels, redundant AND gates that always agree, a buffer driving a single load are all dead weight to an optimizer.

Clock cells need the stronger **dont_touch** because that swap is exactly the problem. Under **size_only** the tool treats the logic function as the contract and every other property of the cell as free to change. On the clock path the function is the least of the reasons the cell was chosen. Clock buffers, inverters, muxes, and gates are picked for electrical characteristics the function does not capture—matched rise and fall times above all, and with them duty-cycle preservation, balanced input-to-output delay, and low delay variation across PVT. A functionally identical cell pulled from the general-purpose library guarantees none of that. The netlist still says "inverter", functional simulation still passes, and the duty-cycle distortion shows up only in silicon or in a timing run late enough to be expensive.

dont_touch removes the tool's discretion: the cell the designer selected is the cell that reaches the netlist. Sizing and insertion-delay decisions on the clock path belong to clock tree synthesis, which owns them explicitly, rather than to a logic-optimization pass making a substitution it believes is free.

25.2.1. After Synthesis

The **dont_touch** on **d0nt_clk*** is a synthesis-only constraint. Once synthesis has handed off the netlist, release the clock cells to **size_only** and carry that—and nothing stronger—through placement, clock tree synthesis, routing, and optimization:

```
# Post-synthesis: uniform size_only, clock cells included.
set_dont_touch [get_cells -hierarchical -filter "full_name =~ *d0nt_clk*"] false
set_size_only [get_cells -hierarchical -filter "full_name =~ *d0nt_*"]
```

The stricter rule exists to stop logic optimization from choosing the cell. Downstream, clock cell sizing is CTS's job: it cannot balance skew or close transition violations with the cells it needs to resize frozen, and freezing them there buys nothing. Keeping **size_only** in place still prevents deletion, merging, and restructuring for the rest of the flow.

Restrict the physical flow to the library's clock-cell list so a resize stays inside the same clock cell family. Sizing a **CLKBUF_D4** up to a **CLKBUF_D8** keeps the matched rise and fall behavior the cell was chosen for; substituting a general-purpose buffer of equivalent drive does not.

Additional requirements:

- **Carry size_only through PnR.** The **dont_touch** is synthesis-only, but **size_only** is not. A cell protected in synthesis and left entirely unprotected downstream is not protected.
- **Verify the match is non-zero.** A typo in the filter, or a flow that renames instances before the constraint is read, silently protects nothing. Check the collection size and error out if it is empty.
- **Preserve the names.** Uniquification, flattening, and name mapping must not strip the **d0nt_** substring. If your flow renames instances, derive the collections before flattening and carry them forward.

- **Restore protection after ECOs.** Flows that relax preservation constraints for clock-tree or filler ECOs — clearing `eco_honor_dont_touch`, for example — must restore `size_only` before any subsequent optimization pass.
- **Check the final netlist**, not just the post-synthesis one.

Flows other than Design Compiler and Fusion Compiler must apply the equivalent `size_only` and `dont_touch` attributes to the same collections.

25.3. Simulation

These constraints have no functional effect and no simulation impact. RTL simulation compiles the technology-independent primitive models (`not(synth)`). Library cells are not on that filelist, so a simulator never elaborates them.

Confirming that the protected cells survived is therefore a gate-level netlist check. RTL simulation cannot detect their loss.

Chapter 26. CDC Timing Constraints

OCAH ships synthesis constraints that bound the enumerated synchronization structures in the SMC, SEP, DTP and SMU. Independent CDC sign-off is still required for the assembled SoC. This section explains what those constraints do, how they are produced, and what an adopter has to change when integrating OCAH into their own flow and cell library.

The collateral ships with the harness. `integration/constraint/<block>/synth/` groups it by system while preserving the original filenames and relative path depth:

- `constraints.sdc` — the block’s full timing intent, including the clock definitions and the asynchronous clock groups. It sources the two files below.
- `<block>_cdc_max_delay.tcl` — generated-clock periods and any hand-written overrides.
- `<block>_cdc_max_delay_generated.tcl` — the per-instance calls.

The shared `async_clock_groups.tcl` and `cdc_max_delay_procs.tcl` helpers are under `integration/constraint/shared/`. These are symlink indexes: the canonical per-system files remain under `hw/sys/<block>/synth/`, and the canonical shared helpers remain under `flows/synth/constraints/`. Regenerate the index with `python3 scripts/collect_integration.py` after changing the collateral inventory.

26.1. Why crossings are bounded rather than timed

A clock-domain crossing has no fixed phase relationship, so it cannot be timed against a capture edge. Its correctness still depends on delay, though: every CDC element assumes the data reaches the receiver within a bounded time.

OCAH therefore keeps the crossings visible to the tool and gives each one an explicit upper bound, sized from the clock that captures it. This asserts no phase relationship — it states only how much delay the crossing tolerates while its CDC element’s guarantee still holds.

26.2. What is constrained

Each enumerated CDC element in each block is given its own `set_max_delay`, sized from the clock that actually captures it as read from the netlist. Muxed domains resolve to several clocks; the tightest period wins.

The elements covered are `prim_sync2/3/4` and their reset and set variants, the pulp `sync` shim, `prim_sync_reset`, `prim_sync3_pulse`, `prim_fifo_async`, `avsbu_async_fifo`, `cdc_fifo_gray`, `axi_cdc`, `prim_reg_cdc`, `prim_sync_reqack_data`, `prim_sync_data_autohs`, `cdc_2phase`, `dmi_wrapper` and Rocket `AsyncQueue`.

The bound depends on what protects the crossing:

Kind of path	Bound	Reason
Synchronizer data input	$0.5 * T_{dst}$	Leaves half a destination period of settling margin before the capture edge the synchronizer relies on.
Protocol-protected data	$1.0 * T_{dst}$	Conservative. The requirement is set by the pointer synchronizer’s depth — see below.
Two-phase handshake nets	$\min(T_{src}, T_{dst})$	<code>cdc_2phase</code> runs the handshake in both directions, so the tighter domain governs. This is the module’s own stated requirement.

T_{dst} rather than $\min(T_{src}, T_{dst})$ in the general case because the gating synchronizer is clocked by the destination, so its settling window is $S * T_{dst}$ and T_{src} does not enter the guarantee. This makes slow-to-fast and fast-to-slow equally safe.

26.2.1. Why protocol-protected data still needs a bound

The payload of a gray-pointer FIFO or a req/ack handshake never passes through a synchronizer — only the pointer or request does. So this is not a metastability constraint, and it is reasonable to ask why such a path needs a bound at all, or why a single blanket bound covering every crossing in the design would not be enough.

Because the protocol guarantees **ordering**, not **arrival**. The read side will not look at an entry until the write pointer has crossed, which takes $SYNC_STAGES$ destination cycles, where $SYNC_STAGES$ is the depth of the pointer synchronizer. Nothing in the protocol ensures the data physically arrived within that window; that is a timing property, and only a max_delay states it. Miss it and the consumer samples the entry’s previous contents. There is no violation report and no metastability event, just wrong data.

So the requirement is $data\ path < SYNC_STAGES * T_{dst}$. It is not a fixed number of nanoseconds: it scales with the clock that captures the crossing, and the destination periods within one design span an order of magnitude.

Destination period	Guarantee at 3 stages
1 ns	3 ns
5 ns	15 ns
10 ns	30 ns

That is why the bound is applied per instance rather than as one global value. A single blanket max_delay has to be chosen once for the whole design: loose enough to be feasible on the slowest domains, it permits several times more delay than a fast crossing’s pointer scheme tolerates; tight enough for the fastest domain, it over-constrains every slow crossing and burns effort closing paths that were never at risk. Sizing each crossing from its own capturing clock is the only bound that tracks the requirement.

The blanket default that the clock-group layer applies (see [The two layers](#)) is deliberately on the loose side, and for slow destination domains it is already sufficient — there the explicit per-instance constraint is redundant. It is the fast crossings that need it.

$1.0 * T_{dst}$ is therefore conservative by a factor of two to three. It is kept simple deliberately, but if wide payloads such as AXI data will not close, raising cdc_data_delay to $2.0 * T_{dst}$ stays inside a three-stage guarantee with a cycle to spare. An adopter whose synchronizer cells use a different depth should recompute from their own $SYNC_STAGES$ rather than inheriting this factor.

Enumeration and clock resolution run once, offline, against an elaborated design, and their output is an explicit per-block file of constraint calls that is reviewed and checked in. The flow itself does no discovery. This matters to an integrator because those files are written against the OCAH hierarchy and OCAH’s clock names. If you instantiate a block as delivered, you do not need to regenerate or hand-edit them: set `::cdc_hier_prefix` to where the block sits in your hierarchy, and optionally `::cdc_clock_alias` to map OCAH clock names onto your own. Regeneration is needed only when the block is reconfigured in a way that changes which CDC elements exist, since no prefix can conjure constraints for elements the file never listed (see [Integration checklist](#) item 2).

26.3. The two layers

The per-instance bounds take effect only on top of a correctly configured clock-group layer. That layer decides whether the tool considers inter-domain paths at all, so it must be established first; the per-instance exceptions then refine it.

Layer 1 is `set_async_clock_groups`, defined in `flows/synth/constraints/async_clock_groups.tcl` and called from each block's `constraints.sdc`. It declares the asynchronous groups **with** `-allow_paths` and applies a loose 20 ns / -20 ns default to every inter-group clock pair.

IMPORTANT

`-allow_paths` is a prerequisite, not a refinement. In DC and PrimeTime exception priority, `set_false_path` outranks `set_max_delay` regardless of which is more specific, so a bare `set_clock_groups -asynchronous` silently masks **every** per-instance constraint. There is no warning; the exceptions simply have no effect.

The 20 ns default is what makes `-allow_paths` safe to enable. Once paths are allowed, every crossing without a specific constraint would otherwise be timed against a meaningless launch-capture relationship and fail. The default bounds them loosely so that only deliberately tightened paths appear as real requirements. It is emitted per ordered clock pair, never group-wide, because a 20 ns bound inside a group would mask genuine setup failures on synchronous paths.

Layer 2 is the per-instance `set_max_delay` output of the three steps above, with two deliberate carve-outs:

- **Paths from primary inputs revert to the default.** A synchronizer input reachable from a top-level port carries that port's `set_input_delay`, which is a budget figure rather than real logic and can alone exceed the tightened bound. Only the parent block sees both ends, so there is nothing to tighten at block level.
- **Same-clock instances are skipped.** A two-clock element wired to one clock is not a crossing, and applying `set_max_delay -ignore_clock_latency` there would replace a proper setup check with a flat budget that discards skew and uncertainty. These are emitted commented out. OCAH has five, where OpenTitan AES, KMAC and OTBN instantiate `prim_sync_reqack_data` on EDN and OTP interfaces that are separate domains upstream but share a clock in SEP.

26.4. What is covered

Block	CDC elements constrained	Exceptions emitted
SMC	365	412
SEP	18	21
DTP	250	270
SMU	758	838

SMU is a flat build containing the other three, so its instance paths carry `u_smc/`, `gen_sep.u_sep/` and `u_dtp/` prefixes. It is not the sum of the parts: DTP contributes 375 elements inside SMU against 250 standalone, because it instantiates three JTAG2AXI bridges in the SMU configuration and two on its own.

26.5. Integration checklist

Five things must change, three should be checked. None of them requires editing per-instance data by hand; every change is either a one-line policy edit or a regeneration.

26.5.1. 1. Repoint the constraints at the pin of the cell inside the prim wrapper

This is the most important change.

As shipped, the procs target the prim wrapper's own port, `prim_sync3/i_d`. That port exists only as long as the wrapper survives as a hierarchical boundary, and a prim cell is ordinary RTL: nothing stops synthesis from ungrouping it and

dissolving its ports.

WARNING

Do not rely on the wrapper port surviving. Anchor the constraint to the pin of the cell instantiated **inside** the wrapper. When you swap in your own synchronizer, that cell is a real library cell or macro—a leaf that cannot be flattened—so its pins persist through optimisation regardless of what happens to the RTL hierarchy around it.

```
proc set_cdc_max_delay_prim_sync3 { inst dst_clk {delay {}} } {  
    cdc_emit "prim_sync3 $inst" [cdc_sync_delay $dst_clk $delay] to \  
        {} [get_pins "$inst/u_my_sync_cell/D" -quiet]  
}
```

`$inst` stays the wrapper instance path the generator recorded; you extend it down to the leaf. If your cell is instantiated in a generate loop or per bit, the path needs a glob. Note that generate scopes are separated by `.`, not `/`:

```
[get_pins "$inst/g_bits*.u_my_sync_cell/D" -quiet]
```

Anchoring this way makes hierarchy preservation a safety margin rather than a load-bearing dependency.

If you keep the prim wrappers unchanged, the shipped port names work as-is, but your flow must then preserve those wrapper boundaries. A `destination empty` warning appearing after `compile` where there was none at constraint-load time means a boundary was dissolved.

If you go further and replace a wrapper with a module of your own name, the enumeration that produced `<block>_cdc_max_delay_generated.tcl` knows nothing about it and those crossings end up with no per-instance bound at all. Nothing warns—an element that was never listed cannot report itself missing. Add the calls for it to `<block>_cdc_max_delay.tcl` by hand; the procs take an instance path and the capturing clock regardless of the module they were named after.

26.5.2. 2. Point the files at your hierarchy, or regenerate

The checked-in `<block>_cdc_max_delay_generated.tcl` files are written against the OCAH hierarchy, with paths relative to the block's own top and clocks named as OCAH names them. Two ways to make them apply to your design.

If you instantiate the block as delivered, reuse the files and set two variables. Both default to no-ops, so leaving them alone reproduces the shipped behaviour exactly.

```
# where the block sits in your hierarchy, with a trailing slash  
set ::cdc_hier_prefix "u_chiplet/u_mgmt/u_smc/"  
  
# optional: map an OCAH clock name onto the clock you actually drive it with  
set ::cdc_clock_alias(SMCLK) MY_SYS_CLK
```

The prefix is prepended to every instance path. The alias is applied wherever a clock name reaches the tool, so OCAH's names become labels in your design. You can also skip the alias and supply the period directly with `set ::cdc_clock_period(SMCLK) <ps>`, which is enough for the synchronizer constraints; the alias additionally matters for

the data-path constraints, which name the destination clock as a timing endpoint and so need it to exist.

If you reconfigure the block, regenerate instead. Changing parameters that add or remove CDC elements makes the shipped file stale in the silent direction—the constraints that should exist for new elements simply will not, and nothing warns. The prefix does not help with that.

A wrong prefix fails loudly: every path resolves to nothing, so you get a warning per constraint against a zero exception count, and **SUMMARY 0 exceptions** is itself reported as a setup failure.

Regeneration is also the right answer whenever a parent build contains the block. Instance counts there can differ from the standalone build, so a parent’s file is not the child’s file with a prefix.

26.5.3. 3. Set the default bound

The 20 ns / -20 ns figures are a starting point. Both are **info exists**-guarded in `flows/synth/constraints/async_clock_groups.tcl`, so setting them before that file is sourced overrides without editing it. `set_async_clock_groups` also accepts per-call overrides, which is the cleaner way to give one block a different default:

```
set_async_clock_groups { {CLK_A} {CLK_B} } -max_delay 8000 -min_delay -8000
```

Two constraints on the choice. The default must exceed every per-instance bound you tighten, because it also governs paths from primary inputs into synchronizers; if it is tighter than $0.5 * T_{dst}$ it becomes the binding constraint there. And tighter is not automatically better: this is a net for crossings you have not enumerated, so set it loose enough that those do not fail and rely on layer 2 for the paths that matter.

The minimum is negative deliberately. With `-allow_paths` a crossing has no meaningful hold relationship, and a zero floor would report hold violations where hold is not a real requirement.

26.5.4. 4. Declare your own clock groups

`set_async_clock_groups` is called from each block’s `constraints.sdc` with that block’s group list. Each inner list is one asynchronous group and globs are allowed. Globs resolve when the call runs, so it has to come after every `create_clock` and `create_generated_clock` it is meant to cover.

```
set_async_clock_groups {  
    {CLK_A CLK_A_DERIVED_*}  
    {CLK_B}  
    {JTAG_TCK}  
} -exclude {{PATTERN_X* PATTERN_Y*}}
```

`-exclude` takes pairs of patterns and suppresses that part of the cross product, for clock pairs that already have a `-logically_exclusive` or `-physically_exclusive` relationship that `-allow_paths` would contradict. Omit it unless you hit a **TIM-184** conflict.

26.5.5. 5. Declare periods for generated clocks

A generated clock exposes no readable `period` attribute in Design Compiler, so any generated clock that clocks a CDC element needs an explicit entry in `<block>_cdc_max_delay.tcl`:

```
set ::cdc_clock_period(MY_DIV_CLK) [expr {4 * $clock_periods(MY_MASTER_PERIOD)}]
```

Omitting one is loud — a **no period for clock** warning per affected element — so a clean run means you have them all. Keep them in step with your **create_generated_clock** divide factors; nothing cross-checks them.

26.5.6. Also check

Hierarchy preservation. The reference flow applies **set_ungroup false** and **set_boundary_optimization false** to the CDC designs before **compile**. How much this matters depends on item 1: with leaf cell pins it is a safety margin, with wrapper ports it is load-bearing. Either way, your flow needs the equivalent, and it needs to name your cells rather than OCAH's.

Delay factors. $0.5 * T_{dst}$ and $1.0 * T_{dst}$ are policy, not physics. If your methodology wants more settling margin, change **cdc_sync_delay** and **cdc_data_delay** in **flows/synth/constraints/cdc_max_delay_procs.tcl**. Per-instance overrides are also available without editing procs: every proc takes an optional trailing delay in picoseconds, and re-stating a call in **<block>_cdc_max_delay.tcl** after the **source** wins.

Tool differences. Two Design Compiler specific choices to revisit under PrimeTime. **get_attribute <pin> clocks** is used because **get_clocks -of_objects** is PrimeTime-only, and generated clocks may expose a readable **period** in PrimeTime, making item 5 unnecessary.

26.6. Confirming it worked

Load the constraints and check the summary:

```
INFO: cdc_max_delay: SUMMARY <n> exceptions, 0 warnings
```

Zero warnings is necessary but not sufficient. A pin pattern that matches nothing warns, but one that matches the **wrong** thing does not. Two stronger checks:

- **Predict the count.** Multiply each proc's number of emitted exceptions by its number of calls and compare against the summary. A mismatch localises the failure, because the size of the shortfall identifies which proc did not fire.
- **Confirm the precedence.** Layer 2 is on pins and layer 1 on clocks, and the design assumes the more specific specification wins. Verify once in your tool:

```
report_timing -to [get_pins <a synchronizer>/i_d] -nworst 1
```

The **max_delay** line must show your $0.5 * T_{dst}$ value rather than the default. If it shows the default, layer 2 is inert and nothing else in this section applies.

SUMMARY 0 exceptions is treated as a setup failure and warns as such. It means the constraints did not load, not that the design has no crossings.

26.7. Scope and limitations

The 20 ns default is loose by design. Against a 1 ns clock it permits twenty clock periods of delay into a synchronizer

input. It is a safety net that keeps `-allow_paths` usable, not a real constraint; any crossing that matters belongs in layer 2.

Enumeration works from a fixed list of module names, so a hand-written two-flop synchronizer that uses none of them will not be found. Structural detection of crossings is what a static CDC tool does, and this flow does not attempt it. These constraints time crossings already known to exist; they are not a substitute for CDC signoff.

Because the instance list is generated offline, removals are loud but additions are silent. A stale instance path warns, but a synchronizer added without regenerating produces no warning: the constraint never exists, the path falls back to the default, and it passes timing. Regenerate and diff the result against what is checked in whenever the RTL changes.