



# Open Chiplet Atlas Harness (OCAH)

## Integrator Guide

Version 0.0.8, 2026-09-18

# Table of Contents

|                                                         |    |
|---------------------------------------------------------|----|
| Initial SMU Integration .....                           | 2  |
| 1. Ports in <code>smu_wrapper</code> .....              | 3  |
| 2. Macros needed by "integration modules" .....         | 4  |
| 2.1. Macros needed by SEP .....                         | 4  |
| 2.2. Macros needed by SMC .....                         | 4  |
| SoC Integration Checklist .....                         | 6  |
| 3. Integration gates .....                              | 7  |
| SMU Top-Level Integration .....                         | 8  |
| 4. RTL Filelists .....                                  | 9  |
| 5. Address Map Integration .....                        | 10 |
| 5.1. Register collateral .....                          | 10 |
| 6. Immutable ROM FW Integration .....                   | 12 |
| 6.1. Weak-symbol override method .....                  | 12 |
| 6.2. SMC ROM FW integration .....                       | 12 |
| 6.3. SEP ROM FW integration .....                       | 13 |
| 6.4. Key Manager ROM FW integration .....               | 13 |
| 7. System Management Controller (SMC) Integration ..... | 14 |
| 7.1. Clock and Reset .....                              | 14 |
| 7.2. External CPU cluster NDM reset .....               | 14 |
| 7.3. Address Map and Aperture .....                     | 14 |
| 7.4. AXI Interface Configuration .....                  | 15 |
| 7.5. GPIO Pad Integration .....                         | 16 |
| 7.6. Peripheral Interface Connections .....             | 16 |
| 7.6.1. Adopter Peripheral Window .....                  | 16 |
| 7.6.2. eFuse Interface .....                            | 18 |
| 7.7. Memory Subsystem Integration .....                 | 23 |
| 7.7.1. SRAM and Cache Array Integration .....           | 23 |
| 7.8. Memory Repair Integration .....                    | 23 |
| 7.8.1. Control Signals .....                            | 24 |
| 7.8.2. Repair Data .....                                | 24 |
| 7.8.3. Status Monitoring .....                          | 24 |
| 7.8.4. Bypass Configuration .....                       | 24 |
| 7.8.5. Integration Requirements .....                   | 24 |
| 7.9. Interrupt Integration .....                        | 25 |
| 7.10. Telemetry and Debug Integration .....             | 25 |
| 7.11. Bring-Up Sequence .....                           | 26 |
| 7.12. SMC Port Interface .....                          | 26 |
| 7.13. GPIO Pin Requirements .....                       | 31 |
| 8. Debug & Test Ports (DTP) Integration .....           | 34 |
| 8.1. Configuration .....                                | 34 |
| 8.2. Instantiation .....                                | 34 |
| 8.3. Clock and Reset .....                              | 35 |

|                                          |    |
|------------------------------------------|----|
| 8.4. Constraints                         | 35 |
| 8.5. STAP Scan Chain Topology            | 35 |
| 8.6. DTP Port Interface                  | 36 |
| 9. Security Processor (SEP) Integration  | 40 |
| 9.1. Module Overview                     | 40 |
| 9.2. Clock and Reset Requirements        | 40 |
| 9.3. AXI Interfaces                      | 40 |
| 9.4. Memory Interfaces                   | 41 |
| 9.5. Cryptographic Subsystem Connections | 41 |
| 9.5.1. External TRNG                     | 41 |
| 9.6. eFuse and Lifecycle                 | 41 |
| 9.7. SPI Host Interface                  | 42 |
| 9.7.1. SEP SPI Host Pin Assignment       | 42 |
| 9.8. Bring-Up Considerations             | 43 |
| 9.9. SEP Port Interface                  | 43 |
| 10. SMU Composition and Internal Wiring  | 48 |
| 10.1. Module Variants and IP Integration | 48 |
| 10.1.1. IP Integration Modules           | 50 |
| 10.1.2. Wrapper Clock Architecture       | 50 |
| 10.2. Clock and Reset Architecture       | 51 |
| 10.3. SMU AXI Crossbar Address Map       | 51 |
| 10.3.1. Firmware programming order       | 51 |
| 10.4. SMU Default Parameters             | 51 |
| 10.5. IC_RESET TDR Structure             | 52 |
| 10.5.1. SMC slice (TDI to TDO)           | 52 |
| 10.5.2. SEP slice (TDI to TDO)           | 53 |
| 10.5.3. External slice (adopter-defined) | 53 |
| 10.6. DTP Parameter Pass-Through         | 53 |
| 10.6.1. JTAG Configuration Parameters    | 53 |
| 10.6.2. JTAG ID Parameters               | 54 |
| 10.6.3. Cross Trigger Parameters         | 54 |
| 10.6.4. Pipeline Depth Parameters        | 54 |
| 10.6.5. Type Parameters                  | 54 |
| 10.7. DTP Port Mapping                   | 55 |
| 10.7.1. Clock and Reset                  | 55 |
| 10.7.2. Primary JTAG TAP Interface       | 55 |
| 10.7.3. Boundary Scan Interface          | 55 |
| 10.7.4. I/O STAP Interface               | 55 |
| 10.7.5. SMC Debug STAP Interface         | 56 |
| 10.7.6. SEP Debug STAP Interface         | 56 |
| 10.7.7. Extra STAP Interfaces            | 56 |
| 10.7.8. Extended STAP Scan Interface     | 56 |
| 10.7.9. DFD iJTAG Interface              | 56 |
| 10.7.10. DFT iJTAG Interfaces            | 57 |

|                                                     |    |
|-----------------------------------------------------|----|
| 10.7.11. SMC Fabric Debug AXI Interface .....       | 57 |
| 10.7.12. SMC OTP Debug AXI-Lite Interface .....     | 57 |
| 10.7.13. SEP OTP Debug AXI-Lite Interface .....     | 57 |
| 10.7.14. Clock Control .....                        | 57 |
| 10.7.15. Boot Stall Control .....                   | 57 |
| 10.7.16. JTAG Reset Control .....                   | 58 |
| 10.7.17. JTAG State Outputs .....                   | 58 |
| 10.7.18. Cross Trigger CSR AXI-Lite Interface ..... | 58 |
| 10.7.19. Cross Trigger Matrix Interface .....       | 58 |
| 10.7.20. Clock Stop Request Interface .....         | 58 |
| 10.7.21. Cross Trigger Port GPIO Interface .....    | 59 |
| 10.8. SMC Port Mapping .....                        | 59 |
| 10.8.1. Clocks .....                                | 59 |
| 10.8.2. Resets .....                                | 59 |
| 10.8.3. System AXI Input .....                      | 60 |
| 10.8.4. JTAG AXI Input .....                        | 60 |
| 10.8.5. SMC OTP JTAG AXI-Lite .....                 | 60 |
| 10.8.6. SEP AXI Input .....                         | 60 |
| 10.8.7. AXI Output .....                            | 60 |
| 10.8.8. DTP CSR Interface .....                     | 60 |
| 10.8.9. Adopter Peripheral Window AXI-Lite .....    | 60 |
| 10.8.10. eFuse Interface .....                      | 61 |
| 10.8.11. GPIO Data Signals .....                    | 61 |
| 10.8.12. GPIO External Pins .....                   | 61 |
| 10.8.13. ATB Telemetry .....                        | 61 |
| 10.8.14. DED/WDT .....                              | 61 |
| 10.8.15. Region Size .....                          | 62 |
| 10.8.16. External Interrupts .....                  | 62 |
| 10.8.17. Fuse Signals .....                         | 62 |
| 10.8.18. DFT Signals .....                          | 62 |
| 10.8.19. Lifecycle State .....                      | 62 |
| 10.8.20. Mailbox Interrupts .....                   | 62 |
| 10.8.21. Reset Unit Signals .....                   | 62 |
| 10.8.22. CPU Memory Signals .....                   | 63 |
| 10.8.23. Memory Init .....                          | 63 |
| 10.8.24. System Timer OCTS Interface .....          | 63 |
| 10.8.25. Reset Overrides (from DTP) .....           | 63 |
| 10.8.26. DFD Signals .....                          | 63 |
| 10.8.27. Cross Trigger Interface .....              | 64 |
| 10.8.28. Trace Memory .....                         | 64 |
| 10.8.29. External Debug Bus .....                   | 64 |
| 10.8.30. Test Mode .....                            | 64 |
| 10.9. SMC-DTP Internal Interconnection .....        | 64 |
| 10.10. SEP-Conditional Wiring .....                 | 65 |

|                                                    |     |
|----------------------------------------------------|-----|
| 10.10.1. Other Internal Tie-offs .....             | 65  |
| 10.11. SMU Port Interface .....                    | 65  |
| System Management Network (SMN) Integration .....  | 74  |
| 11. Status .....                                   | 75  |
| AXI-over-UCIe Bridge (AoU) Integration .....       | 76  |
| 12. Integration guide .....                        | 77  |
| References .....                                   | 77  |
| Integration Options .....                          | 77  |
| Module Overview .....                              | 77  |
| AOU_TOP .....                                      | 77  |
| AOU_CORE_TOP .....                                 | 78  |
| Parameter List .....                               | 80  |
| FDI_CONFIG values .....                            | 82  |
| Build flags .....                                  | 82  |
| Interface Signals .....                            | 82  |
| Clock and Reset .....                              | 82  |
| APB Slave Interface .....                          | 83  |
| AXI Master (RX) – AR Channel .....                 | 83  |
| AXI Master (RX) – R Channel .....                  | 83  |
| AXI Master (RX) – AW Channel .....                 | 83  |
| AXI Master (RX) – W and B Channels .....           | 84  |
| AXI Slave (TX) – AR Channel .....                  | 84  |
| AXI Slave (TX) – R Channel .....                   | 84  |
| AXI Slave (TX) – AW, W, B Channels .....           | 85  |
| PHY and FDI (Flit Data Interface) .....            | 85  |
| Interrupt and Error (to Error Handler) .....       | 86  |
| UCIe / External Control and Status .....           | 87  |
| DFT .....                                          | 87  |
| FDI Bringup Control Interface (AOU_TOP only) ..... | 88  |
| FDI Bringup Software Control (AOU_TOP only) .....  | 89  |
| FDI Bringup Status (AOU_TOP only) .....            | 89  |
| AOU_CORE_TOP-only Ports (not on AOU_TOP) .....     | 90  |
| Software operation Guide .....                     | 90  |
| Register Map .....                                 | 90  |
| Interrupts .....                                   | 90  |
| Activation Flow .....                              | 91  |
| Credit Management Type .....                       | 91  |
| Activation Start .....                             | 92  |
| Deactivation Start .....                           | 92  |
| Activation/Deactivation Interrupt .....            | 95  |
| PM Entry / LinkReset / LinkDisabled Sequence ..... | 95  |
| FDI Bringup Flow (AOU_TOP only) .....              | 96  |
| Verification Testbench .....                       | 100 |
| Architecture .....                                 | 101 |

|                                                             |     |
|-------------------------------------------------------------|-----|
| Components .....                                            | 101 |
| Running the Testbench .....                                 | 102 |
| IP Integration Collateral .....                             | 102 |
| Generated Outputs (Phase 1) .....                           | 102 |
| Single Source of Truth .....                                | 103 |
| Regeneration .....                                          | 103 |
| Planned: Full IP-XACT Component (Phase 2) .....             | 104 |
| Timing Constraints (SDC) .....                              | 104 |
| UPF Power Intent .....                                      | 105 |
| Library Cell Replacement .....                              | 105 |
| Project Defines .....                                       | 108 |
| 13. SIMULATION .....                                        | 109 |
| 14. SYNTHESIS .....                                         | 110 |
| 15. EMULATION .....                                         | 111 |
| 16. Tool predefined names .....                             | 112 |
| 17. Native DV extras .....                                  | 113 |
| 18. Derived assertion gates .....                           | 114 |
| 19. Vendor aliases .....                                    | 115 |
| 20. Adopter overlay hooks .....                             | 116 |
| 21. Subsystem defines .....                                 | 117 |
| 21.1. Shared cells .....                                    | 117 |
| 21.2. SMC .....                                             | 117 |
| 21.2.1. Simulation hooks .....                              | 117 |
| 21.2.2. CPU cluster .....                                   | 117 |
| 21.2.3. i3c-core configuration .....                        | 118 |
| 21.3. DTP .....                                             | 118 |
| 21.4. SEP .....                                             | 118 |
| 21.4.1. Adams Bridge .....                                  | 118 |
| 21.4.2. VeeR EL2 core .....                                 | 119 |
| 21.4.3. First-party view checks .....                       | 119 |
| 21.4.4. Key manager .....                                   | 119 |
| 21.4.5. DV testbench names .....                            | 120 |
| 22. Synthesis filelist defines .....                        | 121 |
| 22.1. Synopsys Design Compiler and Fusion Compiler .....    | 121 |
| 22.2. Cadence Genus .....                                   | 121 |
| Prim Cell Replacement and Don't-Touch Constraints .....     | 122 |
| 23. Naming Requirement .....                                | 123 |
| 24. Constraint Requirement .....                            | 124 |
| 24.1. After Synthesis .....                                 | 124 |
| 25. Simulation .....                                        | 126 |
| CDC Timing Constraints .....                                | 127 |
| 26. Why crossings are bounded rather than timed .....       | 128 |
| 27. What is constrained .....                               | 129 |
| 27.1. Why protocol-protected data still needs a bound ..... | 129 |

|                                                                                       |     |
|---------------------------------------------------------------------------------------|-----|
| 28. The two layers .....                                                              | 131 |
| 29. CDC/RDC sign-off collateral.....                                                  | 132 |
| 30. What is covered.....                                                              | 133 |
| 31. Integration checklist.....                                                        | 134 |
| 31.1. 1. Repoint the constraints at the pin of the cell inside the prim wrapper ..... | 134 |
| 31.2. 2. Point the files at your hierarchy, or regenerate .....                       | 134 |
| 31.3. 3. Set the default bound .....                                                  | 135 |
| 31.4. 4. Declare your own clock groups.....                                           | 135 |
| 31.5. 5. Declare periods for generated clocks .....                                   | 136 |
| 31.6. Also check.....                                                                 | 136 |
| 32. Confirming it worked .....                                                        | 137 |
| 33. Scope and limitations.....                                                        | 138 |
| Revision History .....                                                                | 139 |
| 34. Document history .....                                                            | 140 |

This guide provides instructions and best practices for integrating OCAH subsystems into your chiplet design.

The integrator guide is split into multiple chapters. Each of these chapters covers integration considerations, interfaces, and configuration requirements for the respective subsystem.

# Initial SMU Integration

The System Management Unit (SMU) is a central part of the Open Chiplet Atlas Harness (OAH). It comprises three peer subsystems: the System Management Controller (SMC), the Debug and Test Ports (DTP), and the Security Processor (SEP).

The `smu_wrapper` module gives an example structure for the integrator. This has ports that can be used to connect to the user subsystem and the outside of the chiplet. It also has internal "integration modules". These will need to be modified to use memories and fuses that are supplied by the integrator.

# Chapter 1. Ports in `smu_wrapper`

There are many groups of ports in `smu_wrapper`. The ports are all described in detail in [SMU Top-Level Integration](#). The following port groups are good starting points in design bring-up: they will be required in any integration.

- **Clocks and reset** The integrator needs to provide a primary system clock, together with a reference clock (for timing-sensitive operations) and a peripheral clock (used for the peripherals' interfaces). There is also a master reset for the chiplet. See *Clock and Reset* in the top-level integration guide.
- **AXI crossbar** The SMU has an internal AXI crossbar. The *SMU AXI Crossbar Address Map* section in the top-level integration guide describes the crossbar's address map. This crossbar should have two connections to the user subsystem: one as a manager and one as a subordinate.
- **GPIO pads** The SMU expects direct connections to GPIO pads. These are exposed as inout ports. The detailed requirements for GPIO pad connections are described in the *GPIO Pad Integration* section in the top-level integration guide.
- **Cross-trigger** The SMU has a cross-trigger interface, which can either be exposed as a *Cross Trigger Matrix Interface* or as GPIO-style signals.
- **JTAG** There is a group of JTAG interfaces, each connected to a TAP. These TAPs are exposed separately, to be connected and chained as appropriate by the integrator. Each TAP also exposes an output that shows whether its output is enabled. See *STAP Scan Chain Topology* for details of these interfaces.
- **Lifecycle** The SMU has a lifecycle controller. Its current lifecycle state is exposed through the `lc_state_o` port. This port is described at *Lifecycle State* in the top-level integration guide.

# Chapter 2. Macros needed by "integration modules"

The `smu_wrapper` module instantiates two "integration modules" (`sep_ip_integration` and `smc_ip_integration`). These will need to be modified and completed for any integration.

## 2.1. Macros needed by SEP

If the SEP is enabled, the macros that must be supplied and instantiated for it are the following. As with the top-level ports, there are also several connections that an integrator may wish to implement (but which are not necessary for the initial structure). The following macros are definitely required:

- **Fuses** The SEP expects some fuses to exist. In `sep_ip_integration`, these are implemented with `efuse_bank_model`, which uses a model fuse instance in `efuse_bank_reg`. An integrator will need to implement either `efuse_bank_reg` (or the whole of `efuse_bank_model`) to perform an "APB to fuse" conversion.
- **ROM implementations** The `sep_ip_integration` module contains two ROMs, which are both implemented with the `prim_rom` module. These ROMs are: the boot rom (in `u_sep_boot_rom`) and a key manager ROM (in `u_km_rom`).
- **SRAM implementations** The SRAM implementations expected by the SEP can be split by the components using them as follows:
  - **Adams Bridge 1r1w RAMs** If `SEP_ABR_EN` is defined, the SEP contains a copy of the Adams Bridge module. This module needs access to either 9 or 13 1r1w RAMs (the larger number if masking is enabled). A 1r1w RAM is a memory with one read and one write port. These memories are simpler than a general dual-port RAM. Such a memory is implemented in the example with the `prim_ram_1r1w` module.
  - **The TCM** The VeeR core expects instruction and data memories, split across multiple banks, and communicates with them using `sep_cpu_tcm_req_t` / `sep_cpu_tcm_rsp_t` signals. There is a parameterized example wrapper in `sep_tcm_wrapper`, and this will need to be supplied with single-port RAM instances of appropriate sizes.
  - **Other single-port RAMs** As well as the memories described above, there are four other single port RAM instances: the SEP scratch RAM (`u_sep_sram`); the key manager RAM (`u_km_sram`); and OTBN instruction and data memories (`u_otbn_imem_sram`, `u_otbn_dmem_sram`).

## 2.2. Macros needed by SMC

The macros that are needed for the SMC are the following:

- **Fuses** Like the SEP, the SMC expects some fuses to exist. In `smc_ip_integration`, these are implemented with `efuse_bank_model`, which uses a model fuse instance in `efuse_bank_reg`. An integrator will need to implement either `efuse_bank_reg` (or the whole of `efuse_bank_model`) to perform an "APB to fuse" conversion.
- **Conversion between core and pad signals** The SMC expects to be able to communicate with GPIO pads (which are exposed through an inout port in `smu_wrapper`). The integrator's wrapper module must convert between the SMC's binary representation of the pad state and the value in that inout port. In the example, this translation is made by a (non-synthesizable) `prim_pad_wrapper` module, which will need a synthesizable implementation.
- **ROM** The four-core cluster in the SMC expects a ROM. In the example, this is implemented with a `prim_rom` instance.
- **SRAM implementations** The SMC expects SRAM implementations for the following components.
  - The four-core cluster in the SMC expects several SRAMs. These back a scratch memory, together with tag and

data memories for an I-cache and D-cache. In the example, these are all implemented with instances of `prim_ram_1p`.

- There are also several backing memories for each I3C instance. There is a single-port "DAT" and a "DCT" memory per I3C instance (implemented in the example by instances of `prim_ram_1p`). There is also a two-port RLT (Retransmission Limit Timer) memory, which is implemented in the example with an instance of `prim_ram_2p`.
- Finally, there are multiple trace RAM instances that can be used to capture debug data. In the example, these are implemented with instances of `prim_ram_1p_adv`.

# SoC Integration Checklist

Use this checklist as a quick route through the integration work; each item links to its detailed requirements elsewhere in this guide. Record minimum evidence against each gate before sign-off.

# Chapter 3. Integration gates

| Done | Integration gate                                                                                                                | Minimum evidence                                                           | Reference                                                                                                                                                            |
|------|---------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| [ ]  | Select the delivered hierarchy, enabled subsystems, and required configuration                                                  | Selected hierarchy and configuration record reviewed                       | <a href="#">SMU Top-Level Integration</a>                                                                                                                            |
| [ ]  | Assign the chiplet address envelope and program the SEP and SMC apertures                                                       | Approved non-overlapping address map; aperture CSRs verified in simulation | <a href="#">Address Map Integration</a>                                                                                                                              |
| [ ]  | Connect clocks, resets, power-good, and configuration straps; follow the power-up sequence                                      | Clock/reset/power review and sequencing test pass                          | <a href="#">SMC Integration</a> , <a href="#">SEP Integration</a>                                                                                                    |
| [ ]  | Connect external pin, bus, memory, eFuse, peripheral, and debug interfaces                                                      | Interface connectivity and tie-off audit complete                          | <a href="#">SMC Integration</a> , <a href="#">DTP Integration</a> , <a href="#">SEP Integration</a>                                                                  |
| [ ]  | Verify boot and reset progression, including fuse sensing, memory repair or bypass, ROM execution, and SEP release when enabled | Successful boot and reset log including failure paths                      | <a href="#">SMC Integration</a> , <a href="#">SEP Integration</a>                                                                                                    |
| [ ]  | Apply technology-mapping and CDC constraints; run integration-level verification                                                | Lint, CDC/RDC, constraint, and integration-test reports archived           | <a href="#">Prim Cell Replacement</a> , <a href="#">CDC Timing Constraints</a> , OCA Standard Compliance (see <a href="#">Home: Why Open Chiplet Atlas Harness</a> ) |
| [ ]  | For each adopter-owned IP, select its trust and attachment class and complete the User IP integration checklist                 | User IP integration checklist completed per IP block                       | User IP integration checklist (see the <a href="#">User IP Integration</a> chapter)                                                                                  |

# SMU Top-Level Integration

The System Management Unit (SMU) comprises three peer subsystems: the System Management Controller (SMC), the Debug & Test Ports (DTP), and the Security Processor (SEP). The subsections below describe each subsystem's interfaces independently, followed by the [SMU Composition](#) section that explains how they are wired together inside the SMU and how to select between the `smu.sv` logic-level core and the `smu_wrapper.sv` reference integration.

# Chapter 4. RTL Filelists

OCAH ships generated, repository-relative filelists under `integration/filelists/`. Run tools that consume them from the repository root.

These filelists are listed in the following table, which gives the filelist needed to synthesize or simulate each system.

| System | Synthesis   | Simulation (Verilator) | Simulation (VCS) |
|--------|-------------|------------------------|------------------|
| SMU    | smu.synth.f | smu.verilator.sim.f    | smu.vcs.sim.f    |
| SMC    | smc.synth.f | smc.verilator.sim.f    | smc.vcs.sim.f    |
| DTP    | dtp.synth.f | dtp.verilator.sim.f    | dtp.vcs.sim.f    |
| AoU    | aou.synth.f | -                      | -                |

The filelists for synthesis come from Bender's `synth` target and carry the target's `define` lines. Preserve those lines when passing the filelist to a synthesis tool; see [Synthesis filelist defines](#).

The filelists for simulation are different for Verilator and VCS. Each is the complete filelist generated by that subsystem's DV configuration for the named simulator, including the subsystem's testbench top, supplemental models, and tool-selected stubs. AoU's DV environment is maintained in its vendor folder, so it is not provided at the OCAH level.

Like the synthesis filelists, the simulation filelists carry the target's `define` lines. Preserve these lines when passing the filelist to a simulator.

Regenerate all filelists with `python3 scripts/update_integration_filelists.py`. Add the `--check` argument to verify that committed outputs are current.

# Chapter 5. Address Map Integration

The OCAH address map is configured in three layers, which are described in detail in the TRM at *OCAH Memory Map*.

- **Chiplet envelope (integrator).** The SoC/chiplet address map assigns each subsystem a global base address and reserved size. The decoder in the adopter’s fabric routes accesses to these ranges to the SMU. The SMU crossbar preserves offsets and does not constrain envelope size, so the integrator is responsible for non-overlap and containment at the SoC level.
- **SEP and SMC chiplet apertures (firmware).** Each subsystem exposes a chiplet-visible aperture whose base and size are programmable at runtime. Inbound transactions to an aperture are remapped global-to-local before they reach the subsystem.
- **Local-alias views (fixed in RTL).** Internally each subsystem addresses its own resources through a fixed local map. The SMC is at `0xC000_0000`: see *Address Map and Aperture* section in the SMC’s section of this integrator guide. The SEP accesses its registers through its own local map. The SMC and SEP internal base addresses are RTL-fixed, not integrator-assigned.

Table 1. Address-map assignment contract

| Level                | Owner        | Assigned / programmed by                                                                       |
|----------------------|--------------|------------------------------------------------------------------------------------------------|
| Chiplet envelope     | Integrator   | SoC/chiplet address map + adopter fabric decode                                                |
| SEP chiplet aperture | SEP firmware | <code>SEP_GLOBAL_BASE_ADDR / SEP_REGION_SIZE</code> (the <code>sep_cpu_ctrl</code> CSRs)       |
| SMC chiplet aperture | SMC firmware | <code>GLOBAL_BASE / REGION_SIZE</code> (the SMC CPU Control CSRs at <code>0xC001_0000</code> ) |
| SEP / SMC local view | Fixed (RTL)  | Offsets within each subsystem’s local map (SMC local base <code>0xC000_0000</code> )           |

Programming order and constraints: firmware programs the SEP and SMC aperture CSRs during early boot, **before any cross-subsystem AXI traffic is issued**, and must keep the two apertures non-overlapping and inside the chiplet envelope the integrator assigned. The full runtime crossbar behavior and the exact CSR plumbing are in the *Firmware programming order* section of the integrator’s guide.

## 5.1. Register collateral

The machine-readable address map ships in the repository tree; integrators consume it from the release checkout or tarball rather than a separate package. The source of truth is distributed by ownership: each subsystem or IP keeps its canonical register sources and generated outputs beside its implementation. The `integration/` directory centralizes symlinks to that distributed collateral so an integrator does not have to discover every owner-local path.

Each subsystem lists the SystemRDL files that it requires in a flat self-contained list at `integration/rdl/<subsystem>/`. Filenames remain unchanged, and shared dependencies appear in every subsystem that needs them. Non-RDL support files needed by relative includes remain at the `integration/rdl/` root. For example, `integration/rdl/i3c_defines.svh` sits there because both `integration/rdl/smc/registers.rdl` and `integration/rdl/smu/registers.rdl` reach it through the I3C core’s own parent-relative include (`../i3c_defines.svh`). That relative path only resolves if the header is one directory above every subsystem folder that needs it. The matching generated IEEE 1685-2014 component descriptions use the same flat subsystem organization under `integration/ixact/<subsystem>/`.

These directories are generated symlink indexes; run `python3 scripts/update_integration_symlinks.py` after adding or moving collateral. The targets of these symlinks are RDL files, one per subsystem, which remain at their canonical locations in `hw/sys/<sys>/regs/`, `hw/ip/<ip>/regs/`, and `vendor/...`. These directories are the `regs/` element of every component’s directory layout, described in the *Getting Started Guide*. Other generated outputs remain under each owner’s `regs/gen/{c,sv,svh,py,ral,adoc,html,ixact}/` directory.

For the architecture-level responsibility split between the integrator, firmware, and the internal SEP/SMC maps, see the SEP's *OCAH Memory Map* section in the Technical Reference Manual.

# Chapter 6. Immutable ROM FW Integration

OCAH contains three immutable ROM FW images: the SMC production ROM FW, the SEP production ROM FW, and the Key Manager production ROM FW. Each image has two integration contracts. The adopter connects and configures the corresponding ROM macro, and the final ROM FW image must be present before its processor leaves reset. Where ROM FW must initialize or access an adopter-owned peripheral outside OCAH, the image may also expose build-time integration hooks.

## 6.1. Weak-symbol override method

An immutable ROM FW image may provide selected vendor-neutral integration hooks as weak symbols. Supply an adopter implementation as a strong definition of the same symbol before the final image is frozen. The strong implementation must program the same adopter-owned IP instantiated by the RTL integration, and its signature, ABI, return values, and documented semantics must match the weak declaration.

This mechanism applies only when the ROM FW needs to interact with a peripheral outside OCAH. It is a build-time image-composition mechanism, not a runtime extension mechanism. Include the adopter implementation in the final ROM FW build so that it replaces the weak definition at link time.

Inspect the final ELF or linker map after linking. For example, `riscv64-unknown-elf-nm` must report each selected implementation as a strong symbol rather than `W`; successful linking alone does not prove that the weak default was replaced.

## 6.2. SMC ROM FW integration

Connect `smc_rom_intf_req_o` and `smc_rom_intf_rsp_i` to the adopter's ROM implementation. In the current four-core configuration, the request provides the ROM clock, enable, and 14-bit 64-bit-word address, and the response returns one 64-bit word. This is a direct memory interface, not AXI-Lite. The 128 KiB ROM FW image must be present before the first boot; its build is under `hw/sys/smc/bootrom/prod/`.

Connect the ROM macro configuration input reached as `rom_cfg_i` and `mem_cfg_i` according to the selected macro's contract. OCAH forwards these 11 bits without assigning technology-specific semantics; the reference `smc_ip_integration.sv` ties them to zero. Set the eFuse shadow value that drives the CPU's `rom_flip_endianness_i` path to match the byte order of the image and ROM macro. Deasserted passes each 64-bit read word unchanged; asserted reverses its eight bytes.

Table 2. SMC ROM FW override inventory

| Hook                        | Weak default                                                           | Rationale                                                                                                     | Override and integration action                                                                                                                                                                                                                                                                                                                      |
|-----------------------------|------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>smc_pll_init()</code> | Returns <code>SMC_PLL_SUCCESS</code> without programming PLL hardware. | PLL implementation is technology- and vendor-specific, so OCAH does not include a vendor-specific PLL driver. | Override when <code>BL0_PLLCLK</code> is asserted and the adopter's PLL requires ROM-time configuration. Provide the same <code>smc_pll_result_t smc_pll_init(void)</code> signature in the final ROM FW build. Any result other than <code>SMC_PLL_SUCCESS</code> is fatal: the ROM FW records an interface error and remains in <code>wfi</code> . |

| Hook                                                                                                                                        | Weak default                                                                                                 | Rationale                                                                                                               | Override and integration action                                                                                                                                                                                                                                                                                                                                                       |
|---------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>i3c_release_reset()</code> ,<br><code>cfg_ps()</code> , <code>init_i3c_ctrl()</code> ,<br>and<br><code>I3C_GetDriverInstance()</code> | Permit the ROM FW to boot without an active I3C implementation; I3C data operations report a hardware error. | OCAH includes an I3C implementation, but the adopter may select a different I3C target and driver for the final system. | When the ROM FW must use an active I3C target, select the open HCI implementation with <code>I3C_CORE=chipsalliance</code> , or connect the adopter's I3C target through the SMC external AXI-Lite master ( <code>smc_external_req_o</code> and <code>smc_external_resp_i</code> ) and link strong implementations that conform to <code>drivers/include/i3c_target_driver.h</code> . |

## 6.3. SEP ROM FW integration

The SEP exposes the `sep_boot_rom` memory interface for its production ROM FW image. The detailed ROM-macro configuration, image-loading contract, and adopter override inventory are not yet documented here.

*Table 3. SEP ROM FW override inventory*

| Hook                    | Status                                               |
|-------------------------|------------------------------------------------------|
| <i>To be documented</i> | No adopter override requirement is defined here yet. |

## 6.4. Key Manager ROM FW integration

The Key Manager exposes the `km_rom_mem` interface through SEP for its production ROM FW image. The detailed ROM-macro configuration, image-loading contract, and adopter override inventory are not yet documented here.

*Table 4. Key Manager ROM FW override inventory*

| Hook                    | Status                                               |
|-------------------------|------------------------------------------------------|
| <i>To be documented</i> | No adopter override requirement is defined here yet. |

# Chapter 7. System Management Controller (SMC) Integration

The System Management Controller (SMC) is a subsystem responsible for power management, clock control, reset sequencing, and peripheral interface coordination. The `smc.sv` module exposes logic-level interfaces; all technology-specific components (PLLs, PVT sensors, eFuses, memory macros, GPIO padings) are instantiated externally by the adopter. See the *SMU Module Variants* section for how the reference wrappers demonstrate this integration.

For detailed architectural documentation about the SMC internal design, refer to `hw/sys/smc/doc/`. The public integration examples are `hw/top/smc_wrapper.sv` and `hw/top/smc_ip_integration.sv`.

## 7.1. Clock and Reset

The SMC requires three external clock inputs: `clk_smc_i` (primary system clock driving the CPU cluster, fabric, and peripherals), `clk_periph_i` (peripheral clock driving the peripherals), and `clk_ref_i` (reference clock for timing-sensitive operations). All must be generated externally by the adopter's PLL infrastructure; the SMC provides AXI-Lite control outputs for PLL configuration (see [Peripheral Interface Connections](#)). The peripheral clock is used to drive the I3C interface, I2C interface, UART interface, and AVSBus interface.

Hold `rst_cold_ni` asserted (low) while power supplies and clocks stabilize. Assert `powergood_i` once supplies reach nominal, then deassert `rst_cold_ni` (drive high) to start the boot sequence.

The SMC generates AASD (async-assert / sync-deassert) reset outputs: `rst_primary_smc_clk_no` for the main clock domain, `rst_primary_periph_clk_no` for the peripheral clock domain, and `rst_primary_ref_clk_no` for the reference clock domain. These ensure clean reset release without metastability across the system hierarchy.

Reset domain overrides are delivered through a single typed input, `jtag_reset_ctrl_i` (`smc_pkg::jtag_smc_reset_ctrl_t`), which carries all SMC reset override enables and active-low values. The DTP drives this input through the JTAG IC\_RESET mechanism (see the *SMC-DTP Internal Interconnection* section); most integrations leave all override enables deasserted.

## 7.2. External CPU cluster NDM reset

Connect `smc_ndmreset_request_i[i]` to the NDM reset request from external CPU cluster `i`, and return `smc_ndmreset_process_o[i]` to that cluster. Set `CpuClusterCount` in `smc_config_pkg` to the number of clusters. This harness sets it to 4. The parameter sizes both ports, and `NDMRESET_CLUSTER_COUNT` reads that value back. The register fields stay 32 bits wide. Tie unused request inputs to 0.

## 7.3. Address Map and Aperture

The SMC has a chiplet-visible aperture and an internal local address view. Internally, the SMC uses a fixed local base address of `0xC000_0000` and a fixed local window size of 16 MiB. SMC-local addresses (registers, memories, remapped regions) are defined as offsets from that base. The chiplet-visible aperture is adopter-defined: the chiplet or SoC address map assigns the global base and size that external masters can use to reach SMC through the SMU crossbar.

When integrating the SMC into a chiplet or SoC, the adopter assigns a system base address and reserved size for the SMC window. The system base (e.g. `0x0800_0000` in a chiplet address map) may be different from the SMC-local base `0xC000_0000`. Firmware programs the SMC `GLOBAL_BASE / REGION_SIZE` CSRs during early boot to match that assignment.

The adopter's fabric or address decoder must route the reserved system range to the SMC block so that offsets are preserved: system base + offset maps to SMC-local `0xC000_0000` + offset.

*Table 5. Address Base Mapping*

| View                 | Base Address             | Description                                                         |
|----------------------|--------------------------|---------------------------------------------------------------------|
| SMC-local (internal) | <code>0xC000_0000</code> | Local alias address (fixed). Used by SMC CPU, firmware, and fabric. |
| System (adopter)     | Adopter-defined          | Base of the chiplet/SoC aperture assigned to SMC.                   |

The SMC routes bus transactions from inside the SMU to either be local (accessing something inside the SMC) or global. This routing is configured by three of the SMC base configuration registers:

- **LOCAL\_BASE** (read-only, fixed at `0xC000_0000`): The local alias base. Together with **REGION\_SIZE**, this is the address space the SMC CPU and internal fabric use to access SMC resources.
- **GLOBAL\_BASE** (read-write, defaults to `0x4000_0000`): The system-level base address. Firmware must program this during early boot to match the adopter's system address assignment, enabling the SMC to issue outbound transactions using global system addresses.
- **REGION\_SIZE** (read-write, resets to `0x0100_0000` / 16 MiB): The size of both the local alias window and the global aperture. It sizes the SMC input fabric's local/global split as well as SMU-level routing and SEP-to-SMC decode. Firmware must not program it to zero, and must keep **LOCAL\_BASE** + **REGION\_SIZE** inside the 32-bit SMC-local address space. SMC units whose window extends past **REGION\_SIZE** answer **DECERR** to the SMU and the SEP. At the reset value these are the PLIC, CLINT and bus-error units, so firmware must widen **REGION\_SIZE** to cover them before either accesses them.

For full details on alias remapping and outbound routing, see the SMC Fabric documentation (<hw/sys/smc/doc/fabric.adoc>).

For a detailed breakdown of all components within the SMC local map, refer to the SMC Memory Map documentation (<hw/sys/smc/doc/memmap.adoc>).

## 7.4. AXI Interface Configuration

The SMC provides three distinct AXI interface groups serving different access paths. The **sys\_axi\_in** interface accepts requests from external system masters requiring access to SMC-managed resources. This interface uses a 56-bit address space with 64-bit data width and 6-bit transaction IDs. Connect this interface to your system fabric for normal operational access from application processors or DMA controllers.

The **sep\_axi\_in** interface provides dedicated access from the Security Processor (SEP) subsystem. This interface shares the same sizing parameters as the system input but operates independently to maintain security domain separation. Use this interface only when integrating alongside the SEP subsystem. The interface may remain unconnected if your integration does not include SEP.

The **output\_axi** interface carries filtered and remapped requests from the SMC to external system resources. This interface uses an 8-bit transaction ID field to accommodate merged traffic from multiple input paths. Connect this interface to your system interconnect to allow SMC components access to external memory and peripherals. An AXI VIP or equivalent BFM is a suitable stand-in during integration verification before the real system fabric is available.

The **jtag\_axi\_in** interface provides debug access through JTAG mechanisms. This interface uses reduced 2-bit transaction IDs and connects to your JTAG debug infrastructure.

## 7.5. GPIO Pad Integration

GPIO pad integration requires careful attention to function assignment and pull requirements. The GPIO table below lists each pad's index, function, recommended pull, and integration notes. Default input/output direction is defined by `smc_pading_pkg::DefaultDirectionMap`, not by the table.

The public `hw/top/smc_wrapper.sv` and `hw/top/smc_ip_integration.sv` examples show the pad connections. For bi-directional pins, implement proper tri-state buffers controlled by the `core2pad_en_o` signals. Connect multiplexed UART, I2C, I3C, and SPI pins to external devices according to the function assignments in the GPIO table.

The SMC pading drives one GPIO pad per `u_gpio_interface` instance, so the adopter must integrate `smc_pkg::NumGpioWraps` pads: `smc_pkg::NumBondedGpio` bonded pads plus `smc_pkg::NumUnbondedGpio` unbonded pads. If the adopter chooses to capture configuration straps from GPIO pads, this can only be done from the bonded pads. The pads for the SDA and SCL lines of I3C[1] must be unbonded for security when transmitting OCCP traffic. The pads for Cool Reset In/Out must also be unbonded as they are meant only to interface with other chiplets within a package. All of these pads must be bi-directional, except for Cool Reset In which must use an input-only pad.

The adopter must instantiate 10 additional pads to support the JTAG PTAP and STAP. This consists of two groups of TCK, TRSTN, TDI, TDO, and TMS — one group for the PTAP and one for the STAP. The TDO for both the PTAP and STAP must use tri-state capable bi-directional pads. The TDI for both the STAP and PTAP must use input-only pads. The remaining PTAP pads must be capable of input, and the remaining STAP pads must be capable of output.

The adopter must connect every cross trigger port (CTP) that `smu` exposes. A CTP that leaves the chiplet must instantiate a group of 4 pads (request out, request in, acknowledge in, acknowledge out). The two inputs must use input-only pads and the two outputs must use bi-directional pads capable of open-drain drive to conform with the cross-trigger methodology described in the *Cross-Trigger Port* section of the Technical Reference Manual.

See *Cross Trigger Port GPIO Interface* for the SMU-level ports.

OCAH also requires a reference clock, a cold reset, and a powergood indication (`clk_ref_i`, `rst_cold_ni`, and `powergood_i` on `smu`). These must be driven, but not necessarily from pads. The adopter may source them from dedicated pads as the GPIO table shows, or from another stable source.

The adopter may choose to instantiate additional pads (with or without supporting instances of the OCAH `gpio` module) to support custom features.

Configuration straps are captured separately from the GPIO table. Establish them before cold reset deassertion and keep them stable during capture. The `STRAPS_LO` and `STRAPS_HI` registers in the adopter peripheral window (see [Supplementary Region](#)) define the decoded bit assignments, including `BYPASS_SRAM_REPAIR` at `STRAPS_LO[13]` and `TEST_EN` at `STRAPS_LO[14]`.

## 7.6. Peripheral Interface Connections

The SMC exposes logic-level interfaces to several technology-specific subsystem components that the adopter instantiates externally. The subsections below describe each connection in turn.

### 7.6.1. Adopter Peripheral Window

The `smc_external_req_o` and `smc_external_resp_i` signals form a 32-bit AXI-Lite interface to the adopter's own peripheral register maps. Any technology- or product-specific block that SMC firmware needs to reach sits behind this window rather than on a dedicated per-peripheral port.

The window is the recommended home for the control/status registers of logic that the SMC must configure or monitor but that the SMC itself does not implement — padding configuration logic, clock generation, on-die sensors, memory-technology SHIMs, and similar adopter-owned blocks are typical examples. For example, runtime reconfiguration of pin directions, pull settings, and peripheral multiplexing is expected to be reachable here. The SMC decodes the aperture and forwards the transaction; what lives behind it is entirely adopter-defined.

The window occupies `BASE + 0x040_0000` to `BASE + 0x07F_FFFF` (4 MiB; with `LOCAL_BASE`, `0xC040_0000` to `0xC07F_FFFF`). The SMC forwards every access in this range to `smc_external_req_o` except the eFuse SHIM range at its base (see [Mandatory Region](#)); the adopter decodes everything else. The generated SMC memory map reports the window as one opaque aperture.

The window is split into two regions. Apart from the eFuse SHIM control block needed for security reasons, hardware treats both identically — the split is organizational only:

- **Mandatory** (`BASE + 0x040_0000`): Blocks every integration must implement. OCAH specifications dictate their function, but their implementation, register layout and placement within the region are technology- and vendor-specific.
- **Supplementary** (`BASE + 0x040_4000`): Any additional memory-mapped devices the adopter chooses to expose, plus the captured strap registers.

## Mandatory Region

| Block                               | Purpose                                                                                                                                   |
|-------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------|
| eFuse SHIM control                  | Technology-specific eFuse bank control, such as the time the OTP macro needs to initialize before sensing                                 |
| PLL clock-observation pad interface | Register-driven pad data and direction, per-field override enables, and an AXI PROT access filter                                         |
| PLL clock-observation pad control   | Drive strength, pull enable and select, and Schmitt select                                                                                |
| PVT clock-observation pad interface | As the PLL clock-observation pad interface                                                                                                |
| PVT clock-observation pad control   | As the PLL clock-observation pad control                                                                                                  |
| Reference-clock pad control         | Drive strength, pull and Schmitt settings for the reference-clock pad                                                                     |
| Per-pad GPIO control                | One control block per pad: pad electrical settings, the value captured at reset deassertion, and the secondary hardware function override |
| PLL wrapper                         | Control and status of the adopter's clock-generation block                                                                                |
| PVT wrapper                         | Control and status of the adopter's process, voltage and temperature sensors                                                              |

The eFuse SHIM control CSRs must sit at the base of the mandatory region. In each subsystem, the internal fabric routes the first `*_EFUSE_SHIM_SIZE` bytes of the window into the eFuse controller, so the controller's lifecycle access control applies to them. The accesses then leave on the dedicated eFuse bank port, `smc_efuse_bank_ctrl_req_o` or `sep_efuse_bank_ctrl_req_o`, instead of `smc_external_req_o` or `sep_external_req_o`. See [\[efuse-bank-ctrl-window\]](#).

## Supplementary Region

| Block           | Purpose                                                                                          |
|-----------------|--------------------------------------------------------------------------------------------------|
| Adopter devices | Optional memory-mapped devices. The reference integration places its vendor I3C controllers here |
| Captured straps | Pad values latched at cold reset, one bit per GPIO, read by boot firmware                        |

The captured straps are read-only. The generated `straps` register descriptions define the decoded bit assignments.

## 7.6.2. eFuse Interface

### NOTE

This guide uses **eFuse** and **OTP** interchangeably for the same one-time programmable bank and the SHIM that fronts it. Port names mix both (`efuse_*`, `otp`); they refer to the same interface.

The eFuse interface consists of two parts:

- `efuse_bank_ctrl` — a 32-bit AXI-Lite interface used to access the SHIM control CSRs (for example, foundry-specific bank timing such as the initialization delay before sensing can begin). Firmware reaches these CSRs through the base of the adopter external window; see [\[efuse-bank-ctrl-window\]](#).
- `efuse_shim_command` — the custom fuse command interface used to issue read, program, and program/read-back operations to the eFuse bank.

**Adopter responsibility.** The `efuse_shim_command` interface is intentionally generic and technology-neutral. The adopter must implement an Interface SHIM that converts these generic commands into the hardware signals required by their OTP macro. The conversion is driven by the adopter's own read and program state machines inside the SHIM; OCAH only defines the command/response contract, not the macro-side signaling.

The SMC and the SEP each contain their own eFuse controller, so the `smu.sv` boundary carries two independent copies of the interface, one with an `smc_` prefix and one with a `sep_` prefix. The adopter places **two separate SHIM and macro instances**, one per controller, each fronting its own 8 Kbit bank. The banks are never shared. Each controller also drives its own sense-done output to the `smu.sv` boundary, `smc_fuse_sense_done_o` and `sep_fuse_sense_done_o`, and holds the sensed bank in its own shadow registers. [eFuse connections at the smu.sv boundary](#) shows these connections. When the SMU is built with `CFG.SEP = 0`, only the SMC instance is needed.



Figure 1. eFuse connections at the smu.sv boundary

[eFuse controller to Interface SHIM contract](#) shows the contract for one of those instances. Everything above the dashed line is provided by OCAH; everything below it is the adaptor's. Only the two interfaces that cross the line are fixed.



Figure 2. eFuse controller to Interface SHIM contract

The reference SHIM, `hw/ip/efuse/rtl/efuse_interface_shim.sv`, drives an APB-based behavioral bank model. Use it as a worked example of the read and program state machines, not as a template for macro-side timing.

**SHIM control address window.** The SHIM control CSRs are defined by the adopter, but their addresses sit at the base of the subsystem's adopter external window. The fabric carves that block off the window and routes it to the eFuse controller instead of the external port. The controller does not decode it; it forwards every access outside its own register blocks to `efuse_bank_ctrl` unchanged. The rest of the external window leaves on the subsystem's external port as usual.

Table 6. SHIM control address window

| Subsystem | Window base                                                        | Size parameter (SMU default)               | Rest of the window                                    |
|-----------|--------------------------------------------------------------------|--------------------------------------------|-------------------------------------------------------|
| SMC       | <code>smc_external</code> base, SMC-local <code>0xC040_0000</code> | <code>CFG.SMC_EFUSE_SHIM_SIZE (0x4)</code> | <code>smc_external_req_o / smc_external_resp_i</code> |
| SEP       | <code>sep_external</code> base, SEP-local <code>0x2000_0000</code> | <code>CFG.SEP_EFUSE_SHIM_SIZE (0x4)</code> | <code>sep_external_req_o / sep_external_resp_i</code> |

The SHIM must follow these rules for this window:

- **Fit the window.** Size the parameter to cover every SHIM control register. Accesses past it go to the external port and never reach the SHIM.
- **Describe the registers in the external map.** Place the SHIM control block at offset `0x0` of the adopter's `smc_external` and `sep_external` register maps. The open SMC map reserves the whole window as opaque memory. SEP takes the window base from the `efuse_shim_ctrl` instance in `sep_external`, so an adopter map that replaces it must keep an instance of that name at offset `0x0`.

The reference register block is `efuse_shim_ctrl` (`hw/ip/efuse/dv/models/regs/efuse_shim_ctrl.rdl`), which holds a single `EFUSE_BANK_INIT_TIME` register.

The command and response payloads are exchanged as packed structs:

```
// Controller -> SHIM
typedef struct packed {
    addr_t          address;           // Target address (in bits)
    logic            program_data;      // Data to program (when programming)
    access_length_words_t access_length_words; // Number of WORD_WIDTH words to access
    command_t        command;           // READ / PROGRAM / PROGRAM_READ_BACK
    logic            valid;             // Request valid
} fuse_command_req_t;

// SHIM -> Controller
typedef struct packed {
    data_t data; // Read data (one WORD_WIDTH word)
    logic  status; // Operation status (0 = OK, 1 = error)
    logic  valid; // Response valid (qualifies 'data' for one cycle)
} fuse_command_resp_t;
```

`command` is `efuse_pkg::fuse_command_e`: `FUSE_COMMAND_READ` (`2'b00`), `FUSE_COMMAND_PROGRAM` (`2'b01`) and `FUSE_COMMAND_PROGRAM_READ_BACK` (`2'b10`).

The SHIM implements two operations, reads and programs:

- **Reads.** If a request has `command` set to `FUSE_COMMAND_READ` and `access_length_words` set to `N`, respond with `N` `valid` strobes, each carrying one `WORD_WIDTH` word in `data`, reading consecutive words starting at `address`. Firmware reads set `N` to one; fuse sensing sets it to the whole bank, as described below.
- **Programs.** If a request has `command` set to `FUSE_COMMAND_PROGRAM`, program the single bit at `address` and respond with one `valid` strobe when the macro finishes. `program_data` is always 1 and `access_length_words` is always 1. For `FUSE_COMMAND_PROGRAM_READ_BACK`, also read the word back, return it in `data`, and set `status` if the programmed bit did not stick.

Both operations follow these rules:

- **Bit addressing.** `address` is a bit address. Convert it to whatever word or byte addressing the macro uses; the reference SHIM shifts it right by three.
- **One command at a time.** `valid` is a level, not a strobe. The controller holds `valid` and the whole request payload stable from the cycle it issues a command until it has received the response, so the SHIM may sample the payload at any point while the command runs.
- **When `valid` falls.** After a firmware read or program, `valid` falls in the cycle after the response strobe. After sensing it stays high until `fuse_sense_done` moves the arbiter to the firmware path, two cycles after the last strobe; do not treat that still-asserted request as a second read. The controller also withdraws `valid` without waiting for a response in these cases, and the SHIM must abandon the command it had started:
  - a firmware read or program timeout expires\*
  - firmware changes the read or program enable, where program takes priority over read\*
- **Errors.** Setting `status` ends a firmware read or program command with an error. The sense FSM counts only `valid` strobes, so a sensing error must still be followed by the remaining strobes.
- **No access control.** The eFuse guard zeroes requests to locked fields, and every request while the SEP is in secure test mode, in the same cycle the request is issued. A blocked request therefore never reaches the SHIM: `valid` does not rise, and no response is expected. Secure test mode is latched once per cold boot, before any firmware command can be issued, so it cannot begin in the middle of a command. The SMC controller has no secure test mode.

\* These scenarios will be fixed in a future release so that the controller never withdraws `valid` before the response.

#### IMPORTANT

Fuse sensing happens **once per cold boot**, when the eFuse controller's primary reset is released. It runs in **both** eFuse controller instances, SMC and SEP, each against its own bank. CPU and warm resets do not repeat it.

The adopter must provide **8 Kbit of fuses (8192 bits, 256 32-bit words) for each instance**: one bank behind the SMC SHIM and a second, separate bank behind the SEP SHIM. For both, `NumShadowWords` is 256.

**Fuse sensing protocol.** During automatic sensing the controller issues a single read with `access_length_words` set to the entire bank: `NumShadowWords`, which is `SHADOW_REG_BITS / WORD_WIDTH`. The SHIM is expected to stream the bank back one `WORD_WIDTH` word at a time: for each OTP access it drives the read `data` onto `efuse_shim_command_resp_i.data` and asserts `valid` for **exactly one cycle**. The controller consumes one word per cycle that `valid` is high, advancing to the next eFuse word on each assertion.

**eFuse sensing response stream** shows the stream for the 256-word bank. The sense FSM leaves `ST_READ` after one cycle and waits in `ST_WAIT`. Each `valid` strobe stores `data` into shadow word `words_received_q` and increments the count one cycle later. Gaps between strobes are allowed, as between cycles 2 and 4, and so are strobes on consecutive cycles, as in cycles 4 and 5, provided each cycle carries a new word. `data` is sampled only while `valid` is high. The strobe for word 255 (`NumShadowWords - 1`) stores the last word and moves the FSM to `ST_FINISHED` without incrementing. `fuse_sense_done` rises one cycle after that.

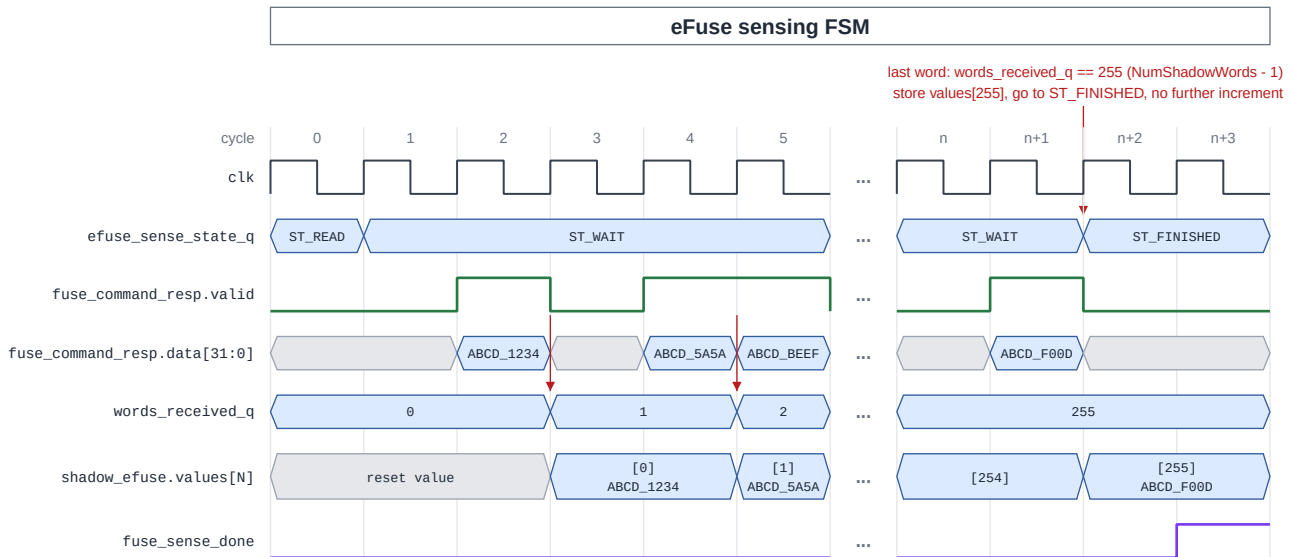


Figure 3. eFuse sensing response stream

#### WARNING

**valid** must be asserted for only a single cycle per returned word. If the SHIM holds **valid** high for two cycles, the controller will sample the same **data** value a second time and count it as the data for the **next** eFuse word, shifting all subsequent words and corrupting the sensed shadow contents. The adopter's SHIM FSM is responsible for producing a clean one-cycle **valid** strobe per **WORD\_WIDTH** access.

During cold boot the SMC and SEP each sense their own bank into their own shadow registers. **smc\_fuse\_sense\_done\_o** and **sep\_fuse\_sense\_done\_o** indicate when each sensing operation completes.

The **smc\_shadow\_regs\_o** output gives adopter read-only access to the sensed SMC bank. The SMU has no equivalent SEP output: the SEP bank holds secrets such as the class key and device UIDs, so its shadow registers stay inside SEP.

## 7.7. Memory Subsystem Integration

The SMC includes an embedded RISC-V CPU cluster with associated memory interfaces. See *Immutable ROM FW Integration* for the ROM FW integration contract.

### 7.7.1. SRAM and Cache Array Integration

Scratch RAM interfaces (**smc\_scratch\_ram\_intf\_req\_o** and **smc\_scratch\_ram\_intf\_rsp\_i**) connect to 32 independent RAM banks totaling the scratchpad memory space. Cache memory interfaces for L1 instruction and data caches (**smc\_l1\_icache\_\*** and **smc\_l1\_dcache\_\***) connect to tag and data RAM banks as specified in the port table.

The **smc\_disable\_sram\_auto\_init\_i** input controls automatic memory initialization behavior. When deasserted, the SMC automatically zeroes all SRAM contents during bring-up. The **smc\_init\_mem\_done\_o** output indicates completion of this initialization sequence. The **SRAM\_AUTO\_ZERO\_DISABLE** strap (**STRAPS\_LO[26]**) can disable this automatic zeroing behavior if your integration requires preserved SRAM contents across resets.

## 7.8. Memory Repair Integration

The SMC implements Built-In Redundancy Analysis (BIRA) memory repair to address manufacturing defects in SRAM

arrays. Repair uses redundant memory elements configured with data stored in eFuse memory, replacing defective cells detected during manufacturing test.

Memory repair executes automatically during boot after eFuse sensing completes and before MBIST operations. The process must complete successfully before the CPU cluster can safely access SRAM arrays. Repair is required on every cold reset but can be bypassed during Function Level Reset (FLR) operations for faster recovery.

### 7.8.1. Control Signals

- `smc_fuse_sense_done_o`: eFuse controller output indicating fuse sensing completion. External DFT logic monitors this signal to trigger repair operations.
- `skip_mem_repair_o`: Reset unit output indicating repair should be bypassed. It is driven by the isolation request inputs (`isolate_req_pin_sync_smc` or the SMC isolation register), not directly by the strap. When asserted, external repair logic should skip operations and immediately assert completion status.
- `ext_boot_seq_done_i`: External input indicating the boot sequence (memory repair and shadow register override) is complete. Hold low to pause reset release until external logic gives the go-ahead; required before the system can continue its boot sequence.

### 7.8.2. Repair Data

The SMC fuse map does not allocate storage for repair data. Your external memory repair controller must source it from wherever your manufacturing flow keeps it and apply it to SRAM arrays according to your memory architecture.

### 7.8.3. Status Monitoring

Repair completion and success are reported through `DFX_CTRL_STATUS.STATUS_SMU` at `0xC000_B800`. The `mem_repair_done` bit indicates completion regardless of success, while `mem_repair_success` indicates successful repair. Both bits are set by the external repair controller. The SMC ROM FW monitors these bits during initialization to verify repair completion.

### 7.8.4. Bypass Configuration

The `BYPASS_SRAM_REPAIR` configuration strap (`STRAPS_LO[13]`) is captured into the strap registers in the adopter peripheral window. Keep these three mechanisms distinct:

- No RTL path drives `skip_mem_repair_o` from this strap directly. `skip_mem_repair_o` is driven from the isolation request path.
- Production ROM reads the strap and, when asserted, skips repair-status validation and writes `MBIST_STATUS_MEM_REPAIR_BYPASSED` to scratchpad register 15 (`SMC_SCRATCH_MBIST_STATUS`, `0xC003_90F8`). It does not cause the external repair controller to skip physical repair.
- External repair logic independently honors `skip_mem_repair_o` to decide whether to bypass physical repair operations.

Use bypass mode only when SRAM arrays are guaranteed defect-free, such as during development or with known-good components.

### 7.8.5. Integration Requirements

Provide an external memory repair controller that monitors `smc_fuse_sense_done_o` to initiate repair, respects `skip_mem_repair_o` for bypass control, reads repair data from eFuse shadow registers, applies repair configuration to

SRAM arrays, asserts `ext_boot_seq_done_i` and updates `DFX_CTRL_STATUS` with completion status. The controller operates independently of the SMC core and must complete before the CPU cluster accesses SRAM.

Note: For a standalone SEP, the adopter must synchronize `ext_boot_seq_done_i` to the system clock and ensure the signal is held until next cold reset.

For direct access to the eFuse not through the SHIM, i.e. from a DFT fuse controller, adopters must ensure the integrated logic will not interfere with accesses from the OCAH's efuse interface.

The isolation request path asserts `skip_mem_repair_o` during Function Level Reset (FLR) operations to bypass repair for rapid reset sequences. Normal cold reset sequences always execute repair unless isolation is already asserted.

## 7.9. Interrupt Integration

The SMC aggregates interrupts from multiple sources into `cpu_interrupts_o`, which feeds the PLIC of the embedded RISC-V CPU cluster. The interrupt vector is assembled in `hw/sys/smc/rtl/smc_base.sv` and `hw/sys/smc/rtl/smc_peripherals/rtl/smc_peripherals.sv`. The authoritative bit-level map (RTL trace and PLIC source ID note) is maintained in a single place:

See the *SMC CPU interrupt vector map* in the Technical Reference Manual.

The SMC PLIC and CPU interrupt vector are internal. `sync_irq_o` is **not** the interrupt aggregate—it is the software-controlled `SYNC_REG.sync` global synchronization bit in the reset unit, unrelated to PLIC interrupt delivery. Do not connect an external interrupt controller to `sync_irq_o`.

External interrupt sources visible to the adopter are `smc_ext_interrupts_i` (SMC external interrupt input vector, width `NUM_INT_TO_SMC`), `smc_ext_mailbox_interrupts_o` (outbound mailbox notifications, width `NumMailboxes`), `gpio_interrupt_o` (GPIO edge/level events, width `NumGpioWraps`), and `uart_interrupt_o` (UART TX/RX events, width `NumUart`). Drive `smc_ext_interrupts_i` as an active-high level or as a pulse that stays high long enough to be sampled on `clk_smc`. The pin is three-flop synchronized; a short asynchronous pulse can be lost. There is no edge-triggered mode. For the full PLIC source map see the SMC Technical Reference Manual.

## 7.10. Telemetry and Debug Integration

For system-level debug and telemetry, the SMC implements ATB (Advanced Trace Bus) receiver interfaces. The telemetry interface group (`telemetry_atdata_i`, `telemetry_atid_i`, `telemetry_atvalid_i`, `telemetry_atready_o`) operates in a dedicated `clk_telemetry_i` clock domain with separate `rst_telemetry_ni` reset. Connect these signals to ATB trace sources for debug data collection.

At the SMC boundary, `ext_debug_bus_i` is 512 bits wide; the SMU concatenates the adopter-visible 128-bit input with the SEP's internal 384-bit bus before driving SMC. The typed `xtrigger_ss_i` / `xtrigger_ss_o` ports are the only cross-trigger signals at the SMC boundary. The adopter-visible SMU cross-trigger interfaces are `xtrig_ctm_*`, `xtrig_clk_stop_req_i`, and the CTP groups.

Trace memory interfaces (`trace_mem_req_o` and `trace_mem_resp_i`) connect to trace RAM instances for storing captured debug data. `smc_ip_integration.sv` shows an example set of RAM instances that can be adapted to your debug requirements.

## 7.11. Bring-Up Sequence

The recommended bring-up sequence begins with asserting `rst_cold_ni` while stabilizing power supplies and clocks. Once all supplies reach nominal voltages, deassert `rst_cold_ni` to initiate the SMC boot sequence. The SMC immediately begins fuse sensing to read configuration values and security credentials.

Monitor the `smc_fuse_sense_done_o` signal to detect completion of fuse sensing. Configuration straps sampled during this phase determine boot modes and operational settings. After fuse sensing completes, the SMC releases internal subsystem resets based on the programmed reset sequencing configuration.

The CPU cluster begins executing the ROM FW after reset release. The ROM FW performs additional initialization including peripheral configuration, memory testing (unless disabled), and system health checks. The `smc_init_mem_done_o` signal indicates completion of memory initialization if automatic SRAM zeroing is enabled.

To support Function Level Reset (FLR), assert `cfg_flr_pf_active_i` to trigger a warm reset sequence. The SMC asserts `isolate_req_o` bits for the affected subsystem indices. The adopter's power controller drives `ss_reset_complete_i` high once the subsystem reset is complete; the SMC synchronizes this into the readable `SS_RESET_COMPLETE` register. Isolation remains asserted until cleared by software: SMC firmware must poll `SS_RESET_COMPLETE` and then write `ISOLATE_REQ_SMC_REG` to clear the FLR isolation latch. Do not assume isolation releases automatically on `ss_reset_complete_i`.

See `hw/top/smu_wrapper.sv` and `hw/top/smc_ip_integration.sv` for reference bring-up wiring examples covering clock, reset, strap, and peripheral connections.

## 7.12. SMC Port Interface

The SMC exposes a comprehensive set of interfaces for system integration. The following table defines all SMC top-level ports including clocks, resets, AXI interfaces, peripheral connections, and control signals. Refer to the detailed SMC documentation for internal signal descriptions and timing requirements.

Table 7. SMC Port Declaration

| Interface Name                      | Type  | Direction | Width | Description                                                                                                                                                                                                                                                                                                              | Connection                    | Default value (if applicable) |
|-------------------------------------|-------|-----------|-------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------|-------------------------------|
| <code>clk_smc_i</code>              | logic | Input     | 1     | Primary SMC clock domain. All SMC internal logic operates synchronously to this clock.                                                                                                                                                                                                                                   | PLL output                    | N/A                           |
| <code>clk_ref_i</code>              | logic | Input     | 1     | Reference clock domain. Used for timing-sensitive operations and peripheral interfaces.                                                                                                                                                                                                                                  | PLL reference clock           | N/A                           |
| <code>clk_periph_i</code>           | logic | Input     | 1     | Peripheral clock domain.                                                                                                                                                                                                                                                                                                 | PLL peripheral clock          | N/A                           |
| <code>powergood_i</code>            | logic | Input     | 1     | Power-good indication. Assert after supply voltages stabilize.                                                                                                                                                                                                                                                           | Power management controller   | N/A                           |
| <code>powergood_stable_o</code>     | logic | Output    | 1     | Stabilized power-good output. Debounced version of <code>powergood_i</code> .                                                                                                                                                                                                                                            | Reset unit → External systems | N/A                           |
| <code>rst_cold_ni</code>            | logic | Input     | 1     | Cold reset input (active low). Assertion and deassertion are synchronous to <code>clk_ref_i</code> and do not propagate while that clock is stopped. Assertion is de-glitched for 32 cycles. A falling <code>powergood_i</code> asserts the downstream cold reset without that wait. Deassertion is held for 255 cycles. | System cold reset             | N/A                           |
| <code>rst_primary_ref_clk_no</code> | logic | Output    | 1     | Primary reset synchronized to reference clock domain (active low).                                                                                                                                                                                                                                                       | To subsystems using ref clock | N/A                           |

| Interface Name            | Type                               | Direction | Width              | Description                                                                                 | Connection                                | Default value (if applicable) |
|---------------------------|------------------------------------|-----------|--------------------|---------------------------------------------------------------------------------------------|-------------------------------------------|-------------------------------|
| rst_primary_smc_clk_no    | logic                              | Output    | 1                  | Primary reset synchronized to SMC clock domain (active low).                                | To subsystems using SMC clock             | N/A                           |
| sys_axi_in_req_i          | smc_sys_in_56_64_6_12_axi_req_t    | Input     | -                  | System AXI input request (56-bit addr, 64-bit data, 6-bit ID, 12-bit user).                 | External system masters → Input Fabric    | N/A, tie to '0 if unused      |
| sys_axi_in_resp_o         | smc_sys_in_56_64_6_12_axi_resp_t   | Output    | -                  | System AXI input response.                                                                  | Input Fabric → External system masters    | N/A, leave floating if unused |
| jtag_axi_in_req_i         | smc_jtag_56_64_2_12_axi_req_t      | Input     | -                  | JTAG debug AXI request (56-bit addr, 64-bit data, 2-bit ID, 12-bit user).                   | JTAG debug port → Input Fabric            | N/A, tie to '0 if unused      |
| jtag_axi_in_resp_o        | smc_jtag_56_64_2_12_axi_resp_t     | Output    | -                  | JTAG debug AXI response.                                                                    | Input Fabric → JTAG debug port            | N/A, leave floating if unused |
| axil_smc_otp_jtag_req_i   | smc_pkg::smc_axil_32_32_req_t      | Input     | -                  | eFuse OTP/JTAG AXI-Lite request.                                                            | JTAG → eFuse controller                   | N/A, tie to '0 if unused      |
| axil_smc_otp_jtag_resp_o  | smc_pkg::smc_axil_32_32_resp_t     | Output    | -                  | eFuse OTP/JTAG AXI-Lite response.                                                           | eFuse controller → JTAG                   | N/A, leave floating if unused |
| sep_axi_in_req_i          | smc_sep_in_56_64_6_12_axi_req_t    | Input     | -                  | SEP AXI request (56-bit addr, 64-bit data, 6-bit ID, 12-bit user).                          | SEP → Input Fabric                        | N/A, tie to '0 if unused      |
| sep_axi_in_resp_o         | smc_sep_in_56_64_6_12_axi_resp_t   | Output    | -                  | SEP AXI response.                                                                           | Input Fabric → SEP                        | N/A, leave floating if unused |
| output_axi_req_o          | smc_sys_out_56_64_8_12_axi_req_t   | Output    | -                  | Filtered and remapped AXI output request (56-bit addr, 64-bit data, 8-bit ID, 12-bit user). | Output Fabric → External system resources | N/A, leave floating if unused |
| output_axi_resp_i         | smc_sys_out_56_64_8_12_axi_resp_t  | Input     | -                  | Filtered and remapped AXI output response.                                                  | External system resources → Output Fabric | N/A, tie to '0 if unused      |
| efuse_bank_ctrl_req_o     | smc_pkg::smc_axil_32_32_req_t      | Output    | -                  | eFuse bank control AXI-Lite request.                                                        | eFuse controller → eFuse Shim             | N/A                           |
| efuse_bank_ctrl_resp_i    | smc_pkg::smc_axil_32_32_resp_t     | Input     | -                  | eFuse bank control AXI-Lite response.                                                       | eFuse Shim → eFuse controller             | N/A                           |
| efuse_shim_command_req_o  | smc_efuse_pkg::fuse_command_req_t  | Output    | -                  | eFuse command interface request.                                                            | eFuse controller → eFuse Shim             | N/A                           |
| efuse_shim_command_resp_i | smc_efuse_pkg::fuse_command_resp_t | Input     | -                  | eFuse command interface response.                                                           | eFuse Shim → eFuse controller             | N/A                           |
| shadow_regs_o             | smc_efuse_pkg::efuse_map_t         | Output    | -                  | eFuse shadow register output.                                                               | eFuse controller → External systems       | N/A                           |
| pll_clk_obs_i             | logic                              | Input     | 1                  | PLL clock observation input.                                                                | PLL → GPIO padring (muxed)                | N/A                           |
| pll_clk_obs_en_i          | logic                              | Input     | 1                  | PLL clock observation enable.                                                               | Control logic → GPIO padring              | N/A                           |
| pvt_process_clk_obs_i     | logic                              | Input     | 1                  | PVT process monitor clock observation input.                                                | PVT → GPIO padring (muxed)                | N/A                           |
| pvt_process_clk_obs_en_i  | logic                              | Input     | 1                  | PVT process monitor clock observation enable.                                               | Control logic → GPIO padring              | N/A                           |
| cat_therm_i               | logic                              | Input     | 1                  | CAT thermal sensor input.                                                                   | CAT thermal sensor → PVT wrap             | N/A, tie to '0 if unused      |
| lsio_interface_select_o   | logic                              | Output    | [NumGpioWraps-1:0] | LSIO interface selection for each GPIO wrap.                                                | GPIO padring → GPIO wraps                 | N/A                           |
| pad2core_i                | logic                              | Input     | [NumGpioWraps-1:0] | GPIO input data from pad ring to core.                                                      | GPIO padring → SMC                        | N/A                           |

| Interface Name             | Type                                     | Direction | Width                       | Description                                                                                                                                                                                                                                 | Connection                                | Default value (if applicable) |
|----------------------------|------------------------------------------|-----------|-----------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------|-------------------------------|
| core2pad_o                 | logic                                    | Output    | [NumGpioWraps-1:0]          | GPIO output data from core to pad ring.                                                                                                                                                                                                     | SMC → GPIO padding                        | N/A                           |
| pad2core_en_o              | logic                                    | Output    | [NumGpioWraps-1:0]          | GPIO pad-to-core path enable.                                                                                                                                                                                                               | SMC → GPIO padding                        | N/A                           |
| core2pad_en_o              | logic                                    | Output    | [NumGpioWraps-1:0]          | GPIO core-to-pad path enable.                                                                                                                                                                                                               | SMC → GPIO padding                        | N/A                           |
| rst_cool_n_from_pin_i      | logic                                    | Input     | 1                           | Cool reset input from GPIO pin 61.                                                                                                                                                                                                          | GPIO pin 61 → Reset Unit                  | N/A                           |
| clk_telemetry_i            | logic                                    | Input     | 1                           | Telemetry clock domain. Separate clock for ATB telemetry data collection.                                                                                                                                                                   | Telemetry clock source                    | N/A                           |
| rst_telemetry_n_i          | logic                                    | Input     | 1                           | Telemetry reset (active low). Resets telemetry receiver logic.                                                                                                                                                                              | Telemetry reset source                    | N/A                           |
| telemetry_atdata_i         | telemetry_receiver_pkg::telemetry_data_t | Input     | [NumTelemetryReceivers-1:0] | ATB telemetry data input array.                                                                                                                                                                                                             | ATB sources → Telemetry receivers         | N/A                           |
| telemetry_atid_i           | telemetry_receiver_pkg::atb_id_t         | Input     | [NumTelemetryReceivers-1:0] | ATB telemetry ID input array.                                                                                                                                                                                                               | ATB sources → Telemetry receivers         | N/A                           |
| telemetry_atready_o        | logic                                    | Output    | [NumTelemetryReceivers-1:0] | ATB telemetry ready output.                                                                                                                                                                                                                 | Telemetry receivers → ATB sources         | N/A                           |
| telemetry_atvalid_i        | logic                                    | Input     | [NumTelemetryReceivers-1:0] | ATB telemetry valid input.                                                                                                                                                                                                                  | ATB sources → Telemetry receivers         | N/A                           |
| telemetry_atflushvalid_o   | logic                                    | Output    | [NumTelemetryReceivers-1:0] | ATB flush valid output.                                                                                                                                                                                                                     | Telemetry receivers → ATB sources         | N/A                           |
| telemetry_atflushready_i   | logic                                    | Input     | [NumTelemetryReceivers-1:0] | ATB flush ready input.                                                                                                                                                                                                                      | ATB sources → Telemetry receivers         | N/A                           |
| smc_cluster_double_error_o | logic                                    | Output    | 1                           | Cluster double error detection output.                                                                                                                                                                                                      | CPU cluster → External systems            | N/A                           |
| smc_wdt_first_timeout_o    | logic                                    | Output    | 1                           | First watchdog timeout signal.                                                                                                                                                                                                              | CPU cluster WDT → Reset Unit              | N/A                           |
| smc_wdt_second_timeout_o   | logic                                    | Output    | 1                           | Second watchdog timeout signal.                                                                                                                                                                                                             | Reset Unit → External systems             | N/A                           |
| smc_region_size_o          | logic                                    | Output    | [31:0]                      | SMC address region size output.                                                                                                                                                                                                             | SMC Internal Registers → External systems | N/A                           |
| smc_ext_interrupts_i       | logic                                    | Input     | [NumExtInterrupts-1:0]      | External interrupt inputs. Width is 256. Active-high level or a pulse long enough to be sampled on <code>clk_smc</code> . Synchronized to <code>clk_smc</code> (3-stage) in <code>smc_base</code> ; a short asynchronous pulse can be lost. | External sources → Interrupt aggregator   | N/A, tie to '0 if unused      |
| sep_mailbox_interrupts_i   | logic                                    | Input     | [7:0]                       | SEP → SMC mailbox interrupt inputs (8 channels). Routed to internal interrupts to the SMC CPU.                                                                                                                                              | SEP → Interrupt aggregator                | N/A, tie to '0 if unused      |
| sep_wdt_reset_n_i          | logic                                    | Input     | 1                           | SEP watchdog reset (active low). Active-low polarity is inverted before routing to internal interrupts to the SMC CPU.                                                                                                                      | SEP → Interrupt aggregator                | N/A                           |
| smc_fuse_sense_done_o      | logic                                    | Output    | 1                           | Fuse sense completion output.                                                                                                                                                                                                               | eFuse controller → Memory repair logic    | N/A                           |
| smc_fuse_reset_n_delayed_o | logic                                    | Output    | 1                           | Delayed fuse reset output (after 16 pipeline stages).                                                                                                                                                                                       | eFuse controller → External systems       | N/A                           |

| Interface Name               | Type                             | Direction | Width                         | Description                                                                                                                                                                                                                                   | Connection                                        | Default value (if applicable)                       |
|------------------------------|----------------------------------|-----------|-------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------|-----------------------------------------------------|
| skip_mem_repair_o            | logic                            | Output    | 1                             | Skip memory repair output.                                                                                                                                                                                                                    | Reset Unit → Memory repair logic                  | N/A                                                 |
| ext_boot_seq_done_i          | logic                            | Input     | 1                             | Asynchronous external boot sequence completion (memory repair and shadow register override done). Qualified in <code>smc_peripherals</code> and routed to the SMC and SEP eFuse controllers.                                                  | External boot/repair controller → SMC peripherals | N/A                                                 |
| lc_state_i                   | logic                            | Input     | [2*LcStateWidth-1:0] (8 bits) | Lifecycle state input, differentially encoded.                                                                                                                                                                                                | Lifecycle controller → SMC Internal Registers     | From SEP; tie to 8'hf0 if unused (encoded TEST_DEV) |
| smc_ext_mailbox_interrupts_o | logic                            | Output    | [NumMailboxes-1:0]            | External mailbox interrupt outputs (32 interrupts, mapped to IDs 156-187).                                                                                                                                                                    | Mailbox controller → External targets             | N/A                                                 |
| cfg_flr_pf_active_i          | logic                            | Input     | 1                             | Function Level Reset (FLR) PF active signal.                                                                                                                                                                                                  | PCIe/System → Reset Unit                          | N/A, tie to '0 if unused                            |
| smc_ndmreset_request_i       | logic                            | Input     | [CpuClusterCount-1:0]         | NDM reset request from external CPU cluster <code>i</code> on bit <code>i</code> . Synchronized onto <code>clk_smc</code> .                                                                                                                   | External CPU clusters → SMC                       | Tie to '0 if unused                                 |
| smc_ndmreset_process_o       | logic                            | Output    | [CpuClusterCount-1:0]         | Firmware response to external CPU cluster <code>i</code> on bit <code>i</code> .                                                                                                                                                              | SMC → external CPU clusters                       | N/A                                                 |
| isolate_req_o                | logic                            | Output    | [31:0]                        | Isolation request output for 32 subsystems.                                                                                                                                                                                                   | Reset Unit → 32 subsystems                        | N/A                                                 |
| ss_reset_complete_i          | logic                            | Input     | [31:0]                        | Subsystem reset completion status.                                                                                                                                                                                                            | 32 subsystems → Reset Unit                        | 32'hFFFFFFFF                                        |
| ss_config_o                  | logic                            | Output    | [31:0]                        | Subsystem configuration output.                                                                                                                                                                                                               | Reset Unit → 32 subsystems                        | N/A                                                 |
| ss_reset_ctrl_o              | smc_reset_unit_pkg::reset_ctrl_t | Output    | [31:0]                        | Subsystem reset control output array.                                                                                                                                                                                                         | Reset Unit → 32 subsystems                        | N/A                                                 |
| sync_irq_o                   | logic                            | Output    | 1                             | Software-controlled global synchronisation bit ( <code>SYNC_REG.sync</code> in the reset unit). Not an interrupt aggregate output.                                                                                                            | Reset unit → External                             | N/A                                                 |
| gpio_interrupt_o             | logic                            | Output    | [NumGpioWraps-1:0]            | Raw GPIO interrupt vector from the padding, one bit per GPIO wrap (bonded + unbonded). Software reads GPIO status registers to identify the interrupt source. Already OR-reduced into <code>peripheral_interrupts_o[30:29]</code> internally. | <code>smc_padding</code> → external consumers     | N/A, leave floating if unused                       |
| uart_interrupt_o             | logic                            | Output    | [NumUart-1:0]                 | Raw UART interrupt outputs, one bit per UART instance, in the peripheral clock domain. Already aggregated into <code>peripheral_interrupts_o[21:18]</code> internally via CDC.                                                                | <code>uart_wrap</code> → external consumers       | N/A, leave floating if unused                       |
| smc_rom_intf_req_o           | rom_req_t                        | Output    | -                             | ROM memory interface request. Width depends on CPU cluster configuration                                                                                                                                                                      | CPU cluster → Boot ROM                            | N/A                                                 |
| smc_rom_intf_rsp_i           | rom_rsp_t                        | Input     | -                             | ROM memory interface response. Width depends on CPU cluster configuration                                                                                                                                                                     | Boot ROM → CPU cluster                            | N/A                                                 |
| smc_scratch_ram_intf_req_o   | scratch_ram_req_t                | Output    | [NUM_SRAM_BANKS2-1:0]         | Scratch RAM interface requests. Width depends on CPU cluster configuration                                                                                                                                                                    | CPU cluster → Scratch RAM banks                   | N/A                                                 |
| smc_scratch_ram_intf_rsp_i   | scratch_ram_rsp_t                | Input     | [NUM_SRAM_BANKS2-1:0]         | Scratch RAM interface responses. Width depends on CPU cluster configuration                                                                                                                                                                   | Scratch RAM banks → CPU cluster                   | N/A                                                 |
| smc_l1_icache_tag_intf_req_o | l1_icache_tag_req_t              | Output    | [NumIcacheTagBanks-1:0]       | L1 I-cache tag interface requests. Width depends on CPU cluster configuration                                                                                                                                                                 | CPU cluster → L1 I-cache tag banks                | N/A                                                 |
| smc_l1_icache_tag_intf_rsp_i | l1_icache_tag_rsp_t              | Input     | [NumIcacheTagBanks-1:0]       | L1 I-cache tag interface responses. Width depends on CPU cluster configuration                                                                                                                                                                | L1 I-cache tag banks → CPU cluster                | N/A                                                 |

| Interface Name                       | Type                               | Direction | Width                    | Description                                                                                                                                                             | Connection                                                    | Default value (if applicable) |
|--------------------------------------|------------------------------------|-----------|--------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------|-------------------------------|
| smc_l1_icache_data_intf_req_o        | l1_icache_data_req_t               | Output    | [NumIcacheDataBanks-1:0] | L1 I-cache data interface requests. Width depends on CPU cluster configuration                                                                                          | CPU cluster → L1 I-cache data banks                           | N/A                           |
| smc_l1_icache_data_intf_rsp_i        | l1_icache_data_rsp_t               | Input     | [NumIcacheDataBanks-1:0] | L1 I-cache data interface responses. Width depends on CPU cluster configuration                                                                                         | L1 I-cache data banks → CPU cluster                           | N/A                           |
| smc_l1_dcache_tag_intf_req_o         | l1_dcache_tag_req_t                | Output    | [NumDcacheTagBanks-1:0]  | L1 D-cache tag interface requests. Width depends on CPU cluster configuration                                                                                           | CPU cluster → L1 D-cache tag banks                            | N/A                           |
| smc_l1_dcache_tag_intf_rsp_i         | l1_dcache_tag_rsp_t                | Input     | [NumDcacheTagBanks-1:0]  | L1 D-cache tag interface responses. Width depends on CPU cluster configuration                                                                                          | L1 D-cache tag banks → CPU cluster                            | N/A                           |
| smc_l1_dcache_data_intf_req_o        | l1_dcache_data_req_t               | Output    | [NumDcacheDataBanks-1:0] | L1 D-cache data interface requests. Width depends on CPU cluster configuration                                                                                          | CPU cluster → L1 D-cache data banks                           | N/A                           |
| smc_l1_dcache_data_intf_rsp_i        | l1_dcache_data_rsp_t               | Input     | [NumDcacheDataBanks-1:0] | L1 D-cache data interface responses. Width depends on CPU cluster configuration                                                                                         | L1 D-cache data banks → CPU cluster                           | N/A                           |
| smc_disable_sram_auto_init_i         | logic                              | Input     | 1                        | Disable SRAM automatic initialization.                                                                                                                                  | Control logic → CPU cluster                                   | 1'b0                          |
| smc_init_mem_done_o                  | logic                              | Output    | 1                        | Memory initialization completion signal.                                                                                                                                | CPU cluster → Control logic                                   | N/A                           |
| chiplet_is_primary_i                 | logic                              | Input     | 1                        | Chiplet is primary signal. Used for System Timer OCTS                                                                                                                   | GPIO Pading Straps (strap 25) → SMC                           | N/A                           |
| timer_count_o                        | logic                              | Output    | [63:0]                   | 64-bit system timer count output for Open Chiplet Time Synchronization (OCTS).                                                                                          | System Timer OCTS → External systems                          | N/A                           |
| jtag_reset_ctrl_i                    | smc_pkg::jtag_smc_reset_ctrl_t     | Input     | -                        | Typed reset-override control struct carrying all SMC reset override enables and active-low values. Driven by DTP via JTAG IC_RESET. Tie all enables to 0 when not used. | DTP → SMC reset unit                                          | All enables 0                 |
| cla_gpio_enable_o                    | logic                              | Output    | 1                        | CLA GPIO enable output.                                                                                                                                                 | DFD controller → CLA                                          | N/A                           |
| tdr_dbg_ctrl_clock_stop_en_i         | logic                              | Input     | 1                        | DEBUG_CONTROL CLA clock-stop enable.                                                                                                                                    | DTP → DFD                                                     | 1'b0                          |
| tdr_dbg_ctrl_clocks_stopped_by_cla_o | logic                              | Output    | 1                        | CLA halt-clock status under enable; also drives <code>cpu_interrupts_o[NumExtInterrupts+64]</code> (internal interrupt 0), bit 320.                                     | DFD → DTP / interrupt                                         | N/A                           |
| xtrigger_ss_i                        | smc_pkg::xtrigger_t                | Input     | -                        | Cross-trigger subsystem input. SMU drives from <code>dtp_xtrig_ctm_src_req[1:0]</code> . Internal SMU connection; not an SMU external port.                             | SMU internal: DTP <code>xtrig_ctm_src_req_o[1:0]</code> → SMC | N/A                           |
| xtrigger_ss_o                        | smc_pkg::xtrigger_t                | Output    | -                        | Cross-trigger subsystem output. SMU routes to <code>dtp_xtrig_ctm_dst_req[1:0]</code> . Internal SMU connection; not an SMU external port.                              | SMU internal: SMC → DTP <code>xtrig_ctm_dst_req_i[1:0]</code> | N/A                           |
| trace_mem_req_o                      | dfd_trace_mem_pkg::SinkMemPktIn_s  | Output    | [TRC_RAM_INSTANCES-1:0]  | Trace memory interface requests.                                                                                                                                        | DFD controller → Trace memory                                 | N/A, leave floating if unused |
| trace_mem_resp_i                     | dfd_trace_mem_pkg::SinkMemPktOut_s | Input     | [TRC_RAM_INSTANCES-1:0]  | Trace memory interface responses.                                                                                                                                       | Trace memory → DFD controller                                 | N/A, tie to '0 if unused      |
| ext_debug_bus_i                      | logic                              | Input     | [511:0]                  | External debug bus input (512 bits, 16-bit aligned).                                                                                                                    | External debug sources → Debug bus aggregator                 | N/A, tie to '0 if unused      |
| test_en_i                            | logic                              | Input     | 1                        | DFT/scan test-enable. Drives clock-gater test ports and AXI cell test inputs.                                                                                           | Test controller → All modules                                 | 1'b0                          |
| scan_rst_ni                          | logic                              | Input     | 1                        | Scan reset (active-low). Bypasses reset synchronizers during DFT.                                                                                                       | Test controller → All modules                                 | 1'b1                          |

## 7.13. GPIO Pin Requirements

The SMC provides GPIO functionality with multiplexed peripheral functions and test interfaces. The following table lists each pad's index, assigned function, recommended pull, and GPIO-specific notes. It does not define default direction or decode configuration straps; use `smc_padrng_pkg::DefaultDirectionMap` and the `STRAPS_LO` and `STRAPS_HI` register descriptions (see [Supplementary Region](#)) for those.

*Table 8. OCAH GPIO Requirements*

| Index | Function    | Recommended Pull | GPIO Notes |
|-------|-------------|------------------|------------|
| 0     | SPI.DATA[0] | PD               |            |
| 1     | SPI.DATA[1] | PD               |            |
| 2     | SPI.DATA[2] | PD               |            |
| 3     | SPI.DATA[3] | PD               |            |
| 4     | SPI.DATA[4] | PD               |            |
| 5     | SPI.DATA[5] | PD               |            |
| 6     | SPI.DATA[6] | PD               |            |
| 7     | SPI.DATA[7] | PD               |            |
| 8     | SPI.CS      | PU               |            |
| 9     | SPI.CLK     | PD               |            |
| 10    | SPI.DQS     | PD               |            |
| 11    | UART[0].RX  | PU               |            |
| 12    | UART[0].TX  | PU               |            |
| 13    | UART[0].RTS | PD               |            |
| 14    | UART[0].CTS | PD               |            |
| 15    | UART[1].RX  | PU               |            |
| 16    | UART[1].TX  | PU               |            |
| 17    | UART[1].RTS | PD               |            |
| 18    | UART[1].CTS | PD               |            |
| 19    | UART[2].RX  | PU               |            |
| 20    | UART[2].TX  | PU               |            |
| 21    | UART[2].RTS | PD               |            |
| 22    | UART[2].CTS | PD               |            |
| 23    | UART[3].RX  | PU               |            |
| 24    | UART[3].TX  | PU               |            |
| 25    | UART[3].RTS | PD               |            |
| 26    | UART[3].CTS | PD               |            |
| 27    | I3C[0] SCL  | PU               |            |
| 28    | I3C[0] SDA  | PU               |            |
| 29    | I3C[2] SCL  | PU               |            |
| 30    | I3C[2] SDA  | PU               |            |
| 31    | I3C[3] SCL  | PU               |            |
| 32    | I3C[3] SDA  | PU               |            |

| Index | Function                  | Recommended Pull | GPIO Notes                                                                                                                                                                                                                                       |
|-------|---------------------------|------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 33    | I3C[4] SCL                | PU               |                                                                                                                                                                                                                                                  |
| 34    | I3C[4] SDA                | PU               |                                                                                                                                                                                                                                                  |
| 35    | I3C[5] SCL                | PU               |                                                                                                                                                                                                                                                  |
| 36    | I3C[5] SDA                | PU               |                                                                                                                                                                                                                                                  |
| 37    | I2C[0] SCL                | PU               | Every I2C can be programmed to act as I2C, SMBus or PMBus                                                                                                                                                                                        |
| 38    | I2C[0] SDA                | PU               |                                                                                                                                                                                                                                                  |
| 39    | I2C[0] SMB_A              | PU               | SMBus Alert                                                                                                                                                                                                                                      |
| 40    | I2C[0] SMB_D              | PU               | SMBus Suspend                                                                                                                                                                                                                                    |
| 41    | I2C[1] SCL                | PU               |                                                                                                                                                                                                                                                  |
| 42    | I2C[1] SDA                | PU               |                                                                                                                                                                                                                                                  |
| 43    | I2C[1] SMB_A              | PU               | SMBus Alert                                                                                                                                                                                                                                      |
| 44    | I2C[1] SMB_D              | PU               | SMBus Suspend                                                                                                                                                                                                                                    |
| 45    | I2C[2] SCL                | PU               |                                                                                                                                                                                                                                                  |
| 46    | I2C[2] SDA                | PU               |                                                                                                                                                                                                                                                  |
| 47    | I2C[2] SMB_A              | PU               | SMBus Alert                                                                                                                                                                                                                                      |
| 48    | I2C[2] SMB_D              | PU               | SMBus Suspend                                                                                                                                                                                                                                    |
| 49    | AVS.CLOCK                 | PU               |                                                                                                                                                                                                                                                  |
| 50    | AVS.MDATA                 | PU               |                                                                                                                                                                                                                                                  |
| 51    | AVS.SDATA                 | PU               |                                                                                                                                                                                                                                                  |
| 52    | Thermal Emergency N       | PU               |                                                                                                                                                                                                                                                  |
| 53    | Isolate Request           | PD               |                                                                                                                                                                                                                                                  |
| 54    | SPI DQS Loopback          | PD               |                                                                                                                                                                                                                                                  |
| 55    | System Timer Sync Load    | PD               |                                                                                                                                                                                                                                                  |
| 56    | System Timer Credit Count | PD               |                                                                                                                                                                                                                                                  |
| 57    | Boot Stall                | PD               | Stall after fuse sensing to override shadow register values. Boot will resume when this GPIO is released. This value can be overridden by the value specified over JTAG using the boot_stall_jtag_ovrd and boot_stall_jtag_val signals from DTP. |
| 58    | OCCP Interface            | PD               |                                                                                                                                                                                                                                                  |
| 59    | Reserved                  | PD               |                                                                                                                                                                                                                                                  |
| 60    | Reserved                  | PD               |                                                                                                                                                                                                                                                  |
| 61    | Cool Reset In             | PU               | Not packaged out                                                                                                                                                                                                                                 |
| 62    | Cool Reset Out            | PU               | Not packaged out                                                                                                                                                                                                                                 |
| 63    | I3C[1] SCL                | PU               | Not packaged out                                                                                                                                                                                                                                 |
| 64    | I3C[1] SDA                | PU               | Not packaged out                                                                                                                                                                                                                                 |
| 65    | PTAP TCK                  |                  | No dedicated interface in harness                                                                                                                                                                                                                |
| 66    | PTAP TRST                 |                  | No dedicated interface in harness                                                                                                                                                                                                                |
| 67    | PTAP TDI                  |                  | No dedicated interface in harness                                                                                                                                                                                                                |
| 68    | PTAP TMS                  |                  | No dedicated interface in harness                                                                                                                                                                                                                |
| 69    | PTAP TDO                  |                  | No dedicated interface in harness                                                                                                                                                                                                                |
| 70    | STAP TCK                  |                  | No dedicated interface in harness                                                                                                                                                                                                                |

| Index | Function          | Recommended Pull | GPIO Notes                        |
|-------|-------------------|------------------|-----------------------------------|
| 71    | STAP TRST         |                  | No dedicated interface in harness |
| 72    | STAP TDI          |                  | No dedicated interface in harness |
| 73    | STAP TMS          |                  | No dedicated interface in harness |
| 74    | STAP TDO          |                  | No dedicated interface in harness |
| 75    | BP_REFCLK_VDD_SYS |                  | No dedicated interface in harness |
| 76    | BP_RESETN         |                  | No dedicated interface in harness |
| 77    | BP_POWERGOOD      |                  | No dedicated interface in harness |

For multi-chiplet systems, the **PRIMARY\_CHIPLET** strap (**STRAPS\_LO[25]**) determines whether the chiplet operates as primary or secondary. The primary chiplet's System Timer OCTS (Open Chiplet Time Synchronization) generates synchronization pulses (**timer\_sync\_load\_o**, **timer\_cnt\_credit\_o**) that secondary chiplets receive to maintain coherent timestamps across the system.

# Chapter 8. Debug & Test Ports (DTP)

## Integration

### 8.1. Configuration

The SMU `smu_cfg_t` fields `XTRIG_NUM_CTP`, `XTRIG_NUM_INT_CT`, and `XTRIG_NUM_CLK_STOP_REQ` size the SMU-exposed cross-trigger ports and are passed through to the DTP (with the SMC-reserved lanes added to the internal-CT and clock-stop counts). The generated Cross Trigger Matrix register map must have one `CT_Src` and one `CT_Dst` for every DTP port (`XTRIG_NUM_CTP + XTRIG_NUM_INT_CT` at the DTP, which is the SMU-exposed internal-CT count plus `smu_pkg::XtrigSmcIntCtLanes`). Resizing is two steps: set the `CFG` counts, and regenerate the CTM with matching PeakRDL overrides:

```
make ocah-regen-regs TARGET=cross_trigger_matrix \  
    OCAH_REG_RDL_PARAMS_cross_trigger_matrix="NUM_CT_SRC=<n> NUM_CT_DST=<n>"
```

`<n>` is the DTP total (`CFG.XTRIG_NUM_CTP + CFG.XTRIG_NUM_INT_CT` `smu_pkg::XtrigSmcIntCtLanes`). `cross_trigger_network` fails elaboration if the parameterized total disagrees with the generated map. Defaults remain 16 external CTPs, 10 internal CTs (8 exposed), and 9 clock-stop requests (8 exposed). `XTRIG_INT_CT_MODE` and every `JTAG_*` enable are set at the instantiation as shown below.

Include the DTP in your build using Bender target `dtp`, which pulls in the DTP RTL together with the JTAG and cross-trigger IPs it instantiates. The legacy filelist `hw/sys/dtp/rtl/config/dtp.f` covers only the JTAG portion of the hierarchy and is not a complete DTP recipe.

### 8.2. Instantiation

```
dtp #(
    // JTAG Configuration
    .JTAG_BSR_ENABLE      (1'b1),
    .JTAG_TMP_ENABLE      (1'b1),
    .JTAG_SMC_DBG_ENABLE  (1'b1),
    .JTAG_SEP_DBG_ENABLE  (1'b1),
    .JTAG_IDCODE_MFR_ID   (11'h15A),
    .JTAG_IDCODE_PART_NUM (16'h1234),
    .JTAG_IDCODE_SI_REV   (4'h1),
    // Cross Trigger Configuration
    .XTRIG_NUM_CTP        (16),
    .XTRIG_NUM_INT_CT      (10),
    .XTRIG_NUM_CLK_STOP_REQ (9),
    .XTRIG_INT_CT_MODE     (10'b0000000000)
) u_dtp (
    .clk_i      (clk),
    .rst_n_i    (rst_n),
    .pwr_on_rst_ni (pwr_on_rst_n),
```

```
// JTAG, Boundary Scan, Cross Trigger interfaces...
);
```

## 8.3. Clock and Reset

- **TCK Domain:** JTAG logic operates on external Test Clock
- **System Clock** (`clk_i`): Cross trigger logic and JTAG2AXI bridges
- **System Reset** (`rst_n_i`): Resets cross trigger and AXI; does not affect TAP controller
- **Power-On Reset** (`pwr_on_rst_ni`): Asynchronous reset for JTAG state machine

## 8.4. Constraints

- JTAG interface: 10-50 MHz TCK frequency
- Cross trigger signals synchronized to system clock
- DTP remains active during clock stop for debug access
- External CTP signals require pad ring integration with ESD protection

## 8.5. STAP Scan Chain Topology

The DTP secondary scan path chains multiple STAPs on a single PTAP-managed scan string. The fixed order on this string is: PTAP, I/O STAP (if `JTAG_STAP_IO_ENABLE=1`), SMC debug STAP (if `JTAG_SMC_DBG_ENABLE=1`), SEP debug STAP (if `CFG.SEP=1` in the SMU), extra STAP[N-1:0], and return to PTAP.

The string carries scans only while the PTAP 3DCR select bit is set. While the bit is clear, the scan-control strobes to every STAP stay low, so the STAP SIBs and 3DCRs hold their state through every PTAP scan, as does the downstream TAP of every deselected STAP. A STAP whose own select bit is set still forwards TCK and the live TMS, so its downstream TAP follows every PTAP scan; clear each STAP's select bit, or reset the chain, before clearing the PTAP select bit. The select bit updates at Update-DR, so it is set in a TAP\_3DCR scan of its own before a scan that opens STAP SIBs or writes STAP 3DCRs.

Both the SMC and SEP debug STAP host interfaces are internal to the SMU and are not exported on the SMU boundary. The SMU wires the SMC debug STAP host outputs to the SMC CPU/system JTAG ports (`smc_cpu_jtag_*`) when `JTAG_SMC_DBG_ENABLE=1`; when disabled, the DTP bypasses this STAP in the secondary scan chain and drives the internal host outputs low. The SEP debug STAP connects to the SEP JTAG debug port when `CFG.SEP=1`; when `CFG.SEP=0`, the SMU ties `sep_stap_tdo_to_dtp = 1'b0` to bypass the SEP STAP return path.

Each STAP host interface is gated by a field of `dbg_disable_i`, synchronized to TCK inside the DTP. Each field is active-high (1 = path disabled).

| STAP                      | Disable Field                         |
|---------------------------|---------------------------------------|
| I/O STAP                  | <code>dbg_disable_i.stap_io</code>    |
| SMC debug STAP            | <code>dbg_disable_i.stap_smc</code>   |
| SEP debug STAP            | <code>dbg_disable_i.stap_sep</code>   |
| Extra STAPs               | <code>dbg_disable_i.stap_extra</code> |
| External STAP return path | <code>dbg_disable_i.stap_host</code>  |

The full set of debug-disable-gated paths, including the iJTAG chains and the JTAG2AXI bridges, is tabulated in the DTP JTAG integration section of the TRM.

## 8.6. DTP Port Interface

The DTP exposes interfaces for JTAG TAP control, boundary scan, multiple STAP host ports, iJTAG scan chains, AXI debug bridges, cross trigger networks, and CTP GPIO pads. The following table defines all DTP top-level ports. Refer to the dedicated DTP documentation in [hw/sys/dtp/doc/](#) for internal design details.

*Legend: Where no Default entry is shown in Description / Default, the original port reference specifies N/A — those ports have no integrator-supplied default; connect as directed by Description.*

[DTP Port Declaration](#) lists the DTP boundary ports, their dimensions, and their connections.

Table 9. DTP Port Declaration

| Interface Name                            | Type                                               | Dir | Width | Description / Default                                                                                                                                                                                                                                                      | Connection                                                   |
|-------------------------------------------|----------------------------------------------------|-----|-------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------|
| <code>clk_i</code>                        | <code>logic</code>                                 | In  | 1     | System clock for cross trigger logic and JTAG2AXI bridges.                                                                                                                                                                                                                 | System clock                                                 |
| <code>rst_n_i</code>                      | <code>logic</code>                                 | In  | 1     | System reset (active low). Resets cross trigger and AXI logic; does not affect the TAP controller.                                                                                                                                                                         | System reset                                                 |
| <code>pwr_on_rst_ni</code>                | <code>logic</code>                                 | In  | 1     | Power-on reset for JTAG state machine (active low, asynchronous).                                                                                                                                                                                                          | Power-on reset                                               |
| <code>dbg_disable_i</code>                | <code>sep_lifecycle_ctrl_pkg::dbg_disable_t</code> | In  | -     | Per-path lifecycle controls for disabling debug and test interfaces. Active-high (1 = path disabled). DTP synchronizes each field into the JTAG TCK domain.                                                                                                                | SEP lifecycle controller or adopter-equivalent policy source |
| <code>jtag_ptap_client_tap_ctrl_i</code>  | <code>jtag_tap_ctrl_t</code>                       | In  | -     | Primary JTAG TAP control (TCK, TMS, TRST_N).                                                                                                                                                                                                                               | External JTAG pads                                           |
| <code>jtag_ptap_client_tdi_i</code>       | <code>logic</code>                                 | In  | 1     | Primary JTAG TDI.                                                                                                                                                                                                                                                          | External JTAG pads                                           |
| <code>jtag_ptap_client_tdo_o</code>       | <code>logic</code>                                 | Out | 1     | Primary JTAG TDO.                                                                                                                                                                                                                                                          | External JTAG pads                                           |
| <code>jtag_ptap_client_tdo_oen_o</code>   | <code>logic</code>                                 | Out | 1     | Primary JTAG TDO output enable.                                                                                                                                                                                                                                            | External JTAG pads                                           |
| <code>jtag_bsr_host_scan_ctrl_o</code>    | <code>jtag_scan_ctrl_t</code>                      | Out | -     | Boundary scan control. Tie scan_in to scan_out if BSR is disabled.                                                                                                                                                                                                         | Boundary scan chain                                          |
| <code>jtag_bsr_host_scan_in_i</code>      | <code>logic</code>                                 | In  | 1     | Boundary scan data in.                                                                                                                                                                                                                                                     | Boundary scan chain                                          |
| <code>jtag_bsr_host_scan_out_o</code>     | <code>logic</code>                                 | Out | 1     | Boundary scan data out.                                                                                                                                                                                                                                                    | Boundary scan chain                                          |
| <code>jtag_stap_io_host_tap_ctrl_o</code> | <code>jtag_tap_ctrl_t</code>                       | Out | -     | I/O STAP TAP control for chiplet-to-chiplet connectivity. If <code>JTAG_STAP_IO_ENABLE=0</code> , only <code>.tck</code> is driven; <code>.tms</code> is 0 and <code>.trst_n</code> is 0, so TRST is asserted and a TAP connected to the port is held in Test-Logic-Reset. | I/O STAP host                                                |
| <code>jtag_stap_io_host_tdi_i</code>      | <code>logic</code>                                 | In  | 1     | I/O STAP TDI. Default: Tie to '0 if unused.                                                                                                                                                                                                                                | I/O STAP host                                                |
| <code>jtag_stap_io_host_tdo_o</code>      | <code>logic</code>                                 | Out | 1     | I/O STAP TDO.                                                                                                                                                                                                                                                              | I/O STAP host                                                |
| <code>jtag_stap_io_host_tdo_oen_o</code>  | <code>logic</code>                                 | Out | 1     | I/O STAP TDO output enable.                                                                                                                                                                                                                                                | I/O STAP host                                                |

| Interface Name                   | Type             | Dir | Width                       | Description / Default                                                                                                                                                                                                                                                     | Connection                 |
|----------------------------------|------------------|-----|-----------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------|
| jtag_stap_smc_host_tap_ctrl_o    | jtag_tap_ctrl_t  | Out | -                           | SMC debug STAP TAP control. If <code>JTAG_SMC_DBG_ENABLE=0</code> , only <code>.tck</code> is driven; <code>.tms</code> is 0 and <code>.trst_n</code> is 0, so TRST is asserted and a TAP connected to the port is held in Test-Logic-Reset.                              | SMC JTAG port              |
| jtag_stap_smc_host_tdi_i         | logic            | In  | 1                           | SMC debug STAP TDI (from SMC TDO). Default: Tie to '0 if unused.                                                                                                                                                                                                          | SMC JTAG port              |
| jtag_stap_smc_host_tdo_o         | logic            | Out | 1                           | SMC debug STAP TDO (to SMC TDI).                                                                                                                                                                                                                                          | SMC JTAG port              |
| jtag_stap_smc_host_tdo_oen_o     | logic            | Out | 1                           | SMC debug STAP TDO output enable.                                                                                                                                                                                                                                         | SMC JTAG port              |
| jtag_stap_sep_host_tap_ctrl_o    | jtag_tap_ctrl_t  | Out | -                           | SEP debug STAP TAP control. If <code>JTAG_SEP_DBG_ENABLE=0</code> , only <code>.tck</code> is driven; <code>.tms</code> is 0 and <code>.trst_n</code> is 0, so TRST is asserted and a TAP connected to the port is held in Test-Logic-Reset.                              | SEP JTAG port              |
| jtag_stap_sep_host_tdi_i         | logic            | In  | 1                           | SEP debug STAP TDI (from SEP TDO). Default: Tie to '0 if unused.                                                                                                                                                                                                          | SEP JTAG port              |
| jtag_stap_sep_host_tdo_o         | logic            | Out | 1                           | SEP debug STAP TDO (to SEP TDI).                                                                                                                                                                                                                                          | SEP JTAG port              |
| jtag_stap_sep_host_tdo_oen_o     | logic            | Out | 1                           | SEP debug STAP TDO output enable.                                                                                                                                                                                                                                         | SEP JTAG port              |
| jtag_stap_extra_host_tap_ctrl_o  | jtag_tap_ctrl_t  | Out | [JtagNumExtraStapPorts-1:0] | Extra STAP TAP control array. If <code>JTAG_NUM_EXTRA_STAPS=0</code> , the single padded element drives only <code>.tck</code> ; its <code>.tms</code> is 0 and its <code>.trst_n</code> is 0, so TRST is asserted and a TAP connected to it is held in Test-Logic-Reset. | Extra STAP hosts           |
| jtag_stap_extra_host_tdi_i       | logic            | In  | [JtagNumExtraStapPorts-1:0] | Extra STAP TDI array. Default: Tie to '0 if unused.                                                                                                                                                                                                                       | Extra STAP hosts           |
| jtag_stap_extra_host_tdo_o       | logic            | Out | [JtagNumExtraStapPorts-1:0] | Extra STAP TDO array.                                                                                                                                                                                                                                                     | Extra STAP hosts           |
| jtag_stap_extra_host_tdo_oen_o   | logic            | Out | [JtagNumExtraStapPorts-1:0] | Extra STAP TDO output enable array.                                                                                                                                                                                                                                       | Extra STAP hosts           |
| jtag_stap_host_scan_ctrl_o       | jtag_scan_ctrl_t | Out | -                           | Extended STAP scan control. Tie <code>scan_in</code> to <code>scan_out</code> if unused.                                                                                                                                                                                  | STAP scan chain            |
| jtag_stap_host_scan_in_i         | logic            | In  | 1                           | Extended STAP scan data in.                                                                                                                                                                                                                                               | STAP scan chain            |
| jtag_stap_host_scan_out_o        | logic            | Out | 1                           | Extended STAP scan data out.                                                                                                                                                                                                                                              | STAP scan chain            |
| jtag_dfd_host_scan_ctrl_o        | jtag_scan_ctrl_t | Out | -                           | DFD iJTAG scan control. Tie <code>scan_in</code> to <code>scan_out</code> if unused.                                                                                                                                                                                      | DFD iJTAG chain            |
| jtag_dfd_host_scan_in_i          | logic            | In  | 1                           | DFD iJTAG scan data in.                                                                                                                                                                                                                                                   | DFD iJTAG chain            |
| jtag_dfd_host_scan_out_o         | logic            | Out | 1                           | DFD iJTAG scan data out.                                                                                                                                                                                                                                                  | DFD iJTAG chain            |
| jtag_dft_secure_host_scan_ctrl_o | jtag_scan_ctrl_t | Out | -                           | Secure DFT iJTAG scan control. Tie <code>scan_in</code> to <code>scan_out</code> if unused.                                                                                                                                                                               | Secure DFT iJTAG chain     |
| jtag_dft_secure_host_scan_in_i   | logic            | In  | 1                           | Secure DFT iJTAG scan data in.                                                                                                                                                                                                                                            | Secure DFT iJTAG chain     |
| jtag_dft_secure_host_scan_out_o  | logic            | Out | 1                           | Secure DFT iJTAG scan data out.                                                                                                                                                                                                                                           | Secure DFT iJTAG chain     |
| jtag_dft_host_scan_ctrl_o        | jtag_scan_ctrl_t | Out | -                           | Non-secure DFT iJTAG scan control. Tie <code>scan_in</code> to <code>scan_out</code> if unused.                                                                                                                                                                           | Non-secure DFT iJTAG chain |
| jtag_dft_host_scan_in_i          | logic            | In  | 1                           | Non-secure DFT iJTAG scan data in.                                                                                                                                                                                                                                        | Non-secure DFT iJTAG chain |
| jtag_dft_host_scan_out_o         | logic            | Out | 1                           | Non-secure DFT iJTAG scan data out.                                                                                                                                                                                                                                       | Non-secure DFT iJTAG chain |

| Interface Name           | Type                       | Dir | Width                               | Description / Default                                                                                                                                                                                                                                             | Connection                                                   |
|--------------------------|----------------------------|-----|-------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------|
| axi_smc_dbg_req_o        | smc_jtag_axi_req_t         | Out | -                                   | SMC fabric debug AXI request. Active when <code>JTAG_SMC_DBG_ENABLE=1</code> . Default: tie to '0' if disabled.                                                                                                                                                   | SMC <code>jtag_axi_in_req_i</code>                           |
| axi_smc_dbg_resp_i       | smc_jtag_axi_resp_t        | In  | -                                   | SMC fabric debug AXI response. Default: tie to '0' if disabled.                                                                                                                                                                                                   | SMC <code>jtag_axi_in_resp_o</code>                          |
| axil_smc_otp_jtag_req_o  | smc_otp_axil_req_t         | Out | -                                   | SMC OTP debug AXI-Lite request. Default: tie to '0' if disabled.                                                                                                                                                                                                  | SMC <code>axil_smc_otp_jtag_req_i</code>                     |
| axil_smc_otp_jtag_resp_i | smc_otp_axil_resp_t        | In  | -                                   | SMC OTP debug AXI-Lite response. Default: tie to '0' if disabled.                                                                                                                                                                                                 | SMC <code>axil_smc_otp_jtag_resp_o</code>                    |
| axil_sep_otp_jtag_req_o  | sep_otp_axil_req_t         | Out | -                                   | SEP OTP debug AXI-Lite request. Default: tie to '0' if disabled.                                                                                                                                                                                                  | SEP <code>axil_sep_otp_jtag_req_i</code>                     |
| axil_sep_otp_jtag_resp_i | sep_otp_axil_resp_t        | In  | -                                   | SEP OTP debug AXI-Lite response. Default: tie to '0' if disabled.                                                                                                                                                                                                 | SEP <code>axil_sep_otp_jtag_resp_o</code>                    |
| stop_clks_o              | logic                      | Out | 1                                   | Clock stop output from JTAG <code>DEBUG_CONTROL</code> or CLA clock-stop requests via CTN.                                                                                                                                                                        | PLL clock gates                                              |
| cla_clock_stop_en_o      | logic                      | Out | 1                                   | CLA clock stop enable from <code>DEBUG_CONTROL</code> register.                                                                                                                                                                                                   | Clock control logic                                          |
| jtag_boot_stall_ovrd_o   | logic                      | Out | 1                                   | JTAG boot stall override enable.                                                                                                                                                                                                                                  | Boot control                                                 |
| jtag_boot_stall_o        | logic                      | Out | 1                                   | JTAG boot stall value when override is asserted.                                                                                                                                                                                                                  | Boot control                                                 |
| jtag_ic_reset_smc_o      | ic_reset_smc_t             | Out | <code>\$bits(ic_reset_smc_t)</code> | SMC IC_RESET override slice. Struct contains <code>.ovrd</code> (override enables) and <code>.val</code> (active-low override values), each sized to match the corresponding SMC reset control struct. Tied to '0' when <code>JTAG_IC_RESET_SMC_ENABLE=0</code> . | SMC <code>jtag_smc_reset_ctrl_i</code>                       |
| jtag_ic_reset_sep_o      | ic_reset_sep_t             | Out | <code>\$bits(ic_reset_sep_t)</code> | SEP IC_RESET override slice. Struct contains <code>.ovrd</code> (override enables) and <code>.val</code> (active-low override values), each sized to match the corresponding SEP reset control struct. Tied to '0' when <code>JTAG_IC_RESET_SEP_ENABLE=0</code> . | SEP <code>jtag_sep_reset_ctrl_i</code>                       |
| jtag_ic_reset_ext_o      | ic_reset_ext_t             | Out | <code>\$bits(ic_reset_ext_t)</code> | External IC_RESET override slice. Struct contains <code>.ovrd</code> (override enables) and <code>.val</code> (active-low override values), each sized per integrator-defined type. Tied to '0' when <code>JTAG_IC_RESET_EXT_ENABLE=0</code> .                    | Integrator-defined reset overrides for logic outside the SMU |
| jtag_ptap_state_o        | tap_state_e                | Out | -                                   | Current PTAP TAP state.                                                                                                                                                                                                                                           | Debug infrastructure                                         |
| jtag_ptap_inst_decoded_o | jtag_instruction_decoded_e | Out | -                                   | Current decoded PTAP instruction.                                                                                                                                                                                                                                 | Debug infrastructure                                         |
| axil_xtrig_req_i         | xtrig_axil_req_t           | In  | -                                   | Cross trigger CSR AXI-Lite request from SMC.                                                                                                                                                                                                                      | SMC <code>axil_dtp_csr_req_o</code>                          |
| axil_xtrig_resp_o        | xtrig_axil_resp_t          | Out | -                                   | Cross trigger CSR AXI-Lite response to SMC.                                                                                                                                                                                                                       | SMC <code>axil_dtp_csr_resp_i</code>                         |
| xtrig_ctm_src_req_o      | logic                      | Out | <code>[XTRIG_NUM_INT_CT-1:0]</code> | Cross trigger source requests from CTM to destination sinks.                                                                                                                                                                                                      | Cross trigger sinks                                          |
| xtrig_ctm_src_ack_i      | logic                      | In  | <code>[XTRIG_NUM_INT_CT-1:0]</code> | Cross trigger source acknowledges. Unused in pulse-sync mode (mode bit = 0). Default: tie to '0' in pulse-sync mode.                                                                                                                                              | Cross trigger sinks                                          |

| Interface Name              | Type  | Dir | Width                        | Description / Default                                                                                                          | Connection                  |
|-----------------------------|-------|-----|------------------------------|--------------------------------------------------------------------------------------------------------------------------------|-----------------------------|
| xtrig_ctm_dst_req_i         | logic | In  | [XTRIG_NUM_INT_CT-1:0]       | Cross trigger destination requests from source generators. Default: tie to '0 if unused.                                       | Cross trigger sources       |
| xtrig_ctm_dst_ack_o         | logic | Out | [XTRIG_NUM_INT_CT-1:0]       | Cross trigger destination acknowledges. Unused in pulse-sync mode (mode bit = 0).                                              | Cross trigger sources       |
| xtrig_clk_stop_req_i        | logic | In  | [XTRIG_NUM_CLK_STOP_REQ-1:0] | Clock stop requests from CLAs or other devices in the chiplet. Default: Tie to '0 if unused.                                   | Clock stop requesters       |
| xtrig_ctp_req_out_dout_o    | logic | Out | [XTRIG_NUM_CTP-1:0]          | CTP request-out data output (to pad ring).                                                                                     | GPIO pad ring               |
| xtrig_ctp_req_out_dout_en_o | logic | Out | [XTRIG_NUM_CTP-1:0]          | CTP request-out output enable.                                                                                                 | GPIO pad ring               |
| xtrig_ctp_req_out_din_i     | logic | In  | [XTRIG_NUM_CTP-1:0]          | CTP request-out loopback input. Default: tie to '0 if unused.                                                                  | GPIO pad ring               |
| xtrig_ctp_req_out_din_en_o  | logic | Out | [XTRIG_NUM_CTP-1:0]          | CTP request-out input enable.                                                                                                  | GPIO pad ring               |
| xtrig_ctp_req_in_dout_o     | logic | Out | [XTRIG_NUM_CTP-1:0]          | CTP request-in data output.                                                                                                    | GPIO pad ring               |
| xtrig_ctp_req_in_dout_en_o  | logic | Out | [XTRIG_NUM_CTP-1:0]          | CTP request-in output enable.                                                                                                  | GPIO pad ring               |
| xtrig_ctp_req_in_din_i      | logic | In  | [XTRIG_NUM_CTP-1:0]          | CTP request-in data input. Default: tie to '0 if unused.                                                                       | GPIO pad ring               |
| xtrig_ctp_req_in_din_en_o   | logic | Out | [XTRIG_NUM_CTP-1:0]          | CTP request-in input enable.                                                                                                   | GPIO pad ring               |
| xtrig_ctp_ack_in_dout_o     | logic | Out | [XTRIG_NUM_CTP-1:0]          | CTP ack-in data output.                                                                                                        | GPIO pad ring               |
| xtrig_ctp_ack_in_dout_en_o  | logic | Out | [XTRIG_NUM_CTP-1:0]          | CTP ack-in output enable.                                                                                                      | GPIO pad ring               |
| xtrig_ctp_ack_in_din_i      | logic | In  | [XTRIG_NUM_CTP-1:0]          | CTP ack-in data input. Default: tie to '0 if unused.                                                                           | GPIO pad ring               |
| xtrig_ctp_ack_in_din_en_o   | logic | Out | [XTRIG_NUM_CTP-1:0]          | CTP ack-in input enable.                                                                                                       | GPIO pad ring               |
| xtrig_ctp_ack_out_dout_o    | logic | Out | [XTRIG_NUM_CTP-1:0]          | CTP ack-out data output.                                                                                                       | GPIO pad ring               |
| xtrig_ctp_ack_out_dout_en_o | logic | Out | [XTRIG_NUM_CTP-1:0]          | CTP ack-out output enable.                                                                                                     | GPIO pad ring               |
| xtrig_ctp_ack_out_din_i     | logic | In  | [XTRIG_NUM_CTP-1:0]          | CTP ack-out data input. Default: tie to '0 if unused.                                                                          | GPIO pad ring               |
| xtrig_ctp_ack_out_din_en_o  | logic | Out | [XTRIG_NUM_CTP-1:0]          | CTP ack-out input enable.                                                                                                      | GPIO pad ring               |
| test_en_i                   | logic | In  | 1                            | DFT test-mode enable (active high) for the JTAG2AXI bridges and the cross trigger CSR crossbar. Default: 0 in functional mode. | DFT controller              |
| scan_rst_ni                 | logic | In  | 1                            | DFT scan reset (active low). Unused: DTP has no reset synchronizer, so <b>rst_n_i</b> must arrive scan-controlled.             | DFT controller, or tie high |

# Chapter 9. Security Processor (SEP) Integration

The Security Processor (SEP) is the Root of Trust for the chiplet, providing a physically isolated execution environment for security-critical services such as secure boot, lifecycle control, device attestation, cryptographic acceleration, and key management. This section provides practical integration procedures for adopters integrating the SEP as part of the SMU or as a standalone out-of-context IP.

For detailed architectural documentation about the SEP internal design, refer to the dedicated documentation located in the SEP reference manual. The SEP hardware overview and interconnect fabric are described in the *SEP Overview* and *Interconnect* sections.

## 9.1. Module Overview

The module in `sep.sv` provides the complete SEP functionality with logic-level interfaces. Technology-specific components — SRAM, ROM, and eFuse shims — are instantiated by the adopter outside SEP, following the same vendor-neutral philosophy used for the SMC.

Separately, SEP exposes interfaces for supplementary peripherals an adopter may add on rather than substitute: an external TRNG and an additional SPI controller. These are not technology-specific — SEP contains its own entropy source and SPI host — so the interfaces exist to supplement what SEP already provides, and may be left unused.

When integrated inside the SMU, the SEP's external interfaces are passed through the SMU boundary with a `sep_` prefix.

## 9.2. Clock and Reset Requirements

The SEP requires two clock inputs. Connect `clk_i` to the primary system clock driving all SEP internal logic. Connect `clk_wdt_i` to a 200 kHz clock source for the watchdog timer; this clock must be independent of the system clock so that the WDT can detect system clock failures.

The primary reset `rst_ni` follows the standard active-low, asynchronous assertion / synchronous deassertion convention. The `dbg_rstb_i` input provides a separate reset for the EL2 CPU debug module. The `wdt_rst_ni` input receives the watchdog reset generated by the SMC reset unit. The SEP outputs `wdt_timer_rst_req_o` when the WDT triggers a reset request.

## 9.3. AXI Interfaces

The SEP connects to the system through three AXI paths. The `smn_outbound_axi` master interface allows SEP firmware to access system resources outside the SEP domain, such as SMC registers or external memory. The `smn_inbound_axi` slave interface accepts requests from system masters requiring access to SEP-managed resources. System masters must access SEP register regions with single-beat transactions. The `sep_ext_to_smc_axi` output provides a dedicated AXI path for SEP-to-SMC transactions, connecting to the SMC's `sep_axi_in` port.

An additional AXI extension port (`axi_extension_axi`) enables adopters to attach custom peripherals to the SEP interconnect fabric without modifying the SEP core. When unused, tie the response input to return DECERR.

## 9.4. Memory Interfaces

All SEP memory macros are instantiated externally and connected through dedicated request/response interfaces. The `sep_cpu_tcm` interface provides tightly-coupled memory (ICCM and DCCM) for the VeeR EL2 CPU. The `sep_sram` interface connects scratch SRAM used for firmware data. The `sep_boot_rom` interface provides the BL0 ROM containing the first-stage bootloader.

The crypto subsystem requires additional memory interfaces. `sep_crypto_pka_imem_sram` and `sep_crypto_pka_dmem_sram` connect to the OTBN public key accelerator instruction and data memories respectively. `km_rom_mem` and `km_sram_mem` connect to the Key Manager's dedicated ROM and SRAM macros. The KM SRAM must assert `rvalid` at least one cycle after the cycle in which it grants a read; a registered-read macro meets this.

`abr_mem` connects the Adams Bridge working SRAM. On an idle cycle (`re` low), ABR expects the channel's read data to return 0 the following cycle. `SEP_ABR_SRAM_LATENCY` must equal the macros' native registered-read latency (default 1). Word-write channels are full-word `we` / `re` / address / data. `sig_z` and `pk` carry one-bit-per-byte `wstrobe`; map those to the macros' byte-write enables. `SEP_ABR_MASKING_EN` (default 1) selects 2-share DOM: thirteen 1R1W macros versus nine, plus a second NTT. This changes ABR internal behavior (sequencing, SCA, memory topology), not merely throughput. Give the same value to SEP and to the SRAM instances. When it is 0, do not instantiate the four masked coefficient banks; their response fields read as 0.

## 9.5. Cryptographic Subsystem Connections

The SEP includes an internal entropy source that requires a ring-oscillator sample clock connected to `entropy_rosc_sample_clk_i`. This clock must be asynchronous to `clk_i` and typically runs between 100 and 400 MHz.

### 9.5.1. External TRNG

For adopters providing an external TRNG, the `ext_trng_axil` AXI-Lite interface connects to the external TRNG's control registers, while the `ext_trng_axis` AXI-Stream interfaces carry entropy data. The `ext_trng_irq_i` input is routed to the PIC.

SEP decodes the 4 kB TRNG aperture (`0x1091_7000` - `0x1091_7FFF`) as a single window and forwards every access on `ext_trng_axil`. It does not decode offsets inside that window: the endpoint is an adopter-defined IP.

The adopter must perform the intra-aperture decode. An address that owns no register must return an error response and must not alias onto a live register. When no external TRNG is connected, terminate `ext_trng_axil` with a DECERR slave.

The TRNG path reaches `ext_trng_axil` through an AXI4-to-AXI-Lite conversion (64-to-32 downsizer and burst splitter). An errored read returns the slave's response verbatim. A single-beat write does too, so a DECERR slave answers both an errored read and an errored write with DECERR. A write the splitter breaks into more than one beat is reported as SLVERR when an earlier fragment erred and the last fragment is OKAY. An adopter whose endpoint returns DECERR for an unowned offset sees that code on a single-beat access.

## 9.6. eFuse and Lifecycle

SEP has its own eFuse bank. Instantiate a separate SHIM and physical eFuse bank; do not share the SMC's. The SHIM contract is the [eFuse Interface](#). On `sep.sv`, connect `efuse_bank_ctrl_*` and `efuse_shim_command_*`. Through the SMU those ports appear as `sep_efuse_bank_ctrl_*` and `sep_efuse_shim_command_*`. The SEP SHIM control CSRs sit at the base of `sep_external`; see the [SHIM control address window](#). SEP routes a burst on its first address, so a burst that begins in that

window carries its later beats to the SHIM. An address that owns no SHIM register must return SLVERR and must not alias onto a live register.

SEP senses this bank after its own reset. Watch `sep_fuse_sense_done_o`. On `sep.sv`, drive `smc_fuse_sense_done_i` from the SMC so firmware can see when the SMC fabric is out of reset; the SMU wires that input internally.

Lifecycle and test-mode ports on `sep.sv`, and what to do with them. Behaviour is in the Technical Reference Manual, not here.

- `secure_tm_req_i` signals a request to enter secure test mode. SEP latches it into `secure_tm_o` when fuse sensing completes, or at cold-reset release if SEC\_DIS is already asserted. Secure test mode forces a no-secret, no-fuse-program configuration; it is not an authorization bit. See *Test Mode Entry* and *`secure\_tm` and the Secure Scan Chain* in the TRM. `secure_tm_o` is also an SMU output.
- `security_disable_o` is the SEC\_DIS token-match result (emergency A0 unlock). On `sep.sv`, route it to SMC `sep_security_disable_i`; the SMU does that internally. See *Security Disable* in the TRM.
- `lc_state_o` is the differentially encoded LC\_STATE shadow. `lc_sigint_err_o` is the decode integrity error (fail-closed). Both are SMU outputs. See *Life Cycle Controller* in the TRM.
- `dbg_disable_o` is the typed per-path debug/test disable vector (active-high: 1 = path disabled). On `sep.sv`, route it to DTP `dbg_disable_i`; the SMU does that internally.
- `lcc_demote_state_1_o` / `lcc_demote_state_2_o` are differentially encoded in-field debug demotion. They leave the SMU for adopter lifecycle logic and are not connected to the SMC. See *in-field debug demotion* in the TRM.
- `sep_fuse_dft_disable_o` / `smc_fuse_dft_disable_o` gate DFT-inserted OTP access. Leave them open if no such path is inserted. They are SMU outputs.

OTP debug AXI-Lite (`axil_sep_otp_jtag`) is connected to the DTP inside the SMU; when `CFG.SEP=0` the SMU instantiates an AXI-Lite error slave on that path.

## 9.7. SPI Host Interface

The SEP provides a SPI host controller through the `sep_io_spi` interface, supporting standard, dual and quad modes. The controller's own interrupt leaves the module as the `irq` field of `sep_io_spi_req_o`, so no separate interrupt output is needed.

### 9.7.1. SEP SPI Host Pin Assignment

When the SMU is built with the SEP, the SMU drives the SMC SPI port (`spi*_i` of `smc.sv`) from `sep_io_spi_req_o` and returns the data-pad inputs to the SEP in `sep_io_spi_rsp_i.sd`. The SMC places these signals on GPIO 0-10 and 54. Inside `smc.sv`, no register selects another SPI source for these pads.

| GPIO | Function         | SEP SPI host source                                                                                                       |
|------|------------------|---------------------------------------------------------------------------------------------------------------------------|
| 0-3  | SPI.DATA[0-3]    | Lane n drives <code>sd[n]</code> with output enable <code>sd_oe[n]</code> ; the pad input returns as <code>sd[n]</code> . |
| 4-7  | SPI.DATA[4-7]    | Not driven. Output disabled, input disabled.                                                                              |
| 8    | SPI.CS           | <code>cs_n</code> , output enable <code>cs_oe</code> .                                                                    |
| 9    | SPI.CLK          | <code>sck</code> , output enable <code>sck_oe</code> .                                                                    |
| 10   | SPI.DQS          | Not driven. Output disabled, input disabled.                                                                              |
| 54   | SPI DQS Loopback | Not driven. Output disabled, input disabled.                                                                              |

In standard mode, SPI.DATA[0] is the host output (COPI) and SPI.DATA[1] is the host input (CIPO).

The SMC holds the SPI function select of these pads on whenever the SMU has the SEP. A pad follows the SEP SPI host once it is out of cold reset and while its GPIO `DATA_CTRL.lsio_disable` is clear; setting `lsio_disable` returns the pad to register control. A pad shim outside `smc.sv` can also hand a pad to a second function with its `CONTROL.hw2_ovrd`.

On SPI.CS, SPI.CLK and SPI.DATA[0-3], the pad input is enabled only while the host does not drive that pad. The host drives a data lane only while chip select is asserted, and drives no pad until software sets its `CONTROL.OUTPUT_EN`. Until then SPI.CS is undriven, so its level comes from the pad pull; the GPIO pin table recommends a pull-up.

## 9.8. Bring-Up Considerations

The SEP boot sequence begins after the SMC completes fuse sensing and releases the SEP reset. The SEP BL0 ROM FW verifies the BL1 software image using non-volatile public keys before transferring control. Feature controls derived from secure boot authentication and lifecycle state govern what operations are permitted after boot.

The `jtag_id_i` input must be tied to an appropriate constant in the top-level integration. A `rst_vec_i` port exists on `tb_top.sv` for DV reset vector injection; it is not present on `sep.sv` itself and requires no integration tie-off.

## 9.9. SEP Port Interface

The SEP exposes interfaces for clocks, resets, JTAG debug, CPU control, memory macros, AXI bus connections, cryptographic subsystem, eFuse, lifecycle, SPI host, and mailbox. The following table defines all SEP top-level ports.

Table 10. SEP Port Declaration

| Interface Name                   | Type  | Direction | Width | Description                                                                             | Connection                 | Default value (if applicable) |
|----------------------------------|-------|-----------|-------|-----------------------------------------------------------------------------------------|----------------------------|-------------------------------|
| <code>clk_i</code>               | logic | Input     | 1     | Primary SEP clock. All SEP internal logic operates synchronously to this clock.         | System clock               | N/A                           |
| <code>clk_wdt_i</code>           | logic | Input     | 1     | 200 kHz clock for watchdog timer.                                                       | Low-frequency clock source | N/A                           |
| <code>rst_ni</code>              | logic | Input     | 1     | Primary reset (active low). Asynchronous assertion, synchronous deassertion.            | System reset               | N/A                           |
| <code>dbg_rstb_i</code>          | logic | Input     | 1     | EL2 debugger reset (active low).                                                        | JTAG debug infrastructure  | N/A                           |
| <code>wdt_rst_ni</code>          | logic | Input     | 1     | Watchdog timer reset from SMC (active low).                                             | SMC reset unit             | N/A                           |
| <code>wdt_timer_rst_req_o</code> | logic | Output    | 1     | WDT reset request output. Triggers memory interface reset in <code>sep_wrapper</code> . | SEP wrapper                | N/A                           |
| <code>jtag_tck_i</code>          | logic | Input     | 1     | JTAG test clock.                                                                        | JTAG pads (via DTP STAP)   | N/A                           |
| <code>jtag_tms_i</code>          | logic | Input     | 1     | JTAG test mode select.                                                                  | JTAG pads (via DTP STAP)   | N/A                           |
| <code>jtag_tdi_i</code>          | logic | Input     | 1     | JTAG test data in.                                                                      | JTAG pads (via DTP STAP)   | N/A                           |
| <code>jtag_trst_ni</code>        | logic | Input     | 1     | JTAG test reset (active low).                                                           | JTAG pads (via DTP STAP)   | N/A                           |
| <code>jtag_tdo_o</code>          | logic | Output    | 1     | JTAG test data out.                                                                     | JTAG pads (via DTP STAP)   | N/A                           |
| <code>jtag_tdoEn_o</code>        | logic | Output    | 1     | JTAG test data out enable.                                                              | JTAG pads (via DTP STAP)   | N/A                           |

| Interface Name            | Type                             | Direction | Width  | Description                                                                                                                                                                                                               | Connection                                       | Default value (if applicable) |
|---------------------------|----------------------------------|-----------|--------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------|-------------------------------|
| axil_sep_otp_jtag_req_i   | sep_efuse_pkg::efuse_axil_req_t  | Input     | -      | OTP debug AXI-Lite request from JTAG.                                                                                                                                                                                     | DTP<br>axil_sep_otp_jtag_req_o                   | Tie to '0 if unused           |
| axil_sep_otp_jtag_resp_o  | sep_efuse_pkg::efuse_axil_resp_t | Output    | -      | OTP debug AXI-Lite response to JTAG.                                                                                                                                                                                      | DTP<br>axil_sep_otp_jtag_resp_i                  | N/A                           |
| mpc_debug_halt_req_i      | logic                            | Input     | 1      | Async halt request from MPC.                                                                                                                                                                                              | Debug controller                                 | Tie to '0 if unused           |
| mpc_debug_run_req_i       | logic                            | Input     | 1      | Async run request from MPC.                                                                                                                                                                                               | Debug controller                                 | Tie to '0 if unused           |
| mpc_reset_run_req_i       | logic                            | Input     | 1      | Run/halt selection after reset.                                                                                                                                                                                           | Debug controller                                 | 1'b1                          |
| cpu_halt_req_i            | logic                            | Input     | 1      | Async halt request to CPU.                                                                                                                                                                                                | Debug controller                                 | Tie to '0 if unused           |
| cpu_run_req_i             | logic                            | Input     | 1      | Async restart request to CPU.                                                                                                                                                                                             | Debug controller                                 | Tie to '0 if unused           |
| test_en_i                 | logic                            | Input     | 1      | DFT/scan test-enable. Drives clock-gater test ports and AXI cell test inputs.                                                                                                                                             | Test controller                                  | 1'b0                          |
| scan_rst_ni               | logic                            | Input     | 1      | Scan reset (active-low). Bypasses reset synchronizers during DFT.                                                                                                                                                         | Test controller                                  | 1'b1                          |
| ext_boot_seq_done_i       | logic                            | Input     | 1      | Boot sequence completion qualified to clk_i (memory repair and shadow register override done); gates reset release. In SMU, driven from SMC-qualified logic. In standalone SEP, synchronize and qualify before this port. | SMC-qualified boot done or external synchronizer | 1'b1                          |
| dmi_core_enable_i         | logic                            | Input     | 1      | Enables DMI accesses to the core debug module (addresses 0x00-0x4F). Tied high at SMU; TAP access is already lifecycle-gated.                                                                                             | Debug infrastructure                             | 1'b1                          |
| dmi_uncore_enable_i       | logic                            | Input     | 1      | Enables DMI accesses to an external uncore aperture (addresses 0x50+). Unused: the core debug module AXI master already reaches the SEP fabric.                                                                           | Debug infrastructure                             | Tie to '0 if unused           |
| dmi_uncore_enable_o       | logic                            | Output    | 1      | DMI uncore access enable.                                                                                                                                                                                                 | Debug infrastructure                             | N/A                           |
| dmi_uncore_write_enable_o | logic                            | Output    | 1      | DMI uncore write enable.                                                                                                                                                                                                  | Debug infrastructure                             | N/A                           |
| dmi_uncore_address_o      | logic                            | Output    | [6:0]  | DMI uncore address.                                                                                                                                                                                                       | Debug infrastructure                             | N/A                           |
| dmi_uncore_write_data_o   | logic                            | Output    | [31:0] | DMI uncore write data.                                                                                                                                                                                                    | Debug infrastructure                             | N/A                           |
| dmi_uncore_read_data_i    | logic                            | Input     | [31:0] | DMI uncore read data.                                                                                                                                                                                                     | Debug infrastructure                             | N/A                           |
| dmi_active_o              | logic                            | Output    | 1      | DMI active indicator.                                                                                                                                                                                                     | Debug infrastructure                             | N/A                           |
| sep_cpu_trace_o           | sep_cpu_trace_t                  | Output    | -      | CPU trace output for debug.                                                                                                                                                                                               | Trace infrastructure                             | N/A                           |
| lockstep_ctrl_i           | sep_pkg::sep_lockstep_ctrl_t     | Input     | -      | VeeR lockstep controls: disable corruption detection, and error-injection enable. Inert unless the core is built with RV_LOCKSTEP_ENABLE.                                                                                 | Chip-level RAS control                           | Tie to '0 if unused           |
| lockstep_status_o         | sep_pkg::sep_lockstep_status_t   | Output    | -      | VeeR lockstep status: corruption detected. Reads 0 unless the core is built with RV_LOCKSTEP_ENABLE.                                                                                                                      | Chip-level RAS aggregation                       | N/A                           |
| jtag_id_i                 | logic                            | Input     | [31:1] | JTAG ID value.                                                                                                                                                                                                            | Configuration tie-off                            | N/A                           |
| timer_int_i               | logic                            | Input     | 1      | Timer interrupt.                                                                                                                                                                                                          | Internal timer                                   | Tie to '0 if unused           |

| Interface Name                 | Type                                       | Direction | Width                   | Description                                                                             | Connection            | Default value (if applicable) |
|--------------------------------|--------------------------------------------|-----------|-------------------------|-----------------------------------------------------------------------------------------|-----------------------|-------------------------------|
| soft_int_i                     | logic                                      | Input     | 1                       | Software interrupt.                                                                     | Software IRQ source   | Tie to '0 if unused           |
| extintsrc_req_i                | logic                                      | Input     | [NUM_EXTERNAL_IRQS-1:0] | External interrupt sources for PIC.                                                     | External IRQ sources  | Tie to '0 if unused           |
| sep_cpu_tcm_req_o              | sep_cpu_tcm_req_t                          | Output    | -                       | CPU tightly-coupled memory (TCM) request (ICCM + DCCM).                                 | SRAM macros           | N/A                           |
| sep_cpu_tcm_rsp_p_i            | sep_cpu_tcm_rsp_t                          | Input     | -                       | CPU TCM response.                                                                       | SRAM macros           | N/A                           |
| sep_sram_req_o                 | sep_sram_req_t                             | Output    | -                       | Scratch SRAM request.                                                                   | SRAM macros           | N/A                           |
| sep_sram_rsp_i                 | sep_sram_rsp_t                             | Input     | -                       | Scratch SRAM response.                                                                  | SRAM macros           | N/A                           |
| sep_boot_rom_req_o             | sep_sram_req_t                             | Output    | -                       | Boot ROM (BL0) request.                                                                 | ROM macro             | N/A                           |
| sep_boot_rom_rsp_i             | sep_sram_rsp_t                             | Input     | -                       | Boot ROM (BL0) response.                                                                | ROM macro             | N/A                           |
| smn_outbound_axi_req_o         | sep_system_peripherals_outbound_axi_req_t  | Output    | -                       | SMN outbound AXI request (system bus master).                                           | SMN fabric            | N/A                           |
| smn_outbound_axi_resp_i        | sep_system_peripherals_outbound_axi_resp_t | Input     | -                       | SMN outbound AXI response.                                                              | SMN fabric            | N/A                           |
| smn_inbound_axi_req_i          | sep_system_peripherals_internal_axi_req_t  | Input     | -                       | SMN inbound AXI request (system bus slave).                                             | SMN fabric            | Tie to '0 if unused           |
| smn_inbound_axi_resp_o         | sep_system_peripherals_internal_axi_resp_t | Output    | -                       | SMN inbound AXI response.                                                               | SMN fabric            | N/A                           |
| sep_ext_to_smc_axi_req_o       | sep_system_peripherals_internal_axi_req_t  | Output    | -                       | SEP-to-SMC AXI request. Dedicated path for SEP to access SMC resources.                 | SMC sep_axi_in_req_i  | N/A                           |
| sep_ext_to_smc_axi_resp_i      | sep_system_peripherals_internal_axi_resp_t | Input     | -                       | SEP-to-SMC AXI response.                                                                | SMC sep_axi_in_resp_o | N/A                           |
| entropy_rosc_sample_clk_i      | logic                                      | Input     | 1                       | Ring-oscillator sample clock for entropy source (async vs clk_i; ~100-400 MHz typical). | Ring oscillator       | N/A                           |
| sep_crypto_pka_imem_sram_req_o | sep_crypto_pka_imem_sram_req_t             | Output    | -                       | OTBN PKA instruction memory SRAM request.                                               | SRAM macro            | N/A                           |
| sep_crypto_pka_imem_sram_rsp_i | sep_crypto_pka_imem_sram_rsp_t             | Input     | -                       | OTBN PKA instruction memory SRAM response.                                              | SRAM macro            | N/A                           |
| sep_crypto_pka_dmem_sram_req_o | sep_crypto_pka_dmem_sram_req_t             | Output    | -                       | OTBN PKA data memory SRAM request.                                                      | SRAM macro            | N/A                           |
| sep_crypto_pka_dmem_sram_rsp_i | sep_crypto_pka_dmem_sram_rsp_t             | Input     | -                       | OTBN PKA data memory SRAM response.                                                     | SRAM macro            | N/A                           |
| ext_trng_axil_req_o            | sep_32_32_axil_req_t                       | Output    | -                       | External TRNG AXI-Lite passthrough request (to sep_ip_integration).                     | External TRNG shim    | N/A                           |
| ext_trng_axil_resp_i           | sep_32_32_axil_resp_t                      | Input     | -                       | External TRNG AXI-Lite passthrough response.                                            | External TRNG shim    | N/A                           |
| ext_trng_axis_req_i            | ext_trng_axis_req_t                        | Input     | [EXT_TRNG_NUM_AXIS-1:0] | External TRNG AXI-Stream request array (from sep_ip_integration).                       | External TRNG shim    | N/A                           |
| ext_trng_axis_rsp_o            | ext_trng_axis_rsp_t                        | Output    | [EXT_TRNG_NUM_AXIS-1:0] | External TRNG AXI-Stream response array.                                                | External TRNG shim    | N/A                           |

| Interface Name            | Type                                  | Direction | Width                   | Description                                                                                                                                                                              | Connection                         | Default value (if applicable)     |
|---------------------------|---------------------------------------|-----------|-------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------|-----------------------------------|
| ext_trng_irq_i            | logic                                 | Input     | 1                       | External TRNG interrupt (routed to PIC).                                                                                                                                                 | External TRNG shim                 | Tie to '0 if unused               |
| km_rom_mem_req_o          | km_intf_pkg::km_rom_mem_req_t         | Output    | -                       | Key Manager ROM memory request.                                                                                                                                                          | ROM macro                          | N/A                               |
| km_rom_mem_rsp_i          | km_intf_pkg::km_rom_mem_rsp_t         | Input     | -                       | Key Manager ROM memory response.                                                                                                                                                         | ROM macro                          | N/A                               |
| km_sram_mem_req_o         | km_intf_pkg::km_sram_mem_req_t        | Output    | -                       | Key Manager SRAM memory request.                                                                                                                                                         | SRAM macro                         | N/A                               |
| km_sram_mem_rsp_i         | km_intf_pkg::km_sram_mem_rsp_t        | Input     | -                       | Key Manager SRAM memory response.                                                                                                                                                        | SRAM macro                         | N/A                               |
| efuse_bank_ctrl_req_o     | sep_efuse_pkg::efuse_axil_req_t       | Output    | -                       | eFuse bank control AXI-Lite request.                                                                                                                                                     | eFuse shim                         | N/A                               |
| efuse_bank_ctrl_resp_i    | sep_efuse_pkg::efuse_axil_resp_t      | Input     | -                       | eFuse bank control AXI-Lite response.                                                                                                                                                    | eFuse shim                         | N/A                               |
| efuse_shim_command_req_o  | sep_efuse_pkg::fuse_command_req_t     | Output    | -                       | eFuse command interface request.                                                                                                                                                         | eFuse shim                         | N/A                               |
| efuse_shim_command_resp_i | sep_efuse_pkg::fuse_command_resp_t    | Input     | -                       | eFuse command interface response.                                                                                                                                                        | eFuse shim                         | N/A                               |
| lcc_demote_state_1_o      | logic                                 | Output    | [1:0]                   | Lifecycle demote state output 1. Exported at SMU boundary; not currently connected to SMC.                                                                                               | SMU external port                  | N/A                               |
| lcc_demote_state_2_o      | logic                                 | Output    | [1:0]                   | Lifecycle demote state output 2. Exported at SMU boundary; not currently connected to SMC.                                                                                               | SMU external port                  | N/A                               |
| sep_io_spi_req_o          | sep_io_spi_req_t                      | Output    | -                       | SPI host controller request.                                                                                                                                                             | SPI pad interface                  | N/A                               |
| sep_io_spi_rsp_i          | sep_io_spi_rsp_t                      | Input     | -                       | SPI host controller response.                                                                                                                                                            | SPI pad interface                  | N/A                               |
| lc_state_o                | logic                                 | Output    | [2*LcStateBitWidth-1:0] | Lifecycle state output (differentially encoded). Routed to SMC and the SMU external output; debug-disable control to DTP is via <code>dbg_disable_o</code> .                             | SMC, SMU external                  | N/A                               |
| dbg_disable_o             | sep_lifecycle_ctrl_pkg::dbg_disable_t | Output    | -                       | Typed debug-disable struct routed by SMU to DTP debug-disable control.                                                                                                                   | SMU → DTP                          | N/A                               |
| sep_fuse_dft_disable_o    | logic                                 | Output    | 1                       | Gate for the DFT-inserted access path into the SEP OTP, composed as Case 3 AND <code>SEP_FUSE_DBG</code> . Unconnected in the functional design; an adopter's DFT insertion connects it. | Adopter DFT insertion              | Leave open if no path is inserted |
| smc_fuse_dft_disable_o    | logic                                 | Output    | 1                       | Gate for the DFT-inserted access path into the SMC OTP, composed as Case 2 AND <code>SMC_FUSE_DBG</code> . Unconnected in the functional design; an adopter's DFT insertion connects it. | Adopter DFT insertion              | Leave open if no path is inserted |
| lc_sigint_err_o           | logic                                 | Output    | 1                       | Lifecycle signal integrity error.                                                                                                                                                        | SMU                                | N/A                               |
| security_disable_o        | logic                                 | Output    | 1                       | Security disable output.                                                                                                                                                                 | SMU                                | N/A                               |
| secure_tm_o               | logic                                 | Output    | 1                       | Secure test mode output.                                                                                                                                                                 | SMU                                | N/A                               |
| smc_mailbox_interrupt_o   | logic                                 | Output    | [NumMailboxes-1:0]      | Mailbox interrupt outputs to SMC.                                                                                                                                                        | SMC interrupt aggregator           | N/A                               |
| smc_fuse_sense_done_i     | logic                                 | Input     | 1                       | SMC fuse sense done indication.                                                                                                                                                          | SMC <code>fuse_sense_done_o</code> | N/A                               |
| sep_fuse_sense_done_o     | logic                                 | Output    | 1                       | SEP fuse sense done output.                                                                                                                                                              | System integration                 | N/A                               |
| secure_tm_req_i           | logic                                 | Input     | -                       | Secure test mode request.                                                                                                                                                                | GPIO padding / tie-off             | N/A                               |

| Interface Name           | Type                      | Direction | Width   | Description                                                  | Connection                         | Default value (if applicable) |
|--------------------------|---------------------------|-----------|---------|--------------------------------------------------------------|------------------------------------|-------------------------------|
| axi_extension_axi_req_o  | sep_32_64_6_12_axi_req_t  | Output    | -       | AXI extension port request for adopter peripheral expansion. | Adopter peripherals                | N/A                           |
| axi_extension_axi_resp_i | sep_32_64_6_12_axi_resp_t | Input     | -       | AXI extension port response.                                 | Adopter peripherals                | Tie to DECERR if unused       |
| smc_global_base_addr_i   | logic                     | Input     | [55:0]  | SMC global base address for outbound address translation.    | System configuration               | N/A                           |
| smc_region_size_i        | logic                     | Input     | [55:0]  | SMC region size for outbound address translation.            | SMC <code>smc_region_size_o</code> | N/A                           |
| km_unrecoverable_err_o   | logic                     | Output    | 1       | Key Manager unrecoverable error.                             | RAS / error handling               | N/A                           |
| km_recoverable_err_o     | logic                     | Output    | 1       | Key Manager recoverable error.                               | RAS / error handling               | N/A                           |
| ext_debug_bus_o          | logic                     | Output    | [511:0] | External debug observation bus.                              | Debug infrastructure               | N/A                           |

# Chapter 10. SMU Composition and Internal Wiring

The System Management Unit (SMU) combines the SMC, DTP, and optionally the SEP into a unified subsystem. The interface descriptions in the preceding sections apply directly when integrating the SMU, since the SMU inherits all three subsystems' ports. This section covers the module variants available to adopters, how the SMU wires its subsystems together internally, and what additional configuration it exposes.

## 10.1. Module Variants and IP Integration

OCAH core modules (`smc.sv`, `sep.sv`, `dtp.sv`, and the composite `smu.sv`) expose logic-level interfaces only. All technology-specific components — PLLs, PVT sensors, eFuse shims, memory macros, GPIO padrings, SPI controllers, and external TRNG — are instantiated outside the core modules by the adopter. This separation keeps the OCAH deliverable technology-neutral.

The figure below shows that boundary. `smu` exposes a technology integration interface for each of these components, and a reference integration module holds the shims, models and macros behind them. An adopter keeps the interfaces and replaces what lies below the boundary with its own technology IP.



Figure 4. SMU Technology Integration

The repository provides reference wrappers that demonstrate how to bridge the gap between OCAH core interfaces and adopter-specific IP:

- **smu\_wrapper.sv** wraps **smu.sv** with pad-level signal handling for clocks, resets, GPIO, eFuse, and JTAG interfaces. It internally instantiates **smc\_ip\_integration.sv** for SMC-related vendor IP and **sep\_ip\_integration.sv** for SEP-related vendor IP. Each integration module holds its own eFuse interface shim and eFuse bank.
- **smc\_wrapper.sv** provides an equivalent reference wrapping **smc.sv** alone, useful when integrating the SMC without the DTP/SEP subsystems.

Neither the wrappers nor the IP integration modules are part of the OCAH deliverable; they exist as integration guides. Adopters must develop their own equivalents following the interface patterns demonstrated in these modules. The interface contracts at the module boundaries ensure technology substitution without modifying the verified OCAH logic.

The figure below illustrates the relationship between the OCAH core modules, the wrapper layer, and the IP integration modules.



Figure 5. SMU Integration Components

### 10.1.1. IP Integration Modules

`smc_ip_integration.sv` demonstrates integration of SMC-side technology components: PLL wrappers (generating `pll_cgm_clk_o` and `pll_awm_clk_o`), PVT sensor interfaces, eFuse shims, GPIO padding logic, memory macros (ROM, scratchpad RAM, cache tag and data arrays), and trace memory instances.

`sep_ip_integration.sv` demonstrates integration of SEP-side technology components: SEP memory macros (TCM, scratch SRAM, boot ROM, OTBN IMEM/DMEM, Key Manager ROM/SRAM), eFuse shim, external TRNG, and SPI controller selection.

### 10.1.2. Wrapper Clock Architecture

The behavioral `pll_wrap` model is a DV/reference placeholder: it free-runs `refclk`, `sys_clk`, and `periph_clk` at 100 / 800 / 200 MHz (`+pll_sys_period_ns=10` runs `sys_clk` at 100 MHz; with `+pll_osc_bench` a bench toggles the oscillator nets itself), muxes `sys` and `periph` with `ref` through `prim_clock_mux2` then `prim_ag_clk_mux`, and terminates the AXI-Lite PLL control interface with OKAY. It is not a synthesis stand-in. An adopter who replaces `smc_ip_integration` supplies equivalent clocks internally; the bare cores still have the three clock inputs.

## 10.2. Clock and Reset Architecture

Connect `clk_smu_i` to the primary system clock and `clk_ref_i` to a stable reference source. The DTP operates on TCK for JTAG logic and on the system clock for cross-trigger and AXI bridges. Reset sequencing follows the SMC flow; the DTP JTAG state machine uses `pwr_on_rst_ni`, which the SMU connects to the SMC `powergood_stable_o` output. The SMU internally connects DTP debug paths to the SMC and optionally instantiates the SEP when `CFG.SEP` is set to 1. The full interconnection details are described in [SMC-DTP Internal Interconnection](#) and [SEP-Conditional Wiring](#) below.

## 10.3. SMU AXI Crossbar Address Map

Inside the SMU, the `smu_axi_xbar` module routes traffic between three AXI4 manager/subordinate pairs: the SEP outbound master (`sep_out`), the SMC outbound master (`smc_out`), and the external SMU AXI input (`ext_in` / `smu_axi_in`). The corresponding targets are the SEP and SMC inbound subordinates, and the external SMU AXI output (`ext_out` / `smu_axi_out`).

See the *SMU AXI Crossbar* and *OCAH Memory Map* sections of the Technical Reference Manual for connectivity and the responsibility split between hardware-fixed and firmware-programmable apertures.

The crossbar uses a **runtime** address map with two rules, the SEP and SMC apertures, both programmable at runtime. `ext_out` has no address rule. The apertures are driven as follows:

- `sep_global_base_addr_i` / `sep_region_size_i` come from the `sep_cpu_ctrl` CSRs `SEP_GLOBAL_BASE_ADDR` / `SEP_REGION_SIZE`, exposed at the `sep.sv` boundary as `sep_global_base_addr_o` / `sep_region_size_o`, and at the `smu.sv` boundary as `sep_global_base_o` / `sep_region_size_o` (both 56-bit). `SEP_REGION_SIZE` is a 32-bit CSR field, zero-extended to 56-bit at the SEP system CSR; the xbar input takes only the lower 32 bits. `SEP_REGION_SIZE` defines the SEP global/chiplet aperture for SMU routing and SEP inbound global-to-local remap. It is distinct from the SEP CPU's architectural local-alias span. `SEP_REGION_SIZE` currently resets to `0x0100_0000` (16 MiB). Tied to '0' at the `smu.sv` boundary when `CFG.SEP` is 0.
- `smc_global_base_addr_i` / `smc_region_size_i` come from the `smc_base_config` CSRs `GLOBAL_BASE` / `REGION_SIZE`, exposed at both the `smc.sv` and `smu.sv` boundaries as `smc_global_base_o` (56-bit) / `smc_region_size_o` (32-bit). `REGION_SIZE` resets to `0x0100_0000` (16 MiB).

SEP, SMC, and `smu_axi_xbar` all run on `clk_smu_i`, so these quasi-static CSR fields need no clock-domain crossing. The crossbar's address arithmetic is done on 57-bit widened sums. For where unmatched requests go, and which requests return `DECERR`, see the SMU AXI Crossbar section of the Technical Reference Manual.

### 10.3.1. Firmware programming order

Firmware must program `SEP_GLOBAL_BASE_ADDR` / `SEP_REGION_SIZE` and SMC `GLOBAL_BASE` / `REGION_SIZE` during early boot, **before any cross-subsystem AXI traffic is issued**, and must ensure the two apertures do not overlap and both fall within the chiplet-visible SMU envelope assigned by the integrator. The SMU crossbar does not itself constrain envelope size.

See the *OCAH Memory Map* section of the Technical Reference Manual for that responsibility split.

## 10.4. SMU Default Parameters

The DTP JTAG features, identification, cross trigger, and pipeline depths are fields of the `CFG` parameter, of type `smu_pkg::smu_cfg_t`. `CFG` defaults to the `smu_pkg::SmuConfigs` preset that the `CFG_IDX` parameter selects:

`smu_pkg::DefaultCfg` at the default index 0, or `smu_pkg::NoSepCfg`, which differs only in `SEP`, at index 1. A `CFG` passed directly takes precedence over `CFG_IDX`. Flows that override parameters with `elaborate -param`, which cannot set a struct, select the preset through `CFG_IDX`.

The parameters of `smu` are listed in the HTML edition of the Technical Reference Manual, under RTL Modules Reference.

SEP-related DTP configuration has no `smu_cfg_t` field of its own. The SMU derives SEP debug/STAP enablement from `CFG.SEP` and wires the corresponding DTP interfaces internally to the SEP block when `CFG.SEP=1`.

## 10.5. IC\_RESET TDR Structure

The DTP primary TAP implements the IEEE 1149.1-2013 §17 IC\_RESET TDR as three independently enabled slices plus a single `reset_hold` bit nearest TDO. At the SMU the scan order from TDI to TDO is:

TDI → SMC slice → SEP slice → external slice → reset\_hold → TDO

The SMU enables the SMC slice unconditionally, the SEP slice when `CFG.SEP=1` (otherwise that slice has width 0 and is omitted), and the external slice when `JTAG_IC_RESET_ENABLE` is set. Each slice is a packed struct with `.ovrd` and `.val` halves of equal width; `jtag_ptap` sizes the slice from `$bits(type)/2`. Each port has the reset-enable and reset-control pair IEEE §17 requires, with `reset_enable` nearer TDO. `.val` carries `reset_control`, and `.ovrd` carries the inverse of `reset_enable`. Declaration order within each half is the TDI-to-TDO scan order: the first field is nearest TDI.

| Slice                   | Ports                                  | Defined by                                           | Consumed by                                     |
|-------------------------|----------------------------------------|------------------------------------------------------|-------------------------------------------------|
| SMC                     | 68                                     | OCAH ( <code>smc_pkg::jtag_smc_reset_ctrl_t</code> ) | SMC reset unit; SMU-internal, no SMU port       |
| SEP                     | 8 when <code>CFG.SEP=1</code> , else 0 | OCAH ( <code>sep_pkg::jtag_sep_reset_ctrl_t</code> ) | SEP reset controller; SMU-internal, no SMU port |
| External                | <code>\$bits(ic_reset_ext_t)/2</code>  | Adopter ( <code>ic_reset_ext_t</code> )              | SMU output <code>jtag_ic_reset_ext_o</code>     |
| <code>reset_hold</code> | 1 bit                                  | IEEE 1149.1 §17                                      | Nearest TDO; not a reset port                   |

The TDR length is  $2 * (\text{SMC ports} + \text{SEP ports} + \text{external ports}) + 1$ . Programming order and `reset_enable` polarity are in the DTP JTAG chapter of the Technical Reference Manual.

### 10.5.1. SMC slice (TDI to TDO)

The SMC slice covers the SMC reset domains and the 32 managed-subsystem (SS) cold and warm resets. Vector index `[31]` of each SS field is nearer TDI than `[0]`.

| Port                               | Reset domain                       |
|------------------------------------|------------------------------------|
| <code>ss_warm_reset_n[31:0]</code> | Per-subsystem warm reset           |
| <code>ss_cold_reset_n[31:0]</code> | Per-subsystem cold reset           |
| <code>cold_reset_n</code>          | SMC cold reset                     |
| <code>cool_reset_n</code>          | SMC cool reset                     |
| <code>warm_reset_n</code>          | SMC warm reset                     |
| <code>fuse_reset_n</code>          | Fuse reset (nearest the SEP slice) |

## 10.5.2. SEP slice (TDI to TDO)

When `CFG.SEP=1` the SEP slice covers the SEP main reset and the crypto, Key Manager, and TRNG resets consumed by `sep_reset_ctrl`. `abr_jtag_rst_n` is nearest TDI.

| Port                         | Reset domain                             |
|------------------------------|------------------------------------------|
| <code>abr_jtag_rst_n</code>  | Adams Bridge                             |
| <code>trng_jtag_rst_n</code> | TRNG                                     |
| <code>sep_reset_n</code>     | SEP main reset                           |
| <code>kmac_jtag_rst_n</code> | KMAC                                     |
| <code>hmac_jtag_rst_n</code> | HMAC                                     |
| <code>aes_jtag_rst_n</code>  | AES                                      |
| <code>otbn_jtag_rst_n</code> | OTBN                                     |
| <code>km_jtag_rst_n</code>   | Key Manager (nearest the external slice) |

## 10.5.3. External slice (adopter-defined)

The external slice is reserved for reset overrides on logic instantiated outside the SMU. OCAH does not name its ports. Set the SMU type parameter `ic_reset_ext_t` to a packed struct with `.ovrd` and `.val` halves of equal width, and route `jtag_ic_reset_ext_o` to that logic. The parameter default (`jtag_tap_pkg::jtag_ic_reset_default_t`) is a single-override stub. Clear `JTAG_IC_RESET_ENABLE` when no external overrides are required.

Declare a new external override at each half's MSB so already-assigned TDR positions do not shift. Extra subsystem reset controls beyond the SMC slice use this typed port.

# 10.6. DTP Parameter Pass-Through

The SMU passes through most DTP parameters to allow integrator customization. Type parameters are set internally based on SMC package types.

## 10.6.1. JTAG Configuration Parameters

| Parameter                             | SMU Default                  | Pass-through | Notes                                                                                                                                                                                    |
|---------------------------------------|------------------------------|--------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>JTAG_BSR_ENABLE</code>          | 1                            | Yes          | Boundary scan enabled                                                                                                                                                                    |
| <code>JTAG_EXTEST_TRAIN_ENABLE</code> | 1                            | Yes          |                                                                                                                                                                                          |
| <code>JTAG_EXTEST_PULSE_ENABLE</code> | 1                            | Yes          |                                                                                                                                                                                          |
| <code>JTAG_INTEST_ENABLE</code>       | 1                            | Yes          |                                                                                                                                                                                          |
| <code>JTAG_CLAMP_ENABLE</code>        | 1                            | Yes          |                                                                                                                                                                                          |
| <code>JTAG_HIGHZ_ENABLE</code>        | 1                            | Yes          |                                                                                                                                                                                          |
| <code>JTAG_RUNBIST_ENABLE</code>      | 1                            | Yes          |                                                                                                                                                                                          |
| <code>JTAG_TMP_ENABLE</code>          | 1                            | Yes          |                                                                                                                                                                                          |
| <code>JTAG_IC_RESET_ENABLE</code>     | 1                            | No           | SMU routes this to the DTP's <code>JTAG_IC_RESET_EXT_ENABLE</code> ; SMC and SEP slices are enabled inside the SMU instantiation (SMC unconditionally, SEP when <code>CFG.SEP=1</code> ) |
| <code>JTAG_SMC_DBG_ENABLE</code>      | 1                            | Yes          |                                                                                                                                                                                          |
| <code>JTAG_SEP_DBG_ENABLE</code>      | 1 ( <code>CFG.SEP=1</code> ) | No           | Derived internally from <code>CFG.SEP</code>                                                                                                                                             |

| Parameter            | SMU Default | Pass-through | Notes                                                                                     |
|----------------------|-------------|--------------|-------------------------------------------------------------------------------------------|
| JTAG_STAP_IO_ENABLE  | 1           | Yes          |                                                                                           |
| JTAG_NUM_EXTRA_STAPS | 1           | Yes          | Port array size equals parameter value; when set to 0, array size is 1 (tie-off required) |

## 10.6.2. JTAG ID Parameters

| Parameter            | SMU Default | Pass-through | Notes                |
|----------------------|-------------|--------------|----------------------|
| JTAG_IDCODE_MFR_ID   | 110h000     | Yes          | Manufacturer ID      |
| JTAG_IDCODE_PART_NUM | 160h0000    | Yes          | Part number          |
| JTAG_IDCODE_SI_REV   | 40h0        | Yes          | Silicon revision     |
| JTAG_OCH_VER         | 80h00       | Yes          | DTP IP major version |

## 10.6.3. Cross Trigger Parameters

| Parameter              | SMU Default             | DTP Internal                  | Pass-through | Notes                                              |
|------------------------|-------------------------|-------------------------------|--------------|----------------------------------------------------|
| XTRIG_NUM_CTP          | 16                      | CFG                           | Yes          | External CTP count                                 |
| XTRIG_NUM_INT_CT       | 8                       | CFG +<br>XtrigSmcIntCtLanes   | Yes          | SMU-exposed count; DTP adds the SMC-reserved lanes |
| XTRIG_NUM_CLK_STOP_REQ | 8                       | CFG +<br>XtrigSmcClkStopLanes | Yes          | SMU-exposed count; DTP adds the SMC-reserved lane  |
| XTRIG_INT_CT_MODE      | 32 bits, low 8 consumed | DTP width                     | Yes          | SMC-reserved DTP mode bits are 0 (pulse-sync)      |

The SMU remaps DTP internal-CT lanes above the SMC reservation onto the SMU-exposed ports. Clock-stop request lane 0 is reserved for SMC; the SMU exposes the remaining DTP lanes.

## 10.6.4. Pipeline Depth Parameters

| Parameter           | SMU Default | Pass-through | Notes                                                             |
|---------------------|-------------|--------------|-------------------------------------------------------------------|
| SMC_OTP_RD_PL_DEPTH | 20h3        | Yes          | SMC OTP read pipeline depth                                       |
| SMC_OTP_WR_PL_DEPTH | 20h3        | Yes          | SMC OTP write pipeline depth                                      |
| SEP_OTP_RD_PL_DEPTH | 20h3        | No           | Fixed to 20h3 in SMU; used when CFG.SEP=1, ignored when CFG.SEP=0 |
| SEP_OTP_WR_PL_DEPTH | 20h3        | No           | Fixed to 20h3 in SMU; used when CFG.SEP=1, ignored when CFG.SEP=0 |
| SMC_RD_PL_DEPTH     | 20h3        | Yes          | SMC fabric read pipeline depth                                    |
| SMC_WR_PL_DEPTH     | 20h3        | Yes          | SMC fabric write pipeline depth                                   |

## 10.6.5. Type Parameters

The following type parameters are set internally by the SMU and are not exposed for integrator configuration.

| Parameter           | Set To                                  | Notes                    |
|---------------------|-----------------------------------------|--------------------------|
| jtag_tap_ctrl_t     | prim_jtag_pkg::jtag_tap_ctrl_t          | JTAG TAP control struct  |
| jtag_scan_ctrl_t    | prim_jtag_pkg::jtag_scan_ctrl_t         | JTAG scan control struct |
| smc_jtag_axi_req_t  | smc_pkg::smc_jtag_56_64_2_12_axi_req_t  | SMC debug AXI request    |
| smc_jtag_axi_resp_t | smc_pkg::smc_jtag_56_64_2_12_axi_resp_t | SMC debug AXI response   |

| Parameter           | Set To                         | Notes                                                                |
|---------------------|--------------------------------|----------------------------------------------------------------------|
| ic_reset_smc_t      | smc_pkg::jtag_smc_reset_ctrl_t | SMC IC_RESET TDR slice                                               |
| ic_reset_sep_t      | sep_pkg::jtag_sep_reset_ctrl_t | SEP IC_RESET TDR slice                                               |
| smc_otp_axil_req_t  | smc_pkg::smc_axil_32_32_req_t  | SMC OTP AXI-Lite request                                             |
| smc_otp_axil_resp_t | smc_pkg::smc_axil_32_32_resp_t | SMC OTP AXI-Lite response                                            |
| sep_otp_axil_req_t  | smc_pkg::smc_axil_32_32_req_t  | SEP OTP AXI-Lite request (error slave when <code>CFG.SEP=0</code> )  |
| sep_otp_axil_resp_t | smc_pkg::smc_axil_32_32_resp_t | SEP OTP AXI-Lite response (error slave when <code>CFG.SEP=0</code> ) |
| xtrig_axil_req_t    | smc_pkg::smc_axil_32_32_req_t  | Cross trigger CSR request                                            |
| xtrig_axil_resp_t   | smc_pkg::smc_axil_32_32_resp_t | Cross trigger CSR response                                           |

## 10.7. DTP Port Mapping

The following tables define the complete DTP port list as connected within the SMU. Ports marked "SMU external port" are exposed on the SMU boundary for integrator connection. Ports marked with a subsystem name (e.g. SMC, SEP) are wired internally within the SMU.

### 10.7.1. Clock and Reset

| Port          | Direction | Width | SMU Connection                                                       |
|---------------|-----------|-------|----------------------------------------------------------------------|
| clk_i         | input     | 1     | SMU <code>clk_smu_i</code> (shared with SMC <code>clk_smc_i</code> ) |
| rst_n_i       | input     | 1     | SMC <code>rst_primary_smc_clk_no</code>                              |
| pwr_on_rst_ni | input     | 1     | SMC <code>powergood_stable_o</code> (power-on reset for JTAG logic)  |

### 10.7.2. Primary JTAG TAP Interface

| Port                        | Direction | Width           | SMU Connection    |
|-----------------------------|-----------|-----------------|-------------------|
| jtag_ptap_client_tap_ctrl_i | input     | jtag_tap_ctrl_t | SMU external port |
| jtag_ptap_client_tdi_i      | input     | 1               | SMU external port |
| jtag_ptap_client_tdo_o      | output    | 1               | SMU external port |
| jtag_ptap_client_tdo_oen_o  | output    | 1               | SMU external port |

### 10.7.3. Boundary Scan Interface

| Port                      | Direction | Width            | SMU Connection    |
|---------------------------|-----------|------------------|-------------------|
| jtag_bsr_host_scan_ctrl_o | output    | jtag_scan_ctrl_t | SMU external port |
| jtag_bsr_host_scan_in_i   | input     | 1                | SMU external port |
| jtag_bsr_host_scan_out_o  | output    | 1                | SMU external port |

### 10.7.4. I/O STAP Interface

| Port                         | Direction | Width           | SMU Connection    |
|------------------------------|-----------|-----------------|-------------------|
| jtag_stap_io_host_tap_ctrl_o | output    | jtag_tap_ctrl_t | SMU external port |
| jtag_stap_io_host_tdi_i      | input     | 1               | SMU external port |
| jtag_stap_io_host_tdo_o      | output    | 1               | SMU external port |

| Port                        | Direction | Width | SMU Connection    |
|-----------------------------|-----------|-------|-------------------|
| jtag_stap_io_host_tdo_oen_o | output    | 1     | SMU external port |

## 10.7.5. SMC Debug STAP Interface

| Port                          | Direction | Width           | SMU Connection                                                                                                         |
|-------------------------------|-----------|-----------------|------------------------------------------------------------------------------------------------------------------------|
| jtag_stap_smc_host_tap_ctrl_o | output    | jtag_tap_ctrl_t | SMC smc_cpu_jtag_{TCK,TMS}_i; trst_n inverted drives SMC smc_cpu_jtag_reset_i when JTAG_SMC_DBG_ENABLE=1, else tie-off |
| jtag_stap_smc_host_tdi_i      | input     | 1               | SMC smc_cpu_jtag_TDO_data_o when JTAG_SMC_DBG_ENABLE=1, else 10b0                                                      |
| jtag_stap_smc_host_tdo_o      | output    | 1               | SMC smc_cpu_jtag_TDI_i when JTAG_SMC_DBG_ENABLE=1, else unused                                                         |
| jtag_stap_smc_host_tdo_oen_o  | output    | 1               | Internal only; not consumed by SMC                                                                                     |

## 10.7.6. SEP Debug STAP Interface

| Port                          | Direction | Width           | SMU Connection                                             |
|-------------------------------|-----------|-----------------|------------------------------------------------------------|
| jtag_stap_sep_host_tap_ctrl_o | output    | jtag_tap_ctrl_t | SEP jtag_{tck_i,tms_i,trst_ni} when CFG.SEP=1, else unused |
| jtag_stap_sep_host_tdi_i      | input     | 1               | SEP jtag_tdo_o when CFG.SEP=1, else 10b0                   |
| jtag_stap_sep_host_tdo_o      | output    | 1               | SEP jtag_tdi_i when CFG.SEP=1, else unused                 |
| jtag_stap_sep_host_tdo_oen_o  | output    | 1               | Internal only; not consumed by SEP at SMU level            |

## 10.7.7. Extra STAP Interfaces

| Port                            | Direction | Width                                      | SMU Connection    |
|---------------------------------|-----------|--------------------------------------------|-------------------|
| jtag_stap_extra_host_tap_ctrl_o | output    | jtag_tap_ctrl_t[JtagNumExtraStapPorts-1:0] | SMU external port |
| jtag_stap_extra_host_tdi_i      | input     | [JtagNumExtraStapPorts-1:0]                | SMU external port |
| jtag_stap_extra_host_tdo_o      | output    | [JtagNumExtraStapPorts-1:0]                | SMU external port |
| jtag_stap_extra_host_tdo_oen_o  | output    | [JtagNumExtraStapPorts-1:0]                | SMU external port |

## 10.7.8. Extended STAP Scan Interface

| Port                       | Direction | Width            | SMU Connection    |
|----------------------------|-----------|------------------|-------------------|
| jtag_stap_host_scan_ctrl_o | output    | jtag_scan_ctrl_t | SMU external port |
| jtag_stap_host_scan_in_i   | input     | 1                | SMU external port |
| jtag_stap_host_scan_out_o  | output    | 1                | SMU external port |

## 10.7.9. DFD iJTAG Interface

| Port                      | Direction | Width            | SMU Connection    |
|---------------------------|-----------|------------------|-------------------|
| jtag_dfd_host_scan_ctrl_o | output    | jtag_scan_ctrl_t | SMU external port |
| jtag_dfd_host_scan_in_i   | input     | 1                | SMU external port |
| jtag_dfd_host_scan_out_o  | output    | 1                | SMU external port |

## 10.7.10. DFT iJTAG Interfaces

| Port                             | Direction | Width            | SMU Connection                         |
|----------------------------------|-----------|------------------|----------------------------------------|
| jtag_dft_secure_host_scan_ctrl_o | output    | jtag_scan_ctrl_t | Secure DFT iJTAG SMU external port     |
| jtag_dft_secure_host_scan_in_i   | input     | 1                | Secure DFT iJTAG SMU external port     |
| jtag_dft_secure_host_scan_out_o  | output    | 1                | Secure DFT iJTAG SMU external port     |
| jtag_dft_host_scan_ctrl_o        | output    | jtag_scan_ctrl_t | Non-secure DFT iJTAG SMU external port |
| jtag_dft_host_scan_in_i          | input     | 1                | Non-secure DFT iJTAG SMU external port |
| jtag_dft_host_scan_out_o         | output    | 1                | Non-secure DFT iJTAG SMU external port |

## 10.7.11. SMC Fabric Debug AXI Interface

| Port               | Direction | Width               | SMU Connection         |
|--------------------|-----------|---------------------|------------------------|
| axi_smc_dbg_req_o  | output    | smc_jtag_axi_req_t  | SMC jtag_axi_in_req_i  |
| axi_smc_dbg_resp_i | input     | smc_jtag_axi_resp_t | SMC jtag_axi_in_resp_o |

## 10.7.12. SMC OTP Debug AXI-Lite Interface

| Port                     | Direction | Width               | SMU Connection               |
|--------------------------|-----------|---------------------|------------------------------|
| axil_smc_otp_jtag_req_o  | output    | smc_otp_axil_req_t  | SMC axil_smc_otp_jtag_req_i  |
| axil_smc_otp_jtag_resp_i | input     | smc_otp_axil_resp_t | SMC axil_smc_otp_jtag_resp_o |

## 10.7.13. SEP OTP Debug AXI-Lite Interface

When `CFG.SEP=1`, this interface connects to the SEP `axil_sep_otp_jtag_*` ports. When `CFG.SEP=0`, the SMU instantiates `u_sep_otp_axil_err_slv`, which responds with DECERR to all transactions.

| Port                     | Direction | Width               | SMU Connection                                                                                                               |
|--------------------------|-----------|---------------------|------------------------------------------------------------------------------------------------------------------------------|
| axil_sep_otp_jtag_req_o  | output    | sep_otp_axil_req_t  | SEP axil_sep_otp_jtag_req_i when <code>CFG.SEP=1</code> , else AXI-Lite error slave ( <code>u_sep_otp_axil_err_slv</code> )  |
| axil_sep_otp_jtag_resp_i | input     | sep_otp_axil_resp_t | SEP axil_sep_otp_jtag_resp_o when <code>CFG.SEP=1</code> , else AXI-Lite error slave ( <code>u_sep_otp_axil_err_slv</code> ) |

## 10.7.14. Clock Control

| Port        | Direction | Width | SMU Connection                                                       |
|-------------|-----------|-------|----------------------------------------------------------------------|
| stop_clks_o | output    | 1     | SMU external port: <code>dtp_stop_clks_o</code> (to PLL clock gates) |

## 10.7.15. Boot Stall Control

| Port                   | Direction | Width | SMU Connection             |
|------------------------|-----------|-------|----------------------------|
| jtag_boot_stall_ovrd_o | output    | 1     | SMC boot_stall_jtag_ovrd_i |
| jtag_boot_stall_o      | output    | 1     | SMC boot_stall_jtag_val_i  |

## 10.7.16. JTAG Reset Control

| Port                             | Direction | Width                                       | SMU Connection                                                                                                                                                              |
|----------------------------------|-----------|---------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>jtag_ic_reset_smc_o</code> | output    | <code>smc_pkg::jtag_smc_reset_ctrl_t</code> | SMC <code>jtag_smc_reset_ctrl_i</code> (packed struct with <code>.ovrd</code> override enables and <code>.val</code> active-low override values)                            |
| <code>jtag_ic_reset_sep_o</code> | output    | <code>sep_pkg::jtag_sep_reset_ctrl_t</code> | SEP <code>jtag_sep_reset_ctrl_i</code> (packed struct with <code>.ovrd</code> override enables and <code>.val</code> active-low override values); SMU-internal, no SMU port |
| <code>jtag_ic_reset_ext_o</code> | output    | <code>ic_reset_ext_t</code>                 | SMU <code>jtag_ic_reset_ext_o</code> external port (integrator-defined packed struct; carries reset overrides for logic outside the SMU)                                    |

## 10.7.17. JTAG State Outputs

| Port                                  | Direction | Width                                   | SMU Connection    |
|---------------------------------------|-----------|-----------------------------------------|-------------------|
| <code>jtag_ptap_state_o</code>        | output    | <code>tap_state_e</code>                | SMU external port |
| <code>jtag_ptap_inst_decoded_o</code> | output    | <code>jtag_instruction_decoded_e</code> | SMU external port |

## 10.7.18. Cross Trigger CSR AXI-Lite Interface

| Port                           | Direction | Width                          | SMU Connection                       |
|--------------------------------|-----------|--------------------------------|--------------------------------------|
| <code>axil_xtrig_req_i</code>  | input     | <code>xtrig_axil_req_t</code>  | SMC <code>axil_dtp_csr_req_o</code>  |
| <code>axil_xtrig_resp_o</code> | output    | <code>xtrig_axil_resp_t</code> | SMC <code>axil_dtp_csr_resp_i</code> |

## 10.7.19. Cross Trigger Matrix Interface

| Port                             | Direction | Width               | SMU Connection                                                                                         |
|----------------------------------|-----------|---------------------|--------------------------------------------------------------------------------------------------------|
| <code>xtrig_ctm_src_req_o</code> | output    | [XtrigNumIntCt-1:0] | SMC-reserved DTP lanes stay inside the SMU; remaining lanes are the SMU external port                  |
| <code>xtrig_ctm_src_ack_i</code> | input     | [XtrigNumIntCt-1:0] | SMC-reserved DTP lanes tied off; remaining lanes are the SMU external port                             |
| <code>xtrig_ctm_dst_req_i</code> | input     | [XtrigNumIntCt-1:0] | SMC-reserved DTP lanes from SMC <code>xtrigger_ss_o</code> ; remaining lanes are the SMU external port |
| <code>xtrig_ctm_dst_ack_o</code> | output    | [XtrigNumIntCt-1:0] | SMC-reserved DTP lanes unused; remaining lanes are the SMU external port                               |

The low `smu_pkg::XtrigSmcIntCtLanes` DTP internal-CT lanes are reserved for SMC (both bits of `xtrigger_ss_o`). The SMU exposes the remaining DTP lanes, so the SMU `XTRIG_NUM_INT_CT` field is that many less than DTP's. The SMC uses pulse-synchronization mode, so ack signals for the reserved lanes are unused: the DTP `xtrig_ctm_src_ack_i` reserved slice is tied to '0 and `xtrig_ctm_dst_ack_o` reserved bits are left unconnected. The usage of ack signals depends on the `XTRIG_INT_CT_MODE` parameter: when a mode bit is 0 (pulse synchronization), the corresponding ack is unused; when 1 (req/ack handshaking), the ack must be connected to the cross trigger endpoint.

## 10.7.20. Clock Stop Request Interface

| Port                              | Direction | Width                    | SMU Connection                                                                                                    |
|-----------------------------------|-----------|--------------------------|-------------------------------------------------------------------------------------------------------------------|
| <code>xtrig_clk_stop_req_i</code> | input     | [XtrigNumClkStopReq-1:0] | DTP lane 0: SMC <code>tdr_dbg_ctrl_clocks_stopped_by_cla_o</code> ; remaining DTP lanes are the SMU external port |

Clock-stop request lane 0 is reserved for SMC. The SMU exposes the remaining DTP lanes, so the SMU `XTRIG_NUM_CLK_STOP_REQ` field is `smu_pkg::XtrigSmcClkStopLanes` less than DTP's.

## 10.7.21. Cross Trigger Port GPIO Interface

CTP signals from DTP are ported through the SMU and are direct `smu_wrapper` external ports (connected through the `.*` SMU instantiation). The adopter must connect them to GPIO pad logic; no tie-off or dangling is present in the wrapper itself. Widths follow `CFG.XTRIG_NUM_CTP` (default 16).

| Port                                     | Direction | Width             | SMU Connection                               |
|------------------------------------------|-----------|-------------------|----------------------------------------------|
| <code>xtrig_ctp_req_out_dout_o</code>    | output    | [XtrigNumCtp-1:0] | SMU external port; connect to GPIO pad logic |
| <code>xtrig_ctp_req_out_dout_en_o</code> | output    | [XtrigNumCtp-1:0] | SMU external port; connect to GPIO pad logic |
| <code>xtrig_ctp_req_out_din_i</code>     | input     | [XtrigNumCtp-1:0] | SMU external port; connect to GPIO pad logic |
| <code>xtrig_ctp_req_out_din_en_o</code>  | output    | [XtrigNumCtp-1:0] | SMU external port; connect to GPIO pad logic |
| <code>xtrig_ctp_req_in_dout_o</code>     | output    | [XtrigNumCtp-1:0] | SMU external port; connect to GPIO pad logic |
| <code>xtrig_ctp_req_in_dout_en_o</code>  | output    | [XtrigNumCtp-1:0] | SMU external port; connect to GPIO pad logic |
| <code>xtrig_ctp_req_in_din_i</code>      | input     | [XtrigNumCtp-1:0] | SMU external port; connect to GPIO pad logic |
| <code>xtrig_ctp_req_in_din_en_o</code>   | output    | [XtrigNumCtp-1:0] | SMU external port; connect to GPIO pad logic |
| <code>xtrig_ctp_ack_in_dout_o</code>     | output    | [XtrigNumCtp-1:0] | SMU external port; connect to GPIO pad logic |
| <code>xtrig_ctp_ack_in_dout_en_o</code>  | output    | [XtrigNumCtp-1:0] | SMU external port; connect to GPIO pad logic |
| <code>xtrig_ctp_ack_in_din_i</code>      | input     | [XtrigNumCtp-1:0] | SMU external port; connect to GPIO pad logic |
| <code>xtrig_ctp_ack_in_din_en_o</code>   | output    | [XtrigNumCtp-1:0] | SMU external port; connect to GPIO pad logic |
| <code>xtrig_ctp_ack_out_dout_o</code>    | output    | [XtrigNumCtp-1:0] | SMU external port; connect to GPIO pad logic |
| <code>xtrig_ctp_ack_out_dout_en_o</code> | output    | [XtrigNumCtp-1:0] | SMU external port; connect to GPIO pad logic |
| <code>xtrig_ctp_ack_out_din_i</code>     | input     | [XtrigNumCtp-1:0] | SMU external port; connect to GPIO pad logic |
| <code>xtrig_ctp_ack_out_din_en_o</code>  | output    | [XtrigNumCtp-1:0] | SMU external port; connect to GPIO pad logic |

## 10.8. SMC Port Mapping

The following tables define the complete SMC port list as connected within the SMU. Ports marked "SMU external port" are exposed on the SMU boundary. Ports marked with "DTP" or "SEP" are wired internally.

### 10.8.1. Clocks

| Port                      | Direction | Width | SMU Connection                                                   |
|---------------------------|-----------|-------|------------------------------------------------------------------|
| <code>clk_smc_i</code>    | input     | 1     | SMU <code>clk_smu_i</code> (shared with DTP <code>clk_i</code> ) |
| <code>clk_periph_i</code> | input     | 1     | SMU external port                                                |
| <code>clk_ref_i</code>    | input     | 1     | SMU external port                                                |

### 10.8.2. Resets

| Port                                | Direction | Width | SMU Connection                               |
|-------------------------------------|-----------|-------|----------------------------------------------|
| <code>rst_cold_ni</code>            | input     | 1     | SMU external port                            |
| <code>rst_primary_ref_clk_no</code> | output    | 1     | SMU external port                            |
| <code>rst_primary_smc_clk_no</code> | output    | 1     | SMU external port + DTP <code>rst_n_i</code> |

### 10.8.3. System AXI Input

| Port              | Direction | Width                            | SMU Connection    |
|-------------------|-----------|----------------------------------|-------------------|
| sys_axi_in_req_i  | input     | smc_sys_in_56_64_6_12_axi_req_t  | SMU external port |
| sys_axi_in_resp_o | output    | smc_sys_in_56_64_6_12_axi_resp_t | SMU external port |

### 10.8.4. JTAG AXI Input

| Port               | Direction | Width                          | SMU Connection         |
|--------------------|-----------|--------------------------------|------------------------|
| jtag_axi_in_req_i  | input     | smc_jtag_56_64_2_12_axi_req_t  | DTP axi_smc_dbg_req_o  |
| jtag_axi_in_resp_o | output    | smc_jtag_56_64_2_12_axi_resp_t | DTP axi_smc_dbg_resp_i |

### 10.8.5. SMC OTP JTAG AXI-Lite

| Port                     | Direction | Width             | SMU Connection               |
|--------------------------|-----------|-------------------|------------------------------|
| axil_smc_otp_jtag_req_i  | input     | efuse_axil_req_t  | DTP axil_smc_otp_jtag_req_o  |
| axil_smc_otp_jtag_resp_o | output    | efuse_axil_resp_t | DTP axil_smc_otp_jtag_resp_i |

### 10.8.6. SEP AXI Input

When **CFG.SEP=0**, the SEP AXI subordinate input is tied off to '0' and the response output is left unconnected. When **CFG.SEP=1**, the SMU drives this path from the SEP-to-SMC dedicated AXI connection.

| Port              | Direction | Width                            | SMU Connection                              |
|-------------------|-----------|----------------------------------|---------------------------------------------|
| sep_axi_in_req_i  | input     | smc_sep_in_56_64_6_12_axi_req_t  | Tied off to '0' (no incoming transactions)  |
| sep_axi_in_resp_o | output    | smc_sep_in_56_64_6_12_axi_resp_t | Unconnected (no transactions to respond to) |

### 10.8.7. AXI Output

| Port              | Direction | Width                             | SMU Connection    |
|-------------------|-----------|-----------------------------------|-------------------|
| output_axi_req_o  | output    | smc_sys_out_56_64_8_12_axi_req_t  | SMU external port |
| output_axi_resp_i | input     | smc_sys_out_56_64_8_12_axi_resp_t | SMU external port |

### 10.8.8. DTP CSR Interface

| Port                | Direction | Width                 | SMU Connection        |
|---------------------|-----------|-----------------------|-----------------------|
| axil_dtp_csr_req_o  | output    | smc_axil_32_32_req_t  | DTP axil_xtrig_req_i  |
| axil_dtp_csr_resp_i | input     | smc_axil_32_32_resp_t | DTP axil_xtrig_resp_o |

### 10.8.9. Adopter Peripheral Window AXI-Lite

| Port                | Direction | Width                 | SMU Connection                               |
|---------------------|-----------|-----------------------|----------------------------------------------|
| smc_external_req_o  | output    | smc_axil_32_32_req_t  | SMU external port (to adopter peripherals)   |
| smc_external_resp_i | input     | smc_axil_32_32_resp_t | SMU external port (from adopter peripherals) |

## 10.8.10. eFuse Interface

| Port                      | Direction | Width               | SMU Connection    |
|---------------------------|-----------|---------------------|-------------------|
| efuse_bank_ctrl_req_o     | output    | efuse_axil_req_t    | SMU external port |
| efuse_bank_ctrl_resp_i    | input     | efuse_axil_resp_t   | SMU external port |
| efuse_shim_command_req_o  | output    | fuse_command_req_t  | SMU external port |
| efuse_shim_command_resp_i | input     | fuse_command_resp_t | SMU external port |
| shadow_regs_o             | output    | efuse_map_t         | SMU external port |

## 10.8.11. GPIO Data Signals

| Port                    | Direction | Width              | SMU Connection    |
|-------------------------|-----------|--------------------|-------------------|
| lsio_interface_select_o | output    | [NumGpioWraps-1:0] | SMU external port |
| pad2core_i              | input     | [NumGpioWraps-1:0] | SMU external port |
| core2pad_o              | output    | [NumGpioWraps-1:0] | SMU external port |
| pad2core_en_o           | output    | [NumGpioWraps-1:0] | SMU external port |
| core2pad_en_o           | output    | [NumGpioWraps-1:0] | SMU external port |

## 10.8.12. GPIO External Pins

| Port                  | Direction | Width | SMU Connection    |
|-----------------------|-----------|-------|-------------------|
| rst_cool_n_from_pin_i | input     | 1     | SMU external port |

## 10.8.13. ATB Telemetry

| Port                | Direction | Width                                       | SMU Connection    |
|---------------------|-----------|---------------------------------------------|-------------------|
| clk_telemetry_i     | input     | 1                                           | SMU external port |
| rst_telemetry_ni    | input     | 1                                           | SMU external port |
| telemetry_atdata_i  | input     | telemetry_data_t[NumTelemetryReceivers-1:0] | SMU external port |
| telemetry_atid_i    | input     | atb_id_t[NumTelemetryReceivers-1:0]         | SMU external port |
| telemetry_atready_o | output    | [NumTelemetryReceivers-1:0]                 | SMU external port |
| telemetry_atvalid_i | input     | [NumTelemetryReceivers-1:0]                 | SMU external port |
| telemetry_afvalid_o | output    | [NumTelemetryReceivers-1:0]                 | SMU external port |
| telemetry_afready_i | input     | [NumTelemetryReceivers-1:0]                 | SMU external port |

## 10.8.14. DED/WDT

| Port                     | Direction | Width | SMU Connection    |
|--------------------------|-----------|-------|-------------------|
| smc_cluster_ded_o        | output    | 1     | SMU external port |
| smc_wdt_first_timeout_o  | output    | 1     | SMU external port |
| smc_wdt_second_timeout_o | output    | 1     | SMU external port |

## 10.8.15. Region Size

| Port                           | Direction | Width  | SMU Connection    |
|--------------------------------|-----------|--------|-------------------|
| <code>smc_region_size_o</code> | output    | [31:0] | SMU external port |

## 10.8.16. External Interrupts

| Port                                  | Direction | Width                    | SMU Connection                                                                                        |
|---------------------------------------|-----------|--------------------------|-------------------------------------------------------------------------------------------------------|
| <code>smc_ext_interrupts_i</code>     | input     | [NUM_EXT_INTERRUPTS-1:0] | SMU external port                                                                                     |
| <code>sep_mailbox_interrupts_i</code> | input     | [7:0]                    | Internal: from SEP <code>smc_mailbox_interrupt_o</code> when <code>CFG.SEP=1</code> , else tied to '0 |
| <code>sep_wdt_reset_n_i</code>        | input     | 1                        | Internal: <code>~sep_wdt_timer_rst_req</code> when <code>CFG.SEP=1</code> , else tied to 1b1          |

## 10.8.17. Fuse Signals

| Port                                    | Direction | Width | SMU Connection    |
|-----------------------------------------|-----------|-------|-------------------|
| <code>smc_fuse_sense_done_o</code>      | output    | 1     | SMU external port |
| <code>smc_fuse_reset_n_delayed_o</code> | output    | 1     | SMU external port |

## 10.8.18. DFT Signals

| Port                                  | Direction | Width | SMU Connection                                                                    |
|---------------------------------------|-----------|-------|-----------------------------------------------------------------------------------|
| <code>skip_mem_repair_o</code>        | output    | 1     | SMU external port                                                                 |
| <code>ext_boot_seq_done_i</code>      | input     | 1     | SMU external port                                                                 |
| <code>ext_boot_seq_done_qual_o</code> | output    | 1     | Internal: drives SEP <code>ext_boot_seq_done_i</code> when <code>CFG.SEP=1</code> |

## 10.8.19. Lifecycle State

| Port                         | Direction | Width                | SMU Connection                                                                                             |
|------------------------------|-----------|----------------------|------------------------------------------------------------------------------------------------------------|
| <code>lc_state_o</code>      | output    | [2*LcStateWidth-1:0] | SEP lifecycle state when <code>CFG.SEP=1</code> , else 8'hf0; ported through SMU                           |
| <code>lc_sigint_err_o</code> | output    | 1                    | Differential encoding error reported by the SEP (when <code>CFG.SEP=1</code> ) or the SMC efuse interface. |

## 10.8.20. Mailbox Interrupts

| Port                                      | Direction | Width              | SMU Connection    |
|-------------------------------------------|-----------|--------------------|-------------------|
| <code>smc_ext_mailbox_interrupts_o</code> | output    | [NumMailboxes-1:0] | SMU external port |

## 10.8.21. Reset Unit Signals

| Port                             | Direction | Width  | SMU Connection    |
|----------------------------------|-----------|--------|-------------------|
| <code>cfg_flr_pf_active_i</code> | input     | 1      | SMU external port |
| <code>isolate_req_o</code>       | output    | [31:0] | SMU external port |
| <code>ss_reset_complete_i</code> | input     | [31:0] | SMU external port |

| Port                         | Direction | Width                           | SMU Connection    |
|------------------------------|-----------|---------------------------------|-------------------|
| <code>ss_config_o</code>     | output    | [31:0]                          | SMU external port |
| <code>ss_reset_ctrl_o</code> | output    | <code>reset_ctrl_t[31:0]</code> | SMU external port |
| <code>sync_irq_o</code>      | output    | 1                               | SMU external port |

## 10.8.22. CPU Memory Signals

| Port                                       | Direction | Width                                  | SMU Connection    |
|--------------------------------------------|-----------|----------------------------------------|-------------------|
| <code>smc_rom_intf_req_o</code>            | output    | <code>rom_req_t</code>                 | SMU external port |
| <code>smc_rom_intf_rsp_i</code>            | input     | <code>rom_rsp_t</code>                 | SMU external port |
| <code>smc_scratch_ram_intf_req_o</code>    | output    | <code>scratch_ram_req_t[31:0]</code>   | SMU external port |
| <code>smc_scratch_ram_intf_rsp_i</code>    | input     | <code>scratch_ram_rsp_t[31:0]</code>   | SMU external port |
| <code>smc_l1_icache_tag_intf_req_o</code>  | output    | <code>l1_icache_tag_req_t[3:0]</code>  | SMU external port |
| <code>smc_l1_icache_tag_intf_rsp_i</code>  | input     | <code>l1_icache_tag_rsp_t[3:0]</code>  | SMU external port |
| <code>smc_l1_icache_data_intf_req_o</code> | output    | <code>l1_icache_data_req_t[7:0]</code> | SMU external port |
| <code>smc_l1_icache_data_intf_rsp_i</code> | input     | <code>l1_icache_data_rsp_t[7:0]</code> | SMU external port |
| <code>smc_l1_dcache_tag_intf_req_o</code>  | output    | <code>l1_dcache_tag_req_t[3:0]</code>  | SMU external port |
| <code>smc_l1_dcache_tag_intf_rsp_i</code>  | input     | <code>l1_dcache_tag_rsp_t[3:0]</code>  | SMU external port |
| <code>smc_l1_dcache_data_intf_req_o</code> | output    | <code>l1_dcache_data_req_t[3:0]</code> | SMU external port |
| <code>smc_l1_dcache_data_intf_rsp_i</code> | input     | <code>l1_dcache_data_rsp_t[3:0]</code> | SMU external port |

## 10.8.23. Memory Init

| Port                                      | Direction | Width | SMU Connection    |
|-------------------------------------------|-----------|-------|-------------------|
| <code>smc_disable_sram_auto_init_i</code> | input     | 1     | SMU external port |
| <code>smc_init_mem_done_o</code>          | output    | 1     | SMU external port |

## 10.8.24. System Timer OCTS Interface

| Port                       | Direction | Width  | SMU Connection    |
|----------------------------|-----------|--------|-------------------|
| <code>timer_count_o</code> | output    | [63:0] | SMU external port |

## 10.8.25. Reset Overrides (from DTP)

| Port                           | Direction | Width                                       | SMU Connection                                                                                                                                 |
|--------------------------------|-----------|---------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>jtag_reset_ctrl_i</code> | input     | <code>smc_pkg::jtag_smc_reset_ctrl_t</code> | DTP <code>jtag_ic_reset_smc_o</code> (packed struct with <code>.ovrd</code> override enables and <code>.val</code> active-low override values) |

## 10.8.26. DFD Signals

| Port                                      | Direction | Width | SMU Connection                       |
|-------------------------------------------|-----------|-------|--------------------------------------|
| <code>cla_gpio_enable_o</code>            | output    | 1     | SMU external port                    |
| <code>tdr_dbg_ctrl_clock_stop_en_i</code> | input     | 1     | DTP <code>cla_clock_stop_en_o</code> |

| Port                                              | Direction | Width | SMU Connection                                                                  |
|---------------------------------------------------|-----------|-------|---------------------------------------------------------------------------------|
| <code>tdr_dbg_ctrl_clocks_stopped_by_cla_o</code> | output    | 1     | DTP <code>xtrig_clk_stop_req_i[0]</code> (SMU connects SMC output to DTP input) |

## 10.8.27. Cross Trigger Interface

| Port                       | Direction | Width                            | SMU Connection                                                                            |
|----------------------------|-----------|----------------------------------|-------------------------------------------------------------------------------------------|
| <code>xtrigger_ss_i</code> | input     | <code>smc_pkg::xtrigger_t</code> | SMU internal: DTP <code>xtrig_ctm_src_req_o[1:0]</code> → SMC. Not an SMU external port.  |
| <code>xtrigger_ss_o</code> | output    | <code>smc_pkg::xtrigger_t</code> | SMU internal: SMC → DTP <code>xtrig_ctm_dst_req_i[1:0]</code> . Not an SMU external port. |

## 10.8.28. Trace Memory

| Port                          | Direction | Width                                               | SMU Connection    |
|-------------------------------|-----------|-----------------------------------------------------|-------------------|
| <code>trace_mem_req_o</code>  | output    | <code>SinkMemPktIn_s[TRC_RAM_INSTANCES-1:0]</code>  | SMU external port |
| <code>trace_mem_resp_i</code> | input     | <code>SinkMemPktOut_s[TRC_RAM_INSTANCES-1:0]</code> | SMU external port |

## 10.8.29. External Debug Bus

| Port                         | Direction | Width   | SMU Connection    |
|------------------------------|-----------|---------|-------------------|
| <code>ext_debug_bus_i</code> | input     | [127:0] | SMU external port |

## 10.8.30. Test Mode

| Port                     | Direction | Width | SMU Connection    |
|--------------------------|-----------|-------|-------------------|
| <code>test_en_i</code>   | input     | 1     | SMU external port |
| <code>scan_rst_ni</code> | input     | 1     | SMU external port |

# 10.9. SMC-DTP Internal Interconnection

The following table summarizes the key internal connections between the DTP and SMC within the SMU. These connections are not visible on the SMU boundary.

| Connection               | DTP Port                              | SMC Port                              | Direction | Notes                                                                                                                   |
|--------------------------|---------------------------------------|---------------------------------------|-----------|-------------------------------------------------------------------------------------------------------------------------|
| AXI Debug Bus            | <code>axi_smc_dbg_req_o</code>        | <code>jtag_axi_in_req_i</code>        | DTP → SMC |                                                                                                                         |
|                          | <code>axi_smc_dbg_resp_i</code>       | <code>jtag_axi_in_resp_o</code>       | SMC → DTP |                                                                                                                         |
| AXI OTP Bus              | <code>axil_smc_otp_jtag_req_o</code>  | <code>axil_smc_otp_jtag_req_i</code>  | DTP → SMC |                                                                                                                         |
|                          | <code>axil_smc_otp_jtag_resp_i</code> | <code>axil_smc_otp_jtag_resp_o</code> | SMC → DTP |                                                                                                                         |
| DTP CSR Bus              | <code>axil_xtrig_req_i</code>         | <code>axil_dtp_csr_req_o</code>       | SMC → DTP |                                                                                                                         |
|                          | <code>axil_xtrig_resp_o</code>        | <code>axil_dtp_csr_resp_i</code>      | DTP → SMC |                                                                                                                         |
| JTAG SMC Reset Overrides | <code>jtag_ic_reset_smc_o</code>      | <code>jtag_reset_ctrl_i</code>        | DTP → SMC | Packed <code>smc_pkg::jtag_smc_reset_ctrl_t</code> struct carrying all SMC reset override enables and active-low values |

| Connection                   | DTP Port                                                 | SMC Port                                          | Direction | Notes                                               |
|------------------------------|----------------------------------------------------------|---------------------------------------------------|-----------|-----------------------------------------------------|
| DTP Reset                    | <code>rst_n_i</code>                                     | <code>rst_primary_smc_clk_no</code>               | SMC → DTP |                                                     |
| Cross Trigger reserved lanes | <code>xtrig_ctm_dst_req_i[XtrigSmcIntCtLanes-1:0]</code> | <code>xtrigger_ss_o</code>                        | SMC → DTP | <code>smu_pkg::XtrigSmcIntCtLanes</code> DTP lanes  |
| Clock Stop reserved lane     | <code>xtrig_clk_stop_req_i[0]</code>                     | <code>tdr_dbg_ctrl_clocks_stopped_by_cla_o</code> | SMC → DTP | <code>smu_pkg::XtrigSmcClkStopLanes</code> DTP lane |
| Boot Stall                   | <code>jtag_boot_stall_ovrd_o</code>                      | <code>boot_stall_jtag_ovrd_i</code>               | DTP → SMC |                                                     |
|                              | <code>jtag_boot_stall_o</code>                           | <code>boot_stall_jtag_val_i</code>                | DTP → SMC |                                                     |

## 10.10. SEP-Conditional Wiring

SEP-related interfaces are handled internally within the SMU. Their behavior depends on `CFG.SEP`.

| Module/Signal       | Implementation                                                                                               | Description                                                                  |
|---------------------|--------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------|
| SMC SEP AXI Input   | <code>sep_axi_in_req_i</code> = SEP traffic when <code>CFG.SEP=1</code> , else '0                            | Dedicated SEP-to-SMC subordinate path                                        |
| DTP SEP OTP JTAG    | SEP <code>axil_sep_otp_jtag_*</code> when <code>CFG.SEP=1</code> , else <code>u_sep_otp_axil_err_slv</code>  | SEP OTP debug AXI-Lite path                                                  |
| DTP SEP STAP return | SEP <code>jtag_tdo_o</code> when <code>CFG.SEP=1</code> , else <code>sep_stap_tdo_to_dtp = 1'b0</code>       | SEP JTAG STAP return path                                                    |
| SMU                 | <code>sep_mailbox_interrupts</code>                                                                          | Internal SEP-to-SMC mailbox interrupts when <code>CFG.SEP=1</code> , else '0 |
| SMC                 | <code>sep_wdt_reset_n_i</code> = <code>~sep_wdt_timer_rst_req</code> when <code>CFG.SEP=1</code> , else 1'b1 | SEP watchdog reset input to SMC                                              |

### 10.10.1. Other Internal Tie-offs

| Module | Port                                                     | Tie-off Value | Reason                   |
|--------|----------------------------------------------------------|---------------|--------------------------|
| DTP    | <code>xtrig_ctm_src_ack_i[XtrigSmcIntCtLanes-1:0]</code> | '0            | SMC uses pulse-sync mode |

The remaining DTP `xtrig_ctm_src_ack_i` lanes (exposed as SMU `xtrig_ctm_src_ack_i[XTRIG_NUM_INT_CT-1:0]`) are ported out through the SMU. The integrator should tie off to '0 when using pulse-sync mode (`XTRIG_INT_CT_MODE` bit = 0), or connect to actual ack signals when using req/ack mode (bit = 1).

## 10.11. SMU Port Interface

The SMU exposes a single consolidated boundary that an adopter connects to at the chip or chiplet level. The following table defines all SMU top-level ports including clock, reset, JTAG, cross trigger, SMC-originated interfaces (AXI, GPIO, eFuse, PLL, PVT, memory), and SEP passthrough interfaces (memory macros, eFuse, crypto SRAM, SPI, AXI extension). Ports prefixed with `sep_` are only active when `CFG.SEP=1`.

Table 11. SMU Port Declaration

| Interface Name         | Type  | Direction | Width | Description                                                   | Connection          | Default value (if applicable) |
|------------------------|-------|-----------|-------|---------------------------------------------------------------|---------------------|-------------------------------|
| <code>clk_smu_i</code> | logic | Input     | 1     | Primary SMU clock domain. Shared by SMC and DTP system logic. | PLL output          | N/A                           |
| <code>clk_ref_i</code> | logic | Input     | 1     | Reference clock domain for timing-sensitive operations.       | PLL reference clock | N/A                           |

| Interface Name                  | Type                            | Direction | Width                       | Description                                                                                                                                                                                                                                                                                                        | Connection              | Default value (if applicable) |
|---------------------------------|---------------------------------|-----------|-----------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------|-------------------------------|
| rst_cold_ni                     | logic                           | Input     | 1                           | Cold reset (active low). Assertion and deassertion are synchronous to <code>clk_ref_i</code> and do not propagate while that clock is stopped. Assertion is de-glitched for 32 cycles. A falling <code>powergood_i</code> asserts the downstream cold reset without that wait. Deassertion is held for 255 cycles. | System cold reset       | N/A                           |
| rst_cold_stable_ref_clk_no      | logic                           | Output    | 1                           | Stable cold reset synchronized to reference clock domain (active low).                                                                                                                                                                                                                                             | Downstream subsystems   | N/A                           |
| powergood_i                     | logic                           | Input     | 1                           | Power-good indication from supply supervisor.                                                                                                                                                                                                                                                                      | Power supply supervisor | N/A                           |
| jtag_ptap_client_tap_ctrl_i     | prim_jtag_pkg::jtag_tap_ctrl_t  | Input     | -                           | Primary JTAG TAP control (TCK, TMS, TRST_N).                                                                                                                                                                                                                                                                       | External JTAG pads      | N/A                           |
| jtag_ptap_client_tdi_i          | logic                           | Input     | 1                           | Primary JTAG TDI.                                                                                                                                                                                                                                                                                                  | External JTAG pads      | N/A                           |
| jtag_ptap_client_tdo_o          | logic                           | Output    | 1                           | Primary JTAG TDO.                                                                                                                                                                                                                                                                                                  | External JTAG pads      | N/A                           |
| jtag_ptap_client_tdo_oen_o      | logic                           | Output    | 1                           | Primary JTAG TDO output enable.                                                                                                                                                                                                                                                                                    | External JTAG pads      | N/A                           |
| jtag_bsr_host_scan_ctrl_o       | prim_jtag_pkg::jtag_scan_ctrl_t | Output    | -                           | Boundary scan control.                                                                                                                                                                                                                                                                                             | Boundary scan chain     | N/A                           |
| jtag_bsr_host_scan_in_i         | logic                           | Input     | 1                           | Boundary scan data in.                                                                                                                                                                                                                                                                                             | Boundary scan chain     | N/A                           |
| jtag_bsr_host_scan_out_o        | logic                           | Output    | 1                           | Boundary scan data out.                                                                                                                                                                                                                                                                                            | Boundary scan chain     | N/A                           |
| jtag_stap_io_host_tap_ctrl_o    | prim_jtag_pkg::jtag_tap_ctrl_t  | Output    | -                           | I/O STAP TAP control.                                                                                                                                                                                                                                                                                              | I/O STAP host           | N/A                           |
| jtag_stap_io_host_tdi_i         | logic                           | Input     | 1                           | I/O STAP TDI.                                                                                                                                                                                                                                                                                                      | I/O STAP host           | Tie to '0 if unused           |
| jtag_stap_io_host_tdo_o         | logic                           | Output    | 1                           | I/O STAP TDO.                                                                                                                                                                                                                                                                                                      | I/O STAP host           | N/A                           |
| jtag_stap_io_host_tdo_oen_o     | logic                           | Output    | 1                           | I/O STAP TDO output enable.                                                                                                                                                                                                                                                                                        | I/O STAP host           | N/A                           |
| jtag_stap_extra_host_tap_ctrl_o | prim_jtag_pkg::jtag_tap_ctrl_t  | Output    | [JtagNumExtraStapPorts-1:0] | Extra STAP TAP control array.                                                                                                                                                                                                                                                                                      | Extra STAP hosts        | Tie to '0 if unused           |
| jtag_stap_extra_host_tdi_i      | logic                           | Input     | [JtagNumExtraStapPorts-1:0] | Extra STAP TDI array.                                                                                                                                                                                                                                                                                              | Extra STAP hosts        | Tie to '0 if unused           |
| jtag_stap_extra_host_tdo_o      | logic                           | Output    | [JtagNumExtraStapPorts-1:0] | Extra STAP TDO array.                                                                                                                                                                                                                                                                                              | Extra STAP hosts        | N/A                           |
| jtag_stap_extra_host_tdo_oen_o  | logic                           | Output    | [JtagNumExtraStapPorts-1:0] | Extra STAP TDO output enable array.                                                                                                                                                                                                                                                                                | Extra STAP hosts        | N/A                           |
| jtag_stap_host_scan_ctrl_o      | prim_jtag_pkg::jtag_scan_ctrl_t | Output    | -                           | Extended STAP scan control.                                                                                                                                                                                                                                                                                        | STAP scan chain         | N/A                           |
| jtag_stap_host_scan_in_i        | logic                           | Input     | 1                           | Extended STAP scan data in.                                                                                                                                                                                                                                                                                        | STAP scan chain         | N/A                           |
| jtag_stap_host_scan_out_o       | logic                           | Output    | 1                           | Extended STAP scan data out.                                                                                                                                                                                                                                                                                       | STAP scan chain         | N/A                           |
| jtag_dfd_host_scan_ctrl_o       | prim_jtag_pkg::jtag_scan_ctrl_t | Output    | -                           | DFD iJTAG scan control.                                                                                                                                                                                                                                                                                            | DFD iJTAG chain         | N/A                           |

| Interface Name                   | Type                                          | Direction | Width                       | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    | Connection                         | Default value (if applicable) |
|----------------------------------|-----------------------------------------------|-----------|-----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------|-------------------------------|
| jtag_dfd_host_scan_in_i          | logic                                         | Input     | 1                           | DFD iJTAG scan data in.                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | DFD iJTAG chain                    | N/A                           |
| jtag_dfd_host_scan_out_o         | logic                                         | Output    | 1                           | DFD iJTAG scan data out.                                                                                                                                                                                                                                                                                                                                                                                                                                                                       | DFD iJTAG chain                    | N/A                           |
| jtag_dft_secure_host_scan_ctrl_o | prim_jtag_pkg::jtag_scan_ctrl_t               | Output    | -                           | Secure DFT iJTAG scan control.                                                                                                                                                                                                                                                                                                                                                                                                                                                                 | Secure DFT iJTAG chain             | N/A                           |
| jtag_dft_secure_host_scan_in_i   | logic                                         | Input     | 1                           | Secure DFT iJTAG scan data in.                                                                                                                                                                                                                                                                                                                                                                                                                                                                 | Secure DFT iJTAG chain             | N/A                           |
| jtag_dft_secure_host_scan_out_o  | logic                                         | Output    | 1                           | Secure DFT iJTAG scan data out.                                                                                                                                                                                                                                                                                                                                                                                                                                                                | Secure DFT iJTAG chain             | N/A                           |
| jtag_dft_host_scan_ctrl_o        | prim_jtag_pkg::jtag_scan_ctrl_t               | Output    | -                           | Non-secure DFT iJTAG scan control.                                                                                                                                                                                                                                                                                                                                                                                                                                                             | Non-secure DFT iJTAG chain         | N/A                           |
| jtag_dft_host_scan_in_i          | logic                                         | Input     | 1                           | Non-secure DFT iJTAG scan data in.                                                                                                                                                                                                                                                                                                                                                                                                                                                             | Non-secure DFT iJTAG chain         | N/A                           |
| jtag_dft_host_scan_out_o         | logic                                         | Output    | 1                           | Non-secure DFT iJTAG scan data out.                                                                                                                                                                                                                                                                                                                                                                                                                                                            | Non-secure DFT iJTAG chain         | N/A                           |
| dtp_stop_clks_o                  | logic                                         | Output    | 1                           | Clock stop output from DTP (JTAG_DEBUG_CONTROL or CLA clock-stop).                                                                                                                                                                                                                                                                                                                                                                                                                             | PLL clock gates                    | N/A                           |
| jtag_ptap_state_o                | jtag_tap_pkg::tap_state_e                     | Output    | -                           | Current PTAP TAP state.                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | Debug infrastructure               | N/A                           |
| jtag_ptap_inst_decoded_o         | jtag_inst_reg_pkg::jtag_instruction_decoded_e | Output    | -                           | Current decoded PTAP instruction.                                                                                                                                                                                                                                                                                                                                                                                                                                                              | Debug infrastructure               | N/A                           |
| jtag_ic_reset_ext_o              | ic_reset_ext_t                                | Output    | $\$bits(ic\_reset\_ext\_t)$ | External JTAG IC_RESET override slice. Integrator-defined packed struct with <code>.ovrd</code> override enables and <code>.val</code> active-low override values. Driven by the DTP's <code>jtag_ic_reset_ext_o</code> when <code>CFG.JTAG_IC_RESET_ENABLE=1</code> , otherwise tied to '0. An integrator needing JTAG reset overrides for logic outside the SMU sets <code>ic_reset_ext_t</code> to their own override struct and routes this port to it; the SMU does not define that type. | Integrator-defined reset overrides | N/A                           |
| xtrig_ctm_src_req_o              | logic                                         | Output    | $[XtrigNumIntCt-1:0]$       | Cross trigger source requests. The SMU exposes DTP lanes above the SMC reservation ( <code>smu_pkg::XtrigSmcIntCtLanes</code> ).                                                                                                                                                                                                                                                                                                                                                               | Cross trigger network              | N/A                           |
| xtrig_ctm_src_ack_i              | logic                                         | Input     | $[XtrigNumIntCt-1:0]$       | Cross trigger source acknowledges. Unused in pulse-sync mode (mode bit = 0).                                                                                                                                                                                                                                                                                                                                                                                                                   | Cross trigger network              | Tie to '0 in pulse-sync mode  |
| xtrig_ctm_dst_req_i              | logic                                         | Input     | $[XtrigNumIntCt-1:0]$       | Cross trigger destination requests. The SMU exposes DTP lanes above the SMC reservation.                                                                                                                                                                                                                                                                                                                                                                                                       | Cross trigger network              | Tie to '0 if unused           |
| xtrig_ctm_dst_ack_o              | logic                                         | Output    | $[XtrigNumIntCt-1:0]$       | Cross trigger destination acknowledges. Unused in pulse-sync mode.                                                                                                                                                                                                                                                                                                                                                                                                                             | Cross trigger network              | N/A                           |
| xtrig_clk_stop_req_i             | logic                                         | Input     | $[XtrigNumClkStopReq-1:0]$  | Clock stop requests. The SMU exposes DTP lanes above the SMC reservation ( <code>smu_pkg::XtrigSmcClkStopLanes</code> ).                                                                                                                                                                                                                                                                                                                                                                       | Clock stop requesters              | Tie to '0 if unused           |
| xtrig_ctp_req_out_dout_o         | logic                                         | Output    | $[XtrigNumCtp-1:0]$         | CTP request-out data output.                                                                                                                                                                                                                                                                                                                                                                                                                                                                   | GPIO pad ring                      | N/A                           |
| xtrig_ctp_req_out_dout_en_o      | logic                                         | Output    | $[XtrigNumCtp-1:0]$         | CTP request-out data output enable.                                                                                                                                                                                                                                                                                                                                                                                                                                                            | GPIO pad ring                      | N/A                           |
| xtrig_ctp_req_out_din_i          | logic                                         | Input     | $[XtrigNumCtp-1:0]$         | CTP request-out data input.                                                                                                                                                                                                                                                                                                                                                                                                                                                                    | GPIO pad ring                      | Tie to '0 if unused           |

| Interface Name                | Type                               | Direction | Width             | Description                                                          | Connection            | Default value (if applicable) |
|-------------------------------|------------------------------------|-----------|-------------------|----------------------------------------------------------------------|-----------------------|-------------------------------|
| xtrig_ctp_req_out_din_en_o    | logic                              | Output    | [XtrigNumCtp-1:0] | CTP request-out data input enable.                                   | GPIO pad ring         | N/A                           |
| xtrig_ctp_req_in_dout_o       | logic                              | Output    | [XtrigNumCtp-1:0] | CTP request-in data output.                                          | GPIO pad ring         | N/A                           |
| xtrig_ctp_req_in_dout_en_o    | logic                              | Output    | [XtrigNumCtp-1:0] | CTP request-in data output enable.                                   | GPIO pad ring         | N/A                           |
| xtrig_ctp_req_in_din_i        | logic                              | Input     | [XtrigNumCtp-1:0] | CTP request-in data input.                                           | GPIO pad ring         | Tie to '0 if unused           |
| xtrig_ctp_req_in_din_en_o     | logic                              | Output    | [XtrigNumCtp-1:0] | CTP request-in data input enable.                                    | GPIO pad ring         | N/A                           |
| xtrig_ctp_ack_in_dout_o       | logic                              | Output    | [XtrigNumCtp-1:0] | CTP ack-in data output.                                              | GPIO pad ring         | N/A                           |
| xtrig_ctp_ack_in_dout_en_o    | logic                              | Output    | [XtrigNumCtp-1:0] | CTP ack-in data output enable.                                       | GPIO pad ring         | N/A                           |
| xtrig_ctp_ack_in_din_i        | logic                              | Input     | [XtrigNumCtp-1:0] | CTP ack-in data input.                                               | GPIO pad ring         | Tie to '0 if unused           |
| xtrig_ctp_ack_in_din_en_o     | logic                              | Output    | [XtrigNumCtp-1:0] | CTP ack-in data input enable.                                        | GPIO pad ring         | N/A                           |
| xtrig_ctp_ack_out_dout_o      | logic                              | Output    | [XtrigNumCtp-1:0] | CTP ack-out data output.                                             | GPIO pad ring         | N/A                           |
| xtrig_ctp_ack_out_dout_en_o   | logic                              | Output    | [XtrigNumCtp-1:0] | CTP ack-out data output enable.                                      | GPIO pad ring         | N/A                           |
| xtrig_ctp_ack_out_din_i       | logic                              | Input     | [XtrigNumCtp-1:0] | CTP ack-out data input.                                              | GPIO pad ring         | Tie to '0 if unused           |
| xtrig_ctp_ack_out_din_en_o    | logic                              | Output    | [XtrigNumCtp-1:0] | CTP ack-out data input enable.                                       | GPIO pad ring         | N/A                           |
| rst_primary_ref_clk_no        | logic                              | Output    | 1                 | Primary reset synchronized to reference clock domain (active low).   | Downstream subsystems | N/A                           |
| rst_primary_smc_clk_no        | logic                              | Output    | 1                 | Primary reset synchronized to SMC clock domain (active low).         | Downstream subsystems | N/A                           |
| smu_axi_in_req_i              | smu_axi_xbar_pkg::axi_56_64_req_t  | Input     | -                 | SMU AXI crossbar inbound request (from SMN).                         | SMN fabric            | Tie to '0 if unused           |
| smu_axi_in_resp_o             | smu_axi_xbar_pkg::axi_56_64_resp_t | Output    | -                 | SMU AXI crossbar inbound response.                                   | SMN fabric            | N/A                           |
| smu_axi_out_req_o             | smu_axi_xbar_pkg::axi_out_req_t    | Output    | -                 | SMU AXI crossbar outbound request (to SMN).                          | SMN fabric            | N/A                           |
| smu_axi_out_resp_i            | smu_axi_xbar_pkg::axi_out_resp_t   | Input     | -                 | SMU AXI crossbar outbound response.                                  | SMN fabric            | Tie to '0 if unused           |
| smc_external_req_o            | smc_pkg::smc_axil_32_req_t         | Output    | -                 | SMC AXI-Lite external port request for adopter peripheral expansion. | Adopter peripherals   | N/A                           |
| smc_external_resp_i           | smc_pkg::smc_axil_32_resp_t        | Input     | -                 | SMC AXI-Lite external port response.                                 | Adopter peripherals   | Tie to DECERR if unused       |
| smc_efuse_bank_ctrl_req_o     | smc_pkg::smc_axil_32_req_t         | Output    | -                 | SMC eFuse bank control AXI-Lite request.                             | eFuse shim            | N/A                           |
| smc_efuse_bank_ctrl_resp_i    | smc_pkg::smc_axil_32_resp_t        | Input     | -                 | SMC eFuse bank control AXI-Lite response.                            | eFuse shim            | N/A                           |
| smc_efuse_shim_command_req_o  | smc_efuse_pkg::fuse_command_req_t  | Output    | -                 | SMC eFuse command interface request.                                 | eFuse shim            | N/A                           |
| smc_efuse_shim_command_resp_i | smc_efuse_pkg::fuse_command_resp_t | Input     | -                 | SMC eFuse command interface response.                                | eFuse shim            | N/A                           |

| Interface Name             | Type                                     | Direction | Width                       | Description                                     | Connection             | Default value (if applicable) |
|----------------------------|------------------------------------------|-----------|-----------------------------|-------------------------------------------------|------------------------|-------------------------------|
| smc_shadow_regs_o          | smc_efuse_pkg::efuse_map_t               | Output    | -                           | SMC eFuse shadow register output.               | External systems       | N/A                           |
| pll_clk_obs_i              | logic                                    | Input     | 1                           | PLL clock observation input.                    | PLL shim               | N/A                           |
| pll_clk_obs_en_i           | logic                                    | Input     | 1                           | PLL clock observation enable.                   | Control logic          | N/A                           |
| pvt_process_clk_obs_i      | logic                                    | Input     | 1                           | PVT process monitor clock observation input.    | PVT shim               | N/A                           |
| pvt_process_clk_obs_en_i   | logic                                    | Input     | 1                           | PVT process monitor clock observation enable.   | Control logic          | N/A                           |
| cat_therm_i                | logic                                    | Input     | 1                           | CAT thermal sensor input.                       | CAT thermal sensor     | Tie to '0 if unused           |
| lsio_interface_select_o    | logic                                    | Output    | [NumGpioWraps-1:0]          | LSIO interface selection.                       | GPIO padding           | N/A                           |
| pad2core_i                 | logic                                    | Input     | [NumGpioWraps-1:0]          | GPIO input data from pad ring to core.          | GPIO padding → SMU     | N/A                           |
| core2pad_o                 | logic                                    | Output    | [NumGpioWraps-1:0]          | GPIO output data from core to pad ring.         | SMU → GPIO padding     | N/A                           |
| pad2core_en_o              | logic                                    | Output    | [NumGpioWraps-1:0]          | GPIO pad-to-core path enable.                   | SMU → GPIO padding     | N/A                           |
| core2pad_en_o              | logic                                    | Output    | [NumGpioWraps-1:0]          | GPIO core-to-pad path enable.                   | SMU → GPIO padding     | N/A                           |
| rst_cool_n_from_pin_i      | logic                                    | Input     | 1                           | Cool reset input from GPIO pin.                 | GPIO pin               | N/A                           |
| clk_telemetry_i            | logic                                    | Input     | 1                           | Telemetry clock domain for ATB data collection. | Telemetry clock source | N/A                           |
| rst_telemetry_n_i          | logic                                    | Input     | 1                           | Telemetry reset (active low).                   | Telemetry reset source | N/A                           |
| telemetry_atdata_i         | telemetry_receiver_pkg::telemetry_data_t | Input     | [NumTelemetryReceivers-1:0] | ATB telemetry data input array.                 | ATB sources            | N/A                           |
| telemetry_atid_i           | telemetry_receiver_pkg::atb_id_t         | Input     | [NumTelemetryReceivers-1:0] | ATB telemetry ID input array.                   | ATB sources            | N/A                           |
| telemetry_atready_o        | logic                                    | Output    | [NumTelemetryReceivers-1:0] | ATB telemetry ready output.                     | ATB sources            | N/A                           |
| telemetry_atvalid_i        | logic                                    | Input     | [NumTelemetryReceivers-1:0] | ATB telemetry valid input.                      | ATB sources            | N/A                           |
| telemetry_atflushvalid_o   | logic                                    | Output    | [NumTelemetryReceivers-1:0] | ATB flush valid output.                         | ATB sources            | N/A                           |
| telemetry_atflushready_i   | logic                                    | Input     | [NumTelemetryReceivers-1:0] | ATB flush ready input.                          | ATB sources            | N/A                           |
| smc_cluster_double_error_o | logic                                    | Output    | 1                           | Cluster double error detection output.          | External systems       | N/A                           |
| smc_wdt_first_timeout_o    | logic                                    | Output    | 1                           | First watchdog timeout signal.                  | Reset unit             | N/A                           |
| smc_wdt_second_timeout_o   | logic                                    | Output    | 1                           | Second watchdog timeout signal.                 | External systems       | N/A                           |
| smc_region_size_o          | logic                                    | Output    | [31:0]                      | SMC address region size output.                 | External systems       | N/A                           |

| Interface Name               | Type                             | Direction | Width                    | Description                                                                                                                                                                            | Connection                      | Default value (if applicable) |
|------------------------------|----------------------------------|-----------|--------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------|-------------------------------|
| smc_ext_interrupts_i         | logic                            | Input     | [CFG.NUM_INT_TO_SMC-1:0] | External interrupt inputs to SMC. Active-high level or a pulse long enough to be sampled on <code>clk_smc</code> .                                                                     | External interrupt sources      | Tie to '0 if unused           |
| smc_fuse_sense_done_o        | logic                            | Output    | 1                        | SMC fuse sense completion output.                                                                                                                                                      | Memory repair logic             | N/A                           |
| smc_fuse_reset_n_delayed_o   | logic                            | Output    | 1                        | Delayed fuse reset output.                                                                                                                                                             | External systems                | N/A                           |
| skip_mem_repair_o            | logic                            | Output    | 1                        | Skip memory repair output.                                                                                                                                                             | Memory repair logic             | N/A                           |
| ext_boot_sequence_i          | logic                            | Input     | 1                        | Asynchronous external boot sequence completion (memory repair and shadow register override done). Connect only to SMC; qualified internally and fanned to SEP.                         | External boot/repair controller | N/A                           |
| lc_state_o                   | logic                            | Output    | [2*LcStateWidth-1:0]     | Lifecycle state output (driven by SEP when <code>CFG.SEP=1</code> , else <code>8'hf0</code> ).                                                                                         | External systems                | N/A                           |
| lc_sigint_err_o              | logic                            | Output    | 1                        | Lifecycle signal integrity error.                                                                                                                                                      | External systems                | N/A                           |
| smc_ndmreset_request_i       | logic                            | Input     | [CpuClusterCount-1:0]    | NDM reset request from external CPU cluster <i>i</i> on bit <i>i</i> .                                                                                                                 | External CPU clusters           | Tie to '0 if unused           |
| smc_ndmreset_process_o       | logic                            | Output    | [CpuClusterCount-1:0]    | Firmware response to external CPU cluster <i>i</i> on bit <i>i</i> .                                                                                                                   | SMC → external CPU clusters     | N/A                           |
| smc_ext_mailbox_interrupts_o | logic                            | Output    | [NumMailboxes-1:0]       | External mailbox interrupt outputs.                                                                                                                                                    | External targets                | N/A                           |
| cfg_flr_pf_active_i          | logic                            | Input     | 1                        | Function Level Reset (FLR) PF active signal.                                                                                                                                           | PCIe / system                   | Tie to '0 if unused           |
| isolate_req_o                | logic                            | Output    | [31:0]                   | Isolation request output for 32 subsystems.                                                                                                                                            | Subsystems                      | N/A                           |
| ss_reset_complete_i          | logic                            | Input     | [31:0]                   | Subsystem reset completion status.                                                                                                                                                     | Subsystems                      | 32'hFFFFFFFF                  |
| ss_config_o                  | logic                            | Output    | [31:0]                   | Subsystem configuration output.                                                                                                                                                        | Subsystems                      | N/A                           |
| ss_reset_ctrl_o              | smc_reset_unit_pkg::reset_ctrl_t | Output    | [31:0]                   | Subsystem reset control output array.                                                                                                                                                  | Subsystems                      | N/A                           |
| sync_irq_o                   | logic                            | Output    | 1                        | Software-controlled global synchronisation bit ( <code>SYNC_REG.sync</code> in the SMC reset unit). Not an interrupt aggregate output.                                                 | External systems                | N/A                           |
| gpio_interrupt_o             | logic                            | Output    | [NumGpioWraps-1:0]       | Raw GPIO interrupt vector from the padding, one bit per GPIO wrap (bonded + unbonded). Passed through from SMC. Software reads GPIO status registers to identify the interrupt source. | SMC → external consumers        | N/A, leave floating if unused |
| uart_interrupt_o             | logic                            | Output    | [NumUart-1:0]            | Raw UART interrupt outputs, one bit per UART instance, in the peripheral clock domain. Passed through from SMC.                                                                        | SMC → external consumers        | N/A, leave floating if unused |
| smc_rom_intf_req_o           | rom_req_t                        | Output    | -                        | SMC ROM memory interface request.                                                                                                                                                      | Boot ROM                        | N/A                           |
| smc_rom_intf_rsp_i           | rom_rsp_t                        | Input     | -                        | SMC ROM memory interface response.                                                                                                                                                     | Boot ROM                        | N/A                           |
| smc_scratch_ram_intf_req_o   | scratch_ram_req_t                | Output    | [31:0]                   | SMC scratch RAM interface requests.                                                                                                                                                    | Scratch RAM banks               | N/A                           |
| smc_scratch_ram_intf_rsp_i   | scratch_ram_rsp_t                | Input     | [31:0]                   | SMC scratch RAM interface responses.                                                                                                                                                   | Scratch RAM banks               | N/A                           |

| Interface Name                | Type                               | Direction | Width                   | Description                                                                   | Connection          | Default value (if applicable) |
|-------------------------------|------------------------------------|-----------|-------------------------|-------------------------------------------------------------------------------|---------------------|-------------------------------|
| smc_l1_icache_tag_intf_req_o  | l1_icache_tag_req_t                | Output    | [3:0]                   | SMC L1 I-cache tag interface requests.                                        | I-cache tag banks   | N/A                           |
| smc_l1_icache_tag_intf_rsp_i  | l1_icache_tag_rsp_t                | Input     | [3:0]                   | SMC L1 I-cache tag interface responses.                                       | I-cache tag banks   | N/A                           |
| smc_l1_icache_data_intf_req_o | l1_icache_data_req_t               | Output    | [7:0]                   | SMC L1 I-cache data interface requests.                                       | I-cache data banks  | N/A                           |
| smc_l1_icache_data_intf_rsp_i | l1_icache_data_rsp_t               | Input     | [7:0]                   | SMC L1 I-cache data interface responses.                                      | I-cache data banks  | N/A                           |
| smc_l1_dcache_tag_intf_req_o  | l1_dcache_tag_req_t                | Output    | [3:0]                   | SMC L1 D-cache tag interface requests.                                        | D-cache tag banks   | N/A                           |
| smc_l1_dcache_tag_intf_rsp_i  | l1_dcache_tag_rsp_t                | Input     | [3:0]                   | SMC L1 D-cache tag interface responses.                                       | D-cache tag banks   | N/A                           |
| smc_l1_dcache_data_intf_req_o | l1_dcache_data_req_t               | Output    | [3:0]                   | SMC L1 D-cache data interface requests.                                       | D-cache data banks  | N/A                           |
| smc_l1_dcache_data_intf_rsp_i | l1_dcache_data_rsp_t               | Input     | [3:0]                   | SMC L1 D-cache data interface responses.                                      | D-cache data banks  | N/A                           |
| smc_disable_sram_auto_init_i  | logic                              | Input     | 1                       | Disable SRAM automatic initialization.                                        | Control logic       | 1'b0                          |
| smc_init_mem_done_o           | logic                              | Output    | 1                       | Memory initialization completion signal.                                      | Control logic       | N/A                           |
| chiplet_is_primary_i          | logic                              | Input     | 1                       | Chiplet is primary (for System Timer OCTS).                                   | GPIO padring straps | N/A                           |
| timer_count_o                 | logic                              | Output    | [63:0]                  | 64-bit system timer count output (OCTS).                                      | External systems    | N/A                           |
| trace_mem_req_o               | dfd_trace_mem_pkg::SinkMemPktIn_s  | Output    | [TRC_RAM_INSTANCES-1:0] | Trace memory interface requests.                                              | Trace memory        | N/A                           |
| trace_mem_resp_i              | dfd_trace_mem_pkg::SinkMemPktOut_s | Input     | [TRC_RAM_INSTANCES-1:0] | Trace memory interface responses.                                             | Trace memory        | N/A                           |
| test_en_i                     | logic                              | Input     | 1                       | DFT/scan test-enable. Drives clock-gater test ports and AXI cell test inputs. | Test controller     | 1'b0                          |
| scan_rst_ni                   | logic                              | Input     | 1                       | Scan reset (active-low). Bypasses reset synchronizers during DFT.             | Test controller     | 1'b1                          |
| mem_repair_done_i             | logic                              | Input     | 1                       | Memory repair done indicator.                                                 | DFT controller      | 1'b0                          |
| mem_repair_success_i          | logic                              | Input     | 1                       | Memory repair success indicator.                                              | DFT controller      | 1'b0                          |
| mem_repair_abort_i            | logic                              | Input     | 1                       | Memory repair abort indicator.                                                | DFT controller      | 1'b0                          |
| mbist_done_i                  | logic                              | Input     | 1                       | MBIST done indicator.                                                         | DFT controller      | 1'b0                          |
| mbist_pass_i                  | logic                              | Input     | 1                       | MBIST pass indicator.                                                         | DFT controller      | 1'b0                          |
| mbist_abort_i                 | logic                              | Input     | 1                       | MBIST abort indicator.                                                        | DFT controller      | 1'b0                          |
| sep_sram_req_o                | sep_pkg::sep_sram_req_t            | Output    | -                       | SEP scratch SRAM request passthrough.                                         | SEP SRAM macros     | N/A                           |
| sep_sram_rsp_i                | sep_pkg::sep_sram_rsp_t            | Input     | -                       | SEP scratch SRAM response passthrough.                                        | SEP SRAM macros     | N/A                           |
| sep_boot_rom_req_o            | sep_pkg::sep_sram_req_t            | Output    | -                       | SEP boot ROM request passthrough.                                             | SEP ROM macro       | N/A                           |
| sep_boot_rom_rsp_i            | sep_pkg::sep_sram_rsp_t            | Input     | -                       | SEP boot ROM response passthrough.                                            | SEP ROM macro       | N/A                           |

| Interface Name                 | Type                                           | Direction | Width | Description                                                                                                                           | Connection                 | Default value (if applicable) |
|--------------------------------|------------------------------------------------|-----------|-------|---------------------------------------------------------------------------------------------------------------------------------------|----------------------------|-------------------------------|
| sep_cpu_tcm_req_o              | sep_pkg::sep_cpu_tcm_req_t                     | Output    | -     | SEP CPU TCM request passthrough (ICCM + DCCM).                                                                                        | SEP SRAM macros            | N/A                           |
| sep_cpu_tcm_rsp_i              | sep_pkg::sep_cpu_tcm_rsp_t                     | Input     | -     | SEP CPU TCM response passthrough.                                                                                                     | SEP SRAM macros            | N/A                           |
| sep_efuse_bank_ctrl_req_o      | sep_efuse_pkg::efuse_axil_req_t                | Output    | -     | SEP eFuse bank control AXI-Lite request passthrough.                                                                                  | SEP eFuse shim             | N/A                           |
| sep_efuse_bank_ctrl_rsp_i      | sep_efuse_pkg::efuse_axil_rsp_t                | Input     | -     | SEP eFuse bank control AXI-Lite response passthrough.                                                                                 | SEP eFuse shim             | N/A                           |
| sep_efuse_shim_command_req_o   | sep_efuse_pkg::fuse_command_req_t              | Output    | -     | SEP eFuse command interface request passthrough.                                                                                      | SEP eFuse shim             | N/A                           |
| sep_efuse_shim_command_rsp_i   | sep_efuse_pkg::fuse_command_rsp_t              | Input     | -     | SEP eFuse command interface response passthrough.                                                                                     | SEP eFuse shim             | N/A                           |
| sep_crypto_pka_imem_sram_req_o | sep_crypto_pkg::sep_crypto_pka_imem_sram_req_t | Output    | -     | SEP OTBN PKA instruction memory SRAM request passthrough.                                                                             | SRAM macro                 | N/A                           |
| sep_crypto_pka_imem_sram_rsp_i | sep_crypto_pkg::sep_crypto_pka_imem_sram_rsp_t | Input     | -     | SEP OTBN PKA instruction memory SRAM response passthrough.                                                                            | SRAM macro                 | N/A                           |
| sep_crypto_pka_dmem_sram_req_o | sep_crypto_pkg::sep_crypto_pka_dmem_sram_req_t | Output    | -     | SEP OTBN PKA data memory SRAM request passthrough.                                                                                    | SRAM macro                 | N/A                           |
| sep_crypto_pka_dmem_sram_rsp_i | sep_crypto_pkg::sep_crypto_pka_dmem_sram_rsp_t | Input     | -     | SEP OTBN PKA data memory SRAM response passthrough.                                                                                   | SRAM macro                 | N/A                           |
| sep_km_rom_mem_req_o           | km_intf_pkg::km_rom_mem_req_t                  | Output    | -     | SEP Key Manager ROM memory request passthrough.                                                                                       | ROM macro                  | N/A                           |
| sep_km_rom_mem_rsp_i           | km_intf_pkg::km_rom_mem_rsp_t                  | Input     | -     | SEP Key Manager ROM memory response passthrough.                                                                                      | ROM macro                  | N/A                           |
| sep_km_sram_mem_req_o          | km_intf_pkg::km_sram_mem_req_t                 | Output    | -     | SEP Key Manager SRAM memory request passthrough.                                                                                      | SRAM macro                 | N/A                           |
| sep_km_sram_mem_rsp_i          | km_intf_pkg::km_sram_mem_rsp_t                 | Input     | -     | SEP Key Manager SRAM memory response passthrough.                                                                                     | SRAM macro                 | N/A                           |
| sep_external_req_o             | sep_pkg::sep_32_64_6_12_axi_req_t              | Output    | -     | SEP AXI extension port request passthrough.                                                                                           | Adopter peripherals        | N/A                           |
| sep_external_rsp_i             | sep_pkg::sep_32_64_6_12_axi_rsp_t              | Input     | -     | SEP AXI extension port response passthrough.                                                                                          | Adopter peripherals        | Tie to DECERR if unused       |
| sep_cpu_trace_o                | sep_pkg::sep_cpu_trace_t                       | Output    | -     | SEP CPU trace output.                                                                                                                 | Trace infrastructure       | N/A                           |
| sep_lockstep_ctrl_i            | sep_pkg::sep_lockstep_ctrl_t                   | Input     | -     | SEP CPU lockstep controls, passed through to the SEP. Inert unless the SEP core is built with <b>RV_LOCKSTEP_ENABLE</b> .             | Chip-level RAS control     | Tie to '0 if unused           |
| sep_lockstep_status_o          | sep_pkg::sep_lockstep_status_t                 | Output    | -     | SEP CPU lockstep status. Reads 0 when the SEP is absent ( <b>CFG.SEP=0</b> ) or the core is built without <b>RV_LOCKSTEP_ENABLE</b> . | Chip-level RAS aggregation | N/A                           |
| lcc_demote_state_1_o           | logic                                          | Output    | [1:0] | SEP lifecycle demote state 1.                                                                                                         | External lifecycle logic   | N/A                           |
| lcc_demote_state_2_o           | logic                                          | Output    | [1:0] | SEP lifecycle demote state 2.                                                                                                         | External lifecycle logic   | N/A                           |
| sep_fuse_sense_done_o          | logic                                          | Output    | 1     | SEP fuse sense done output.                                                                                                           | System integration         | N/A                           |
| clk_sep_wdt_i                  | logic                                          | Input     | 1     | SEP watchdog timer clock passthrough.                                                                                                 | Low-frequency clock source | N/A                           |

| Interface Name  | Type  | Direction | Width | Description                                   | Connection             | Default value (if applicable) |
|-----------------|-------|-----------|-------|-----------------------------------------------|------------------------|-------------------------------|
| secure_tm_req_i | logic | Input     | -     | Secure test mode request, passthrough to SEP. | GPIO padding / tie-off | N/A                           |

# **System Management Network (SMN) Integration**

# Chapter 11. Status

## **WARNING**

This section is currently under development. Content will be added to describe SMN integration procedures, network topology, and management interfaces.

# AXI-over-UCIe Bridge (AoU) Integration

Parameters, clocks, resets, and bring-up for the vendored AXI-over-UCIe bridge.

# Chapter 12. Integration guide

## References

1. AXI over UCIe (AoU) Protocol Specification, v0.7 (<https://cdn.sanity.io/files/jpb4ed5r/production/728b2f8cfc09023466cf350db53764890b4f2343.pdf>)
2. AXI over UCIe (AoU) Protocol Specification, v0.5
3. Universal Chiplet Interconnect Express (UCIe) Specification, Revision 3.0 (<https://www.uciexpress.org/>)
4. Arm AMBA AXI and ACE Protocol Specification (AXI4) (<https://developer.arm.com>)
5. Arm AMBA APB Protocol Specification (<https://developer.arm.com>)

Arm, AMBA, AXI, APB, and ACE are registered trademarks or trademarks of Arm Limited (or its subsidiaries) in the US and/or elsewhere. Universal Chiplet Interconnect Express (UCIe) is a trademark of the UCIe Consortium. All other trademarks are the property of their respective owners.

## Integration Options

The AOU IP can be integrated at two levels. Choose the option that matches your system's FDI bringup strategy:

| Option          | Module       | When to use                                                      | FDI bringup                                | Additional ports                                              |
|-----------------|--------------|------------------------------------------------------------------|--------------------------------------------|---------------------------------------------------------------|
| A (recommended) | AOU_TOP      | Turn-key FDI bringup control is desired                          | Handled internally by AOU_FDI_BRINGUP_CTRL | FDI bringup control, SW bringup control, bringup status       |
| B               | AOU_CORE_TOP | You have an external UCIe controller or custom FDI state machine | Must be handled externally                 | I_INT_FSM_IN_ACTIVE, O_AOU_ACTIVATE_ST_*, O_AOU_REQ_LINKRESET |

**Note:** All AXI, APB, FDI datapath, interrupt, and DFT interfaces are identical between AOU\_TOP and AOU\_CORE\_TOP. The sections below that document these interfaces apply to both modules unless otherwise noted.

For detailed micro-architecture information—including datapath internals, error handling, debugging features, and credit management—refer to the *AOU\_CORE Micro-Architecture Specification* (DOC/MAS/index.adoc).

## Module Overview

### AOU\_TOP

AOU\_TOP is the recommended top-level integration module. It instantiates two submodules:

- **AOU\_FDI\_BRINGUP\_CTRL**—A UCIe 3.0 FDI state machine that manages the four FDI handshake pairs (wake, clock, state negotiation, RX activation) required to bring the FDI link from RESET to ACTIVE and handle teardown, LinkError recovery, Retrain, and L1 entry/exit.
- **AOU\_CORE\_TOP**—The AXI-over-UCIe protocol engine described in [AOU\\_CORE\\_TOP](#).

The bringup controller drives I\_INT\_FSM\_IN\_ACTIVE into the protocol engine internally, so this signal is not exposed as a top-level port on AOU\_TOP. Instead, AOU\_TOP exposes:

- FDI bringup control ports for the physical layer handshakes ([FDI Bringup Control Interface \(AOU\\_TOP only\)](#))
- Software bringup control pins ([FDI Bringup Software Control \(AOU\\_TOP only\)](#))
- Bringup status outputs ([FDI Bringup Status \(AOU\\_TOP only\)](#))

The FDI bringup flow is described in [FDI Bringup Flow \(AOU\\_TOP only\)](#).

## AOU\_CORE\_TOP

Figure 1 shows high level block diagram of AOU CORE TOP.



## Purpose and Function

The AOU\_CORE\_TOP is a bridge between AXI interface and the UCle FDI interface, defined in AoU standard, AXI over UCle Protocol Specification v0.7.

To achieve low latency, AOU\_CORE directly handles signals related to the UCle FDI interface data flow control and processes data in FDI-width chunks (32, 64, or 128 bytes, as selected by the FDI\_CONFIG parameter) in a cut-through

manner, without converting them to 256-byte flit data. It receives AXI messages from its own AXI slave interface, packs them into FDI-width chunks, and transmits these chunks to the remote AoU device via UCIE. The remote AoU receives these FDI-width chunks from the UCIE FDI interface, unpacks them into AXI messages, and delivers the data through its AXI master interface. It supports flow control for all exceptional cases defined in the UCIE standard. First, it handles the chunk valid/cancel signal, including the alternative implementation method described in the UCIE specification. Second, it handles the stall request signal received from the D2D Adapter while maintaining the Flit-aligned boundary.

Interoperability is also supported when the remote device uses a different AXI data width. AOU\_CORE supports a configurable number of Resource Plane(RPs), with both the number of RPs and each RP's AXI data width fully parameterizable. A dedicated field in the SFR allows software to configure the target RP, enabling flexible RP mapping. For each RP, the AW, W and AR channel support three arbitration modes: Round Robin, AXI QoS scheme, and Port QoS scheme. Additionally, a starvation-prevention mechanism is implemented to ensure fair arbitration across all RP channels.

AOU\_CORE\_TOP implements the subset of FDI signals required specifically for transporting AXI across UCIE. FDI bringup/teardown and FDI sideband flows are expected to be handled by other components.

The block consists of the following sub blocks

- AOU\_CORE
  - AOU\_CORE\_RP Manages a AXI interface for write request, read request, write data, read data and write response busses
  - AOU\_CORE\_SFR This implements control and status register of the AOU core. It has a 32bit APB interface for programming. It configures all the blocks in the core.
  - AOU\_TX\_CORE This block packs the arbitrated AXI channels, credits, and activation messages into FDI-width chunks (32, 64, or 128 bytes per FDI\_CONFIG). It follows AOU specifications to pack the messages into 256 byte flit data. It then passes it onto UCIE controller over the FDI interface for transmission.
  - AOU\_CRD\_CTRL This block manages credits available for TX. It gets remote credits available from AOU\_RX\_CORE, and used credits from AOU\_TX\_CORE and creates final credits that can be used for TX.
  - AOU\_RX\_CORE This block processes FDI-width chunks (32, 64, or 128 bytes per FDI\_CONFIG) received by UCIE controller and passed to the core over the FDI interface. It decodes different message types which encapsulate different AXI channel transactions. These messages are buffered and then passed onto AOU\_CORE\_RP for presenting the transaction to its corresponding AXI interface.
  - AOU\_TX\_FDI\_IF This block receives FDI-width data chunks from AOU\_TX\_CORE and buffers them. It does handshake with UCIE controller FDI RX interface and passes the data chunks downstream to be sent to remote chiplet.
  - AOU\_ACT\_CTRL This block manages activation and deactivation control of the AOU bridge. It initiates activate and deactivate messages to remote AOU bridge when configured via APB.
- AOU\_FIFO\_RP This block buffers decoded messages from AOU\_RX\_CORE. It separates the messages based on resource plane (RP) indicator and writes them into dedicated FIFOs. These FIFOs feed the corresponding AOU\_CORE\_RP which manage a single AXI interface.
- ASYNC\_APB\_BRIDGE This block synchronizes APB transactions to the local core clock.

When using AOU\_CORE\_TOP directly, the integrator must provide an external FDI state machine that drives I\_INT\_FSM\_IN\_ACTIVE and the associated control/status signals listed in [UCIE / External Control and Status](#).

## Key Features

- Single APB interface Configuration/control/status register access
- Multiple AXI master & slave interface
  - Configurable RP port & RP remapping supported
  - Supports variable data widths and burst length requests. Configurable FIFO Depth
- UCIe 256B latency-optimized flit(Format 6) support only
- Message packing and unpacking are handled in variable-sized units of 32, 64, or 128 bytes, corresponding to the FDI data width selected by FDI\_CONFIG.
- Selectable Early response by setting SFR8
- Selectable 32B / 64B / 128B single-PHY and 32B+64B / 64B+128B two-PHY FDI configurations via the FDI\_CONFIG parameter (see [Parameter List](#)). Two-PHY variants additionally require the +define+TWO\_PHY build flag so the second-PHY ports physically exist.
- Parameterized number of Resource Plane and each RP's AXI data width
- RP Remapping
- QoS scheme between RP with AW, W, AR channel
- Interoperability with different data width remote die
- Handling of flit cancel and stall request as specified in the UCIe specification
- Selectable AXI Aggregator added for BUS efficiency

## Parameter List

| Parameter            | Type            | Default / Note | Description                                                                                                                                                                                                                                                                                                                                                                             |
|----------------------|-----------------|----------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| RP_COUNT             | parameter       | 1              | Number of receive ports (AXI M/S pairs). Parameterizable up to 4.                                                                                                                                                                                                                                                                                                                       |
| FDI_CONFIG           | parameter (int) | FDI_CFG_SP_32B | FDI width selector. See <i>FDI_CONFIG values</i> below. Two-PHY values additionally require +define+TWO_PHY at compile time.                                                                                                                                                                                                                                                            |
| RP0_RX_AW_FIFO_DEPTH | parameter       | 44             | RX AW FIFO depth for RP0. The depth of each RP*_RX_*_FIFO_DEPTH parameter should be determined by considering the Turn-Around-Time (TAT) between the local die and the remote die, so that no performance drop occurs due to AoU — TAT being the time, in a UCIe-integrated environment, from when the local die sends a message until the credit is received back from the remote die. |
| RP0_RX_AR_FIFO_DEPTH | parameter       | 44             | RX AR FIFO depth for RP0.                                                                                                                                                                                                                                                                                                                                                               |
| RP0_RX_W_FIFO_DEPTH  | parameter       | 88 / 140       | RX W FIFO depth for RP0. Default is 140 when FDI_CONFIG selects a 1024b interface (FDI_CFG_SP_128B / FDI_CFG_TP_64B_128B); 88 otherwise.                                                                                                                                                                                                                                                |

| Parameter                | Type      | Default / Note | Description                                                                                                         |
|--------------------------|-----------|----------------|---------------------------------------------------------------------------------------------------------------------|
| RP0_RX_R_FIFO_DEPTH      | parameter | 88 / 140       | RX R FIFO depth for RP0. Same FDI-aware default as RP0_RX_W_FIFO_DEPTH.                                             |
| RP0_RX_B_FIFO_DEPTH      | parameter | 44             | RX B FIFO depth for RP0.                                                                                            |
| RP1_RX_AW_FIFO_DEPTH     | parameter | 44             | RX AW FIFO depth for RP1.                                                                                           |
| RP1_RX_AR_FIFO_DEPTH     | parameter | 44             | RX AR FIFO depth for RP1.                                                                                           |
| RP1_RX_W_FIFO_DEPTH      | parameter | 88 / 140       | RX W FIFO depth for RP1 (FDI-aware default; see RP0).                                                               |
| RP1_RX_R_FIFO_DEPTH      | parameter | 88 / 140       | RX R FIFO depth for RP1 (FDI-aware default; see RP0).                                                               |
| RP1_RX_B_FIFO_DEPTH      | parameter | 44             | RX B FIFO depth for RP1.                                                                                            |
| RP2_RX_AW_FIFO_DEPTH     | parameter | 44             | RX AW FIFO depth for RP2.                                                                                           |
| RP2_RX_AR_FIFO_DEPTH     | parameter | 44             | RX AR FIFO depth for RP2.                                                                                           |
| RP2_RX_W_FIFO_DEPTH      | parameter | 88 / 140       | RX W FIFO depth for RP2 (FDI-aware default; see RP0).                                                               |
| RP2_RX_R_FIFO_DEPTH      | parameter | 88 / 140       | RX R FIFO depth for RP2 (FDI-aware default; see RP0).                                                               |
| RP2_RX_B_FIFO_DEPTH      | parameter | 44             | RX B FIFO depth for RP2.                                                                                            |
| RP3_RX_AW_FIFO_DEPTH     | parameter | 44             | RX AW FIFO depth for RP3.                                                                                           |
| RP3_RX_AR_FIFO_DEPTH     | parameter | 44             | RX AR FIFO depth for RP3.                                                                                           |
| RP3_RX_W_FIFO_DEPTH      | parameter | 88 / 140       | RX W FIFO depth for RP3 (FDI-aware default; see RP0).                                                               |
| RP3_RX_R_FIFO_DEPTH      | parameter | 88 / 140       | RX R FIFO depth for RP3 (FDI-aware default; see RP0).                                                               |
| RP3_RX_B_FIFO_DEPTH      | parameter | 44             | RX B FIFO depth for RP3.                                                                                            |
| RX_AW_FIFO_RS_EN         | parameter | 1              | When 1, inserts an output register-slice on the RX AW FIFO read port. Trades latency (+1 cycle) for timing closure. |
| RX_AR_FIFO_RS_EN         | parameter | 1              | RX AR FIFO output register-slice enable (see RX_AW_FIFO_RS_EN).                                                     |
| RX_W_FIFO_RS_EN          | parameter | 1              | RX W FIFO output register-slice enable (see RX_AW_FIFO_RS_EN).                                                      |
| RX_R_FIFO_RS_EN          | parameter | 1              | RX R FIFO output register-slice enable (see RX_AW_FIFO_RS_EN).                                                      |
| RX_B_FIFO_RS_EN          | parameter | 1              | RX B FIFO output register-slice enable (see RX_AW_FIFO_RS_EN).                                                      |
| RP0_AXI_DATA_WD          | parameter | 512            | AXI data width for RP0 (bits).                                                                                      |
| RP1_AXI_DATA_WD          | parameter | 512            | AXI data width for RP1 (bits).                                                                                      |
| RP2_AXI_DATA_WD          | parameter | 512            | AXI data width for RP2 (bits).                                                                                      |
| RP3_AXI_DATA_WD          | parameter | 512            | AXI data width for RP3 (bits).                                                                                      |
| AXI_PEER_DIE_MAX_DATA_WD | parameter | 1024           | Maximum peer data width (bits).                                                                                     |
| APB_ADDR_WD              | parameter | 32             | APB address width.                                                                                                  |
| APB_DATA_WD              | parameter | 32             | APB data width.                                                                                                     |
| S_RD_MO_CNT              | parameter | 32             | Slave read outstanding count.                                                                                       |
| S_WR_MO_CNT              | parameter | 32             | Slave write outstanding count.                                                                                      |
| M_RD_MO_CNT              | parameter | 32             | Master read outstanding count.                                                                                      |

| Parameter   | Type      | Default / Note | Description                     |
|-------------|-----------|----------------|---------------------------------|
| M_WR_MO_CNT | parameter | 32             | Master write outstanding count. |

## FDI\_CONFIG values

FDI\_CONFIG is a single integer parameter that selects the FDI data width pair forwarded to the internal hierarchy. Named constants are declared in [RTL/packet\\_def\\_pkg.sv](#) and should be used at the instantiation site:

| FDI_CONFIG value         | PHY0 width (FDI_IF_WD0) | PHY1 width (FDI_IF_WD1) | PHY count  | Build flag      |
|--------------------------|-------------------------|-------------------------|------------|-----------------|
| FDI_CFG_SP_32B (default) | 256                     | 512 (internal decode)   | Single PHY | none            |
| FDI_CFG_SP_64B           | 512                     | 512 (internal decode)   | Single PHY | none            |
| FDI_CFG_SP_128B          | 1024                    | 1024 (internal decode)  | Single PHY | none            |
| FDI_CFG_TP_32B_64B       | 256                     | 512                     | Two PHY    | +define+TWO_PHY |
| FDI_CFG_TP_64B_128B      | 512                     | 1024                    | Two PHY    | +define+TWO_PHY |

Notes:

- For single-PHY values, only the PHY0 ports (I\_FDI\_PL\_0\_\* / O\_FDI\_LP\_0\_\*) carry traffic. The PHY1 internal width is used only as the RX-side decode width.
- The two-PHY values (FDI\_CFG\_TP\_\*) are valid **only** when the design is built with +define+TWO\_PHY. The build flag gates the physical presence of the PHY1 ports (I\_FDI\_PL\_1\_\*, O\_FDI\_LP\_1\_\*) and the I\_PHY\_TYPE selector on both AOU\_TOP and AOU\_CORE\_TOP. Mixing a FDI\_CFG\_TP\_\* value with a build that omits +define+TWO\_PHY (or vice-versa) is an integration error; the design does **not** enforce this consistency at elaboration time.
- The FDI\_CFG\_TP\_32B\_128B (256b + 1024b) combination is **not** supported by the design: AOU\_RX\_CORE\_IN\_MUX requires FDI\_IF\_WD0 == FDI\_IF\_WD1 / 2 for two-PHY accumulation.

## Build flags

| Flag            | Effect                                                                                                                                                                                        |
|-----------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| +define+TWO_PHY | Compile-time switch that adds the second-PHY ports (I_FDI_PL_1_*, O_FDI_LP_1_*) and the I_PHY_TYPE selector to both AOU_TOP and AOU_CORE_TOP. Required for FDI_CFG_TP_* values of FDI_CONFIG. |

## Interface Signals

### Clock and Reset

| Signal    | Direction | Width | Description                                   |
|-----------|-----------|-------|-----------------------------------------------|
| I_CLK     | input     | 1     | Core system clock (AOU_CORE and AOU_FIFO_RP). |
| I_RESETN  | input     | 1     | Active-low asynchronous reset.                |
| I_PCLK    | input     | 1     | APB clock (slave side of async bridge).       |
| I_PRESETN | input     | 1     | APB domain reset.                             |

## APB Slave Interface

| Signal                | Direction | Width       | Description      |
|-----------------------|-----------|-------------|------------------|
| I_AOU_APB_SIO_PSEL    | input     | 1           | APB select.      |
| I_AOU_APB_SIO_PENABLE | input     | 1           | APB enable.      |
| I_AOU_APB_SIO_PADDR   | input     | APB_ADDR_WD | APB address.     |
| I_AOU_APB_SIO_PWRITE  | input     | 1           | APB write.       |
| I_AOU_APB_SIO_PWDATA  | input     | APB_DATA_WD | APB write data.  |
| O_AOU_APB_SIO_PRDATA  | output    | APB_DATA_WD | APB read data.   |
| O_AOU_APB_SIO_PREADY  | output    | 1           | APB ready.       |
| O_AOU_APB_SIO_PSLVERR | output    | 1           | APB slave error. |

## AXI Master (RX) – AR Channel

| Signal                 | Direction | Width                           | Description       |
|------------------------|-----------|---------------------------------|-------------------|
| O_AOU_RX_AXI_M_ARID    | output    | [RP_COUNT-1:0][AXI_ID_WD-1:0]   | Read address ID.  |
| O_AOU_RX_AXI_M_ARADDR  | output    | [RP_COUNT-1:0][AXI_ADDR_WD-1:0] | Read address.     |
| O_AOU_RX_AXI_M_ARLEN   | output    | [RP_COUNT-1:0][AXI_LEN_WD-1:0]  | Burst length.     |
| O_AOU_RX_AXI_M_ARSIZE  | output    | [RP_COUNT-1:0][2:0]             | Transfer size.    |
| O_AOU_RX_AXI_M_ARBURST | output    | [RP_COUNT-1:0][1:0]             | Burst type.       |
| O_AOU_RX_AXI_M_ARLOCK  | output    | [RP_COUNT-1:0]                  | Lock.             |
| O_AOU_RX_AXI_M_ARCACHE | output    | [RP_COUNT-1:0][3:0]             | Cache attributes. |
| O_AOU_RX_AXI_M_ARPROT  | output    | [RP_COUNT-1:0][2:0]             | Protection.       |
| O_AOU_RX_AXI_M_ARQOS   | output    | [RP_COUNT-1:0][3:0]             | QoS.              |
| O_AOU_RX_AXI_M_ARVALID | output    | [RP_COUNT-1:0]                  | AR valid.         |
| I_AOU_RX_AXI_M_ARREADY | input     | [RP_COUNT-1:0]                  | AR ready.         |

## AXI Master (RX) – R Channel

| Signal                | Direction | Width                                  | Description    |
|-----------------------|-----------|----------------------------------------|----------------|
| I_AOU_TX_AXI_M_RID    | input     | [RP_COUNT-1:0][AXI_ID_WD-1:0]          | Read data ID.  |
| I_AOU_TX_AXI_M_RDATA  | input     | [RP_COUNT-1:0][RP_AXI_DATA_WD_MAX-1:0] | Read data.     |
| I_AOU_TX_AXI_M_RRESP  | input     | [RP_COUNT-1:0][1:0]                    | Read response. |
| I_AOU_TX_AXI_M_RLAST  | input     | [RP_COUNT-1:0]                         | Read last.     |
| I_AOU_TX_AXI_M_RVALID | input     | [RP_COUNT-1:0]                         | R valid.       |
| O_AOU_TX_AXI_M_RREADY | output    | [RP_COUNT-1:0]                         | R ready.       |

## AXI Master (RX) – AW Channel

| Signal                | Direction | Width                           | Description       |
|-----------------------|-----------|---------------------------------|-------------------|
| O_AOU_RX_AXI_M_AWID   | output    | [RP_COUNT-1:0][AXI_ID_WD-1:0]   | Write address ID. |
| O_AOU_RX_AXI_M_AWADDR | output    | [RP_COUNT-1:0][AXI_ADDR_WD-1:0] | Write address.    |
| O_AOU_RX_AXI_M_AWLEN  | output    | [RP_COUNT-1:0][AXI_LEN_WD-1:0]  | Burst length.     |

| Signal                 | Direction | Width               | Description       |
|------------------------|-----------|---------------------|-------------------|
| O_AOU_RX_AXI_M_AWSIZE  | output    | [RP_COUNT-1:0][2:0] | Transfer size.    |
| O_AOU_RX_AXI_M_AWBURST | output    | [RP_COUNT-1:0][1:0] | Burst type.       |
| O_AOU_RX_AXI_M_AWLOCK  | output    | [RP_COUNT-1:0]      | Lock.             |
| O_AOU_RX_AXI_M_AWCACHE | output    | [RP_COUNT-1:0][3:0] | Cache attributes. |
| O_AOU_RX_AXI_M_AWPROT  | output    | [RP_COUNT-1:0][2:0] | Protection.       |
| O_AOU_RX_AXI_M_AWQOS   | output    | [RP_COUNT-1:0][3:0] | QoS.              |
| O_AOU_RX_AXI_M_AWVALID | output    | [RP_COUNT-1:0]      | AW valid.         |
| I_AOU_RX_AXI_M_AWREADY | input     | [RP_COUNT-1:0]      | AW ready.         |

## AXI Master (RX) – W and B Channels

| Signal                | Direction | Width                                  | Description        |
|-----------------------|-----------|----------------------------------------|--------------------|
| O_AOU_RX_AXI_M_WDATA  | output    | [RP_COUNT-1:0][RP_AXI_DATA_WD_MAX-1:0] | Write data.        |
| O_AOU_RX_AXI_M_WSTRB  | output    | [RP_COUNT-1:0][RP_AXI_STRB_WD_MAX-1:0] | Write strobe.      |
| O_AOU_RX_AXI_M_WLAST  | output    | [RP_COUNT-1:0]                         | Write last.        |
| O_AOU_RX_AXI_M_WVALID | output    | [RP_COUNT-1:0]                         | W valid.           |
| I_AOU_RX_AXI_M_WREADY | input     | [RP_COUNT-1:0]                         | W ready.           |
| I_AOU_TX_AXI_M_BID    | input     | [RP_COUNT-1:0][AXI_ID_WD-1:0]          | Write response ID. |
| I_AOU_TX_AXI_M_BRESP  | input     | [RP_COUNT-1:0][1:0]                    | Write response.    |
| I_AOU_TX_AXI_M_BVALID | input     | [RP_COUNT-1:0]                         | B valid.           |
| O_AOU_TX_AXI_M_BREADY | output    | [RP_COUNT-1:0]                         | B ready.           |

## AXI Slave (TX) – AR Channel

| Signal                 | Direction | Width                           | Description       |
|------------------------|-----------|---------------------------------|-------------------|
| I_AOU_TX_AXI_S_ARID    | input     | [RP_COUNT-1:0][AXI_ID_WD-1:0]   | Read address ID.  |
| I_AOU_TX_AXI_S_ARADDR  | input     | [RP_COUNT-1:0][AXI_ADDR_WD-1:0] | Read address.     |
| I_AOU_TX_AXI_S_ARLEN   | input     | [RP_COUNT-1:0][AXI_LEN_WD-1:0]  | Burst length.     |
| I_AOU_TX_AXI_S_ARSIZE  | input     | [RP_COUNT-1:0][2:0]             | Transfer size.    |
| I_AOU_TX_AXI_S_ARBURST | input     | [RP_COUNT-1:0][1:0]             | Burst type.       |
| I_AOU_TX_AXI_S_ARLOCK  | input     | [RP_COUNT-1:0]                  | Lock.             |
| I_AOU_TX_AXI_S_ARCACHE | input     | [RP_COUNT-1:0][3:0]             | Cache attributes. |
| I_AOU_TX_AXI_S_ARPROT  | input     | [RP_COUNT-1:0][2:0]             | Protection.       |
| I_AOU_TX_AXI_S_ARQOS   | input     | [RP_COUNT-1:0][3:0]             | QoS.              |
| I_AOU_TX_AXI_S_ARVALID | input     | [RP_COUNT-1:0]                  | AR valid.         |
| O_AOU_TX_AXI_S_ARREADY | output    | [RP_COUNT-1:0]                  | AR ready.         |

## AXI Slave (TX) – R Channel

| Signal             | Direction | Width                         | Description   |
|--------------------|-----------|-------------------------------|---------------|
| O_AOU_RX_AXI_S_RID | output    | [RP_COUNT-1:0][AXI_ID_WD-1:0] | Read data ID. |

| Signal                | Direction | Width                                  | Description    |
|-----------------------|-----------|----------------------------------------|----------------|
| O_AOU_RX_AXI_S_RDATA  | output    | [RP_COUNT-1:0][RP_AXI_DATA_WD_MAX-1:0] | Read data.     |
| O_AOU_RX_AXI_S_RRESP  | output    | [RP_COUNT-1:0][1:0]                    | Read response. |
| O_AOU_RX_AXI_S_RLAST  | output    | [RP_COUNT-1:0]                         | Read last.     |
| O_AOU_RX_AXI_S_RVALID | output    | [RP_COUNT-1:0]                         | R valid.       |
| I_AOU_RX_AXI_S_RREADY | input     | [RP_COUNT-1:0]                         | R ready.       |

## AXI Slave (TX) – AW, W, B Channels

| Signal                 | Direction | Width                                  | Description        |
|------------------------|-----------|----------------------------------------|--------------------|
| I_AOU_TX_AXI_S_AWID    | input     | [RP_COUNT-1:0][AXI_ID_WD-1:0]          | Write address ID.  |
| I_AOU_TX_AXI_S_AWADDR  | input     | [RP_COUNT-1:0][AXI_ADDR_WD-1:0]        | Write address.     |
| I_AOU_TX_AXI_S_AWLEN   | input     | [RP_COUNT-1:0][AXI_LEN_WD-1:0]         | Burst length.      |
| I_AOU_TX_AXI_S_AWSIZE  | input     | [RP_COUNT-1:0][2:0]                    | Transfer size.     |
| I_AOU_TX_AXI_S_AWBURST | input     | [RP_COUNT-1:0][1:0]                    | Burst type.        |
| I_AOU_TX_AXI_S_AWLOCK  | input     | [RP_COUNT-1:0]                         | Lock.              |
| I_AOU_TX_AXI_S_AWCACHE | input     | [RP_COUNT-1:0][3:0]                    | Cache attributes.  |
| I_AOU_TX_AXI_S_AWPROT  | input     | [RP_COUNT-1:0][2:0]                    | Protection.        |
| I_AOU_TX_AXI_S_AWQOS   | input     | [RP_COUNT-1:0][3:0]                    | QoS.               |
| I_AOU_TX_AXI_S_AWVALID | input     | [RP_COUNT-1:0]                         | AW valid.          |
| O_AOU_TX_AXI_S_AWREADY | output    | [RP_COUNT-1:0]                         | AW ready.          |
| I_AOU_TX_AXI_S_WDATA   | input     | [RP_COUNT-1:0][RP_AXI_DATA_WD_MAX-1:0] | Write data.        |
| I_AOU_TX_AXI_S_WSTRB   | input     | [RP_COUNT-1:0][RP_AXI_STRB_WD_MAX-1:0] | Write strobe.      |
| I_AOU_TX_AXI_S_WLAST   | input     | [RP_COUNT-1:0]                         | Write last.        |
| I_AOU_TX_AXI_S_WVALID  | input     | [RP_COUNT-1:0]                         | W valid.           |
| O_AOU_TX_AXI_S_WREADY  | output    | [RP_COUNT-1:0]                         | W ready.           |
| O_AOU_RX_AXI_S_BID     | output    | [RP_COUNT-1:0][AXI_ID_WD-1:0]          | Write response ID. |
| O_AOU_RX_AXI_S_BRESP   | output    | [RP_COUNT-1:0][1:0]                    | Write response.    |
| O_AOU_RX_AXI_S_BVALID  | output    | [RP_COUNT-1:0]                         | B valid.           |
| I_AOU_RX_AXI_S_BREADY  | input     | [RP_COUNT-1:0]                         | B ready.           |

## PHY and FDI (Flit Data Interface)

The FDI port set is split into two banks: PHY0 (always present) and PHY1 (present only when the design is built with +define+TWO\_PHY). Both banks use the parameterized widths derived from FDI\_CONFIG (see [FDI\\_CONFIG values](#)).

| FDI_CONFIG          | FDI_IF_WD0 (PHY0 width) | FDI_IF_WD1 (PHY1 width) | PHY1 ports present    |
|---------------------|-------------------------|-------------------------|-----------------------|
| FDI_CFG_SP_32B      | 256                     | 512 (internal decode)   | no                    |
| FDI_CFG_SP_64B      | 512                     | 512 (internal decode)   | no                    |
| FDI_CFG_SP_128B     | 1024                    | 1024 (internal decode)  | no                    |
| FDI_CFG_TP_32B_64B  | 256                     | 512                     | yes (+define+TWO_PHY) |
| FDI_CFG_TP_64B_128B | 512                     | 1024                    | yes (+define+TWO_PHY) |

## PHY0 (always present)

| Signal                 | Direction | Width      | Description               |
|------------------------|-----------|------------|---------------------------|
| I_FDI_PL_0_VALID       | input     | 1          | PHY0 flit valid from PHY. |
| I_FDI_PL_0_DATA        | input     | FDI_IF_WD0 | PHY0 flit data.           |
| I_FDI_PL_0_FLIT_CANCEL | input     | 1          | PHY0 flit cancel.         |
| I_FDI_PL_0_TRDY        | input     | 1          | PHY0 ready.               |
| I_FDI_PL_0_STALLREQ    | input     | 1          | PHY0 stall request.       |
| I_FDI_PL_0_STATE_STS   | input     | [3:0]      | PHY0 state status.        |
| O_FDI_LP_0_DATA        | output    | FDI_IF_WD0 | PHY0 flit data to PHY.    |
| O_FDI_LP_0_VALID       | output    | 1          | PHY0 flit valid.          |
| O_FDI_LP_0_IRDY        | output    | 1          | PHY0 link ready.          |
| O_FDI_LP_0_STALLACK    | output    | 1          | PHY0 stall acknowledge.   |

## PHY1 (present only when +define+TWO\_PHY)

| Signal                 | Direction | Width      | Description               |
|------------------------|-----------|------------|---------------------------|
| I_FDI_PL_1_VALID       | input     | 1          | PHY1 flit valid from PHY. |
| I_FDI_PL_1_DATA        | input     | FDI_IF_WD1 | PHY1 flit data.           |
| I_FDI_PL_1_FLIT_CANCEL | input     | 1          | PHY1 flit cancel.         |
| I_FDI_PL_1_TRDY        | input     | 1          | PHY1 ready.               |
| I_FDI_PL_1_STALLREQ    | input     | 1          | PHY1 stall request.       |
| I_FDI_PL_1_STATE_STS   | input     | [3:0]      | PHY1 state status.        |
| O_FDI_LP_1_DATA        | output    | FDI_IF_WD1 | PHY1 flit data to PHY.    |
| O_FDI_LP_1_VALID       | output    | 1          | PHY1 flit valid.          |
| O_FDI_LP_1_IRDY        | output    | 1          | PHY1 link ready.          |
| O_FDI_LP_1_STALLACK    | output    | 1          | PHY1 stall acknowledge.   |

## PHY type select (present only when +define+TWO\_PHY)

| Signal     | Direction | Width | Description                                                                                                        |
|------------|-----------|-------|--------------------------------------------------------------------------------------------------------------------|
| I_PHY_TYPE | input     | 1     | PHY selector for state-status / stall-request multiplexing: 0 = PHY0, 1 = PHY1. See <a href="#">PHY Type Mux</a> . |

## Interrupt and Error (to Error Handler)

| Signal               | Direction | Width | Description                   |
|----------------------|-----------|-------|-------------------------------|
| INT_REQ_LINKRESET    | output    | 1     | Link reset request.           |
| INT_SIO_ID_MISMATCH  | output    | 1     | Slave interface ID mismatch.  |
| INT_MIO_ID_MISMATCH  | output    | 1     | Master interface ID mismatch. |
| INT_EARLY_RESP_ERR   | output    | 1     | Early response error.         |
| INT_ACTIVATE_START   | output    | 1     | Activate start.               |
| INT_DEACTIVATE_START | output    | 1     | Deactivate start.             |

## UCIe / External Control and Status

**AOU\_TOP users:** The signals in this table are present on AOU\_CORE\_TOP only. When integrating via AOU\_TOP, these signals are consumed/generated internally by AOU\_FDI\_BRINGUP\_CTRL and are not exposed as top-level ports. See [AOU\\_CORE\\_TOP-only Ports \(not on AOU\\_TOP\)](#).

| Signal                     | Direction | Width | Description                                          |
|----------------------------|-----------|-------|------------------------------------------------------|
| I_INT_FSM_IN_ACTIVE        | input     | 1     | Initialization done / FSM in active state indicator. |
| I_MST_BUS_CLEANY_COMPLETE  | input     | 1     | Master bus cleany complete.                          |
| I_SLV_BUS_CLEANY_COMPLETE  | input     | 1     | Slave bus cleany complete.                           |
| O_AOU_ACTIVATE_ST_DISABLED | output    | 1     | Activation state disabled.                           |
| O_AOU_ACTIVATE_ST_ENABLED  | output    | 1     | Activation state enabled.                            |
| O_AOU_REQ_LINKRESET        | output    | 1     | AOU link reset request.                              |

- I\_INT\_FSM\_IN\_ACTIVE is an input signal that indicates that the link up is complete. When starting the test, I\_INT\_FSM\_IN\_ACTIVE should be 0, and when you want to activate AOU\_CORE, I\_INT\_FSM\_IN\_ACTIVE should be 1. When testing with IP standalone, you must force I\_INT\_FSM\_IN\_ACTIVE.
- I\_MST\_BUS\_CLEANY\_COMPLETE is asserted when all responses to the remote die's requests have been completed. The signal originates from the BUS\_CLEANY. If the BUS\_CLEANY feature is not used, the corresponding port must be tied to 1.
- I\_SLV\_BUS\_CLEANY\_COMPLETE is asserted when all responses from the remote die have been received for the requests sent by the local die. The signal originates from the BUS\_CLEANY. If the BUS\_CLEANY feature is not used, the corresponding port must be tied to 1.
- After AOU\_CORE deactivation, the activation status transitions to DISABLED, allowing the UCIe link to go down. Once deactivation completes, O\_AOU\_ACTIVATE\_ST\_DISABLED is asserted to notify the UCIE\_CORE.
- When the AOU\_CORE is in the ENABLED state, O\_AOU\_ACTIVATE\_ST\_ENABLED is asserted to notify the UCIE\_CORE.
- O\_AOU\_REQ\_LINKRESET is asserted together with INT\_REQ\_LINKRESET when the AOU\_CORE detects an AoU protocol violation, to notify the UCIE\_CORE.

## DFT

| Signal            | Direction | Width | Description                                                                                                                   |
|-------------------|-----------|-------|-------------------------------------------------------------------------------------------------------------------------------|
| TIEL_DFT_MODESCAN | input     | 1     | Scan-mode indicator. Tie low in functional operation; assert high from the SoC scan controller during scan shift and capture. |

### TIEL\_DFT\_MODESCAN Usage

TIEL\_DFT\_MODESCAN controls a glitch-free mux (u\_sw\_reset\_mux, instance of AOU\_SOC\_GFMUX\_LVT) that selects the reset source for AOU\_CORE:



- **Functional mode** (TIEL\_DFT\_MODESCAN = 0): The mux selects I\_A, the functional software-controlled reset path (~r\_sw\_reset & I\_RESETN). This allows the CSR-writable SW reset to combine with the hardware reset.
- **Scan mode** (TIEL\_DFT\_MODESCAN = 1): The mux selects I\_B, a constant 1'b0 driven through AOU\_SOC\_BUF (dft\_persistent\_buf\_scan\_resetn\_sw). This value de-asserts the active-low SW reset, neutralizing it so that scan chains can shift freely without the software reset logic interfering with controllability or observability.

The AOU\_SOC\_BUF instance exists solely to prevent the synthesis tool from optimizing away the tied-low constant; it must be preserved as a persistent buffer (see [Library Cell Replacement](#)).

The SDC file (INTEG/constraints/ao\_u\_core\_top.sdc) constrains this pin with set\_case\_analysis 0 in functional timing mode.

## Integrator DFT Responsibilities

The design provides internal DFT muxing only for the software-controlled reset path (w\_DFTED\_sw\_resetn). The two primary hardware resets and all scan infrastructure are the integrator's responsibility:

| Responsibility                     | Detail                                                                                                                                                                                                                                                                                     |
|------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>HW reset DFT muxes</b>          | I_RESETN and I_PRESETN have no internal scan-mode bypass. The integrator must add external DFT muxes (or equivalent) on both resets so they can be held inactive (high) during scan shift and capture. Without this, all flip-flops using these resets will be uncontrollable during ATPG. |
| <b>Scan chain insertion</b>        | The design has no SCAN_EN, SCAN_IN, or SCAN_OUT ports. The integrator must insert scan chains via the synthesis tool's DFT insertion flow or by adding scan ports manually.                                                                                                                |
| <b>Multi-clock scan definition</b> | I_CLK (1 GHz core) and I_PCLK (100 MHz APB) must be defined as separate scan clocks. The ATPG tool must not shift both domains simultaneously, or lockup latches must be inserted at domain boundaries.                                                                                    |
| <b>I/O constraints during scan</b> | AXI and FDI interface ports should be constrained to safe values during scan (via wrapper cells or top-level scan constraints) to prevent unintended activity on external buses.                                                                                                           |
| <b>CDC synchronizer handling</b>   | The AOU_SOC_SYNCHSR instances in the ASYNC_APB_BRIDGE require scan-safe treatment. See <a href="#">Library Cell Replacement</a> for replacement cell requirements.                                                                                                                         |

## FDI Bringup Control Interface (AOU\_TOP only)

These signals connect AOU\_TOP to the D2D adapter's physical layer for FDI bringup control. They are not present on AOU\_CORE\_TOP.

| Signal               | Direction | Width | Description                                                                                          |
|----------------------|-----------|-------|------------------------------------------------------------------------------------------------------|
| I_PL_INBAND_PRESENCE | input     | 1     | Inband presence detect from PL. The bringup FSM waits for this before initiating the wake handshake. |

| Signal             | Direction | Width | Description                                                         |
|--------------------|-----------|-------|---------------------------------------------------------------------|
| I_PL_CLK_REQ       | input     | 1     | PL clock request. LP responds with O_LP_CLK_ACK.                    |
| I_PL_WAKE_ACK      | input     | 1     | PL acknowledgement of LP wake request.                              |
| I_PL_RX_ACTIVE_REQ | input     | 1     | PL requests RX activation. LP responds with O_LP_RX_ACTIVE_STS.     |
| O_LP_STATE_REQ     | output    | [3:0] | LP state request (RESET=0, ACTIVE=1, LinkError=2, Retrain=3, L1=4). |
| O_LP_WAKE_REQ      | output    | 1     | LP-initiated wake request.                                          |
| O_LP_CLK_ACK       | output    | 1     | LP acknowledgement of PL clock request.                             |
| O_LP_RX_ACTIVE_STS | output    | 1     | LP RX active status in response to I_PL_RX_ACTIVE_REQ.              |

The four handshake pairs correspond to UCIE 3.0 FDI bringup control signals:

| Handshake | LP signal          | PL signal                  | Purpose                               |
|-----------|--------------------|----------------------------|---------------------------------------|
| Wake      | O_LP_WAKE_REQ      | I_PL_WAKE_ACK              | LP-initiated link wake from low-power |
| Clock     | O_LP_CLK_ACK       | I_PL_CLK_REQ               | PL-initiated clock request            |
| State     | O_LP_STATE_REQ     | (via I_FDI_PL_*_STATE_STS) | State negotiation                     |
| RX Active | O_LP_RX_ACTIVE_STS | I_PL_RX_ACTIVE_REQ         | RX path activation                    |

## FDI Bringup Software Control (AOU\_TOP only)

These top-level ports provide direct software control over the FDI bringup FSM. They are **not SFR-mapped**; the integrator must drive them from external logic or tie them as needed.

| Signal                | Direction | Width | Description                                                                                |
|-----------------------|-----------|-------|--------------------------------------------------------------------------------------------|
| I_SW_ACTIVATE_START   | input     | 1     | Trigger FDI bringup (RESET to ACTIVE). ORed internally with the core's INT_ACTIVATE_START. |
| I_SW_DEACTIVATE_START | input     | 1     | Trigger FDI teardown. ORed internally with the core's INT_DEACTIVATE_START.                |
| I_SW_RETRAIN_REQ      | input     | 1     | Request link retrain (LP-initiated).                                                       |
| I_SW_LINKERROR_INJECT | input     | 1     | Force the bringup FSM into LinkError state for debug/test.                                 |

## FDI Bringup Status (AOU\_TOP only)

| Signal          | Direction | Width | Description                                                                                                      |
|-----------------|-----------|-------|------------------------------------------------------------------------------------------------------------------|
| O_FDI_FSM_STATE | output    | [3:0] | Current FDI state. Encoding matches UCIE 3.0: RESET=0, ACTIVE=1, LinkError=2, Retrain=3, L1=4, L2=5, Disabled=6. |
| O_FDI_LINK_UP   | output    | 1     | Asserted when the FDI bringup FSM is in the ACTIVE state.                                                        |

## AOU\_CORE\_TOP-only Ports (not on AOU\_TOP)

The following signals are present on AOU\_CORE\_TOP but are **not** exposed on AOU\_TOP. In AOU\_TOP, they are consumed or generated internally by AOU\_FDI\_BRINGUP\_CTRL.

| Signal                     | Direction (on AOU_CORE_TOP) | Description                                                                                |
|----------------------------|-----------------------------|--------------------------------------------------------------------------------------------|
| I_INT_FSM_IN_ACTIVE        | input                       | FDI link active indicator. Driven by the bringup FSM's O_INT_FSM_IN_ACTIVE inside AOU_TOP. |
| O_AOU_ACTIVATE_ST_DISABLED | output                      | Protocol activation state: disabled. Fed back to bringup FSM.                              |
| O_AOU_ACTIVATE_ST_ENABLED  | output                      | Protocol activation state: enabled. Fed back to bringup FSM.                               |
| O_AOU_REQ_LINKRESET        | output                      | Protocol-level LinkReset request. Fed back to bringup FSM.                                 |

## Software operation Guide

This section gives information about operation guide for the AOU\_CORE.

### Register Map

The complete register map — address offsets, field definitions, access types, and reset values — is generated from the SystemRDL source and maintained separately:

- [AOU Core CSR Reference](#) (generated from csr/aou-core.rdl)

To regenerate after editing the RDL source, see [DOC/csr/README.md](#).

## Interrupts

- **INT\_ACTIVATE\_START** An interrupt that occurs when activation of the AoU Protocol layer is required. The interrupt can be cleared by writing '1' to the AOU\_CORE.AOU\_INIT.INT\_ACTIVATE\_START SFR.
- **INT\_DEACTIVATE\_START** An interrupt that occurs when deactivation of the AoU Protocol layer is required. The interrupt can be cleared by writing '1' to the AOU\_CORE.AOU\_INIT.INT\_DEACTIVATE\_START SFR.
- **INT\_SIO\_ID\_MISMATCH** An interrupt that occurs on the AXI Slave Interface when a B or R channel response is received with an ID that was not previously issued as a request. SW can check the mismatched AXI ID by reading AOU\_CORE.AXI\_SLV\_ID\_MISMATCH\_ERR SFR. The interrupt can be cleared by writing '1' to the AOU\_CORE.AXI\_SLV\_ID\_MISMATCH\_ERR.SLV\_B/RRESP\_ERR SFR.
- **INT\_MIO\_ID\_MISMATCH** An interrupt that occurs on the AXI Master Interface when a B or R channel response is received with an ID that was not previously issued as a request. SW can check the mismatched AXI ID by reading AOU\_CORE.ERROR\_INFO SFR. The interrupt can be cleared by writing '1' to the AOU\_CORE.ERROR\_INFO.SPLIT\_B/RID\_MISMATCH\_ERR SFR.
- **INT\_EARLY\_RESP\_ERR** An interrupt that occurs when, due to the Write Early Response feature, a B response has already been sent through the AXI Slave Interface, and a subsequent actual B response arrives with an Error. SW can check the ID and error type of the transaction in which the error occurred by reading AOU\_CORE.WRITE\_EARLY\_RESPONSE SFR. The interrupt can be cleared by writing '1' to the AOU\_CORE.WRITE\_EARLY\_RESPONSE.WRITE\_RESP\_ERR SFR.
- **INT\_REQ\_LINKRESET** An interrupt that occurs when AOU\_CORE receives a protocol violation. Refer to the

*AOU\_CORE Micro-Architecture Specification* (DOC/MAS/interrupts-errors.adoc) for debugging details. When AOU\_CORE receives a protocol violation, SW needs to do SW reset AOU\_CORE and re-enter the activation sequence.

## Activation Flow

**AOU\_TOP users:** When using AOU\_TOP, FDI bringup (RESET to ACTIVE) is handled by AOU\_FDI\_BRINGUP\_CTRL before protocol-level activation begins. The protocol activation described in this section occurs after O\_FDI\_LINK\_UP is asserted. See [FDI Bringup Flow \(AOU\\_TOP only\)](#) for the FDI bringup sequence.

The Activation of AOU\_CORE begins after the UCIE Link-up process has been successfully completed. The completion of UCIE link-up is indicated by the **I\_INT\_FSM\_IN\_ACTIVE** signal of the **AOU\_CORE\_TOP**. There is no dependency between the activation of the local die and the remote die. Each die may initiate the activation sequence independently, which means the timing of sending **ActivateReq** can differ. Both dies must exchange **ActivateReq** and **ActivateAck** messages to transition to the **ENABLED** state, at which point credited messages can be transmitted.

Regardless of its own activation state, a die must send an **ActivateAck** in response to an **ActivateReq** from the other die, to acknowledge receipt of the request.

## Credit Management Type

There are two types of Credit Management Type. Since current AOU\_SPEC cannot resolve pending AXI response without Activate again. When Credit Management type is set to 1, during Deactivated state, AOU\_CORE can resolve pending AXI response itself.

It can be configured through AOU\_CON0.CREDIT\_MANAGE, and the default value is 1.

| Credit Management Type | Specification     | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|------------------------|-------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 0                      | Based on AoU v0.5 | After deactivation, if a new request is received from the remote die, no response message can be sent. To deliver the corresponding response, the system must go through activation again after deactivation. Credit management and transmission availability for both Request-related messages and Response-related messages are controlled together. Credited messages must not be sent, after the DeactivateReq message is sent. Credits must not be sent after the DeactivateAck message is sent. The Activate Interrupt and Deactivate Interrupt that occur in the process of resuming the exchange of response messages impose mandatory requirements to set Activate and Deactivate SFR. |
| 1 (default)            | Proposal by BOS   | When the AoU Activity state is DEACTIVATE, manage Request-related messages (WREQ, RREQ, WDATA) and Response-related messages (RDATA, WRESP) separately. RDATA, WRESP Credited messages can be sent, after the DeactivateReq message is sent. Credits for RDATA, WRESP messages must be sent after the DeactivateAck message is sent. The Deactivate interrupt only provides a hint indicating that the remote die has started to activate / deactivate.                                                                                                                                                                                                                                         |

## Activation Start

Activation can be initiated by setting `ACTIVATE_START` SFR: In the current implementation, credits are granted based on the depth of the RX FIFO, so it is required to ensure that all messages in the RX FIFO are popped before sending the `ActivateReq` message.

Activation START (via SFR `AOU_INIT.ACTIVATE_START` SFR)

- Activation can be triggered by setting `ACTIVATE_START`.
- Activation does not proceed until `I_INT_FSM_IN_ACTIVE` is asserted, since no flits can be transmitted beforehand. Therefore, it is allowed to set the `ACTIVATE_START` SFR before `I_INT_FSM_IN_ACTIVE` is asserted. If it is set before the assertion, the activation process will automatically proceed after `I_INT_FSM_IN_ACTIVE` becomes asserted.
- `AOU_INIT.ACTIVATE_START` SFR is automatically cleared to 0 once the activation is completed and `AOU_ACTIVATE_STATE` transitions to `ENABLED`.

## Deactivation Start

Deactivation is initiated by setting the `AOU_INIT.DEACTIVATE_START` register. Setting this register does not immediately trigger sending a `DeactivateReq` message. The detailed conditions and sequence for deactivation can be found in the **Deactivation Sequence Flow** section. This section will only describe `AOU_INIT.DEACTIVATE_TIME_OUT_VALUE` SFR.

- When software initiates a `DeactivateReq` by setting the SFR, there may still be outstanding requests that have not yet left `AOU_CORE` FDI outputs.
- To handle this safely, a timeout mechanism is implemented to ensure that no valid packets remain in the `AOU_TX_CORE`.
- If software guarantees that all responses to its issued requests have been received before setting the deactivation start SFR, the deactivate `TIME_OUT_VALUE` (`AOU_INIT.DEACTIVATE_TIME_OUT_VALUE` SFR) can be safely configured to a shorter duration.

The `ACTIVATION_OP` field encodes deactivation messages as follows:

- 2 = `DeactivateReq`
- 3 = `DeactivateAck`


## Deactivation Sequence Flow

Once the local die issues a `DeactivateReq`, it can no longer provide responses to transactions initiated by the remote die. If the remote die continues to send requests or waits for responses without being notified, it may enter a hang state.

To manage this safely, the remote die must take explicit action upon receiving a `DeactivateReq`:

1. Immediately generate an interrupt to the CPU to inform the system software that a `DeactivateReq` has been received and that it must set the `DEACTIVATE_START` SFR. Although deactivation of the local die and the remote die operate independently, it is essential at the system level to communicate the deactivation & activation state through interrupts. This ensures that system software is explicitly informed of deactivation events and prevents the remote die from continuing to expect a response that will never arrive, thereby avoiding hang conditions.
2. This approach guarantees that once deactivation is initiated, both dies can coordinate the transition into safe and consistent `DISABLED` state.
3. If the software on both dies can explicitly coordinate to guarantee that all outstanding transactions have been

completed and that no new transactions will be issued, then such a complicated implementation would not be necessary.

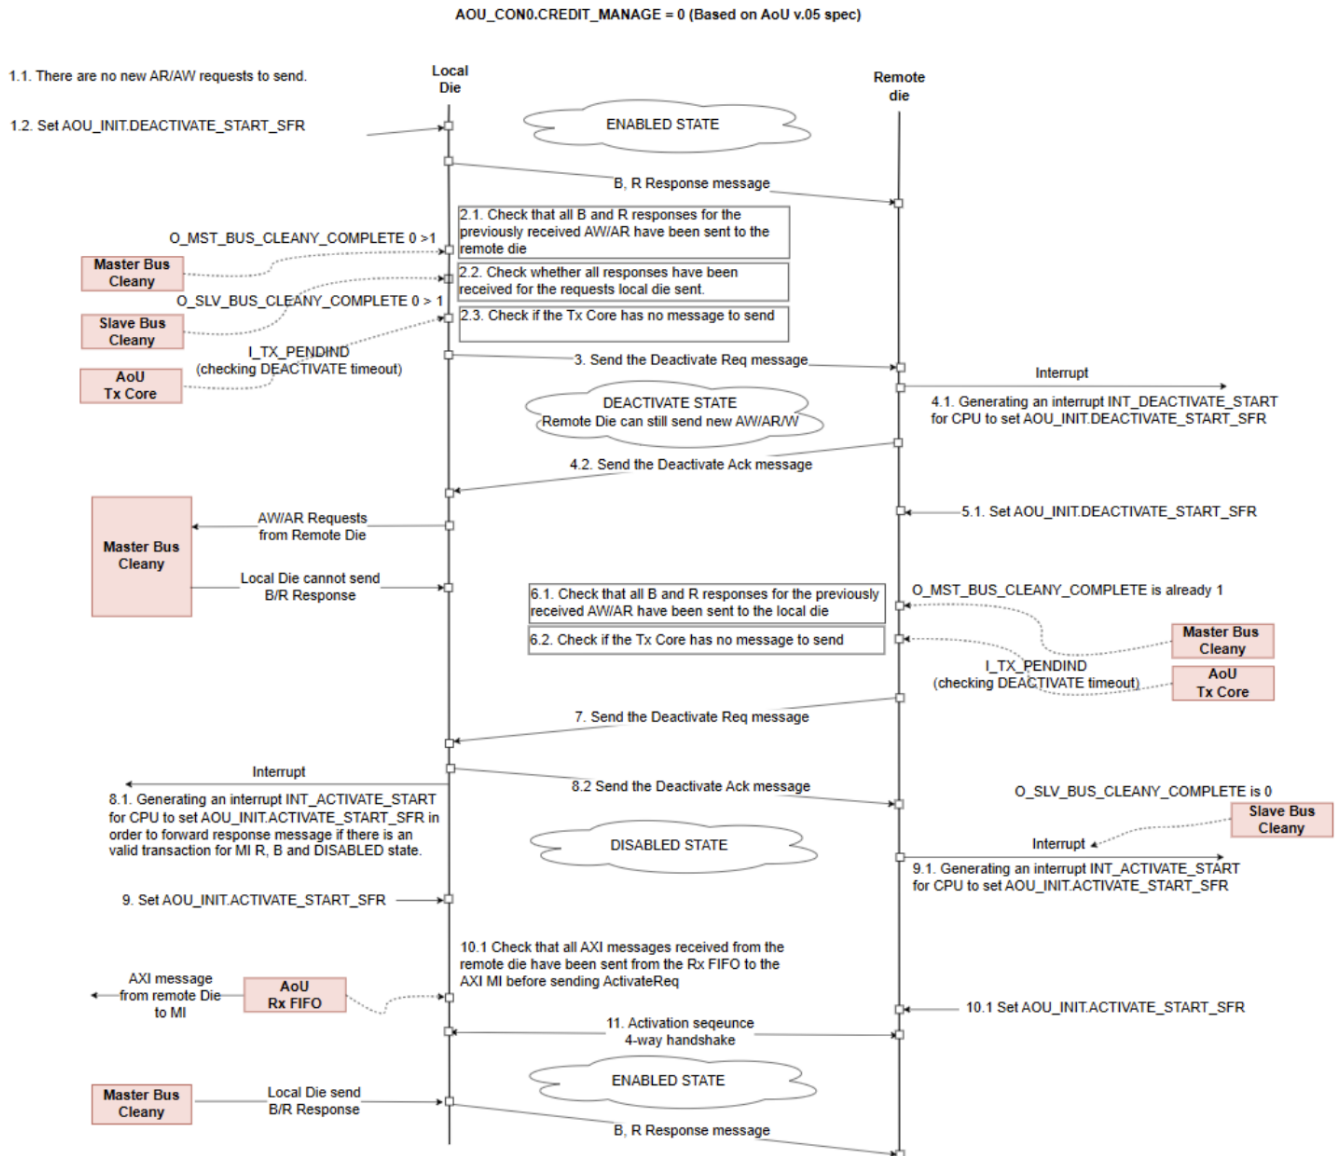



This system provides a bus cleanly-completion mechanism:

- Slave bus cleanly indicates whether the local die has received all responses to the requests it sent to the remote die.
- Master bus cleanly indicates whether the remote die has received all responses to the requests it sent to the local die.

After the local die sends a DeactivateReq, if the remote die issues a new request and expects a response, the system must re-enter the activation sequence before any response can be provided. Before sending a new ActivateReq, the Rx FIFO must be completely emptied – that is, all messages must be popped.

After deactivation, the credit count is reset, and during the subsequent activation process, credits are advertised based on the RX FIFO depth.

Therefore, before sending an ActivateReq, the local die must confirm, as described in the local die's sequence 10.1, that all messages in the RX FIFO have been popped.

To meet satisfy the condition in the local die's sequence 10.1, no backpressure must occur on the local die's MI AW/AR/W channels.

## Activation/Deactivation Interrupt

| Interrupt            | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|----------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| INT_ACTIVATE_START   | When this interrupt is detected, either the AOU_INIT.ACTIVATE_START SFR must be set to 1. When AOU_INIT.ACTIVATE_STATE_ENABLED becomes 1, you must write 1 to the AOU_INIT.INT_ACTIVATE_START W1C SFR must be set to 1. An interrupt occurs when the following conditions are met while both AOU_INIT.ACTIVATE_START SFR is not set. There is a message to send When AOU_CON0.CREDIT_MANAGE is set to 0, if a new request arrives from the remote die after the local die has sent a DeactivateReq, this interrupt is asserted because the local die is required to return a response to the remote die. When AOU_CON0.CREDIT_MANAGE is set to 1, this interrupt can also be asserted if a new request after the remote die has sent a DeactivateReq. There is a response to be received (I_SLV_BUS_CLEANY_COMPLETE == 0) When AOU_CON0.CREDIT_MANAGE is set to 0, this interrupt can be asserted if the local die issues new AXI requests after the remote die has sent a DeactivateReq. An ActivateReq message is received from the remote die. |
| INT_DEACTIVATE_START | When AOU_CON0.CREDIT_MANAGE is set to 0, if the interrupt is detected, the master IP must stop sending new request messages and the AOU_INIT.DEACTIVATE_START SFR must be set to 1. When AOU_CON0.CREDIT_MANAGE is set to 1, if the interrupt is detected, this interrupt serves only as a hint that the remote die intends to deactivate. The local die can continue sending request messages. Once all messages have been sent, the AOU_INIT.DEACTIVATE_START SFR must be set. Otherwise, the remote die may end up in a state where it can never send requests again. When AOU_INIT.ACTIVATE_STATE_DISABLED becomes 1, SW must write 1 to the AOU_INIT.INT_DEACTIVATE_START W1C SFR must be set to 1. An interrupt can be asserted when AOU_INIT.DEACTIVATE_START SFR is not set and the local die receives a DeactivateReq message from the remote die.                                                                                                                                                                                       |

## PM Entry / LinkReset / LinkDisabled Sequence

For PM entry / LinkReset / LinkDisable entry sequence, UCIE\_CORE should check AOU\_CORE state and try to change state. For this sequence, resolving pending AXI transactions is necessary.

Since current AOU SPEC has no way to send AXI responses after sending DeactiveReq. CREDIT\_MANAGE = 0 (Type 0) is matched with current AOU\_SPEC. For this case, SW needs to check whether there is pending AXI transaction.

### PM Entry SW Sequence

1. Write AOU\_INIT.DEACTIVATE\_START to 1.
2. Polling AOU\_INIT.ACTIVATE\_STATE\_DISABLED and AOU\_INIT.SLV\_TR\_COMPLETE & AOU\_INIT.MST\_TR\_COMPLETE.
  - 2.1 Although AOU\_CORE state becomes DISABLED, there may be pending AXI transactions.
  - 2.2 AOU\_CORE issues Interrupt for resolving pending AXI transactions.
  - 2.3 Activate AOU\_CORE and resolve pending AXI transactions.
  - 2.4 Deactivate AOU\_CORE
3. Polling AOU\_INIT.ACTIVATE\_STATE\_DISABLED and AOU\_INIT.SLV\_TR\_COMPLETE & AOU\_INIT.MST\_TR\_COMPLETE.
4. Do PM Entry Sequence on UCIE\_CORE.



## Link Disable SW Sequence

Same as PM entry, before doing UCIE state transition, AOU\_CORE needs to be Disabled properly.

1. Write AOU\_INIT.DEACTIVATE\_START to 1.
2. Polling AOU\_INIT.ACTIVATE\_STATE\_DISABLED and AOU\_INIT.SLV\_TR\_COMPLETE & AOU\_INIT.MST\_TR\_COMPLETE.
  - 2.1 Although AOU\_CORE state becomes DISABLED, there may be pending AXI transactions. 2.2 AOU\_CORE issues Interrupt for resolving pending AXI transactions. 2.3 Activate AOU\_CORE and resolve pending AXI transactions. 2.4 Deactivate AOU\_CORE
3. Polling AOU\_INIT.ACTIVATE\_STATE\_DISABLED and AOU\_INIT.SLV\_TR\_COMPLETE & AOU\_INIT.MST\_TR\_COMPLETE.
4. Do LinkReset / LinkDisable Sequence on UCIE\_CORE.

## Link Reset SW Sequence

If AOU\_CORE faces an uncorrectable error (ex. AOU SPEC violation), AOU\_CORE sends LinkReset to CPU and D2D adapter. LinkReset indicates that an error has occurred which requires the Link to go down.

While handling LinkReset, SW needs to do AOU\_CORE SW reset by setting AOU\_CON0.AOU\_SW\_RESET.

## FDI Bringup Flow (AOU\_TOP only)

This section applies **only** when integrating via AOU\_TOP. If you are using

AOU\_CORE\_TOP directly, you must implement an equivalent FDI state machine externally.

## Overview

AOU\_FDI\_BRINGUP\_CTRL manages the UCle 3.0 FDI state machine, handling the four handshake pairs required to bring the FDI link from RESET to ACTIVE and to manage teardown, LinkError recovery, Retrain, and L1 entry/exit.

The bringup FSM operates in the I\_CLK domain and uses 12 internal states. The status output O\_FDI\_FSM\_STATE maps these to the standard UCle 3.0 FDI state encoding.

Once the bringup FSM reaches ACTIVE, it asserts O\_INT\_FSM\_IN\_ACTIVE into AOU\_CORE\_TOP, which enables protocol-level activation as described in [Activation Flow](#).

## Bringup Sequence

The normal (happy-path) bringup from cold reset proceeds as follows:



The steps in detail:

1. **RESET:** After hardware reset, the FSM waits for PL to report `pl_state_sts = RESET` and assert `pl_inband_pres` (remote die detected).
2. **WAIT\_PRESENCE:** Remote die is present. The FSM asserts `lp_rx_active_sts` (if PL requests it) and waits for an activation trigger. The trigger can be:
  - `I_SW_ACTIVATE_START` (top-level port)
  - `I_INT_ACTIVATE_START` (from the core's activation controller)
  - `I_PL_CLK_REQ` (PL-initiated clock request)
3. **WAKE\_ASSERT / WAKE\_WAIT\_ACK:** The LP-initiated wake handshake. `lp_wake_req` is asserted and the FSM waits for `pl_wake_ack`.
4. **REQ\_ACTIVE:** Wake handshake complete. The FSM drives `lp_state_req = ACTIVE` and waits for both `pl_state_sts = ACTIVE` and `pl_rx_active_req = 1`.
5. **ACTIVE:** The FDI link is up. `O_FDI_LINK_UP` and `O_INT_FSM_IN_ACTIVE` are asserted. Protocol-level activation ([Activation Flow](#)) can now proceed.

## Supported State Transitions

| From        | To          | Trigger                                                                                                          |
|-------------|-------------|------------------------------------------------------------------------------------------------------------------|
| ACTIVE      | LINKERROR   | <code>pl_state_sts = LinkError</code> , <code>I_AOU_REQ_LINKRESET</code> , or <code>I_SW_LINKERROR_INJECT</code> |
| ACTIVE      | RETRAIN     | <code>pl_state_sts = Retrain</code> or <code>I_SW_RETRAIN_REQ</code>                                             |
| ACTIVE      | DEACTIVATE  | Deactivate request AND <code>AOU_ACTIVATE_ST_DISABLED</code>                                                     |
| ACTIVE      | L1          | <code>pl_state_sts = L1</code> (PL-initiated only)                                                               |
| LINKERROR   | RESET       | <code>pl_state_sts = RESET</code>                                                                                |
| RETRAIN     | ACTIVE      | <code>pl_state_sts = ACTIVE</code>                                                                               |
| RETRAIN     | LINKERROR   | <code>pl_state_sts = LinkError</code>                                                                            |
| DEACTIVATE  | UNWAKE_WAIT | Unconditional (1 cycle)                                                                                          |
| UNWAKE_WAIT | RESET       | <code>pl_wake_ack = 0</code> AND <code>pl_state_sts = RESET</code>                                               |
| L1          | L1_CLK_WAKE | <code>pl_clk_req = 1</code>                                                                                      |
| L1          | WAKE_ASSERT | Activate request                                                                                                 |
| L1_CLK_WAKE | WAKE_ASSERT | Unconditional (1 cycle, asserts <code>lp_clk_ack</code> )                                                        |

## PHY Type Mux

**Note:** This PHY-type multiplexer is only present in builds compiled with `+define+TWO_PHY`. In single-PHY builds, the `pl_state_sts` and `pl_stallreq` signals routed to the bringup controller come from PHY0 unconditionally; the `I_PHY_TYPE` port and the PHY1-side ports do not exist on the module boundary.

When built with `+define+TWO_PHY`, `AOU_TOP` includes a PHY-type multiplexer controlled by `I_PHY_TYPE`:

| I_PHY_TYPE | Selected PHY      | pl_state_sts source  | pl_stallreq source  |
|------------|-------------------|----------------------|---------------------|
| 0          | PHY0 (FDI_IF_WD0) | I_FDI_PL_0_STATE_STS | I_FDI_PL_0_STALLREQ |
| 1          | PHY1 (FDI_IF_WD1) | I_FDI_PL_1_STATE_STS | I_FDI_PL_1_STALLREQ |

The muxed pl\_state\_sts and pl\_stallreq are routed to the bringup controller. FDI datapath signals (data, valid, trdy, etc.) pass through to AOU\_CORE\_TOP unchanged — the core's AOU\_TX\_FDI\_IF and AOU\_RX\_FDI\_IF handle per-PHY data-path switching internally.

## Software Bringup Control

The I\_SW\_ACTIVATE\_START and I\_SW\_DEACTIVATE\_START ports on AOU\_TOP are **not SFR-mapped**. They are top-level pins that must be driven by external logic (e.g. a system controller or GPIO). The bringup FSM ORs I\_SW\_ACTIVATE\_START with the core's internal INT\_ACTIVATE\_START to form the combined activation trigger.

**Note (GAP-15):** The SFR register at address 0x8 bit[0] (activate\_start) feeds the protocol-level activation controller, not the FDI bringup FSM. Writing this bit has no effect until the FDI link is already in the ACTIVE state. To trigger cold-start FDI bringup via software, assert I\_SW\_ACTIVATE\_START on the AOU\_TOP port or arrange for PL to drive pl\_clk\_req.

## Known Limitations

The current implementation covers the core FDI bringup happy path. The following limitations apply (see RTL/fdi-bringup-todo.md for the full gap analysis):

| ID     | Description                                                                                              |
|--------|----------------------------------------------------------------------------------------------------------|
| GAP-1  | No wake handshake timeout. If pl_wake_ack never arrives, the FSM hangs in ST_WAKE_WAIT_ACK indefinitely. |
| GAP-3  | L2 (deep low-power) state is not implemented.                                                            |
| GAP-4  | Disabled state is not implemented.                                                                       |
| GAP-9  | LP-initiated L1 entry is not supported (L1 entry is PL-initiated only).                                  |
| GAP-15 | SFR activate_start (0x8 bit[0]) is disconnected from the FDI bringup FSM.                                |

# Verification Testbench

The verification flow is built on [cocotb](#) and [cocotbext-axi](#). All verification IP is fetched from PyPI at install time — no commercial VIP is required and no AXI VIP source is vendored into this repository. The default simulator is [Verilator](#) (open source); Synopsys VCS is supported transparently for users with a commercial license.

The harness (VERIF/aou\_cocotb\_top.sv) instantiates two AOU\_CORE\_TOP cores back-to-back via their 32B (256b) single-PHY FDI interfaces. Each DUT is overridden with .FDI\_CONFIG(packet\_def\_pkg::FDI\_CFG\_SP\_32B) and the build does not define +define+TWO\_PHY, so only the PHY0 ports are connected. The two DUT instances use different AXI data widths (512b and 256b) to exercise the width-interoperability path. The four AXI buses and two APB slave buses are exposed as flat top-level ports using cocotbext-axi's canonical signal naming (s\_axi\_d1\_\*, m\_axi\_d1\_\*, s\_axi\_d2\_\*, m\_axi\_d2\_\*, apb1\_\*, apb2\_\*) so the Python tests can use AxiBus.from\_prefix(dut, "<prefix>") and ApbBus.from\_prefix(dut, "<prefix>") directly. Refer to [VERIF/README.md](#) for setup, watchdogs, and the test list.

## Architecture



The data flow for a write transaction initiated on `u_dut1`'s AXI slave interface is:

1. The cocotb AxiMaster on `s_axi_d1` issues a 512b write.
2. `u_dut1` packs the AXI transaction into AOU flit(s) and transmits via the 32B (256b) PHY0 FDI port.
3. `u_dut2` receives the FDI data, unpacks it, and presents the transaction on its AXI MI.
4. The cocotb AxiRam on `m_axi_d2` accepts the write into its internal memory model.
5. A subsequent read to the same address returns the stored data back through the reverse FDI path.
6. The Python test compares the read data against the originally written payload byte-for-byte.

The reverse direction (initiated from `s_axi_d2` to `m_axi_d1`) operates symmetrically.

A separate test (`test_csr_reset_values`) reads every register defined in `csr/aou-core.rdl` over APB on both DUTs immediately after reset and *before* APB activation, verifying that every sw-readable, reset-bearing field matches its RDL-defined reset value. The expected values are built at runtime by `systemrdl-compiler`, so the check self-updates whenever the RDL changes and surfaces RDL  $\neq$  RTL drift on every run.

## Components

| Component                            | Instance / role                                   | Description                                                                                                                                                  |
|--------------------------------------|---------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------|
| AOU_CORE_TOP                         | <code>u_dut1</code>                               | DUT instance 1. AXI data width = 512b (default parameters). <code>FDI_CONFIG = FDI_CFG_SP_32B</code> (256b PHY0; no TWO_PHY).                                |
| AOU_CORE_TOP                         | <code>u_dut2</code>                               | DUT instance 2. RP0-RP3 AXI data widths overridden to 256b. <code>FDI_CONFIG = FDI_CFG_SP_32B</code> .                                                       |
| <code>cocotbext.axi.AxiMaster</code> | <code>s_axi_d1</code> , <code>s_axi_d2</code>     | Drives AXI writes/reads on each DUT's slave interface.                                                                                                       |
| <code>cocotbext.axi.AxiRam</code>    | <code>m_axi_d1</code> , <code>m_axi_d2</code>     | Memory-backed AXI slave attached to each DUT's master interface. Stores writes and serves reads.                                                             |
| <code>cocotbext.axi.ApbMaster</code> | <code>apb1</code> , <code>apb2</code>             | Drives the AOU activate write ( <code>paddr=0x8</code> , <code>pwdata=0x1</code> ) on each DUT after reset, and reads CSRs for the reset-value test.         |
| <code>fdi_flit_decoder</code>        | <code>u_fdi_dec1</code> , <code>u_fdi_dec2</code> | Passive FDI decoders. Log decoded flits to <code>dut1_fdi.log</code> / <code>dut2_fdi.log</code> . Built only when <code>FDI_LOG=1</code> is passed to make. |

Key testbench parameters:

| Parameter                       | Value   | Description                         |
|---------------------------------|---------|-------------------------------------|
| CORE_CLK_PERIOD_NS              | 1 ns    | Core clock period (AXI/FDI domain). |
| APB_CLK_PERIOD_NS               | 10 ns   | APB clock period.                   |
| D1_AXI_DATA_WIDTH               | 512     | u_dut1 AXI data width (bits).       |
| D2_AXI_DATA_WIDTH               | 256     | u_dut2 AXI data width (bits).       |
| AXI_ADDR_WIDTH                  | 64      | AXI address width.                  |
| AXI_ID_WIDTH                    | 10      | AXI ID width.                       |
| APB_ADDR_WIDTH / APB_DATA_WIDTH | 32 / 32 | APB widths on both DUT slaves.      |
| OVERALL_TIMEOUT_US              | 500     | Per-test sim-time backstop.         |

## Running the Testbench

From the repository root, set up the Python environment once and then invoke the testbench:

```
cd VERIF
bash setup_cocotb_env.sh      # creates VERIF/venv/, installs cocotb + deps
source venv/bin/activate
make                          # Verilator (default), 8 parallel C++ jobs
make SIM=vcs                  # Synopsys VCS
make WAVES=1                  # waveform dump (FST/VCD or FSDB/VPD)
make FDI_LOG=1                # enable fdi_flit_decoder logs
make clean                    # remove sim_build/ and generated artefacts
```

A successful run prints **\*\*\* SIMULATION PASSED \*\*\*** and writes results.xml (junit). Per-phase watchdogs (reset, APB activate, APB read, AXI write, AXI read) name the stuck phase explicitly on stalls and dump a snapshot of the relevant signal values so the simulator never spins silently.

You can also drive the flow via pytest, which calls cocotb's runner API and parametrises across every simulator on PATH:

```
pytest -v                     # all available simulators
pytest -v -k verilator        # only Verilator
SIM=vcs pytest -v             # force Synopsys VCS
```

## IP Integration Collateral

Machine-readable integration collateral is generated from the SystemRDL register source (csr/aou-core.rdl) using PeakRDL. This section describes the available outputs, the single-source workflow, and regeneration instructions.


### Generated Outputs (Phase 1)

| Output                                | Path                                 | Audience                                                                      |
|---------------------------------------|--------------------------------------|-------------------------------------------------------------------------------|
| IP-XACT register map (IEEE 1685-2014) | INTEG/ipxact/gen/aou_core_regmap.xml | SoC integration tools (register only — memoryMaps element)                    |
| C header                              | DOC/csr/aou_core_csr.h               | Firmware / driver developers (#define macros for offsets and field masks)     |
| Interactive HTML docs                 | DOC/csr/html/                        | Browsable register reference (any team)                                       |
| UVM register model                    | INTEG/uvm/aou_core_csr_uvm_pkg.sv    | Verification (UVM uvm_reg_block package) — drop into your UVM env's RAL tier. |
| Markdown register docs                | DOC/csr/aou-core-csrs.md             | Quick reference (also linked from <a href="#">Register Map</a> )              |

Note: the [in-repo cocotb testbench](#) does not consume the generated UVM package — it parses `csr/aou-core.rdl` directly via `systemrdl-compiler` at runtime. The UVM package is shipped as collateral for integrators whose own verification environments are UVM-based.

## Single Source of Truth

All register information lives in the SystemRDL source file `csr/aou-core.rdl`. Every output listed above is derived from this single file — there is no separate register spreadsheet or hand-maintained IP-XACT register map.

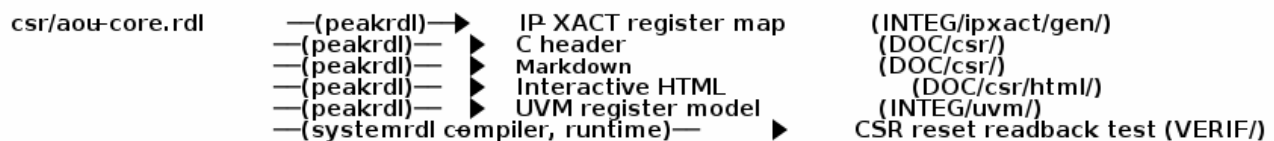

To modify register definitions (addresses, field widths, access types, reset values, descriptions), edit `csr/aou-core.rdl` and regenerate. IMPORTANT: RTL is not generated from RDL so any modification to RDL files will not be reflected in the design.

## Regeneration

From the repository root, activate the Python virtual environment and run the generation script:

```
source venv/bin/activate
bash scripts/gen_collateral.sh
```

The generation script automatically validates the IP-XACT output against the official Accellera IEEE 1685-2014 XSD schema after generation. The schema files are fetched from [accellera.org](http://accellera.org) on first run and cached locally (in `INTEG/ipxact/schema/`, gitignored).

To validate IP-XACT files independently:

```
python3 scripts/validate_ipxact.py INTEG/ipxact/gen/aou_core_regmap.xml
```

See [DOC/csr/README.md](#) for a description of each output file and the top-level [README.md](#) for virtual-environment setup.

## Planned: Full IP-XACT Component (Phase 2)

The Phase 1 IP-XACT output contains the <memoryMaps> element only (registers, fields, access types, reset values). A full IP-XACT component—including <busInterfaces> (ARM AMBA AXI4 and APB3), <ports>, and <model> parameters—is planned for a later phase.

This is deferred because AOU\_CORE\_TOP.sv uses SystemVerilog 2D packed arrays for its per-RP AXI ports (e.g., [RP\_COUNT-1:0][AXI\_ID\_WD-1:0]), which have no clean single-dimension representation in IP-XACT. Once a wrapper module (AOU\_CORE\_TOP\_WRAP) is created that flattens these into individual per-RP port signals, the full IP-XACT component will be generated by merging the PeakRDL register map into a hand-authored component template via scripts/merge\_ipxact.py.

## Timing Constraints (SDC)

Constraint files are located in INTEG/constraints/.

| File             | Purpose                                         |
|------------------|-------------------------------------------------|
| aou_core_top.sdc | Clock definitions, I/O delays, CDC, false paths |
| aou_core_top.upf | Power domain and supply network                 |

The SDC file defines timing constraints for synthesis and STA. All delay budget variables are declared at the top of the file and can be overridden by the integrating project.

### Clock Definitions

| Clock    | Port   | Frequency | Period    |
|----------|--------|-----------|-----------|
| clk_core | I_CLK  | 1 GHz     | 1.000 ns  |
| clk_apb  | I_PCLK | 100 MHz   | 10.000 ns |

Both resets (I\_RESETN, I\_PRESETN) are constrained with set\_false\_path and should be synchronised externally or by the integrating design. The DFT scan-mode pin (TIEL\_DFT\_MODESCAN) is held at 0 via set\_case\_analysis in functional mode.

### I/O Delay Budgeting Strategy

Two budgeting categories are used, based on whether the path between the I/O port and the nearest internal flop is combinational or registered:

| Path type     | Internal budget     | External budget     | Rationale                                                      |
|---------------|---------------------|---------------------|----------------------------------------------------------------|
| Combinational | 50% of clock period | 50% of clock period | Mux/decode logic inside RTL takes some portion of cycle        |
| Registered    | 30% of clock period | 70% of clock period | Short wire path to first flop; external block gets more margin |

#### Interface classification summary:

- **APB Slave:** Registered (via ASYNC\_APB\_BRIDGE 2-flop synchroniser on both sides). Constrained to clk\_apb.
- **AXI Slave inputs** (address, data, handshake to FIFOs): Registered—input data is captured directly into FIFO register arrays.
- **AXI Slave outputs** (READY signals, read/bresp data): Combinational—passes through arbitration muxes.

- **AXI Master outputs** (AR/AW/W channels): Combinational — data passes through FIFO read mux, arbitration mux (AXI4MUX\_3X1), and REV\_RS mux.
- **AXI Master inputs** (R/B data, READY feedback): Combinational — feeds control logic and FIFO write.
- **FDI TX outputs** (DATA, VALID, IRDY): Combinational. STALLACK outputs are registered.
- **FDI RX inputs**: Combinational — data/valid pass through an input mux. FLIT\_CANCEL drives both sequential and combinational logic.
- **Interrupt/control signals**: Combinational.

## Clock Domain Crossings

The only CDC in AOU\_CORE\_TOP is between clk\_core and clk\_apb, handled by the ASYNC\_APB\_BRIDGE module which uses AOU\_SOC\_SYNCHSR (2-flop) synchronisers. The SDC uses set\_clock\_groups -asynchronous to exclude cross-domain paths from STA.

## UPF Power Intent

The current UPF defines a single always-on power domain (PD\_AOU\_TOP) covering the integration scope (the AOU\_TOP instance, which includes AOU\_CORE\_TOP and AOU\_FDI\_BRINGUP\_CTRL, when integrating via AOU\_TOP; or the AOU\_CORE\_TOP instance when integrating via AOU\_CORE\_TOP directly) with a VDD/VSS supply pair. No isolation, retention, or level-shifting strategies are required at this time. When power domains are introduced in the future, the UPF should be extended with create\_power\_domain for each switchable domain, along with appropriate isolation and retention strategies.

## Library Cell Replacement

The RTL/LIB/ directory contains three behavioral reference models that are used by the design for reset infrastructure and clock-domain crossing. These models are functionally correct for simulation but **must be replaced** with process-appropriate implementations before synthesis or tapeout.

| Module            | File                        | Parameters                                       | Ports                                                  | Behavioral function                                                                                    | Where instantiated                                                                          |
|-------------------|-----------------------------|--------------------------------------------------|--------------------------------------------------------|--------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------|
| AOU_SOC_SYNCHSR   | RTL/LIB/AOU_SOC_SYNCHSR.v   | DW (width), RST_VAL (reset value), DEPTH (2/3/4) | I_CLK,<br>I_RESETN,<br>I_D[DW-1:0]<br>→ O_Q[DW-1:0]    | Multi-stage synchroniser: per-bit shift register of depth DEPTH with async active-low reset to RST_VAL | ASYNC_APB_BRIDGE_SI,<br>ASYNC_APB_BRIDGE_MI (CDC synchronisation)                           |
| AOU_SOC_GFMUX_LVT | RTL/LIB/AOU_SOC_GFMUX_LVT.v | DW (width)                                       | I_SEL,<br>I_A[DW-1:0],<br>I_B[DW-1:0]<br>→ O_Y[DW-1:0] | Glitch-free 2:1 mux (I_SEL=0 selects I_A, I_SEL=1 selects I_B)                                         | AOU_CORE_TOP as u_sw_reset_mux (SW reset selection)                                         |
| AOU_SOC_BUF       | RTL/LIB/AOU_SOC_BUF.v       | DW (width)                                       | I_A[DW-1:0]<br>→ O_Y[DW-1:0]                           | Non-inverting buffer (identity: O_Y = I_A)                                                             | AOU_CORE_TOP as<br>dft_persistent_buf_scan_resetrn_sw (DFT persistent buffer on scan reset) |

### Replacement approaches:

1. **Drop-in replacement** — Create new module definitions with the same module names and identical port/parameter interfaces, backed by standard cells or hard macros from the target process library. Replace the corresponding files in the filelist (RTL/LIB/filelist.f) with the new implementations.
2. **In-place wrapper** — Edit the provided module shells directly, replacing the behavioral assign/always bodies with

instantiations of target-library primitives while keeping the module name and port interface unchanged.

### Important considerations:

- AOU\_SOC\_SYNCHSR is on the CDC path and must be replaced with a foundry-qualified synchroniser cell (or equivalent hardened multi-flop structure) to meet metastability MTBF requirements. The DEPTH parameter must be honoured.
- AOU\_SOC\_GFMUX\_LVT is on the reset mux path and must be replaced with a glitch-free clock/reset mux cell to avoid glitches during reset switching.
- AOU\_SOC\_BUF is on the DFT scan-reset path. Replace with a buffer cell that will be preserved through synthesis optimisation (typically via a dont\_touch or equivalent attribute).
- The behavioral models can serve as a golden reference for verifying functional equivalence of the replacements.

## Scan-Friendly Cell Requirements

Beyond functional correctness, each replacement cell must be compatible with ATPG scan insertion and pattern generation. The behavioral models have no scan awareness; the replacements must address this.

### AOU\_SOC\_SYNCHSR — Scan-safe synchronizer

Standard multi-flop synchronizers cause X-propagation during scan shift because the asynchronous input crossing from the other clock domain is not controllable by the ATPG tool. The replacement synchronizer must be **scan-safe** via one of the following approaches:

1. **Built-in scan bypass mux** (preferred): The synchronizer cell includes a scan-mode mux that bypasses the asynchronous first-stage flop during shift. The ATPG tool holds the bypass active during shift and restores normal operation for capture. This is the standard approach used by foundry-provided synchronizer cells (e.g., Sdff-based sync cells with a scan-enable input).
2. **ATPG tool constraint**: If the replacement cell does not have a built-in bypass, the integrator must declare it as a synchronizer in the ATPG tool so the tool forces the input to a known value during shift (e.g., Synopsys `set_dft_signal -type constant` on the synchronizer input).

Foundry-provided synchronizer cells are strongly preferred because they are pre-characterized for both metastability MTBF and scan testability.

### AOU\_SOC\_GFMUX\_LVT — Clock/reset mux recognition

This cell sits on the scan-mode reset mux path (see [TIEL\\_DFT\\_MODESCAN Usage](#)). The replacement must be recognized by the ATPG tool as a **clock or reset mux cell**, not a generic data mux. If the tool treats it as a regular mux, it may toggle I\_SEL during scan patterns, causing reset glitches that corrupt shift-register state and invalidate test patterns.

The integrator should:

- Use a process library cell explicitly categorized as a clock/reset mux (e.g., a cell from the library's ICG or clock-mux family).
- Apply the appropriate DFT tool attribute to prevent I\_SEL toggling during scan. For example, in Synopsys DFT Compiler: `set_dft_signal -view existing_dft -type ScanMux -port u_sw_reset_mux/I_SEL`.
- Verify in the ATPG tool's DFT rule check that the mux select is classified as a test-mode signal, not a scannable data input.

## **AOU\_SOC\_BUF — Optimization protection**

This buffer drives the tied-low scan-reset bypass value into `u_sw_reset_mux`. Without protection, the synthesis tool will optimize it away (replacing it with a direct tie-off), which may cause the downstream reset mux to be optimized or restructured in ways that break the intended DFT architecture.

The replacement buffer must carry a `dont_touch` or `size_only` attribute (the specific attribute name depends on the synthesis tool) to ensure it survives all optimization passes, including:

- Logic optimization and constant propagation
- Incremental optimization during place-and-route
- Post-route optimization

# Project Defines

Compile-time defines for OCAH RTL: the names that apply across OCAH, then the defines specific to one subsystem. Set the OCAH names in this chapter. Do not set vendor preprocessor names; `hw/common/defs/ocah_vendor_defines.svh` derives the aliases those names imply. OCAH lint and Yosys force-include that header. Native DV expands the same aliases onto the command line. An adopter compile must do one of those two. Block-selection defines ride the Bender filelist as `define` lines ([Synthesis filelist defines](#)); do not restate them on the command line.

A `define` in a header is visible only in compilation units that include it. Command-line `'define / -D` is global. Force-include (or the flow's alias expansion) is what makes the mapping apply to vendored files that never include an OCAH header.

# Chapter 13. SIMULATION

**SIMULATION** selects the verification view of OCAH RTL. Set it on every simulation compile and on no other kind of build:

```
+define+SIMULATION    # VCS, Xcelium
-DSIMULATION          # Verilator, Icarus
```

OCAH's own DV flows set it; a compile driven by an adopter's testbench does not.

## WARNING

Do not let **SIMULATION** reach synthesis, formal, or a gate-level flow. It enables **initial** blocks, **\$readmemh**, **\$random** and DPI exports; a tool that skips those rather than rejecting them yields a netlist that does not correspond to the RTL you verified.

Without the define, these testbench hooks are not compiled in and the plusargs are silently ignored:

| Plusarg                                                                                      | Effect                                                                                                                                                                                                                                             |
|----------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>+skip_fuse_sense</b>                                                                      | <b>efuse_shadow_regs</b> reports fuse sense complete immediately rather than sensing the bank through the adopter's SHIM.                                                                                                                          |
| <b>+smc_shadow_reg_preload=&lt;file&gt;</b> ,<br><b>+sep_shadow_reg_preload=&lt;file&gt;</b> | Loads the shadow registers from a hex image. Takes effect only alongside <b>+skip_fuse_sense</b> .                                                                                                                                                 |
| <b>+rom_bin64=&lt;file&gt;</b> , <b>+rom_hex=&lt;file&gt;</b>                                | Preloads <b>OCAH4CORECluster_rom_ext</b> , the SMC CPU ROM simulation model. Applies only to integrations that use the reference memory swaps.                                                                                                     |
| <b>+cdc_instrumentation_enabled=1</b>                                                        | Arms every <b>prim_cdc_rand_delay</b> and <b>abr_prim_cdc_rand_delay</b> instance. On each input change, a random subset of bits keeps its old value for one more destination cycle. Without the plusarg the delay model passes its input through. |

The define also zeroes the RMA and security-disable token and digest bits in **efuse\_token\_processing** at time 0, which have no reset and otherwise power up X, and routes OpenTitan assertion failures in the SEP **prim\_assert** shim to **\$error** on non-UVM runs.

Two model families it enables make simulation deliberately non-deterministic: **prim\_flop\_2sync**, its Adams Bridge equivalent, and the OCAH **prim\_sync3** / **prim\_sync4** cells insert **prim\_cdc\_rand\_delay** ahead of the synchronizer, which **+cdc\_instrumentation\_enabled=1** arms, and **prim\_lfsr** and **prim\_double\_lfsr** randomize their default seed on simulators other than Verilator (**+prim\_lfsr\_use\_default\_seed=1** pins it). Two runs of one test are therefore not identical unless the simulator seed is fixed; record the seed with any failure you intend to reproduce.

# Chapter 14. SYNTHESIS

`SYNTHESIS` selects the implementation view: simulation-only SVA, `$readmemh` preload, procedural delays, and similar non-synthesizable paths are omitted. Slang lint, Verilator lint, and Yosys set it (`OCAH_FLOW_COMMON_DEFINES`, or `+define+SYNTHESIS=1` for Verilator lint). The Bender `synth` view emits `+define+SYNTHESIS=1` on its filelist, so a synthesis compile that consumes the filelist's defines (below) gets it without tool setup; Synopsys tools also predefine the name. Native DV does not set it, except the SMC `dual` target, which lists it next to `SMC_DUAL`. The open formal path (`sby / read_slang`) keeps it defined. Licensed formal backends leave it unset.

# Chapter 15. EMULATION

**EMULATION** selects the emulation view of OCAH RTL: synthesizable RTL for a hardware emulator (Palladium, Zebu, and similar) that keeps the debug hooks an emulator can map into hardware. Set it on the emulator compile, and set neither **SIMULATION** nor **SYNTHESIS** alongside it:

```
+define+EMULATION
```

| Compiled in                                                                                                             | Compiled out                                                                                                  |
|-------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------|
| Concurrent and immediate assertions, cover and assume: first-party, OpenTitan, Adams Bridge, Caliptra, and PULP macros. | Procedural delays. <b>ASSERT_INIT_NET</b> and its equivalents keep the check and drop the <b>#1ps</b> settle. |
| Elaboration-time parameter checks.                                                                                      | Random CDC delay models and randomized seeds.                                                                 |
| <b>\$display</b> , <b>\$error</b> , and <b>\$fatal</b> debug messages.                                                  | Testbench handshake <b>initial</b> blocks, and the testbench tasks in the i3c <b>axi_if</b> interface.        |
| <b>final</b> blocks, and plusarg hooks outside the <b>SIMULATION</b> set, such as <b>+show_mem_paths</b> .              | DPI exports, and the <b>SIMULATION</b> plusargs with their ROM and shadow-register file preload.              |
| <b>\$readmemh</b> initialization from a memory's <b>MemInitFile</b> parameter.                                          |                                                                                                               |

**EMULATION** takes precedence over **SYNTHESIS** in first-party RTL and in the vendored assertion headers, so a compile where the tool predefines **SYNTHESIS** still gets the view above. Generated RTL (the SMC CPU cluster and the register blocks) and vendored logic outside the assertion headers still follow **SYNTHESIS**, so a compile that sets both loses their elaboration checks and debug messages. First-party RTL gives **EMULATION** precedence over **SIMULATION** too, but vendored CDC delay models and seed randomization follow **SIMULATION** whatever else is set.

The vendor aliases need the force-include or alias expansion described at the top of this chapter; without it, PULP assertions follow **SYNTHESIS** and **ASSERTS\_OFF** instead.

In the emulation view the entropy source ring oscillator is a zero-delay combinational loop. The emulator compile must break or model it.

The emulation view has no testbench preloads. **OCAH4CORECluster\_rom\_ext** is a **prim\_rom** with an empty **MemInitFile**, so load the SMC CPU ROM image through the emulator's memory backdoor. Fuse sense reads the bank through the adopter's SHIM, which the emulation must model.

Do not set **SYNTHESIS** in order to keep emulator debug hooks; **SYNTHESIS** strips assertions as well. Do not set **PULP\_FPGA\_EMUL** as a substitute: that name is an FPGA clock-mux path.

# Chapter 16. Tool predefined names

Simulators and frontends define these themselves. Restate them only on that tool’s compile line. Do not put them in a Bender filelist shared with other tools, and do not add a Bender target named `verilator` (flist-plus would emit `+define+TARGET_VERILATOR` into that shared `.f`).

| Define                 | Role                                                                                                                                                     |
|------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>VERILATOR</code> | Verilator’s predefine. First-party and OpenTitan SVA leave their include-assert macros undefined.                                                        |
| <code>VCS</code>       | VCS predefine. Some PULP AXI files branch on it.                                                                                                         |
| <code>XCELIUM</code>   | Xcelium’s predefine. Native DV uses this tool.                                                                                                           |
| <code>XSIM</code>      | Vivado simulator. PULP assertion macros also treat it as off.                                                                                            |
| <code>QUESTA</code>    | QuestaSim’s predefine. Some PULP AXI files branch on it.                                                                                                 |
| <code>YOSYS</code>     | Auto-defined by yosys-slang. The Yosys <code>prim_assert.sv</code> shim undefines it around the vendored header when <code>SYNTHESIS</code> is also set. |

# Chapter 17. Native DV extras

An adopter that copies the native profile sees these in addition to **SIMULATION**. They are not required to elaborate OCAH RTL for silicon.

| Define                                                                        | Role                                                                                                                                                                                                                                                                                       |
|-------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>RANDOM=0, RANDOMIZE_MEM_INIT, RANDOMIZE_REG_INIT, RANDOMIZE_DELAY=0.02</b> | Chisel/FIRRTL random-init hooks on the generated SMC cluster. Native DV zero-fills rather than randomizing.                                                                                                                                                                                |
| <b>UVM</b>                                                                    | SV-UVM framework overlay. Assertion headers report through <b>uvm_report_error</b> . Adds the UVM harness block to shared testbench tops. Do not set it on a cocotb compile.                                                                                                               |
| <b>COMMON_CELLS_ASSERTS_OFF</b>                                               | Strips inline assertion blocks inside PULP <b>common_cells</b> modules. Native DV sets it on Verilator only, from the shared Verilator flags in <b>hw/common/dv/configs/profiles/native.toml</b> ; VCS and Xcelium compile and run those blocks. It is independent of <b>ASSERTS_OFF</b> . |
| <b>ASSERTS_OFF</b>                                                            | Turns off PULP <b>OCAH_PULP_INC_ASSERT</b> macros. The SMC and DTP Verilator DUT flags and Verilator lint set it; VCS and Xcelium native compiles do not.                                                                                                                                  |

# Chapter 18. Derived assertion gates

Do not set these. Headers define them from the view and tool names above.

| Define               | Defined when                                                                                                                                                                                                                                                                                 |
|----------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| OCAH_DEBUG_LIVE      | First-party elaboration checks and debug messages. <code>ocah_assert.svh</code> defines it when <code>EMULATION</code> is set or <code>SYNTHESIS</code> is absent.                                                                                                                           |
| OCAH_INC_ASSERT      | First-party concurrent SVA. <code>ocah_assert.svh</code> defines it when <code>OCAH_DEBUG_LIVE</code> is defined and <code>VERILATOR</code> and <code>NO_OCAH_ASSERT</code> are both absent.                                                                                                 |
| OCAH_OT_INC_ASSERT   | OpenTitan-derived SVA: off under <code>VERILATOR</code> , otherwise on unless <code>SYNTHESIS</code> is set without <code>EMULATION</code> (YOSYS forces it on). The Adams Bridge and Caliptra assertion gates give <code>EMULATION</code> the same precedence over <code>SYNTHESIS</code> . |
| OCAH_PULP_INC_ASSERT | PULP <code>OCAH_PULP_ASSERT*</code> macros, unless <code>ASSERTS_OFF</code> , <code>SYNTHESIS</code> , or <code>XSIM</code> is set. <code>ASSERTS_OVERRIDE_ON</code> , which <code>EMULATION</code> implies, forces it on.                                                                   |
| NO_OCAH_ASSERT       | Optional escape: drops first-party SVA only. No OCAH flow sets it.                                                                                                                                                                                                                           |

# Chapter 19. Vendor aliases

`ocah_vendor_defines.svh` defines these from the OCAH names. Do not set the vendor column.

| OCAH name  | Vendor alias        |
|------------|---------------------|
| SYNTHESIS  | TARGET_SYNTHESIS    |
| SIMULATION | ABR_SIMULATION      |
| EMULATION  | ASSERTS_OVERRIDE_ON |
| VERILATOR  | TARGET_VERILATOR    |
| XSIM       | TARGET_XSIM         |

# Chapter 20. Adopter overlay hooks

No checked-in config sets these. An adopter overlay (`run_dv.py --overlay`) may append them.

| Define                           | Role                                            |
|----------------------------------|-------------------------------------------------|
| <code>OCAH_JTAG_VENDOR_IF</code> | Nests a commercial JTAG verification interface. |
| <code>OCAH_AXI_VENDOR_IF</code>  | Nests a commercial AXI verification interface.  |

# Chapter 21. Subsystem defines

Each subsystem graph reads the view, tool and assertion names above as this chapter describes. The sections below cover the defines the rest of the chapter does not: two shared cells, then each subsystem in turn.

## 21.1. Shared cells

Two cells in `hw/common/ocah_prim`, compiled into every subsystem graph, read a define of their own. Leave both unset.

| Define                   | Reason                                                                                                                                                                                                                  |
|--------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>GATER_CHK</code>   | In the simulation view, <code>prim_clk_gater_hysteresis</code> expands <code>export_dpi_get</code> to export its state over DPI. OCAH does not define that macro, so setting <code>GATER_CHK</code> breaks the compile. |
| <code>SIM_APB_ARB</code> | Adds a test-master APB port set to <code>prim_apb_arb</code> . No OCAH module instantiates <code>prim_apb_arb</code> .                                                                                                  |

## 21.2. SMC

The SMC graph adds three groups: first-party simulation hooks, the generated CPU cluster macros, and the i3c-core configuration.

### 21.2.1. Simulation hooks

The `SIMULATION` plusargs for the CPU ROM and the eFuse shadow registers are listed under `SIMULATION`. The SMC RTL also reads these view names:

- `smc_4core_cpu` prints scratch RAM initialization progress when neither `SYNTHESIS` nor `EMULATION` is set.
- `smc_local_fabric` checks its AXI parameter widths at elaboration when `OCAH_DEBUG_LIVE` is defined.

The `prim_flop_2sync`, `prim_sync3` and `prim_sync4` synchronizers instantiate `prim_cdc_rand_delay` in the simulation view, but no `smc` Bender target lists `prim_cdc_rand_delay.sv`. Add it to any `SIMULATION` compile of the `smc` filelist; SMC DV lists it as an extra source in `hw/sys/smc/dv/smc_sim_cfg.toml`.

The SMC DV `dual` target sets `SYNTHESIS` next to `SMC_DUAL`, so the CPU clusters in that build get no time-zero initialization (`CPU cluster`). `SMC_DUAL` is read only by `hw/sys/smc/dv/tb/tb_top.sv`, where it selects the two-instance testbench.

### 21.2.2. CPU cluster

The Chipyard-generated cluster in `hw/sys/smc/rtl/smc_cpu/chipyard_generated_files/4core` reads the FIRRTL macros in the table below. It ignores `EMULATION`. The generated code defines `ENABLE_INITIAL_REG_` and `ENABLE_INITIAL_MEM_` only when `SYNTHESIS` is absent, and those gate every time-zero initializer, so a `SYNTHESIS` compile reads none of the initialization macros.

| Define                          | Effect                                                                                                                                        |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------|
| <code>RANDOMIZE_REG_INIT</code> | Assigns every cluster register from <code>RANDOM</code> at time zero. Without it the registers hold X until their first clocked write.        |
| <code>RANDOMIZE_MEM_INIT</code> | Assigns every generated memory array from <code>RANDOM</code> at time zero. Without it a read before the first write returns X.               |
| <code>RANDOM</code>             | The value both initializers assign. Defaults to <code>\$random</code> ; <code>RANDOM=0</code> makes initialization a deterministic zero-fill. |

| Define                                                                 | Effect                                                                                                             |
|------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------|
| <code>RANDOMIZE_DELAY</code>                                           | Delay before the initializers run, in simulator time units. Defaults to <code>0.002</code> . Verilator ignores it. |
| <code>INIT_RANDOM</code>                                               | Code placed at the start of every generated initializer, for a custom seeding scheme. Defaults to empty.           |
| <code>FIRRTL_BEFORE_INITIAL</code> , <code>FIRRTL_AFTER_INITIAL</code> | Code placed before and after every generated <code>initial</code> block. Defaults to empty.                        |
| <code>ASSERT_VERBOSE_COND</code>                                       | Expression that gates the <code>\$error</code> message of each generated assertion. Defaults to 1.                 |
| <code>STOP_COND</code>                                                 | Expression that gates the <code>\$fatal</code> that follows each generated assertion failure. Defaults to 1.       |

Each generated module also defines a default for `PRINTF_COND`, but the cluster contains no `printf`, so that macro has no effect.

Do not set `RANDOMIZE`, `INIT_RANDOM_PROLOG`, `ENABLE_INITIAL_REG`, `ENABLE_INITIAL_MEM`, `PRINTF_COND`, `ASSERT_VERBOSE_COND` or `STOP_COND`. The generated code derives them from the macros above.

### 21.2.3. i3c-core configuration

`vendor/chipsalliance/i3c-core/upstream/src/i3c_defines.svh` fixes the i3c-core configuration: the AXI host interface (`I3C_USE_AXI`) and its widths, controller and target support, loopback disabled, and the FIFO, DAT and DCT depths. Change a value in that header, not on the command line. The header leaves these upstream options unset:

| Define                              | Effect when set                                                                                                         |
|-------------------------------------|-------------------------------------------------------------------------------------------------------------------------|
| <code>I3C_USE_AHB</code>            | Selects an AHB host interface instead of AXI.                                                                           |
| <code>AXI_ID_FILTERING</code>       | Adds AXI ID filtering, which needs <code>NUM_PRIV_IDS</code> and changes the <code>i3c</code> parameter and port lists. |
| <code>CALIPTRA_AXI_SUB_EX_EN</code> | Adds exclusive-access tracking to the AXI subordinate.                                                                  |
| <code>IBI_FIFO_EXT_SIZE</code>      | Multiplies the HCI and TTI IBI FIFO depths by 8.                                                                        |
| <code>DISABLE_INPUT_FF</code>       | Removes the two-flop synchronizers on the SCL and SDA inputs.                                                           |

## 21.3. DTP

The `dtp` graph reads no define of its own. Two parts of it respond to the view names:

- `jtag2axi` asserts AXI valid stability and address and data pairing on its manager port when `OCAH_DEBUG_LIVE` is defined.
- The `prim_flop_2sync`, `prim_sync3` and `prim_sync4` synchronizers instantiate `prim_cdc_rand_delay` in the simulation view. The Bender `simulation` target adds `prim_cdc_rand_delay.sv` to the `dtp` graph, so generate a simulation filelist with `-t dtp -t simulation`.

## 21.4. SEP

The SEP graph adds five groups: the Adams Bridge block-selection defines, the VeeR EL2 core configuration, first-party view checks, the key manager's defines, and testbench-side DV names.

### 21.4.1. Adams Bridge

The Adams Bridge source group of the `sep` Bender target sets these three defines, and `flist-plus` emits them ahead of the source list. Every flow that uses the `sep` target gets them.

| Define            | Effect                                                                                                                                                                                                                                                                                                                                                                                          |
|-------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| SEP_ABR_EN        | Includes the Adams Bridge post-quantum engine: <code>sep_crypto</code> instantiates <code>sep_crypto_abr_wrapper</code> , and <code>sep_ip_integration</code> builds the ABR SRAMs. Without it, <code>sep_crypto</code> terminates the ABR AXI aperture and the key manager's ABR key bus with DECERR subordinates, and <code>sep_ip_integration</code> drives the ABR memory response to zero. |
| CALIPTRA          | Adds the Caliptra Key Vault ports to <code>abr_top</code> , which <code>sep_abr_kv_shim</code> binds. The vendored RTL requires it. <code>sep_crypto</code> raises an elaboration <code>\$error</code> when <code>SEP_ABR_EN</code> is set without <code>CALIPTRA</code> .                                                                                                                      |
| TECH_SPECIFIC_ICG | Removes the behavioural latch gate from <code>abr_icg.sv</code> . The overlay <code>abr_clk_gate</code> instantiates <code>prim_clock_gating</code> in its place.                                                                                                                                                                                                                               |

Adams Bridge also reads `RV_FPGA_SCA`, which adds FPGA side-channel trigger outputs to `abr_top`, and `FCOV`, which adds a covergroup to its AHB subordinate. No OCAH flow sets either.

## 21.4.2. VeeR EL2 core

The `RV_*` names that configure the VeeR EL2 core come from the snapshot header `vendor/chipsalliance/Cores-VeeR-EL2/overlay/snapshots/sep/common_defines.vh`, which the `sep_el2` Bender target puts on the include path. Change the core configuration by regenerating the snapshot with the `veer` command recorded in its header, not with a command-line `define`.

The snapshot enables user mode (`RV_USER_MODE`), Smepmp (`RV_SMEPMP`) and the AXI4 bus interface (`RV_BUILD_AXI4`). It leaves `RV_BUILD_AHB_LITE`, `RV_ASSERT_ON`, `RV_FPGA_OPTIMIZE`, `RV_PHYSICAL`, `RV_CLOCKGATE`, `RV_LOCKSTEP_ENABLE` and `RV_LOCKSTEP_REGFILE_ENABLE` unset.

`RV_LOCKSTEP_ENABLE` also changes SEP RTL. With it, `sep_cpu` connects `lockstep_ctrl_i` and `lockstep_status_o` to the lockstep ports of `e12_veer_wrapper`. Without it, `sep_cpu` ignores `lockstep_ctrl_i` and holds `lockstep_status_o` at zero. The `sep_cpu` port list is the same either way.

The `sep_el2` Bender target sets `TECH_SPECIFIC_EC_RV_ICG`, so `beh_lib.sv` uses the snapshot's `user_clock_gate` cell rather than its own behavioural clock gate.

The core also reads `GTLSIM`, which zero-initializes its RAM models for gate-level simulation, and `DUMP_BTБ_ON`, which prints branch predictor configuration and a trace of BTB events. No OCAH flow sets either.

## 21.4.3. First-party view checks

- `sep_crypto` checks the key manager and eFuse AXI-Lite widths at elaboration when `OCAH_DEBUG_LIVE` is defined.
- `sep_local_axi_xbar_wrapper` and `sep_system_peripherals_xbar_wrapper` check their AXI parameter widths at elaboration when `OCAH_DEBUG_LIVE` is defined.
- `tlul_rsp_intg_gen` asserts that incoming response integrity and user bits are zero, where its parameters declare them zero, when `OCAH_DEBUG_LIVE` is defined.
- In the simulation view, `entropy_ring_stage_wrappers` adds a `#1` delay to each ring oscillator stage so the ring oscillates. `SYNTHESIS` and `EMULATION` drop the delay, so a zero-delay simulation of either view has no entropy source oscillation.

## 21.4.4. Key manager

| Define                    | Effect                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|---------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>OCAH_KM_VROM</code> | Decodes the virtual ROM window, <code>0x1000_0000–0x1000_FFFF</code> , in <code>picorv32_wrapper</code> . Key manager CPU accesses to the window leave on the <code>vrom_mem_*</code> nets instead of the AXI-Lite crossbar. The window is executable with <code>KMCSR.SRAM_EXEC_MODE</code> in either state and is exempt from the ROM lockout. An access completes only when the simulation drives <code>vrom_mem_ready</code> ; otherwise the key manager CPU stalls. No OCAH flow sets it, SEP DV included. |

Without `OCAH_KM_VROM`, the window is an unmapped key manager address. A load or store answers DECERR and sets `KMCSR.IRQ_STATUS.AXI_DECERR`, and an instruction fetch sets `KMCSR.IRQ_STATUS.EXEC_VIOLATION`.

**WARNING** `OCAH_KM_VROM` is simulation-only. Elaboration fails with an `$error` when `SYNTHESIS` or `EMULATION` is also defined, because nothing outside a simulation drives `vrom_mem_ready`.

The key manager’s picorv32 core reads `FORMAL`, which compiles its embedded `assert` and `restrict` properties, and the riscv-formal names (`RISCV_FORMAL`, `RISCV_FORMAL_ALTOPS`, `RISCV_FORMAL_BLACKBOX_REGS`, `RISCV_FORMAL_BLACKBOX_ALU`), the `DEBUG*` trace names and the `PICORV32_TESTBUG_*` fault injections. Leave these unset outside a picorv32 formal flow.

## 21.4.5. DV testbench names

SEP DV sets these for `hw/sys/sep/dv/tb/tb_top.sv` and its CPU stub. No DUT file reads them.

| Define                                | Effect                                                                                                                                                                                                                                        |
|---------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>SEP_JTAG_AXIL_LIVE</code>       | Drives the OTP debug AXI-Lite port from the testbench instead of tying it off.                                                                                                                                                                |
| <code>SEP_SMN_INBOUND_AXI_LIVE</code> | Drives the SMN inbound AXI port from the testbench instead of tying it off.                                                                                                                                                                   |
| <code>SEP_SMC_MEM_MODEL</code>        | Routes the SMC address region to a testbench memory model. Set on the <code>rom_boot</code> target.                                                                                                                                           |
| <code>SEP_CPU_STUB</code>             | Compiles <code>hw/sys/sep/dv/shims/cpu/sep_cpu_stub.sv</code> in place of <code>sep_cpu</code> , so the build contains no VeeR core. The <code>lsu_stub_all_live</code> target sets it and removes <code>sep_cpu.sv</code> from the filelist. |

The SEP DV Verilator flags set neither `VERILATOR` nor `ASSERTS_OFF`. Verilator predefines the first; without the second, the PULP assertion macros expand.

# Chapter 22. Synthesis filelist defines

The Bender `synth` view is the authoritative source for the defines a synthesis compile needs. Generate the filelist from that view — or use the filelist shipped in a release package, which is generated the same way:

```
bender script flist-plus <block targets> -t synth > <block>.f
```

The filelist carries the defines as `define` lines paired with the sources they select: `SYNTHESIS=1`, and the package switches that choose between behavioural models and technology-cell overlays in vendored RTL. Consume the `define` lines from the filelist rather than restating them on the tool command line: the set changes as the tree does, and the filelist pairs each switch with the overlay sources it selects.

## WARNING

A compile that drops the `define` lines analyzes and elaborates without error. The failure is silent mis-selection: vendored RTL builds its behavioural models instead of the technology-cell overlays, and optional blocks compile out of the hierarchy. After elaboration, confirm the netlist instantiates the primitive cells and the block structure you expect.

The filelist also lists `ocah_vendor_defines.svh`, but vendored packages precede it in compile order, so it does not replace the force-include described at the top of this chapter.

## 22.1. Synopsys Design Compiler and Fusion Compiler

`analyze` rejects a filelist as a native argument (VER-294), and `analyze -define` covers only names given on that command. Hand the filelist to the VCS-compatible reader, which parses its `define` and `incdir` lines:

```
analyze -format sverilog -vcs "-f <block>.f"
```

These tools predefine `SYNTHESIS`; when the filelist restates it, Design Compiler keeps its own value and warns (VER-1051). The value is 1 either way, so the warning is harmless.

## 22.2. Cadence Genus

Genus parses the same lines through its optionfile reader. Select SystemVerilog explicitly: `read_hdl -f` treats sources as Verilog-2001 regardless of the `hdl_language` attribute.

```
read_hdl -language sv -f <block>.f
```

# Prim Cell Replacement and Don't-Touch Constraints

OCAH primitives (`prim_buf`, `prim_and2`, `prim_clock_gating`, the `prim_flop_*sync*` family, and so on) ship as behavioral models with a reference technology mapping. Adopters replace them with cells from their own library.

Two rules govern those replacements. Both are the adopter's responsibility — OCAH provides the instance names, but the names have no effect until the adopter's synthesis and place-and-route flows constrain them.

# Chapter 23. Naming Requirement

Every library cell instantiated inside a replacement primitive must have `d0nt_` in its instance name.

The marker is deliberately misspelled with a zero. `dont_touch` is a reserved keyword in several tools and a common substring in ordinary comments and signal names; `d0nt_` occurs only where the protection is intended, so a name-based match cannot pick up unrelated cells.

Clock-path cells take the extended prefix `d0nt_clk`, which selects the stricter rule below. The `d0nt_*` naming convention appears in the eFuse IP (`efuse_token_digest_sha256`, `efuse_triple_redundant_comparator`) as the primary example. The adopter is expected to carry the same convention into any technology-mapped primitive wrapper they deliver. The intended name assignments are:

| Instance name               | Rule        | Primitive                                        |
|-----------------------------|-------------|--------------------------------------------------|
| <code>d0nt_clkgate</code>   | Don't touch | <code>prim_clock_gating</code>                   |
| <code>d0nt_clkbuf</code>    | Don't touch | <code>prim_clock_buf</code>                      |
| <code>d0nt_clkinv</code>    | Don't touch | <code>prim_clock_inv</code>                      |
| <code>d0nt_clkmux</code>    | Don't touch | <code>prim_clock_mux2</code>                     |
| <code>d0nt_clknand</code>   | Don't touch | <code>prim_clock_nand2</code>                    |
| <code>d0nt_clkxor</code>    | Don't touch | <code>prim_xor2</code>                           |
| <code>d0nt_stdbuf</code>    | Size only   | <code>prim_buf</code>                            |
| <code>d0nt_stdinv</code>    | Size only   | <code>prim_flop_sync_*</code> reset inverter     |
| <code>d0nt_an*</code>       | Size only   | <code>prim_and2</code> , <code>prim_and3</code>  |
| <code>d0nt_ao222</code>     | Size only   | <code>prim_ao222</code>                          |
| <code>d0nt_wrap_sync</code> | Size only   | <code>prim_flop_sync_*</code> synchronizer flops |

Keep the same names when substituting your own cells. Adopters who rename must apply the equivalent constraints to whatever names they use.

# Chapter 24. Constraint Requirement

In synthesis, apply `set_size_only` to every cell matching `d0nt_*`, then `set_dont_touch` to every cell matching `d0nt_clk`. Every step after synthesis needs `size_only` alone — on all `d0nt_*` cells, clock cells included.

```
# Order matters: d0nt_clk* also matches d0nt_*, so the clock rule is applied
# second and overrides size-only for those cells.
set_size_only [get_cells -hierarchical -filter "full_name =~ *d0nt_*"]
set_dont_touch [get_cells -hierarchical -filter "full_name =~ *d0nt_clk*"]
```

`size_only` keeps the instance in the netlist—the tool may not delete, merge, absorb, restructure, or buffer through it—while still allowing it to be swapped for another library cell of the same logic function, typically to change drive strength or threshold-voltage flavor for timing, area, and EM closure. That is the intent for every replacement cell: these primitives exist because the structure matters, not because the logic function could not be inferred. Synthesis will otherwise remove them—an inverter pair that cancels, redundant AND gates that always agree, a buffer driving a single load are all dead weight to an optimizer.

Clock cells need the stronger `dont_touch` because that swap is exactly the problem. Under `size_only` the tool treats the logic function as the contract and every other property of the cell as free to change. On the clock path the function is the least of the reasons the cell was chosen. Clock buffers, inverters, muxes, and gates are picked for electrical characteristics the function does not capture—matched rise and fall times above all, and with them duty-cycle preservation, balanced input-to-output delay, and low delay variation across PVT. A functionally identical cell pulled from the general-purpose library guarantees none of that. The netlist still says "inverter", functional simulation still passes, and the duty-cycle distortion shows up only in silicon or in a timing run late enough to be expensive.

`dont_touch` removes the tool's discretion: the cell the designer selected is the cell that reaches the netlist. Sizing and insertion-delay decisions on the clock path belong to clock tree synthesis, which owns them explicitly, rather than to a logic-optimization pass making a substitution it believes is free.

## 24.1. After Synthesis

The `dont_touch` on `d0nt_clk*` is a synthesis-only constraint. Once synthesis has handed off the netlist, release the clock cells to `size_only` and carry that—and nothing stronger—through placement, clock tree synthesis, routing, and optimization:

```
# Post-synthesis: uniform size_only, clock cells included.
set_dont_touch [get_cells -hierarchical -filter "full_name =~ *d0nt_clk*"] false
set_size_only [get_cells -hierarchical -filter "full_name =~ *d0nt_*"]
```

The stricter rule exists to stop logic optimization from choosing the cell. Downstream, clock cell sizing is CTS's job: it cannot balance skew or close transition violations with the cells it needs to resize frozen, and freezing them there buys nothing. Keeping `size_only` in place still prevents deletion, merging, and restructuring for the rest of the flow.

Restrict the physical flow to the library's clock-cell list so a resize stays inside the same clock cell family. Sizing a `CLKBUF_D4` up to a `CLKBUF_D8` keeps the matched rise and fall behavior the cell was chosen for; substituting a general-purpose buffer of equivalent drive does not.

Additional requirements:

- **Carry `size_only` through PnR.** The `dont_touch` is synthesis-only, but `size_only` is not. A cell protected in synthesis and left entirely unprotected downstream is not protected.
- **Verify the match is non-zero.** A typo in the filter, or a flow that renames instances before the constraint is read, silently protects nothing. Check the collection size and error out if it is empty.
- **Preserve the names.** Uniquification, flattening, and name mapping must not strip the `d0nt_` substring. If your flow renames instances, derive the collections before flattening and carry them forward.
- **Restore protection after ECOs.** Flows that relax preservation constraints for clock-tree or filler ECOs — clearing `eco_honor_dont_touch`, for example — must restore `size_only` before any subsequent optimization pass.
- **Check the final netlist,** not just the post-synthesis one.

Flows other than Design Compiler and Fusion Compiler must apply the equivalent `size_only` and `dont_touch` attributes to the same collections.

# Chapter 25. Simulation

These constraints have no functional effect and no simulation impact. RTL simulation compiles the technology-independent primitive models (`not(synth)`). Library cells are not on that filelist, so a simulator never elaborates them.

Confirming that the protected cells survived is therefore a gate-level netlist check. RTL simulation cannot detect their loss.

# CDC Timing Constraints

OCAH ships synthesis constraints that bound the enumerated synchronization structures in the SMC, SEP, DTP and SMU. Independent CDC sign-off is still required for the assembled SoC. This section explains what those constraints do, how they are produced, and what an adopter has to change when integrating OCAH into their own flow and cell library.

To give the different systems a unified view of how the constraints are defined, these constraints are collected with symlinks under `integration/constraints` using a common hierarchy, described below. If the collateral inventory changes, run `scripts/update_integration_symlinks.py` to regenerate the index.

The constraints for each system build on shared code, linked at `integration/constraints/shared`. This consists of four files: `clock_periods.tcl` (which sets the target clock periods every block reads), `async_clock_groups.tcl` (which defines clock groups with default bounds), `cdc_max_delay_procs.tcl` (which defines procs for emitting CDC constraints) and `hier_reuse_procs.tcl` (which lets a parent replay a block's constraints under an instance prefix).

The constraints for each system can use this shared code and are visible through symlinks at `integration/constraints/<block>/synth`. This directory contains the following files:

- `constraints.sdc`: Composes the block's timing intent from the files below and from the shared code, in the order they are listed here. It carries no constraints of its own beyond the caveats recorded in its header.
- `<block>_clocks.sdc`: The block's clock definitions: the `create_clock` stampings on its clock ports and the generated clocks derived from them. Reads the periods from `clock_periods.tcl`.
- `<block>_clock_groups.sdc`: The asynchronous clock groups, declared with `-allow_paths` so the per-instance bounds below are not masked by a false path.
- `<block>_io_delays.sdc`: The input and output delays on the block's ports. The CDC/RDC sign-off run reads the same three files, without the max-delay layer below (see [CDC/RDC sign-off collateral](#)).
- `<block>_cdc_max_delay.tcl`: This defines periods for generated clocks and any hand-written overrides and then sources the next script.
- `<block>_cdc_max_delay_generated.tcl`: This auto-generated file defines maximum delays for instances of synchronization structures in the system. It expects to be sourced by a file that has already sourced `cdc_max_delay_procs.tcl` to define the procs that it uses.

Two blocks carry an extra file. SEP adds `sep_entropy_clocks.sdc`, whose ripple-divider clocks are built from the RTL hierarchy and are skipped when the entropy source is blackboxed. SMC adds `smc_gpio_io_delays.sdc` for the GPIO padding; SMU passes the same padding through, so its `smu_io_delays.sdc` sources that file rather than keeping a second copy of it.

# Chapter 26. Why crossings are bounded rather than timed

A clock-domain crossing has no fixed phase relationship, so it cannot be timed against a capture edge. Its correctness still depends on delay, though: every CDC element assumes the data reaches the receiver within a bounded time.

OCAH therefore keeps the crossings visible to the tool and gives each one an explicit upper bound, sized from the clock that captures it. This doesn't assert any phase relationship. It only states how much delay the crossing tolerates while its CDC element's guarantee still holds.

# Chapter 27. What is constrained

Any CDC element has at least one capture clock. For every CDC element whose type is listed below, the generated constraints give the element its own `set_max_delay`. This is sized from the capture clock, as read from the netlist. When the capture clock is muxed from several sources, the bound must hold for whichever source the mux selects at runtime; as such, the shortest period among the mux inputs is used.

The elements covered are `prim_flop_2sync`, `prim_sync3/4` and their reset variants, the pulp `sync` shim, `prim_sync_reset`, `prim_sync3_pulse`, `prim_fifo_async`, `avsbus_async_fifo`, `cdc_fifo_gray`, `axi_cdc`, `prim_reg_cdc`, `prim_sync_reqack_data`, `prim_sync_data_autohs`, `cdc_2phase`, `dmi_wrapper` and Rocket `AsyncQueue`.

The bound depends on what protects the crossing:

| Kind of path             | Bound                    | Reason                                                                                                                                     |
|--------------------------|--------------------------|--------------------------------------------------------------------------------------------------------------------------------------------|
| Synchronizer data input  | $0.5 * T_{dst}$          | Leaves half a destination period of settling margin before the capture edge the synchronizer relies on.                                    |
| Protocol-protected data  | $1.0 * T_{dst}$          | Conservative. The requirement is set by the pointer synchronizer's depth — see below.                                                      |
| Two-phase handshake nets | $\min(T_{src}, T_{dst})$ | <code>cdc_2phase</code> runs the handshake in both directions, so the tighter domain governs. This is the module's own stated requirement. |

$T_{dst}$  rather than  $\min(T_{src}, T_{dst})$  in the general case because the gating synchronizer is clocked by the destination, so its settling window is  $S * T_{dst}$  and  $T_{src}$  does not enter the guarantee. This makes slow-to-fast and fast-to-slow equally safe.

## 27.1. Why protocol-protected data still needs a bound

The payload of a gray-pointer FIFO or a req/ack handshake never passes through a synchronizer — only the pointer or request does. So this is not a metastability constraint, and it is reasonable to ask why such a path needs a bound at all, or why a single blanket bound covering every crossing in the design would not be enough.

The bound is needed because the protocol guarantees **ordering**, not **arrival**. The read side will not look at an entry until the write pointer has crossed, which takes `SYNC_STAGES` destination cycles, where `SYNC_STAGES` is the depth of the pointer synchronizer. Nothing in the protocol ensures the data has physically arrived within that window; that is a timing property, and only a `max_delay` states it. Miss it and the consumer samples the entry's previous contents. There is no violation report and no metastability event, just wrong data.

So the requirement is `data_path < SYNC_STAGES * T_dst`. It is not a fixed number of nanoseconds: it scales with the clock that captures the crossing, and the destination periods within one design span an order of magnitude.

| Destination period | Guarantee at 3 stages |
|--------------------|-----------------------|
| 1 ns               | 3 ns                  |
| 5 ns               | 15 ns                 |
| 10 ns              | 30 ns                 |

That is why the bound is applied per instance rather than as one global value. A single blanket `max_delay` would have to be loose enough to be feasible on the slowest domains. But this would permit several times more delay than a fast crossing's pointer scheme tolerates. To ensure that fast crossings are properly constrained, each crossing is sized from its own capturing clock.

The blanket default applied by the clock-group layer (see [The two layers](#)) deliberately applies this looser constraint. For slow domains, it is already sufficient and an explicit per-instance constraint is redundant. It is the fast crossings that need a per-instance constraint.

$1.0 * T_{dst}$  is therefore conservative by a factor of two to three. It is kept simple deliberately, but if wide payloads such as AXI data will not close then raising `cdc_data_delay` to  $2.0 * T_{dst}$  stays inside a three-stage guarantee with a cycle to spare. An adopter whose synchronizer cells use a different depth should recompute from their own `SYNC_STAGES` rather than inheriting this factor.

Enumeration and clock resolution run once, offline, against an elaborated design, and their output is an explicit per-block file of constraint calls that is reviewed and checked in. The flow itself does no discovery. This matters to an integrator because those files are written against the OCAH hierarchy and OCAH's clock names. If you instantiate a block as delivered, you do not need to regenerate or hand-edit them: set `::cdc_hier_prefix` to where the block sits in your hierarchy, and optionally `::cdc_clock_alias` to map OCAH clock names onto your own. Regeneration is needed only when the block is reconfigured in a way that changes which CDC elements exist, since no prefix can conjure constraints for elements the file never listed (see [Integration checklist](#) item 2).

# Chapter 28. The two layers

The per-instance bounds only take effect on top of a correctly configured clock-group layer. That layer decides whether the tool considers inter-domain paths at all, so it must be established first; the per-instance exceptions then refine it.

**Layer 1** is `set_async_clock_groups`, defined in `flows/synth/constraints/async_clock_groups.tcl` and reached from each block's `<block>_clock_groups.sdc` through `cdc_apply_async_groups` (in the same file), which resolves each domain's membership and passes the block's `-exclude` pairs through. It declares the asynchronous groups **with** `-allow_paths` and applies a loose 20 ns / -20 ns default to every inter-group clock pair.

## IMPORTANT

`-allow_paths` is a prerequisite, not a refinement. In DC and PrimeTime exception priority, `set_false_path` outranks `set_max_delay` regardless of which is more specific, so a bare `set_clock_groups -asynchronous` silently masks **every** per-instance constraint. There is no warning; the exceptions simply have no effect.

The 20 ns default is what makes `-allow_paths` safe to enable. Once paths are allowed, every crossing without a specific constraint would otherwise be timed against a meaningless launch-capture relationship and fail. The default bounds them loosely so that only deliberately tightened paths appear as real requirements. It is emitted per ordered clock pair, never group-wide, because a 20 ns bound inside a group would mask genuine setup failures on synchronous paths.

**Layer 2** is the per-instance `set_max_delay` output of the three steps above, with two deliberate carve-outs:

- **Paths from primary inputs revert to the default.** A synchronizer input reachable from a top-level port carries that port's `set_input_delay`, which is a budget figure rather than real logic and can alone exceed the tightened bound. Only the parent block sees both ends, so there is nothing to tighten at block level.
- **Same-clock instances are skipped.** A two-clock element wired to one clock is not a crossing, and applying `set_max_delay -ignore_clock_latency` there would replace a proper setup check with a flat budget that discards skew and uncertainty. These are emitted commented out. OCAH has five, where OpenTitan AES, KMAC and OTBN instantiate `prim_sync_reqack_data` on EDN and OTP interfaces that are separate domains upstream but share a clock in SEP.

# Chapter 29. CDC/RDC sign-off collateral

The same clock, group and I/O-delay files that synthesis reads are the clock truth for static CDC/RDC sign-off, and the rest of that sign-off collateral is checked in beside them, so an adopter can run their own tool against the reviewed constraints and waivers rather than reconstructing them.

- `hw/sys/<block>/cdc/<block>.cdc_rdc.tcl` is the entry point. It sources the block's files in dependency order: `hier_reuse_procs.tcl`, `clock_periods.tcl` and the `<block>_{clocks,clock_groups,io_delays}.sdc` siblings (without the CDC max-delay layer `constraints.sdc` adds), `<block>.resets.tcl` (the reset tree and its assertion sequences), `<block>.case_analysis.tcl` (the functional pins for DFT and strap ports), `<block>.static_signals.tcl` (quasi-static signals, CDC only), the shared type-level setup in `flows/cdc/cdc_rdc_setup.tcl` (synchronizer and verified-IP modules, gray annotations) and the block's instance-level `<block>.cdc_rdc_setup.tcl`.
- `hw/sys/<block>/cdc/<block>.vccdc*.waiver.tcl` and `hw/sys/<block>/rdc/<block>.vcrdc*.waiver.tcl` hold the reviewed waivers, one file for Tenstorrent-owned RTL and, where needed, an `.opensource_ip` file for third-party IP. Each waiver carries its rationale in `-comment {}`.
- `flows/synth/constraints/hier_reuse_procs.tcl` wraps the tool commands these files use so they can be replayed under a hierarchy prefix.

The files name the leaves of the generic primitives (`q_d/q_ddd` synchroniser stages, `u_sync_1/u_sync_2` two-stage synchronisers, `q_o` flops, `en_latch` clock gates); `flows/cdc/README.md` lists them. Run the sign-off against the generic primitive set or re-anchor the collateral to the swapped names.

Two variables select how the files are read:

- `::cdc_app` is `cdc` (default) or `rdc`; the entry skips CDC-only files for `rdc`.
- `::cdc_scenario` is `synth` (default) or `functional`. The functional scenario is the sign-off run: the case-analysis files pin the DFT and strap ports, so `cdc_pinned_port_delay` skips the I/O delays on those ports.

`hw/sys/smu/cdc/smu.cdc_rdc.tcl` shows how a parent replays a child: `cdc_begin_block <prefix> {clock aliases} {reset aliases}`, source the child's entry, `cdc_end_block`. Port clocks, I/O delays, port resets and the child's own group declaration are block-top gated and skipped under a prefix; internal constraints re-anchor through `cdc_inst`, and generated clocks registered with `cdc_group_extra` land in the parent's single `cdc_apply_async_groups`. Waiver filter fields carry a `${PREFIX}` token for the same reason. `flows/cdc/README.md` summarises the layout.

# Chapter 30. What is covered

| Block | CDC elements constrained | Exceptions emitted |
|-------|--------------------------|--------------------|
| SMC   | 365                      | 412                |
| SEP   | 18                       | 21                 |
| DTP   | 250                      | 270                |
| SMU   | 758                      | 838                |

SMU is a flat build containing the other three, so its instance paths carry `u_smc/`, `gen_sep.u_sep/` and `u_dtp/` prefixes. The SMU row has more CDC elements than the sum of the other three rows because the SMU instantiates a larger DTP. The DTP contains three JTAG2AXI bridges in the SMU configuration and only two when it is on its own. These configurations give the DTP 375 and 250 elements, respectively.

# Chapter 31. Integration checklist

Five things must change, three should be checked. None of them requires editing per-instance data by hand. Every change is either a one-line policy edit or a regeneration.

## 31.1. 1. Repoint the constraints at the pin of the cell inside the prim wrapper

This is the most important change.

As shipped, the procs target the prim wrapper's own port, `prim_sync3/d_i`. That port exists only as long as the wrapper survives as a hierarchical boundary, and a prim cell is ordinary RTL: nothing stops synthesis from ungrouping it and dissolving its ports.

### WARNING

Do not rely on the wrapper port surviving. Anchor the constraint to the pin of the cell instantiated **inside** the wrapper. When you swap in your own synchronizer, that cell is a real library cell or macro—a leaf that cannot be flattened—so its pins persist through optimisation regardless of what happens to the RTL hierarchy around it.

```
proc set_cdc_max_delay_prim_sync3 { inst dst_clk {delay {}} } {  
    cdc_emit "prim_sync3 $inst" [cdc_sync_delay $dst_clk $delay] to \  
        {} [get_pins "$inst/u_my_sync_cell/D" -quiet]  
}
```

`$inst` stays the wrapper instance path the generator recorded; you extend it down to the leaf. If your cell is instantiated in a generate loop or per bit, the path needs a glob. Note that generate scopes are separated by `.`, not `/`:

```
[get_pins "$inst/g_bits*.u_my_sync_cell/D" -quiet]
```

Anchoring this way makes hierarchy preservation a safety margin rather than a load-bearing dependency.

If you keep the prim wrappers unchanged, the shipped port names work as-is, but your flow must then preserve those wrapper boundaries. A `destination empty` warning appearing after `compile` where there was none at constraint-load time means a boundary was dissolved.

If you go further and replace a wrapper with a module of your own name, the enumeration that produced `<block>_cdc_max_delay_generated.tcl` knows nothing about it and those crossings end up with no per-instance bound at all. Nothing warns—an element that was never listed cannot report itself missing. Add the calls for it to `<block>_cdc_max_delay.tcl` by hand; the procs take an instance path and the capturing clock regardless of the module they were named after.

## 31.2. 2. Point the files at your hierarchy, or regenerate

The checked-in `<block>_cdc_max_delay_generated.tcl` files are written against the OCAH hierarchy, with paths relative to the block's own top and clocks named as OCAH names them. Two ways to make them apply to your design.

If you instantiate the block as delivered, reuse the files and set two variables. Both default to no-ops, so leaving them alone reproduces the shipped behaviour exactly.

```
# where the block sits in your hierarchy, with a trailing slash
set ::cdc_hier_prefix "u_chiplet/u_mgmt/u_smc/"

# optional: map an OCAH clock name onto the clock you actually drive it with
set ::cdc_clock_alias(SMCCLK) MY_SYS_CLK
```

The prefix is prepended to every instance path. The alias is applied wherever a clock name reaches the tool, so OCAH's names become labels in your design. You can also skip the alias and supply the period directly with `set ::cdc_clock_period(SMCCLK) <ps>`, which is enough for the synchronizer constraints; the alias additionally matters for the data-path constraints, which name the destination clock as a timing endpoint and so need it to exist.

If you reconfigure the block, regenerate instead. Changing parameters that add or remove CDC elements makes the shipped file stale in the silent direction—the constraints that should exist for new elements simply will not, and nothing warns. The prefix does not help with that.

A wrong prefix fails loudly: every path resolves to nothing, so you get a warning per constraint against a zero exception count, and `SUMMARY 0 exceptions` is itself reported as a setup failure.

Regeneration is also the right answer whenever a parent build contains the block. Instance counts there can differ from the standalone build, so a parent's file is not the child's file with a prefix.

## 31.3. 3. Set the default bound

The 20 ns / -20 ns figures are a starting point. Both are `info exists`-guarded in `flows/synth/constraints/async_clock_groups.tcl`, so setting them before that file is sourced overrides without editing it. `set_async_clock_groups` also accepts per-call overrides, which is the cleaner way to give one block a different default:

```
set_async_clock_groups { {CLK_A} {CLK_B} } -max_delay 8000 -min_delay -8000
```

Two constraints on the choice. The default must exceed every per-instance bound you tighten, because it also governs paths from primary inputs into synchronizers; if it is tighter than  $0.5 * T_{dst}$  it becomes the binding constraint there. And tighter is not automatically better: this is a net for crossings you have not enumerated, so set it loose enough that those do not fail and rely on layer 2 for the paths that matter.

The minimum is negative deliberately. With `-allow_paths` a crossing has no meaningful hold relationship, and a zero floor would report hold violations where hold is not a real requirement.

## 31.4. 4. Declare your own clock groups

Each block's `<block>_clock_groups.sdc` calls `cdc_apply_async_groups` with its list of domain names. A domain's group is its clock plus every generated clock registered against it with `cdc_group_extra`, clocks absent from the session are dropped, and the call reaches `set_async_clock_groups` with any `-exclude` pairs passed through. Both calls have to come after every `create_clock` and `create_generated_clock` they are meant to cover. Call `set_async_clock_groups` directly when you need globs or per-call bounds; each inner list is one asynchronous group:

```
set_async_clock_groups {
    {CLK_A CLK_A_DERIVED_*}
    {CLK_B}
    {JTAG_TCK}
} -exclude {{PATTERN_X* PATTERN_Y*}}
```

`-exclude` takes pairs of patterns and suppresses that part of the cross product, for clock pairs that already have a `-logically_exclusive` or `-physically_exclusive` relationship that `-allow_paths` would contradict. Omit it unless you hit a TIM-184 conflict.

## 31.5. 5. Declare periods for generated clocks

A generated clock exposes no readable `period` attribute in Design Compiler, so any generated clock that clocks a CDC element needs an explicit entry in `<block>_cdc_max_delay.tcl`:

```
set ::cdc_clock_period(MY_DIV_CLK) [expr {4 * $clock_periods(MY_MASTER_PERIOD)}]
```

Omitting one is loud — a `no period for clock` warning per affected element — so a clean run means you have them all. Keep them in step with your `create_generated_clock` divide factors; nothing cross-checks them.

## 31.6. Also check

**Hierarchy preservation.** The reference flow applies `set_ungroup false` and `set_boundary_optimization false` to the CDC designs before `compile`. How much this matters depends on item 1: with leaf cell pins it is a safety margin, with wrapper ports it is load-bearing. Either way, your flow needs the equivalent, and it needs to name your cells rather than OCAH's.

**Delay factors.** `0.5 * T_dst` and `1.0 * T_dst` are policy, not physics. If your methodology wants more settling margin, change `cdc_sync_delay` and `cdc_data_delay` in `flows/synth/constraints/cdc_max_delay_procs.tcl`. Per-instance overrides are also available without editing procs: every proc takes an optional trailing delay in picoseconds, and re-stating a call in `<block>_cdc_max_delay.tcl` after the `source` wins.

**Tool differences.** Two Design Compiler specific choices to revisit under PrimeTime. `get_attribute <pin> clocks` is used because `get_clocks -of_objects` is PrimeTime-only, and generated clocks may expose a readable `period` in PrimeTime, making item 5 unnecessary.

# Chapter 32. Confirming it worked

Load the constraints and check the summary:

```
INFO: cdc_max_delay: SUMMARY <n> exceptions, 0 warnings
```

Zero warnings is necessary but not sufficient. A pin pattern that matches nothing warns, but one that matches the **wrong** thing does not. Two stronger checks:

- **Predict the count.** Multiply each proc's number of emitted exceptions by its number of calls and compare against the summary. A mismatch localises the failure, because the size of the shortfall identifies which proc did not fire.
- **Confirm the precedence.** Layer 2 is on pins and layer 1 on clocks, and the design assumes the more specific specification wins. Verify once in your tool:

```
report_timing -to [get_pins <a synchronizer>/d_i] -nworst 1
```

The `max_delay` line must show your `0.5 * T_dst` value rather than the default. If it shows the default, layer 2 is inert and nothing else in this section applies.

`SUMMARY 0 exceptions` is treated as a setup failure and warns as such. It means the constraints did not load, not that the design has no crossings.

# Chapter 33. Scope and limitations

The 20 ns default is loose by design. Against a 1 ns clock it permits twenty clock periods of delay into a synchronizer input. This is a safety net that keeps `-allow_paths` usable, not a real constraint; any crossing that matters belongs in layer 2.

Enumeration works from a fixed list of module names, so a hand-written two-flop synchronizer that uses none of them will not be found. Structural detection of crossings is what a static CDC tool does, and this flow does not attempt it. These constraints time crossings already known to exist; they are not a substitute for CDC signoff.

Because the instance list is generated offline, removals are loud but additions are silent. A stale instance path warns, but a synchronizer added without regenerating produces no warning: the constraint never exists, the path falls back to the default, and it passes timing. Regenerate and diff the result against what is checked in whenever the RTL changes.

# Revision History

# Chapter 34. Document history

This document tracks major revisions and updates to the OCAH Integrator Guide.

Table 12. Revision History

| Version | Date       | Author               | Description                                                                                                                                                                                                                                          |
|---------|------------|----------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 0.0.1   | 2026-06-17 | Alessandro Ottaviano | Initial integrator guide draft                                                                                                                                                                                                                       |
| 0.0.2   | 2026-08-13 | Alessandro Ottaviano | Completed the documentation migration: added primitive-cell replacement and CDC constraint guidance, corrected DTP/JTAG integration, and aligned SMC/SEP paths, GPIO and DFX status descriptions, and cross-guide references with the current tree.  |
| 0.0.3   | 2026-08-21 | Ben Melton           | Added a Project Defines section covering compile-time defines that apply across OCAH, starting with <b>SIMULATION</b> : how to set it, the testbench hooks and models it enables, and the flows it must not reach.                                   |
| 0.0.4   | 2026-08-31 | Ben Melton           | Documented the SMU IC_RESET TDR slice layout (SMC, SEP, external) and marked the external slice as adopter-defined.                                                                                                                                  |
| 0.0.5   | 2026-09-02 | Alessandro Ottaviano | Consolidated immutable ROM FW integration guidance, including the generic weak-symbol override method and SMC, SEP, and Key Manager ROM FW integration sections.                                                                                     |
| 0.0.6   | 2026-09-10 | Ben Melton           | Documented the external TRNG aperture as a full-window AXI-Lite passthrough whose intra-aperture decode (SLVERR on unmapped offsets, no aliasing onto live registers) is an adopter constraint.                                                      |
| 0.0.7   | 2026-09-11 | Alessandro Ottaviano | Noted that <b>smc_ext_interrupts_i</b> is an active-high level or a pulse long enough to be sampled on <b>clk_smc</b> .                                                                                                                              |
| 0.0.8   | 2026-09-18 | Ben Melton           | Documented the OCAH view, tool, and native-DV defines, the vendor-alias map in <b>ocah_vendor_defines.svh</b> , and that adopters set OCAH names only.                                                                                               |
| 0.0.9   | 2026-09-21 | Ben Melton           | Documented that synthesis defines ride the Bender <b>synth</b> filelist as <b>define</b> lines, with Design Compiler / Fusion Compiler and Genus commands that consume them.                                                                         |
| 0.0.10  | 2026-09-21 | Alessandro Ottaviano | Documented the generated synthesis, Verilator, and VCS filelists published under <b>integration/filelists/</b> .                                                                                                                                     |
| 0.0.11  | 2026-09-26 | Ben Melton           | Documented the <b>EMULATION</b> view: the debug hooks it keeps, the constructs it drops, its precedence over <b>SYNTHESIS</b> , and the <b>OCAH_DEBUG_LIVE</b> and <b>ASSERTS_OVERRIDE_ON</b> names it derives.                                      |
| 0.0.12  | 2026-09-26 | Ben Melton           | Documented the SMC and DTP defines: SMC simulation hooks, CPU cluster initialization macros and i3c-core configuration, the shared-cell defines to leave unset, and the <b>+cdc_instrumentation_enabled</b> plusarg.                                 |
| 0.0.13  | 2026-09-28 | Ben Melton           | Documented the SEP defines: the Adams Bridge block-selection defines, the VeeR EL2 snapshot configuration, SEP view checks, and the SEP DV testbench names.                                                                                          |
| 0.0.14  | 2026-09-29 | Ben Melton           | Documented <b>OCAH_KM_VROM</b> , the simulation-only define that decodes the key manager virtual ROM window, the DECERR and execute-violation responses without it, and the elaboration error when <b>SYNTHESIS</b> or <b>EMULATION</b> is also set. |