Register 1: UART Data (UARTDR), offset 0x000

Important: This register is read-sensitive. See the register description for details.

This register is the data register (the interface to the FIFOs).


For transmitted data, if the FIFO is enabled, data written to this location is pushed onto the transmit FIFO. If the FIFO is disabled, data is stored in the transmitter holding register (the bottom word of the transmit FIFO). A write to this register initiates a transmission from the UART.

For received data, if the FIFO is enabled, the data byte and the 4-bit status (break, frame, parity, and overrun) is pushed onto the 12-bit wide receive FIFO. If the FIFO is disabled, the data byte and status are stored in the receiving holding register (the bottom word of the receive FIFO). The received data can be retrieved by reading this register.

UART Data (UARTDR)

UART0 base: 0x4000.C000 UART1 base: 0x4000.D000 UART2 base: 0x4000.E000 UART3 base: 0x4000.F000 UART4 base: 0x4001.0000 UART5 base: 0x4001.1000 UART6 base: 0x4001.2000 UART7 base: 0x4001.3000 Offset 0x000

Type RW, reset 0x0000.0000

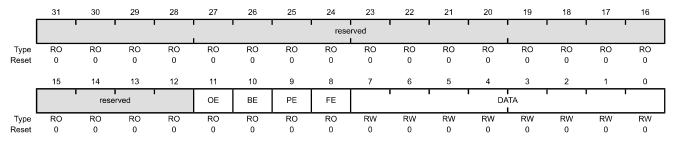

Bit/Field	Name	Туре	Reset	Description
31:12	reserved	RO	0x0000.0	Software should not rely on the value of a reserved bit. To provide compatibility with future products, the value of a reserved bit should be preserved across a read-modify-write operation.
11	OE	RO	0	UART Overrun Error

Value Description

- 0 No data has been lost due to a FIFO overrun.
- New data was received when the FIFO was full, resulting in data loss.

Bit/Field	Name	Туре	Reset	Description
10	BE	RO	0	UART Break Error
				Value Description
				0 No break condition has occurred
				A break condition has been detected, indicating that the receive data input was held Low for longer than a full-word transmission time (defined as start, data, parity, and stop bits).
				In FIFO mode, this error is associated with the character at the top of the FIFO. When a break occurs, only one 0 character is loaded into the FIFO. The next character is only enabled after the received data input goes to a 1 (marking state), and the next valid start bit is received.
9	PE	RO	0	UART Parity Error
				Value Description
				0 No parity error has occurred
				The parity of the received data character does not match the parity defined by bits 2 and 7 of the UARTLCRH register.
				In FIFO mode, this error is associated with the character at the top of the FIFO.
8	FE	RO	0	UART Framing Error
				Value Description
				0 No framing error has occurred
				The received character does not have a valid stop bit (a valid stop bit is 1).
7:0	DATA	RW	0x00	Data Transmitted or Received
				Data that is to be transmitted via the UART is written to this field.
				When read, this field contains the data that was received by the UART.

Register 3: UART Flag (UARTFR), offset 0x018


The UARTFR register is the flag register. After reset, the TXFF, RXFF, and BUSY bits are 0, and TXFE and RXFE bits are 1. The CTS bit indicate the modem flow control. Note that the modem bits are only implemented on UART1 and are reserved on UART0 and UART2.

UART Flag (UARTFR)

UART0 base: 0x4000.C000 UART1 base: 0x4000.D000 UART2 base: 0x4000.E000 UART3 base: 0x4000.F000 UART4 base: 0x4001.0000 UART5 base: 0x4001.1000 UART6 base: 0x4001.2000 UART7 base: 0x4001.3000

Offset 0x018

Type RO, reset 0x0000.0090

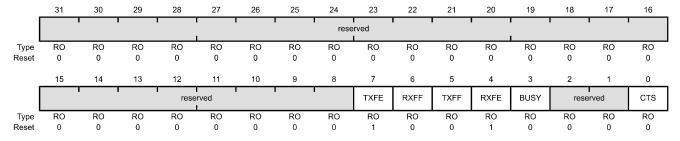

Bit/Field	Name	Туре	Reset	Description
31:8	reserved	RO	0x0000.00	Software should not rely on the value of a reserved bit. To provide compatibility with future products, the value of a reserved bit should be preserved across a read-modify-write operation.
7	TXFE	RO	1	UART Transmit FIFO Empty
				The meaning of this bit depends on the state of the ${\tt FEN}$ bit in the ${\tt UARTLCRH}$ register.
				Value Description
				0 The transmitter has data to transmit.
				1 If the FIFO is disabled (FEN is 0), the transmit holding register is empty.
				If the FIFO is enabled (FEN is 1), the transmit FIFO is empty.
6	RXFF	RO	0	UART Receive FIFO Full

The meaning of this bit depends on the state of the FEN bit in the **UARTLCRH** register.

Value Description

- The receiver can receive data.
- 1 If the FIFO is disabled (FEN is 0), the receive holding register

If the FIFO is enabled (FEN is 1), the receive FIFO is full.

Bit/Field	Name	Туре	Reset	Description
5	TXFF	RO	0	UART Transmit FIFO Full
				The meaning of this bit depends on the state of the ${\tt FEN}$ bit in the $\textbf{UARTLCRH}$ register.
				Value Description
				0 The transmitter is not full.
				If the FIFO is disabled (FEN is 0), the transmit holding register is full.
				If the FIFO is enabled (FEN is 1), the transmit FIFO is full.
4	RXFE	RO	1	UART Receive FIFO Empty
				The meaning of this bit depends on the state of the ${\tt FEN}$ bit in the $\textbf{UARTLCRH}$ register.
				Value Description
				0 The receiver is not empty.
				1 If the FIFO is disabled (FEN is 0), the receive holding register is empty.
				If the FIFO is enabled (FEN is 1), the receive FIFO is empty.
3	BUSY	RO	0	UART Busy
				Value Description
				0 The UART is not busy.
				1 The UART is busy transmitting data. This bit remains set until the complete byte, including all stop bits, has been sent from the shift register.
				This bit is set as soon as the transmit FIFO becomes non-empty (regardless of whether UART is enabled).
2:1	reserved	RO	0	Software should not rely on the value of a reserved bit. To provide compatibility with future products, the value of a reserved bit should be preserved across a read-modify-write operation.
0	CTS	RO	0	Clear To Send
				Value Description
				0 The U1CTS signal is not asserted.
				1 The U1CTS signal is asserted.