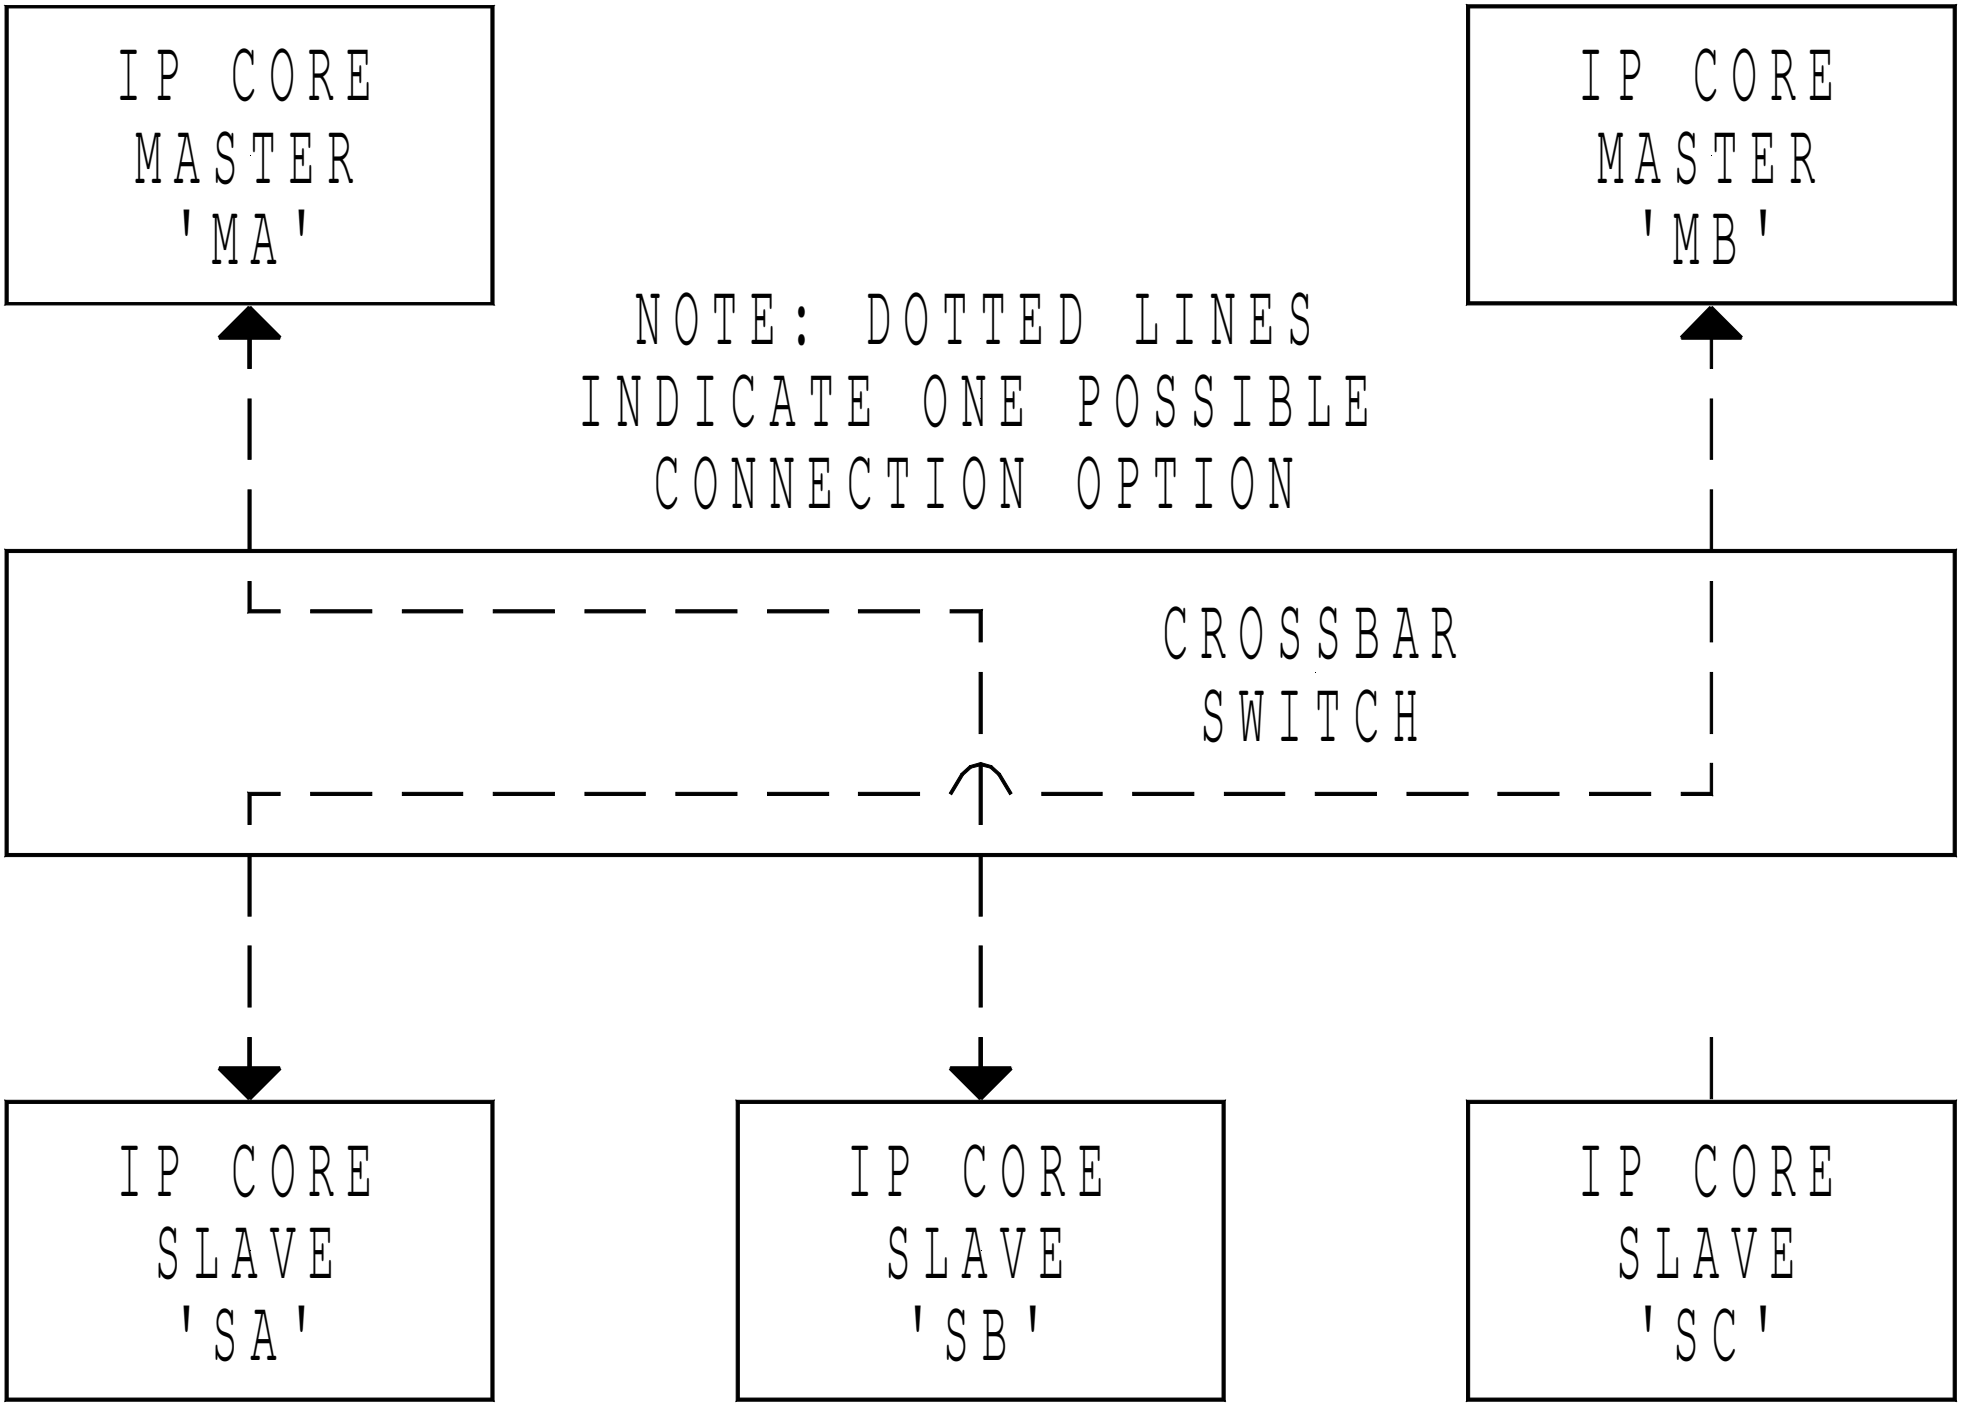

IP CORE
MASTER
'MA'
IP CORE
MASTER
'MB'
NOTE: DOTTED LINES
INDICATE ONE POSSIBLE
CONNECTION OPTION
CROSSBAR
SWITCH
IP CORE
SLAVE
'SA'
IP CORE
SLAVE
'SB'
IP CORE
SLAVE
'SC'