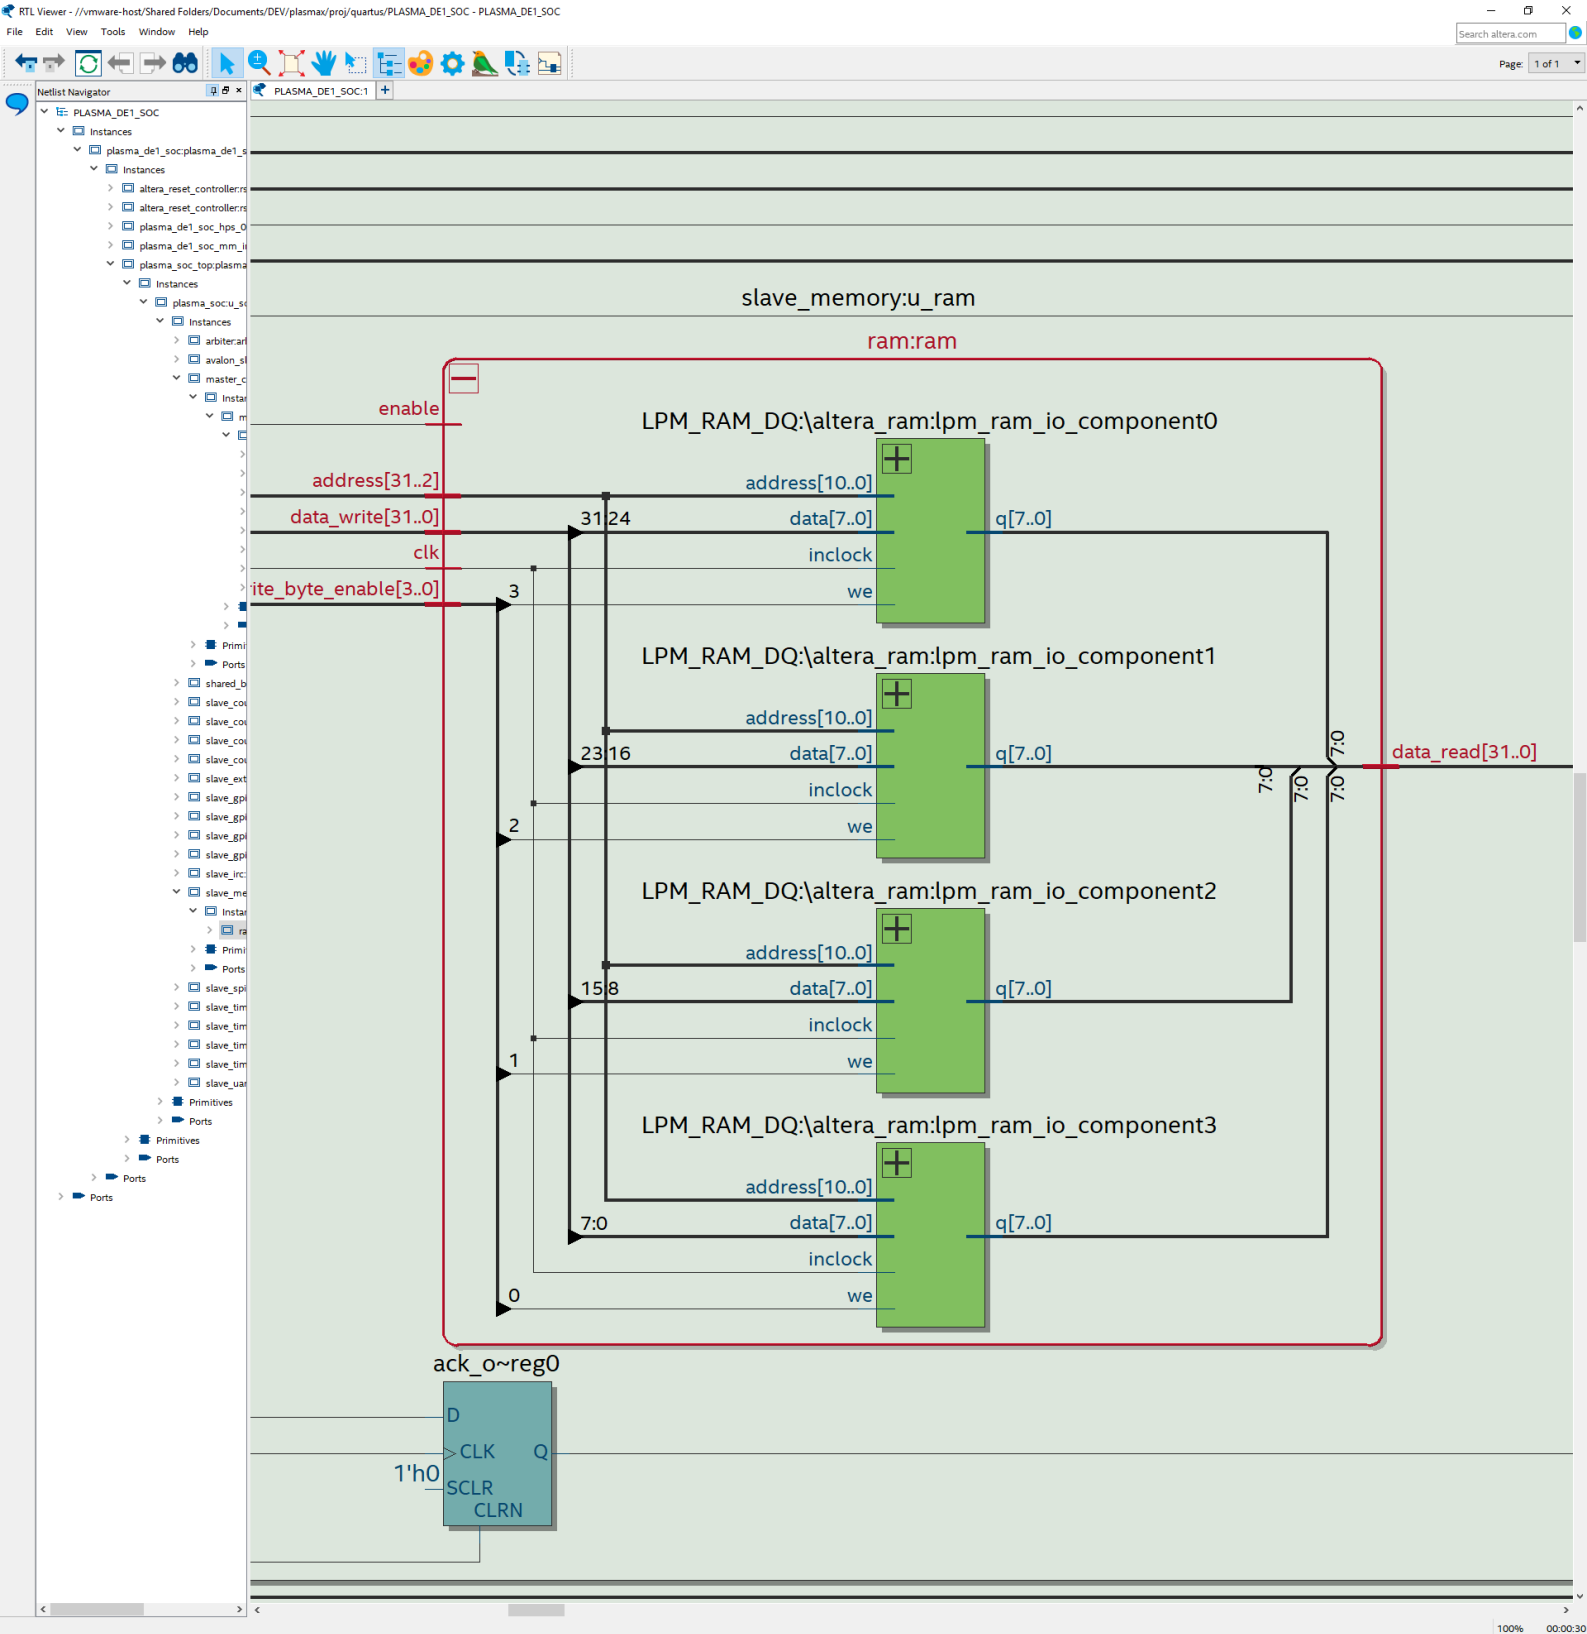

RTL Viewer - //vmware-host/Shared Folders/Documents/DEV/plasmax/proj/quartus/PLASMA_DE1_SOC - PLASMA_DE1_SOC
File
Edit
View
Tools
Window
Help
Netlist Navigator
PLASMA_DE1_SOC:1
slave_memory:u_ram
ram:ram
enable
address[31..2]
data_write[31..0]
clk
ite_byte_enable[3..0]
LPM_RAM_DQ:\altera_ram:lpm_ram_io_component0
LPM_RAM_DQ:\altera_ram:lpm_ram_io_component1
LPM_RAM_DQ:\altera_ram:lpm_ram_io_component2
LPM_RAM_DQ:\altera_ram:lpm_ram_io_component3
address[10..0]
data[7..0]
inclock
we
q[7..0]
31:24
23:16
15:8
7:0
3
2
1
0
data_read[31..0]
ack_o~reg0
D
CLK
Q
1'h0
SCLR
CLRN