

5. Inbound, Sector and Departure Procedures

This chapter describes how to carry out various inbound, sector and departure flight procedures, including through use of the Inbound, Sector and Departure lists.

The flight lists can be configured on each workstation to customize what fields are shown, and what field is used for sorting. See Section C.7. The lists can be sorted by any column in the list. When the list is sorted by a column, the column name is highlighted in white.

Any field that can be interacted with in the Track Label (to produce a menu) can also be interacted with in the lists (if the field is present in the lists). The Menus are identical to those invoked on the track label.

5.1. Sector List Overview

The Sector List will be found on all control type CWP's.

The list is made up of flights in `Assumed` or `Transfer-Out Initiated` control state. ACC and APP workstations are configured to display different fields for their sector list.

The fields shown for ACC:

- Callsign
- Aircraft Type (Type)
- Wake Turbulence Category (W)
- Number of aircraft in formation (N)
- RVSM warning (W)
- 8.33 radio capability warning (Y)
- SSR code (SSR)
- Cleared Flight Level (CFL)
- Exit Flight Level (XFL)
- Sector Indicator (SI)
- Coordinated Exit Point (COPX)
- Exit Time (ETX)
- Departure Aerodrome (ADEP)
- Destination Aerodrome (ADES)

Assumed (35)						Sector 	
CALLSIGN	W	Y	CFL	SI	ADEP		
Type	W	N	SSR	XFL	COPX	ETX	ADES
THY025				380	DSW		LHBP
A321	L		0257		GOTAR	0351	LHPA
THY016				380	DSW		LHBP
A321	L		0054		TEGRI	0518	LHBP
TVS011				390	DSW		LHBP
A321	M		7261		NARKA	0827	LHPA
DHL015				290	DNE		LHDC
A321	H		3074		NARKA	0844	LHPA
TVS019				250	DNE		LHBP
A321	M		3050		PATAK	0917	LHPA
SXS039				320			LHKE
A321	L		3650		GOTAR	0917	LHBP
THY030				240	DSW		LHBP
A321	M		2455		GOTAR	1006	LHPA
SXS006				380	DSW		LHKE
A321	H		4005		BAPIT	1119	LHPA
BAF002				380			LHDC
A321	M		0716		TEGRI	1151	LHPA

Figure 28. Sector List ACC

The fields shown for APP:

- Callsign
- Aircraft Type (Type)
- Wake Turbulence Category (W)
- Number of aircraft in formation (N)
- Sector Indicator (SI)
- Runway (RWY)
- Cleared Flight Level (CFL)
- Exit Flight Level (XFL)
- Assigned Heading (AHDG)
- Coordinated Exit Point (COPX)
- SID/STAR
- Exit Time (ETX)
- Destination Aerodrome (ADES)

In overflow on selection:

- SSR code (SSR)

Assumed (24)					Sector 	
CALLSIGN	SI	CFL	AHDG	SID/STAR		
Type	W N RWY	XFL	COPX	ETX	ADES	
AUA003	DSW	270		ANEXA2T		
A321 M	13L		BAPIT	0145	LHPA	
AUA050	DSW	310		ANEXA2T		
A321 L	13L		PATAK	0335	LHBP	
AUA097	DSW	340		BETED2H		
A321 L			GILEP	1323	LHBP	
BAF077	DSW	200		ANEXA2T		
A321 L	13L		FAPS	0105	LHBP	
SSR 2461	BAF099	SI	370	BETED2H		
	A321 L	RWY		NATEX	1601	LHBP
	DHL039	DNE	260	ANEXA2T		
	A321 H	13L		NARKA	0952	LHBP
	DHL051		310	BETED2H		
	A321 M			NARKA	0150	LHBP
	DHL058	DSW	230	ANEXA2T		
	A321 M	13L		FAPS	0634	LHPA
	EZS020	DSW	270	ANEXA2T		

Figure 29. Sector List APP

5.2. Inbound List Overview

The Inbound List will be found on all control type CWP's.

The sector inbound list contains flights that are coordinated or notified to enter the assigned CWP sectors. Either state is in its own tab, with a counter letting the user know how many flights are currently in each tab. See Section 4.3 for more information on the states.

The ACC and APP workstations have different configured fields for their sector inbound list.

ACC workstations only show coordinated flights and have the following fields:

- Callsign
- Aircraft Type (Type)
- Wake Turbulence Category (W)
- Number of aircraft in formation (N)
- Sector Indicator (SI)
- Planned Entry Level (PEL)
- Exit Flight Level

- Coordinated point of entry (COPN)
- Coordinated point of exit (COPX)
- Entry Time (ETN)
- Exit Time (ETX)
- Departure Aerodrome (ADEP)
- Destination Aerodrome (ADES)

In overflow when available:

- RVSM warning (W)
- 8.33 radio capability warning (Y)

Coord (26)				Inbound ↻		
CALLSIGN		SI	PEL	COPN	ETN	ADEP
Type	W N	SSR	XFL	COPX	ETX	ADES
AUA008		DSW	350	BUDOP	0325	LHBP
A321 H		4720		TEGRI	0403	LHBP
AUA038		DSW	350	ANEXA	0820	LHBP
A321 M		3433		GOTAR	0902	LHBP
BAF050		DSW	350	SASAL	0530	LHBP
A321 H		6311		NATEX	0648	LHBP
BAF071		DSW	350	STEIN	0205	LHBP
A321 H		3400		TEGRI	0327	LHBP
DHL027		DSW	350	DEMOP	0014	LHKE
A321 M		5375		FAPS	0119	LHBP
DHL069		DSW	350	SASAL	0805	LHBP
A321 L		4710		NATEX	0930	LHPA
W DHL075		DSW	350	ANEXA	1556	LHBP
W A321 H		0271		PATAK	1605	LHPA
EZS010		DSW	350	BUDOP	2104	LHBP
A321 L		0256		NATEX	2236	LHBP
EZS017		DSW	350	ANEXA	0110	LHBP
A321 L		1704		TEGRI	0204	LHBP

Figure 30. Inbound List ACC

APP workstations have two tabs, one for coordinated flights and one for notified flights, and the following fields in their sector inbound list:

- Callsign
- Aircraft Type (Type)
- Wake Turbulence Category (W)
- Number of aircraft in formation (N)

- Sector Indicator (SI)
- Runway (RWY)
- Destination Aerodrome (ADES)
- SSR code (SSR)
- Assigned Heading (AHDG)
- Coordinated point of entry (COPN)
- STAR
- Entry Time (ETN)
- Planned Entry Level (PEL)

Coord (23)		Notified (9)			Inbound 	
CALLSIGN		SI	ADES	AHDG	STAR	
Type	W N	RWY	SSR	COPN	ETN	PEL
BAF041		DSW	LHPA		ANEXA2T	
A321	L	13L	2562	ERGOM	1106	350
DHL065		DSW	LHBP	ANEXA	ANEXA2T	
A321	L	13L	7076	BAPIT	0312	350
DHL092		DSW	LHPA	ANEXA		
A321	H		3001	STEIN	0358	350
EZS035		DSW	LHPA	ANEXA		
A321	M		1274	BAPIT	0716	350
EZS051		DSW	LHPA	H150	ANEXA2T	
A321	L	13L	3433	DEMOP	1407	350
EZS061		DSW	LHBP	ANEXA		
A321	H		0333	STEIN	2219	350
LDM006		DSW	LHPA	L15	ANEXA2T	
A321	M	13L	1575	SASAL	1446	350
LDM007		DSW	LHPA		ANEXA2T	
A321	L	13L	2144	BAPIT	0017	350
LDM038		DSW	LHBP		ANEXA2T	
A321	H	13L	2651	ANEXA	1040	350

Figure 31. Inbound List APP, Coordinated Tab

Coord (23)			Notified (9)			Inbound ↻	
CALLSIGN			SI	ADES	AHDG	STAR	
Type	W	N	RWY	SSR	COPN	ETN	PEL
AUA018			DSW	LHBP		ANEXA2T	
A321	M		13L	7762	STEIN	1009	350
AUA022			DSW	LHPA		ANEXA2T	
A321	M		13L	7477	PARAK	0927	350
DHL000			DSW	LHBP		ANEXA2T	
A321	H		13L	1753	PARAK	1451	350
LDM031			DSW	LHBP	ANEXA	ANEXA2T	
A321	H		13L	3565	SASAL	1957	350
QTR091			DSW	LHPA	H320	ANEXA2T	
A321	H		13L	1646	STEIN	1706	350
RYR068			DSW	LHBP	L15	ANEXA2T	
A321	M		13L	0026	BUDOP	1733	350
SXS067			DSW	LHPA			
A321	M			6244	ANEXA	0755	350
THY077			DSW	LHBP	ANEXA	ANEXA2T	
A321	L		13L	5531	STEIN	0721	350
TVS098			DSW	LHPA		ANEXA2T	
A321	M		13L	7313	BUDOP	1816	350

Figure 32. Inbound List APP, Notified Tab

5.3. Departures List Overview

The departures list is found at the bottom right of the screen. The ACC and APP workstations have the same configured fields for their departures list. The departures list displays departing flights that are in **Proposed** lifecycle state for the configured aerodrome.

The fields shown in the departures list:

- Callsign
- Aircraft Type (T)
- Wake Turbulence Category (W)
- Number of aircraft in formation (N)
- Sector Indicator (SI)
- Runway (RWY)
- Cleared Flight Level (CFL)
- Estimated Off Block Time (EOBT)
- SID
- SSR code (SSR)
- Destination Aerodrome (ADES)

LHBP (10)				Other (12)		Departures 	
CALLSIGN		SI		CFL		STS	
Type	W N	RWY	EOBT	SID		ADES	
DLH200		A359 H		13R		1101	
DLH201		A359 H		13R		1106	
DLH202		A359 H		13R		1111	
DLH203		A359 H		13R		1116	
DLH204		A359 H		13R		1121	
DLH205		A359 H		13R		1126	
DLH206		A359 H		13R		1131	
DLH207		A359 H		13R		1136	
DLH208		A359 H		13R		1141	

Figure 33. Departures List

Departures from other aerodromes are shown in the Other tab, grouped by each aerodrome.

LHBP (10)			Other (10)			Departures 		
CALLSIGN		SI	CFL		STS	SID		
Type	W	N	RWY	EOBT		SSR	ADES	
LHDC								
ICE208	B737	M	04R	1140			LHBP	
ICE207	B737	M	04R	1135			LHBP	
ICE206	B737	M	04R	1130			LHBP	
ICE205	B737	M	04R	1125			LHBP	
ICE204	B737	M	04R	1120			LHBP	
ICE203	B737	M	04R	1115			LHBP	
ICE202	B737	M	04R	1110			LHBP	
ICE201	B737	M	04R	1105			LHBP	

Figure 34. Departures List Other Tab


On ACC workstations, the departures list is collapsed when not being used. Hover over the departures list to expand it.

LHBP (3)	Other (2)	Departures 
----------	-----------	--

Figure 35. Departures List Collapsed

5.4. Lost List

When an assumed flight loses surveillance, it appears in the lost list. The list is found at the top right of the screen and is only visible when there are lost tracks. If there are no lost tracks, the list is automatically hidden.

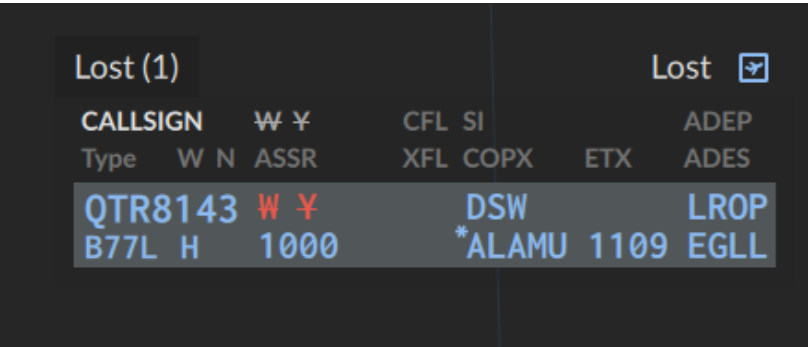

5.5. Sending Manual Departure Messages

It is possible to send a manual departure message to the backend. This is done by opening the menu from the ETD field in the flight list.

The menu opens with the current time set in the time field. The time field can be edited to the desired time. The message is sent by pressing the "Send Dep" button.




Figure 36. Send Departure Message menu

5.6. Assume Inbound Track

To assume a track that is in Transfer-In Initiated control state:

- LMB click on the callsign in its track label.
- A dialog menu will appear, including the option to assume control.
- LMB click this option, and the track will be assumed.
- The track will be Assumed and appear in the Sector List.

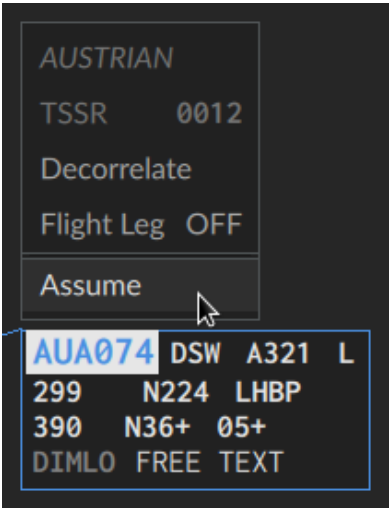


Figure 37. Track Label Callsign Menu - Transfer-In Initiated

To request control of a track controlled by another ATC user:

- LMB click on the callsign in its track label.
- A menu will appear giving the option to request transfer of control.
- LMB click to select this option.

- If the other user confirms the transfer of control, the track will change to **Assumed** and appear in the Sector List.

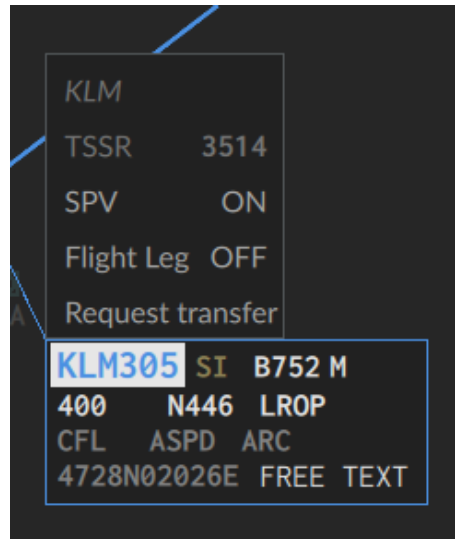


Figure 38. Track Label Sector Menu - Track Concerned, controlling sector in area of interest

If the track is Non-Concerned, Concerned, Transfer-In Initiated, Redundant or Completed:

- LMB click on the sector indicator in its track label.
- A menu will appear with one option; Force Assume .
- LMB click to select this option.
- The track will change to **Assumed** and appear in the Sector List.

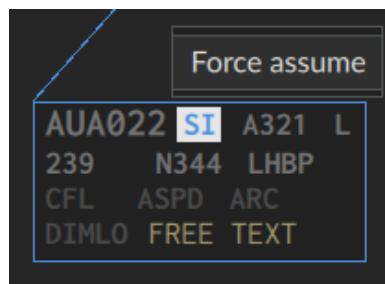


Figure 39. Track Label Sector Menu - Track Non-Concerned, Concerned, Transfer-In Initiated, Redundant or Completed

To reject the transfer of an inbound track with initiated transfer (i.e. control state **Transfer-In Initiated**):

- LMB click on the sector indicator in its track label.
- A menu will appear with the option to reject transfer.
- LMB click to select this option.
- The track will return to control state **Concerned** for the time being.

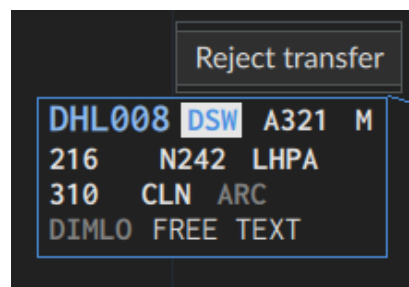


Figure 40. Track Label Sector Menu - Track Transfer-In Initiated

5.7. Transfer Flight Control

To transfer a track without receiving a request:

- LMB click on the callsign to open its menu dialog.
- LMB the option to transfer control, this will change the flight's control state to **Transfer-Out Initiated**.
- When the other user accepts transfer, the flight will disappear from the Sector List and change to a **Redundant** or **Terminated** state. This depends on it's position.

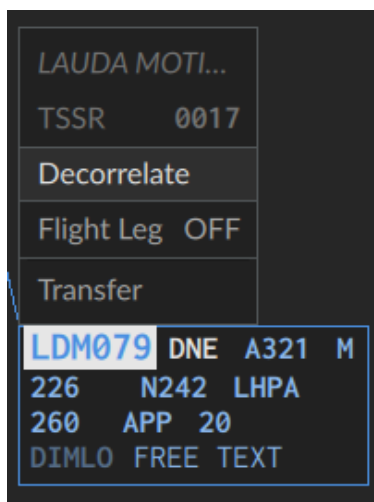


Figure 41. Track Label Callsign Menu - Assumed

To cancel a transfer that has been initiated (i.e control state **Transfer-Out Initiated**):

- LMB click on the callsign to open its menu dialog.
- LMB click the option to Reclaim control.
- The track will return to **Assumed** control state.

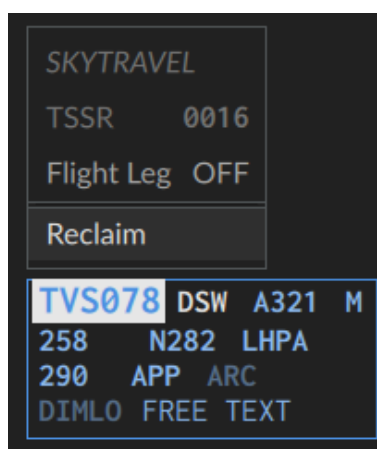


Figure 42. Callsign Menu - Transfer-Out Initiated

To release a flight that has initiated transfer to a sector that has not yet assumed the flight:

- LMB click on the sector indicator to open its menu dialog.
- LMB click the option to Release the flight.
- The flight will become **Redundant** or **Terminated**, depending on it's position, and disappear from the Sector List.

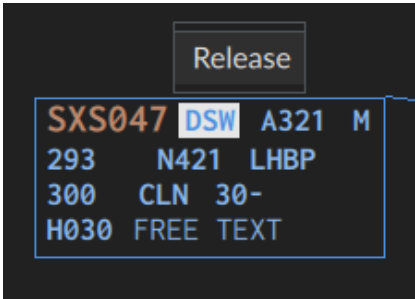


Figure 43. Sector Menu - Transfer-Out Initiated

To decontrol a flight that has initiated transfer to a sector that is not a part of the system:

- LMB click on the sector indicator to open its menu dialog.
- LMB click the option to Decontrol the flight.
- The flight will become Redundant or Terminated , depending on it's position, and disappear from the Sector List.

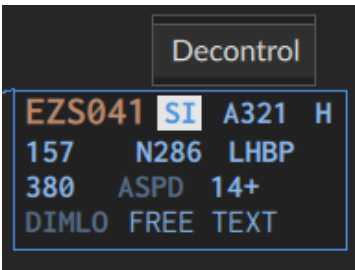


Figure 44. Sector Menu - Transfer-Out Initiated, no next sector

For controlled flights in transfer phase (when a flight is reaching a configurable amount of time before leaving the current sector), the frequency the flight is supposed to switch to is shown on track label's SI field. The frequency can be toggled at any time by MMB clicking the SI field of the track label. The frequency shown for flights which are not assumed is the controlling sector frequency.

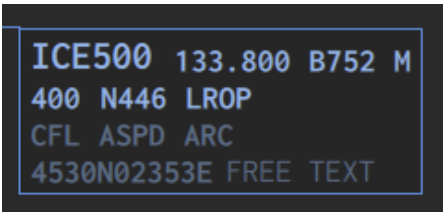


Figure 45. Frequency - Controlled Flight

5.8. SSR Discrepancy

When there is a discrepancy between the filed SSR code and transponded SSR code, the controller is alerted through the flight lists wherever the SSR field is displayed. The SSR will display in yellow to indicate this. This can either be resolved by conferring with the pilot to update the transponded SSR code or by updating the filed SSR code in the system with Section 5.9.

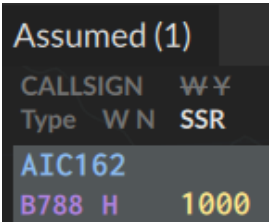


Figure 46. SSR Discrepancy ACC Sector List

5.9. SSR Code Allocation

Allocate SSR codes using the Departures List/Sector List. If the ATCO wishes to request SSR code allocation from the Flight Data Processor server, LMB on the SSR field and select "Request SSR allocation".

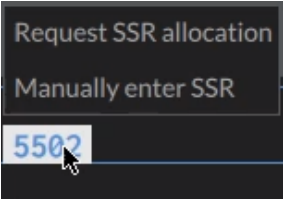


Figure 47. SSR Code Allocation Menu

For manual SSR allocation, LMB on the "SSR" field and select "Manually enter SSR". Enter a new numeric value (between 0-7). The previous SSR is replaced once the user presses enter to confirm the new value.



Figure 48. Manual SSR Code Allocation

5.10. Clearances

Various clearances are available through both track label and lists. See chapter on Chapter 7 for more details.