

Required Tools and Materials
H2.0 hex key
H1.5 hex key
Scissors or side cutters
Flat tweezers
Estimated time: 15 min




P2S Extruder Clog Cleaning Guide

This article will introduce the detailed steps for cleaning the P2S extruder.



Extruder clogs are usually caused by heat creep. When this happens, the printer can no longer extrude filament. This article provides a step-by-step method for clearing the clog after it occurs. The image below shows the typical clog location:

Disassembled Parts:

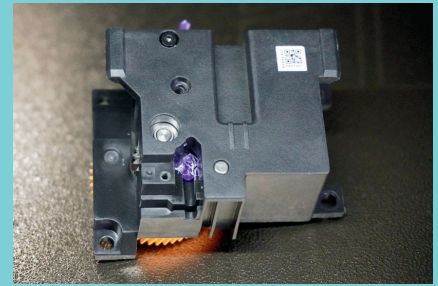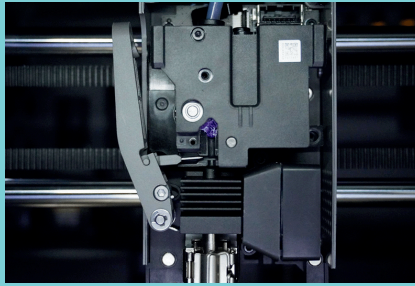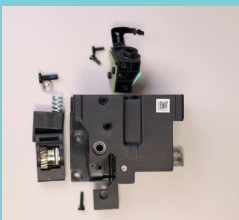

Important!


Before performing any maintenance on the printer or its electronics (including toolhead cables), power the printer off and unplug it to prevent short circuits that could damage components or create safety hazards.

Always check the temperatures of the hotend and heatbed before servicing. If you must work while they are hot, wear heat-resistant gloves to ensure safe and effective maintenance.

1. Remove the Toolhead Front Cover



2. Cut Filament Between Hotend and Extruder

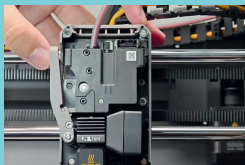

3. Pull Out the Toolhead PTFE Tube





3A. Pull Out the Toolhead PTFE Tube



3B. Pull Out the Toolhead PTFE Tube



4. Remove the Extruder

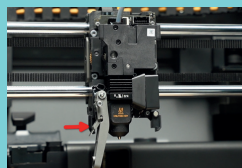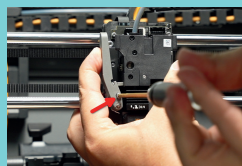


4A. Remove the Extruder

Do not use sharp tools to avoid damaging the flex cable.



4B. Remove the Extruder

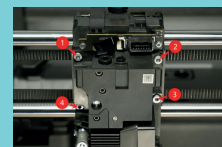

Lift off the extruder assembly.


If the extruder is hard to remove, filament may be jammed between the extruder and nozzle; remove the nozzle first if necessary.




5. Clear the Clogged Filament




5A. Remove the filament sensor:

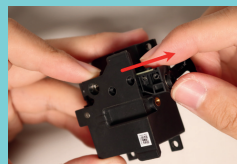

5B. Unscrew and safely store the gear-pressure screw:

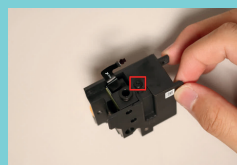

5C. Take out the yellow active extrusion wheel:


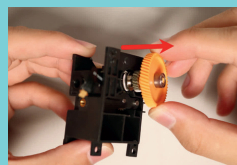


Tip:


If filament is jammed between the active wheel and driven wheel, the active wheel may not pull out from the front. In that case, gently tap the shaft from the rear to push the wheel out. Tap location:




6. Remove the pressure block, driven wheel, and related parts from the extruder front cover:

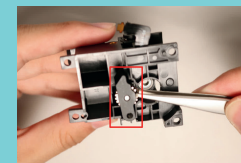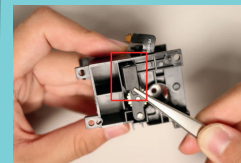

You will see swollen filament in the extruder throat:



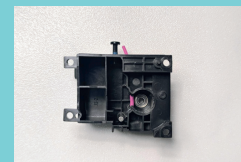


Unscrew the outlet pressure block and pull the expanded filament out:

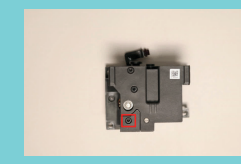

Reassemble:

Fit the driven wheel into the extruder front cover:

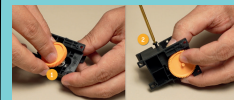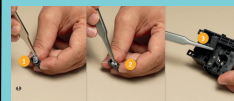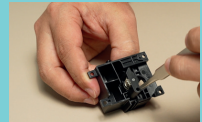

Connect FPC Cable:



Do not pull on the filament sensor; the flex cable can tear.

Install Extruder:



Reinstall Cutter:

