



# Maintain the MetroCluster components

## ONTAP MetroCluster

NetApp  
April 28, 2021

This PDF was generated from [https://docs.netapp.com/us-en/ontap-metrocluster/maintain/concept\\_deciding\\_whether\\_to\\_use\\_this\\_guide\\_mcc\\_service\\_guide.html](https://docs.netapp.com/us-en/ontap-metrocluster/maintain/concept_deciding_whether_to_use_this_guide_mcc_service_guide.html) on April 28, 2021. Always check [docs.netapp.com](https://docs.netapp.com) for the latest.

# Table of Contents

MetroCluster® Service Guide .....	1
Deciding whether to use the MetroCluster Maintenance Guide .....	1
Where to find procedures for MetroCluster maintenance tasks .....	1
MetroCluster failure and recovery scenarios .....	4
Performing FC-to-SAS bridge maintenance .....	6
Performing FC switch maintenance and replacement .....	67
Performing IP switch maintenance and replacement .....	108
Adding, removing, or changing ISL ports nondisruptively .....	118
Identifying storage in a MetroCluster IP configuration .....	120
Hot-adding storage to a MetroCluster FC configuration .....	124
Hot-removing storage from a MetroCluster FC configuration .....	151
Replacing a shelf nondisruptively in a stretch MetroCluster configuration .....	155
Replacing a shelf nondisruptively in a fabric-attached MetroCluster configuration .....	157
When to migrate root volumes to a new destination .....	162
Moving a metadata volume in MetroCluster configurations .....	163
Renaming a cluster in MetroCluster configurations .....	166
Powering off and powering on a data center .....	168
Powering off an entire MetroCluster IP configuration .....	186
Powering off an entire MetroCluster FC configuration .....	187
Reconfiguring an FC switch layout configured before ONTAP 9.x .....	189
Port assignments for FC switches .....	194
Using the Interoperability Matrix Tool to find MetroCluster information .....	229
Where to find additional information .....	230

# MetroCluster® Service Guide

This content provides service procedures for MetroCluster systems, including firmware upgrade and hardware replacement procedures for drive shelves, IP switches, FC switches, FC-to-SAS bridges, and SAS cables.

## Deciding whether to use the MetroCluster Maintenance Guide

This guide describes how to perform maintenance on the MetroCluster hardware components.

You should use this guide for maintaining the MetroCluster-specific hardware components in your MetroCluster configuration.

## Where to find procedures for MetroCluster maintenance tasks

You should be sure you select the correct procedure when you perform MetroCluster hardware maintenance tasks.



With the release of ONTAP 9.8, the MetroCluster upgrade and expansion procedures have moved to the [MetroCluster Upgrade and Expansion Guide](#) and [MetroCluster Transition Guide](#).

Component	MetroCluster type (FC or IP)	Task	Procedure
ONTAP software	Both	ONTAP software upgrade	<a href="#">Upgrade</a> , <a href="#">revert</a> , or <a href="#">downgrade</a>

Component	MetroCluster type (FC or IP)	Task	Procedure
Controller module	Both	FRU replacement (including controller modules, PCIe cards, FC-VI card, and so on)	<a href="#">AFF and FAS Documentation Center</a>
	 Moving a storage controller module or NVRAM card among the MetroCluster storage systems is not supported.	<a href="#">MetroCluster Upgrade, Transition, and Expansion Guide</a>	

Component	MetroCluster type (FC or IP)	Task	Procedure
Drive shelf	FC	Shelf addition (stack with bridges or individual shelf)	<p><a href="#">Hot-adding a stack of SAS disk shelves to an existing pair of FibreBridge 7500N bridges</a></p> <p><a href="#">Hot-adding a stack of SAS disk shelves and bridges to a MetroCluster system</a></p> <p><a href="#">Hot-adding a SAS disk shelf to a stack of SAS disk shelves</a></p>
		Shelf removal	<a href="#">Hot-removing storage from a MetroCluster FC configuration</a>
		All other shelf maintenance procedures. The standard procedures can be used.	<a href="#">Service Guide for DS460C DS224C and DS212C Disk Shelves</a>
	IP	All shelf maintenance procedures. The standard procedures can be used.	<a href="#">Service Guide for DS460C DS224C and DS212C Disk Shelves</a>
		If adding shelves for an unmirrored aggregate, see <a href="#">Considerations when using unmirrored aggregates</a>	
	Both	Hot adding IOM12 shelves to a stack of IOM6 shelves	<a href="#">Hot-adding shelves with IOM12 modules to a stack of shelves with IOM6 modules</a>

Component	MetroCluster type (FC or IP)	Task	Procedure
FC-to-SAS bridge	FC	Bridge replacement	<p>Replacing a single FC-to-SAS bridge</p> <p>Replacing a pair of FibreBridge 6500N bridges with 7600N or 7500N bridges</p> <p>Hot-swapping a FibreBridge 7500N with a 7600N bridge</p>
	FC	Firmware upgrade	Updating the firmware on a FibreBridge bridge
	FC	Replacing a failed power supply module	Hot-replacing a failed power supply module
FC switch	FC	Switch upgrade	Upgrading to new Brocade FC switches
	FC	Switch replacement	<p>Replacing a Brocade FC switch (MetroCluster)</p> <p>Replacing a Cisco FC switch</p>
	FC	Firmware upgrade	<p>Updating firmware on a Brocade FC switch</p> <p>Updating firmware on a Cisco FC switch</p>
SAS optical cables	FC	Cable replacement	
Cluster interconnect switches	FC	Switch replacement	
	Both	Firmware upgrade	

## MetroCluster failure and recovery scenarios

You should be aware of how the MetroCluster configuration responds to different failure events.



For additional information about recovery from node failures, see the section "Choosing the correct recovery procedure" in the [MetroCluster Management and Disaster Recovery Guide](#).

Event	Impact	Recovery
Single node failure	A failover is triggered.	<p>The configuration recovers through a local takeover. RAID is not impacted. Review system messages and replace failed FRUs as necessary.</p> <p><a href="#">AFF and FAS Documentation Center</a></p>
Two nodes fail at one site	Two nodes will fail only if automated switchover is enabled in the MetroCluster Tiebreaker software.	<p>Manual USO if automated switchover in MetroCluster Tiebreaker software is not enabled.</p> <p><a href="#">AFF and FAS Documentation Center</a></p>
MetroCluster IP interface—failure of one port	The system is degraded. Additional port failure impacts HA mirroring.	<p>The second port is used. Health Monitor generates an alert if the physical link to the port is broken. Review system messages and replace failed FRUs as necessary.</p> <p><a href="#">AFF and FAS Documentation Center</a></p>
MetroCluster IP interface—failure of both ports	HA capability is impacted. RAID SyncMirror of the node stops syncing.	<p>Immediate manual recovery is required as there is no HA takeover. Review system messages and replace failed FRUs as necessary.</p> <p><a href="#">AFF and FAS Documentation Center</a></p>
Failure of one MetroCluster IP switch	No impact. Redundancy is provided through the second network.	<p>Replace the failed switch as necessary.</p> <p><a href="#">Replacing an IP switch</a></p>
Failure of two MetroCluster IP switches that are in the same network	No impact. Redundancy is provided through the second network.	<p>Replace the failed switch as necessary.</p> <p><a href="#">Replacing an IP switch</a></p>
Failure of two MetroCluster IP switches that are at one site	RAID SyncMirror of the node stops syncing. HA capability is impacted and the cluster goes out of quorum.	<p>Replace the failed switch as necessary.</p> <p><a href="#">Replacing an IP switch</a></p>

Event	Impact	Recovery
Failure of two MetroCluster IP switches that are at different sites and not on the same network (diagonal failure)	RAID SyncMirror of the node stops syncing.	RAID SyncMirror of the node stops syncing. Cluster and HA capability are not impacted. Replace the failed switch as necessary.  <a href="#">Replacing an IP switch</a>

## Performing FC-to-SAS bridge maintenance

If necessary, you can nondisruptively replace the FC-to-SAS bridges or upgrade their firmware in the MetroCluster configuration.



FibreBridge 6500N bridges are not supported in configurations running ONTAP 9.8 and later.

### Support for FibreBridge 7600N bridges in MetroCluster configurations

The FibreBridge 7600N bridge is supported on ONTAP 9.5 and later as a replacement for the FibreBridge 7500N or 6500N bridge or when adding new storage to the MetroCluster configuration. The zoning requirements and restrictions regarding use of the bridge's FC ports are the same as that of the FibreBridge 7500N bridge.

[NetApp Interoperability Matrix Tool](#)



FibreBridge 6500N bridges are not supported in configurations running ONTAP 9.8 and later.

Use case	Zoning changes needed?	Restrictions	Procedure
Replacing a single FibreBridge 7500N bridge with a single FibreBridge 7600N bridge	No	The FibreBridge 7600N bridge must be configured exactly the same as the FibreBridge 7500N bridge.	<a href="#">Hot-swapping a FibreBridge 7500N with a 7600N bridge</a>
Replacing a single FibreBridge 6500N bridge with a single FibreBridge 7600N bridge	No	The FibreBridge 7600N bridge must be configured exactly the same as the FibreBridge 6500N bridge.	<a href="#">Hot-swapping a FibreBridge 6500N bridge with a FibreBridge 7600N or 7500N bridge</a>

Use case	Zoning changes needed?	Restrictions	Procedure
Adding new storage through adding a new pair of FibreBridge 7600N bridges	Yes You must add storage zones for each of the FC ports of the new bridges.	You must have available ports on the FC switch fabric (in a fabric-attached MetroCluster configuration) or on the storage controllers (in a stretch MetroCluster configuration). Each pair of FibreBridge 7500N or 7600N bridges can support up to four stacks.	<a href="#">Hot-adding a stack of SAS disk shelves and bridges to a MetroCluster system</a>

## Support for FibreBridge 7500N bridges in MetroCluster configurations

The FibreBridge 7500N bridge is supported as a replacement for the FibreBridge 6500N bridge or for when adding new storage to the MetroCluster configuration. The supported configurations have zoning requirements and restrictions regarding use of the bridge's FC ports and stack and storage shelf limits.



FibreBridge 6500N bridges are not supported in configurations running ONTAP 9.8 and later.

Use case	Zoning changes needed?	Restrictions	Procedure
Replacing a single FibreBridge 6500N bridge with a single FibreBridge 7500N bridge	No	The FibreBridge 7500N bridge must be configured exactly the same as the FibreBridge 6500N bridge, using a single FC port and attaching to a single stack. The second FC port on the FibreBridge 7500N must not be used.	<a href="#">Hot-swapping a FibreBridge 6500N bridge with a FibreBridge 7600N or 7500N bridge</a>

Use case	Zoning changes needed?	Restrictions	Procedure
Consolidating multiple stacks by replacing multiple pairs of FibreBridge 6500N bridges with a single pair of FibreBridge 7500N bridges	Yes	<p>In this case, you take the FibreBridge 6500N bridges out of service and replace them with a single pair of FibreBridge 7500N bridges. Each pair of FibreBridge 7500N or 7600N bridges can support up to four stacks.</p> <p>At the end of the procedure, both the top and bottom of the stacks must be connected to corresponding ports on the FibreBridge 7500N bridges.</p>	<a href="#">Replacing a pair of FibreBridge 6500N bridges with 7600N or 7500N bridges</a>
Adding new storage through adding a new pair of FibreBridge 7500N bridges	Yes You must add storage zones for each of the FC ports of the new bridges.	<p>You must have available ports on the FC switch fabric (in a fabric-attached MetroCluster configuration) or on the storage controllers (in a stretch MetroCluster configuration). Each pair of FibreBridge 7500N or 7600N bridges can support up to four stacks.</p>	<a href="#">Hot-adding a stack of SAS disk shelves and bridges to a MetroCluster system</a>

## Enabling IP port access on the FibreBridge 7600N bridge if necessary

If you are using an ONTAP version prior to 9.5, or otherwise plan to use out-of-band access to the FibreBridge 7600N bridge using telnet or other IP port protocols and services (FTP, ExpressNAV, ICMP, or QuickNAV), you can enable the access services via the console port.

Unlike the ATTO FibreBridge 7500N and 6500N bridges, the FibreBridge 7600N bridge is shipped with all IP port protocols and services disabled.

Starting with ONTAP 9.5, *in-band management* of the bridges is supported. This means the bridges can be configured and monitored from the ONTAP CLI via the FC connection to the bridge. Physical access to the bridge via the bridge Ethernet ports is not required and the bridge user interfaces are not required.

Starting with ONTAP 9.8, *in-band management* of the bridges is supported by default and out-of-band SNMP management is deprecated.

This task is required if you are **not** using in-band management to manage the bridges. In this case, you need to configure the bridge via the Ethernet management port.

## Steps

1. Access the bridge's console interface by connecting a serial cable to the serial port on the FibreBridge 7600N bridge.
2. Using the console, enable the access services, and then save the configuration:

```
set closeport none
```

```
saveconfiguration
```

The `set closeport none` command enables all access services on the bridge.

3. Disable a service, if desired, by issuing the `set closeport` and repeating the command as necessary until all desired services are disabled:

```
set closeport service
```

The `set closeport` command disables a single service at a time.

`service` can specify one of the following:

- expressnav
- ftp
- icmp
- quicknav
- snmp

◦ telnet You can check whether a specific protocol is enabled or disabled by using the `get closeport` command.

4. If you are enabling SNMP, you must also issue the `set SNMP enabled` command:

```
set SNMP enabled
```

SNMP is the only protocol that requires a separate enable command.

5. Save the configuration:

```
saveconfiguration
```

## Updating firmware on a FibreBridge bridge

The procedure for updating the bridge firmware depends on your bridge model and ONTAP version.

### Updating firmware on FibreBridge 7600N or 7500N bridges on configurations running ONTAP 9.4 and later

You might need to update the firmware on your FibreBridge bridges to ensure that you have the latest features or to resolve possible issues. This procedure should be used for FibreBridge 7600N or 7500N bridges on configurations running ONTAP 9.4 and later.

- The MetroCluster configuration must be operating normally.
- All of the FibreBridge bridges in the MetroCluster configuration must be up and operating.
- All of the storage paths must be available.
- You need the admin password and access to an HTTP server.
- You must be using a supported firmware version.

### [NetApp Interoperability Matrix Tool](#)

In the IMT, you can use the Storage Solution field to select your MetroCluster solution. You use the **Component Explorer** to select the components and ONTAP version to refine your search. You can click **Show Results** to display the list of supported configurations that match the criteria.

- You can use this task only on FibreBridge 7600N or 7500N bridges in configurations running ONTAP 9.4 or later.
- You must perform this task on each FibreBridge bridge in the MetroCluster configuration, so that all of the bridges are running the same firmware version.

-  This procedure is nondisruptive and takes approximately 30 minutes to complete.
-  Starting with ONTAP 9.8, the **storage bridge** command is replaced with **system bridge**. The following steps show the **storage bridge** command, but if you are running ONTAP 9.8 or later, the **system bridge** command is preferred.

1. Invoke an AutoSupport message indicating the start of the maintenance:

```
system node autosupport invoke -node * -type all -message MAINT=maintenance-window-in-hours
```

`maintenance-window-in-hours` specifies the length of the maintenance window, with a maximum of 72 hours. If the maintenance is completed before the time has elapsed, you can invoke an AutoSupport message indicating the end of the maintenance period:

```
system node autosupport invoke -node * -type all -message MAINT=end
```

2. Go to the ATTO FibreBridge page and select the appropriate firmware for your bridge.

### [ATTO FibreBridge Firmware Download Page](#)

3. Review the Caution/MustRead and End User Agreement, and click the check box to indicate acceptance and proceed.
4. Place the firmware file in a network location that is network accessible to the controller modules.

You can enter the commands in the remaining steps from the console of either controller module.

5. Change to the advanced privilege level:

```
set -privilege advanced
```

You must respond with `y` when prompted to continue into advanced mode and see the advanced mode prompt (`*>`).

6. Update the bridge firmware by using the following command:

```
storage bridge firmware update -bridge name -uri URL-of-firmware-package
```

```
cluster_A> storage bridge firmware update -bridge bridge_A_1a -uri  
http://192.168.132.97/firmware.spf
```

7. Return to the admin privilege level:

```
set -privilege admin
```

8. Verify that the firmware upgrade is complete:

```
job show -name Storage bridge firmware update
```

The following example shows that the job is still running:

```
cluster_A> job show -name storage bridge firmware update  
Owning  
  
Job ID Name Vserver Node State  
-----  
2246 job-name cluster_A node_A_1 Running  
Description: Storage bridge firmware update job
```

After approximately 10 minutes, the new firmware is fully installed and the job state will be Success:

```
cluster_A> job show -name Storage bridge firmware update  
  
Owning  
Job ID Name Vserver Node State  
-----  
2246 Storage bridge firmware update job name cluster_A node_A_1 Success  
Description: Storage bridge firmware update job
```

9. Complete the steps according to whether in-band management is enabled and which version of ONTAP your system is running:

- If you are running ONTAP 9.4, in-band management is not supported and the command must be issued from the bridge console:

- i. Run the **flashimages** command on the console of the bridge and confirm that the correct firmware versions are displayed.



The example shows that primary flash image shows the new firmware image, while the secondary flash image shows the old image.

```
flashimages

;Type Version
=====
Primary 3.16 001H
Secondary 3.15 002S
Ready.
```

- ii. Reboot the bridge by running the **firmwarerestart** command from the bridge.

- If you are running ONTAP 9.5 or later, in-band management is supported and the command can be issued from the cluster prompt:

- i. Run the **storage bridge run-cli -name bridge-name -command FlashImages** command.



The example shows that primary flash image shows the new firmware image, while the secondary flash image shows the old image.

```
cluster_A> storage bridge run-cli -name ATTO_7500N_IB_1 -command
FlashImages
```

```
[Job 2257]
```

```
;Type Version
=====
Primary 3.16 001H
Secondary 3.15 002S
Ready.
```

```
[Job 2257] Job succeeded.
```

- ii. If necessary, restart the bridge: **storage bridge run-cli -name ATTO\_7500N\_IB\_1 -command FirmwareRestart**



Starting with ATTO firmware version 2.95 the bridge will restart automatically and this step is not required.

10. Verify that the bridge restarted correctly:

## **sysconfig**

The system should be cabled for multipath high availability (both controllers have access through the bridges to the disk shelves in each stack).

```
cluster_A> node run -node cluster_A-01 -command sysconfig
NetApp Release 9.6P8: Sat May 23 16:20:55 EDT 2020
System ID: 1234567890 (cluster_A-01); partner ID: 0123456789 (cluster_A-02)
System Serial Number: 200012345678 (cluster_A-01)
System Rev: A4
System Storage Configuration: Quad-Path HA
```

11. Verify that the FibreBridge firmware was updated:

### **storage bridge show -fields fw-version,symbolic-name**

```
cluster_A> storage bridge show -fields fw-version,symbolic-name
name fw-version symbolic-name
-----
ATTO_20000010affeaffe 3.10 A06X bridge_A_1a
ATTO_20000010affeffae 3.10 A06X bridge_A_1b
ATTO_20000010affeafff 3.10 A06X bridge_A_2a
ATTO_20000010affeaffa 3.10 A06X bridge_A_2b
4 entries were displayed.
```

12. Verify the partitions are updated from the bridge's prompt:

### **flashimages**

The primary flash image displays the new firmware image, while the secondary flash image displays the old image.

```
Ready.
flashimages

;Type          Version
;=====
Primary      3.16 001H
Secondary    3.15 002S

Ready.
```

13. Repeat steps 5 to 10 to ensure that both flash images are updated to the same version.
14. Verify that both flash images are updated to the same version.

## **flashimages**

The output should show the same version for both partitions.

```
Ready.  
flashimages  
  
;Type      Version  
=====  
Primary    3.16 001H  
Secondary   3.16 001H  
  
Ready.
```

15. Repeat steps 5 to 13 on the next bridge until all of the bridges in the MetroCluster configuration have been updated.

### **Updating firmware on FibreBridge 7500N on configurations running ONTAP 9.3.x and earlier or 6500N bridges**

You might need to update the firmware on your FibreBridge bridges to ensure that you have the latest features or to resolve possible issues. This procedure should be used for FibreBridge 7500N on configurations running ONTAP 9.3.x or for FibreBridge 6500N bridges on all supported versions of ONTAP.

- The MetroCluster configuration must be operating normally.
- All of the FibreBridge bridges in the MetroCluster configuration must be up and operating.
- All of the storage paths must be available.
- You need the admin password and access to an FTP or SCP server.
- You must be using a supported firmware version.

#### [NetApp Interoperability Matrix Tool](#)

In the IMT, you can use the Storage Solution field to select your MetroCluster solution. You use the **Component Explorer** to select the components and ONTAP version to refine your search. You can click **Show Results** to display the list of supported configurations that match the criteria.

You can use this task with either FibreBridge 7500N or 6500N bridges. Starting with ONTAP 9.3, you can use the ONTAP storage bridge firmware update command to update bridge firmware on FibreBridge 7500N bridges.

#### [Updating firmware on FibreBridge 7600N or 7500N bridges on configurations running ONTAP 9.4 and later](#)

You must perform this task on each FibreBridge bridge in the MetroCluster configuration, so that all of the bridges are running the same firmware version.



This procedure is nondisruptive and takes approximately 30 minutes to complete.

## Steps

1. Invoke an AutoSupport message indicating the start of the maintenance:

```
system node autosupport invoke -node * -type all -message MAINT=maintenance-window-in-hours
```

*maintenance-window-in-hours* specifies the length of the maintenance window, with a maximum of 72 hours. If the maintenance is completed before the time has elapsed, you can invoke an AutoSupport message indicating the end of the maintenance period:

```
system node autosupport invoke -node * -type all -message MAINT=end
```

2. Go to the ATTO FibreBridge page and select the appropriate firmware for your bridge.

[ATTO FibreBridge Firmware Download Page](#)

3. Review the Caution/MustRead and End User Agreement, and click the check box to indicate acceptance and proceed.
4. Download the bridge firmware file using Steps 1 through 3 of the procedure on the ATTO FibreBridge Firmware Download page.
5. Make a copy of the ATTO FibreBridge Firmware Download page and release notes for reference when you are instructed to update the firmware on each bridge.
6. Update the bridge:

- a. Install the firmware on the FibreBridge bridge.

- If you are using ATTO FibreBridge 7500N bridges, you should refer to the instructions provided in the “Update Firmware” section of the *ATTO FibreBridge 7500N Installation and Operation Manual*.
- If you are using ATTO FibreBridge 6500N bridges, you should refer to the instructions provided in the “Update Firmware” section of the *ATTO FibreBridge 6500N Installation and Operation Manual*.  
**Attention:** You should be sure to power-cycle the individual bridge now. If you wait and power-cycle both bridges in a stack simultaneously, the controller might lose access to the drives, resulting in a plex failure or multidisk panic.

The bridge should restart.

- a. From the console of either controller, verify that the bridge restarted correctly:

```
sysconfig
```

The system should be cabled for multipath high availability (both controllers have access through the bridges to the disk shelves in each stack).

```
cluster_A::> node run -node cluster_A-01 -command sysconfig
NetApp Release 9.1P7: Sun Aug 13 22:33:49 PDT 2017
System ID: 1234567890 (cluster_A-01); partner ID: 0123456789
(cluster_A-02)
System Serial Number: 200012345678 (cluster_A-01)
System Rev: A4
System Storage Configuration: Quad-Path HA
```

- b. From the console of either controller, verify that the FibreBridge firmware was updated:

```
storage bridge show -fields fw-version,symbolic-name
```

```
cluster_A::> storage bridge show -fields fw-version,symbolic-name
      name          fw-version      symbolic-name
      -----
ATTO_10.0.0.1    1.63 071C 51.01  bridge_A_1a
ATTO_10.0.0.2    1.63 071C 51.01  bridge_A_1b
ATTO_10.0.1.1    1.63 071C 51.01  bridge_B_1a
ATTO_10.0.1.2    1.63 071C 51.01  bridge_B_1b
4 entries were displayed.
```

- c. Repeat the previous substeps on the same bridge to update the second partition.

- d. Verify that both partitions are updated:

```
flashimages
```

The output should show the same version for both partitions.

```
Ready.
flashimages
4
;Type      Version
=====
Primary    2.80 003T
Secondary   2.80 003T
Ready.
```

7. Repeat the previous step on the next bridge, until all of the bridges in the MetroCluster configuration have been updated.

## Replacing a single FC-to-SAS bridge

You can nondisruptively replace a bridge with a same model bridge or with a new model bridge.

You need the admin password and access to an FTP or SCP server.

This procedure is nondisruptive and takes approximately 60 minutes to complete.

This procedure uses the bridge CLI to configure and manage a bridge, and to update the bridge firmware and the ATTO QuickNAV utility to configure the bridge Ethernet management 1 port. You can use other interfaces if they meet the requirements.

[Requirements for using other interfaces to configure and manage FibreBridge bridges](#)

## Related information

## Replacing a pair of FibreBridge 6500N bridges with 7600N or 7500N bridges

### Verifying storage connectivity

Before replacing bridges, you should verify bridge and storage connectivity. Familiarizing yourself with the command output enables you to subsequently confirm connectivity after making configuration changes.

You can issue these commands from the admin prompt of any of the controller modules in the MetroCluster configuration at the site undergoing maintenance.

#### Steps

1. Confirm connectivity to the disks by entering the following command on any one of the MetroCluster nodes:

```
run local sysconfig -v
```

The output shows the disks attached to the initiator ports on the controller, and identifies the shelves connected to the FC-to-SAS bridges:

```
node_A_1> run local sysconfig -v
NetApp Release 9.3.2X18: Sun Dec 13 01:23:24 PST 2017
System ID: 4068741258 (node_A_1); partner ID: 4068741260 (node_B_1)
System Serial Number: 940001025471 (node_A_1)
System Rev: 70
System Storage Configuration: Multi-Path HA**<== Configuration should
be multi-path HA**
.
.
.
slot 0: FC Host Adapter 0g (QLogic 8324 rev. 2, N-port, <UP>) **<==
Initiator port**
    Firmware rev:      7.5.0
    Flash rev:        0.0.0
    Host Port Id:     0x60130
    FC Node Name:    5:00a:098201:bae312
    FC Port Name:    5:00a:098201:bae312
    SFP Vendor:       UTILITIES CORP.
    SFP Part Number:  FTLF8529P3BCVAN1
    SFP Serial Number: URQ0Q9R
    SFP Capabilities: 4, 8 or 16 Gbit
    Link Data Rate:   16 Gbit
    Switch Port:      brcd6505-fcs40:1
**<List of disks visible to port\>**
    ID      Vendor      Model          FW      Size
    brcd6505-fcs29:12.126L1527      : NETAPP  X302_HJUPI01TSSM NA04
847.5GB (1953525168 512B/sect)
    brcd6505-fcs29:12.126L1528      : NETAPP  X302_HJUPI01TSSA NA02
847.5GB (1953525168 512B/sect)
```

```

.
.
.

**<List of FC-to-SAS bridges visible to port\>**
FC-to-SAS Bridge:
brcd6505-fcs40:12.126L0      : ATTO      FibreBridge6500N 1.61
FB6500N102980
brcd6505-fcs42:13.126L0      : ATTO      FibreBridge6500N 1.61
FB6500N102980
brcd6505-fcs42:6.126L0      : ATTO      FibreBridge6500N 1.61
FB6500N101167
brcd6505-fcs42:7.126L0      : ATTO      FibreBridge6500N 1.61
FB6500N102974
.

.

.

**<List of storage shelves visible to port\>**
brcd6505-fcs40:12.shelf6: DS4243 Firmware rev. IOM3 A: 0200
IOM3 B: 0200
brcd6505-fcs40:12.shelf8: DS4243 Firmware rev. IOM3 A: 0200
IOM3 B: 0200
.
.
.
```

### **Hot-swapping a bridge with a replacement bridge of the same model**

You can hot-swap a failed bridge with another bridge of the same model.

If you will be using in-band management of the bridge rather than IP management, the steps for configuring the Ethernet port and IP settings can be skipped, as noted in the relevant steps.



Starting with ONTAP 9.8, the **storage bridge** command is replaced with **system bridge**. The following steps show the **storage bridge** command, but if you are running ONTAP 9.8 or later, the **system bridge** command is preferred.

#### **Steps**

1. If the old bridge is accessible, you can retrieve the configuration information.

<b>If...</b>	<b>Then...</b>
<b>You are using IP management</b>	Connect to the old bridge with a Telnet connection and copy the output of the bridge configuration.

If...	Then...
<b>You are using in-band management</b>	<p>Use the ONTAP CLI to retrieve the configuration information with the following commands:</p> <pre>storage bridge run-cli -name <i>bridge-name</i> -command "info"</pre> <pre>storage bridge run-cli -name <i>bridge-name</i> -command "sasportlist"</pre>

Enter the command:

```
storage bridge run-cli -name bridge_A1 -command "info"
```

info	
Device Status	= Good
Unsaved Changes	= None
Device	= "FibreBridge 7500N"
Serial Number	= FB7500N100000
Device Version	= 3.10
Board Revision	= 7
Build Number	= 007A
Build Type	= Release
Build Date	= "Aug 20 2019" 11:01:24
Flash Revision	= 0.02
Firmware Version	= 3.10
BCE Version (FPGA 1)	= 15
BAU Version (FPGA 2)	= 33
User-defined name	= "bridgeA1"
World Wide Name	= 20 00 00 10 86 A1 C7 00
MB of RAM Installed	= 512
FC1 Node Name	= 20 00 00 10 86 A1 C7 00
FC1 Port Name	= 21 00 00 10 86 A1 C7 00
FC1 Data Rate	= 16Gb
FC1 Connection Mode	= ptp
FC1 FW Revision	= 11.4.337.0
FC2 Node Name	= 20 00 00 10 86 A1 C7 00
FC2 Port Name	= 22 00 00 10 86 A1 C7 00
FC2 Data Rate	= 16Gb
FC2 Connection Mode	= ptp
FC2 FW Revision	= 11.4.337.0
SAS FW Revision	= 3.09.52
MP1 IP Address	= 10.10.10.10
MP1 IP Subnet Mask	= 255.255.255.0
MP1 IP Gateway	= 10.10.10.1

```

MP1 IP DHCP          = disabled
MP1 MAC Address      = 00-10-86-A1-C7-00
MP2 IP Address        = 0.0.0.0 (disabled)
MP2 IP Subnet Mask    = 0.0.0.0
MP2 IP Gateway         = 0.0.0.0
MP2 IP DHCP           = enabled
MP2 MAC Address       = 00-10-86-A1-C7-01
SNMP                 = enabled
SNMP Community String = public
PS A Status           = Up
PS B Status           = Up
Active Configuration   = NetApp

```

Ready.

Enter the command:

```
storage bridge run-cli -name bridge_A1 -command "sasportlist"
```

SASPortList				
;Connector	PHY	Link	Speed	SAS Address
Device A 1	Up	6Gb	5001086000a1c700	
Device A 2	Up	6Gb	5001086000a1c700	
Device A 3	Up	6Gb	5001086000a1c700	
Device A 4	Up	6Gb	5001086000a1c700	
Device B 1	Disabled	12Gb	5001086000a1c704	
Device B 2	Disabled	12Gb	5001086000a1c704	
Device B 3	Disabled	12Gb	5001086000a1c704	
Device B 4	Disabled	12Gb	5001086000a1c704	
Device C 1	Disabled	12Gb	5001086000a1c708	
Device C 2	Disabled	12Gb	5001086000a1c708	
Device C 3	Disabled	12Gb	5001086000a1c708	
Device C 4	Disabled	12Gb	5001086000a1c708	
Device D 1	Disabled	12Gb	5001086000a1c70c	
Device D 2	Disabled	12Gb	5001086000a1c70c	
Device D 3	Disabled	12Gb	5001086000a1c70c	
Device D 4	Disabled	12Gb	5001086000a1c70c	

2. If the bridge is in a fabric-attached MetroCluster configuration, disable all of the switch ports that connect to the bridge FC port or ports.
3. From the ONTAP cluster prompt, remove the bridge undergoing maintenance from health monitoring:
  - a. Remove the bridge:
 

```
storage bridge remove -name bridge-name
```

- b. View the list of monitored bridges and confirm that the removed bridge is not present:

**storage bridge show**

4. Properly ground yourself.
5. Power down the ATTO bridge.

If you are using a...	Then...
FibreBridge 7600N or 7500N bridge	Remove the power cables connected to the bridge.
FibreBridge 6500N bridge	Turn off the power switch of the bridge.

6. Disconnect the cables that are connected to the old bridge.

You should make note of the port to which each cable was connected.

7. Remove the old bridge from the rack.
8. Install the new bridge into the rack.
9. Reconnect the power cord and, if configuring for IP access to the bridge, a shielded Ethernet cable.



You must not reconnect the SAS or FC cables at this time.

10. Connect the bridge to a power source, and then turn it on.

The bridge Ready LED might take up to 30 seconds to illuminate, indicating that the bridge has completed its power-on self test sequence.

11. If configuring for in-band management, connect a cable from FibreBridge RS-232 serial port to the serial (COM) port on a personal computer.

The serial connection will be used for initial configuration, and then in-band management via ONTAP and the FC ports can be used to monitor and manage the bridge.

12. If configuring for IP management, configure the Ethernet management 1 port for each bridge by following the procedure in section 2.0 of the *ATTO FibreBridge Installation and Operation Manual* for your bridge model.

In systems running ONTAP 9.5 or later, in-band management can be used to access the bridge via the FC ports rather than the Ethernet port. Starting with ONTAP 9.8, only in-band management is supported and SNMP management is deprecated.

When running QuickNAV to configure an Ethernet management port, only the Ethernet management port that is connected by the Ethernet cable is configured. For example, if you also wanted to configure the Ethernet management 2 port, you would need to connect the Ethernet cable to port 2 and run QuickNAV.

13. Configure the bridge.

If you retrieved the configuration information from the old bridge, use the information to configure the new bridge.

Be sure to make note of the user name and password that you designate.

The *ATTO FibreBridge Installation and Operation Manual* for your bridge model has the most current information on available commands and how to use them.



Do not configure time synchronization on ATTO FibreBridge 7600N or 7500N. The time synchronization for ATTO FibreBridge 7600N or 7500N is set to the cluster time after the bridge is discovered by ONTAP. It is also synchronized periodically once a day. The time zone used is GMT and is not changeable.

- a. If configuring for IP management, configure the IP settings of the bridge.

To set the IP address without the QuickNAV utility, you need to have a serial connection to the FibreBridge.

If using the CLI, you must run the following commands:

```
set ipaddress mp1 _ip-address  
set ipsubnetmask mp1 subnet-mask  
set ipgateway mp1 x.x.x.x  
set ipdhcp mp1 disabled  
set ethernetspeed mp1 1000
```

- b. Configure the bridge name.

The bridges should each have a unique name within the MetroCluster configuration.

Example bridge names for one stack group on each site:

- bridge\_A\_1a
- bridge\_A\_1b
- bridge\_B\_1a
- bridge\_B\_1b

If using the CLI, you must run the following command:

```
set bridgename bridgename`
```

- c. If running ONTAP 9.4 or earlier, enable SNMP on the bridge:

```
set SNMP enabled
```

In systems running ONTAP 9.5 or later, in-band management can be used to access the bridge via the FC ports rather than the Ethernet port. Starting with ONTAP 9.8, only in-band management is supported and SNMP management is deprecated.

#### 14. Configure the bridge FC ports.

- a. Configure the data rate/speed of the bridge FC ports.

The supported FC data rate depends on your model bridge.

- The FibreBridge 7600 bridge supports up to 32, 16, or 8 Gbps.
- The FibreBridge 7500 bridge supports up to 16, 8, or 4 Gbps.
- The FibreBridge 6500 bridge supports up to 8, 4, or 2 Gbps.

**i** The FCDataRate speed you select is limited to the maximum speed supported by both the bridge and the switch to which the bridge port connects. Cabling distances must not exceed the limitations of the SFPs and other hardware.

+ If using the CLI, you must run the following command:

+ **set FCDataRate port-number port-speed**

- If you are configuring a FibreBridge 7500N or 6500N bridge, configure the connection mode that the port uses to ptp.

**i** The FCConnMode setting is not required when configuring a FibreBridge 7600N bridge.

If using the CLI, you must run the following command:

**set FCConnMode port-number ptp**

- If you are configuring a FibreBridge 7600N or 7500N bridge, you must configure or disable the FC2 port.
  - If you are using the second port, you must repeat the previous substeps for the FC2 port.
  - If you are not using the second port, then you must disable the port: + **FCPortDisable port-number**
- If you are configuring a FibreBridge 7600N or 7500N bridge, disable the unused SAS ports: **SASPortDisable sas-port**

**i** SAS ports A through D are enabled by default. You must disable the SAS ports that are not being used. If only SAS port A is used, then SAS ports B, C, and D must be disabled.  
. Secure access to the bridge and save the bridge's configuration.

- From the controller prompt check the status of the bridges: **storage bridge show**

The output shows which bridge is not secured.

- Check the status of the unsecured bridge's ports: **info**

The output shows the status of Ethernet ports MP1 and MP2.

- If Ethernet port MP1 is enabled, run the following command:

**set EthernetPort mp1 disabled**

**i** If Ethernet port MP2 is also enabled, repeat the previous substep for port MP2.

- Save the bridge's configuration.

You must run the following commands:

## **SaveConfiguration**

### **FirmwareRestart**

You are prompted to restart the bridge.

1. Update the FibreBridge firmware on each bridge.

If the new bridge is the same type as the partner bridge upgrade to the same firmware as the partner bridge. If the new bridge is a different type to the partner bridge, upgrade to the latest firmware supported by the bridge and version of ONTAP. See the section "Updating firmware on a FibreBridge bridge" in the *MetroCluster Maintenance Guide*.

2. Reconnect the SAS and FC cables to the same ports on the new bridge.

If the new bridge is a FibreBridge 7600N or 7500N, you must replace the cables connecting the bridge to the top or bottom of the shelf stack. The FibreBridge 6500N bridge used SAS cables; the FibreBridge 7600N and 7500N bridges require mini-SAS cables for these connections.



Wait at least 10 seconds before connecting the port. The SAS cable connectors are keyed; when oriented correctly into a SAS port, the connector clicks into place and the disk shelf SAS port LNK LED illuminates green. For disk shelves, you insert a SAS cable connector with the pull tab oriented down (on the underside of the connector). For controllers, the orientation of SAS ports can vary depending on the platform model; therefore, the correct orientation of the SAS cable connector varies.

3. Verify that each bridge can see all of the disk drives and disk shelves to which the bridge is connected.

If you are using the...	Then...
ATTO ExpressNAV GUI	<p>a. In a supported web browser, enter the IP address of the bridge in the browser box.</p> <p>You are brought to the ATTO FibreBridge homepage, which has a link.</p> <p>b. Click the link, and then enter your user name and the password that you designated when you configured the bridge.</p> <p>The ATTO FibreBridge status page appears with a menu to the left.</p> <p>c. Click <b>Advanced</b> in the menu.</p> <p>d. View the connected devices: <b>sastargets</b></p> <p>e. Click <b>Submit</b>.</p>
Serial port connection	<p>View the connected devices:</p> <p><b>sastargets</b></p>

The output shows the devices (disks and disk shelves) to which the bridge is connected. The output lines are sequentially numbered so that you can quickly count the devices.



If the text response truncated appears at the beginning of the output, you can use Telnet to connect to the bridge, and then view all of the output by using the `sastargets` command.

The following output shows that 10 disks are connected:

Tgt	VendorID	ProductID	Type	SerialNumber
0	NETAPP	X410_S15K6288A15	DISK	3QP1CLE300009940UHJV
1	NETAPP	X410_S15K6288A15	DISK	3QP1ELF600009940V1BV
2	NETAPP	X410_S15K6288A15	DISK	3QP1G3EW00009940U2M0
3	NETAPP	X410_S15K6288A15	DISK	3QP1EWMP00009940U1X5
4	NETAPP	X410_S15K6288A15	DISK	3QP1FZLE00009940G8YU
5	NETAPP	X410_S15K6288A15	DISK	3QP1FZLF00009940TZKZ
6	NETAPP	X410_S15K6288A15	DISK	3QP1CEB400009939MGXL
7	NETAPP	X410_S15K6288A15	DISK	3QP1G7A900009939FNTT
8	NETAPP	X410_S15K6288A15	DISK	3QP1FY0T00009940G8PA
9	NETAPP	X410_S15K6288A15	DISK	3QP1FXW600009940VERQ

- Verify that the command output shows that the bridge is connected to all of the appropriate disks and disk shelves in the stack.

If the output is...	Then...
Correct	Repeat Step <a href="#">Replace a SLE FC to SAS Bridge</a> for each remaining bridge.
Not correct	<ol style="list-style-type: none"><li>Check for loose SAS cables or correct the SAS cabling by repeating Step <a href="#">Replace a SLE FC to SAS Bridge</a>.</li><li>Repeat Step <a href="#">Replace a SLE FC to SAS Bridge</a>.</li></ol>

- If the bridge is in a fabric-attached MetroCluster configuration, reenable the FC switch port that you disabled at the beginning of this procedure.

This should be the port that connects to the bridge.

- From the system console of both controller modules, verify that all of the controller modules have access through the new bridge to the disk shelves (that is, that the system is cabled for Multipath HA):

**run local sysconfig**



It might take up to a minute for the system to complete discovery.

If the output does not indicate Multipath HA, you must correct the SAS and FC cabling because not all

of the disk drives are accessible through the new bridge.

The following output states that the system is cabled for Multipath HA:

```
NetApp Release 8.3.2: Tue Jan 26 01:41:49 PDT 2016
System ID: 1231231231 (node_A_1); partner ID: 4564564564 (node_A_2)
System Serial Number: 700000123123 (node_A_1); partner Serial Number:
700000456456 (node_A_2)
System Rev: B0
System Storage Configuration: Multi-Path HA
System ACP Connectivity: NA
```



When the system is not cabled as Multipath HA, restarting a bridge might cause loss of access to the disk drives and result in a multi-disk panic.

7. If running ONTAP 9.4 or earlier, verify that the bridge is configured for SNMP.

If you are using the bridge CLI, run the following command:

```
get snmp
```

8. From the ONTAP cluster prompt, add the bridge to health monitoring:

- h. Add the bridge, using the command for your version of ONTAP:

ONTAP version	Command
9.5 and later	<code>storage bridge add -address 0.0.0.0 -managed-by in-band -name bridge-name</code>
9.4 and earlier	<code>storage bridge add -address bridge-ip- address -name bridge-name</code>

- i. Verify that the bridge has been added and is properly configured:

```
storage bridge show
```

It might take as long as 15 minutes to reflect all data because of the polling interval. The ONTAP health monitor can contact and monitor the bridge if the value in the `Status` column is `ok`, and other information, such as the worldwide name (WWN), is displayed.

The following example shows that the FC-to-SAS bridges are configured:

```

controller_A_1::> storage bridge show

Bridge          Symbolic Name Is Monitored  Monitor Status  Vendor
Model          Bridge WWN
-----
-----          -----
ATTO_10.10.20.10 atto01      true        ok           Atto
FibreBridge 7500N     20000010867038c0
ATTO_10.10.20.11 atto02      true        ok           Atto
FibreBridge 7500N     20000010867033c0
ATTO_10.10.20.12 atto03      true        ok           Atto
FibreBridge 7500N     20000010867030c0
ATTO_10.10.20.13 atto04      true        ok           Atto
FibreBridge 7500N     2000001086703b80

4 entries were displayed

controller_A_1::>

```

1. Verify the operation of the MetroCluster configuration in ONTAP:

- j. Check whether the system is multipathed:

```
node run -node node-name sysconfig -a
```

- k. Check for any health alerts on both clusters:

```
system health alert show
```

- l. Confirm the MetroCluster configuration and that the operational mode is normal:

```
metrocluster show
```

- m. Perform a MetroCluster check:

```
metrocluster check run
```

- n. Display the results of the MetroCluster check:

```
metrocluster check show
```

- o. Check for any health alerts on the switches (if present):

```
storage switch show
```

- p. Run Config Advisor.

#### [NetApp Downloads: Config Advisor](#)

- q. After running Config Advisor, review the tool's output and follow the recommendations in the output to address any issues discovered.

#### Related information

##### [In-band management of the FC-to-SAS bridges](#)

## Hot-swapping a FibreBridge 7500N with a 7600N bridge

You can hot-swap a FibreBridge 7500N bridge with a 7600N bridge.

If you will be using in-band management of the bridge rather than IP management, the steps for configuring the Ethernet port and IP settings can be skipped, as noted in the relevant steps.



Starting with ONTAP 9.8, the `storage bridge` command is replaced with `system bridge`. The following steps show the `storage bridge` command, but if you are running ONTAP 9.8 or later, the `system bridge` command is preferred.

### Steps

1. If the bridge is in a fabric-attached MetroCluster configuration, disable all of the switch ports that connect to the bridge FC port or ports.
2. From the ONTAP cluster prompt, remove the bridge undergoing maintenance from health monitoring:
  - a. Remove the bridge:  
`storage bridge remove -name bridge-name`
  - b. View the list of monitored bridges and confirm that the removed bridge is not present:  
`storage bridge show`
3. Properly ground yourself.
4. Remove the power cables connected to the bridge to power down the bridge.
5. Disconnect the cables that are connected to the old bridge.

You should make note of the port to which each cable was connected.

6. Remove the old bridge from the rack.
7. Install the new bridge into the rack.
8. Reconnect the power cord and shielded Ethernet cable.



You must not reconnect the SAS or FC cables at this time.

9. Connect the bridge to a power source, and then turn it on.

The bridge Ready LED might take up to 30 seconds to illuminate, indicating that the bridge has completed its power-on self test sequence.

10. If configuring for in-band management, connect a cable from FibreBridge RS-232 serial port to the serial (COM) port on a personal computer.

The serial connection will be used for initial configuration, and then in-band management via ONTAP and the FC ports can be used to monitor and manage the bridge.

11. If configuring for in-band management, connect a cable from FibreBridge RS-232 serial port to the serial (COM) port on a personal computer.

The serial connection will be used for initial configuration, and then in-band management via ONTAP and the FC ports can be used to monitor and manage the bridge.

12. If configuring for IP management, configure the Ethernet management 1 port for each bridge by following

the procedure in section 2.0 of the *ATTO FibreBridge Installation and Operation Manual* for your bridge model.

In systems running ONTAP 9.5 or later, in-band management can be used to access the bridge via the FC ports rather than the Ethernet port. Starting with ONTAP 9.8, only in-band management is supported and SNMP management is deprecated.

When running QuickNAV to configure an Ethernet management port, only the Ethernet management port that is connected by the Ethernet cable is configured. For example, if you also wanted to configure the Ethernet management 2 port, you would need to connect the Ethernet cable to port 2 and run QuickNAV.

### 13. Configure the bridges.

Be sure to make note of the user name and password that you designate.

The *ATTO FibreBridge Installation and Operation Manual* for your bridge model has the most current information on available commands and how to use them.



Do not configure time synchronization on FibreBridge 7600N. The time synchronization for FibreBridge 7600N is set to the cluster time after the bridge is discovered by ONTAP. It is also synchronized periodically once a day. The time zone used is GMT and is not changeable.

- a. If configuring for IP management, configure the IP settings of the bridge.

To set the IP address without the QuickNAV utility, you need to have a serial connection to the FibreBridge.

If using the CLI, you must run the following commands:

```
set ipaddress mp1 ip-address  
set ipsubnetmask mp1 subnet-mask  
set ipgateway mp1 x.x.x.x  
set ipdhcp mp1 disabled  
set ethernetspeed mp1 1000
```

- b. Configure the bridge name.

The bridges should each have a unique name within the MetroCluster configuration.

Example bridge names for one stack group on each site:

- bridge\_A\_1a
- bridge\_A\_1b
- bridge\_B\_1a
- bridge\_B\_1b

If using the CLI, you must run the following command:

```
set bridgename" bridgename
```

- c. If running ONTAP 9.4 or earlier, enable SNMP on the bridge:

```
set SNMP enabled
```

In systems running ONTAP 9.5 or later, in-band management can be used to access the bridge via the FC ports rather than the Ethernet port. Starting with ONTAP 9.8, only in-band management is supported and SNMP management is deprecated.

14. Configure the bridge FC ports.

- a. Configure the data rate/speed of the bridge FC ports.

The supported FC data rate depends on your model bridge.

- The FibreBridge 7600 bridge supports up to 32, 16, or 8 Gbps.
- The FibreBridge 7500 bridge supports up to 16, 8, or 4 Gbps.
- The FibreBridge 6500 bridge supports up to 8, 4, or 2 Gbps.



The FCDataRate speed you select is limited to the maximum speed supported by both the bridge and the FC port of the controller module or switch to which the bridge port connects. Cabling distances must not exceed the limitations of the SFPs and other hardware.

If using the CLI, you must run the following command:

```
+ set FCDataRate port-number port-speed
```

- b. You must configure or disable the FC2 port.

- If you are using the second port, you must repeat the previous substeps for the FC2 port.
- If you are not using the second port, then you must disable the unused port: + **FCPortDisable port-number** The following example shows the disabling of FC port 2:

```
`FCPortDisable 2`
```

Fibre Channel Port 2 has been disabled.

- a. Disable the unused SAS ports:

```
SASPortDisable sas-port
```



SAS ports A through D are enabled by default. You must disable the SAS ports that are not being used.

If only SAS port A is used, then SAS ports B, C, and D must be disabled. The following example shows disabling of SAS port B. You must similarly disable SAS ports C and D:

```
`SASPortDisable b`  
  
SAS Port B has been disabled.
```

15. Secure access to the bridge and save the bridge's configuration.

- From the controller prompt check the status of the bridges: **storage bridge show**

The output shows which bridge is not secured.

- Check the status of the unsecured bridge's ports: **info**

The output shows the status of Ethernet ports MP1 and MP2.

- If Ethernet port MP1 is enabled, run the following command:

```
set EthernetPort mp1 disabled
```



If Ethernet port MP2 is also enabled, repeat the previous substep for port MP2.

- Save the bridge's configuration.

You must run the following commands:

```
SaveConfiguration
```

```
FirmwareRestart
```

You are prompted to restart the bridge.

16. Update the FibreBridge firmware on each bridge.

[Updating firmware on FibreBridge 7600N or 7500N bridges on configurations running ONTAP 9.4 and later](#)

17. Reconnect the SAS and FC cables to the same ports on the new bridge.



Wait at least 10 seconds before connecting the port. The SAS cable connectors are keyed; when oriented correctly into a SAS port, the connector clicks into place and the disk shelf SAS port LNK LED illuminates green. For disk shelves, you insert a SAS cable connector with the pull tab oriented down (on the underside of the connector). For controllers, the orientation of SAS ports can vary depending on the platform model; therefore, the correct orientation of the SAS cable connector varies.

18. Verify that each bridge can see all of the disk drives and disk shelves to which the bridge is connected:

```
sastargets
```

The output shows the devices (disks and disk shelves) to which the bridge is connected. The output lines are sequentially numbered so that you can quickly count the devices.

The following output shows that 10 disks are connected:

Tgt	VendorID	ProductID	Type	SerialNumber
0	NETAPP	X410_S15K6288A15	DISK	3QP1CLE300009940UHJV
1	NETAPP	X410_S15K6288A15	DISK	3QP1ELF600009940V1BV
2	NETAPP	X410_S15K6288A15	DISK	3QP1G3EW00009940U2M0
3	NETAPP	X410_S15K6288A15	DISK	3QP1EWMP00009940U1X5
4	NETAPP	X410_S15K6288A15	DISK	3QP1FZLE00009940G8YU
5	NETAPP	X410_S15K6288A15	DISK	3QP1FZLF00009940TZKZ
6	NETAPP	X410_S15K6288A15	DISK	3QP1CEB400009939MGXL
7	NETAPP	X410_S15K6288A15	DISK	3QP1G7A900009939FNTT
8	NETAPP	X410_S15K6288A15	DISK	3QP1FY0T00009940G8PA
9	NETAPP	X410_S15K6288A15	DISK	3QP1FXW600009940VERQ

19. Verify that the command output shows that the bridge is connected to all of the appropriate disks and disk shelves in the stack.

If the output is...	Then...
Correct	Repeat the previous step for each remaining bridge.
Not correct	<ul style="list-style-type: none"> <li>a. Check for loose SAS cables or correct the SAS cabling by repeating Step <a href="#">task_replace_a_sle_fc_to_sas_bridge.md#STE_P_CD84065D8F3B43F192919B0CD6FDC1A6</a>.</li> <li>b. Repeat the previous step.</li> </ul>

20. If the bridge is in a fabric-attached MetroCluster configuration, reenable the FC switch port that you disabled at the beginning of this procedure.

This should be the port that connects to the bridge.

21. From the system console of both controller modules, verify that all of the controller modules have access through the new bridge to the disk shelves (that is, that the system is cabled for Multipath HA):

**run local sysconfig**



It might take up to a minute for the system to complete discovery.

If the output does not indicate Multipath HA, you must correct the SAS and FC cabling because not all of the disk drives are accessible through the new bridge.

The following output states that the system is cabled for Multipath HA:

```
NetApp Release 8.3.2: Tue Jan 26 01:41:49 PDT 2016
System ID: 1231231231 (node_A_1); partner ID: 4564564564 (node_A_2)
System Serial Number: 700000123123 (node_A_1); partner Serial Number:
700000456456 (node_A_2)
System Rev: B0
System Storage Configuration: Multi-Path HA
System ACP Connectivity: NA
```



When the system is not cabled as Multipath HA, restarting a bridge might cause loss of access to the disk drives and result in a multi-disk panic.

22. If running ONTAP 9.4 or earlier, verify that the bridge is configured for SNMP.

If you are using the bridge CLI, run the following command:

```
get snmp
```

23. From the ONTAP cluster prompt, add the bridge to health monitoring:

- a. Add the bridge, using the command for your version of ONTAP:

ONTAP version	Command
9.5 and later	<code>storage bridge add -address 0.0.0.0 -managed-by in-band -name bridge-name</code>
9.4 and earlier	<code>storage bridge add -address bridge- ip-address -name bridge-name</code>

- b. Verify that the bridge has been added and is properly configured:

```
storage bridge show
```

It might take as long as 15 minutes to reflect all data because of the polling interval. The ONTAP health monitor can contact and monitor the bridge if the value in the `Status` column is `ok`, and other information, such as the worldwide name (WWN), is displayed.

The following example shows that the FC-to-SAS bridges are configured:

```

controller_A_1::> storage bridge show

Bridge          Symbolic Name Is Monitored  Monitor Status
Vendor Model      Bridge WWN
-----  -----
-----  -----
ATTO_10.10.20.10 atto01      true        ok          Atto
FibreBridge 7500N     20000010867038c0
ATTO_10.10.20.11 atto02      true        ok          Atto
FibreBridge 7500N     20000010867033c0
ATTO_10.10.20.12 atto03      true        ok          Atto
FibreBridge 7500N     20000010867030c0
ATTO_10.10.20.13 atto04      true        ok          Atto
FibreBridge 7500N     2000001086703b80

4 entries were displayed

controller_A_1::>

```

24. Verify the operation of the MetroCluster configuration in ONTAP:

- a. Check whether the system is multipathed:

```
node run -node node-name sysconfig -a
```

- b. Check for any health alerts on both clusters:

```
system health alert show
```

- c. Confirm the MetroCluster configuration and that the operational mode is normal:

```
metrocluster show
```

- d. Perform a MetroCluster check:

```
metrocluster check run
```

- e. Display the results of the MetroCluster check:

```
metrocluster check show
```

- f. Check for any health alerts on the switches (if present):

```
storage switch show
```

- g. Run Config Advisor.

[NetApp Downloads: Config Advisor](#)

- h. After running Config Advisor, review the tool's output and follow the recommendations in the output to address any issues discovered.

## Related information

[In-band management of the FC-to-SAS bridges](#)

## Hot-swapping a FibreBridge 6500N bridge with a FibreBridge 7600N or 7500N bridge

You can hot-swap a FibreBridge 6500N bridge with a FibreBridge 7600N or 7500N bridge to replace a failed bridge or upgrade your bridge in a fabric-attached or a bridge-attached MetroCluster configuration.

- This procedure is for hot-swapping a single FibreBridge 6500N bridge with single FibreBridge 7600N or 7500N bridge.
- When you hot-swap a FibreBridge 6500N bridge with a FibreBridge 7600N or 7500N bridge, you must use only one FC port and one SAS port on the FibreBridge 7600N or 7500N bridge.
- If you will be using in-band management of the bridge rather than IP management, the steps for configuring the Ethernet port and IP settings can be skipped, as noted in the relevant steps.



If you are hot-swapping both FibreBridge 6500N bridges in a pair, you must use the [Consolidate Multiple Storage Stacks](#) procedure for zoning instructions. By replacing both FibreBridge 6500N bridges on the bridge, you can take advantage of the additional ports on the FibreBridge 7600N or 7500N bridge.



Starting with ONTAP 9.8, the `storage bridge` command is replaced with `system bridge`. The following steps show the `storage bridge` command, but if you are running ONTAP 9.8 or later, the `system bridge` command is preferred.

### Steps

1. Do one of the following:
  - If the failed bridge is in a fabric-attached MetroCluster configuration, disable the switch port that connects to the bridge FC port.
  - If the failed bridge is in a stretch MetroCluster configuration, use either one of the available FC ports.
2. From the ONTAP cluster prompt, remove the bridge undergoing maintenance from health monitoring:
  - a. Remove the bridge:  
`storage bridge remove -name bridge-name`
  - b. View the list of monitored bridges and confirm that the removed bridge is not present:  
`storage bridge show`
3. Properly ground yourself.
4. Turn off the power switch of the bridge.
5. Disconnect the cables connected from the shelf to the FibreBridge 6500N bridge ports and power cables.

You should make note of the ports that each cable was connected to.

6. Remove the FibreBridge 6500N bridge that you need to replace from the rack.
7. Install the new FibreBridge 7600N or 7500N bridge into the rack.
8. Reconnect the power cord and, if necessary, the shielded Ethernet cable.



Do not reconnect the SAS or FC cables at this time.

9. If configuring for in-band management, connect a cable from FibreBridge RS-232 serial port to the serial (COM) port on a personal computer.

The serial connection will be used for initial configuration, and then in-band management via ONTAP and the FC ports can be used to monitor and manage the bridge.

10. If configuring for IP management, connect the Ethernet management 1 port on each bridge to your network by using an Ethernet cable.

In systems running ONTAP 9.5 or later, in-band management can be used to access the bridge via the FC ports rather than the Ethernet port. Starting with ONTAP 9.8, only in-band management is supported and SNMP management is deprecated.

The Ethernet management 1 port enables you to quickly download the bridge firmware (using ATTO ExpressNAV or FTP management interfaces) and to retrieve core files and extract logs.

11. If configuring for IP management, configure the Ethernet management 1 port for each bridge by following the procedure in section 2.0 of the *ATTO FibreBridge Installation and Operation Manual* for your bridge model.

In systems running ONTAP 9.5 or later, in-band management can be used to access the bridge via the FC ports rather than the Ethernet port. Starting with ONTAP 9.8, only in-band management is supported and SNMP management is deprecated.

When running QuickNAV to configure an Ethernet management port, only the Ethernet management port that is connected by the Ethernet cable is configured. For example, if you also wanted to configure the Ethernet management 2 port, you would need to connect the Ethernet cable to port 2 and run QuickNAV.

12. Configure the bridge.

If you retrieved the configuration information from the old bridge, use the information to configure the new bridge.

Be sure to make note of the user name and password that you designate.

The *ATTO FibreBridge Installation and Operation Manual* for your bridge model has the most current information on available commands and how to use them.



Do not configure time synchronization on ATTO FibreBridge 7600N or 7500N. The time synchronization for ATTO FibreBridge 7600N or 7500N is set to the cluster time after the bridge is discovered by ONTAP. It is also synchronized periodically once a day. The time zone used is GMT and is not changeable.

- a. If configuring for IP management, configure the IP settings of the bridge.

To set the IP address without the QuickNAV utility, you need to have a serial connection to the FibreBridge.

If using the CLI, you must run the following commands:

```
set ipaddress mp1 ip-address  
set ipsubnetmask mp1 subnet-mask  
set ipgateway mp1 x.x.x.x  
set ipdhcp mp1 disabled
```

```
set ethernetspeed mp1 1000
```

- b. Configure the bridge name.

The bridges should each have a unique name within the MetroCluster configuration.

Example bridge names for one stack group on each site:

- bridge\_A\_1a
- bridge\_A\_1b
- bridge\_B\_1a
- bridge\_B\_1b

If using the CLI, you must run the following command:

```
set bridgename bridgename
```

- c. If running ONTAP 9.4 or earlier, enable SNMP on the bridge:

```
set SNMP enabled
```

In systems running ONTAP 9.5 or later, in-band management can be used to access the bridge via the FC ports rather than the Ethernet port. Starting with ONTAP 9.8, only in-band management is supported and SNMP management is deprecated.

### 13. Configure the bridge FC ports.

- a. Configure the data rate/speed of the bridge FC ports.

The supported FC data rate depends on your model bridge.

- The FibreBridge 7600 bridge supports up to 32, 16, or 8 Gbps.
- The FibreBridge 7500 bridge supports up to 16, 8, or 4 Gbps.
- The FibreBridge 6500 bridge supports up to 8, 4, or 2 Gbps.



The FCDataRate speed you select is limited to the maximum speed supported by both the bridge and the switch to which the bridge port connects. Cabling distances must not exceed the limitations of the SFPs and other hardware.

If using the CLI, you must run the following command:

```
set FCDataRate port-number port-speed
```

- b. If you are configuring a FibreBridge 7500N or 6500N bridge, configure the connection mode that the port uses to ptp.



The FCConnMode setting is not required when configuring a FibreBridge 7600N bridge.

If using the CLI, you must run the following command:

```
set FCConnMode port-number ptp
```

c. If you are configuring a FibreBridge 7600N or 7500N bridge, you must configure or disable the FC2 port.

- If you are using the second port, you must repeat the previous substeps for the FC2 port.
- If you are not using the second port, then you must disable the port: + **FCPortDisable port-number**

d. If you are configuring a FibreBridge 7600N or 7500N bridge, disable the unused SAS ports:

**SASPortDisable sas-port**



SAS ports A through D are enabled by default. You must disable the SAS ports that are not being used. If only SAS port A is used, then SAS ports B, C, and D must be disabled.

14. Secure access to the bridge and save the bridge's configuration.

a. From the controller prompt check the status of the bridges:

**storage bridge show**

The output shows which bridge is not secured.

b. Check the status of the unsecured bridge's ports: **info**

The output shows the status of Ethernet ports MP1 and MP2.

c. If Ethernet port MP1 is enabled, run the following command:

**set EthernetPort mp1 disabled**



If Ethernet port MP2 is also enabled, repeat the previous substep for port MP2.

d. Save the bridge's configuration.

You must run the following commands:

**SaveConfiguration**

**FirmwareRestart**

You are prompted to restart the bridge.

15. Turn on Health Monitoring for the FibreBridge 7600N or 7500N bridge.

16. Update the FibreBridge firmware on each bridge.

If the new bridge is the same type as the partner bridge upgrade to the same firmware as the partner bridge. If the new bridge is a different type to the partner bridge, upgrade to the latest firmware supported by the bridge and version of ONTAP. See the section "Updating firmware on a FibreBridge bridge" in the *MetroCluster Maintenance Guide*.

17. Reconnect the SAS and FC cables to the SAS A and Fibre Channel 1 ports on the new bridge.

The SAS port must be cabled to the same shelf port that the FibreBridge 6500N bridge had been connected to.

The FC port must be cabled to the same switch or controller port that the FibreBridge 6500N bridge had

been connected to.



Do not force a connector into a port. The mini-SAS cables are keyed; when oriented correctly into a SAS port, the SAS cable clicks into place and the disk shelf SAS port LNK LED illuminates green. For disk shelves, you insert a SAS cable connector with the pull tab oriented down (on the underside of the connector). For controllers, the orientation of SAS ports can vary depending on the platform model; therefore, the correct orientation of the SAS cable connector varies.

18. Verify that the bridge can see all of the disk drives and disk shelves it is connected to.

If you are using the...	Then...
ATTO ExpressNAV GUI	<ol style="list-style-type: none"><li>a. In a supported web browser, enter the IP address of the bridge in the browser box. You are brought to the ATTO FibreBridge homepage, which has a link.</li><li>b. Click the link, and then enter your user name and the password that you designated when you configured the bridge. The ATTO FibreBridge status page appears with a menu to the left.</li><li>c. Click <b>Advanced</b> in the menu.</li><li>d. Enter the following command and then click <b>Submit</b> to see the list of disks visible to the bridge: <b>sastargets</b></li></ol>
Serial port connection	Display the list of disks visible to the bridge: <b>sastargets</b>

The output shows the devices (disks and disk shelves) that the bridge is connected to. Output lines are sequentially numbered so that you can quickly count the devices. For example, the following output shows that 10 disks are connected:

Tgt	VendorID	ProductID	Type	SerialNumber
0	NETAPP	X410_S15K6288A15	DISK	3QP1CLE300009940UHJV
1	NETAPP	X410_S15K6288A15	DISK	3QP1ELF600009940V1BV
2	NETAPP	X410_S15K6288A15	DISK	3QP1G3EW00009940U2M0
3	NETAPP	X410_S15K6288A15	DISK	3QP1EWMP00009940U1X5
4	NETAPP	X410_S15K6288A15	DISK	3QP1FZLE00009940G8YU
5	NETAPP	X410_S15K6288A15	DISK	3QP1FZLF00009940TZKZ
6	NETAPP	X410_S15K6288A15	DISK	3QP1CEB400009939MGXL
7	NETAPP	X410_S15K6288A15	DISK	3QP1G7A900009939FNTT
8	NETAPP	X410_S15K6288A15	DISK	3QP1FY0T00009940G8PA
9	NETAPP	X410_S15K6288A15	DISK	3QP1FXW600009940VERQ



If the text `response truncated` appears at the beginning of the output, you can use Telnet to access the bridge and enter the same command to see all of the output.

- Verify that the command output shows that the bridge is connected to all of the necessary disks and disk shelves in the stack.

If the output is...	Then...
Correct	Repeat Step <a href="#">Replace a SLE FC to SAS Bridge</a> for each remaining bridge.]
Not correct	<ul style="list-style-type: none"> <li>a. Check for loose SAS cables or correct the SAS cabling by repeating Step <a href="#">task_replace_a_sle_fc_to_sas_bridge.md#STE_P_CD84065D8F3B43F192919B0CD6FDC1A6</a>.</li> <li>b. Repeat Step <a href="#">Replace a SLE FC to SAS Bridge</a> for each remaining bridge].</li> </ul>

- Reenable the FC switch port that connects to the bridge.
- Verify that all controllers have access through the new bridge to the disk shelves (that the system is cabled for Multipath HA), at the system console of both controllers: `run local sysconfig`



It might take up to a minute for the system to complete discovery.

For example, the following output shows that the system is cabled for Multipath HA:

```

NetApp Release 8.3.2: Tue Jan 26 01:23:24 PST 2016
System ID: 1231231231 (node_A_1); partner ID: 4564564564 (node_A_2)
System Serial Number: 700000123123 (node_A_1); partner Serial Number:
700000456456 (node_A_2)
System Rev: B0
System Storage Configuration: Multi-Path HA
System ACP Connectivity: NA

```

If the command output indicates that the configuration is mixed-path or single-path HA, you must correct the SAS and FC cabling because not all disk drives are accessible through the new bridge.



When the system is not cabled as Multipath HA, restarting a bridge might cause loss of access to the disk drives and result in a multi-disk panic.

22. From the ONTAP cluster prompt, add the bridge to health monitoring:

- Add the bridge, using the command for your version of ONTAP:

ONTAP version	Command
9.5 and later	<b>storage bridge add -address 0.0.0.0 -managed-by in-band -name bridge-name</b>
9.4 and earlier	<b>storage bridge add -address bridge-ip-address -name bridge-name</b>

- Verify that the bridge has been added and is properly configured:

**storage bridge show**

It might take as long as 15 minutes to reflect all data because of the polling interval. The ONTAP health monitor can contact and monitor the bridge if the value in the **Status** column is **ok**, and other information, such as the worldwide name (WWN), is displayed.

The following example shows that the FC-to-SAS bridges are configured:

```

controller_A_1::> storage bridge show

Bridge          Symbolic Name Is Monitored  Monitor Status
Vendor Model      Bridge WWN
-----  -----  -----
ATTO_10.10.20.10 atto01      true        ok          Atto
FibreBridge 7500N    20000010867038c0
ATTO_10.10.20.11 atto02      true        ok          Atto
FibreBridge 7500N    20000010867033c0
ATTO_10.10.20.12 atto03      true        ok          Atto
FibreBridge 7500N    20000010867030c0
ATTO_10.10.20.13 atto04      true        ok          Atto
FibreBridge 7500N    2000001086703b80

4 entries were displayed

controller_A_1::>

```

23. Verify the operation of the MetroCluster configuration in ONTAP:

- a. Check whether the system is multipathed:

```
node run -node node-name sysconfig -a
```

- b. Check for any health alerts on both clusters:

```
system health alert show
```

- c. Confirm the MetroCluster configuration and that the operational mode is normal:

```
metrocluster show
```

- d. Perform a MetroCluster check:

```
metrocluster check run
```

- e. Display the results of the MetroCluster check:

```
metrocluster check show
```

- f. Check for any health alerts on the switches (if present):

```
storage switch show
```

- g. Run Config Advisor.

[NetApp Downloads: Config Advisor](#)

- h. After running Config Advisor, review the tool's output and follow the recommendations in the output to address any issues discovered.

24. Return the failed part to NetApp as described in the RMA instructions shipped with the kit.

Contact technical support at [NetApp Support](#), 888-463-8277 (North America), 00-800-44-638277 (Europe), or +800-800-80-800 (Asia/Pacific) if you need the RMA number or additional help with the replacement procedure.

## Related information

[In-band management of the FC-to-SAS bridges](#)

## Replacing a pair of FibreBridge 6500N bridges with 7600N or 7500N bridges

To take advantage of the additional FC2 port on the FibreBridge 7600N or 7500N bridges and reduce rack utilization, you can nondisruptively replace 6500N bridges and consolidate up to four storage stacks behind a single pair of FibreBridge 7600N or 7500N bridges.

You need the admin password and access to an FTP or SCP server.

You should use this procedure if:

- You are replacing a pair of FibreBridge 6500N bridges with FibreBridge 7600N or 7500N bridges.

After the replacement, both bridges in the pair must be the same model.

- You previously replaced a single FibreBridge 6500N bridge with a 7600N or 7500N bridge and are now replacing the second bridge in the pair.
- You have a pair of FibreBridge 7600N or 7500N bridges with available SAS ports and you are consolidating SAS storage stacks that are currently connected using FibreBridge 6500N bridges.

This procedure is nondisruptive and takes approximately two hours to complete.

## Related information

[Replacing a single FC-to-SAS bridge](#)

## Verifying storage connectivity

Before replacing bridges, you should verify bridge and storage connectivity. Familiarizing yourself with the command output enables you to subsequently confirm connectivity after making configuration changes.

You can issue these commands from the admin prompt of any of the controller modules in the MetroCluster configuration at the site undergoing maintenance.

1. Confirm connectivity to the disks by entering the following command on any one of the MetroCluster nodes:

```
run local sysconfig -v
```

The output shows the disks attached to the initiator ports on the controller, and identifies the shelves connected to the FC-to-SAS bridges:

```

node_A_1> run local sysconfig -v
NetApp Release 9.3.2X18: Sun Dec 13 01:23:24 PST 2017
System ID: 4068741258 (node_A_1); partner ID: 4068741260 (node_B_1)
System Serial Number: 940001025471 (node_A_1)
System Rev: 70
System Storage Configuration: Multi-Path HA**<== Configuration should
be multi-path HA**
.

.

.

slot 0: FC Host Adapter 0g (QLogic 8324 rev. 2, N-port, <UP>) **<==
Initiator port**
    Firmware rev:      7.5.0
    Flash rev:        0.0.0
    Host Port Id:     0x60130
    FC Node Name:    5:00a:098201:bae312
    FC Port Name:    5:00a:098201:bae312
    SFP Vendor:       UTILITIES CORP.
    SFP Part Number:  FTLF8529P3BCVAN1
    SFP Serial Number: URQ0Q9R
    SFP Capabilities: 4, 8 or 16 Gbit
    Link Data Rate:   16 Gbit
    Switch Port:      brcd6505-fcs40:1
**<List of disks visible to port\>**
    ID      Vendor    Model          FW      Size
    brcd6505-fcs29:12.126L1527 : NETAPP  X302_HJUPI01TSSM NA04
847.5GB (1953525168 512B/sect)
    brcd6505-fcs29:12.126L1528 : NETAPP  X302_HJUPI01TSSA NA02
847.5GB (1953525168 512B/sect)
.

.

.

**<List of FC-to-SAS bridges visible to port\>**
FC-to-SAS Bridge:
    brcd6505-fcs40:12.126L0 : ATTO      FibreBridge6500N 1.61
FB6500N102980
    brcd6505-fcs42:13.126L0 : ATTO      FibreBridge6500N 1.61
FB6500N102980
    brcd6505-fcs42:6.126L0 : ATTO      FibreBridge6500N 1.61
FB6500N101167
    brcd6505-fcs42:7.126L0 : ATTO      FibreBridge6500N 1.61
FB6500N102974
.

.

.

**<List of storage shelves visible to port\>**

```

```
brcd6505-fcs40:12.shelf6: DS4243 Firmware rev. IOM3 A: 0200  
IOM3 B: 0200  
brcd6505-fcs40:12.shelf8: DS4243 Firmware rev. IOM3 A: 0200  
IOM3 B: 0200  
. . .
```

### **Hot-swapping FibreBridge 6500N bridges to create a pair of FibreBridge 7600N or 7500N bridges**


To hot-swap one or two FibreBridge 6500N bridges to create a configuration with a pair of FibreBridge 7600N or 7500N bridges, you must replace the bridges one at a time and follow the correct cabling procedure. The new cabling is different from the original cabling.

You can also use this procedure if the following conditions are true:

- You are replacing a pair of FibreBridge 6500N bridges that are both connected to the same stack of SAS storage.
- You previously replaced one FibreBridge 6500N bridge in the pair, and your storage stack is configured with one FibreBridge 6500N bridge and one FibreBridge 7600N or 7500N bridge.

In this case, you should start with the step below to hot-swap the “bottom” FibreBridge 6500N bridge with a FibreBridge 7600N or 7500N bridge.

The following diagram shows an example of the initial configuration, in which four FibreBridge 6500N bridges are connecting two SAS storage stacks:

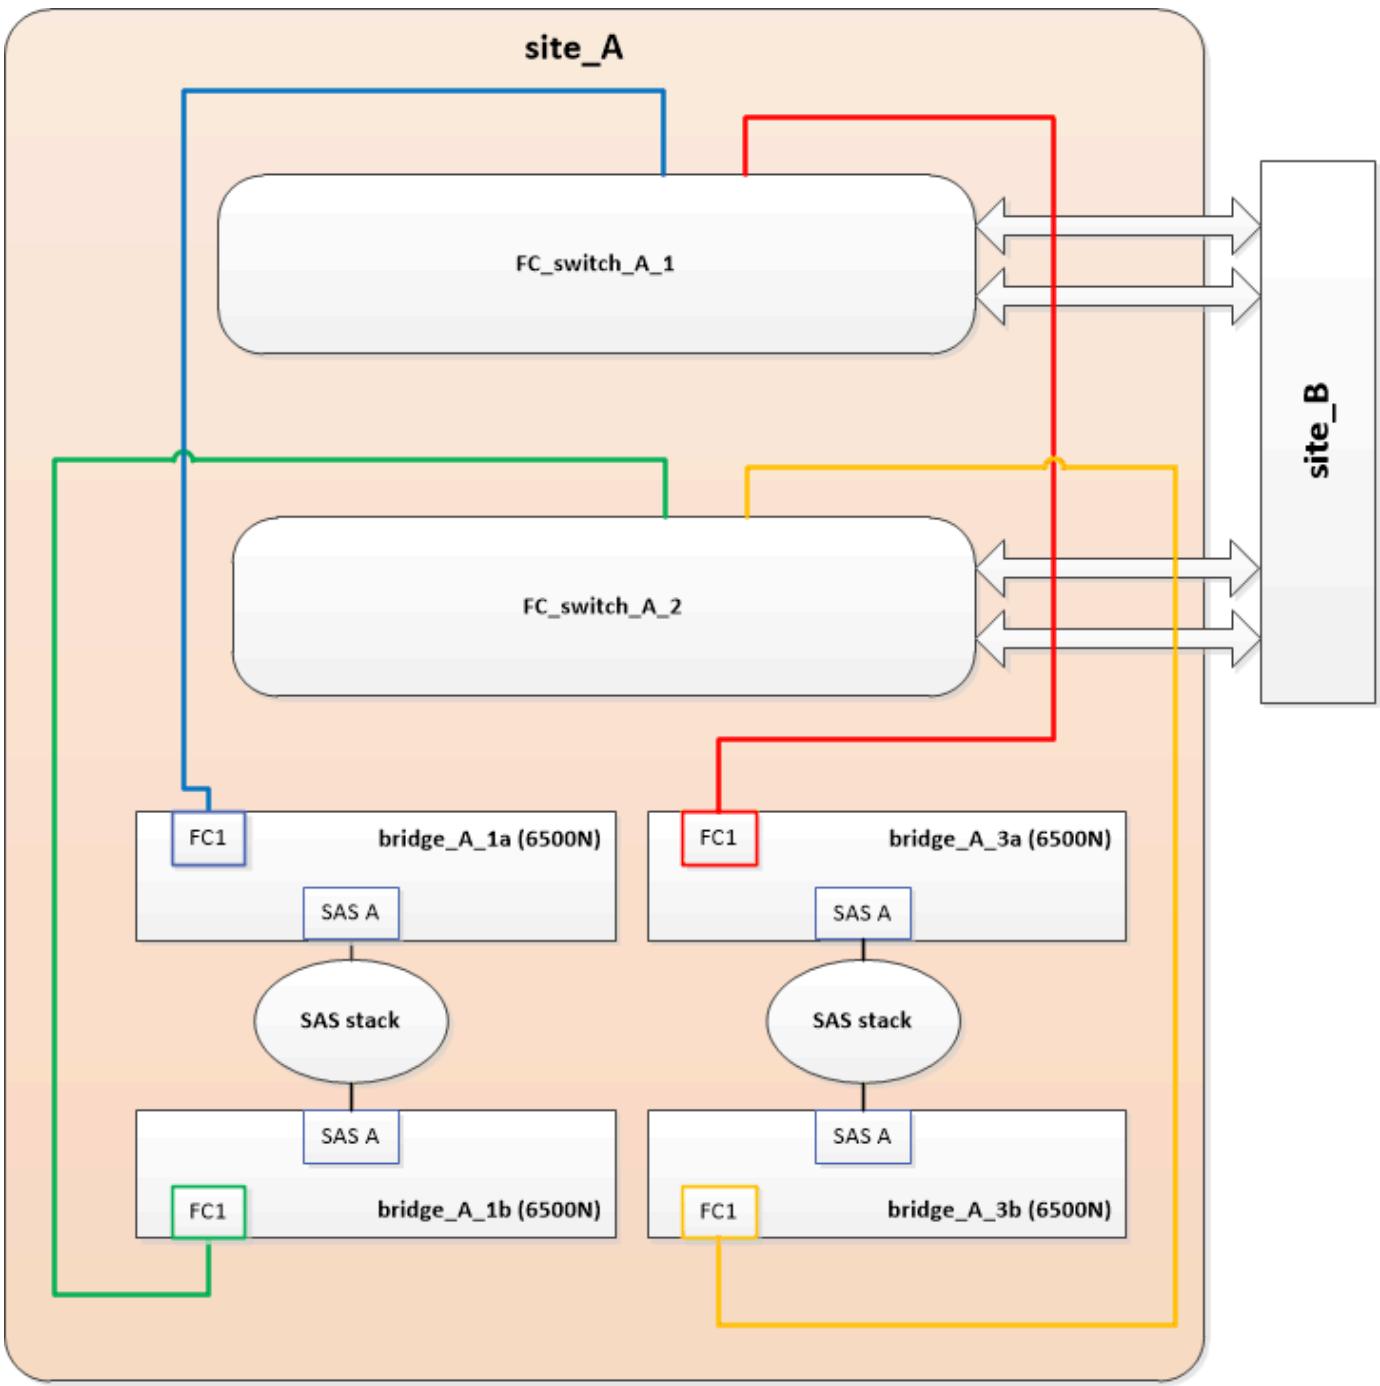


## Steps

1. Using the following guidelines, hot-swap the "top" FibreBridge 6500N bridge with a FibreBridge 7600N or 7500N bridge using the procedure in [Hot-swapping a FibreBridge 6500N bridge with a FibreBridge 7600N or 7500N bridge](#):

- Connect the FibreBridge 7600N or 7500N bridge FC1 port to the switch or controller.

This is the same connection that was made to the FibreBridge 6500N bridge FC1 port.

- Do not connect the FibreBridge 7600N or 7500N bridge FC2 port at this time. The following diagram shows that bridge\_A\_1a has been replaced and is now a FibreBridge 7600N or 7500N bridge:

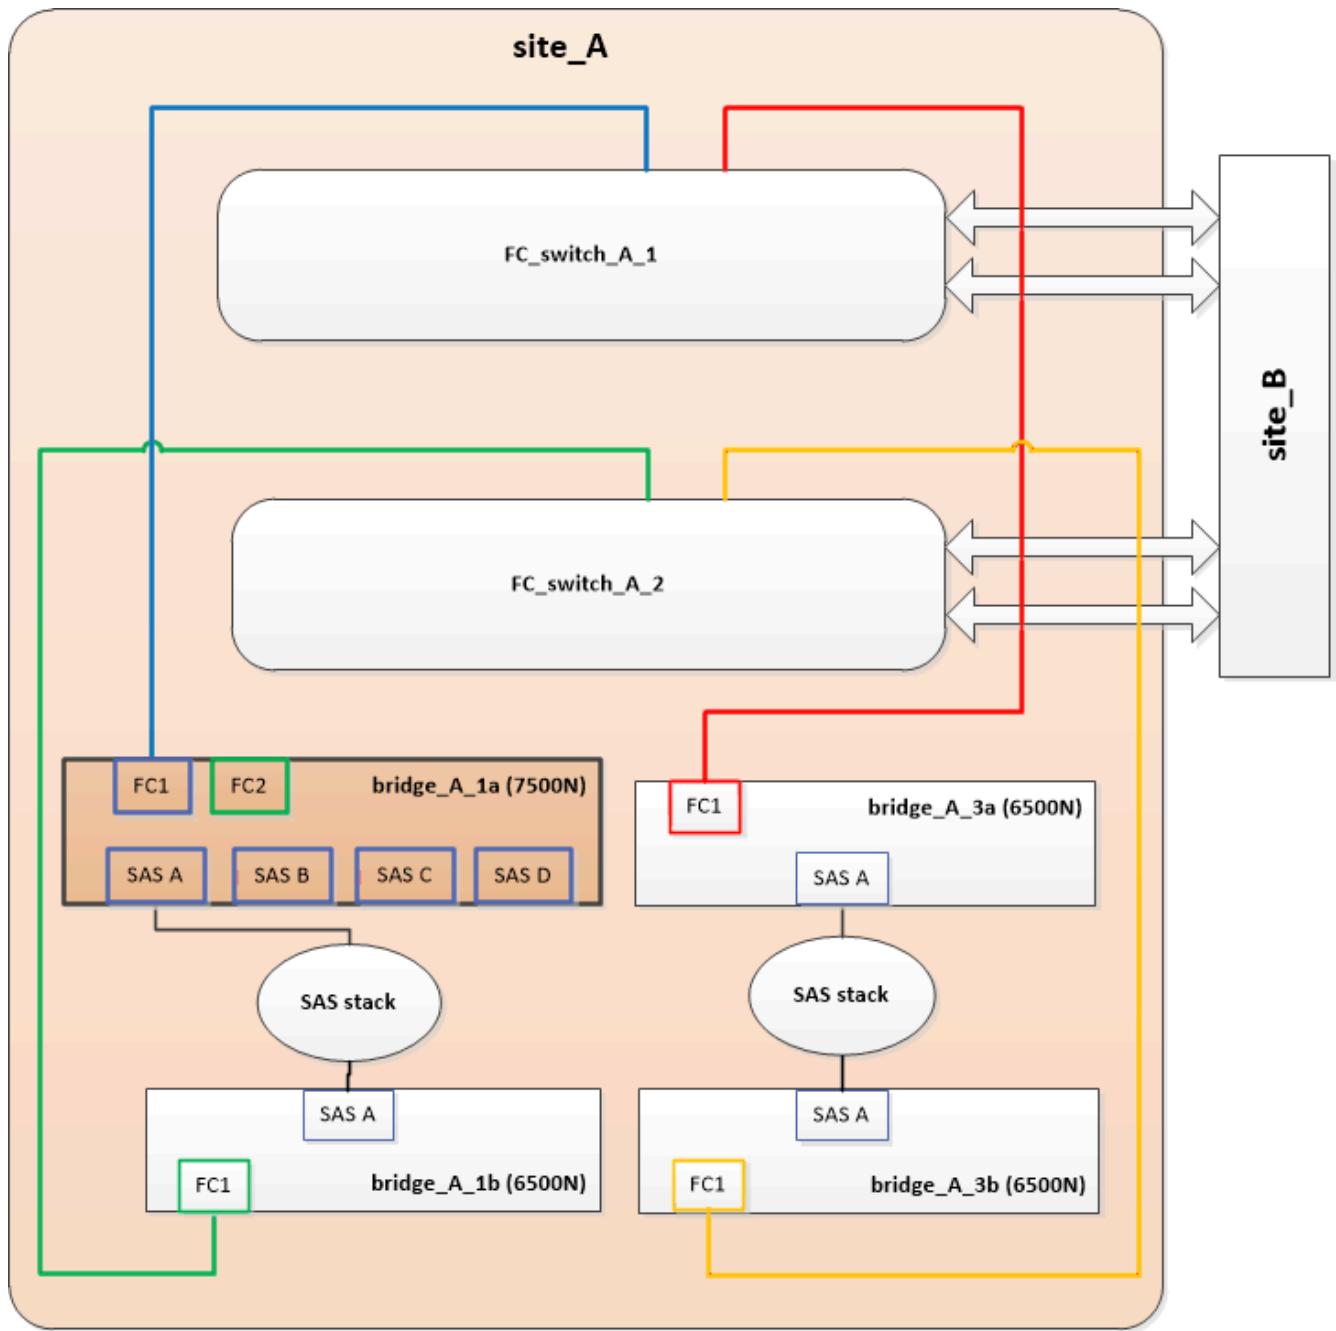

2. Confirm connectivity to the bridge-connected disks and that the new FibreBridge 7500N is visible in the configuration:

```
run local sysconfig -v
```

```
node_A_1> run local sysconfig -v
NetApp Release 9.3.2X18: Sun Dec 13 01:23:24 PST 2015
System ID: 0536872165 (node_A_1); partner ID: 0536872141 (node_B_1)
System Serial Number: 940001025465 (node_A_1)
System Rev: 70
System Storage Configuration: Multi-Path HA**<==== Configuration should
be multi-path HA**
```

```

slot 0: FC Host Adapter 0g (QLogic 8324 rev. 2, N-port, <UP>) **<===
Initiator port**
    Firmware rev:      7.5.0
    Flash rev:        0.0.0
    Host Port Id:     0x60100
    FC Node Name:    5:00a:098201:bae312
    FC Port Name:    5:00a:098201:bae312
    SFP Vendor:       FINISAR CORP.
    SFP Part Number:  FTLF8529P3BCVAN1
    SFP Serial Number: URQ0R1R
    SFP Capabilities: 4, 8 or 16 Gbit
    Link Data Rate:   16 Gbit
    Switch Port:      brcd6505-fcs40:1

**<List of disks visible to port\>**
    ID      Vendor    Model          FW      Size
    brcd6505-fcs40:12.126L1527      : NETAPP  X302_HJUPI01TSSM NA04
847.5GB (1953525168 512B/sect)
    brcd6505-fcs40:12.126L1528      : NETAPP  X302_HJUPI01TSSA NA02
847.5GB (1953525168 512B/sect)

    .
    .
    .

**<List of FC-to-SAS bridges visible to port\>**
FC-to-SAS Bridge:
    brcd6505-fcs40:12.126L0      : ATTO     FibreBridge7500N A30H
FB7500N100104**<==**

    brcd6505-fcs42:13.126L0      : ATTO     FibreBridge6500N 1.61
FB6500N102980

    brcd6505-fcs42:6.126L0      : ATTO     FibreBridge6500N 1.61
FB6500N101167

    brcd6505-fcs42:7.126L0      : ATTO     FibreBridge6500N 1.61
FB6500N102974

    .
    .
    .

**<List of storage shelves visible to port\>**
    brcd6505-fcs40:12.shelf6: DS4243  Firmware rev. IOM3 A: 0200
IOM3 B: 0200

    brcd6505-fcs40:12.shelf8: DS4243  Firmware rev. IOM3 A: 0200
IOM3 B: 0200

    .
    .
    .


```

3. Using the following guidelines, hot-swap the "bottom" FibreBridge 6500N bridge with a FibreBridge 7600N or 7500N bridge using the procedure in [Hot-swapping a FibreBridge 6500N bridge with a FibreBridge 7600N or 7500N bridge](#):

- Connect the FibreBridge 7600N or 7500N bridge FC2 port to the switch or controller.

This is the same connection that was made to the FibreBridge 6500N bridge FC1 port.

- Do not connect the FibreBridge 7600N or 7500N bridge FC1 port at this time.

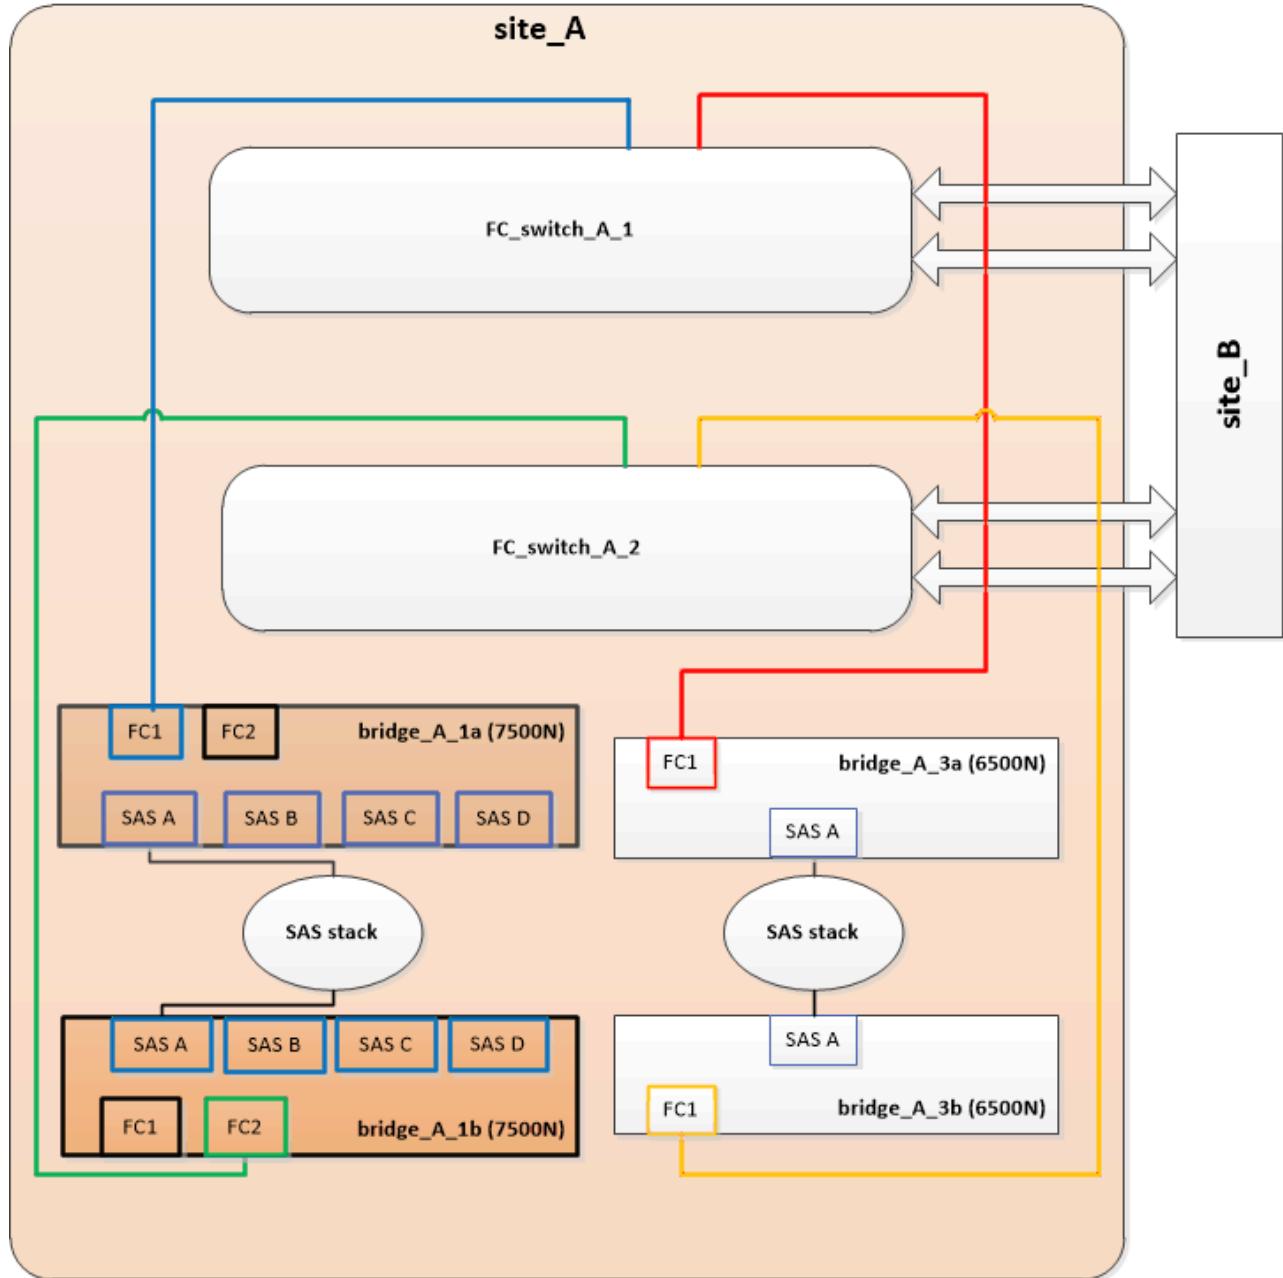

4. Confirm connectivity to the bridge-connected disks:

```
run local sysconfig -v
```

The output shows the disks attached to the initiator ports on the controller, and identifies the shelves connected to the FC-to-SAS bridges:

```

node_A_1> run local sysconfig -v
NetApp Release 9.3.2X18: Sun Dec 13 01:23:24 PST 2015
System ID: 0536872165 (node_A_1); partner ID: 0536872141 (node_B_1)
System Serial Number: 940001025465 (node_A_1)
System Rev: 70
System Storage Configuration: Multi-Path HA**<== Configuration should
be multi-path HA**

.
.
.

slot 0: FC Host Adapter 0g (QLogic 8324 rev. 2, N-port, <UP>) **<==
Initiator port**
    Firmware rev:      7.5.0
    Flash rev:        0.0.0
    Host Port Id:     0x60100
    FC Node Name:    5:00a:098201:bae312
    FC Port Name:    5:00a:098201:bae312
    SFP Vendor:       FINISAR CORP.
    SFP Part Number:  FTLF8529P3BCVAN1
    SFP Serial Number: URQ0R1R
    SFP Capabilities: 4, 8 or 16 Gbit
    Link Data Rate:   16 Gbit
    Switch Port:      brcd6505-fcs40:1
**<List of disks visible to port\>**
    ID      Vendor    Model          FW      Size
    brcd6505-fcs40:12.126L1527 : NETAPP  X302_HJUPI01TSSM NA04
847.5GB (1953525168 512B/sect)
    brcd6505-fcs40:12.126L1528 : NETAPP  X302_HJUPI01TSSA NA02
847.5GB (1953525168 512B/sect)
.
.
.

**<List of FC-to-SAS bridges visible to port\>**
FC-to-SAS Bridge:
    brcd6505-fcs40:12.126L0 : ATTO      FibreBridge7500N A30H
FB7500N100104
    brcd6505-fcs42:13.126L0 : ATTO      FibreBridge7500N A30H
FB7500N100104
.
.
.

**<List of storage shelves visible to port\>**
    brcd6505-fcs40:12.shelf6: DS4243  Firmware rev. IOM3 A: 0200
IOM3 B: 0200
    brcd6505-fcs40:12.shelf8: DS4243  Firmware rev. IOM3 A: 0200
IOM3 B: 0200

```

.

.

.

## Cabling the bridge SAS ports when consolidating storage behind FibreBridge 7600N or 7500N bridges

When consolidating multiple SAS storage stacks behind a single pair of FibreBridge 7600N or 7500N bridges with available SAS ports, you must move the top and bottom SAS cables to the new bridges.

The FibreBridge 6500N bridge SAS ports use QSFP connectors. The FibreBridge 7600N or 7500N bridge SAS ports use mini-SAS connectors.



If you insert a SAS cable into the wrong port, when you remove the cable from a SAS port, you must wait at least 120 seconds before plugging the cable into a different SAS port. If you fail to do so, the system will not recognize that the cable has been moved to another port.




Wait at least 10 seconds before connecting the port. The SAS cable connectors are keyed; when oriented correctly into a SAS port, the connector clicks into place and the disk shelf SAS port LNK LED illuminates green. For disk shelves, you insert a SAS cable connector with the pull tab oriented down (on the underside of the connector).

### Steps


1. Remove the cable that connects the SAS A port of the top FibreBridge 6500N bridge to the top SAS shelf, being sure to note the SAS port on the storage shelf to which it connects.

The cable is shown in blue in the following example:

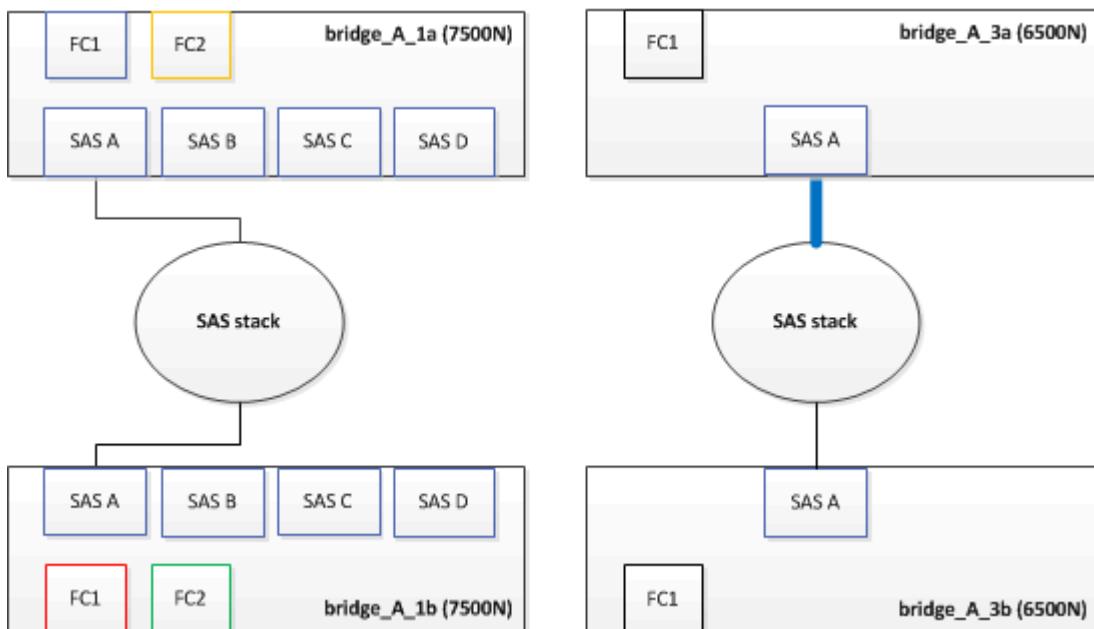


2. Using a cable with a mini-SAS connector, connect the same SAS port on the storage shelf to the SAS B port of the top FibreBridge 7600N or 7500N bridge.

The cable is shown in blue in the following example:

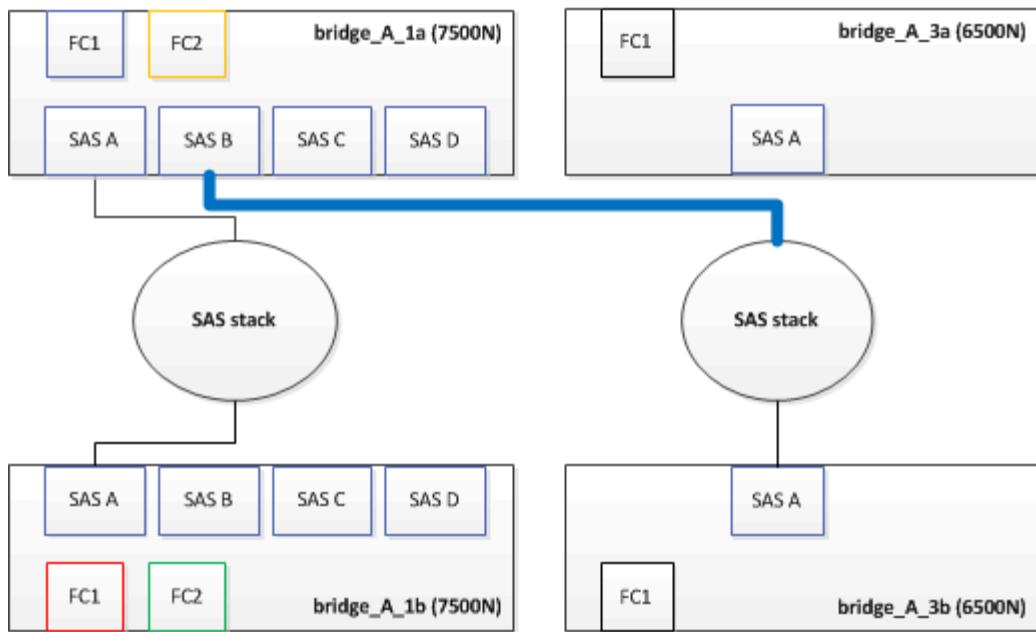


3. Remove the cable that connects the SAS A port of the bottom FibreBridge 6500N bridge to the top SAS shelf, being sure to note the SAS port on the storage shelf to which it connects.

This cable is shown in green in the following example:

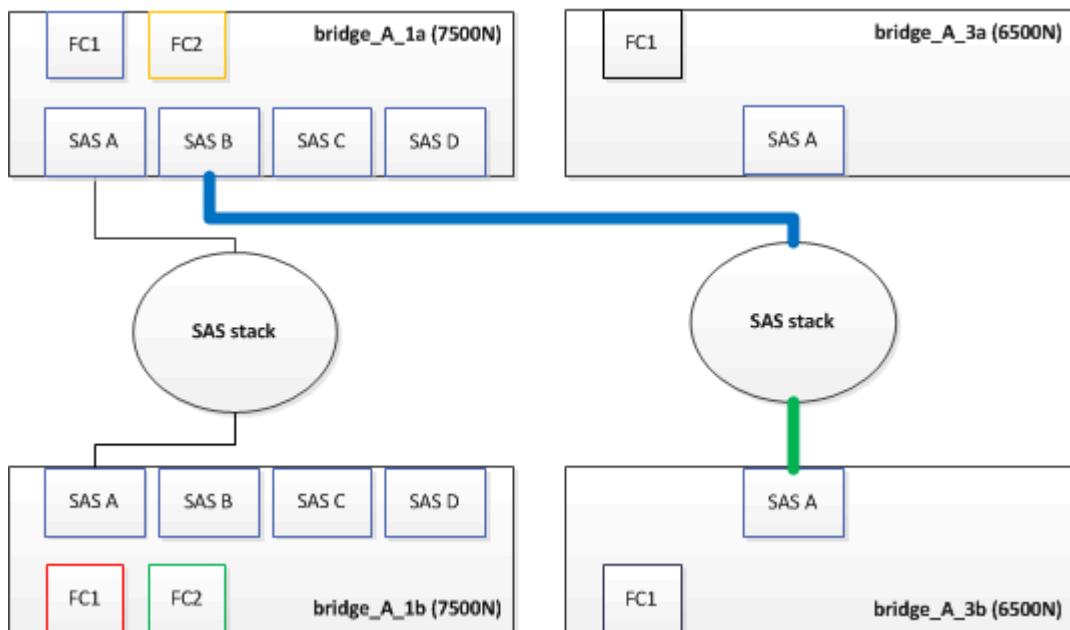

4. Using a cable with a mini-SAS connector, connect the same SAS port on the storage shelf to the SAS B port of the bottom FibreBridge 7600N or 7500N bridge.

This cable is shown in green in the following example:

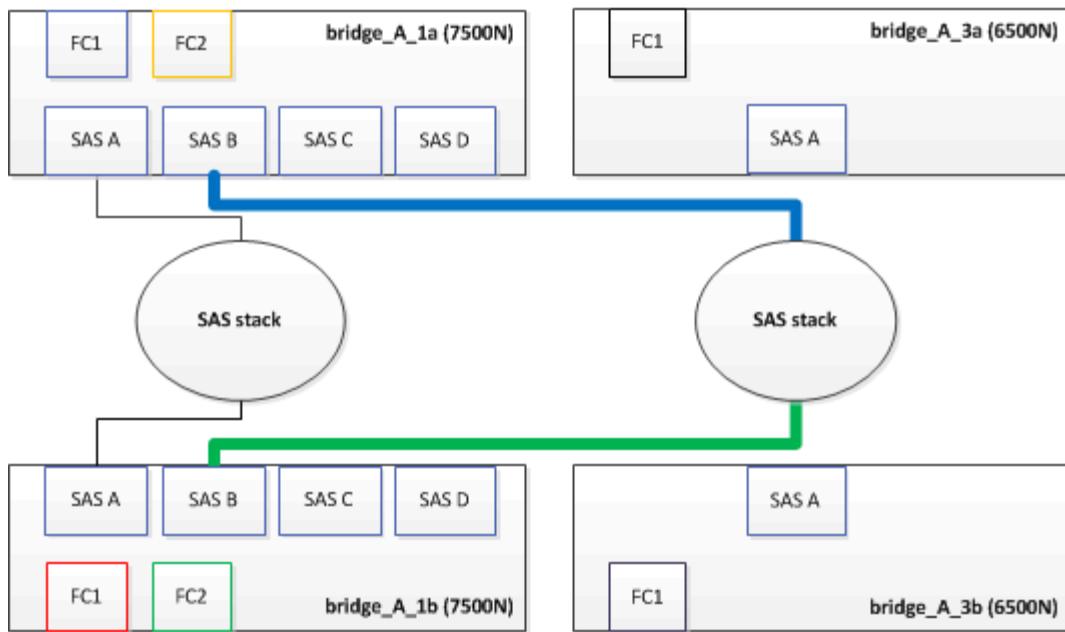

5. Confirm connectivity to the bridge-connected disks:

```
run local sysconfig -v
```

The output shows the disks attached to the initiator ports on the controller, and identifies the shelves connected to the FC-to-SAS bridges:

```
node_A_1> run local sysconfig -v
NetApp Release 9.3.2X18: Sun Dec 13 01:23:24 PST 2015
System ID: 0536872165 (node_A_1); partner ID: 0536872141 (node_B_1)
System Serial Number: 940001025465 (node_A_1)
System Rev: 70
System Storage Configuration: Multi-Path HA**<==== Configuration should
be multi-path HA**
.
.
.
slot 0: FC Host Adapter 0g (QLogic 8324 rev. 2, N-port, <UP>) **<====
Initiator port**
    Firmware rev:      7.5.0
    Flash rev:        0.0.0
    Host Port Id:     0x60100
    FC Node Name:    5:00a:098201:bae312
    FC Port Name:    5:00a:098201:bae312
    SFP Vendor:       FINISAR CORP.
    SFP Part Number:  FTLF8529P3BCVAN1
    SFP Serial Number: URQ0R1R
    SFP Capabilities: 4, 8 or 16 Gbit
    Link Data Rate:   16 Gbit
    Switch Port:      brcd6505-fcs40:1
```


```

**<List of disks visible to port>**
      ID      Vendor    Model          FW      Size
      brcd6505-fcs40:12.126L1527 : NETAPP  X302_HJUPI01TSSM NA04
      847.5GB (1953525168 512B/sect)
      brcd6505-fcs40:12.126L1528 : NETAPP  X302_HJUPI01TSSA NA02
      847.5GB (1953525168 512B/sect)
      .
      .
      .
**<List of FC-to-SAS bridges visible to port>**
FC-to-SAS Bridge:
      brcd6505-fcs40:12.126L0   : ATTO     FibreBridge7500N A30H
      FB7500N100104
      brcd6505-fcs42:13.126L0   : ATTO     FibreBridge7500N A30H
      FB7500N100104
      .
      .
      .
**<List of storage shelves visible to port>**
      brcd6505-fcs40:12.shelf6: DS4243 Firmware rev. IOM3 A: 0200
      IOM3 B: 0200
      brcd6505-fcs40:12.shelf8: DS4243 Firmware rev. IOM3 A: 0200
      IOM3 B: 0200
      .
      .
      .

```

6. Remove the old FibreBridge 6500N bridges that are no longer connected to the SAS storage.
7. Wait two minutes for the system to recognize the changes.
8. If the system was miscabled, remove the cable, correct the cabling, and then reconnect the correct cable.
9. If necessary, repeat the preceding steps to move up to two additional SAS stacks behind the new FibreBridge 7600N or 7500N bridges, using SAS ports C and then D.

Each SAS stack must be connected to the same SAS port on the top and bottom bridge. For example, if the top connection of the stack is connected to the top bridge SAS B port, the bottom connection must be connected to the SAS B port of the bottom bridge.

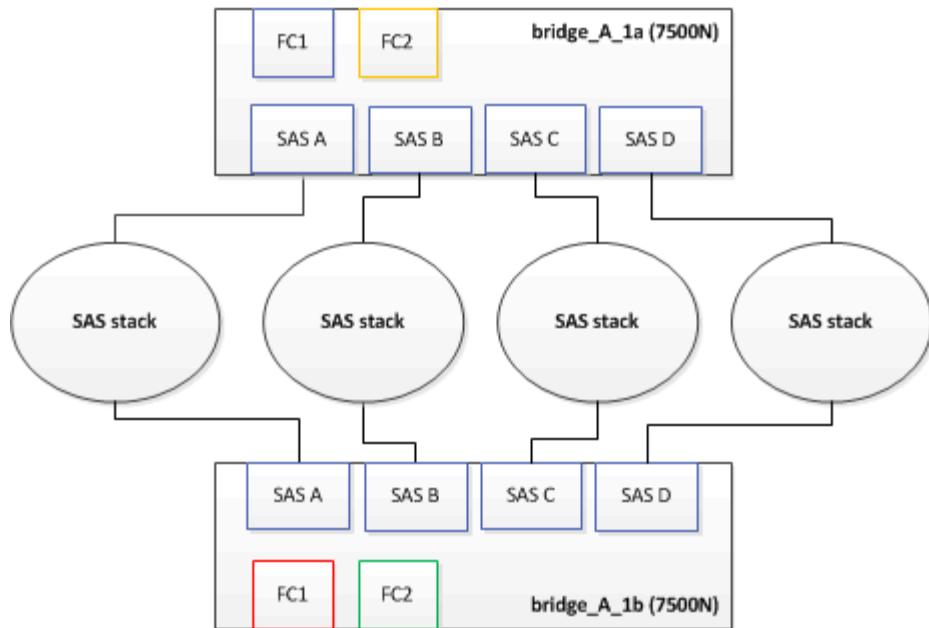

#### Updating zoning when adding FibreBridge 7600N or 7500N bridges to a configuration

The zoning must be changed when you are replacing FibreBridge 6500N bridges with FibreBridge 7600N or 7500N bridges and using both FC ports on the FibreBridge 7600N or 7500N bridges. The required changes depend on whether you are running a version of ONTAP earlier than 9.1 or 9.1 and later.


##### Updating zoning when adding FibreBridge 7500N bridges to a configuration (prior to ONTAP 9.1)

The zoning must be changed when you are replacing FibreBridge 6500N bridges with FibreBridge 7500N bridges and using both FC ports on the FibreBridge 7500N bridges. Each zone can have no more than four initiator ports. The zoning you use depends on whether you are running ONTAP prior to version 9.1 or 9.1 and later

The specific zoning in this task is for versions of ONTAP prior to version 9.1.

The zoning changes are required to avoid issues with ONTAP, which requires that no more than four FC initiator ports can have a path to a disk. After recabling to consolidate the shelves, the existing zoning would result in each disk being reachable by eight FC ports. You must change the zoning to reduce the initiator ports in each zone to four.

The following diagram shows the zoning on site\_A before the changes:

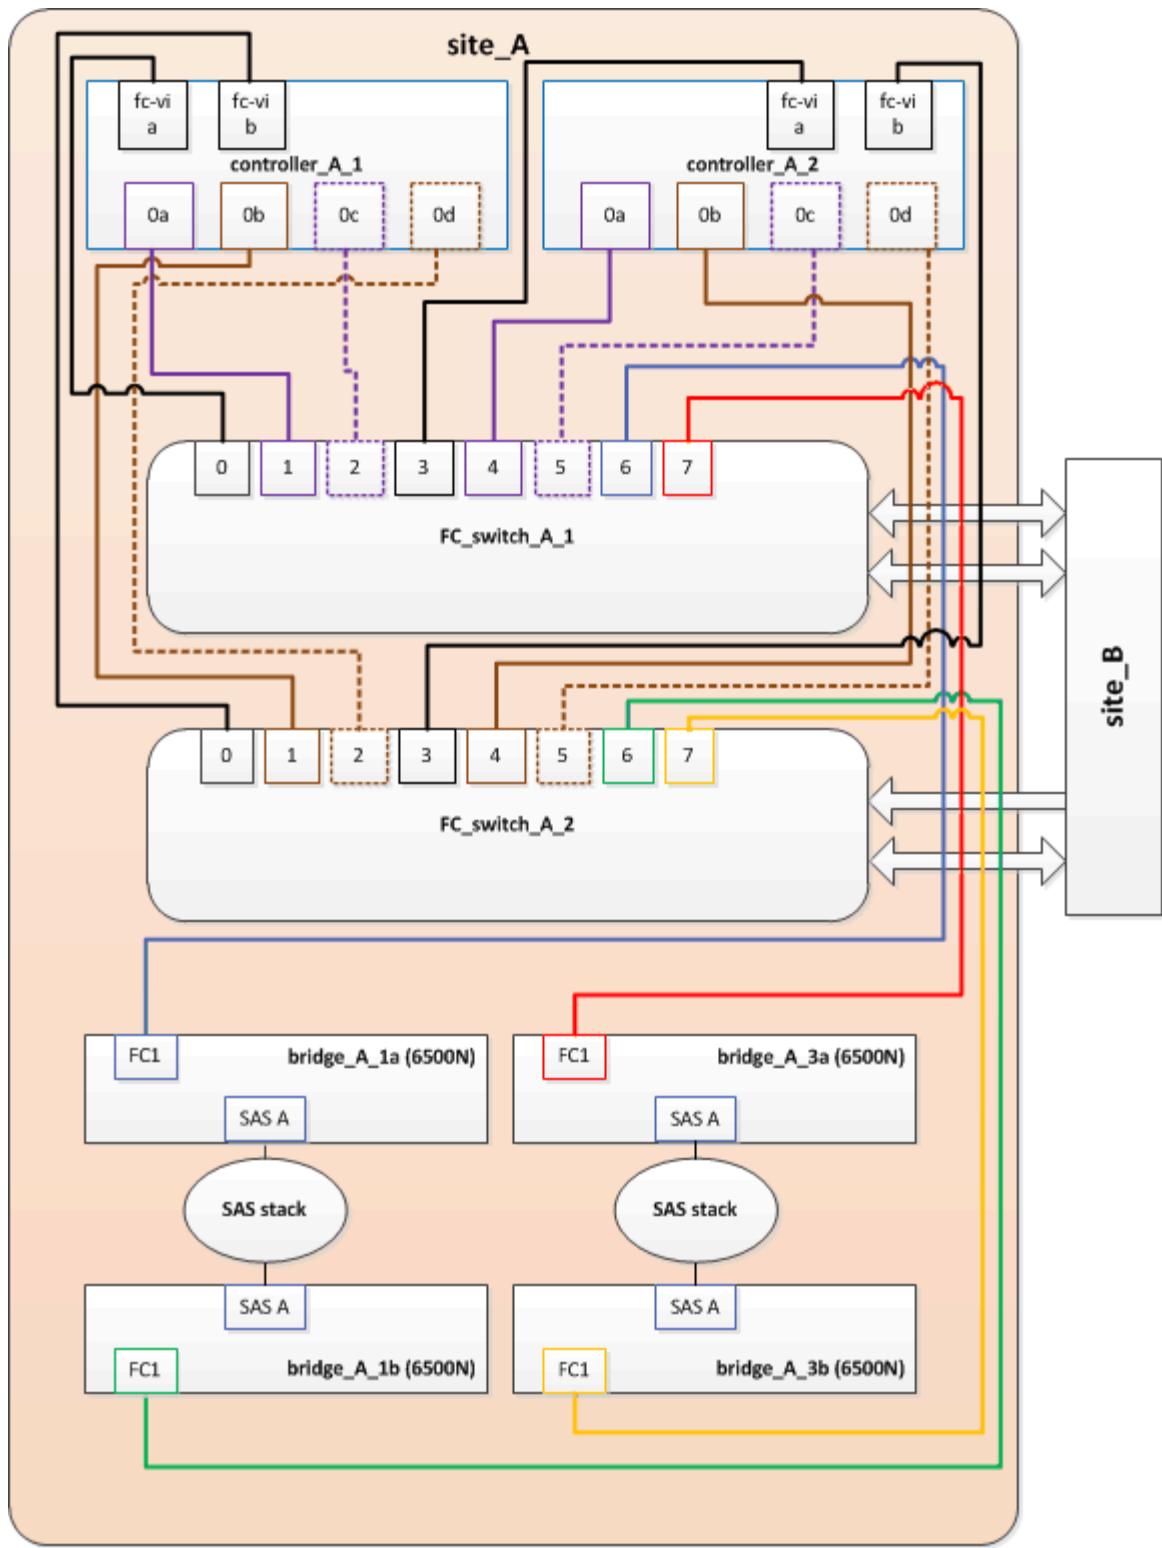

## Steps

1. Update the storage zones for the FC switches by removing half of the initiator ports from each existing zone and creating new zones for the FibreBridge 7500N FC2 ports.

The zones for the new FC2 ports will contain the initiator ports removed from the existing zones. In the diagrams, these zones are shown with dashed lines.

For details about the zoning commands, see the FC switch sections of the [Fabric-attached MetroCluster installation and configuration](#) or [Stretch MetroCluster installation and configuration](#).


The following examples show the storage zones and the ports in each zone before and after the consolidation. The ports are identified by *domain, port* pairs.

- Domain 5 consists of switch FC\_switch\_A\_1.
- Domain 6 consists of switch FC\_switch\_A\_2.
- Domain 7 consists of switch FC\_switch\_B\_1.
- Domain 8 consists of switch FC\_switch\_B\_2.

Before or after consolidation	Zone	Domains and ports	Colors in diagram*
Zones before the consolidation. There is a zone for each FC port on the four FibreBridge 6500N bridges.	STOR_A_1a-FC1	5,1; 5,2; 5,4; 5,5; 7,1; 7,2; 7,4; 7,5; 5,6	Purple + dashed purple + blue
	STOR_A_1b-FC1	6,1; 6,2; 6,4; 6,5; 8,1; 8,2; 8,4; 8,5; 6,6	Brown + dashed brown + green
	STOR_A_2a-FC1	5,1; 5,2; 5,4; 5,5; 7,1; 7,2; 7,4; 7,5; 5,7	Purple + dashed purple + red
	STOR_A_2b-FC1	6,1; 6,2; 6,4; 6,5; 8,1; 8,2; 8,4; 8,5; 6,7	Brown + dashed brown + orange
Zones after the consolidation. There is a zone for each FC port on the two FibreBridge 7500N bridges.	STOR_A_1a-FC1	7,1; 7,4; 5,1; 5,4; 5,6	Purple + blue
	STOR_A_1b-FC1	7,2; 7,5; 5,2; 5,5; 5,7	Dashed purple + red
	STOR_A_1a-FC2	8,1; 8,4; 6,1; 6,4; 6,6	Brown + green
	STOR_A_1b-FC2	8,2; 8,5; 6,2; 6,5; 6,7	Dashed brown + orange

- The diagrams only show site\_A.

The following diagram shows zoning at site\_A after the consolidation:

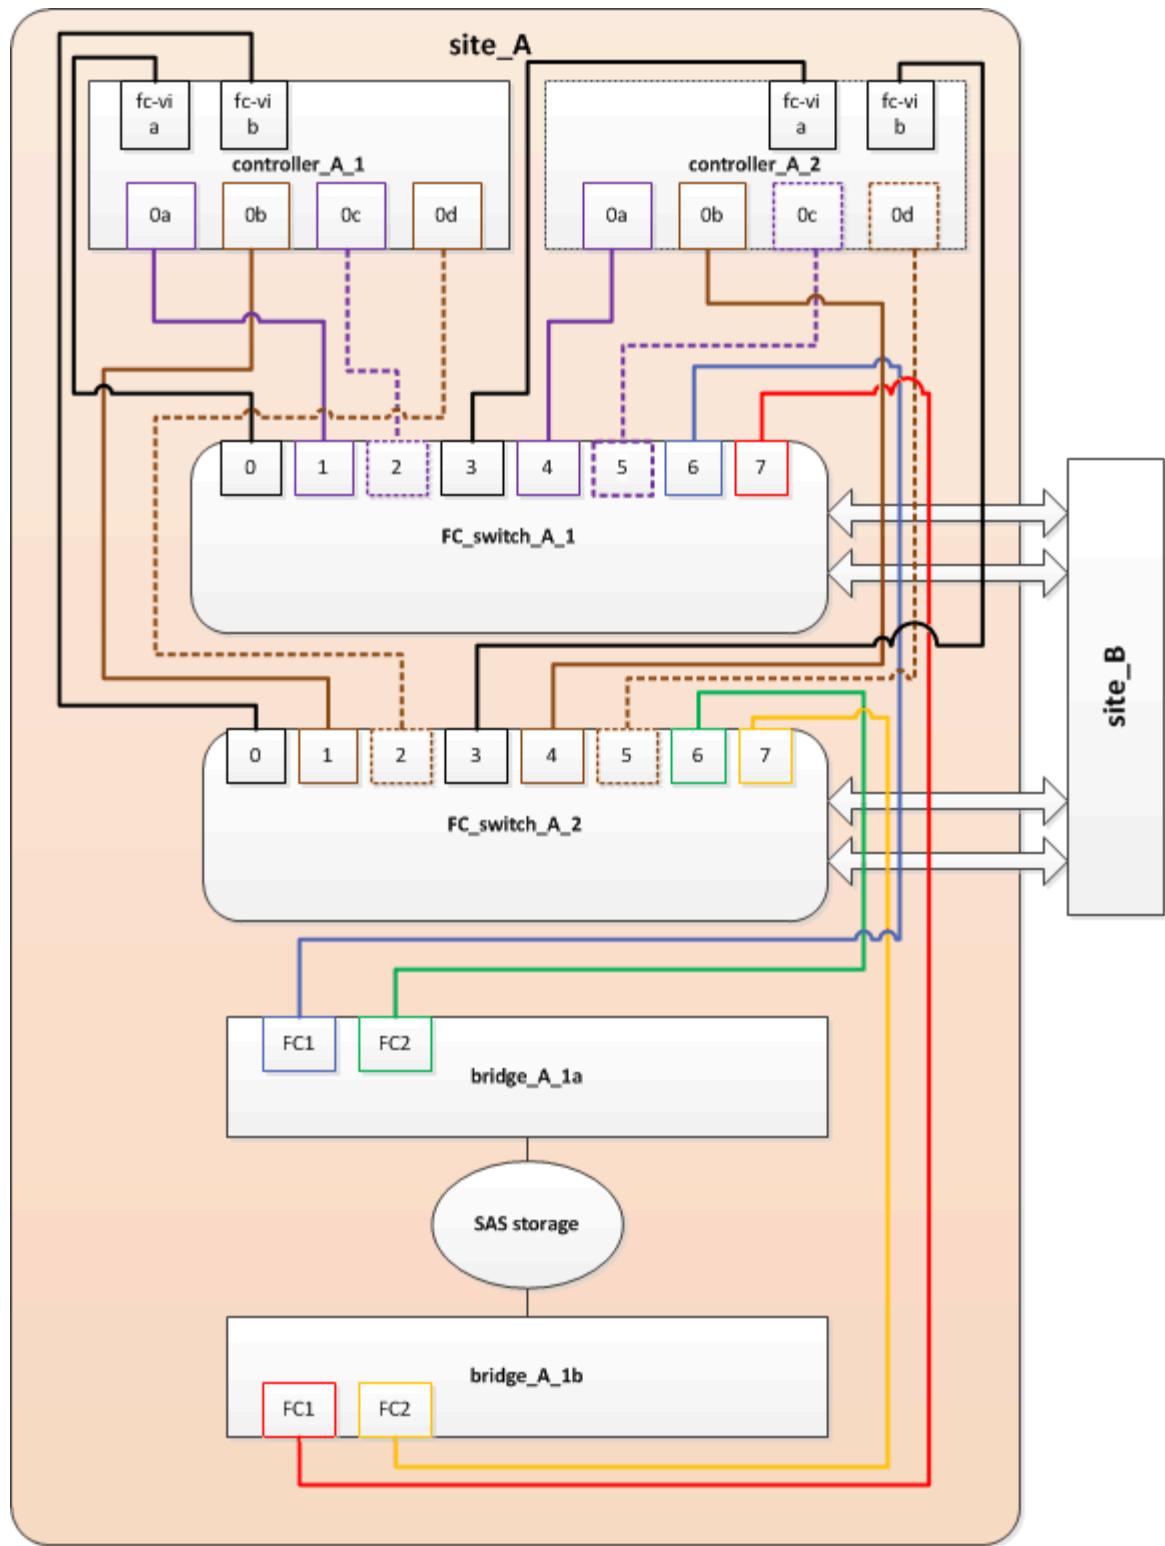

#### Updating zoning when adding FibreBridge 7600N or 7500N bridges to a configuration (ONTAP 9.1 and later)

The zoning must be changed when you are replacing FibreBridge 6500N bridges with FibreBridge 7600N or 7500N bridges and using both FC ports on the FibreBridge 7600N or 7500N bridges. Each zone can have no more than four initiator ports.

- This task applies to ONTAP 9.1 and later.

- FibreBridge 7600N bridges are supported in ONTAP 9.6 and later.
- The specific zoning in this task is for ONTAP 9.1 and later.
- The zoning changes are required to avoid issues with ONTAP, which requires that no more than four FC initiator ports can have a path to a disk.

After recabling to consolidate the shelves, the existing zoning would result in each disk being reachable by eight FC ports. You must change the zoning to reduce the initiator ports in each zone to four.

1. Update the storage zones for the FC switches by removing half of the initiator ports from each existing zone and creating new zones for the FibreBridge 7600N or 7500N FC2 ports.

The zones for the new FC2 ports will contain the initiator ports removed from the existing zones.

The FC switch section of the *Fabric-attached MetroCluster Installation and Configuration Guide* contains details about the zoning commands.

[Fabric-attached MetroCluster installation and configuration](#)


#### Cabling the second bridge FC port when adding FibreBridge 7600N or 7500N bridges to a configuration

To provide multiple paths to the storage stacks, you can cable the second FC port on each FibreBridge 7600N or 7500N bridge when you have added the FibreBridge 7600N or 7500N bridge to your configuration.


The zoning must have been adjusted to provide zones for the second FC ports.

#### Steps

1. Cable the FC2 port of the top bridge to the correct port on FC\_switch\_A\_2.

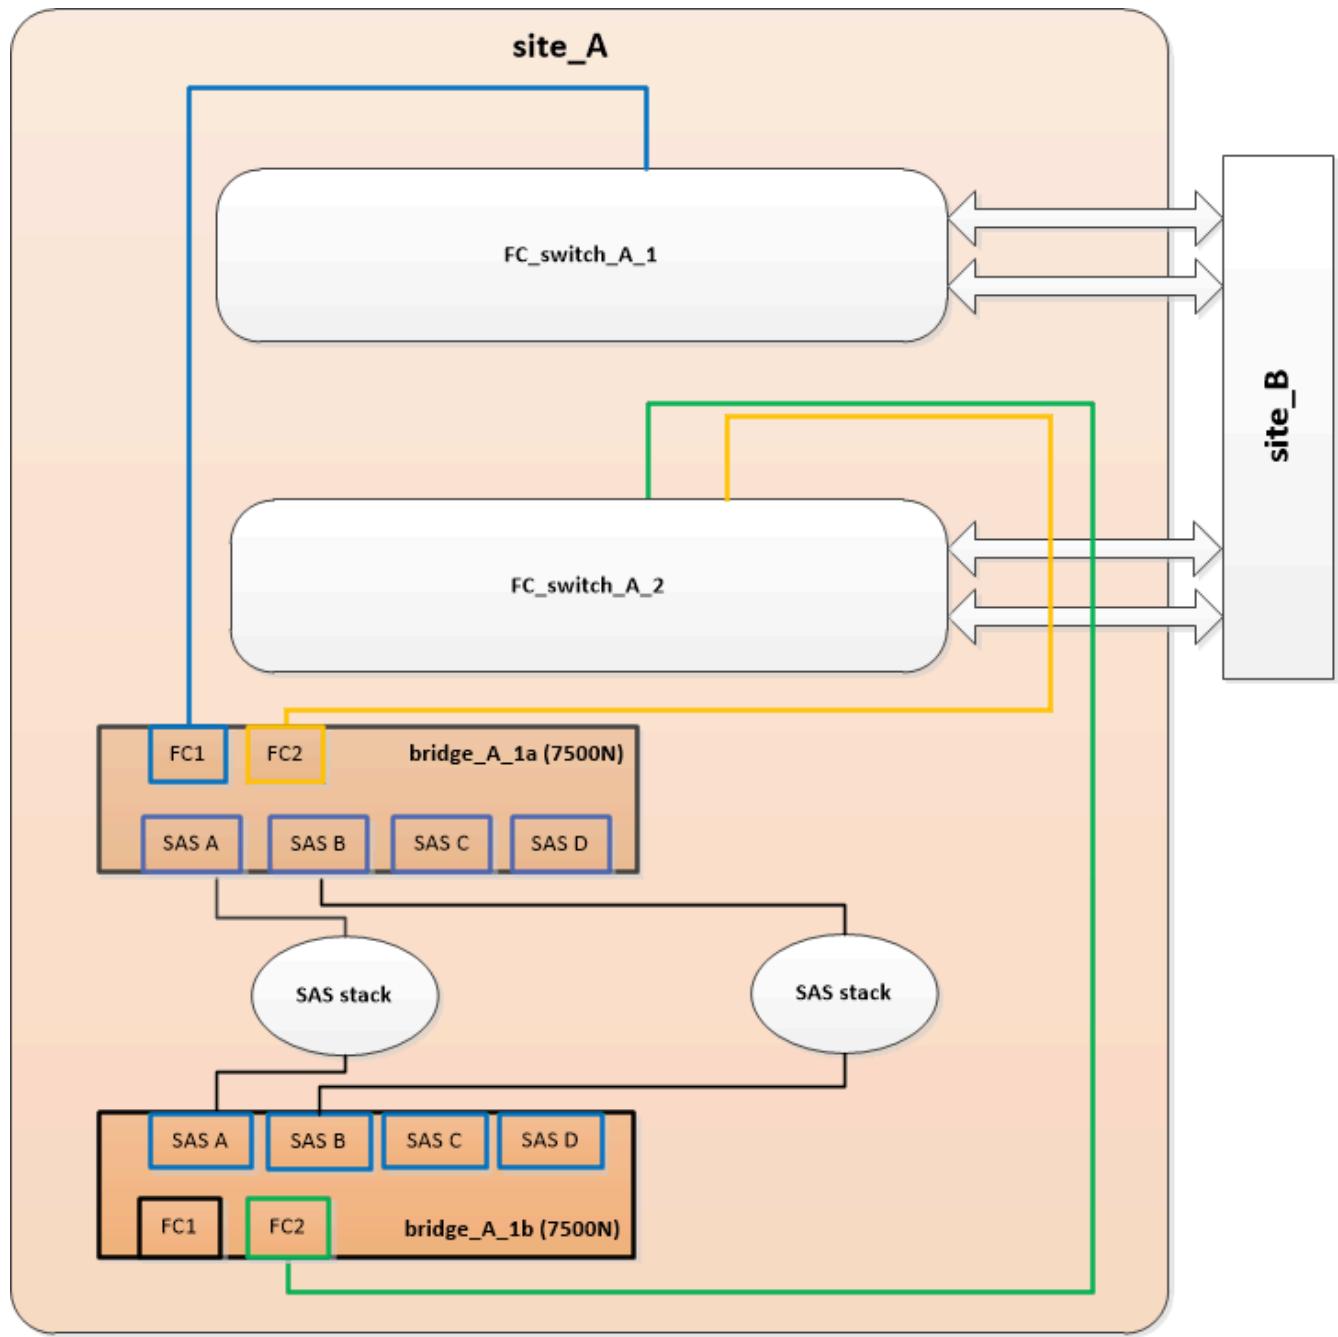

2. Cable the FC1 port of the bottom bridge to the correct port on FC\_switch\_A\_1.

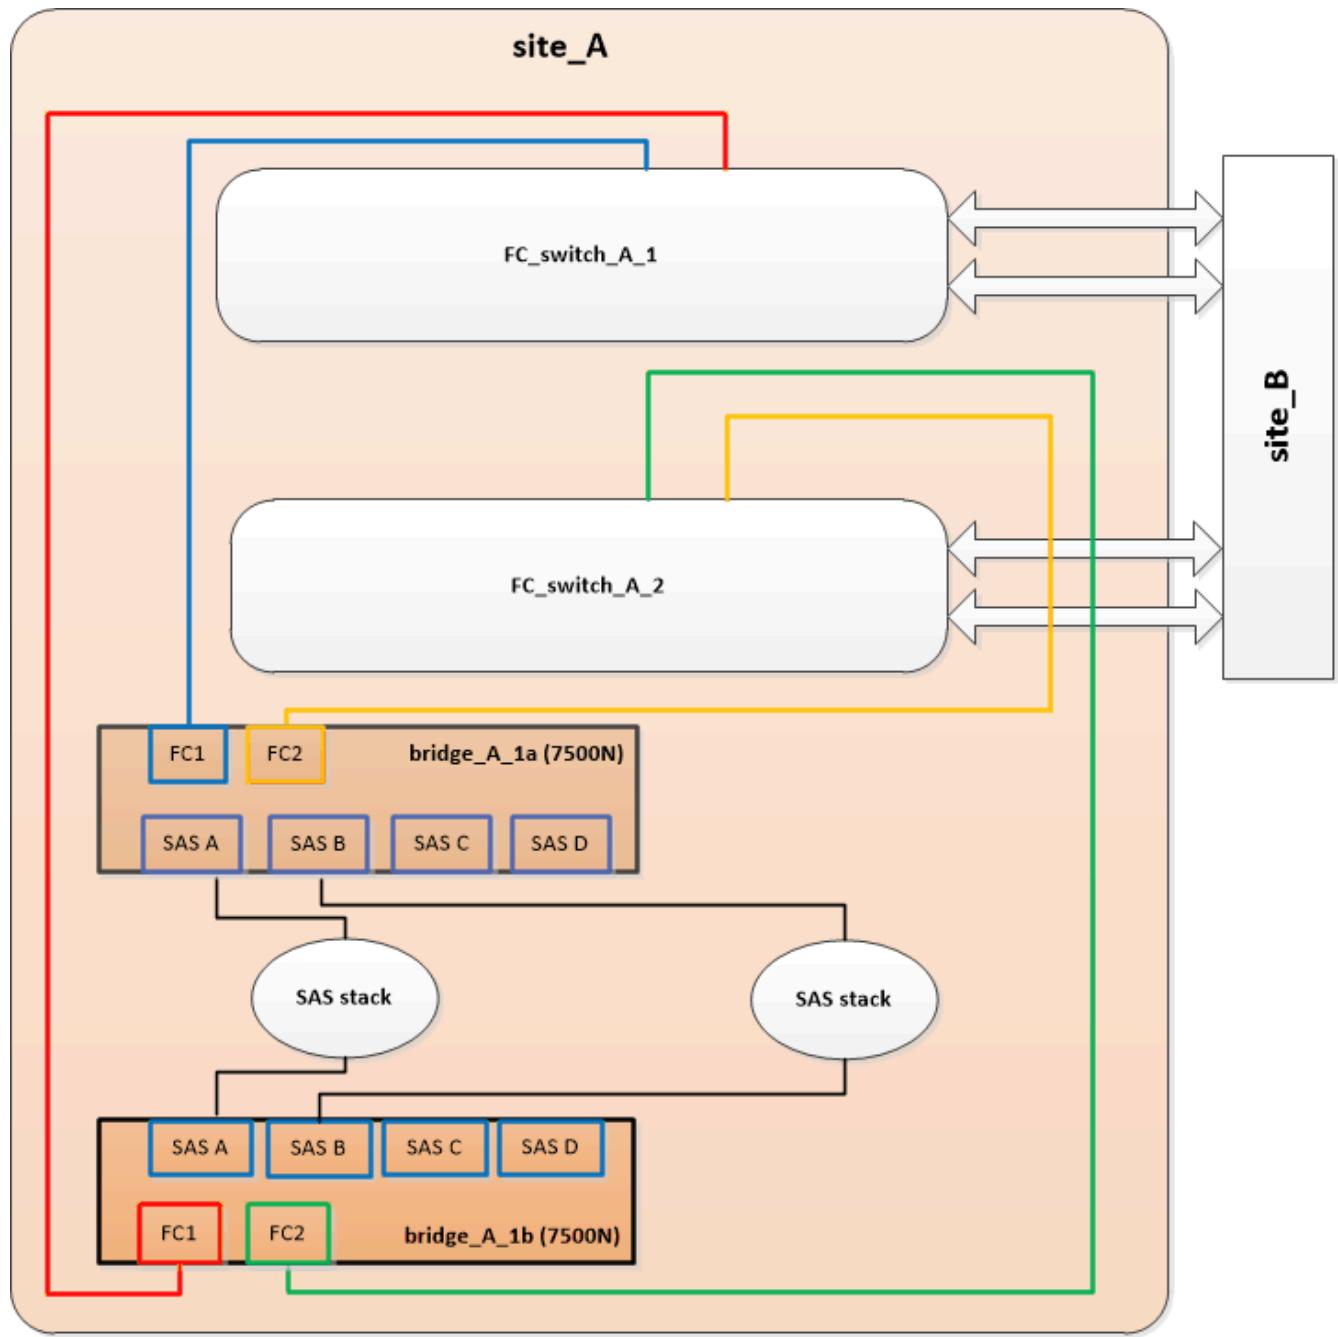

3. Confirm connectivity to the bridge-connected disks:

```
run local sysconfig -v
```

The output shows the disks attached to the initiator ports on the controller, and identifies the shelves connected to the FC-to-SAS bridges:

```
node_A_1> run local sysconfig -v
NetApp Release 9.3.2X18: Sun Dec 13 01:23:24 PST 2015
System ID: 0536872165 (node_A_1); partner ID: 0536872141 (node_B_1)
System Serial Number: 940001025465 (node_A_1)
System Rev: 70
System Storage Configuration: Multi-Path HA**<==== Configuration should
```

```

be multi-path HA**
.

.

slot 0: FC Host Adapter 0g (QLogic 8324 rev. 2, N-port, <UP>) **<===
Initiator port**
    Firmware rev:      7.5.0
    Flash rev:        0.0.0
    Host Port Id:     0x60100
    FC Node Name:    5:00a:098201:bae312
    FC Port Name:    5:00a:098201:bae312
    SFP Vendor:       FINISAR CORP.
    SFP Part Number:  FTLF8529P3BCVAN1
    SFP Serial Number: URQ0R1R
    SFP Capabilities: 4, 8 or 16 Gbit
    Link Data Rate:   16 Gbit
    Switch Port:      brcd6505-fcs40:1

**<List of disks visible to port\>**
    ID      Vendor    Model          FW      Size
    brcd6505-fcs40:12.126L1527      : NETAPP  X302_HJUPI01TSSM NA04
847.5GB (1953525168 512B/sect)
    brcd6505-fcs40:12.126L1528      : NETAPP  X302_HJUPI01TSSA NA02
847.5GB (1953525168 512B/sect)

.
.
.

**<List of FC-to-SAS bridges visible to port\>**
FC-to-SAS Bridge:
    brcd6505-fcs40:12.126L0      : ATTO      FibreBridge7500N A30H
FB7500N100104
    brcd6505-fcs42:13.126L0      : ATTO      FibreBridge7500N A30H
FB7500N100104

.
.

**<List of storage shelves visible to port\>**
    brcd6505-fcs40:12.shelf6: DS4243  Firmware rev. IOM3 A: 0200
IOM3 B: 0200
    brcd6505-fcs40:12.shelf8: DS4243  Firmware rev. IOM3 A: 0200
IOM3 B: 0200

.
.
.
```

## Disabling unused SAS ports on the FC-to-SAS bridges

After making cabling changes to the bridge, you should disable any unused SAS ports on FC-to-SAS bridges to avoid health monitor alerts related to the unused ports.

### Steps

1. Disable unused SAS ports on the top FC-to-SAS bridge:

- a. Log in to the bridge CLI.
- b. Disable any unused ports.



If you have configured an ATTO 7500N bridge, then all of the SAS ports (A through D) are enabled by default, and you must disable the SAS ports that are not being used:

**SASPortDisable sas port**

If SAS ports A and B are used, then SAS ports C and D must be disabled. In the following example, the unused SAS ports C and D are disabled:

```
Ready. *
`SASPortDisable C`

SAS Port C has been disabled.

Ready. *
`SASPortDisable D`

SAS Port D has been disabled.

Ready. *
```

- c. Save the bridge configuration:

**SaveConfiguration**

The following example shows that SAS ports C and D have been disabled. Note that the asterisk no longer appears, indicating that the configuration has been saved.

```
Ready. *
`SaveConfiguration`


Ready.
```

2. Repeat the previous step on the bottom FC-to-SAS bridge.

## Requirements for using other interfaces to configure and manage FibreBridge bridges

You can use the combination of a serial port, Telnet, and FTP to manage the FibreBridge bridges instead of the recommended management interfaces. Your system must meet the requirements for the applicable interface before you install the bridges.

You can use a serial port or Telnet to configure the bridge and Ethernet management 1 port, and to manage the bridge. You can use FTP to update the bridge firmware.



The *ATTO FibreBridge Installation and Operation Manual* for your model bridge has more information about management interfaces.

You can access this document on the ATTO web site by using the link provided on the ATTO Fibrebridge Description page.

### Serial port

When using the serial port to configure and manage a bridge, and to configure the Ethernet management 1 port, your system must meet the following requirements:

- A serial cable (which connects from the bridge serial port to a serial (COM) port on the computer you are using for setup)

The bridge serial port is RJ-45 and has the same pin-out as the controllers.

- A terminal emulation program such as Hyperterminal, Teraterm, or PuTTY to access the console

The terminal program should be capable of logging screen output to a file.

### Telnet

When using Telnet to configure and manage a bridge, your system must meet the following requirements:

- A serial cable (which connects from the bridge serial port to a serial (COM) port on the computer you are using for setup)

The bridge serial port is RJ-45 and has the same pin-out as the controllers.

- (Recommended) A non-default user name and password (for accessing the bridge)

- A terminal emulation program such as Hyperterminal, Teraterm, or PuTTY to access the console

The terminal program should be capable of logging screen output to a file.

- An IP address, subnet mask, and gateway information for the Ethernet management 1 port on each bridge

### FTP

When using FTP to update bridge firmware, your system must meet the following requirements:

- A standard Ethernet cable (which connects from the bridge Ethernet management 1 port to your network)
- (Recommended) A non-default user name and password (for accessing the bridge)

## Hot-replacing a failed power supply module

When there is a change in status of a power supply module to the bridge, you can remove and install the power supply module.

You can view the change in status of a power supply module through the LEDs on the bridge. You can also view the status of power supply modules via ExpressNAV GUI and the bridge CLI, via serial port, or via Telnet.

- This procedure is NDO (non-disruptive) and takes approximately 15 minutes to complete.
- You need the admin password and access to an FTP or SCP server.



The *ATTO FibreBridge Installation and Operation Manual* for your model bridge has more information about management interfaces.

You can access this and other content on the ATTO web site by using the link provided on the ATTO Fibrebridge Description page.

## In-band management of the FC-to-SAS bridges

Beginning with ONTAP 9.5 with FibreBridge 7500N or 7600N bridges, in-band management of the bridges is supported as an alternative to IP management of the bridges. Beginning with ONTAP 9.8, out-of-band management is deprecated.



Starting with ONTAP 9.8, the `storage bridge` command is replaced with `system bridge`. The following steps show the `storage bridge` command, but if you are running ONTAP 9.8 or later, the `system bridge` command is preferred.

When using in-band management, the bridges can be managed and monitored from the ONTAP CLI via the FC connection to the bridge. Physical access to the bridge via the bridge Ethernet ports is not required, reducing the security vulnerability of the bridge.

The availability of in-band management of the bridges depends on the version of ONTAP:

- Starting with ONTAP 9.8, bridges are managed via in-band connections by default and out-of-band management of the bridges via SNMP is deprecated.
- ONTAP 9.5 through 9.7: Either in-band management or out-of-band SNMP management is supported.
- Prior to ONTAP 9.5, only out-of-band SNMP management is supported.

Bridge CLI commands can be issued from the ONTAP interface `storage bridge run-cli -name bridge-name -command bridge-command-name` command at the ONTAP interface.



Using in-band management with IP access disabled is recommended to improve security by limiting physical connectivity to the bridge.

## Related information

[Hot-swapping a bridge with a replacement bridge of the same model](#)

[Hot-swapping a FibreBridge 7500N with a 7600N bridge](#)

Hot-swapping a FibreBridge 6500N bridge with a FibreBridge 7600N or 7500N bridge

Hot-adding a stack of SAS disk shelves and bridges

### Managing a FibreBridge bridge from ONTAP

Starting with ONTAP 9.5, you can use the ONTAP CLI to pass FibreBridge commands to the bridge and display the results of those commands.



Starting with ONTAP 9.8, the **storage bridge** command is replaced with **system bridge**. The following steps show the **storage bridge** command, but if you are running ONTAP 9.8 or later, the **system bridge** command is preferred.

#### Steps

1. Run the applicable FibreBridge command within the **storage bridge run-cli** command:

```
storage bridge run-cli -name bridge-name -command "command-text"
```

The following command runs the FibreBridge **SASPortDisable** command from the ONTAP prompt to disable SAS port b on the bridge:

```
cluster_A::> storage bridge run-cli -name "SASPortDisable b"  
  
SAS Port B has been disabled.  
Ready  
cluster_A::>
```

### Securing or unsecuring the FibreBridge bridge

To easily disable potentially unsecure Ethernet protocols on a bridge, beginning with ONTAP 9.5 you can secure the bridge. This disables the bridge's Ethernet ports. You can also reenable Ethernet access.

- Securing the bridge disables telnet and other IP port protocols and services (FTP, ExpressNAV, ICMP, or QuickNAV) on the bridge.
- This procedure uses out-of-band management using the ONTAP prompt, which is available beginning with ONTAP 9.5.

You can issue the commands from the bridge CLI if you are not using out-of-band management.

- The **unsecurebridge** command can be used to reenable the Ethernet ports.
- In ONTAP 9.7 and earlier, running the **securebridge** command on the ATTO FibreBridge might not update the bridge status correctly on the partner cluster. If this occurs, run the **securebridge** command from the partner cluster.



Starting with ONTAP 9.8, the **storage bridge** command is replaced with **system bridge**. The following steps show the **storage bridge** command, but if you are running ONTAP 9.8 or later, the **system bridge** command is preferred.

## Steps

1. From the ONTAP prompt of the cluster containing the bridge, secure or unsecure the bridge.

The following command secures bridge\_A\_1:

```
cluster_A> storage bridge run-cli -bridge bridge_A_1 -command  
securebridge
```

The following command unsecures bridge\_A\_1:

```
cluster_A> storage bridge run-cli -bridge bridge_A_1 -command  
unsecurebridge
```

2. From the ONTAP prompt of the cluster containing the bridge, save the bridge configuration:

```
storage bridge run-cli -bridge bridge-name -command saveconfiguration
```

The following command secures bridge\_A\_1:

```
cluster_A> storage bridge run-cli -bridge bridge_A_1 -command  
saveconfiguration
```

3. From the ONTAP prompt of the cluster containing the bridge, restart the bridge's firmware:

```
storage bridge run-cli -bridge bridge-name -command firmwarerestart
```

The following command secures bridge\_A\_1:

```
cluster_A> storage bridge run-cli -bridge bridge_A_1 -command  
firmwarerestart
```

## Performing FC switch maintenance and replacement

If necessary, you can non-disruptively replace the FC switches or upgrade their firmware in the MetroCluster configuration.

### Upgrading or downgrading the firmware on a Brocade FC switch

To upgrade or downgrade the firmware on a Brocade FC switch, you must use the

Brocade-specific commands to disable the switch, perform and verify the firmware change, and reboot and reenable the switch.

- You must have the firmware files.
- The system must be properly cabled.
- All paths to the storage shelves must be available.
- The disk shelf stacks must be stable.
- The FC switch fabric must be healthy.
- No failed components can be present in the system.
- The system must be operating normally.
- You must have the admin password and access to an FTP or SCP server.

The switch fabric is disabled during a firmware upgrade or downgrade, and the MetroCluster configuration relies on the second fabric to continue operation.

This task must be performed on each of the switch fabrics in succession so that all switches are running the same firmware version.



This procedure is nondisruptive and takes approximately one hour to complete.

## Steps

1. Log in to each of the switches in the fabric.

The examples in the following steps use the switch `FC_switch_A_1`.

2. Disable each of the switches in the fabric:

`switchCfgPersistentDisable`

If this command is not available, then run the `switchDisable` command.

```
FC_switch_A_1:admin> switchCfgPersistentDisable
```

3. Download the desired firmware version:

`firmwareDownload`

When prompted for the file name, you must specify the subdirectory or relative path to the firmware file.

You can run the `firmwareDownload` command at the same time on both switches, but you must allow the firmware to download and commit properly before moving to the next step.

```
FC_switch_A_1:admin> firmwaredownload
Server Name or IP Address: 10.64.203.188
User Name: test
File Name: v7.3.1b
Network Protocol(1-auto-select, 2-FTP, 3-SCP, 4-SFTP) [1]: 2
Password:
Server IP: 10.64.203.188, Protocol IPv4
Checking system settings for firmwaredownload...
System settings check passed.
```

4. Verify that the firmware was downloaded and committed to both partitions:

**firmwareShow**

The following example shows that the firmware download is complete as both images are updated:

```
FC_switch_A_1:admin> firmwareShow
Appl      Primary/Secondary Versions
-----
FOS      v7.3.1b
          v7.3.1b
```

5. Reboot the switches:

**reboot**

Some firmware versions automatically perform an haReboot operation after the firmware download is finished. The reboot in this step is required even if the haReboot has been performed.

```
FC_switch_A_1:admin> reboot
```

6. Check whether the new firmware is for an intermediate firmware level or for a final specified release.

If the download is for the intermediate firmware level, then perform the previous two steps until the specified release is installed.

7. Enable the switches:

**switchCfgPersistentEnable**

If this command is not available, then the switch should be in the `enabled` state after the `reboot` command is executed.

```
FC_switch_A_1:admin> switchCfgPersistentEnable
```

- Verify that the switches are online and that all of the devices are properly logged in:

**switchShow**

```
FC_switch_A_1:admin> switchShow
```

- Verify that the buffer usage information for a port group or all of the port groups in the switch is displayed properly:

**portbuffershow**

```
FC_switch_A_1:admin> portbuffershow
```

- Verify that the current configuration of a port is displayed properly:

**portcfgshow**

```
FC_switch_A_1:admin> portcfgshow
```

Verify the port settings, such as speed, mode, trunking, encryption, and compression, in the Inter-Switch Link (ISL) output. Verify that the port settings were not affected by the firmware download.

- Verify the operation of the MetroCluster configuration in ONTAP:

- Check whether the system is multipathed:

```
node run -node node-name sysconfig -a
```

- Check for any health alerts on both clusters:

```
system health alert show
```

- Confirm the MetroCluster configuration and that the operational mode is normal:

```
metrocluster show
```

- Perform a MetroCluster check:

```
metrocluster check run
```

- Display the results of the MetroCluster check:

```
metrocluster check show
```

- Check for any health alerts on the switches (if present):

```
storage switch show
```

- Run Config Advisor.

[NetApp Downloads: Config Advisor](#)

- After running Config Advisor, review the tool's output and follow the recommendations in the output to address any issues discovered.

12. Wait 15 minutes before repeating this procedure for the second switch fabric.

## Upgrading or downgrading the firmware on a Cisco FC switch

To upgrade or downgrade the firmware on a Cisco FC switch you must use the Cisco-specific commands to disable the switch, perform and verify the upgrade, and reboot and reenable the switch.

- The system must be properly cabled.
- All paths to the storage shelves must be available.
- The disk shelf stacks must be stable.
- The FC switch fabric must be healthy.
- All components in the system must be healthy.
- The system must be operating normally.
- You need the admin password and access to an FTP or SCP server.

The switch fabric is disabled during the firmware upgrade or downgrade and the MetroCluster configuration relies on the second fabric to continue operation.

You must repeat this task on each of the switch fabrics in succession to ensure that all switches are running the same firmware version.

You must have the firmware files.



This procedure is nondisruptive and takes approximately one hour to complete.

### Steps

1. Log in to each of the switches in the fabric.

In the examples, the switches are called FC\_switch\_A\_1 and FC\_switch\_B\_1.

2. Determine whether there is enough space in the bootflash directory on each switch:

```
dir bootflash
```

If not, delete the unwanted firmware files by using the `delete bootflash:file_name` command.

3. Copy the kickstart and system files to the switches:

```
copy source_file target_file
```

In the following example, the kickstart file (`m9200-s2ek9-kickstart-mz.5.2.1.bin`) and the system file (`m9200-s2ek9-mz.5.2.1.bin`) are located on the FTP server 10.10.10.55 in the `/firmware/` path.

The following example shows the commands issued on FC\_switch\_A\_1:

```
FC_switch_A_1# copy ftp://10.10.10.55/firmware/m9200-s2ek9-kickstart-mz.5.2.1.bin bootflash:m9200-s2ek9-kickstart-mz.5.2.1.bin
FC_switch_A_1# copy ftp://10.10.10.55/firmware/m9200-s2ek9-mz.5.2.1.bin bootflash:m9200-s2ek9-mz.5.2.1.bin
```

4. Disable all the VSANs on both the switches in this fabric.

5. Install the desired firmware on the switches:

```
install      all      system      bootflash:systemfile_name      kickstart
bootflash:kickstartfile_name
```

The following example shows the commands issued on FC\_switch\_A\_1:

```
FC_switch_A_1# install all system bootflash:m9200-s2ek9-mz.5.2.1.bin
kickstart bootflash:m9200-s2ek9-kickstart-mz.5.2.1.bin
Enter Yes to confirm the installation.
```

6. Check the version of the firmware on each switch to make sure the correct version was installed:

```
show version
```

7. Enable all the VSANs on both the switches in this fabric.

8. Verify the operation of the MetroCluster configuration in ONTAP:

- Check whether the system is multipathed: + `node run -node node-name sysconfig -a`
- Check for any health alerts on both clusters: + `system health alert show`
- Confirm the MetroCluster configuration and that the operational mode is normal: + `metrocluster show`
- Perform a MetroCluster check: + `metrocluster check run`
- Display the results of the MetroCluster check: + `metrocluster check show`
- Check for any health alerts on the switches (if present): + `storage switch show`
- Run Config Advisor.

[NetApp Downloads: Config Advisor](#)

- After running Config Advisor, review the tool's output and follow the recommendations in the output to address any issues discovered.

9. Repeat this procedure for the second switch fabric.

## Upgrading to new Brocade FC switches

If you are upgrading to new Brocade FC switches, you must replace the switches in the first fabric, verify that the MetroCluster configuration is fully operational, and then replace the switches in the second fabric.

- The MetroCluster configuration must be healthy and in normal operation.
- The MetroCluster switch fabrics consist of four Brocade switches.

The illustrations in the following steps show current switches.


- The switches must be running the most recent supported firmware.

#### [NetApp Interoperability Matrix Tool](#)

- This procedure is nondisruptive and takes approximately two hours to complete.
- You need the admin password and access to an FTP or SCP server.

The switch fabrics are upgraded one at a time.


At the end of this procedure, all four switches will be upgraded to new switches.

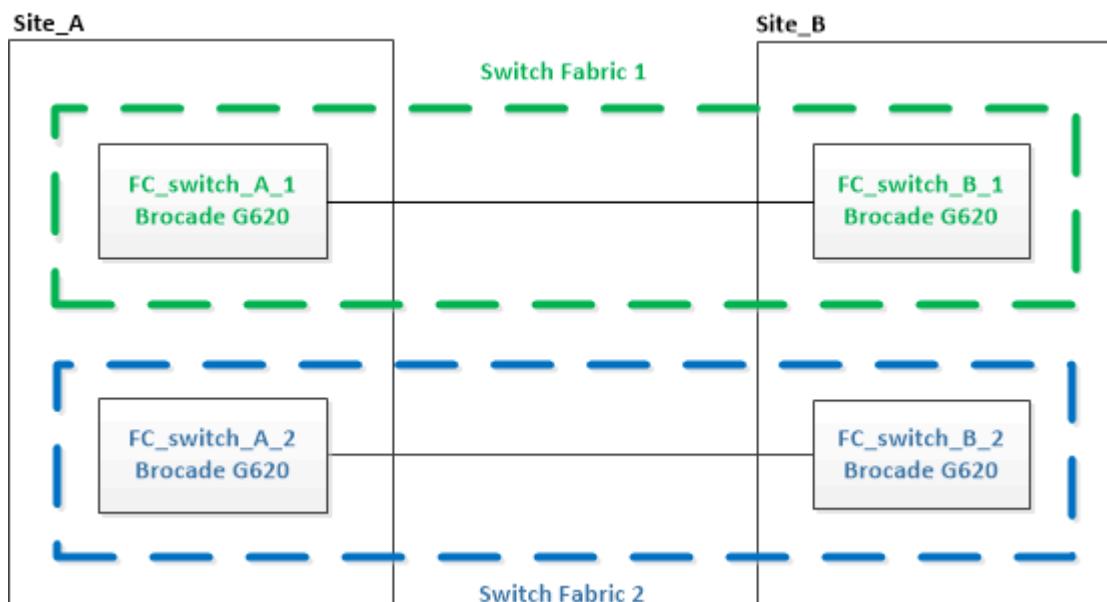

1. Disable the first switch fabric:


```
FC_switch_A_1:admin> switchCfgPersistentDisable
```

```
FC_switch_A_1:admin> switchCfgPersistentDisable
```

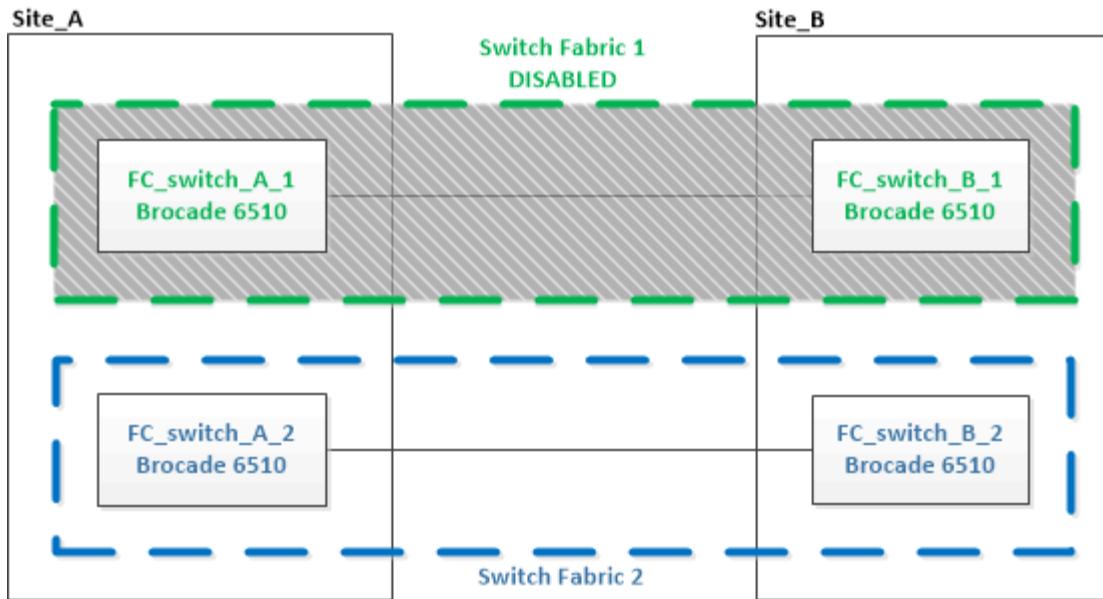

2. Replace the old switches at one MetroCluster site.

- Uncable and remove the disabled switch.
- Install the new switch in the rack.

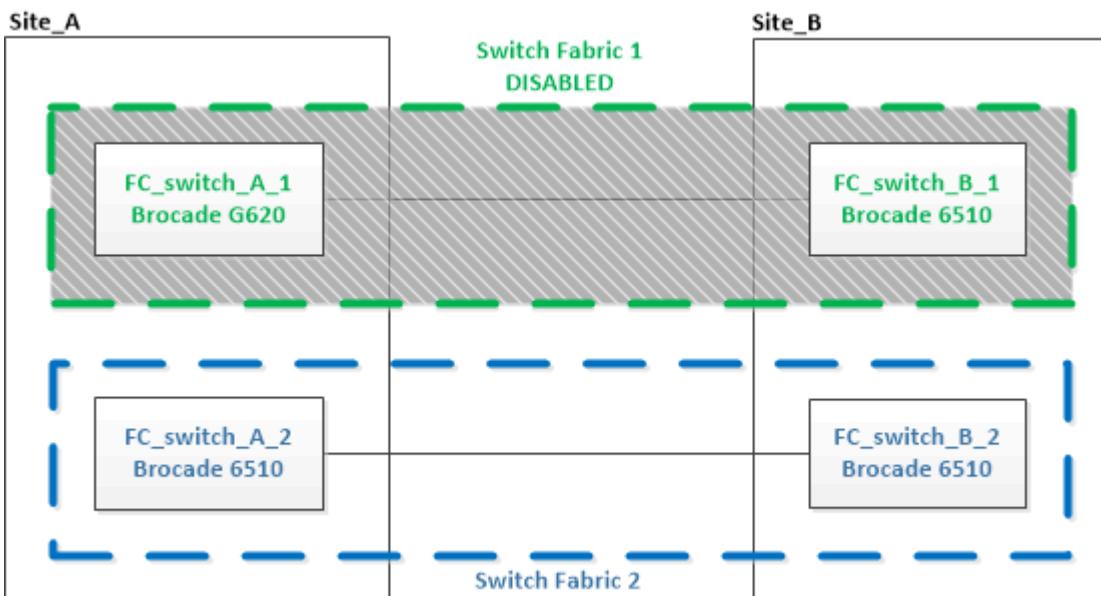

- Disable the new switches:

```
switchCfgPersistentDisable
```

The command disables both switches in the switch fabric.

```
FC_switch_A_1:admin> switchCfgPersistentDisable
```


- Cable the new switch using the recommended port assignments.

[Port assignments for FC switches when using ONTAP 9.0](#)

## Port assignments for FC switches when using ONTAP 9.1 and later

- e. Repeat these substeps at the partner MetroCluster site to replace the second switch in the first switch fabric.

Both switches in fabric 1 have been replaced.

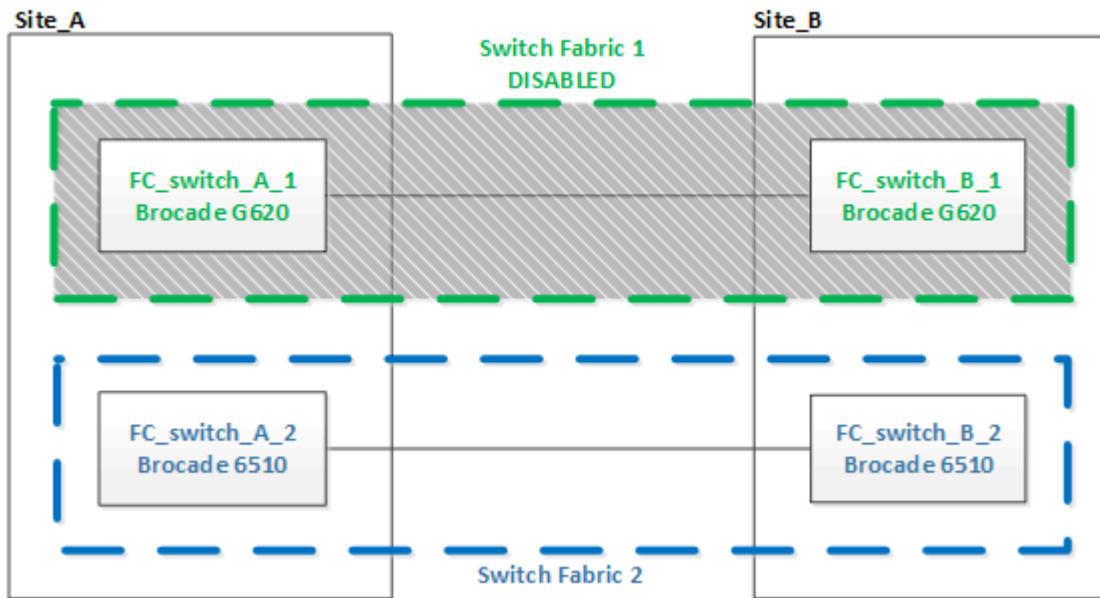

3. Power up the new switches and let them boot up.
4. Download the RCF files for the new switch.
5. Apply the RCF files to both new switches in the fabric, following the directions on the download page.
6. Save the switch configuration:

**cfgSave**

7. Wait 10 minutes to allow the configuration to stabilize.
8. Confirm connectivity to the disks by entering the following command on any one of the MetroCluster nodes:

**run local sysconfig -v**

The output shows the disks attached to the initiator ports on the controller, and identifies the shelves connected to the FC-to-SAS bridges:

```
node_A_1> run local sysconfig -v
NetApp Release 9.3.2X18: Sun Dec 13 01:23:24 PST 2017
System ID: 4068741258 (node_A_1); partner ID: 4068741260 (node_B_1)
System Serial Number: 940001025471 (node_A_1)
System Rev: 70
System Storage Configuration: Multi-Path HA**<==== Configuration should
be multi-path HA**
.
.
.
```

```

slot 0: FC Host Adapter 0g (QLogic 8324 rev. 2, N-port, <UP>) **<===
  Initiator port**
    Firmware rev:      7.5.0
    Flash rev:        0.0.0
    Host Port Id:     0x60130
    FC Node Name:    5:00a:098201:bae312
    FC Port Name:    5:00a:098201:bae312
    SFP Vendor:       UTILITIES CORP.
    SFP Part Number:  FTLF8529P3BCVAN1
    SFP Serial Number: URQ0Q9R
    SFP Capabilities: 4, 8 or 16 Gbit
    Link Data Rate:   16 Gbit
    Switch Port:      brcd6505-fcs40:1
  **<List of disks visible to port\>**
    ID      Vendor  Model          FW      Size
    brcd6505-fcs29:12.126L1527 : NETAPP  X302_HJUPI01TSSM NA04
847.5GB (1953525168 512B/sect)
    brcd6505-fcs29:12.126L1528 : NETAPP  X302_HJUPI01TSSA NA02
847.5GB (1953525168 512B/sect)
    .
    .
    .
  **<List of FC-to-SAS bridges visible to port\>**
  FC-to-SAS Bridge:
    brcd6505-fcs40:12.126L0 : ATTO     FibreBridge6500N 1.61
FB6500N102980
    brcd6505-fcs42:13.126L0 : ATTO     FibreBridge6500N 1.61
FB6500N102980
    brcd6505-fcs42:6.126L0 : ATTO     FibreBridge6500N 1.61
FB6500N101167
    brcd6505-fcs42:7.126L0 : ATTO     FibreBridge6500N 1.61
FB6500N102974
    .
    .
    .
  **<List of storage shelves visible to port\>**
    brcd6505-fcs40:12.shelf6: DS4243  Firmware rev. IOM3 A: 0200
IOM3 B: 0200
    brcd6505-fcs40:12.shelf8: DS4243  Firmware rev. IOM3 A: 0200
IOM3 B: 0200
    .
    .
    .

```

9. Returning to the switch prompt, verify the switch firmware version:

## **firmwareShow**

The switches must be running the most recent supported firmware.

## [NetApp Interoperability Matrix Tool](#)

10. Simulate a switchover operation:

- From any node's prompt, change to the advanced privilege level:

```
set -privilege advanced
```

You need to respond with **y** when prompted to continue into advanced mode and see the advanced mode prompt (\*>).

- Perform the switchover operation with the **-simulate** parameter:


```
metrocluster switchover -simulate
```

- Return to the admin privilege level:

```
set -privilege admin
```

11. Repeat the previous steps on the second switch fabric.

After repeating the steps, all four switches have been upgraded and the MetroCluster configuration is in normal operation.

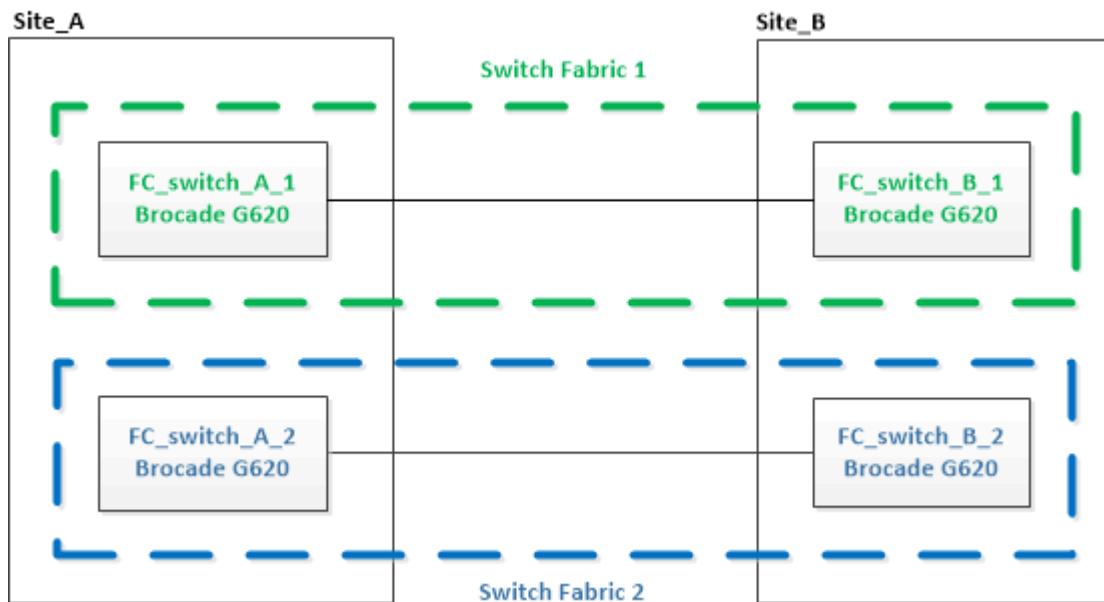

## **Replacing a Brocade FC switch**

You must use this Brocade-specific procedure to replace a failed switch.

You need the admin password and access to an FTP or SCP server.

In the following examples, FC\_switch\_A\_1 is the healthy switch and FC\_switch\_B\_1 is the impaired switch. The switch port usage in the examples is shown in the following table:

Port connections	Ports
FC-VI connections	0, 3
HBA connections	1, 2, 4, 5
FC-to-SAS bridge connections	6, 7
ISL connections	10, 11

The examples show two FC-to-SAS bridges. If you have more, you must disable and subsequently enable the additional ports.



This procedure is nondisruptive and takes approximately two hours to complete.

Your switch port usage should follow the recommended assignments.

- [Port assignments for FC switches when using ONTAP 9.0](#)
- [Port assignments for FC switches when using ONTAP 9.1 and later](#)

## Steps

1. Fence off the switch undergoing replacement by disabling the ISL ports on the healthy switch in the fabric and the FC-VI and HBA ports on the impaired switch (if the impaired switch is still operating):

- a. Disable the ISL ports on the healthy switch for each port:

**portcfgpersistentdisable port-number**

```
FC_switch_A_1:admin> portcfgpersistentdisable 10
FC_switch_A_1:admin> portcfgpersistentdisable 11
```

- b. If the impaired switch is still operational, disable the FC-VI and HBA ports on that switch for each port:

**portcfgpersistentdisable port-number**

```
FC_switch_B_1:admin> portcfgpersistentdisable 0
FC_switch_B_1:admin> portcfgpersistentdisable 1
FC_switch_B_1:admin> portcfgpersistentdisable 2
FC_switch_B_1:admin> portcfgpersistentdisable 3
FC_switch_B_1:admin> portcfgpersistentdisable 4
FC_switch_B_1:admin> portcfgpersistentdisable 5
```

2. If the impaired switch is still operational, gather the output from the **switchshow** command.

```
FC_switch_B_1:admin> switchshow
switchName: FC_switch_B_1
switchType: 71.2
switchState:Online
switchMode: Native
switchRole: Subordinate
switchDomain:      2
switchId:    fffc01
switchWwn:  10:00:00:05:33:86:89:cb
zoning:          OFF
switchBeacon:    OFF
```

3. Boot and preconfigure the new switch prior to physically installing it:

- Power up the new switch and let it boot up.
- Check the firmware version on the switch to confirm that it matches the version of the other FC switches:  
**firmwareShow**
- Configure the new switch as described in the *MetroCluster Installation and Configuration Guide*, but skipping the “Configuring zoning on Brocade FC switches” section.

[Fabric-attached MetroCluster installation and configuration](#)

You configure zoning later in this procedure.



At this point, the new switch is not cabled to the MetroCluster configuration.

- Disable the FC-VI, HBA, and storage ports on the new switch, and the ports connected to the FC-SAS bridges.

```
FC_switch_B_1:admin> portcfgpersistentdisable 0
FC_switch_B_1:admin> portcfgpersistentdisable 1
FC_switch_B_1:admin> portcfgpersistentdisable 2
FC_switch_B_1:admin> portcfgpersistentdisable 3
FC_switch_B_1:admin> portcfgpersistentdisable 4
FC_switch_B_1:admin> portcfgpersistentdisable 5

FC_switch_B_1:admin> portcfgpersistentdisable 6
FC_switch_B_1:admin> portcfgpersistentdisable 7
```

4. Physically replace the switch:

- Power off the impaired FC switch.
- Power off the replacement FC switch.
- Uncable and remove the impaired switch, carefully noting which cables connected to which ports.
- Install the replacement switch in the rack.

- e. Cable the replacement switch exactly as the old switch was cabled.
  - f. Power on the new FC switch.
5. If you want to enable ISL encryption, complete the applicable tasks in the [Fabric-attached MetroCluster Installation and Configuration Guide](#).

If you are enabling ISL encryption, you need to complete the following tasks:

- Disabling the virtual fabric
- Setting the payload
- Setting the authentication policy
- Enabling ISL encryption on Brocade switches

6. Complete the configuration of the new switch:

a. Enable the ISLs:

**portcfgpersistentenable port-number**

```
FC_switch_B_1:admin> portcfgpersistentenable 10
FC_switch_B_1:admin> portcfgpersistentenable 11
```

b. On the replacement switch (FC\_switch\_B\_1 in the example), verify that the ISLs are online:  
**switchshow**

```
FC_switch_B_1:admin> switchshow
switchName: FC_switch_B_1
switchType: 71.2
switchState:Online
switchMode: Native
switchRole: Principal
switchDomain:        4
switchId:    fffc03
switchWwn:  10:00:00:05:33:8c:2e:9a
zoning:          OFF
switchBeacon:      OFF

Index Port Address Media Speed State Proto
=====
...
10   10   030A00 id   16G     Online  FC E-Port
10:00:00:05:33:86:89:cb "FC_switch_A_1"
11   11   030B00 id   16G     Online  FC E-Port
10:00:00:05:33:86:89:cb "FC_switch_A_1" (downstream)
...
```

c. Enable the storage ports that connect to the FC bridges.

```
FC_switch_B_1:admin> portcfgpersistentenable 6  
FC_switch_B_1:admin> portcfgpersistentenable 7
```

- d. Enable the storage, HBA, and FC-VI ports.

The following example shows the commands used to enable the ports connecting HBA adapters:

```
FC_switch_B_1:admin> portcfgpersistentenable 1  
FC_switch_B_1:admin> portcfgpersistentenable 2  
FC_switch_B_1:admin> portcfgpersistentenable 4  
FC_switch_B_1:admin> portcfgpersistentenable 5
```

The following example shows the commands used to enable the ports connecting the FC-VI adapters:

```
FC_switch_B_1:admin> portcfgpersistentenable 0  
FC_switch_B_1:admin> portcfgpersistentenable 3
```

7. Verify that the ports are online:

**switchshow**

8. Verify the operation of the MetroCluster configuration in ONTAP:

- a. Check whether the system is multipathed:

**node run -node node-name sysconfig -a**

- b. Check for any health alerts on both clusters:

**system health alert show**

- c. Confirm the MetroCluster configuration and that the operational mode is normal:

**metrocluster show**

- d. Perform a MetroCluster check:

**metrocluster check run**

- e. Display the results of the MetroCluster check:

**metrocluster check show**

- f. Check for any health alerts on the switches (if present):

**storage switch show**

- g. Run Config Advisor.

[NetApp Downloads: Config Advisor](#)

- h. After running Config Advisor, review the tool's output and follow the recommendations in the output to address any issues discovered.

## Renaming a Brocade FC switch

You might need to rename a Brocade FC switch to ensure consistent naming throughout your configuration.

- Persistently disable the switch or switches in one fabric:

```
switchcfgpersistentdisable
```

The following example shows the output for the **switchcfgpersistentdisable** command:

```
7840_FCIP_2:admin> switchcfgpersistentdisable
Switch's persistent state set to 'disabled'
2018/03/09-07:41:06, [ESM-2105], 146080, FID 128, INFO, 7840_FCIP_2, VE
Tunnel 24 is DEGRADED.
2018/03/09-07:41:06, [ESM-2104], 146081, FID 128, INFO, 7840_FCIP_2, VE
Tunnel 24 is OFFLINE.

7840_FCIP_2:admin>
```

- Rename the switch or switches:

```
switchname new-switch-name
```

If you are renaming both switches in the fabric, use the same command on each switch.

The following example shows the output for the **switchname new-switch-name** command:

```
7840_FCIP_2:admin> switchname FC_switch_1_B
Committing configuration...
Done.
Switch name has been changed. Please re-login into the switch for the
change to be applied.
2018/03/09-07:41:20, [IPAD-1002], 146082, FID 128, INFO, FC_switch_1_B,
Switch name has been successfully changed to FC_switch_1_B.
7840_FCIP_2:admin>
```

- Reboot the switch or switches:

```
reboot
```

If you are renaming both switches in the fabric, reboot both switches. Once the reboot is complete, the switch is renamed in all places.

The following example shows the output for the **reboot** command:

```
7840_FCIP_2:admin> reboot
Warning: This command would cause the switch to reboot
and result in traffic disruption.
Are you sure you want to reboot the switch [y/n]?y
2018/03/09-07:42:08, [RAS-1007], 146083, CHASSIS, INFO, Brocade7840,
System is about to reload.
Rebooting! Fri Mar  9 07:42:11 CET 2018

Broadcast message from root (ttyS0) Fri Mar  9 07:42:11 2018...

The system is going down for reboot NOW !!
INIT: Switching to runlevel: 6
INIT:
2018/03/09-07:50:48, [ESM-1013], 146104, FID 128, INFO, FC_switch_1_B,
DPO Configuration replay has completed.
2018/03/09-07:50:48, [ESM-1011], 146105, FID 128, INFO, FC_switch_1_B,
DPO is ONLINE.

*** CORE FILES WARNING (03/09/18 - 08:00:00 ) ***
10248 KBytes in 1 file(s)
use "supportsave" command to upload

*** FFDC FILES WARNING (03/09/18 - 08:00:00 ) ***
520 KBytes in 1 file(s)
```

#### 4. Persistently enable the switches: **switchcfgpersistentenable**

The following example shows the output for the **switchcfgpersistentenable** command:

```

FC_switch_1_B:admin> switchcfgpersistentenable
Switch's persistent state set to 'enabled'
FC_switch_1_B:admin>
FC_switch_1_B:admin>
FC_switch_1_B:admin> 2018/03/09-08:07:07, [ESM-2105], 146106, FID 128,
INFO, FC_switch_1_B, VE Tunnel 24 is DEGRADED.
2018/03/09-08:07:10, [ESM-2106], 146107, FID 128, INFO, FC_switch_1_B,
VE Tunnel 24 is ONLINE.

FC_switch_1_B:admin>

FC_switch_1_B:admin> switchshow
switchName:      FC_switch_1_B
switchType:      148.0
switchState:     Online
switchMode:      Native
switchRole:      Subordinate
switchDomain:    6
switchId:        fffc06
switchWwn:       10:00:50:eb:1a:9a:a5:79
zoning:          ON (CFG_FAB_2_RCF_9_3)
switchBeacon:    OFF
FC Router:       OFF
FC Router BB Fabric ID: 128
Address Mode:    0
HIF Mode:        OFF

Index Port Address Media Speed State Proto
=====
0   0   060000 id   16G   Online   FC   F-Port
50:0a:09:81:06:a5:5a:08
1   1   060100 id   16G   Online   FC   F-Port
50:0a:09:83:06:a5:5a:08

```

- Verify that the switch name change is visible from the ONTAP cluster prompt:

**storage switch show**

The following example shows the output for the **storage switch show** command:

```

cluster_A::> storage switch show
  (storage switch show)
          Symbolic           Is
Monitor
Switch      Name   Vendor Model Switch WWN     Monitored
Status

-----
-----  

Brocade_172.20.7.90
    RTP-FC01-510Q40
        Brocade Brocade7840
        1000c4f57c904bc8 true
ok
Brocade_172.20.7.91
    RTP-FC02-510Q40
        Brocade Brocade7840
        100050eb1a9aa579 true
ok
Brocade_172.20.7.92

```

## Disabling encryption on Brocade FC switches

You might need to disable encryption on Brocade FC switches.

### Steps

- Send an AutoSupport message from both sites indicating the beginning of maintenance.

```
cluster_A::> autosupport invoke -node * -type all -message MAINT=4h
```

```
cluster_B::> autosupport invoke -node * -type all -message MAINT=4h
```

- Verify the operation of the MetroCluster configuration from Cluster A.

- Confirm the MetroCluster configuration and that the operational mode is normal:

```
metrocluster show
```

```
cluster_A::> metrocluster show
```

- Perform a MetroCluster check:

```
metrocluster check run
```

```
cluster_A::> metrocluster check run
```

- c. Display the results of the MetroCluster check:

```
metrocluster check show
```

```
cluster_A::> metrocluster check show
```

3. Check the status of both switches:

```
fabric show
```

```
switch_A_1:admin> fabric show
```

```
switch_B_1:admin> fabric show
```

4. Disable both switches:

```
switchdisable
```

```
switch_A_1:admin> switchdisable
```

```
switch_B_1:admin> switchdisable
```

5. Check the available paths for the nodes on each cluster:

```
sysconfig
```

```
cluster_A::> system node run -node node-name -command sysconfig -a
```

```
cluster_B::> system node run -node node-name -command sysconfig -a
```

As the switch fabric is now disabled, the System Storage Configuration should be Single-Path HA.

6. Check the aggregate status for both clusters.

```
cluster_A::> aggr status
```

```
cluster_B::> aggr status
```

System output should show the aggregates are mirrored and normal for both clusters:

```
mirrored,normal
```

7. Repeat the following substeps from the admin prompt on both switches.

a. Show which ports are encrypted:

```
portEncCompShow
```

```
switch_A_1:admin> portEncCompShow
```

b. Disable encryption on the encrypted ports:

```
portcfgEncrypt - disable port-number
```

```
switch_A_1:admin> portcfgEncrypt --disable 40
switch_A_1:admin> portcfgEncrypt --disable 41
switch_A_1:admin> portcfgEncrypt --disable 42
switch_A_1:admin> portcfgEncrypt --disable 43
```

c. Set the authentication type to all:

```
authUtil --set -a all
```

```
switch_A_1:admin> authUtil --set -a all
```

d. Set the authentication policy on the switch. to off:

```
authutil --policy -sw off
```

```
switch_A_1:admin> authutil --policy -sw off
```

e. Set the authentication Diffie-Hellman group to \* :

```
authutil --set -g *
```

```
switch_A_1:admin> authUtil --set -g *
```

f. Delete the secret key database:

```
secAuthSecret --remove -all
```

```
switch_A_1:admin> secAuthSecret --remove -all
```

- g. Confirm that encryption is disabled on the ports:

**portenccompshow**

```
switch_A_1:admin> portenccompshow
```

- h. Enable the switch:

**switchenable**

```
switch_A_1:admin> switchenable
```

- i. Confirm the status of the ISLs:

**islshow**

```
switch_A_1:admin> islshow
```

8. Check the available paths for the nodes on each cluster:

**sysconfig**

```
cluster_A::> system node run -node * -command sysconfig -a
```

```
cluster_B::> system node run -node * -command sysconfig -a
```

The system output should indicate that System Storage Configuration has changed back to Quad-Path HA.

9. Check the aggregate status for both clusters.

```
cluster_A::> aggr status
```

```
cluster_B::> aggr status
```

The system should show that the aggregates are mirrored and normal for both clusters as shown in the following system output:

```
mirrored,normal
```

10. Verify the operation of the MetroCluster configuration from Cluster A.

- Perform a MetroCluster check:

```
metrocluster check run
```

```
cluster_A::> metrocluster check run
```

- Display the results of the MetroCluster check:

```
metrocluster check show
```

```
cluster_A::> metrocluster check show
```

11. Send an AutoSupport message from both sites indicating the end of maintenance.

```
cluster_A::> autosupport invoke -node node-name -type all -message  
MAINT=END
```

```
cluster_B::> autosupport invoke -node node-name -type all -message  
MAINT=END
```

## Changing ISL properties, ISL ports, or the IOD/OOD configuration on a Brocade switch

You might need to add ISLs to a switch if you are adding or upgrading hardware such as additional or faster controllers or switches.

Ensure that the system is properly configured, that all fabric switches are operational, and that no errors exist.

If the equipment on the ISL link changes and the new link configuration no longer supports the current configuration----trunking and ordered delivery---then the fabric needs to be reconfigured for the correct routing policy: either in-order-deliver (IOD) or out-of-order-delivery (OOD).



To make changes to OOD from ONTAP software, use the following steps: [Configuring in-order delivery or out-of-order delivery of frames on ONTAP software](#)

- Disable the FCVI and storage HBA ports:

```
portcfgpersistentdisable port number
```

By default the first 8 ports (ports 0 through 7) are used for FCVI and Storage HBA. The ports must be persistently disabled so that the ports remain disabled in the event of a switch reboot.

The following example shows ISL ports 0—7 being disabled on both switches:

```

Switch_A_1:admin> portcfgpersistentdisable 0-7
Switch_B_1:admin> portcfgpersistentdisable 0-7

```

2. Change the ISL ports as required.

Option	Step
To change the speed of an ISL port...	<p>Use the <b>portcfgspeed port number port speed</b> command on both switches on the fabric.</p> <p>In the following example, you change the ISL port speed from 40 Gbps to 16 Gbps:</p> <pre>brocade_switch_A_1:admin&gt; portcfgspeed 40 16</pre> <p>You can verify that the speed has changed using the <b>switchshow</b> command:</p> <pre>brocade_switch_A_1:admin&gt; switchshow</pre> <p>You should see the following output:</p> <pre> . . .         40 40    062800   id 16G     No_Sync      FC  Disabled . .</pre>
To change the distance of an ISL port...	Use the <b>portcfglongdistance port number port distance</b> command on both switches in the fabric.
To remove an ISL...	Disconnect the link \(cable\).
To add an ISL...	Insert SFPs into the ports you are adding as ISL ports. Ensure that these ports are listed in the <b>Fabric-attached MetroCluster Installation and Configuration Guide</b> for the switch you are adding them to and cable them according to this guide.
To relocate an ISL...	Relocating an ISL is the same as removing and then adding an ISL. First, remove the ISL by disconnecting the link and then insert SFPs into the ports you are adding as ISL ports.

3. Reconfigure for out-of-order delivery \(\text{OOD}\) or in-order-delivery \(\text{IOD}\).



If the routing policies remain the same, you do not need to reconfigure and this step can be ignored. The ONTAP configuration needs to match the fabric configuration. If the fabric is configured for OOD, then ONTAP must also be configured for OOD. The same applies for IOD.

This step should be executed in the following scenarios:

- More than one ISL formed a trunk before the change, but after the change, trunking is no longer supported. In this case, you must configure the fabric for OOD.
- There is one ISL before the change and multiple ISLs after the change.
- If multiple ISLs form a trunk, configure the fabric for IOD.
- If multiple ISLs **cannot** form a trunk, configure the fabric for OOD.

- a. Persistently disable the switches using the **switchcfgpersistentdisable** command as shown in the following example:

```
Switch_A_1:admin> switchcfgpersistentdisable  
Switch_B_1:admin> switchcfgpersistentdisable
```

- b. Configure the trunking mode for each ISL **portcfgtrunkport port number** as shown in the following table:

Scenario	Steps
Configure the ISL for trunking \(\text{IOD}\)	<p>Set the <b>portcfgtrunkport port number</b> to 1:</p> <pre>FC_switch_A_1:admin&gt; portcfgtrunkport 20 1 FC_switch_A_1:admin&gt; portcfgtrunkport 21 1 FC_switch_B_1:admin&gt; portcfgtrunkport 20 1 FC_switch_B_1:admin&gt; portcfgtrunkport 21 1</pre>

Scenario	Steps
Configure the ISL for trunking \(\text{OOD}\)	<p>Set the <b>portcfgtrunkport port number to 0:</b></p> <pre>FC_switch_A_1:admin&gt; portcfgtrunkport 20 0 FC_switch_A_1:admin&gt; portcfgtrunkport 21 0 FC_switch_B_1:admin&gt; portcfgtrunkport 20 0 FC_switch_B_1:admin&gt; portcfgtrunkport 21 0 ``````</pre>

c. Configure the fabric for IOD or OOD as required.

Scenario	Steps
Configure the fabric for IOD	<p>Set the three settings of IOD, APT, and DLS using the <b>iodset</b>, <b>aptpolicy</b>, and <b>dlsreset</b> commands as shown in the following example:</p> <pre>Switch_A_1:admin&gt; iodset Switch_A_1:admin&gt; aptpolicy 1 Policy updated successfully. Switch_A_1:admin&gt; dlsreset FC_switch_A_1:admin&gt; portcfgtrunkport 40 1 FC_switch_A_1:admin&gt; portcfgtrunkport 41 1</pre> <pre>Switch_B_1:admin&gt; iodset Switch_B_1:admin&gt; aptpolicy 1 Policy updated successfully. Switch_B_1:admin&gt; dlsreset FC_switch_B_1:admin&gt; portcfgtrunkport 20 1 FC_switch_B_1:admin&gt; portcfgtrunkport 21 1</pre>

Configure the fabric for OOD

Set the three settings of IOD, APT, and DLS using the **iodreset**, **aptpolicy**, and **dlsset** commands as shown in the following example:

```
Switch_A_1:admin> iodreset
Switch_A_1:admin> aptpolicy 3
Policy updated successfully.
Switch_A_1:admin> dlsset
FC_switch_A_1:admin>
portcfgtrunkport 40 0
FC_switch_A_1:admin>
portcfgtrunkport 41 0
```

```
Switch_B_1:admin> iodreset
Switch_B_1:admin> aptpolicy 3
Policy updated successfully.
Switch_B_1:admin> dlsset
FC_switch_B_1:admin>
portcfgtrunkport 40 0
FC_switch_B_1:admin>
portcfgtrunkport 41 0
```

- d. Enable the switches persistently using the **switchcfgpersistenable** command.

```
switch_A_1:admin>switchcfgpersistenable
switch_B_1:admin>switchcfgpersistenable
```

If this command does not exist, use the **switchenable** command as shown in the following example:

```
brocade_switch_A_1:admin>
switchenable
```

- e. Verify the OOD settings using the **iodshow**, **aptpolicy**, and **dlsshow** commands as shown in the following example:

```
switch_A_1:admin> iodshow
IOD is not set

switch_A_1:admin> aptpolicy

        Current Policy: 3 0(ap)

            3 0(ap) : Default Policy
            1: Port Based Routing Policy
            3: Exchange Based Routing Policy
                0: AP Shared Link Policy
                1: AP Dedicated Link Policy
            command aptpolicy completed

switch_A_1:admin> dlsshow
DLS is set by default with current routing policy
```



You must run these commands on both switches.

- f. Verify the IOD settings using the **iodshow**, **aptpolicy**, and **dlsshow** commands as shown in the following example:

```
switch_A_1:admin> iodshow
IOD is set

switch_A_1:admin> aptpolicy
        Current Policy: 1 0(ap)

            3 0(ap) : Default Policy
            1: Port Based Routing Policy
            3: Exchange Based Routing Policy
                0: AP Shared Link Policy
                1: AP Dedicated Link Policy
            command aptpolicy completed

switch_A_1:admin> dlsshow
DLS is not set
```



You must run these commands on both switches.

4. Verify that the ISLs are online and trunked (if the linking equipment supports trunking) using the **islshow** and **trunkshow** commands.



If FEC is enabled, the deskew value of the last online port of the trunk group might show a difference of up to 36 although the cables are all of the same length.

Are ISLs trunked?	You see the following system output...
Yes	<p>If the ISLs are trunked, only a single ISL appears in the output for the <b>islshow</b> command. Either port 40 or 41 can appear depending on which is the trunk master. The output of <b>trunkshow</b> should one trunk with ID '1' listing both the physical ISLs on ports 40 and 41. In the following example the ports 40 and 41 are configured for use as an ISL:</p> <pre data-bbox="878 608 1468 988">switch_A_1:admin&gt; islshow 1: 40-&gt; 40 10:00:00:05:33:88:9c:68 2 switch_B_1 sp: 16.000G bw: 32.000G TRUNK CR_RECov FEC switch_A_1:admin&gt; trunkshow 1: 40-&gt; 40 10:00:00:05:33:88:9c:68 2 deskew 51 MASTER 41-&gt; 41 10:00:00:05:33:88:9c:68 2 deskew 15</pre>

Are ISLs trunked?	You see the following system output...
No	<p>If the ISLs are not trunked, both ISLs appear separately in the outputs for <b>islshow</b> and <b>trunkshow</b>. Both commands list the ISLs with their ID of '1' and '2'. In the following example, the ports 40 and 41 are configured for use as an ISL:</p> <pre data-bbox="878 403 1445 1036"> switch_A_1:admin&gt; islshow 1: 40-&gt; 40 10:00:00:05:33:88:9c:68 2 switch_B_1 sp: 16.000G bw: 16.000G TRUNK CR_RECov FEC 2: 41-&gt; 41 10:00:00:05:33:88:9c:68 2 switch_B_1 sp: 16.000G bw: 16.000G TRUNK CR_RECov FEC switch_A_1:admin&gt; trunkshow 1: 40-&gt; 40 10:00:00:05:33:88:9c:68 2 deskew 51 MASTER 2: 41-&gt; 41 10:00:00:05:33:88:9c:68 2 deskew 48 MASTER </pre>

- Run the **spinfab** command on both switches to verify that the ISLs are healthy:

```
switch_A_1:admin> spinfab -ports 0/40 - 0/41
```

- Enable the ports that were disabled in step 1:

**portenable port number**

The following example shows ISL ports 0—7 being enabled:

```
brocade_switch_A_1:admin> portenable 0-7
```

## Replacing a Cisco FC switch

You must use Cisco-specific steps to replace a failed Cisco FC switch.

You need the admin password and access to an FTP or SCP server.

This procedure is nondisruptive and takes approximately two hours to complete.

In the examples in this procedure, FC\_switch\_A\_1 is the healthy switch and FC\_switch\_B\_1 is the impaired switch. The switch port usage in the examples is shown in the following table:

Role	Ports
FC-VI connections	1, 4
HBA connections	2, 3, 5, 6
FC-to-SAS bridge connections	7, 8
ISL connections	36, 40

The examples show two FC-to-SAS bridges. If you have more, you must disable and subsequently enable the additional ports.

Your switch port usage should follow the recommended assignments.

- [Port assignments for FC switches when using ONTAP 9.0](#)
- [Port assignments for FC switches when using ONTAP 9.1 and later](#)

## Steps

1. Disable the ISL ports on the healthy switch to fence off the impaired switch.

These steps are performed on the healthy switch.

- a. Enter configuration mode:

```
conf t
```

- b. Disable the ISL ports on the healthy switch with the `interface` and `shut` commands.

```
FC_switch_A_1# conf t
FC_switch_A_1(config)# interface fc1/36
FC_switch_A_1(config)# shut
FC_switch_A_1(config)# interface fc1/40
FC_switch_A_1(config)# shut
```

- c. Exit configuration mode and copy the configuration to the startup configuration.

```
FC_switch_A_1(config)# end
FC_switch_A_1# copy running-config startup-config
FC_switch_A_1#
```

2. Fence off the FC-VI and HBA ports on the impaired switch (if it is still running).

These steps are performed on the impaired switch.

- a. Enter configuration mode:

```
conf t
```

- b. If the impaired switch is still operational, disable the FC-VI and HBA ports on the impaired switch with the interface and shut commands.

```
FC_switch_B_1(config)# interface fc1/1
FC_switch_B_1(config)# shut
FC_switch_B_1(config)# interface fc1/4
FC_switch_B_1(config)# shut
FC_switch_B_1(config)# interface fc1/2-3
FC_switch_B_1(config)# shut
FC_switch_B_1(config)# interface fc1/5-6
FC_switch_B_1(config)# shut
```

- c. Exit configuration mode and copy the configuration to the startup configuration.

```
FC_switch_B_1(config)# end
FC_switch_B_1# copy running-config startup-config
FC_switch_B_1#
```

3. If the impaired switch is still operational, determine the WWN for the switch:

```
show wwn switch
```

```
FC_switch_B_1# show wwn switch
Switch WWN is 20:00:54:7f:ee:e3:86:50
FC_switch_B_1#
```

4. Boot and preconfigure the replacement switch, prior to physically installing it.

At this point the replacement switch is not cabled to the MetroCluster configuration. The ISL ports on the partner switch are disabled (in shut mode) and offline.

- a. Power on the replacement switch and let it boot up.

- b. Check the firmware version on the replacement switch to confirm that it matches the version of the other FC switches:

```
show version
```

- c. Configure the replacement switch as described in the *MetroCluster Installation and Configuration Guide*, skipping the “Configuring zoning on a Cisco FC switch” section.

#### [Fabric-attached MetroCluster installation and configuration](#)

You will configure zoning later in this procedure.

- d. Disable the FC-VI, HBA, and storage ports on the replacement switch.

```

FC_switch_B_1# conf t
FC_switch_B_1(config)# interface fc1/1
FC_switch_B_1(config)# shut
FC_switch_B_1(config)# interface fc1/4
FC_switch_B_1(config)# shut
FC_switch_B_1(config)# interface fc1/2-3
FC_switch_B_1(config)# shut
FC_switch_B_1(config)# interface fc1/5-6
FC_switch_B_1(config)# shut
FC_switch_B_1(config)# interface fc1/7-8
FC_switch_B_1(config)# shut
FC_switch_B_1# copy running-config startup-config
FC_switch_B_1#

```

5. Physically replace the impaired switch:

- Power off the impaired switch.
- Power off the replacement switch.
- Uncable and remove the impaired switch, carefully noting which cables connected to which ports.
- Install the replacement switch in the rack.
- Cable the replacement switch exactly as the impaired switch was cabled.
- Power on the replacement switch.

6. Enable the ISL ports on the replacement switch.

```

FC_switch_B_1# conf t
FC_switch_B_1(config)# interface fc1/36
FC_switch_B_1(config)# no shut
FC_switch_B_1(config)# end
FC_switch_B_1# copy running-config startup-config
FC_switch_B_1(config)# interface fc1/40
FC_switch_B_1(config)# no shut
FC_switch_B_1(config)# end
FC_switch_B_1#

```

7. Verify that the ISL ports on the replacement switch are up:

**show interface brief**

8. Adjust the zoning on the replacement switch to match the MetroCluster configuration:

- Distribute the zoning information from the healthy fabric.

In this example, FC\_switch\_B\_1 has been replaced and the zoning information is retrieved from FC\_switch\_A\_1:

```
FC_switch_A_1(config-zone)# zoneset distribute full vsan 10
FC_switch_A_1(config-zone)# zoneset distribute full vsan 20
FC_switch_A_1(config-zone)# end
```

- b. On the replacement switch, verify that the zoning information was properly retrieved from the healthy switch:

**show zone**

```
FC_switch_B_1# show zone
zone name FC-VI_Zone_1_10 vsan 10
  interface fc1/1 swnn 20:00:54:7f:ee:e3:86:50
  interface fc1/4 swnn 20:00:54:7f:ee:e3:86:50
  interface fc1/1 swnn 20:00:54:7f:ee:b8:24:c0
  interface fc1/4 swnn 20:00:54:7f:ee:b8:24:c0

zone name STOR_Zone_1_20_25A vsan 20
  interface fc1/2 swnn 20:00:54:7f:ee:e3:86:50
  interface fc1/3 swnn 20:00:54:7f:ee:e3:86:50
  interface fc1/5 swnn 20:00:54:7f:ee:e3:86:50
  interface fc1/6 swnn 20:00:54:7f:ee:e3:86:50
  interface fc1/2 swnn 20:00:54:7f:ee:b8:24:c0
  interface fc1/3 swnn 20:00:54:7f:ee:b8:24:c0
  interface fc1/5 swnn 20:00:54:7f:ee:b8:24:c0
  interface fc1/6 swnn 20:00:54:7f:ee:b8:24:c0

zone name STOR_Zone_1_20_25B vsan 20
  interface fc1/2 swnn 20:00:54:7f:ee:e3:86:50
  interface fc1/3 swnn 20:00:54:7f:ee:e3:86:50
  interface fc1/5 swnn 20:00:54:7f:ee:e3:86:50
  interface fc1/6 swnn 20:00:54:7f:ee:e3:86:50
  interface fc1/2 swnn 20:00:54:7f:ee:b8:24:c0
  interface fc1/3 swnn 20:00:54:7f:ee:b8:24:c0
  interface fc1/5 swnn 20:00:54:7f:ee:b8:24:c0
  interface fc1/6 swnn 20:00:54:7f:ee:b8:24:c0
FC_switch_B_1#
```

- c. Find the WWNs of the switches.

In this example, the two switch WWNs are as follows:

- FC\_switch\_A\_1: 20:00:54:7f:ee:b8:24:c0
- FC\_switch\_B\_1: 20:00:54:7f:ee:c6:80:78

```

FC_switch_B_1# show wwn switch
Switch WWN is 20:00:54:7f:ee:c6:80:78
FC_switch_B_1#

FC_switch_A_1# show wwn switch
Switch WWN is 20:00:54:7f:ee:b8:24:c0
FC_switch_A_1#

```

- d. Remove zone members that do not belong to the switch WWNs of the two switches.

In this example, `no member interface` in the output shows that the following members are not associated with the switch WWN of either of the switches in the fabric and must be removed:

- zone name FC-VI\_Zone\_1\_10 vsan 10
  - interface fc1/1 swnn 20:00:54:7f:ee:e3:86:50
  - interface fc1/2 swnn 20:00:54:7f:ee:e3:86:50
- zone name STOR\_Zone\_1\_20\_25A vsan 20
  - interface fc1/5 swnn 20:00:54:7f:ee:e3:86:50
  - interface fc1/8 swnn 20:00:54:7f:ee:e3:86:50
  - interface fc1/9 swnn 20:00:54:7f:ee:e3:86:50
  - interface fc1/10 swnn 20:00:54:7f:ee:e3:86:50
  - interface fc1/11 swnn 20:00:54:7f:ee:e3:86:50
- zone name STOR\_Zone\_1\_20\_25B vsan 20
  - interface fc1/8 swnn 20:00:54:7f:ee:e3:86:50
  - interface fc1/9 swnn 20:00:54:7f:ee:e3:86:50
  - interface fc1/10 swnn 20:00:54:7f:ee:e3:86:50
  - interface fc1/11 swnn 20:00:54:7f:ee:e3:86:50 The following example shows the removal of these interfaces:

```

FC_switch_B_1# conf t
FC_switch_B_1(config)# zone name FC-VI_Zone_1_10 vsan 10
FC_switch_B_1(config-zone)# no member interface fc1/1 swwn
20:00:54:7f:ee:e3:86:50
FC_switch_B_1(config-zone)# no member interface fc1/2 swwn
20:00:54:7f:ee:e3:86:50
FC_switch_B_1(config-zone)# zone name STOR_Zone_1_20_25A vsan 20
FC_switch_B_1(config-zone)# no member interface fc1/5 swwn
20:00:54:7f:ee:e3:86:50
FC_switch_B_1(config-zone)# no member interface fc1/8 swwn
20:00:54:7f:ee:e3:86:50
FC_switch_B_1(config-zone)# no member interface fc1/9 swwn
20:00:54:7f:ee:e3:86:50
FC_switch_B_1(config-zone)# no member interface fc1/10 swwn
20:00:54:7f:ee:e3:86:50
FC_switch_B_1(config-zone)# no member interface fc1/11 swwn
20:00:54:7f:ee:e3:86:50
FC_switch_B_1(config-zone)# zone name STOR_Zone_1_20_25B vsan 20
FC_switch_B_1(config-zone)# no member interface fc1/8 swwn
20:00:54:7f:ee:e3:86:50
FC_switch_B_1(config-zone)# no member interface fc1/9 swwn
20:00:54:7f:ee:e3:86:50
FC_switch_B_1(config-zone)# no member interface fc1/10 swwn
20:00:54:7f:ee:e3:86:50
FC_switch_B_1(config-zone)# no member interface fc1/11 swwn
20:00:54:7f:ee:e3:86:50
FC_switch_B_1(config-zone)# save running-config startup-config
FC_switch_B_1(config-zone)# zoneset distribute full 10
FC_switch_B_1(config-zone)# zoneset distribute full 20
FC_switch_B_1(config-zone)# end
FC_switch_B_1# copy running-config startup-config

```

- Add the ports of the replacement switch to the zones.

All the cabling on the replacement switch must be the same as on the impaired switch:

```

FC_switch_B_1# conf t
FC_switch_B_1(config)# zone name FC-VI_Zone_1_10 vsan 10
FC_switch_B_1(config-zone)# member interface fc1/1 swwn
20:00:54:7f:ee:c6:80:78
FC_switch_B_1(config-zone)# member interface fc1/2 swwn
20:00:54:7f:ee:c6:80:78
FC_switch_B_1(config-zone)# zone name STOR_Zone_1_20_25A vsan 20
FC_switch_B_1(config-zone)# member interface fc1/5 swwn
20:00:54:7f:ee:c6:80:78
FC_switch_B_1(config-zone)# member interface fc1/8 swwn
20:00:54:7f:ee:c6:80:78
FC_switch_B_1(config-zone)# member interface fc1/9 swwn
20:00:54:7f:ee:c6:80:78
FC_switch_B_1(config-zone)# member interface fc1/10 swwn
20:00:54:7f:ee:c6:80:78
FC_switch_B_1(config-zone)# member interface fc1/11 swwn
20:00:54:7f:ee:c6:80:78
FC_switch_B_1(config-zone)# zone name STOR_Zone_1_20_25B vsan 20
FC_switch_B_1(config-zone)# member interface fc1/8 swwn
20:00:54:7f:ee:c6:80:78
FC_switch_B_1(config-zone)# member interface fc1/9 swwn
20:00:54:7f:ee:c6:80:78
FC_switch_B_1(config-zone)# member interface fc1/10 swwn
20:00:54:7f:ee:c6:80:78
FC_switch_B_1(config-zone)# member interface fc1/11 swwn
20:00:54:7f:ee:c6:80:78
FC_switch_B_1(config-zone)# save running-config startup-config
FC_switch_B_1(config-zone)# zoneset distribute full 10
FC_switch_B_1(config-zone)# zoneset distribute full 20
FC_switch_B_1(config-zone)# end
FC_switch_B_1# copy running-config startup-config

```

- b. Verify that the zoning is properly configured:

**show zone**

The following example output shows the three zones:

```

FC_switch_B_1# show zone
zone name FC-VI_Zone_1_10 vsan 10
  interface fc1/1 swwn 20:00:54:7f:ee:c6:80:78
  interface fc1/2 swwn 20:00:54:7f:ee:c6:80:78
  interface fc1/1 swwn 20:00:54:7f:ee:b8:24:c0
  interface fc1/2 swwn 20:00:54:7f:ee:b8:24:c0

zone name STOR_Zone_1_20_25A vsan 20
  interface fc1/5 swwn 20:00:54:7f:ee:c6:80:78
  interface fc1/8 swwn 20:00:54:7f:ee:c6:80:78
  interface fc1/9 swwn 20:00:54:7f:ee:c6:80:78
  interface fc1/10 swwn 20:00:54:7f:ee:c6:80:78
  interface fc1/11 swwn 20:00:54:7f:ee:c6:80:78
  interface fc1/8 swwn 20:00:54:7f:ee:b8:24:c0
  interface fc1/9 swwn 20:00:54:7f:ee:b8:24:c0
  interface fc1/10 swwn 20:00:54:7f:ee:b8:24:c0
  interface fc1/11 swwn 20:00:54:7f:ee:b8:24:c0

zone name STOR_Zone_1_20_25B vsan 20
  interface fc1/8 swwn 20:00:54:7f:ee:c6:80:78
  interface fc1/9 swwn 20:00:54:7f:ee:c6:80:78
  interface fc1/10 swwn 20:00:54:7f:ee:c6:80:78
  interface fc1/11 swwn 20:00:54:7f:ee:c6:80:78
  interface fc1/5 swwn 20:00:54:7f:ee:b8:24:c0
  interface fc1/8 swwn 20:00:54:7f:ee:b8:24:c0
  interface fc1/9 swwn 20:00:54:7f:ee:b8:24:c0
  interface fc1/10 swwn 20:00:54:7f:ee:b8:24:c0
  interface fc1/11 swwn 20:00:54:7f:ee:b8:24:c0

FC_switch_B_1#

```

c. Enable the connectivity to storage and the controllers.

The following example shows the port usage:

```

FC_switch_A_1# conf t
FC_switch_A_1(config)# interface fc1/1
FC_switch_A_1(config)# no shut
FC_switch_A_1(config)# interface fc1/4
FC_switch_A_1(config)# shut
FC_switch_A_1(config)# interface fc1/2-3
FC_switch_A_1(config)# shut
FC_switch_A_1(config)# interface fc1/5-6
FC_switch_A_1(config)# shut
FC_switch_A_1(config)# interface fc1/7-8
FC_switch_A_1(config)# shut
FC_switch_A_1# copy running-config startup-config
FC_switch_A_1#

```

9. Verify the operation of the MetroCluster configuration in ONTAP:

- a. Check whether the system is multipathed:

```
node run -node node-name sysconfig -a
```

- b. Check for any health alerts on both clusters:

```
system health alert show
```

- c. Confirm the MetroCluster configuration and that the operational mode is normal:

```
metrocluster show
```

- d. Perform a MetroCluster check:

```
metrocluster check run
```

- e. Display the results of the MetroCluster check:

```
metrocluster check show
```

- f. Check for any health alerts on the switches (if present):

```
storage switch show
```

- g. Run Config Advisor.

[NetApp Downloads: Config Advisor](#)

- h. After running Config Advisor, review the tool's output and follow the recommendations in the output to address any issues discovered.

## Changing speed of ISL ports on a Cisco FC switch

You might need to change the speed of ISL ports on a switch to improve the quality of the ISL. ISLs traveling greater distances might need their speed lowered to improve quality.

You must complete all the steps on both switches to ensure ISL connectivity.

1. Disable the ISL ports of the ISLs that you want to change the speed of on both switches in the fabric:

```
FC_switch_A_1# config t
```

Enter configuration commands, one per line. End with CTRL-Z after you have entered all of the configuration commands.

```
FC_switch_A_1(config)# interface fc1/36  
FC_switch_A_1(config-if)# shut  
FC_switch_A_1(config)# end
```

2. Change the speed of the ISL ports on both switches in the fabric:

```
FC_switch_A_1# config t
```

Enter configuration commands, one per line. End with CTRL-Z after you have entered all of the configuration commands.

```
FC_switch_A_1(config)# interface fc1/36  
FC_switch_A_1(config-if)# switchport speed 16000
```



Speeds for ports are 16 = 16,000 Gbps, 8 = 8,000 Gbps, 4 = 4,000 Gbps.

Ensure that these ISL ports for your switch are listed in the *Fabric-attached MetroCluster Installation and Configuration Guide*.

3. Enable all ISL ports (if not enabled) on both switches in the fabric:

```
FC_switch_A_1# config t
```

Enter configuration commands, one per line. End with CTRL-Z after you have entered all of the configuration commands.

```
FC_switch_A_1(config)# interface fc1/36  
FC_switch_A_1(config-if)# no shut  
FC_switch_A_1(config)# end
```

4. Verify the ISLs are established between both switches:

```
show topology isl
```

I/F	Local PC Domain	SwName	Port	Port	Remote SwName	Domain	PC	VSAN	Cost	I/F	PC
	Speed	width							Stat	Stat	
16g	1 64g	0x11 cisco9	fc1/36	fc1/36	cisco9	0xbc		1	1	15	up
16g	1 64g	0x11 cisco9	fc1/40	fc1/40	cisco9	0xbc		1	1	15	up
16g	1 64g	0x11 cisco9	fc1/44	fc1/44	cisco9	0xbc		1	1	15	up
16g	1 64g	0x11 cisco9	fc1/48	fc1/48	cisco9	0xbc		1	1	15	up

5. Repeat the procedure for the second switch fabric.

## Adding ISLs to a Cisco switch

You might need to add ISLs to a switch if you are adding or upgrading hardware such as additional or faster controllers or faster switches.

Steps that are completed on one switch must also be completed on the other to ensure ISL connectivity.

1. Disable the ISL ports of the ISLs to be added on both switches in the fabric:

```
FC_switch_A_1#config t
```

Enter the configuration commands, one per line. End with CTRL-Z after all the configuration commands have been entered.

```
FC_switch_A_1(config)# interface fc1/36
FC_switch_A_1(config-if)# shut
FC_switch_A_1(config)# end
```

2. Insert SFPs into the ports you are adding as ISL ports, and cable them according to the *Installation and Configuration Guide*.

Ensure that these ports are listed in the *Installation and Configuration Guide* for the switch you are adding them to.

3. Configure the ISL ports in accordance with the *Installation and Configuration Guide*.
4. Enable all ISL ports (if not enabled) on both switches in the fabric:

```
FC_switch_A_1# config t
```

Enter the configuration commands, one per line. End with CTRL-Z.

```
FC_switch_A_1# interface fc1/36
  FC_switch_A_1(config-if)# no shut
  FC_switch_A_1(config)# end
```

5. Verify the ISLs are established between both switches:

```
show topology isl
```

6. Repeat the procedure on the second fabric:

I/F	Band	Local			Remote			VSAN	Cost	I/F	PC
		PC	Domain	SwName	Port	Port	SwName	Domain	PC	Stat	Stat
		Speed	width								
<hr/>											
16g	64g	1	0x11	cisco9	fc1/36	fc1/36	cisco9	0xbc	1	1	15 up up
16g	64g	1	0x11	cisco9	fc1/40	fc1/40	cisco9	0xbc	1	1	15 up up
16g	64g	1	0x11	cisco9	fc1/44	fc1/44	cisco9	0xbc	1	1	15 up up
16g	64g	1	0x11	cisco9	fc1/48	fc1/48	cisco9	0xbc	1	1	15 up up
16g	64g										

## Performing IP switch maintenance and replacement


If necessary, you can nondisruptively upgrade, downgrade, or replace the IP switches in a MetroCluster configuration.

### Replacing an IP switch

You might need to replace a failed switch, or upgrade or downgrade a switch. The new switch can be the same as the old switch when a switch has failed, or you can change the switch type (upgrade or downgrade the switch).

If you want to replace a failed switch with the same type of switch, you only need to replace the failed switch. If you want to upgrade or downgrade a switch, you need to adjust two switches that are in the same network.

Two switches are in the same network if they are connected with an inter-switch link (ISL) and are not located at the same site. For example, Network 1 includes IP\_switch\_A\_1 and IP\_switch\_B\_1. Network 2 includes IP\_switch\_A\_2 and IP\_switch\_B\_2 as shown in the diagram below:

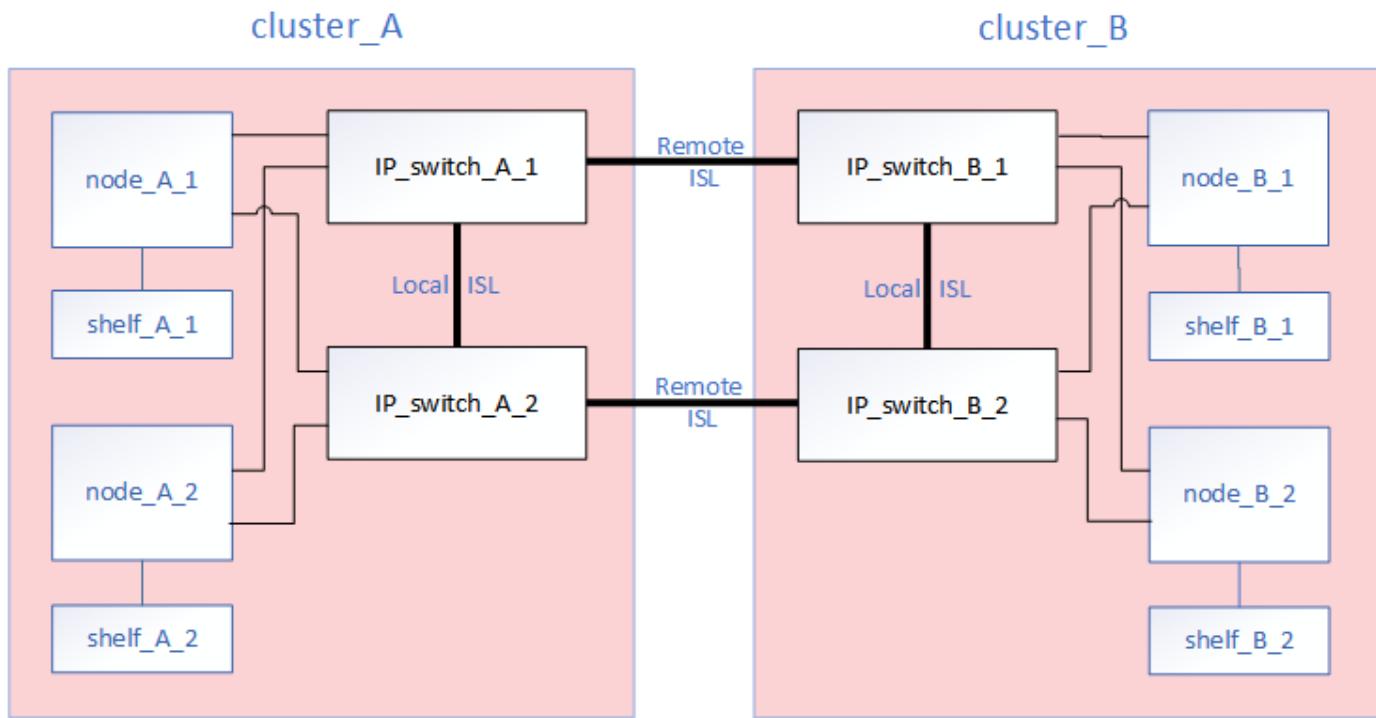

This procedure is for Cisco or Broadcom switches. If you want to change the switch vendor, further steps are required.

If you upgrade or downgrade the networks, you must repeat this procedure for the second network.

## Steps

1. Check the health of the configuration.
  - a. Check that the MetroCluster is configured and in normal mode on each cluster: `metrocluster show`

```

cluster_A::> metrocluster show
Cluster          Entry Name      State
-----
Local: cluster_A Configuration state configured
Mode           normal
AUSO Failure Domain auso-on-cluster-
disaster
Remote: cluster_B Configuration state configured
Mode           normal
AUSO Failure Domain auso-on-cluster-
disaster

```

- b. Check that mirroring is enabled on each node: `metrocluster node show`

```

cluster_A::> metrocluster node show
DR                               Configuration  DR
Group Cluster Node      State      Mirroring Mode
-----
-----
1   cluster_A
      node_A_1      configured    enabled    normal
  cluster_B
      node_B_1      configured    enabled    normal
2 entries were displayed.

```

- c. Check that the MetroCluster components are healthy: **metrocluster check run**

```

cluster_A::> metrocluster check run

Last Checked On: 10/1/2014 16:03:37

Component          Result
-----
nodes             ok
lifs              ok
config-replication ok
aggregates        ok
4 entries were displayed.

```

Command completed. Use the "metrocluster check show -instance" command or sub-commands in "metrocluster check" directory for detailed results.

To check if the nodes are ready to do a switchover or switchback operation, run "metrocluster switchover -simulate" or "metrocluster switchback -simulate", respectively.

- d. Check that there are no health alerts: **system health alert show**

2. Configure the new switch before installation.



If you are upgrading or downgrading the switches, you must configure all the switches in the network.

Follow the steps in the section *Configuring the IP switches* in the [MetroCluster IP Installation and Configuration Guide](#).

Make sure that you apply the correct RCF file for switch \_A\_1, \_A\_2, \_B\_1 or \_B\_2. If the new switch is the same as the old switch, you need to apply the same RCF file.

If you upgrade or downgrade a switch, apply the latest supported RCF file for the new switch.

3. Run the port show command to view information about the network ports:

```
network port show
```

4. Disconnect the ISL connections from the remote switch that connect to the old switch.

You should disconnect the ISL connections from the ports on the IP\_switch\_A\_1 that connect to IP\_switch\_B\_1.

5. Power off the switch, remove the cables and physically remove IP\_switch\_B\_1.

6. Install the new switch.

Cable the new switch first (including the ISLs) according to the steps in the *Cabling the IP switches* section in the [MetroCluster IP Installation and Configuration Guide](#).

The used ports might be different from those on the old switch if the switch type is different.



+ If you are upgrading or downgrading the switches, do **NOT** cable the local ISLs. Only cable the local ISLs if you are upgrading or downgrading the switches in the second network and both switches at one site are the same type.

7. Power up the switch or switches.

If the new switch is the same, power up the new switch. If you are upgrading or downgrading the switches, then power up both switches. The configuration can operate with two different switches at each site until the second network is updated.

8. Verify that the MetroCluster configuration is healthy by repeating step 1.

If you are upgrading or downgrading the switches in the first network, you might see some alerts related to local clustering.



If you upgrade or downgrade the networks, then repeat all of the steps for the second network.

## Upgrading firmware on MetroCluster IP switches

### Steps

1. Check the health of the configuration.
  - a. Check that the MetroCluster is configured and in normal mode on each cluster: `metrocluster show`

```

cluster_A::> metrocluster show
Cluster           Entry Name      State
-----
Local: cluster_A   Configuration state configured
                           Mode          normal
                           AUSO Failure Domain auso-on-cluster-
disaster
Remote: cluster_B  Configuration state configured
                           Mode          normal
                           AUSO Failure Domain auso-on-cluster-
disaster

```

- b. Check that mirroring is enabled on each node: **metrocluster node show**

```

cluster_A::> metrocluster node show
DR           Configuration DR
Group Cluster Node  State      Mirroring Mode
-----
-----
1   cluster_A
      node_A_1     configured   enabled    normal
  cluster_B
      node_B_1     configured   enabled    normal
2 entries were displayed.

```

- c. Check that the MetroCluster components are healthy: **metrocluster check run**

```

cluster_A::> metrocluster check run

Last Checked On: 10/1/2014 16:03:37

Component           Result
-----
nodes               ok
lifs                ok
config-replication ok
aggregates         ok
4 entries were displayed.

```

Command completed. Use the "metrocluster check show -instance" command or sub-commands in "metrocluster check" directory for detailed results.

To check if the nodes are ready to do a switchover or switchback operation, run "metrocluster switchover -simulate" or "metrocluster switchback -simulate", respectively.

- d. Check that there are no health alerts: **system health alert show**
2. Install the software on the first switch.

Follow the steps for installing switch software in the relevant section in the *MetroCluster IP Installation and Configuration Guide* depending on whether the switch type is Cisco or Broadcom:

#### [Configure the IP switches](#)

Repeat this step for each of the switches.

1. Repeat step 1 to check the health of the configuration.

### **Upgrading RCF files on MetroCluster IP switches**

You might need to upgrade an RCF file on a MetroCluster IP switch. For example, an ONTAP upgrade or a switch firmware upgrade both require a new RCF file.

If you are installing new switch firmware, you must install the switch firmware before upgrading the RCF file.

This procedure disrupts traffic on the switch where the RCF file is upgraded. Traffic will resume once the new RCF file is applied.

#### **Steps**

1. Verify the health of the configuration.
  - a. Verify that the MetroCluster components are healthy:

```
metrocluster check run
```

```
cluster_A::*> metrocluster check run
```

The operation runs in the background.

- a. After the `metrocluster check run` operation completes, run `metrocluster check show` to view the results.

After approximately five minutes, the following results are displayed:

```
-----
::*> metrocluster check show

Last Checked On: 4/7/2019 21:15:05

Component          Result
-----
nodes              ok
lifs               ok
config-replication ok
aggregates         warning
clusters           ok
connections        not-applicable
volumes            ok
7 entries were displayed.
```

- b. To check the status of the running MetroCluster check operation, use the command:

```
metrocluster operation history show -job-id 38
```

- c. Verify that there are no health alerts:

```
system health alert show
```

2. Prepare the IP switches for the application of the new RCF files.

Follow the steps in the section for your switch vendor from the *MetroCluster IP Installation and Configuration guide*.

#### [MetroCluster IP installation and configuration](#)

- *Resetting the Broadcom IP switch to factory defaults*
- *Resetting the Cisco IP switch to factory defaults*

3. Download and install the IP RCF file depending on your switch vendor.

Follow the steps in the section for your switch vendor from the *MetroCluster IP Installation and Configuration guide*.

#### [MetroCluster IP installation and configuration](#)

- *Downloading and installing the Broadcom IP RCF files*

- Downloading and installing the Cisco IP RCF files
- a. Update the switches in the following order: Switch\_A\_1, Switch\_B\_1, Switch\_A\_2, Switch\_B\_2.

## Renaming a Cisco IP switch

You might need to rename a Cisco IP switch to provide consistent naming throughout your configuration.

In the examples in this task, the switch name is changed from `myswitch` to `IP_switch_A_1`.

1. Enter global configuration mode:

```
configure terminal
```

The following example shows the configuration mode prompt. Both prompts show the switch name of `myswitch`.

```
myswitch# configure terminal  
myswitch(config) #
```

2. Rename the switch:

```
switchname new-switch-name
```

If you are renaming both switches in the fabric, use the same command on each switch.

The CLI prompt changes to reflect the new name:

```
myswitch(config) # switchname IP_switch_A_1  
IP_switch_A_1(config) #
```

3. Exit configuration mode:

```
exit
```

The top-level switch prompt is displayed:

```
IP_switch_A_1(config) # exit  
IP_switch_A_1#
```

4. Copy the current running configuration to the startup configuration file:

```
copy running-config startup-config
```

5. Verify that the switch name change is visible from the ONTAP cluster prompt.

Note that the new switch name is shown, and the old switch name (`myswitch`) does not appear.

- a. Enter advanced privilege mode, pressing **y** when prompted:

```
set -privilege advanced
```

- b. Display the attached devices:

```
network device-discovery show
```

- c. Return to admin privilege mode:

```
set -privilege admin
```

The following example shows that the switch appears with the new name, **IP\_switch\_A\_1**:

```

cluster_A::storage show> set advanced

Warning: These advanced commands are potentially dangerous; use them
only when directed to do so by NetApp personnel.
Do you want to continue? {y|n}: y

cluster_A::storage show*> network device-discovery show
Node/      Local   Discovered
Protocol    Port    Device           Interface
Platform

-----
-----
node_A_2/cdp
    e0M     LF01-410J53.mycompany.com(SAL18516DZY)
                           Ethernet125/1/28  N9K-
C9372PX
    e1a     IP_switch_A_1(FOC21211RBU)
                           Ethernet1/2          N3K-
C3232C
    e1b     IP_switch_A_1(FOC21211RBU)
                           Ethernet1/10         N3K-
C3232C
    .
    .
    .
                           Ethernet1/18         N9K-
C9372PX
node_A_1/cdp
    e0M     LF01-410J53.mycompany.com(SAL18516DZY)
                           Ethernet125/1/26  N9K-
C9372PX
    e0a     IP_switch_A_2(FOC21211RB5)
                           Ethernet1/1          N3K-
C3232C
    e0b     IP_switch_A_2(FOC21211RB5)
                           Ethernet1/9          N3K-
C3232C
    e1a     IP_switch_A_1(FOC21211RBU)
    .
    .
    .

16 entries were displayed.

```

# Adding, removing, or changing ISL ports nondisruptively

You might need to add, remove, or change ISL ports. You can convert dedicated ISL ports to shared ISL ports, or change the speed of ISL ports on a switch. ISLs traveling greater distances might require lower speeds to improve quality. You also might need to increase the speed of ISL ports to take advantage of system upgrades and add ISLs to a Cisco IP switch if you are adding or upgrading hardware.

If you are converting dedicated ISL ports to shared ISL ports, ensure the new ports meet the requirements for shared ISL ports.

## Considerations for sharing private layer 2 networks

You must complete all the steps on both switches to ensure ISL connectivity.

The following procedure assumes you are replacing a 10-Gb ISL connected at switch port Eth1/24/1 with two 100-Gb ISLs that are connected to switch ports 17 and 18.

### Steps

1. Disable the ISL ports of the ISLs on both switches in the fabric that you want to change.



You only need to disable the current ISL ports if you are moving them to a different port, or the speed of the ISL is changing. If you are adding an ISL port with the same speed as the existing ISLs, go to Step 3.

You must enter only one configuration command for each line and press Ctrl-Z after you have entered all the commands, as shown in the following example:

```
switch_A_1# conf t
switch_A_1(config)# int eth1/24/1
switch_A_1(config-if)# shut
switch_A_1(config-if)#
switch_A_1#

switch_B_1# conf t
switch_B_1(config)# int eth1/24/1
switch_B_1(config-if)# shut
switch_B_1(config-if)#
switch_B_1#
```

2. Remove the existing cables and transceivers.
3. Change the ISL port as required.

Option	Step
To change the speed of an ISL port...	Cable the new ISLs to the designated ports according to their speeds. You must ensure that these ISL ports for your switch are listed in the <i>MetroCluster IP Installation and Configuration Guide</i> .
To add an ISL...	Insert QFSPs into the ports you are adding as ISL ports. Ensure they are listed in the <i>MetroCluster IP Installation and Configuration Guide</i> and cable them according to this guide.

4. Enable all ISL ports (if not enabled) on both switches in the fabric beginning with the following command:

```
switch_A_1# conf t
```

You must enter only one configuration command per line and press Ctrl-Z after you have entered all the commands:

```
switch_A_1# conf t
switch_A_1(config)# int eth1/17
switch_A_1(config-if)# no shut
switch_A_1(config-if)# int eth1/18
switch_A_1(config-if)# no shut
switch_A_1(config-if)#
switch_A_1#
switch_A_1# copy running-config startup-config

switch_B_1# conf t
switch_B_1(config)# int eth1/17
switch_B_1(config-if)# no shut
switch_B_1(config-if)# int eth1/18
switch_B_1(config-if)# no shut
switch_B_1(config-if)#
switch_B_1#
switch_B_1# copy running-config startup-config
```

5. Verify that the ISLs are established between both switches:

```
switch_A_1# show int eth1/17,eth1/18 brief
```

You should see the ISL interfaces in the command output as shown in the following example:

```

switch_A_1# show int eth1/17,eth1/18 brief
-----
-----
Ethernet      VLAN     Type Mode   Status  Reason           Speed
Port
Interface
Ch #
-----
-----
Eth1/17        10       eth    access   up      none
100G(D) 10
Eth1/18        10       eth    access   up      none
100G(D) 10

switch_B_1# show int eth1/17,eth1/18 brief
-----
-----
Ethernet      VLAN     Type Mode   Status  Reason           Speed
Port
Interface
Ch #
-----
-----
Eth1/17        10       eth    access   up      none
100G(D) 10
Eth1/18        10       eth    access   up      none
100G(D) 10

```

6. Repeat the procedure for fabric 2.

## Identifying storage in a MetroCluster IP configuration

If you need to replace a drive or shelf module, you first need to identify the location.

### Identification of local and remote shelves

When you view shelf information from a MetroCluster site, all remote drives are on 0m, the virtual iSCSI host adapter. This means that the drives are accessed via the MetroCluster IP interfaces. All other drives are local.

After identifying whether a shelf is remote (on 0m), you can further identify the drive or shelf by the serial number or, depending on shelf ID assignments in your configuration, by shelf ID.



In MetroCluster IP configurations running ONTAP 9.4, the shelf ID is not required to be unique between the MetroCluster sites. This includes both internal shelves (0) and external shelves. The serial number is consistent when viewed from any node on either MetroCluster site.

Shelf IDs should be unique within the disaster recovery (DR) group except for the internal shelf.

With the drive or shelf module identified, you can replace the component using the appropriate procedure.

## Service Guide for DS460C DS224C and DS212C Disk Shelves

### Example of sysconfig -a output

The following example uses the `sysconfig -a` command to show the devices on a node in the MetroCluster IP configuration. This node has the following shelves and devices attached:

- slot 0: Internal drives (local drives)
- slot 3: External shelf ID 75 and 76 (local drives)
- slot 0: Virtual iSCSI host adapter 0m (remote drives)

```
node_A_1> run local sysconfig -a

NetApp Release R9.4:  Sun Mar 18 04:14:58 PDT 2018
System ID: 1111111111 (node_A_1); partner ID: 2222222222 (node_A_2)
System Serial Number: serial-number (node_A_1)

.
.
.

slot 0: NVMe Disks
      0 : NETAPP  X4001S172A1T9NTE NA01 1831.1GB 4160B/sect
(S3NBNX0J500528)
      1 : NETAPP  X4001S172A1T9NTE NA01 1831.1GB 4160B/sect
(S3NBNX0J500735)
      2 : NETAPP  X4001S172A1T9NTE NA01 1831.1GB 4160B/sect
(S3NBNX0J501165)

.
.
.

slot 3: SAS Host Adapter 3a (PMC-Sierra PM8072 rev. C, SAS, <UP>)
MFG Part Number:  Microsemi Corp. 110-03801 rev. A0
Part number:     111-03801+A0
Serial number:   7A1063AF14B
Date Code:       20170320
Firmware rev:   03.08.09.00
Base WWN:        5:0000d1:702e69e:80
Phy State:      [12] Enabled, 12.0 Gb/s
                  [13] Enabled, 12.0 Gb/s
                  [14] Enabled, 12.0 Gb/s
                  [15] Enabled, 12.0 Gb/s
Mini-SAS HD Vendor:    Molex Inc.
Mini-SAS HD Part Number: 112-00436+A0
Mini-SAS HD Type:       Passive Copper (unequalized) 0.5m ID:00
```

Mini-SAS HD Serial Number: 614130640

75.0 : NETAPP X438\_S1633400AMD NA04 381.3GB 520B/sect  
(S20KNYAG501805)

75.1 : NETAPP X438\_S1633400AMD NA04 381.3GB 520B/sect  
(S20KNYAG502050)

75.2 : NETAPP X438\_PHM2400MCTO NA04 381.3GB 520B/sect  
(25M0A03WT2KA)

75.3 : NETAPP X438\_S1633400AMD NA04 381.3GB 520B/sect  
(S20KNYAG501793)

75.4 : NETAPP X438\_S1633400AMD NA04 381.3GB 520B/sect  
(S20KNYAG502158)

.

.

.

Shelf 75: DS224-12 Firmware rev. IOM12 A: 0220 IOM12 B: 0220

Shelf 76: DS224-12 Firmware rev. IOM12 A: 0220 IOM12 B: 0220

slot 3: SAS Host Adapter 3c (PMC-Sierra PM8072 rev. C, SAS, <UP>)

MFG Part Number: Microsemi Corp. 110-03801 rev. A0

Part number: 111-03801+A0

Serial number: 7A1063AF14B

Date Code: 20170320

Firmware rev: 03.08.09.00

Base WWN: 5:0000d1:702e69e:88

Phy State:

- [0] Enabled, 12.0 Gb/s
- [1] Enabled, 12.0 Gb/s
- [2] Enabled, 12.0 Gb/s
- [3] Enabled, 12.0 Gb/s

Mini-SAS HD Vendor: Molex Inc.

Mini-SAS HD Part Number: 112-00436+A0

Mini-SAS HD Type: Passive Copper (unequalized) 0.5m ID:00

Mini-SAS HD Serial Number: 614130691

75.0 : NETAPP X438\_S1633400AMD NA04 381.3GB 520B/sect  
(S20KNYAG501805)

75.1 : NETAPP X438\_S1633400AMD NA04 381.3GB 520B/sect  
(S20KNYAG502050)

75.2 : NETAPP X438\_PHM2400MCTO NA04 381.3GB 520B/sect  
(25M0A03WT2KA)

75.3 : NETAPP X438\_S1633400AMD NA04 381.3GB 520B/sect  
(S20KNYAG501793)

.

.

.

Shelf 75: DS224-12 Firmware rev. IOM12 A: 0220 IOM12 B: 0220

Shelf 76: DS224-12 Firmware rev. IOM12 A: 0220 IOM12 B: 0220

slot 3: SAS Host Adapter 3d (PMC-Sierra PM8072 rev. C, SAS, <UP>)  
MFG Part Number: Microsemi Corp. 110-03801 rev. A0  
Part number: 111-03801+A0  
Serial number: 7A1063AF14B  
Date Code: 20170320  
Firmware rev: 03.08.09.00  
Base WWN: 5:0000d1:702e69e:8c  
Phy State: [4] Enabled, 12.0 Gb/s  
[5] Enabled, 12.0 Gb/s  
[6] Enabled, 12.0 Gb/s  
[7] Enabled, 12.0 Gb/s  
Mini-SAS HD Vendor: Molex Inc.  
Mini-SAS HD Part Number: 112-00436+A0  
Mini-SAS HD Type: Passive Copper (unequalized) 0.5m ID:01  
Mini-SAS HD Serial Number: 614130690  
    75.0 : NETAPP X438\_S1633400AMD NA04 381.3GB 520B/sect  
(S20KNYAG501805)  
    75.1 : NETAPP X438\_S1633400AMD NA04 381.3GB 520B/sect  
(S20KNYAG502050)  
    75.2 : NETAPP X438\_PHM2400MCTO NA04 381.3GB 520B/sect  
(25M0A03WT2KA)

.

.

Shelf 75: DS224-12 Firmware rev. IOM12 A: 0220 IOM12 B: 0220  
Shelf 76: DS224-12 Firmware rev. IOM12 A: 0220 IOM12 B: 0220

slot 4: Quad 10 Gigabit Ethernet Controller X710 SFP+

.

.

.

slot 0: Virtual iSCSI Host Adapter 0m  
    0.0 : NETAPP X4001S172A1T9NTE NA01 1831.1GB 4160B/sect  
(S3NBNX0J500690)  
    0.1 : NETAPP X4001S172A1T9NTE NA01 1831.1GB 4160B/sect  
(S3NBNX0J500571)  
    0.2 : NETAPP X4001S172A1T9NTE NA01 1831.1GB 4160B/sect  
(S3NBNX0J500323)  
    0.3 : NETAPP X4001S172A1T9NTE NA01 1831.1GB 4160B/sect  
(S3NBNX0J500724)  
    0.4 : NETAPP X4001S172A1T9NTE NA01 1831.1GB 4160B/sect  
(S3NBNX0J500734)  
    0.5 : NETAPP X4001S172A1T9NTE NA01 1831.1GB 4160B/sect  
(S3NBNX0J500598)  
    0.12 : NETAPP X4001S172A1T9NTE NA01 1831.1GB 4160B/sect

```
(S3NBNX0J501094)
      0.13 : NETAPP    X4001S172A1T9NTE NA01 1831.1GB 4160B/sect
(S3NBNX0J500519)
.
.
.
Shelf 0: FS4483PSM3E Firmware rev. PSM3E A: 0103 PSM3E B: 0103
Shelf 35: DS224-12 Firmware rev. IOM12 A: 0220 IOM12 B: 0220
Shelf 36: DS224-12 Firmware rev. IOM12 A: 0220 IOM12 B: 0220

node_A_1:>
```

## Hot-adding storage to a MetroCluster FC configuration

You can add storage to a MetroCluster FC configuration without bringing down the system. The procedure you use depends on the type of MetroCluster FC configuration and whether you are adding a single disk shelf to an existing stack or an entire stack.

### Hot-adding a SAS disk shelf in a direct-attached MetroCluster FC configuration using SAS optical cables

You can use SAS optical cables to hot-add a SAS disk shelf to an existing stack of SAS disk shelves in a direct-attached MetroCluster FC configuration, or as a new stack to a SAS HBA or an onboard SAS port on the controller.

- This procedure is nondisruptive and takes approximately two hours to complete.
- You need the admin password and access to an FTP or SCP server.
- If you are adding an IOM12 shelf to a stack of IOM6 shelves, see [Hot-adding IOM12 shelves to a stack of IOM6 shelves](#).

This task applies to a MetroCluster FC configuration in which the storage is connected directly to the storage controllers with SAS cables. It does not apply to MetroCluster FC configurations using FC-to-SAS bridges or FC switch fabrics.

#### Steps

1. Follow the instructions for hot-adding a SAS disk shelf in the *Installation Guide* for your disk shelf model to perform the following tasks to hot-add a disk shelf:
  - a. Install a disk shelf for a hot-add.
  - b. Turn on the power supplies and set the shelf ID for a hot-add.
  - c. Cable the hot-added disk shelf.
  - d. Verify SAS connectivity.

### Hot-adding SAS storage to a bridge-attached MetroCluster FC configuration

You can hot-add either an individual SAS disk shelf or a stack and set of bridges to an existing MetroCluster system.

These procedures apply to MetroCluster FC configurations using FC-to-SAS bridges that are either directly attached to the storage controllers or attached to an FC fabric.

These procedures are nondisruptive and take approximately four hours to complete.

You need the admin password and access to an FTP or SCP server.

### **Hot-adding a stack of SAS disk shelves to an existing pair of FibreBridge 7500N bridges**

You can hot-add a stack of SAS disk shelves to an existing pair of FibreBridge 7500N bridges that have available ports.

- You must have downloaded the latest disk and disk shelf firmware.
- All of the disk shelves in the MetroCluster configuration (both the new shelves and existing shelves) must be running the same firmware version.

[NetApp Downloads: Disk Drive Firmware](#)

[NetApp Downloads: Disk Shelf Firmware](#)

- The FibreBridge 7500N bridges must be connected and have available SAS ports.

This procedure is written with the assumption that you are using the recommended bridge management interfaces: the ATTO ExpressNAV GUI and the ATTO QuickNAV utility.

You can use the ATTO ExpressNAV GUI to configure and manage a bridge, and to update the bridge firmware. You can use the ATTO QuickNAV utility to configure the bridge Ethernet management 1 port.

You can use other management interfaces, if required. These options include using a serial port or Telnet to configure and manage a bridge and to configure the Ethernet management 1 port, and using FTP to update the bridge firmware. If you choose any of these management interfaces, you must meet the applicable requirements in [Other bridge management interfaces](#).

 If you insert a SAS cable into the wrong port, when you remove the cable from a SAS port, you must wait at least 120 seconds before plugging the cable into a different SAS port. If you fail to do so, the system will not recognize that the cable has been moved to another port.

#### **Steps**

1. Properly ground yourself.
2. From the console of either controller, verify that your system has disk autoassignment enabled:

**storage disk option show**

The Auto Assign column indicates whether disk autoassignment is enabled.

Node	BKg. FW. Upd.	Auto Copy	Auto Assign	Auto Assign Policy
node_A_1	on	on	on	default
node_A_2	on	on	on	default
2 entries were displayed.				

3. Disable the switch ports for the new stack.
4. Update the FibreBridge firmware on each bridge.

If the new bridge is the same type as the partner bridge upgrade to the same firmware as the partner bridge. If the new bridge is a different type to the partner bridge, upgrade to the latest firmware supported by the bridge and version of ONTAP. See the section "Updating firmware on a FibreBridge bridge" in the *MetroCluster Maintenance Guide*.

5. On each bridge in the pair, enable the SAS port that will connect to the new stack:

**SASPortEnable port-letter**

The same SAS port (B, C, or D) must be used on both bridges.

6. Save the configuration and reboot each bridge:

**SaveConfiguration Restart**

7. Cable the disk shelves to the bridges:

- a. Daisy-chain the disk shelves in each stack.

The *Installation and Service Guide* for your disk shelf model provides detailed information about daisy-chaining disk shelves.

- b. For each stack of disk shelves, cable IOM A of the first shelf to SAS port A on FibreBridge A, and then cable IOM B of the last shelf to SAS port A on FibreBridge B

[Fabric-attached MetroCluster installation and configuration](#)

[Stretch MetroCluster installation and configuration](#)

Each bridge has one path to its stack of disk shelves; bridge A connects to the A-side of the stack through the first shelf, and bridge B connects to the B-side of the stack through the last shelf.



The bridge SAS port B is disabled.

8. Verify that each bridge can detect all of the disk drives and disk shelves to which the bridge is connected.

If you are using the...	Then...
ATTO ExpressNAV GUI	<p>a. In a supported web browser, enter the IP address of a bridge in the browser box.</p> <p>You are brought to the ATTO FibreBridge home page, which has a link.</p> <p>b. Click the link, and then enter your user name and the password that you designated when you configured the bridge.</p> <p>The ATTO FibreBridge status page appears with a menu to the left.</p> <p>c. Click <b>Advanced</b> in the menu.</p> <p>d. View the connected devices:</p> <p style="color: red;"><b>sastargets</b></p> <p>e. Click <b>Submit</b>.</p>
Serial port connection	<p>View the connected devices:</p> <p style="color: red;"><b>sastargets</b></p>

The output shows the devices (disks and disk shelves) to which the bridge is connected. The output lines are sequentially numbered so that you can quickly count the devices.



If the text `response truncated` appears at the beginning of the output, you can use Telnet to connect to the bridge, and then view all of the output by using the `sastargets` command.

The following output shows that 10 disks are connected:

Tgt	VendorID	ProductID	Type	SerialNumber
0	NETAPP	X410_S15K6288A15	DISK	3QP1CLE300009940UHJV
1	NETAPP	X410_S15K6288A15	DISK	3QP1ELF600009940V1BV
2	NETAPP	X410_S15K6288A15	DISK	3QP1G3EW00009940U2M0
3	NETAPP	X410_S15K6288A15	DISK	3QP1EWMP00009940U1X5
4	NETAPP	X410_S15K6288A15	DISK	3QP1FZLE00009940G8YU
5	NETAPP	X410_S15K6288A15	DISK	3QP1FZLF00009940TZKZ
6	NETAPP	X410_S15K6288A15	DISK	3QP1CEB400009939MGXL
7	NETAPP	X410_S15K6288A15	DISK	3QP1G7A900009939FNTT
8	NETAPP	X410_S15K6288A15	DISK	3QP1FY0T00009940G8PA
9	NETAPP	X410_S15K6288A15	DISK	3QP1FXW600009940VERQ

- Verify that the command output shows that the bridge is connected to all of the appropriate disks and disk shelves in the stack.

If the output is...	Then...
Correct	Repeat the previous step for each remaining bridge.
Not correct	<p>a. Check for loose SAS cables or correct the SAS cabling by repeating the step to cable the disk shelves to the bridges.</p> <p>b. Repeat the previous step for each remaining bridge.</p>

10. Cable each bridge to the local FC switches, using the cabling shown in the table for your configuration, switch model, and FC-to-SAS bridge model:



The Brocade and Cisco switches use different port numbering, as shown in the following tables

- On Brocade switches, the first port is numbered “0”.
- On Cisco switches, the first port is numbered “1”.

Configurations using FibreBridge 7500N or 7600N using both FC ports (FC1 and FC2)												
DR GROUP 1												
			Brocade 6505		Brocade 6510, Brocade DCX 8510-8		Brocade 6520		Brocade G620, Brocade G620- 1, Brocade G630, Brocade G630-1		Brocade G720	
Component		Port	Switch 1	Switch 2	Switch 1	Switch 2	Switch 1	Switch 2	Switch 1	Switch 2	Switch 1	Switch 2
Stack 1	bridge_x_1a	FC1	8		8		8		8		10	
		FC2	-	8	-	8	-	8	-	8	-	10
	bridge_x_1B	FC1	9	-	9	-	9	-	9	-	11	-
		FC2	-	9	-	9	-	9	-	9	-	11
Stack 2	bridge_x_2a	FC1	10	-	10	-	10	-	10	-	14	-
		FC2	-	10	-	10	-	10	-	10	-	14
	bridge_x_2B	FC1	11	-	11	-	11	-	11	-	17	-
		FC2	-	11	-	11	-	11	-	11	-	17

### Configurations using FibreBridge 7500N or 7600N using both FC ports (FC1 and FC2)

Stack 3	bridge_x_3a	FC1	12	-	12	-	12	-	12	-	18	-
		FC2	-	12	-	12	-	12	-	12	-	18
	bridge_x_3B	FC1	13	-	13	-	13	-	13	-	19	-
		FC2	-	13	-	13	-	13	-	13	-	19
Stack y	bridge_x_ya	FC1	14	-	14	-	14	-	14	-	20	-
		FC2	-	14	-	14	-	14	-	14	-	20
	bridge_x_yb	FC1	15	-	15	-	15	-	15	-	21	-
		FC2		15		15		15		15		21



Additional bridges can be cabled to ports 16, 17, 20 and 21 in G620, G630, G620-1, and G630-1 switches.

### Configurations using FibreBridge 7500N or 7600N using both FC ports (FC1 and FC2)

#### DR GROUP 2

			Brocade G620, Brocade G620-1, Brocade G630, Brocade G630-1		Brocade 6510, Brocade DCX 8510-8		Brocade 6520		Brocade G720	
Component		Port	Switch 1	Switch 2	Switch 1	Switch 2	Switch 1	Switch 2	Switch 1	switch 2
Stack 1	bridge_x_51a	FC1	26	-	32	-	56	-	32	-
		FC2	-	26	-	32	-	56	-	32
	bridge_x_51b	FC1	27	-	33	-	57	-	33	-
		FC2	-	27	-	33	-	57	-	33
Stack 2	bridge_x_52a	FC1	30	-	34	-	58	-	34	-
		FC2	-	30	-	34	-	58	-	34
	bridge_x_52b	FC1	31	-	35	-	59	-	35	-
		FC2	-	31	-	35	-	59	-	35

### Configurations using FibreBridge 7500N or 7600N using both FC ports (FC1 and FC2)

Stack 3	bridge_x_53a	FC1	32	-	36	-	60	-	36	-
		FC2	-	32	-	36	-	60	-	36
	bridge_x_53b	FC1	33	-	37	-	61	-	37	-
		FC2	-	33	-	37	-	61	-	37
Stack y	bridge_x_5ya	FC1	34	-	38	-	62	-	38	-
		FC2	-	34	-	38	-	62	-	38
	bridge_x_5yb	FC1	35	-	39	-	63	-	39	-
		FC2	-	35	-	39	-	63	-	39



Additional bridges can be cabled to ports 36 - 39 in G620, G630, G620-1, and G-630-1 switches.

### Configurations using FibreBridge 6500N bridges or FibreBridge 7500N or 7600N using one FC port (FC1 or FC2) only

DR GROUP 1											
		Brocade 6505		Brocade 6510, Brocade DCX 8510-8		Brocade 6520		Brocade G620, brocade G620- 1, Brocade G630, Brocade G630-1		Brocade G720	
Compo nent	Port	Switch 1	Switch 2	Switch 1	Switch 2	Switch 1	Switch 2	Switch 1	Switch 2	Switch 1	Switch 2
Stack 1	bridge_x_1a	8		8		8		8		10	
	bridge_x_1b	-	8	-	8	-	8	-	8	-	10
Stack 2	bridge_x_2a	9	-	9	-	9	-	9	-	11	-
	bridge_x_2b	-	9	-	9	-	9	-	9	-	11

**Configurations using FibreBridge 6500N bridges or FibreBridge 7500N or 7600N using one FC port (FC1 or FC2) only**

Stack 3	bridge_x_3a	10	-	10	-	10	-	10	-	14	-
	bridge_x_4b	-	10	-	10	-	10	-	10	-	14
Stack y	bridge_x_ya	11	-	11	-	11	-	11	-	15	-
	bridge_x_yb	-	11	-	11	-	11	-	11	-	15



Additional bridges can be cabled to ports 12 - 17, 20 and 21 in G620, G630, G620-1, and G630-1 switches. Additional bridges can be cabled to ports 16 - 17, 20 and 21 G720 switches.

**Configurations using FibreBridge 6500N bridges or FibreBridge 7500N or 7600N using one FC port (FC1 or FC2) only**

**DR GROUP 2**

		Brocade G720		Brocade G620, Brocade G620-1, Brocade G630, Brocade G630-1		Brocade 6510, Brocade DCX 8510-8		Brocade 6520	
Stack 1	bridge_x_51a	32	-	26	-	32	-	56	-
	bridge_x_51b	-	32	-	26	-	32	-	56
Stack 2	bridge_x_52a	33	-	27	-	33	-	57	-
	bridge_x_52b	-	33	-	27	-	33	-	57
Stack 3	bridge_x_53a	34	-	30	-	34	-	58	-
	bridge_x_54b	-	34	-	30	-	34	-	58

**Configurations using FibreBridge 6500N bridges or FibreBridge 7500N or 7600N using one FC port (FC1 or FC2) only**

Stack y	bridge_x_ya	35	-	31	-	35	-	59	-
	bridge_x_yb	-	35	-	31	-	35	-	59



Additional bridges can be cabled to ports 32 - 39 in G620, G630, G620-1, and G630-1 switches. Additional bridges can be cabled to ports 36 - 39 in G720 switches.

11. Update the disk drive firmware to the most current version from the system console:

**`disk_fw_update`**

You must run this command on both controllers.

[NetApp Downloads: Disk Drive Firmware](#)

12. Update the disk shelf firmware to the most current version by using the instructions for the downloaded firmware.

You can run the commands in the procedure from the system console of either controller.

[NetApp Downloads: Disk Shelf Firmware](#)

13. If your system does not have disk autoassignment enabled, assign disk drive ownership.

[Disk and aggregate management](#)



If you are splitting the ownership of a single stack of disk shelves among multiple controllers, you must disable disk autoassignment (`storage disk option modify -autoassign off *` from both nodes in the cluster) before assigning disk ownership; otherwise, when you assign any single disk drive, the remaining disk drives might be automatically assigned to the same controller and pool.



You must not add disk drives to aggregates or volumes until after the disk drive firmware and disk shelf firmware have been updated and the verification steps in this task have been completed.

14. Enable the switch ports for the new stack.

15. Verify the operation of the MetroCluster configuration in ONTAP:

- a. Check whether the system is multipathed:

`node run -node node-name sysconfig -a`

- b. Check for any health alerts on both clusters:

`system health alert show`

- c. Confirm the MetroCluster configuration and that the operational mode is normal:

```
metrocluster show
```

- d. Perform a MetroCluster check:

```
metrocluster check run
```

- e. Display the results of the MetroCluster check:

```
metrocluster check show
```

- f. Check for any health alerts on the switches (if present):

```
storage switch show
```

- g. Run Config Advisor.

[NetApp Downloads: Config Advisor](#)

- h. After running Config Advisor, review the tool's output and follow the recommendations in the output to address any issues discovered.

16. If applicable, repeat this procedure for the partner site.

### **Hot-adding a stack of SAS disk shelves and bridges to a MetroCluster system**

You can hot-add (nondisruptively add) an entire stack, including the bridges, to the MetroCluster system. There must be available ports on the FC switches and you must update switch zoning to reflect the changes.

- This procedure can be used to add a stack using either FibreBridge 7500N or 6500N bridges.
- This procedure is written with the assumption that you are using the recommended bridge management interfaces: the ATTO ExpressNAV GUI and the ATTO QuickNAV utility.
  - You use the ATTO ExpressNAV GUI to configure and manage a bridge, and to update the bridge firmware. You use the ATTO QuickNAV utility to configure the bridge Ethernet management 1 port.
  - You can use other management interfaces, if needed. These options include using a serial port or Telnet to configure and manage a bridge, and to configure the Ethernet management 1 port, and using FTP to update the bridge firmware. If you choose any of these management interfaces, your system must meet the applicable requirements in [Other bridge management interfaces](#)

#### **Preparing to hot-add a stack of SAS disk shelves and bridges**

Preparing to hot-add a stack of SAS disk shelves and a pair of bridges involves downloading documents as well as the disk drive and disk shelf firmware.

- Your system must be a supported configuration and must be running a supported version of ONTAP.

[NetApp Interoperability Matrix Tool](#)

- All disk drives and disk shelves in the system must be running the latest firmware version.

You might want to update the disk and shelf firmware throughout the MetroCluster configuration prior to

adding shelves.

### Upgrade, revert, or downgrade

- Each FC switch must have one FC port available for one bridge to connect to it.



You might need to upgrade the FC switch depending on the FC switch compatibility.

- The computer you are using to set up the bridges must be running an ATTO supported web browser to use the ATTO ExpressNAV GUI: Internet Explorer 8 or 9, or Mozilla Firefox 3.

The *ATTO Product Release Notes* have an up-to-date list of supported web browsers. You can access this document using the information in the steps.

## Steps

1. Download or view the following documents from the NetApp Support Site:
  - [NetApp Interoperability Matrix Tool](#)
  - The *Installation and Service Guide* for your disk shelf model.
2. Download content from the ATTO website and from the NetApp website:
  - a. Go to the ATTO FibreBridge Description page.
  - b. Using the link on the ATTO FibreBridge Description page, access the ATTO web site and download the following:
    - *ATTO FibreBridge Installation and Operation Manual* for your bridge model.
    - ATTO QuickNAV utility (to the computer you are using for setup).
  - c. Go to the ATTO FibreBridge Firmware Download page by clicking **Continue** at the end of the ATTO FibreBridge Description page, and then do the following:
    - Download the bridge firmware file as directed on the download page.
3. Download the latest disk and disk shelf firmware, and make a copy of the installation portion of the instructions for reference later.

All disk shelves in the MetroCluster configuration (both the new shelves and existing shelves) must be running the same firmware version.



In this step, you are only completing the download portion of the instructions provided in the links and making a copy of the installation instructions. You update the firmware on each disk and disk shelf later, when instructed to do so in the [Hot-adding the stack of shelves](#) section.

- a. Download the disk firmware and make a copy of the disk firmware instructions for reference later.

[NetApp Downloads: Disk Drive Firmware](#)

- b. Download the disk shelf firmware and make a copy of the disk shelf firmware instructions for reference later.

#### [NetApp Downloads: Disk Shelf Firmware](#)

4. Gather the hardware and information needed to use the recommended bridge management interfaces—the ATTO ExpressNAV GUI and ATTO QuickNAV utility:

- a. Acquire a standard Ethernet cable to connect from the bridge Ethernet management 1 port to your network.
- b. Determine a non-default user name and password for accessing the bridges.

It is recommended that you change the default user name and password.

- c. Obtain an IP address, subnet mask, and gateway information for the Ethernet management 1 port on each bridge.
- d. Disable VPN clients on the computer you are using for setup.

Active VPN clients cause the QuickNAV scan for bridges to fail.

5. Acquire four screws for each bridge to flush-mount the bridge “L” brackets securely to the front of the rack.

The openings in the bridge “L” brackets are compliant with rack standard ETA-310-X for 19-inch (482.6 mm) racks.

6. If necessary, update the FC switch zoning to accommodate the new bridges that are being added to the configuration.

If you are using the Reference Configuration Files provided by NetApp, the zones have been created for all ports, so you do not need to make any zoning updates. There must be a storage zone for each switch port that connects to the FC ports of the bridge.

#### **Hot-adding a stack of SAS disk shelves and bridges**

You can hot-add a stack of SAS disk shelves and bridges to increase the capacity of the bridges.

The system must meet all of the requirements to hot-add a stack of SAS disk shelves and bridges.

#### [Preparing to hot-add a stack of SAS disk shelves and bridges](#)

- Hot-adding a stack of SAS disk shelves and bridges is a nondisruptive procedure if all of the interoperability requirements are met.

#### [NetApp Interoperability Matrix Tool](#)

#### [Using the Interoperability Matrix Tool to find MetroCluster information](#)

- Multipath HA is the only supported configuration for MetroCluster systems that are using bridges.

Both controller modules must have access through the bridges to the disk shelves in each stack.

- You should hot-add an equal number of disk shelves at each site.
- If you will be using in-band management of the bridge rather than IP management, the steps for configuring

the Ethernet port and IP settings can be skipped, as noted in the relevant steps.

**i** Starting with ONTAP 9.8, the **storage bridge** command is replaced with **system bridge**. The following steps show the **storage bridge** command, but if you are running ONTAP 9.8 or later, the **system bridge** command is preferred.

**!** If you insert a SAS cable into the wrong port, when you remove the cable from a SAS port, you must wait at least 120 seconds before plugging the cable into a different SAS port. If you fail to do so, the system will not recognize that the cable has been moved to another port.

1. Properly ground yourself.
2. From the console of either controller module, check whether your system has disk autoassignment enabled:

**storage disk option show**

The Auto Assign column indicates whether disk autoassignment is enabled.

Node	BKg. FW. Upd.	Auto Copy	Auto Assign	Auto Assign Policy
node_A_1	on	on	on	default
node_A_2	on	on	on	default
2 entries were displayed.				

3. Disable the switch ports for the new stack.
4. If configuring for in-band management, connect a cable from FibreBridge RS-232 serial port to the serial (COM) port on a personal computer.

The serial connection will be used for initial configuration, and then in-band management via ONTAP and the FC ports can be used to monitor and manage the bridge.

5. If configuring for IP management, configure the Ethernet management 1 port for each bridge by following the procedure in section 2.0 of the *ATTO FibreBridge Installation and Operation Manual* for your bridge model.

In systems running ONTAP 9.5 or later, in-band management can be used to access the bridge via the FC ports rather than the Ethernet port. Starting with ONTAP 9.8, only in-band management is supported and SNMP management is deprecated.

When running QuickNAV to configure an Ethernet management port, only the Ethernet management port that is connected by the Ethernet cable is configured. For example, if you also wanted to configure the Ethernet management 2 port, you would need to connect the Ethernet cable to port 2 and run QuickNAV.

6. Configure the bridge.

If you retrieved the configuration information from the old bridge, use the information to configure the new bridge.

Be sure to make note of the user name and password that you designate.

The *ATTO FibreBridge Installation and Operation Manual* for your bridge model has the most current information on available commands and how to use them.



Do not configure time synchronization on ATTO FibreBridge 7600N or 7500N. The time synchronization for ATTO FibreBridge 7600N or 7500N is set to the cluster time after the bridge is discovered by ONTAP. It is also synchronized periodically once a day. The time zone used is GMT and is not changeable.

- a. If configuring for IP management, configure the IP settings of the bridge.

To set the IP address without the QuickNAV utility, you need to have a serial connection to the FibreBridge.

If using the CLI, you must run the following commands:

```
set ipaddress mp1 ip-address  
set ipsubnetmask mp1 subnet-mask  
set ipgateway mp1 x.x.x.x  
set ipdhcp mp1 disabled  
set ethernetspeed mp1 1000
```

- b. Configure the bridge name.

The bridges should each have a unique name within the MetroCluster configuration.

Example bridge names for one stack group on each site:

- bridge\_A\_1a
  - bridge\_A\_1b
  - bridge\_B\_1a
  - bridge\_B\_1b
- If using the CLI, you must run the following command:

```
set bridgename bridgename
```

- c. If running ONTAP 9.4 or earlier, enable SNMP on the bridge:

```
set SNMP enabled
```

In systems running ONTAP 9.5 or later, in-band management can be used to access the bridge via the FC ports rather than the Ethernet port. Starting with ONTAP 9.8, only in-band management is supported and SNMP management is deprecated.

## 7. Configure the bridge FC ports.

- a. Configure the data rate/speed of the bridge FC ports.

The supported FC data rate depends on your model bridge.

- The FibreBridge 7600 bridge supports up to 32, 16, or 8 Gbps.
- The FibreBridge 7500 bridge supports up to 16, 8, or 4 Gbps.

- The FibreBridge 6500 bridge supports up to 8, 4, or 2 Gbps.



The FCDataRate speed you select is limited to the maximum speed supported by both the bridge and the switch to which the bridge port connects. Cabling distances must not exceed the limitations of the SFPs and other hardware.

If using the CLI, you must run the following command:

```
set FCDataRate port-number port-speed
```

- If you are configuring a FibreBridge 7500N or 6500N bridge, configure the connection mode that the port uses to ptp.



The FCCConnMode setting is not required when configuring a FibreBridge 7600N bridge.

If using the CLI, you must run the following command:

```
set FCCConnMode port-number ptp
```

- If you are configuring a FibreBridge 7600N or 7500N bridge, you must configure or disable the FC2 port.

- If you are using the second port, you must repeat the previous substeps for the FC2 port.
- If you are not using the second port, then you must disable the port:

```
FCPortDisable port-number
```

- If you are configuring a FibreBridge 7600N or 7500N bridge, disable the unused SAS ports:

```
SASPortDisable sas-port
```



SAS ports A through D are enabled by default. You must disable the SAS ports that are not being used. If only SAS port A is used, then SAS ports B, C, and D must be disabled.

## 8. Secure access to the bridge and save the bridge's configuration.

- From the controller prompt check the status of the bridges:

```
storage bridge show
```

The output shows which bridge is not secured.

- Check the status of the unsecured bridge's ports:

```
info
```

The output shows the status of Ethernet ports MP1 and MP2.

- If Ethernet port MP1 is enabled, run the following command:

```
set EthernetPort mp1 disabled
```



If Ethernet port MP2 is also enabled, repeat the previous substep for port MP2.

- Save the bridge's configuration.

You must run the following commands:

**SaveConfiguration**

**FirmwareRestart**

You are prompted to restart the bridge.

9. Update the FibreBridge firmware on each bridge.

If the new bridge is the same type as the partner bridge upgrade to the same firmware as the partner bridge. If the new bridge is a different type to the partner bridge, upgrade to the latest firmware supported by the bridge and version of ONTAP. See the section "Updating firmware on a FibreBridge bridge" in the *MetroCluster Maintenance Guide*.

10. Cable the disk shelves to the bridges:

- a. Daisy-chain the disk shelves in each stack.

The *Installation Guide* for your disk shelf model provides detailed information about daisy-chaining disk shelves.

- b. For each stack of disk shelves, cable IOM A of the first shelf to SAS port A on FibreBridge A, and then cable IOM B of the last shelf to SAS port A on FibreBridge B.

[Fabric-attached MetroCluster installation and configuration](#)

[Stretch MetroCluster installation and configuration](#)

Each bridge has one path to its stack of disk shelves; bridge A connects to the A-side of the stack through the first shelf, and bridge B connects to the B-side of the stack through the last shelf.



The bridge SAS port B is disabled.

11. Verify that each bridge can detect all of the disk drives and disk shelves to which the bridge is connected.

If you are using the...	Then...
ATTO ExpressNAV GUI	<p>a. In a supported web browser, enter the IP address of a bridge in the browser box.</p> <p>You are brought to the ATTO FibreBridge home page, which has a link.</p> <p>b. Click the link, and then enter your user name and the password that you designated when you configured the bridge.</p> <p>The ATTO FibreBridge status page appears with a menu to the left.</p> <p>c. Click <b>Advanced</b> in the menu.</p> <p>d. View the connected devices: <b>sastargets</b></p> <p>e. Click <b>Submit</b>.</p>
Serial port connection	<p>View the connected devices:</p> <p><b>sastargets</b></p>

The output shows the devices (disks and disk shelves) to which the bridge is connected. The output lines are sequentially numbered so that you can quickly count the devices.



If the text response truncated appears at the beginning of the output, you can use Telnet to connect to the bridge, and then view all of the output by using the **sastargets** command.

The following output shows that 10 disks are connected:

Tgt	VendorID	ProductID	Type	SerialNumber
0	NETAPP	X410_S15K6288A15	DISK	3QP1CLE300009940UHJV
1	NETAPP	X410_S15K6288A15	DISK	3QP1ELF600009940V1BV
2	NETAPP	X410_S15K6288A15	DISK	3QP1G3EW00009940U2M0
3	NETAPP	X410_S15K6288A15	DISK	3QP1EWMP00009940U1X5
4	NETAPP	X410_S15K6288A15	DISK	3QP1FZLE00009940G8YU
5	NETAPP	X410_S15K6288A15	DISK	3QP1FZLF00009940TZKZ
6	NETAPP	X410_S15K6288A15	DISK	3QP1CEB400009939MGXL
7	NETAPP	X410_S15K6288A15	DISK	3QP1G7A900009939FNTT
8	NETAPP	X410_S15K6288A15	DISK	3QP1FY0T00009940G8PA
9	NETAPP	X410_S15K6288A15	DISK	3QP1FXW600009940VERQ

12. Verify that the command output shows that the bridge is connected to all of the appropriate disks and disk shelves in the stack.

If the output is...	Then...
Correct	Repeat Step 11 for each remaining bridge.
Not correct	<ol style="list-style-type: none"> <li>Check for loose SAS cables or correct the SAS cabling by repeating Step 10.</li> <li>Repeat Step 11.</li> </ol>

13. If you are configuring a fabric-attached MetroCluster configuration, cable each bridge to the local FC switches, using the cabling shown in the table for your configuration, switch model, and FC-to-SAS bridge model:



Brocade and Cisco switches use different port numbering, as shown in the following tables.

- On Brocade switches, the first port is numbered “0”.
- On Cisco switches, the first port is numbered “1”.

#### Configurations using FibreBridge 7500N or 7600N using both FC ports (FC1 and FC2)

DR GROUP 1														
			Brocade 6505		Brocade 6510, Brocade DCX 8510-8		Brocade 6520		Brocade G620, Brocade G620-1, Brocade G630, Brocade G630-1		Brocade G720			
Component		Port	Switch 1	Switch 2	Switch 1	Switch 2	Switch 1	Switch 2	Switch 1	Switch 2	Switch 1	Switch 2	Switch 1	Switch 2
Stack 1	bridge_x_1a	FC1	8		8		8		8		10			
		FC2	-	8	-	8	-	8	-	8	-	10		
	bridge_x_1B	FC1	9	-	9	-	9	-	9	-	11	-		
		FC2	-	9	-	9	-	9	-	9	-	11		
Stack 2	bridge_x_2a	FC1	10	-	10	-	10	-	10	-	14	-		
		FC2	-	10	-	10	-	10	-	10	-	14		
	bridge_x_2B	FC1	11	-	11	-	11	-	11	-	17	-		
		FC2	-	11	-	11	-	11	-	11	-	17		

Configurations using FibreBridge 7500N or 7600N using both FC ports (FC1 and FC2)														
Stack 3	bridge _x_3a	FC1	12	-	12	-	12	-	12	-	18	-		
		FC2	-	12	-	12	-	12	-	12	-	18		
	bridge _x_3B	FC1	13	-	13	-	13	-	13	-	19	-		
		FC2	-	13	-	13	-	13	-	13	-	19		
Stack y	bridge _x_ya	FC1	14	-	14	-	14	-	14	-	20	-		
		FC2	-	14	-	14	-	14	-	14	-	20		
	bridge _x_yb	FC1	15	-	15	-	15	-	15	-	21	-		
		FC2		15		15		15		15		21		
 Additional bridges can be cabled to ports 16, 17, 20 and 21 in G620, G630, G620-1, and G630-1 switches.														

Configurations using FibreBridge 7500N or 7600N using both FC ports (FC1 and FC2)															
DR GROUP 2															
				Brocade G620, Brocade G620-1, Brocade G630, Brocade G630-1		Brocade 6510, Brocade DCX 8510-8		Brocade 6520		Brocade G720					
Component		Port		Switch 1	Switch 2	Switch 1	Switch 2	Switch 1	Switch 2	Switch 1	switch 2				
Stack 1	bridge_x_51a	FC1	26	-	32	-	56	-	32	-					
		FC2	-	26	-	32	-	56	-	32					
	bridge_x_51b	FC1	27	-	33	-	57	-	33	-					
		FC2	-	27	-	33	-	57	-	33					

Configurations using FibreBridge 7500N or 7600N using both FC ports (FC1 and FC2)												
Stack 2	bridge_x_52a	FC1	30	-	34	-	58	-	34	-		
		FC2	-	30	-	34	-	58	-	34		
	bridge_x_52b	FC1	31	-	35	-	59	-	35	-		
		FC2	-	31	-	35	-	59	-	35		
	bridge_x_53a	FC1	32	-	36	-	60	-	36	-		
		FC2	-	32	-	36	-	60	-	36		
	bridge_x_53b	FC1	33	-	37	-	61	-	37	-		
		FC2	-	33	-	37	-	61	-	37		
Stack y	bridge_x_5ya	FC1	34	-	38	-	62	-	38	-		
		FC2	-	34	-	38	-	62	-	38		
	bridge_x_5yb	FC1	35	-	39	-	63	-	39	-		
		FC2	-	35	-	39	-	63	-	39		
 Additional bridges can be cabled to ports 36 - 39 in G620, G630, G620-1, and G630-1 switches.												

Configurations using FibreBridge 6500N bridges or FibreBridge 7500N or 7600N using one FC port (FC1 or FC2) only												
DR GROUP 1												
		Brocade 6505		Brocade 6510, Brocade DCX 8510-8		Brocade 6520		Brocade G620, brocade G620-1, Brocade G630, Brocade G630-1		Brocade G720		
Component	Port	Switch 1	Switch 2	Switch 1	Switch 2	Switch 1	Switch 2	Switch 1	Switch 2	Switch 1	Switch 2	
Stack 1	bridge_x_1a	8		8		8		8		10		
	bridge_x_1b	-	8	-	8	-	8	-	8	-	10	

**Configurations using FibreBridge 6500N bridges or FibreBridge 7500N or 7600N using one FC port (FC1 or FC2) only**

Stack 2	bridge_x_2a	9	-	9	-	9	-	9	-	11	-
	bridge_x_2b	-	9	-	9	-	9	-	9	-	11
Stack 3	bridge_x_3a	10	-	10	-	10	-	10	-	14	-
	bridge_x_4b	-	10	-	10	-	10	-	10	-	14
Stack y	bridge_x_ya	11	-	11	-	11	-	11	-	15	-
	bridge_x_yb	-	11	-	11	-	11	-	11	-	15



Additional bridges can be cabled to ports 12 - 17, 20 and 21 in G620, G630, G620-1, and G630-1 switches. Additional bridges can be cabled to ports 16 - 17, 20 and 21 G720 switches.

**Configurations using FibreBridge 6500N bridges or FibreBridge 7500N or 7600N using one FC port (FC1 or FC2) only**

DR GROUP 2											
			Brocade G720		Brocade G620, Brocade G620-1, Brocade G630, Brocade G630-1		Brocade 6510, Brocade DCX 8510-8		Brocade 6520		
Stack 1	bridge_x_51a	32	-	26	-	32	-	56	-		
	bridge_x_51b	-	32	-	26	-	32	-	56		
Stack 2	bridge_x_52a	33	-	27	-	33	-	57	-		
	bridge_x_52b	-	33	-	27	-	33	-	57		

**Configurations using FibreBridge 6500N bridges or FibreBridge 7500N or 7600N using one FC port (FC1 or FC2) only**

Stack 3	bridge_x _53a	34	-	30	-	34	-	58	-
	bridge_x _54b	-	34	-	30	-	34	-	58
Stack y	bridge_x _ya	35	-	31	-	35	-	59	-
	bridge_x _yb	-	35	-	31	-	35	-	59



Additional bridges can be cabled to ports 32 - 39 in G620, G630, G620-1, and G630-1 switches. Additional bridges can be cabled to ports 36 - 39 in G720 switches.

14. If you are configuring a bridge-attached MetroCluster system, cable each bridge to the controller modules:
  - a. Cable FC port 1 of the bridge to a 16 Gb or 8 Gb FC port on the controller module in cluster\_A.
  - b. Cable FC port 2 of the bridge to the same speed FC port of the controller module in cluster\_A.
  - c. Repeat these substeps on other subsequent bridges until all of the bridges have been cabled.
15. Update the disk drive firmware to the most current version from the system console:

**disk\_fw\_update**

You must run this command on both controller modules.

[NetApp Downloads: Disk Drive Firmware](#)

16. Update the disk shelf firmware to the most current version by using the instructions for the downloaded firmware.

You can run the commands in the procedure from the system console of either controller module.

[NetApp Downloads: Disk Shelf Firmware](#)

17. If your system does not have disk autoassignment enabled, assign disk drive ownership.

[Disk and aggregate management](#)



If you are splitting the ownership of a single stack of disk shelves among multiple controller modules, you must disable disk autoassignment on both nodes in the cluster (`storage disk option modify -autoassign off *`) before assigning disk ownership; otherwise, when you assign any single disk drive, the remaining disk drives might be automatically assigned to the same controller module and pool.



You must not add disk drives to aggregates or volumes until after the disk drive firmware and disk shelf firmware have been updated and the verification steps in this task have been completed.

18. Enable the switch ports for the new stack.
19. Verify the operation of the MetroCluster configuration in ONTAP:
  - a. Check whether the system is multipathed:  
`node run -node node-name sysconfig -a`
  - b. Check for any health alerts on both clusters:  
`system health alert show`
  - c. Confirm the MetroCluster configuration and that the operational mode is normal:  
`metrocluster show`
  - d. Perform a MetroCluster check:  
`metrocluster check run`
  - e. Display the results of the MetroCluster check:  
`metrocluster check show`
  - f. Check for any health alerts on the switches (if present):  
`storage switch show`
  - g. Run Config Advisor.

#### [NetApp Downloads: Config Advisor](#)

- h. After running Config Advisor, review the tool's output and follow the recommendations in the output to address any issues discovered.
20. If applicable, repeat this procedure for the partner site.

### Related information

#### [In-band management of the FC-to-SAS bridges](#)

#### **Hot-adding a SAS disk shelf to a stack of SAS disk shelves**

You can hot-add one or more SAS disk shelves to a stack of SAS disk shelves.

#### **Preparing to hot-add SAS disk shelves**

Preparing to hot-add a SAS disk shelf involves downloading documents as well as the disk drive and disk shelf firmware.

- Your system must be a supported configuration and must be running a supported version of ONTAP.
- All disk drives and disk shelves in the system must be running the latest firmware version.

You might want to update the disk and shelf firmware throughout the MetroCluster configuration prior to adding shelves.

#### [Upgrade, revert, or downgrade](#)

 A mix of IOM12 modules and IOM6 modules is supported within the same stack if your system is running a supported version of ONTAP. To establish whether your version of ONTAP supports shelf mixing, refer to the Interoperability Matrix Tool (IMT).[https://mysupport.netapp.com/NOW/products/interoperability\[NetApp Interoperability\]](https://mysupport.netapp.com/NOW/products/interoperability[NetApp Interoperability]) If your version of ONTAP is not supported and you cannot upgrade or downgrade the IOM modules on the existing stack or the new shelf that is to be added to a supported combination of IOM modules, you need to do one of the following:

- Start a new stack on a new SAS port (if supported by the bridge-pair).
- Start a new stack on an additional bridge-pair.

## Steps

1. Download or view the following documents from the NetApp Support Site:

- [NetApp Interoperability Matrix Tool](#)
- The *Installation Guide* for your disk shelf model.

2. Verify that the disk shelf you are hot-adding is supported.

### [NetApp Interoperability Matrix Tool](#)

3. Download the latest disk and disk shelf firmware:



In this step, you are only completing the download portion of the instructions provided in the links. You need to follow the steps found in the [Hot-adding a disk shelf](#) section for installing the disk shelf.

- a. Download the disk firmware and make a copy of the disk firmware instructions for reference later.

### [NetApp Downloads: Disk Drive Firmware](#)

- b. Download the disk shelf firmware and make a copy of the disk shelf firmware instructions for reference later.

### [NetApp Downloads: Disk Shelf Firmware](#)

## Hot-adding a disk shelf

You can hot-add a disk shelf when you want to increase storage without any reduction in performance.

- The system must meet all of the requirements in [Preparing to hot-add SAS disk shelves](#).
- Your environment must meet one of the following scenarios to hot-add a shelf:
  - You have two FibreBridge 7500N bridges connected to a stack of SAS disk shelves.
  - You have one FibreBridge 7500N bridge and one FibreBridge 6500N bridge connected to a stack of SAS disk shelves.
  - You have two FibreBridge 6500N bridges connected to a stack of SAS disk shelves.
- This procedure is for hot-adding a disk shelf to the last disk shelf in a stack.

This procedure is written with the assumption that the last disk shelf in a stack is connected from IOM A to bridge A and from IOM B to bridge B.

- This is a nondisruptive procedure.
- You should hot-add an equal number of disk shelves at each site.
- If you are hot-adding more than one disk shelf, you must hot-add one disk shelf at a time.



Each pair of FibreBridge 7500N or 7600N bridges can support up to four stacks.



Hot-adding a disk shelf requires you to update the disk drive firmware on the hot-added disk shelf by running the `storage disk firmware update` command in advanced mode. Running this command can be disruptive if the firmware on existing disk drives in your system is an older version.



If you insert a SAS cable into the wrong port, when you remove the cable from a SAS port, you must wait at least 120 seconds before plugging the cable into a different SAS port. If you fail to do so, the system will not recognize that the cable has been moved to another port.

## Steps

1. Properly ground yourself.
2. Verify disk shelf connectivity from the system console of either controller:

**`sysconfig -v`**

The output is similar to the following:

- Each bridge on a separate line and under each FC port to which it is visible; for example, hot-adding a disk shelf to a set of FibreBridge 7500N bridges results in the following output:

```
FC-to-SAS Bridge:  
cisco_A_1-1:9.126L0: ATTO FibreBridge7500N 2.10 FB7500N100189  
cisco_A_1-2:1.126L0: ATTO FibreBridge7500N 2.10 FB7500N100162
```

- Each disk shelf on a separate line under each FC port to which it is visible:

```
Shelf 0: IOM6 Firmware rev. IOM6 A: 0173 IOM6 B: 0173  
Shelf 1: IOM6 Firmware rev. IOM6 A: 0173 IOM6 B: 0173
```

- Each disk drive on a separate line under each FC port to which it is visible:

```
cisco_A_1-1:9.126L1 : NETAPP X421_HCOBD450A10 NA01 418.0GB  
(879097968 520B/sect)  
cisco_A_1-1:9.126L2 : NETAPP X421_HCOBD450A10 NA01 418.0GB  
(879097968 520B/sect)
```

3. Check whether your system has disk autoassignment enabled from the console of either controller:

## **storage disk option show**

The autoassignment policy is shown in the Auto Assign column.

Node	BKg. FW. Upd.	Auto Copy	Auto Assign	Auto Assign Policy
node_A_1	on	on	on	default
node_A_2	on	on	on	default
2 entries were displayed.				

4. If your system does not have disk autoassignment enabled, or if disk drives in the same stack are owned by both controllers, assign disk drives to the appropriate pools.

### Disk and aggregate management



If you are splitting a single stack of disk shelves between two controllers, disk autoassignment must be disabled before you assign disk ownership; otherwise, when you assign any single disk drive, the remaining disk drives might be automatically assigned to the same controller and pool.

The `storage disk option modify -node node-name -autoassign off` command disables disk autoassignment.



Disk drives must not be added to aggregates or volumes until the disk drive and disk shelf firmware have been updated.

5. Update the disk shelf firmware to the most current version by using the instructions for the downloaded firmware.

You can run the commands in the procedure from the system console of either controller.

### [NetApp Downloads: Disk Shelf Firmware](#)

6. Install and cable the disk shelf:

Note the following considerations:

- For FibreBridge 6500N bridges:

Wait at least 10 seconds before connecting the port. The SAS cable connectors are keyed; when oriented correctly into a SAS port, the connector clicks into place and the disk shelf SAS port LNK LED illuminates green. For disk shelves, you insert a SAS cable connector with the pull tab oriented down (on the underside of the connector).

- For FibreBridge 7500N bridges:

Do not force a connector into a port. The mini-SAS cables are keyed; when oriented correctly into a SAS port, the SAS cable clicks into place and the disk shelf SAS port LNK LED illuminates green. For disk shelves, you insert a SAS cable connector with the pull tab oriented up (on the topside of the connector).

- a. Install the disk shelf, power it on, and set the shelf ID.

The *Installation Guide* for your disk shelf model provides detailed information about installing disk shelves.



You must power-cycle the disk shelf and keep the shelf IDs unique for each SAS disk shelf within the entire storage system.

- b. Disconnect the SAS cable from the IOM B port of the last shelf in the stack, and then reconnect it to the same port in the new shelf.

The other end of this cable remains connected to bridge B.

- c. Daisy-chain the new disk shelf by cabling the new shelf IOM ports (of IOM A and IOM B) to the last shelf IOM ports (of IOM A and IOM B).

The *Installation Guide* for your disk shelf model provides detailed information about daisy-chaining disk shelves.

7. Update the disk drive firmware to the most current version from the system console.

#### [NetApp Downloads: Disk Drive Firmware](#)

- a. Change to the advanced privilege level:

```
set -privilege advanced
```

You need to respond with **y** when prompted to continue into advanced mode and see the advanced mode prompt (\*>).

- b. Update the disk drive firmware to the most current version from the system console:

```
storage disk firmware update
```

- c. Return to the admin privilege level:

```
set -privilege admin
```

- d. Repeat the previous substeps on the other controller.

8. Verify the operation of the MetroCluster configuration in ONTAP:

- a. Check whether the system is multipathed:

```
node run -node node-name sysconfig -a
```

- b. Check for any health alerts on both clusters:

```
system health alert show
```

- c. Confirm the MetroCluster configuration and that the operational mode is normal:

```
metrocluster show
```

- d. Perform a MetroCluster check:

```
metrocluster check run
```

- e. Display the results of the MetroCluster check:

```
metrocluster check show
```

- f. Check for any health alerts on the switches (if present):

```
storage switch show
```

- g. Run Config Advisor.

#### [NetApp Downloads: Config Advisor](#)

- h. After running Config Advisor, review the tool's output and follow the recommendations in the output to address any issues discovered.
9. If you are hot-adding more than one disk shelf, repeat the previous steps for each disk shelf that you are hot-adding..

#### **Hot-adding an IOM12 disk shelf to a stack of IOM6 disk shelves in a bridge-attached MetroCluster configuration**

Depending on your version of ONTAP, you can hot-add an IOM12 disk shelf to a stack of IOM6 disk shelves in a bridge-attached MetroCluster configuration.

To perform this procedure, see [Hot-adding shelves with IOM12 modules to a stack of shelves with IOM6 modules](#).

## **Hot-removing storage from a MetroCluster FC configuration**

You can hot-remove drive shelves—physically remove shelves that have had the aggregates removed from the drives—from a MetroCluster FC configuration that is up and serving data. You can hot-remove one or more shelves from anywhere within a stack of shelves or remove a stack of shelves.

- Your system must be a multipath HA, multipath, quad-path HA, or quad-path configuration.
- In a four-node MetroCluster FC configuration, the local HA pair cannot be in a takeover state.
- You must have already removed all aggregates from the drives in the shelves that you are removing.



If you attempt this procedure on non-MetroCluster FC configurations with aggregates on the shelf you are removing, you could cause the system to fail with a multidrive panic.

Removing aggregates involves splitting the mirrored aggregates on the shelves you are removing, and then re-creating the mirrored aggregates with another set of drives.

#### [Disk and aggregate management](#)

- You must have removed drive ownership after removing the aggregates from the drives in the shelves that you are removing.

#### [Disk and aggregate management](#)

- If you are removing one or more shelves from within a stack, you must have factored the distance to bypass the shelves that you are removing.

If the current cables are not long enough, you need to have longer cables available.

This task applies to the following MetroCluster FC configurations:

- Direct-attached MetroCluster FC configurations, in which the storage shelves are directly connected to the storage controllers with SAS cables
- Fabric-attached or bridge-attached MetroCluster FC configurations, in which the storage shelves are connected using FC-to-SAS bridges

## Steps

1. Verify the operation of the MetroCluster configuration in ONTAP:

a. Check whether the system is multipathed:

```
node run -node node-name sysconfig -a
```

b. Check for any health alerts on both clusters:

```
system health alert show
```

c. Confirm the MetroCluster configuration and that the operational mode is normal:

```
metrocluster show
```

d. Perform a MetroCluster check:

```
metrocluster check run
```

e. Display the results of the MetroCluster check:

```
metrocluster check show
```

f. Check for any health alerts on the switches (if present):

```
storage switch show
```

g. Run Config Advisor.

[NetApp Downloads: Config Advisor](#)

h. After running Config Advisor, review the tool's output and follow the recommendations in the output to address any issues discovered.

2. Set the privilege level to advanced:

```
set -privilege advanced
```

3. Verify that no mailbox drive is on the shelves: **storage failover mailbox-disk show**

4. Remove the shelf according to the steps for the relevant scenario.

Scenario	Steps
To remove an aggregate when the shelf contains either unmirrored, mirrored, or both types of aggregate...	<p>a. Use the <code>storage aggregate delete -aggregate aggregate name</code> command to remove the aggregate.</p> <p>b. Use the standard procedure to remove ownership of all drives in that shelf, and then physically remove the shelf.</p> <p>Follow the instructions in the <i>SAS Disk Shelves Service Guide</i> for your shelf model to hot-remove shelves.</p>



# Replacing a shelf nondisruptively in a stretch MetroCluster configuration

You can replace disk shelves without disruption in a stretch MetroCluster configuration with a fully populated disk shelf or a disk shelf chassis and transfer components from the shelf you are removing.

The disk shelf model you are installing must meet the storage system requirements specified in the [Hardware Universe](#), which includes supported shelf models, supported disk drive types, the maximum number of disk shelves in a stack, and supported ONTAP versions.

## Steps

1. Properly ground yourself.
2. Identify all aggregates and volumes that have disks from the loop that contains the shelf you are replacing and make note of the affected plex name.  
Either node might contain disks from the loop of the affected shelf and host aggregates or host volumes.  
`/dpg_mcc_8020_13_a1_aggr1/plex`  
pool1  
RAID group  
I/O group (normal, block)
3. Choose one of the following two options based on the replacement scenario you are planning.
  - If you are replacing a complete disk shelf, including the shelf chassis, disks, and I/O modules (IOM), take the corresponding action as described in the table below:

Scenario	Action
<b>The affected plex contains fewer disks from the affected shelf.</b>	Replace the disks one-by-one on the affected shelf with spares from another shelf.   You can take the plex offline after completing the disk replacement.
<b>The affected plex contains more disks than are in the affected shelf.</b>	Move the plex offline and then delete the plex.
<b>The affected plex has any disk from the affected shelf.</b>	Move the plex offline but do not delete it.

- If you are replacing only the disk shelf chassis and no other components, perform the following steps:
- a. Offline the affected plexes from the controller where they are hosted:  
**aggregate offline**  
`FC:A 1 SAS 15000`  
`272000/557056000`  
`280104/573653840`  
`data mcc-cisco-8Gb-`  
`fab-3:1-1.126L14 0d 33 13`
  - b. Verify that the plexes are offline:  
**aggregate status -r**  
`FC:A 1 SAS 15000`  
`272000/557056000`  
`280104/573653840`  
`data mcc-cisco-8Gb-`  
`fab-3:1-1.126L41 0d 34 14`
4. Identify the controller SAS ports to which the affected shelf loop is connected and disable the SAS ports on both site controllers:  
**storage port disable -node node\_name -port SAS\_port**  
`FC:A 1 SAS 15000`  
`272000/557056000`  
`280104/573653840`  
`data mcc-cisco-8Gb-`  
`fab-3:1-1.126L15 0d 33 14`  
`FC:A 1 SAS 15000`  
`272000/557056000`

The affected shelf loop is connected to both sites.

5. Wait for ONTAP to recognize that the disk is missing. You can use the following commands to verify that the disk is missing: **sysconfig -a** or **sysconfig -r**.

6. Turn off the power switch on the disk shelf.

280104/1570152840  
data mcc-cisco-8Gb-

7. Unplug all power cords from the disk shelf.

fab-3:1-1.126L45 0d 34 18

8. Make a record of the ports from which you unplug the cables so that you can cable the new disk shelf in the same way.

280104/1570152840

9. Unplug and remove the cables connecting the disk shelf to the other disk shelves or the storage system.

b. Use the **storage aggregate plex delete**

**-aggregate aggr\_name -plex**

**plex\_name** command to remove the plex.

10. Remove the disk shelf from the rack.

**plex** defines the plex name, such as **plex3** or **plex6**.

To make the disk shelf lighter and easier to maneuver, remove the power supplies and IOM. If you will be installing a disk shelf chassis, also remove the disk drives or carriers. Otherwise, avoid removing disk drives or carriers if possible because excessive handling can cause internal drive damage.

11. Install and secure the replacement disk shelf onto the support brackets and rack.

c. Use the standard procedure to remove

12. If you installed a disk shelf chassis, reinstall power supplies and IOM of all drives in that shelf, and then

**physically remove the shelf**.

13. Reconfigure the stack of disk shelves by connecting all cables to the replacement disk shelf ports exactly as they were configured on the disk shelf that you removed.

Follow the instructions in the *SAS Disk Shelves*

14. Turn on the power to the replacement disk shelf and wait for the disk drives to spin up. Shelf model to hot-

15. Change the disk shelf ID to a unique ID from 0 through 98. Remove shelves.

16. Enable any SAS ports that you previously disabled and then wait for ONTAP to recognize that the disks are inserted.

You can use the following commands to verify that the disks are inserted: **sysconfig -a** or **sysconfig -r**.

17. If you are replacing the complete disk shelf (disk shelf chassis, disks, IOM), perform the following steps:



If you are replacing only the disk shelf chassis and no other components, go to Step 19.

- a. Use the **storage disk option modify -autoassign** command to determine whether disk auto assignment is enabled (on).

Disk assignment will occur automatically.

- b. If disk auto assignment is not enabled, assign disk ownership manually.

18. Move the plexes back online: **aggregate online plex name**

19. Recreate any plexes that were deleted by mirroring the aggregate.

20. Monitor the plexes as they begin resynchronizing:

**aggregate status -r <aggregate name>**

21. Verify that the storage system is functioning as expected:

**system health alert show**

# Replacing a shelf nondisruptively in a fabric-attached MetroCluster configuration

You might need to know how to replace a shelf nondisruptively in a fabric-attached MetroCluster configuration.



This procedure is only for use in a fabric-attached MetroCluster configuration.

## Disabling access to the shelf

You must disable access to the shelf before you replace the shelf modules.

Check the overall health of the configuration. If the system does not appear healthy, address the issue first before proceeding.

### Steps

1. Offline the affected plexes on the controller where they are hosted:

```
aggr offline plex_name
```

The example shows the commands for offlining plexes for a controller running cMode.

```
Cluster_A_1::> storage aggregate plex offline -aggr aggr1 -plex plex2
Cluster_A_1::> storage aggregate plex offline -aggr aggr2 -plex plex6
Cluster_A_1::> storage aggregate plex offline -aggr aggr3 -plex plex1
```

2. Verify that the plexes are offline:

```
aggr status -raggr_name
```


The example shows the commands for verifying that the aggregates are offline for a controller running cMode.

```
Cluster_A_1::> storage aggregate show -aggr aggr1
Cluster_A_1::> storage aggregate show -aggr aggr2
Cluster_A_1::> storage aggregate show -aggr aggr3
```

3. Disable the SAS ports or switch ports depending on whether the bridges connecting the target shelf are connecting a single SAS stack or two or more SAS stacks:

- If the bridges are connecting a single SAS stack, disable the switch ports that the bridges are connected to using the appropriate command for your switch.

The following example shows a pair of bridges that connect a single SAS stack, which contains the target shelf:

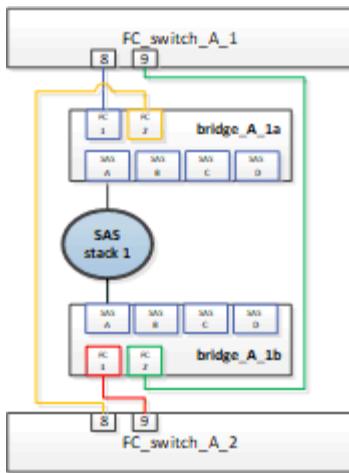

Switch ports 8 and 9 on each switch connect the bridges to the network.

The following example shows ports 8 and 9 being disabled on a Brocade switch.

```
FC_switch_A_1:admin> portDisable 8
FC_switch_A_1:admin> portDisable 9

FC_switch_A_2:admin> portDisable 8
FC_switch_A_2:admin> portDisable 9
```

The following example shows port 8 and 9 being disabled on a Cisco switch.

```
FC_switch_A_1# conf t
FC_switch_A_1(config)# int fc1/8
FC_switch_A_1(config)# shut
FC_switch_A_1(config)# int fc1/9
FC_switch_A_1(config)# shut
FC_switch_A_1(config)# end

FC_switch_A_2# conf t
FC_switch_A_2(config)# int fc1/8
FC_switch_A_2(config)# shut
FC_switch_A_2(config)# int fc1/9
FC_switch_A_2(config)# shut
FC_switch_A_2(config)# end
```

- If the bridges are connecting two or more SAS stacks, disable the SAS ports connecting the bridges to the target shelf:


**SASportDisable port number**



This is not applicable to FibreBridge 6500 bridges.

The following example shows a pair of bridges that connect four SAS stacks. SAS stack 2 contains the

target shelf:

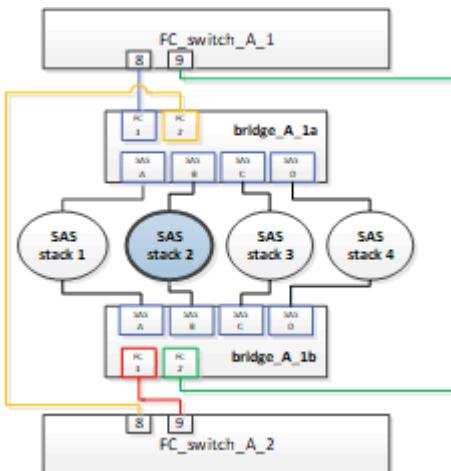

SAS port B connects the bridges to the target shelf. By disabling only SAS port B on both shelves, the other SAS stacks can continue to serve data during the replacement procedure.

In this case, disable the SAS port connecting the bridge to the target shelf:

**SASPortDisable port number**

The following example shows SAS port B being disabled from the bridge and also verifies that it is disabled. You must repeat the command on both bridges.

```
Ready. *
SASPortDisable B

SAS Port B has been disabled.
```

4. If you previously disabled the switch ports, verify that they are disabled:

**switchShow**

The example shows that the switch ports are disabled on a Brocade switch.

```
FC_switch_A_1:admin> switchShow
FC_switch_A_2:admin> switchShow
```

The example shows that the switch ports are disabled on a Cisco switch.

```
FC_switch_A_1# show interface fc1/6
FC_switch_A_2# show interface fc1/6
```

5. Wait for ONTAP to realize that the disk is missing.
6. Power off the shelf that you want to replace.

## **Replacing the shelf**

You must physically remove all of the cables and the shelf before inserting and cabling the new shelf and shelf modules.

### **Steps**

1. Remove all disks and disconnect all cables from the shelf that is being replaced.
2. Remove the shelf modules.
3. Insert the new shelf.
4. Insert the new disks into the new shelf.
5. Insert the shelf modules.
6. Cable the shelf (SAS or Power).
7. Power on the shelf.

## **Reenabling access and verifying the operation**

After the shelf has been replaced, you need to reenable access and verify that the new shelf is operating correctly.

### **Steps**

1. Verify that the shelf powers properly and the links on the IOM modules are present.
2. Enable the switch ports or SAS port according to the following scenarios:

Option	Step
<b>If you previously disabled switch ports</b>	<p>a. Enable the switch ports: <b>portEnable port number</b> The example shows the switch port being enabled on a Brocade switch.</p> <pre data-bbox="926 333 1454 407">Switch_A_1:admin&gt; portEnable 6 Switch_A_2:admin&gt; portEnable 6</pre> <p>The example shows the switch port being enabled on a Cisco switch.</p> <pre data-bbox="926 608 1432 956">Switch_A_1# conf t Switch_A_1(config)# int fc1/6 Switch_A_1(config)# no shut Switch_A_1(config)# end  Switch_A_2# conf t Switch_A_2(config)# int fc1/6 Switch_A_2(config)# no shut Switch_A_2(config)# end</pre>
<b>If you previously disabled a SAS port</b>	<p>a. Enable the SAS port connecting the stack to the shelf location: <b>SASPortEnable port number</b></p> <p>The example shows SAS port A being enabled from the bridge and also verifies that it is enabled.</p> <pre data-bbox="878 1332 1144 1406">Ready. * SASPortEnable A</pre> <pre data-bbox="878 1459 1361 1488">SAS Port A has been enabled.</pre> <p> This is not applicable to ATTO 6500 FibreBridges.</p>

3. If you previously disabled the switch ports, verify that they are enabled and online and that all devices are logged in correctly:

#### **switchShow**

The example shows the **switchShow** command for verifying that a Brocade switch is online.

```
Switch_A_1:admin> SwitchShow  
Switch_A_2:admin> SwitchShow
```

The example shows the **switchShow** command for verifying that a Cisco switch is online.

```
Switch_A_1# show interface fc1/6  
Switch_A_2# show interface fc1/6
```



After several minutes, ONTAP detects that new disks have been inserted and displays a message for each new disk.

4. Verify that the disks have been detected by ONTAP:

```
sysconfig -a
```

5. Online the plexes that were offline earlier:

```
aggr onlineplex_name
```

The example shows the commands for placing plexes on a controller running cMode back online.

```
Cluster_A_1::> storage aggregate plex online -aggr aggr1 -plex plex2  
Cluster_A_1::> storage aggregate plex online -aggr aggr2 -plex plex6  
Cluster_A_1::> storage aggregate plex online -aggr aggr3 -plex plex1
```

The plexes begin to resynchronize.



You can monitor the progress of resynchronization using the **aggr status -raggr\_name** command.

## When to migrate root volumes to a new destination

You might need to move root volumes to another root aggregate within a two-node or four-node MetroCluster configuration.

### Migrating root volumes within a two-node MetroCluster configuration

To migrate root volumes to a new root aggregate within a two-node MetroCluster configuration, you should refer to the procedure in the following Knowledgebase article. This procedure shows you how to non-disruptively migrate the root volumes during a MetroCluster switchover operation. This procedure is slightly different than the procedure used on a four-node configuration.

[How to move mroot to a new root aggregate in a 2-node Clustered MetroCluster with Switchover](#)

## Migrating root volumes within a four-node MetroCluster configuration

To migrate root volumes to a new root aggregate within a four-node MetroCluster configuration, you can use the [system node migrate-root](#) command while meeting the following requirements.

- You can use system node migrate-root to move root aggregates within a four-node MetroCluster configuration.
- All root aggregates must be mirrored.
- You can add new shelves on both sites with smaller SSDs to host the root aggregate.
- You must check the SSD limits that the platform supports before attaching new disks.

### [NetApp Hardware Universe](#)

- If you move the root aggregate to smaller disks, you need to accommodate the minimum root volume size of the platform to ensure all core files are saved.



The four-node procedure can also be applied to an eight-node configuration.

## Moving a metadata volume in MetroCluster configurations

You can move a metadata volume from one aggregate to another aggregate in a MetroCluster configuration. You might want to move a metadata volume when the source aggregate is decommissioned or unmirrored, or for other reasons that make the aggregate ineligible.

- You must have cluster administrator privileges to perform this task.
- The target aggregate must be mirrored and should not be in the degraded state.
- The available space in the target aggregate must be larger than the metadata volume that you are moving.

### Steps

1. Set the privilege level to advanced:

```
set -privilege advanced
```

2. Identify the metadata volume that should be moved:

```
volume show MDV_CRS*
```

```

Cluster_A::> volume show MDV_CRS*
Vserver      Volume          Aggregate      State       Type       Size
Available    Used%
-----  -----
-----  -----
Cluster_A
    MDV_CRS_14c00d4ac9f311e7922800a0984395f1_A
        Node_A_1_aggr1
                    online     RW      10GB
9.50GB      5%
Cluster_A
    MDV_CRS_14c00d4ac9f311e7922800a0984395f1_B
        Node_A_2_aggr1
                    online     RW      10GB
9.50GB      5%
Cluster_A
    MDV_CRS_15035e66c9f311e7902700a098439625_A
        Node_B_1_aggr1
                    -           RW      -
-
-
Cluster_A
    MDV_CRS_15035e66c9f311e7902700a098439625_B
        Node_B_2_aggr1
                    -           RW      -
-
-
4 entries were displayed.

Cluster_A::>

```

3. Identify an eligible target aggregate:

**metrocluster check config-replication show-aggregate-eligibility**

The following command identifies the aggregates in cluster\_A that are eligible to host metadata volumes:

```

Cluster_A::>* metrocluster check config-replication show-aggregate-
eligibility

Aggregate Hosted Config Replication Vols Host Addl Vols Comments
----- -----
----- 
Node_A_1_aggr0 - false Root Aggregate
Node_A_2_aggr0 - false Root Aggregate
Node_A_1_aggr1 MDV CRS 1bc7134a5ddf11e3b63f123478563412_A true -
Node_A_2_aggr1 MDV CRS 1bc7134a5ddf11e3b63f123478563412_B true -
Node_A_1_aggr2 - true
Node_A_2_aggr2 - true
Node_A_1_Aggr3 - false Unable to determine available space of aggregate
Node_A_1_aggr5 - false Unable to determine mirror configuration
Node_A_2_aggr6 - false Mirror configuration does not match requirement
Node_B_1_aggr4 - false NonLocal Aggregate

```



In the previous example, Node\_A\_1\_aggr2 and Node\_A\_2\_aggr2 are eligible.

#### 4. Start the volume move operation:

```
volume move start -vserver svm_name -volume metadata_volume_name -destination-
-aggregate destination_aggregate_name
```

The following command moves metadata volume MDV CRS 14c00d4ac9f311e7922800a0984395f1 from aggregate Node\_A\_1\_aggr1 to aggregate Node\_A\_1\_aggr2:

```

Cluster_A::>* volume move start -vserver svm_cluster_A -volume
MDV CRS 14c00d4ac9f311e7922800a0984395f1
-destination-aggregate aggr_cluster_A_02_01

Warning: You are about to modify the system volume
        "MDV CRS 9da04864ca6011e7b82e0050568be9fe_A". This may cause
severe
        performance or stability problems. Do not proceed unless
directed to
        do so by support. Do you want to proceed? {y|n}: y
[Job 109] Job is queued: Move
"MDV CRS 9da04864ca6011e7b82e0050568be9fe_A" in Vserver
"svm_cluster_A" to aggregate "aggr_cluster_A_02_01".
Use the "volume move show -vserver svm_cluster_A -volume
MDV CRS 9da04864ca6011e7b82e0050568be9fe_A" command to view the status
of this operation.

```

5. Verify the state of the volume move operation:

```
volume move show -volume vol_constituent_name
```

6. Return to the admin privilege level:

```
set -privilege admin
```

## Renaming a cluster in MetroCluster configurations

Renaming a cluster in a MetroCluster configuration involves making the changes, and then verifying on both the local and remote clusters that the change took effect correctly.

### Steps

1. View the cluster names using the

```
metrocluster node show
```

command:

```
cluster_1::>* metrocluster node show
DR                         Configuration   DR
Group Cluster Node          State        Mirroring Mode
-----  -----  -----
-----  -----
1      cluster_1
      node_A_1           configured    enabled    normal
      node_A_2           configured    enabled    normal
      cluster_2
      node_B_1           configured    enabled    normal
      node_B_2           configured    enabled    normal
4 entries were displayed.
```

2. Rename the cluster:

```
cluster identity modify -name new_name
```

In the following example, the `cluster_1` cluster is renamed `cluster_A`:

```
cluster_1::>* cluster identity modify -name cluster_A
```

3. Verify on the local cluster that the renamed cluster is running normally:

```
metrocluster node show
```

In the following example, the newly renamed `cluster_A` is running normally:

```

cluster_A::*> metrocluster node show
DR                               Configuration   DR
Group Cluster Node              State        Mirroring Mode
----- -----
----- 
1      cluster_A
      node_A_1           configured    enabled   normal
      node_A_2           configured    enabled   normal
cluster_2
      node_B_1           configured    enabled   normal
      node_B_2           configured    enabled   normal
4 entries were displayed.

```

4. Rename the remote cluster:

```
cluster peer modify-local-name -name cluster_2 -new-name cluster_B
```

In the following example, `cluster_2` is renamed `cluster_B`:

```

cluster_2::> cluster peer modify-local-name -name cluster_2 -new-name
cluster_B

```

5. Verify on the remote cluster that the local cluster was renamed and is running normally:

```
metrocluster node show
```

In the following example, the newly renamed `cluster_B` is running normally:

```

cluster_B::*> metrocluster node show
DR                               Configuration   DR
Group Cluster Node              State        Mirroring Mode
----- -----
----- 
1      cluster_B
      node_B_1           configured    enabled   normal
      node_B_2           configured    enabled   normal
cluster_A
      node_A_1           configured    enabled   normal
      node_A_2           configured    enabled   normal
4 entries were displayed.

```

6. Repeat these steps for each cluster that you want to rename.

# Powering off and powering on a data center

You must know how to power off and power on a data center for the purpose of site maintenance or to relocate a site to another location.

If a site needs to be relocated and reconfigured (if you need to expand from a four-node to an eight-node cluster, for example), these tasks cannot be completed at the same time. This procedure only covers the steps that are required to perform site maintenance or to relocate a site without changing its configuration.



This procedure is for use in both MetroCluster IP and FC configurations.

## Powering off a MetroCluster site

You must power off a site and all of the equipment before site maintenance or relocation can begin.

### Steps

1. Before you begin, check that any non-mirrored aggregates at the site are offline.
2. Verify the operation of the MetroCluster configuration in ONTAP:
  - a. Check whether the system is multipathed:  
`node run -node node-name sysconfig -a`
  - b. Check for any health alerts on both clusters:  
`system health alert show`
  - c. Confirm the MetroCluster configuration and that the operational mode is normal:  
`metrocluster show`
  - d. Perform a MetroCluster check:  
`metrocluster check run`
  - e. Display the results of the MetroCluster check:  
`metrocluster check show`
  - f. Check for any health alerts on the switches (if present):  
`storage switch show`
  - g. Run Config Advisor.

[NetApp Downloads: Config Advisor](#)

- h. After running Config Advisor, review the tool's output and follow the recommendations in the output to address any issues discovered.
3. Enter the following command to implement the switchover:

`metrocluster switchover`

The operation can take several minutes to complete.

In MetroCluster FC configurations, the unmirrored aggregates will only be online after a switchover if the remote disks in the aggregate are accessible. If the ISLs fail, the local node may be unable to access the data in the unmirrored remote disks. The failure of an aggregate can lead to a reboot of the local node.

4. Monitor and verify the completion of the switchover:

```
metrocluster operation show
```

```
cluster_A::>* metrocluster operation show
  Operation: Switchover
  Start time: 10/4/2012 19:04:13
  State: in-progress
  End time: -
  Errors:

cluster_A::>* metrocluster operation show
  Operation: Switchover
  Start time: 10/4/2012 19:04:13
  State: successful
  End time: 10/4/2012 19:04:22
  Errors: -
```

5. If you are in a MetroCluster IP configuration running ONTAP 9.6 or later, wait for the disaster site plexes to come online and the healing operations to automatically complete.

In MetroCluster IP configurations running earlier versions of ONTAP, the disaster site nodes do not automatically boot to ONTAP and the plexes remain offline.

6. Depending on your configuration and ONTAP version, identify and move offline affected plexes that are located at the disaster site.

This step is required in the following configurations:



- All MetroCluster FC configurations.
- MetroCluster IP configurations running ONTAP version 9.6 or later.

You should move the following plexes offline:

- Non-mirrored plexes residing on disks located at the disaster site.

If you do not move the non-mirrored plexes at the disaster site offline, an outage might result when the disaster site is later powered off.

- Mirrored plexes residing on disks located at the disaster site for aggregate mirroring. Once they are moved offline, the plexes are inaccessible.
  - a. Identify the affected plexes.

Plexes that are owned by nodes at the surviving site consist of Pool1 disks. Plexes that are owned by nodes at the disaster site consist of Pool0 disks.



“Home” refers to the “home” owner, not the “current” owner.

```
Cluster_A::> storage aggregate plex show -fields
aggregate,status,is-online,Plex,pool
aggregate    plex    status      is-online pool
-----
Node_B_1_aggr0 plex0 normal,active true      0
Node_B_1_aggr0 plex1 normal,active true      1

Node_B_2_aggr0 plex0 normal,active true      0
Node_B_2_aggr0 plex5 normal,active true      1

Node_B_1_aggr1 plex0 normal,active true      0
Node_B_1_aggr1 plex3 normal,active true      1

Node_B_2_aggr1 plex0 normal,active true      0
Node_B_2_aggr1 plex1 normal,active true      1

Node_A_1_aggr0 plex0 normal,active true      0
Node_A_1_aggr0 plex4 normal,active true      1

Node_A_1_aggr1 plex0 normal,active true      0
Node_A_1_aggr1 plex1 normal,active true      1

Node_A_2_aggr0 plex0 normal,active true      0
Node_A_2_aggr0 plex4 normal,active true      1

Node_A_2_aggr1 plex0 normal,active true      0
Node_A_2_aggr1 plex1 normal,active true      1
14 entries were displayed.

Cluster_A::>
```

The affected plexes are those that are remote to cluster A. The following table shows whether the disks are local or remote relative to cluster A:

<b>Node</b>	<b>Disks in pool</b>	<b>Should the disks be set offline?</b>	<b>Example of plexes to be moved offline</b>
Node_A_1 and Node_A_2	Disks in pool 0	No. Disks are local to cluster A.	-
	Disks in pool 1	Yes. Disks are remote to cluster A.	Node_A_1_aggr0/plex 4 Node_A_1_aggr1/plex 1 Node_A_2_aggr0/plex 4 Node_A_2_aggr1/plex 1
Node_B_1 and Node_B_2	Disks in pool 0	Yes. Disks are remote to cluster A.	Node_B_1_aggr1/plex 0 Node_B_1_aggr0/plex 0 Node_B_2_aggr0/plex 0 Node_B_2_aggr1/plex 0
	Disks in pool 1	No. Disks are local to cluster A.	-

- b. Move the affected plexes offline:

**storage aggregate plex offline**

```
storage aggregate plex offline -aggregate Node_B_1_aggr0 -plex
plex0
```



Perform this for all plexes that have disks that are remote to Cluster\_A.

7. Persistently offline the switchports according to the switch type.



This step is only required for MetroCluster FC configurations. Skip this step if your configuration is a MetroCluster IP configuration or a stretched MetroCluster configuration with FC backend switches.



Switch type	Action
If the FC switches are Brocade switches...	<p>a. Use the <b>portcfgpersistentdisable port</b> command to persistently disable the ports as shown in the following example. This must be done on both switches at the surviving site.</p> <pre data-bbox="915 361 1400 557"> Switch_A_1:admin&gt; portcfgpersistentdisable 14 Switch_A_1:admin&gt; portcfgpersistentdisable 15 Switch_A_1:admin&gt;</pre> <p>b. Verify that the ports are disabled using the <b>switchshow</b> command shown in the following example:</p> <pre data-bbox="915 798 1432 2029"> Switch_A_1:admin&gt; switchshow switchName:      Switch_A_1 switchType:      109.1 switchState:     Online switchMode:      Native switchRole:      Principal switchDomain:   2 switchId:       fffc02 switchWwn: 10:00:00:05:33:88:9c:68 zoning:          ON (T5_T6) switchBeacon:    OFF FC Router:      OFF FC Router BB Fabric ID: 128 Address Mode:   0  Index Port Address Media Speed State Proto ===== ===== ... 14 14 020e00 id 16G No_Light FC Disabled (Persistent) 15 15 020f00 id 16G No_Light FC Disabled (Persistent) ... Switch_A_1:admin&gt;</pre>

Switch type	Action
If the FC switches are Cisco switches...	<p>a. Use the <b>interface</b> command to persistently disable the ports. The following example shows ports 14 and 15 being disabled:</p> <pre data-bbox="910 333 1454 642">Switch_A_1# conf t Switch_A_1(config)# interface fc1/14-15 Switch_A_1(config)# shut  Switch_A_1(config-if)# end Switch_A_1# copy running- config startup-config</pre> <p>b. Verify that the switch port is disabled using the <b>show interface brief</b> command as shown in the following example:</p> <pre data-bbox="910 882 1393 994">Switch_A_1# show interface brief Switch_A_1</pre>

## 8. Power off the site.

The following equipment needs to be turned off in no specific order:

Configuration type	Equipment to be powered off
In a MetroCluster IP configuration, power off...	<ul style="list-style-type: none"> <li>• MetroCluster IP switches</li> <li>• Storage controllers</li> <li>• Storage shelves</li> </ul>
In a MetroCluster FC configuration, power off...	<ul style="list-style-type: none"> <li>• MetroCluster FC switches</li> <li>• Storage controllers</li> <li>• Storage shelves</li> <li>• Atto FibreBridges (if present)</li> </ul>

## Relocating the powered-off site of the MetroCluster

Once the site is powered off, you can begin maintenance work. The procedure is the same whether the MetroCluster components are relocated within the same data center or relocated to a different data center.

- The hardware should be cabled in the same way as the previous site.
- If the Inter-Switch Link (ISL) speed, length, or number has changed, they all need to be reconfigured.

## Steps

1. Make sure that the cabling for all components is carefully recorded so that it can be correctly reconnected at the new location.
2. Physically relocate all the hardware, storage controllers, FC and IP switches, FibreBridges, and storage shelves.
3. Configure the ISL ports and verify the intersite connectivity.
  - a. Power on the FC and IP switches.



Do **not** power up any other equipment.

4. Enable the ports.



This step is only required in MetroCluster FC configurations. You can skip this step if your configuration is a MetroCluster IP configuration.

Enable the ports according to the correct switch types in the following table:



Switch type	Command
If the FC Switches are Brocade switches...	<p>a. Use the <b>portcfgpersistentenable port number</b> command to persistently enable the port. This must be done on both switches at the surviving site.</p> <p>The following example shows ports 14 and 15 being enabled on Switch_A_1.</p> <pre data-bbox="910 466 1383 656">switch_A_1:admin&gt; portcfgpersistentenable 14 switch_A_1:admin&gt; portcfgpersistentenable 15 switch_A_1:admin&gt;</pre> <p>b. Verify that the switch port is enabled: <b>switchshow</b></p> <p>The following example shows that ports 14 and 15 are enabled:</p>

Switch type	Command
If the FC Switches are Cisco switches...	<p>a. Enter the <b>interface</b> command to enable the port.</p> <p>The following example shows ports 14 and 15 being enabled on Switch_A_1.</p> <pre data-bbox="926 403 1454 671">switch_A_1# conf t switch_A_1(config)# interface fc1/14-15 switch_A_1(config)# no shut switch_A_1(config-if)# end switch_A_1# copy running- config startup-config</pre> <p>b. Verify that the switch port is enabled: <b>show interface brief</b></p> <pre data-bbox="926 882 1393 988">switch_A_1# show interface brief switch_A_1#</pre>

5. Use tools on the switches (as they are available) to verify the intersite connectivity.	14 14 020e00 id 16G Online FC E-Port 10:00:00:05:33:86:89:cb SWITCH_A_1
6. Disable the links again if they are found to be stable.  Disable the ports based on whether you are using Brocade or Cisco switches as shown in the following table:	15 15 020f00 id 16G Online FC E-Port 10:00:00:05:33:86:89:cb "Switch_A_1" (downstream) ... switch_A_1:admin>



Switch type	Command
If the FC Switches are Brocade switches...	<p>a. Enter the <b>portcfgpersistentdisable port number</b> command to persistently disable the port.</p> <p>This must be done on both switches at the surviving site. The following example shows ports 14 and 15 being disabled on Switch_A_1:</p> <pre data-bbox="910 460 1351 656"> switch_A_1:admin&gt; portpersistentdisable 14 switch_A_1:admin&gt; portpersistentdisable 15 switch_A_1:admin&gt;</pre> <p>b. Verify that the switch port is disabled: <b>switchshow</b></p> <p>The following example shows that ports 14 and 15 are disabled:</p>

Switch type	Command
If the FC Switches are Cisco switches...	<p>a. Disable the port using the <b>interface</b> command.</p> <p>The following example shows ports fc1/14 and fc1/15 being disabled on Switch A_1:</p> <pre data-bbox="926 397 1437 713">switch_A_1# conf t  switch_A_1(config)# interface fc1/14-15 switch_A_1(config)# shut switch_A_1(config-if)# end switch_A_1# copy running- config startup-config</pre> <p>b. Verify that the switch port is disabled using the <b>show interface brief</b> command.</p> <pre data-bbox="926 914 1416 1020">switch_A_1# show interface brief switch_A_1#</pre>

## Powering on the MetroCluster configuration and returning to normal operation

After maintenance has been completed or the site has been moved, you must power on the site and reestablish the MetroCluster configuration. . .

### Steps

1. Power on the switches.

Switches should be powered on first. They might have been powered on during the previous step if the site was relocated.

- a. Reconfigure the Inter-Switch Link (ISL) if required or if this was not completed as part of the relocation.
  - b. Enable the ISL if fencing was completed.
  - c. Verify the ISL.
2. Power on the shelves and allow enough time for them to power on completely.
  3. Power on the FibreBridge bridges.



You can skip this step if your configuration is a MetroCluster IP configuration.

- a. On the FC switches, verify that the ports connecting the bridges are coming online.

You can use a command such as `switchshow` for Brocade switches, and `show interface brief` for Cisco switches.

- b. Verify that the shelves and disks on the bridges are clearly visible.

You can use a command such as `sastargets` on the ATTO command-line interface (CLI).

4. Enable the ISLs on the FC switches.



Skip this step if your configuration is a MetroCluster IP configuration.

Enable the ports based on whether you are using Brocade or Cisco switches as shown in the following table:



Switch type	Command
If the FC Switches are Brocade switches...	<p>a. Enter the <b>portcfgpersistentenable port</b> command to persistently enable the ports. This must be done on both switches at the surviving site.</p> <p>The following example shows ports 14 and 15 being enabled on Switch_A_1:</p> <pre data-bbox="910 460 1383 656"> Switch_A_1:admin&gt; portcfgpersistentenable 14 Switch_A_1:admin&gt; portcfgpersistentenable 15 Switch_A_1:admin&gt;</pre> <p>b. Verify that the switch port is enabled using the <b>switchshow</b> command:</p>

Switch type	Command
If the FC Switches are Cisco switches...	<p>a. Use the <b>interface</b> command to enable the ports.</p> <p>The following example shows port fc1/14 and fc1/15 being enabled on Switch A_1:</p> <pre data-bbox="926 403 1454 671">switch_A_1# conf t switch_A_1(config)# interface fc1/14-15 switch_A_1(config)# no shut switch_A_1(config-if)# end switch_A_1# copy running- config startup-config</pre> <p>b. Verify that the switch port is disabled:</p> <pre data-bbox="926 840 1380 946">switch_A_1# show interface brief switch_A_1#</pre>

## 5. Verify that the storage is now visible.

Select the appropriate method of determining whether the storage is visible based on whether you have a MetroCluster IP or FC configuration:

=====

...

14	14	020e00	id	16G
Online	FC	E-Port		
10:00:00:05:33:86:89:cb				

Configuration	Step
If your configuration is a MetroCluster IP...	Verify that the local storage is visible from the node Maintenance mode.
If your configuration is a MetroCluster FC...	Verify that the storage is visible from the surviving site. Put the offline plexes back online. This restarts the resync operations and reestablishes the SyncMirror.

## 6. Reestablish the MetroCluster configuration.

Follow the instructions in the *MetroCluster Disaster and Recovery Guide* to perform healing and switchback operations according to your MetroCluster configuration.

[MetroCluster management and disaster recovery](#)

# Powering off an entire MetroCluster IP configuration

You must power off the entire MetroCluster IP configuration and all of the equipment before maintenance or relocation can begin.



Starting with ONTAP 9.8, the `storage switch` command is replaced with `system switch`. The following steps show the `storage switch` command, but if you are running ONTAP 9.8 or later, the `system switch` command is preferred.

1. Verify the MetroCluster configuration from both sites in the MetroCluster configuration.
  - a. Confirm that the MetroCluster configuration and operational mode are normal.  
`metrocluster show`
  - b. Run the following command:  
`metrocluster interconnect show`
  - c. Confirm connectivity to the disks by entering the following command on any one of the MetroCluster nodes:  
`run local sysconfig -v`
  - d. Run the following command:  
`storage port show`
  - e. Run the following command:  
`storage switch show`
  - f. Run the following command:  
`network interface show`
  - g. Run the following command:  
`network port show`
  - h. Run the following command:  
`network device-discovery show`
  - i. Perform a MetroCluster check:  
`metrocluster check run`
  - j. Display the results of the MetroCluster check:  
`metrocluster check show`
  - k. Run the following command:  
`metrocluster configuration-settings interface show`
2. If necessary, disable AUSO by modifying the AUSO Failure Domain to  
`auso-disabled`

```
cluster_A_site_A::>metrocluster modify -auto-switchover-failure-domain auso-disabled
```



In a MetroCluster IP configuration, the AUSO Failure Domain is already set to 'auso-disabled' unless the configuration is configured with ONTAP Mediator.

3. Verify the change using the command

```
metrocluster operation show
```

```
cluster_A_site_A::*> metrocluster operation show
    Operation: modify
        State: successful
    Start Time: 4/25/2020 20:20:36
    End Time: 4/25/2020 20:20:36
    Errors: -
```

4. Halt the nodes:

```
halt
```

```
system node halt -node node1_SiteA -inhibit-takeover true -ignore-quorum
-warnings true
```

5. Power off the following equipment at the site:

- Storage controllers
- MetroCluster IP switches
- Storage shelves

6. Wait for thirty minutes and then power on all the controllers.

7. After the controllers are powered on, verify the MetroCluster configuration from both sites.

To verify the configuration, repeat step 1.

8. Perform power cycle checks.

- a. Verify that all sync-source SVMs are online:

```
vserver show
```

- b. Start any sync-source SVMs that are not online:

```
vserver start
```

## Powering off an entire MetroCluster FC configuration

You must power off the entire MetroCluster FC configuration and all of the equipment before site maintenance or relocation can begin.



Starting with ONTAP 9.8, the `storage switch` command is replaced with `system switch`. The following steps show the `storage switch` command, but if you are running ONTAP 9.8 or later, the `system switch` command is preferred.

1. Verify the MetroCluster configuration from both sites in the MetroCluster configuration.

- a. Confirm the MetroCluster configuration and that the operational mode is normal.  
`metrocluster show`
- b. Confirm connectivity to the disks by entering the following command on any one of the MetroCluster nodes:  
`run local sysconfig -v`
- c. Run the following command:  
`storage bridge show`
- d. Run the following command:  
`storage port show`
- e. Run the following command:  
`storage switch show`
- f. Run the following command:  
`network port show`
- g. Perform a MetroCluster check:  
`metrocluster check run`
- h. Display the results of the MetroCluster check:  
`metrocluster check show`

## 2. Disable AUSO by modifying the AUSO Failure Domain to

**auso-disabled**

```
cluster_A_site_A::>*>metrocluster modify -auto-switchover-failure-domain  
auso-disabled
```

## 3. Verify the change using the command

**metrocluster operation show**

```
cluster_A_site_A::>*> metrocluster operation show  
Operation: modify  
State: successful  
Start Time: 4/25/2020 20:20:36  
End Time: 4/25/2020 20:20:36  
Errors: -
```

## 4. Halt the nodes by using the following command:

**halt** \* For a four-node or eight-node MetroCluster configuration, use the parameter  
**\*inhibit-takeover**

+

```
system node halt -node node1_SiteA -inhibit-takeover true -ignore-quorum  
-warnings true
```

- For a two-node MetroCluster configuration, use the command:

```
system node halt -node node1_SiteA -ignore-quorum-warnings true
```

5. Power off the following equipment at the site:

- Storage controllers
- MetroCluster FC switches
- ATTO FibreBridges
- Storage shelves

6. Wait for thirty minutes and then power on all the controllers.

7. After the controllers are powered on, verify the MetroCluster configuration from both sites.

To verify the configuration, repeat step 1.

8. Perform power cycle checks.

- Verify that all sync-source SVMs are online:

**vserver show**

- Start any sync-source SVMs that are not online:

**vserver start**

## Reconfiguring an FC switch layout configured before ONTAP 9.x

If your existing FC switch layout was configured prior to ONTAP 9.1, you must reconfigure the port layout and apply the latest Reference Configuration Files (RCFs). This procedure applies only to MetroCluster FC configurations.

You must identify the FC switches present in the fabric domain.

You need the admin password and access to an FTP or SCP server.

You must perform this task if your existing FC switch layout was configured prior to ONTAP 9.1. It is *not* required if you are upgrading from an existing switch layout that was configured for ONTAP 9.1 or later.

This procedure is nondisruptive and takes approximately four hours to complete (excluding rack and stack) when disks are zeroed.

### Sending a custom AutoSupport message prior to reconfiguring switches

Before reconfiguring your switches, you should issue an AutoSupport message to notify NetApp technical support that maintenance is underway. Informing technical support that

maintenance is underway prevents them from opening a case on the assumption that a disruption has occurred.

This task must be performed on each MetroCluster site.

#### Steps

1. Log in to the cluster.
2. Invoke an AutoSupport message indicating the start of the maintenance:

```
system node autosupport invoke -node * -type all -message MAINT=maintenance-window-in-hours*
```

`maintenance-window-in-hours` specifies the length of the maintenance window, with a maximum of 72 hours. If the maintenance is completed before the time has elapsed, you can invoke an AutoSupport message indicating the end of the maintenance period:

```
system node autosupport invoke -node * -type all -message MAINT=end
```

3. Repeat these steps on the partner site.

## Verifying the health of the MetroCluster configuration

You should check the health of the MetroCluster configuration to verify proper operation.

#### Steps

1. Verify that the MetroCluster components are healthy:

```
metrocluster check run
```

```
cluster_A:::> metrocluster check run
```

The operation runs in the background.

2. After the `metrocluster check run` operation completes, run `metrocluster check show` to view the results.

After approximately five minutes, the following results are displayed:

```

-----
cluster_A::>*> metrocluster check show

Last Checked On: 4/7/2019 21:15:05

Component          Result
-----
nodes              ok
lifs               ok
config-replication ok
aggregates        warning
clusters           ok
connections       not-applicable
volumes            ok
7 entries were displayed.

```

3. To check the status of the running MetroCluster check operation, use the command:

**metrocluster operation history show -job-id 38**

4. Verify that there are no health alerts:

**system health alert show**

## Checking for MetroCluster configuration errors

You can use the Config Advisor tool available from the NetApp Support Site to check for common configuration errors.

Config Advisor is a configuration validation and health check tool. You can deploy it at both secure sites and non-secure sites for data collection and system analysis.



Support for Config Advisor is limited, and available only online.

1. Download the Config Advisor tool.

[NetApp Downloads: Config Advisor](#)

2. Run Config Advisor, reviewing the output and following its recommendations to address any issues.

## Persistently disabling the switches

You must disable the switches in the fabric persistently so that you can modify its configuration.

You disable the switches by running the commands on the switch command line; the commands used for this are not ONTAP commands.

## Steps

### 1. Persistently disable the switch:

- For Brocade switches, use the `switchCfgPersistentDisable` command.
- For Cisco switches, use the `suspend` command. The following command disables a Brocade switch persistently:

```
FC_switch_A_1:admin> switchCfgPersistentDisable
```

The following command disables a Cisco switch:

```
vsan [vsna #] suspend
```

## Determining the new cabling layout

You must determine the cabling for the new controller modules and any new disk shelves to the existing FC switches.

This task must be performed at each MetroCluster site.

## Steps

### 1. Use the *Fabric-attached MetroCluster Installation and Configuration Guide* to determine the cabling layout for your switch type, using the port usage for an eight-node MetroCluster configuration.

The FC switch port usage must match the usage described in the guide so that the Reference Configuration Files (RCFs) can be used.

#### [Fabric-attached MetroCluster installation and configuration](#)



If your environment cannot be cabled in a way that RCFs can be used, then contact technical support. Do not use this procedure if the cabling cannot use RCFs.

## Applying RCF files and recabling the switches

You must apply the appropriate reference configuration (RCF) files to reconfigure your switches to accommodate the new nodes. After you apply the RCF files, you can recable the switches.

The FC switch port usage must match the usage described in the *Fabric-attached MetroCluster Installation and Configuration Guide* so that the RCFs can be used.

#### [Fabric-attached MetroCluster installation and configuration](#)

## Steps

### 1. Locate the RCF files for your configuration.

You must use the RCF files that match your switch model.

2. Apply the RCF files, following the directions on the Download page and adjusting the ISL settings as needed.
3. Verify that the switch configuration is saved.
4. Cable both of the FC-to-SAS bridges to the FC switches, using the cabling layout you created in the “Determining the new cabling layout” section.
5. Verify that the ports are online:
  - For Brocade switches, use the `switchshow` command.
  - For Cisco switches, use the `show interface brief` command.
6. Cable the FC-VI ports from the controllers to the switches.
7. From the existing nodes, verify that the FC-VI ports are online:

```
metrocluster interconnect adapter show
```

```
metrocluster interconnect mirror show
```

## Persistently enable the switches

You must enable the switches in the fabric persistently.

### Steps

1. Persistently enable the switch:
  - For Brocade switches, use the `switchCfgPersistentenable` command.
  - For Cisco switches, use the `no suspend` command. The following command persistently enables a Brocade switch:

```
FC_switch_A_1:admin> switchCfgPersistentenable
```

The following command enables a Cisco switch:

```
vsan [vsna #]no suspend
```

## Verifying switchover, healing, and switchback

You should verify the switchover, healing, and switchback operations of the MetroCluster configuration.

1. Use the procedures for negotiated switchover, healing, and switchback that are mentioned in the *MetroCluster Management and Disaster Recovery Guide*.

[MetroCluster management and disaster recovery](#)

# Port assignments for FC switches

You need to verify that you are using the specified port assignments when you cable the FC switches. The port assignments are different between ONTAP 9.0 and later versions of ONTAP.

## Port assignments for systems using two initiator ports

You can configure FAS8020, AFF8020, FAS8200, and AFF A300 systems using a single initiator port for each fabric and two initiator ports for each controller.

You can follow the cabling for the FibreBridge 6500N bridge or FibreBridge 7500N or 7600N bridge using only one FC port (FC1 or FC2). Instead of using four initiators, connect only two initiators and leave the other two that are connected to the switch port empty.

You must apply the correct RCF file for the FibreBridge 6500N bridge's configuration.

If zoning is performed manually, then follow the zoning used for a FibreBridge 6500N or a FibreBridge 7500N or 7600N bridge using one FC port (FC1 or FC2). In this scenario, one initiator port rather than two is added to each zone member per fabric.

You can change the zoning or perform an upgrade from a FibreBridge 6500 to a FibreBridge 7500 using the procedure *Hot-swapping a FibreBridge 6500N bridge with a FibreBridge 7500N or 7600N bridge* from the [MetroCluster Maintenance Guide](#).

The following table shows port assignments for FC switches when using ONTAP 9.1 and later.

Configurations using FibreBridge 6500N bridges or FibreBridge 7500N or 7600N using one FC port (FC1 or FC2) only			
MetroCluster 1 or DR Group 1			
Component	Port	Brocade switch models 6505, 6510, 6520, 7840, G620, G610, and DCX 8510-8	
		Connects to FC switch...	Connects to switch port...

**Configurations using FibreBridge 6500N bridges or FibreBridge 7500N or 7600N using one FC port (FC1 or FC2) only**

controller_x_1	FC-VI port a	1	0
	FC-VI port b	2	0
	FC-VI port c	1	1
	FC-VI port d	2	1
	HBA port a	1	2
	HBA port b	2	2
	HBA port c	-	-
	HBA port d	-	-
Stack 1	bridge_x_1a	1	8
	bridge_x_1b	2	8
Stack y	bridge_x_ya	1	11
	bridge_x_yb	2	11

The following table shows port assignments for FC switches when using ONTAP 9.0.

<b>MetroCluster two-node configuration</b>			
Component	Port	Brocade 6505, 6510, or DCX 8510-8	
		FC_switch_x_1	FC_switch_x_2
controller_x_1	FC-VI port a	0	-
	FC-VI port b	-	0
	HBA port a	1	-
	HBA port b	-	1
	HBA port c	2	-
	HBA port d	-	2

## Port assignments for FC switches when using ONTAP 9.0

You need to verify that you are using the specified port assignments when you cable the FC switches. The port assignments are different between ONTAP 9.0 and later versions of ONTAP.

Ports that are not used for attaching initiator ports, FC-VI ports, or ISLs can be reconfigured to act as storage ports. However, if the supported RCFs are being used, the zoning must be changed accordingly.

If the supported RCF files are used, ISL ports may not connect to the same ports shown here and may need to be reconfigured manually.

### Overall cabling guidelines

You should be aware of the following guidelines when using the cabling tables:

- The Brocade and Cisco switches use different port numbering:
  - On Brocade switches, the first port is numbered 0.
  - On Cisco switches, the first port is numbered 1.
- The cabling is the same for each FC switch in the switch fabric.
- AFF A300 and FAS8200 storage systems can be ordered with one of two options for FC-VI connectivity:
  - Onboard ports 0e and 0f configured in FC-VI mode.
  - Ports 1a and 1b on an FC-VI card in slot 1.

### Brocade port usage for controller connections in an eight-node MetroCluster configuration running ONTAP 9.0

The cabling is the same for each FC switch in the switch fabric.

The following table shows controller port usage on Brocade models Brocade 6505, 6510, or DCX 8510-8:

Component	Port	FC_switch_x_1	FC_switch_x_2
controller_x_3	FC-VI port a	6	-
controller_x_3	FC-VI port b	-	6
controller_x_3	HBA port a	7	-
controller_x_3	HBA port b	-	7
controller_x_3	HBA port c	8	-
controller_x_3	HBA port d	-	8
controller_x_4	FC-VI port a	9	-
controller_x_4	FC-VI port b	-	9
controller_x_4	HBA port a	10	-
controller_x_4	HBA port b	-	10
controller_x_4	HBA port c	11	-
controller_x_4	HBA port d	-	11

## Brocade port usage for FC-to-SAS bridge connections in an eight-node MetroCluster configuration running ONTAP 9.0

The following table shows bridge port usage when using FibreBridge 7500 bridges:

Bridge	Bridge port	FC_switch_x_1	FC_switch_x_2
bridge_x_1a	FC1	12	-
bridge_x_1a	FC2	-	12
bridge_x_1b	FC1	13	-
bridge_x_1b	FC2	-	13
bridge_x_2a	FC1	14	-
bridge_x_2a	FC2	-	14
bridge_x_2b	FC1	15	-
bridge_x_2b	FC2	-	15
bridge_x_3a	FC1	16	-
bridge_x_3a	FC2	-	16
bridge_x_3b	FC1	17	-
bridge_x_3b	FC2	-	17
bridge_x_4a	FC1	18	-
bridge_x_4a	FC2	-	18
bridge_x_4b	FC1	19	-
bridge_x_4b	FC2	-	19

The following table shows bridge port usage when using FibreBridge 6500 bridges with Brocade 6505, 6510, or DCX 8510-8 switches:

Bridge	Port	FC_switch_x_1	FC_switch_x_2
bridge_x_1a	FC1	12	-
bridge_x_1b	FC1	-	12
bridge_x_2a	FC1	13	-
bridge_x_2b	FC1	-	13
bridge_x_3a	FC1	14	-
bridge_x_3b	FC1	-	14
bridge_x_4a	FC1	15	-
bridge_x_4b	FC1	-	15
bridge_x_5a	FC1	16	-
bridge_x_5b	FC1	-	16
bridge_x_6a	FC1	17	-

<b>Bridge</b>	<b>Port</b>	<b>FC_switch_x_1</b>	<b>FC_switch_x_2</b>
bridge_x_6b	FC1	-	17
bridge_x_7a	FC1	18	-
bridge_x_7b	FC1	-	18
bridge_x_8a	FC1	19	-
bridge_x_8b	FC1	-	19

### **Brocade port usage for ISLs in an eight-node MetroCluster configuration running ONTAP 9.0**

The following table shows ISL port usage for Brocade 6505, 6510, or DCX 8510-8 switches:

<b>ISL port</b>	<b>FC_switch_x_1</b>	<b>FC_switch_x_2</b>
ISL port 1	20	20
ISL port 2	21	21
ISL port 3	22	22
ISL port 4	23	23

### **Brocade port usage for controllers in a four-node MetroCluster configuration running ONTAP 9.0**

The cabling is the same for each FC switch in the switch fabric. The following table shows usage for the Brocade 6505, 6510, and DCX 8510-8 switches.

<b>Component</b>	<b>Port</b>	<b>FC_switch_x_1</b>	<b>FC_switch_x_2</b>
controller_x_1	FC-VI port a	0	-
controller_x_1	FC-VI port b	-	0
controller_x_1	HBA port a	1	-
controller_x_1	HBA port b	-	1
controller_x_1	HBA port c	2	-
controller_x_1	HBA port d	-	2
controller_x_2	FC-VI port a	3	-
controller_x_2	FC-VI port b	-	3
controller_x_2	HBA port a	4	-
controller_x_2	HBA port b	-	4
controller_x_2	HBA port c	5	-
controller_x_2	HBA port d	-	5

### **Brocade port usage for bridges in a four-node MetroCluster configuration running ONTAP 9.0**

The cabling is the same for each FC switch in the switch fabric.

The following table shows bridge port usage up to port 17 when using FibreBridge 7500 bridges. Additional bridges can be cabled to ports 18 through 23.

FibreBridge 7500 bridge	Port	FC_switch_x_1 (6510 or DCX 8510-8)	FC_switch_x_2 (6510 or DCX 8510-8)	FC_switch_x_1 (6505)	FC_switch_x_2 (6505)
bridge_x_1a	FC1	6	-	6	-
bridge_x_1a	FC2	-	6	-	6
bridge_x_1b	FC1	7	-	7	-
bridge_x_1b	FC2	-	7	-	7
bridge_x_2a	FC1	8	-	12	-
bridge_x_2a	FC2	-	8	-	12
bridge_x_2b	FC1	9	-	13	-
bridge_x_2b	FC2	-	9	-	13
bridge_x_3a	FC1	10	-	14	-
bridge_x_3a	FC2	-	10	-	14
bridge_x_3b	FC1	11	-	15	-
bridge_x_3b	FC2	-	11	-	15
bridge_x_4a	FC1	12	-	16	-
bridge_x_4a	FC2	-	12	-	16
bridge_x_4b	FC1	13	-	17	-
bridge_x_4b	FC2	-	13	-	17
		additional bridges can be cabled through port 19, then ports 24 through 47			

The following table shows bridge port usage when using FibreBridge 6500 bridges:

	6500N bridge port	FC_switch_x_1 (6510 or DCX 8510-8)	FC_switch_x_2 (6510 or DCX 8510-8)	FC_switch_x_1 (6505)	FC_switch_x_2 (6505)
bridge_x_1a	FC1	6	-	6	-
bridge_x_1b	FC1	-	6	-	6
bridge_x_2a	FC1	7	-	7	-
bridge_x_2b	FC1	-	7	-	7
bridge_x_3a	FC1	8	-	12	-
bridge_x_3b	FC1	-	8	-	12

	<b>6500N bridge port</b>	<b>FC_switch_x_1 (6510 or DCX 8510-8)</b>	<b>FC_switch_x_2 (6510 or DCX 8510-8)</b>	<b>FC_switch_x_1 (6505)</b>	<b>FC_switch_x_2 (6505)</b>
bridge_x_4a	FC1	9	-	13	-
bridge_x_4b	FC1	-	9	-	13
bridge_x_5a	FC1	10	-	14	-
bridge_x_5b	FC1	-	10	-	14
bridge_x_6a	FC1	11	-	15	-
bridge_x_6b	FC1	-	11	-	15
bridge_x_7a	FC1	12	-	16	-
bridge_x_7b	FC1	-	12	-	16
bridge_x_8a	FC1	13	-	17	-
bridge_x_8b	FC1	-	13	-	17
		additional bridges can be cabled through port 19, then ports 24 through 47		additional bridges can be cabled through port 23	

### Brocade port usage for ISLs in a four-node MetroCluster configuration running ONTAP 9.0

The following table shows ISL port usage:

<b>ISL port</b>	<b>FC_switch_x_1 (6510 or DCX 8510-8)</b>	<b>FC_switch_x_2 (6510 or DCX 8510-8)</b>	<b>FC_switch_x_1 (6505)</b>	<b>FC_switch_x_2 (6505)</b>
ISL port 1	20	20	8	8
ISL port 2	21	21	9	9
ISL port 3	22	22	10	10
ISL port 4	23	23	11	11

### Brocade port usage for controllers in a two-node MetroCluster configuration running ONTAP 9.0

The cabling is the same for each FC switch in the switch fabric. The following table shows the cabling for Brocade 6505, 6510, and DCX 8510-8 switches.

<b>Component</b>	<b>Port</b>	<b>FC_switch_x_1</b>	<b>FC_switch_x_2</b>
controller_x_1	FC-VI port a	0	-
controller_x_1	FC-VI port b	-	0
controller_x_1	HBA port a	1	-
controller_x_1	HBA port b	-	1

<b>Component</b>	<b>Port</b>	<b>FC_switch_x_1</b>	<b>FC_switch_x_2</b>
controller_x_1	HBA port c	2	-
controller_x_1	HBA port d	-	2

### Brocade port usage for bridges in a two-node MetroCluster configuration running ONTAP 9.0

The cabling is the same for each FC switch in the switch fabric.

The following table shows bridge port usage up to port 17 when using FibreBridge 7500 bridges with Brocade 6505, 6510, and DCX 8510-8 switches. Additional bridges can be cabled to ports 18 through 23.

<b>FibreBridge 7500 bridge</b>	<b>Port</b>	<b>FC_switch_x_1 (6510 or DCX 8510-8)</b>	<b>FC_switch_x_2 (6510 or DCX 8510-8)</b>	<b>FC_switch_x_1 (6505)</b>	<b>FC_switch_x_2 (6505)</b>
bridge_x_1a	FC1	6	-	6	-
bridge_x_1a	FC2	-	6	-	6
bridge_x_1b	FC1	7	-	7	-
bridge_x_1b	FC2	-	7	-	7
bridge_x_2a	FC1	8	-	12	-
bridge_x_2a	FC2	-	8	-	12
bridge_x_2b	FC1	9	-	13	-
bridge_x_2b	FC2	-	9	-	13
bridge_x_3a	FC1	10	-	14	-
bridge_x_3a	FC2	-	10	-	14
bridge_x_3a	FC1	11	-	15	-
bridge_x_3a	FC2	-	11	-	15
bridge_x_4a	FC1	12	-	16	-
bridge_x_4a	FC2	-	12	-	16
bridge_x_4b	FC1	13	-	17	-
bridge_x_4b	FC2	-	13	-	17
		additional bridges can be cabled through port 19, then ports 24 through 47		additional bridges can be cabled through port 23	

The following table shows bridge port usage when using FibreBridge 6500 bridges with Brocade 6505, 6510, and DCX 8510-8 switches:

FibreBridge 6500 bridge	Port	FC_switch_x_1 (6510 or DCX 8510-8)	FC_switch_x_2 (6510 or DCX 8510-8)	FC_switch_x_1 (6505)	FC_switch_x_2 (6505)
bridge_x_1a	FC1	6	-	6	-
bridge_x_1b	FC1	-	6	-	6
bridge_x_2a	FC1	7	-	7	-
bridge_x_2b	FC1	-	7	-	7
bridge_x_3a	FC1	8	-	12	-
bridge_x_3b	FC1	-	8	-	12
bridge_x_4a	FC1	9	-	13	-
bridge_x_4b	FC1	-	9	-	13
bridge_x_5a	FC1	10	-	14	-
bridge_x_5b	FC1	-	10	-	14
bridge_x_6a	FC1	11	-	15	-
bridge_x_6b	FC1	-	11	-	15
bridge_x_7a	FC1	12	-	16	-
bridge_x_7b	FC1	-	12	-	16
bridge_x_8a	FC1	13	-	17	-
bridge_x_8b	FC1	-	13	-	17
		additional bridges can be cabled through port 19, then ports 24 through 47		additional bridges can be cabled through port 23	

### Brocade port usage for ISLs in a two-node MetroCluster configuration running ONTAP 9.0

The following table shows ISL port usage for Brocade 6505, 6510, and DCX 8510-8 switches:

ISL port	FC_switch_x_1 (6510 or DCX 8510-8)	FC_switch_x_2 (6510 or DCX 8510-8)	FC_switch_x_1 (6505)	FC_switch_x_2 (6505)
ISL port 1	20	20	8	8
ISL port 2	21	21	9	9
ISL port 3	22	22	10	10
ISL port 4	23	23	11	11

## Cisco port usage for controllers in an eight-node MetroCluster configuration running ONTAP 9.0

The following table shows controller port usage on Cisco 9148 and 9148S switches:

Component	Port	FC_switch_x_1	FC_switch_x_2
controller_x_3	FC-VI port a	7	-
controller_x_3	FC-VI port b	-	7
controller_x_3	HBA port a	8	-
controller_x_3	HBA port b	-	8
controller_x_3	HBA port c	9	-
controller_x_3	HBA port d	-	9
controller_x_4	FC-VI port a	10	-
controller_x_4	FC-VI port b	-	10
controller_x_4	HBA port a	11	-
controller_x_4	HBA port b	-	11
controller_x_4	HBA port c	13	-
controller_x_4	HBA port d	-	13

## Cisco port usage for FC-to-SAS bridges in an eight-node MetroCluster configuration running ONTAP 9.0

The following table shows bridge port usage up to port 23 when using FibreBridge 7500 bridges when using Cisco 9148 or 9148S switches. Additional bridges can be attached using ports 25 through 48.

FibreBridge 7500 bridge	Port	FC_switch_x_1	FC_switch_x_2
bridge_x_1a	FC1	14	14
bridge_x_1a	FC2	-	-
bridge_x_1b	FC1	15	15
bridge_x_1b	FC2	-	-
bridge_x_2a	FC1	17	17
bridge_x_2a	FC2	-	-
bridge_x_2b	FC1	18	18
bridge_x_2b	FC2	-	-
bridge_x_3a	FC1	19	19
bridge_x_3a	FC2	-	-
bridge_x_3b	FC1	21	21
bridge_x_3b	FC2	-	-
bridge_x_4a	FC1	22	22

FibreBridge 7500 bridge	Port	FC_switch_x_1	FC_switch_x_2
bridge_x_4a	FC2	-	-
bridge_x_4b	FC1	23	23
bridge_x_4b	FC2	-	-

Additional bridges can be attached using ports 25 through 48 following the same pattern.

The following table shows bridge port usage up to port 23 when using FibreBridge 6500 bridges with Cisco 9148 or 9148S switches. Additional bridges can be attached using ports 25-48.

FibreBridge 6500 bridge	Port	FC_switch_x_1	FC_switch_x_2
bridge_x_1a	FC1	14	-
bridge_x_1b	FC1	-	14
bridge_x_2a	FC1	15	-
bridge_x_2b	FC1	-	15
bridge_x_3a	FC1	17	-
bridge_x_3b	FC1	-	17
bridge_x_4a	FC1	18	-
bridge_x_4b	FC1	-	18
bridge_x_5a	FC1	19	-
bridge_x_5b	FC1	-	19
bridge_x_6a	FC1	21	-
bridge_x_6b	FC1	-	21
bridge_x_7a	FC1	22	-
bridge_x_7b	FC1	-	22
bridge_x_8a	FC1	23	-
bridge_x_8b	FC1	-	23

Additional bridges can be attached using ports 25 through 48 following the same pattern.

### Cisco port usage for ISLs in an eight-node MetroCluster configuration running ONTAP 9.0

The following table shows ISL port usage for Cisco 9148 and 9148S switches:

ISL ports	FC_switch_x_1	FC_switch_x_2
ISL port 1	12	12
ISL port 2	16	16
ISL port 3	20	20
ISL port 4	24	24

## Cisco port usage for controllers in a four-node MetroCluster configuration

The cabling is the same for each FC switch in the switch fabric.

The following table shows controller port usage on Cisco 9148, 9148S, and 9250i switches:

Component	Port	FC_switch_x_1	FC_switch_x_2
controller_x_1	FC-VI port a	1	-
controller_x_1	FC-VI port b	-	1
controller_x_1	HBA port a	2	-
controller_x_1	HBA port b	-	2
controller_x_1	HBA port c	3	-
controller_x_1	HBA port d	-	3
controller_x_2	FC-VI port a	4	-
controller_x_2	FC-VI port b	-	4
controller_x_2	HBA port a	5	-
controller_x_2	HBA port b	-	5
controller_x_2	HBA port c	6	-
controller_x_2	HBA port d	-	6

## Cisco port usage for FC-to-SAS bridges in a four-node MetroCluster configuration running ONTAP 9.0

The following table shows bridge port usage up to port 14 when using FibreBridge 7500 bridges with Cisco 9148, 9148S, or 9250i switches. Additional bridges can be attached to ports 15 through 32 following the same pattern.

FibreBridge 7500 bridge	Port	FC_switch_x_1	FC_switch_x_2
bridge_x_1a	FC1	7	-
bridge_x_1a	FC2	-	7
bridge_x_1b	FC1	8	-
bridge_x_1b	FC2	-	8
bridge_x_2a	FC1	9	-
bridge_x_2a	FC2	-	9
bridge_x_2b	FC1	10	-
bridge_x_2b	FC2	-	10
bridge_x_3a	FC1	11	-
bridge_x_3a	FC2	-	11
bridge_x_3b	FC1	12	-
bridge_x_3b	FC2	-	12

FibreBridge 7500 bridge	Port	FC_switch_x_1	FC_switch_x_2
bridge_x_4a	FC1	13	-
bridge_x_4a	FC2	-	13
bridge_x_4b	FC1	14	-
bridge_x_4b	FC2	-	14

The following table shows bridge port usage when using FibreBridge 6500 bridges up to port 14 on Cisco 9148, 9148S, or 9250i switches. Additional bridges can be attached to ports 15 through 32 following the same pattern.

FibreBridge 6500 bridge	Port	FC_switch_x_1	FC_switch_x_2
bridge_x_1a	FC1	7	-
bridge_x_1b	FC1	-	7
bridge_x_2a	FC1	8	-
bridge_x_2b	FC1	-	8
bridge_x_3a	FC1	9	-
bridge_x_3b	FC1	-	9
bridge_x_4a	FC1	10	-
bridge_x_4b	FC1	-	10
bridge_x_5a	FC1	11	-
bridge_x_5b	FC1	-	11
bridge_x_6a	FC1	12	-
bridge_x_6b	FC1	-	12
bridge_x_7a	FC1	13	-
bridge_x_7b	FC1	-	13
bridge_x_8a	FC1	14	-
bridge_x_8b	FC1	-	14

Additional bridges can be attached to ports 15 through 32 following the same pattern.

#### Cisco 9148 and 9148S port usage for ISLs on a four-node MetroCluster configuration running ONTAP 9.0

The cabling is the same for each FC switch in the switch fabric.

The following table shows ISL port usage for Cisco 9148 and 9148S switches:

ISL port	FC_switch_x_1	FC_switch_x_2
ISL port 1	36	36
ISL port 2	40	40

ISL port	FC_switch_x_1	FC_switch_x_2
ISL port 3	44	44
ISL port 4	48	48

### Cisco 9250i port usage for ISLs on a four-node MetroCluster configuration running ONTAP 9.0

The Cisco 9250i switch uses the FCIP ports for the ISL.

Ports 40 through 48 are 10 GbE ports and are not used in the MetroCluster configuration.

### Cisco port usage for controllers in a two-node MetroCluster configuration

The cabling is the same for each FC switch in the switch fabric.

The following table shows controller port usage on Cisco 9148, 9148S, and 9250i switches:

Component	Port	FC_switch_x_1	FC_switch_x_2
controller_x_1	FC-VI port a	1	-
controller_x_1	FC-VI port b	-	1
controller_x_1	HBA port a	2	-
controller_x_1	HBA port b	-	2
controller_x_1	HBA port c	3	-
controller_x_1	HBA port d	-	3

### Cisco port usage for FC-to-SAS bridges in a two-node MetroCluster configuration running ONTAP 9.0

The following table shows bridge port usage up to port 14 when using FibreBridge 7500 bridges with Cisco 9148, 9148S, and 9250i switches. Additional bridges can be attached to ports 15 through 32 following the same pattern.

FibreBridge 7500 bridge	Port	FC_switch_x_1	FC_switch_x_2
bridge_x_1a	FC1	7	-
bridge_x_1a	FC2	-	7
bridge_x_1b	FC1	8	-
bridge_x_1b	FC2	-	8
bridge_x_2a	FC1	9	-
bridge_x_2a	FC2	-	9
bridge_x_2b	FC1	10	-
bridge_x_2b	FC2	-	10
bridge_x_3a	FC1	11	-
bridge_x_3a	FC2	-	11
bridge_x_3b	FC1	12	-

FibreBridge 7500 bridge	Port	FC_switch_x_1	FC_switch_x_2
bridge_x_3b	FC2	-	12
bridge_x_4a	FC1	13	-
bridge_x_4a	FC2	-	13
bridge_x_4b	FC1	14	-
bridge_x_4b	FC2	-	14

The following table shows bridge port usage when using FibreBridge 6500 bridges up to port 14 on Cisco 9148, 9148S, or 9250i switches. Additional bridges can be attached to ports 15 through 32 following the same pattern.

FibreBridge 6500 bridge	Port	FC_switch_x_1	FC_switch_x_2
bridge_x_1a	FC1	7	-
bridge_x_1b	FC1	-	7
bridge_x_2a	FC1	8	-
bridge_x_2b	FC1	-	8
bridge_x_3a	FC1	9	-
bridge_x_3b	FC1	-	9
bridge_x_4a	FC1	10	-
bridge_x_4b	FC1	-	10
bridge_x_5a	FC1	11	-
bridge_x_5b	FC1	-	11
bridge_x_6a	FC1	12	-
bridge_x_6b	FC1	-	12
bridge_x_7a	FC1	13	-
bridge_x_7b	FC1	-	13
bridge_x_8a	FC1	14	-
bridge_x_8b	FC1	-	14

Additional bridges can be attached to ports 15 through 32 following the same pattern.

#### Cisco 9148 or 9148S port usage for ISLs on a two-node MetroCluster configuration running ONTAP 9.0

The cabling is the same for each FC switch in the switch fabric.

The following table shows ISL port usage for Cisco 9148 or 9148S switches:

ISL port	FC_switch_x_1	FC_switch_x_2
ISL port 1	36	36

ISL port	FC_switch_x_1	FC_switch_x_2
ISL port 2	40	40
ISL port 3	44	44
ISL port 4	48	48

## Cisco 9250i port usage for ISLs on a two-node MetroCluster configuration running ONTAP 9.0

The Cisco 9250i switch uses the FCIP ports for the ISL.

Ports 40 through 48 are 10 GbE ports and are not used in the MetroCluster configuration.

## Port assignments for FC switches when using ONTAP 9.1 or later

### Port assignments for FC switches when using ONTAP 9.1 and later

You need to verify that you are using the specified port assignments when you cable the FC switches when using ONTAP 9.1 and later.

Ports that are not used for attaching initiator ports, FC-VI ports, or ISLs can be reconfigured to act as storage ports. However, if the supported RCFs are being used, the zoning must be changed accordingly.

If the supported RCFs are used, ISL ports might not connect to the same ports shown here and might need to be reconfigured manually.

If you configured your switches using the port assignments for ONTAP 9, you can continue to use the older assignments. However, new configurations running ONTAP 9.1 or later releases should use the port assignments shown here.

## Overall cabling guidelines

You should be aware of the following guidelines when using the cabling tables:

- The Brocade and Cisco switches use different port numbering:
  - On Brocade switches, the first port is numbered 0.
  - On Cisco switches, the first port is numbered 1.
- The cabling is the same for each FC switch in the switch fabric.
- AFF A300 and FAS8200 storage systems can be ordered with one of two options for FC-VI connectivity:
  - Onboard ports 0e and 0f configured in FC-VI mode.
  - Ports 1a and 1b on an FC-VI card in slot 1.
- AFF A700 and FAS9000 storage systems require four FC-VI ports. The following tables show cabling for the FC switches with four FC-VI ports on each controller except for the Cisco 9250i switch.

For other storage systems, use the cabling shown in the tables but ignore the cabling for FC-VI ports c and d.

You can leave those ports empty.

- AFF A400 and FAS8300 storage systems use ports 2a and 2b for FC-VI connectivity.

- If you have two MetroCluster configurations sharing ISLs, use the same port assignments as that for an eight-node MetroCluster cabling.

The number of ISLs you cable may vary depending on your site's requirements.

See the section on ISL considerations.

### **Brocade port usage for controllers in a MetroCluster configuration running ONTAP 9.1 or later**

The following tables show port usage on Brocade switches. The tables show the maximum supported configuration, with eight controller modules in two DR groups. For smaller configurations, ignore the rows for the additional controller modules. Note that eight ISLs are supported only on the Brocade 6510, Brocade DCX 8510-8, G620, G630, G620-1, G630-1, and G720 switches.



Port usage for the Brocade 6505 and Brocade G610 switches in an eight-node MetroCluster configuration is not shown. Due to the limited number of ports, port assignments must be made on a site-by-site basis depending on the controller module model and the number of ISLs and bridge pairs in use.



The Brocade DCX 8510-8 switch can use the same port layout as the 6510 switch **or** the 7840 switch.

<b>Configurations using FibreBridge 6500N bridges or FibreBridge 7500N or 7600N using one FC port (FC1 or FC2) only</b>				
MetroCluster 1 or DR Group 1				
Component	Port	Brocade switch models 6505, 6510, 6520, 7810, 7840, G610, G620, G620-1, G630, G630-1 and DCX 8510-8		
		Connects to FC switch...	Connects to switch port...	Connects to switch port...
Stack 1	bridge_x_1a	1	8	10
	bridge_x_1b	2	8	10
Stack 2	bridge_x_2a	1	9	11
	bridge_x_2b	2	9	11
Stack 3	bridge_x_3a	1	10	14
	bridge_x_4b	2	10	14
Stack y	bridge_x_ya	1	11	15
	bridge_x_yb	2	11	15

## Configurations using FibreBridge 6500N bridges or FibreBridge 7500N or 7600N using one FC port (FC1 or FC2) only



- On G620, G630, G620-1 and G630-1 switches, additional bridges can be cabled to ports 12 - 17, 20 and 21.
- On G610 switches, additional bridges can be cabled to ports 12 - 19.
- On G720 switches, additional bridges can be cabled to ports 16 - 17, 20 and 21.

## Configurations using FibreBridge 6500N bridges or FibreBridge 7500N or 7600N using one FC port (FC1 or FC2) only

MetroCluster 2 or DR Group 2

			Brocade switch model				
Component	Port	Connects to FC_switch ...	6510, DCX 8510-8	6520	7840, DCX 8510-8	G620, G620-1, G630, G630-1	G720
controller_x _3	FC-VI port a	1	24	48	12	18	18
	FC-VI port b	2	24	48	12	18	18
	FC-VI port c	1	25	49	13	19	19
	FC-VI port d	2	25	49	13	19	19
	HBA port a	1	26	50	14	24	26
	HBA port b	2	26	50	14	24	26
	HBA port c	1	27	51	15	25	27
	HBA port d	2	27	51	15	25	27

**Configurations using FibreBridge 6500N bridges or FibreBridge 7500N or 7600N using one FC port (FC1 or FC2) only**

controller_x_4	FC-VI port a	1	28	52	16	22	22
	FC-VI port b	2	28	52	16	22	22
	FC-VI port c	1	29	53	17	23	23
	FC-VI port d	2	29	53	17	23	23
	HBA port a	1	30	54	18	28	30
	HBA port b	2	30	54	18	28	30
	HBA port c	1	31	55	19	29	31
	HBA port d	2	32	55	19	29	31
Stack 1	bridge_x_51 a	1	32	56	20	26	32
	bridge_x_51 b	2	32	56	20	26	32
Stack 2	bridge_x_52 a	1	33	57	21	27	33
	bridge_x_52 b	2	33	57	21	27	33
Stack 3	bridge_x_53 a	1	34	58	22	30	34
	bridge_x_54 b	2	34	58	22	30	34
Stack y .2a	bridge_x_ya	1	35	59	23	31	35
	bridge_x_yb	2	35	59	23	31	35

**Configurations using FibreBridge 7500N or 7600N using both FC ports (FC1 and FC2)**

MetroCluster 1 or DR Group 1

Configurations using FibreBridge 7500N or 7600N using both FC ports (FC1 and FC2)					
Component		Port	Brocade switch models 6505, 6510, 6520, 7810, 7840, G610, G620, G620-1, G630, G630-1, and DCX 8510-8		
			Connects to FC_switch...	Connects to switch port...	Connects to switch port...
Stack 1	bridge_x_1a	FC1	1	8	10
		FC2	2	8	10
	bridge_x_1B	FC1	1	9	11
		FC2	2	9	11
Stack 2	bridge_x_2a	FC1	1	10	14
		FC2	2	10	14
	bridge_x_2B	FC1	1	11	15
		FC2	2	11	15
Stack 3	bridge_x_3a	FC1	1	12*	16
		FC2	2	12*	16
	bridge_x_3B	FC1	1	13*	17
		FC2	2	13*	17
Stack y	bridge_x_ya	FC1	1	14*	20
		FC2	2	14*	20
	bridge_x_yb	FC1	1	15*	21
		FC2	2	15*	21

• - Ports 12 through 15 are reserved for the second MetroCluster or DR group on the Brocade 7840 switch.

i
Additional bridges can be cabled to ports 16, 17, 20 and 21 in G620, G630, G620-1 and G630-1 switches.

Configurations using FibreBridge 7500N or 7600N using both FC ports (FC1 and FC2)						
MetroCluster 2 or DR Group 2						
Component	Port	Brocade switch model				
		Connects to FC_switch ...	6510, DCX 8510-8	6520	7840, DCX 8510-8	G620, G620-1, G630, G630-1
controller_x_3	FC-VI port a	1	24	48	12	18
	FC-VI port b	2	24	48	12	18
	FC-VI port c	1	25	49	13	19
	FC-VI port d	2	25	49	13	19
	HBA port a	1	26	50	14	24
	HBA port b	2	26	50	14	24
	HBA port c	1	27	51	15	25
	HBA port d	2	27	51	15	25

Configurations using FibreBridge 7500N or 7600N using both FC ports (FC1 and FC2)							
controller_x_4	FC-VI port a	1	28	52	16	22	22
	FC-VI port b	2	28	52	16	22	22
	FC-VI port c	1	29	53	17	23	23
	FC-VI port d	2	29	53	17	23	23
	HBA port a	1	30	54	18	28	30
	HBA port b	2	30	54	18	28	30
	HBA port c	1	31	55	19	29	31
	HBA port d	2	31	55	19	29	31
Stack 1	bridge_x_51a	FC1	1	32	56	20	26
		FC2	2	32	56	20	26
	bridge_x_51b	FC1	1	33	57	21	27
		FC2	2	33	57	21	27
Stack 2	bridge_x_52a	FC1	1	34	58	22	30
		FC2	2	34	58	22	30
	bridge_x_52b	FC1	1	35	59	23	31
		FC2	2	35	59	23	31

Configurations using FibreBridge 7500N or 7600N using both FC ports (FC1 and FC2)								
Stack 3	bridge_x_53a	FC1	1	36	60	-	32	36
		FC2	2	36	60	-	32	36
	bridge_x_53b	FC1	1	37	61	-	33	37
		FC2	2	37	61	-	33	37
Stack y	bridge_x_5ya	FC1	1	38	62	-	34	38
		FC2	2	38	62	-	34	38
	bridge_x_5yb	FC1	1	39	63	-	35	39
		FC2	2	39	63	-	35	39
 Additional bridges can be cabled to ports 36 to 39 in G620, G630, G620-1, and G630-1 switches.								

### Brocade port usage for ISLs in a MetroCluster configuration running ONTAP 9.1 or later

The following table shows ISL port usage for the Brocade switches.



AFF A700 or FAS9000 systems support up to eight ISLs for improved performance. Eight ISLs are supported on the Brocade 6510 and G620 switches.

Switch model	ISL port	Switch port
Brocade 6520	ISL port 1	23
	ISL port 2	47
	ISL port 3	71
	ISL port 4	95
Brocade 6505	ISL port 1	20
	ISL port 2	21
	ISL port 3	22
	ISL port 4	23

Switch model	ISL port	Switch port
Brocade 6510 and Brocade DCX 8510-8	ISL port 1	40
	ISL port 2	41
	ISL port 3	42
	ISL port 4	43
	ISL port 5	44
	ISL port 6	45
	ISL port 7	46
	ISL port 8	47
Brocade 7810	ISL port 1	ge2 (10-Gbps)
	ISL port 2	ge3(10-Gbps)
	ISL port 3	ge4 (10-Gbps)
	ISL port 4	ge5 (10-Gbps)
	ISL port 5	ge6 (10-Gbps)
	ISL port 6	ge7 (10-Gbps)
Brocade 7840	ISL port 1	ge0 (40-Gbps) or ge2 (10-Gbps)
 The Brocade 7840 switch supports either two 40 Gbps VE-ports or up to four 10 Gbps VE-ports per switch for the creation of FCIP ISLs.	ISL port 2	ge1 (40-Gbps) or ge3 (10-Gbps)
	ISL port 3	ge10 (10-Gbps)
	ISL port 4	ge11 (10-Gbps)

<b>Switch model</b>	<b>ISL port</b>	<b>Switch port</b>
Brocade G610	ISL port 1	20
	ISL port 2	21
	ISL port 3	22
	ISL port 4	23
Brocade G620, G620-1, G630, G630-1, G720	ISL port 1	40
	ISL port 2	41
	ISL port 3	42
	ISL port 4	43
	ISL port 5	44
	ISL port 6	45
	ISL port 7	46
	ISL port 8	47

#### **Cisco port usage for controllers in a MetroCluster configuration running ONTAP 9.4 or later**

The tables show the maximum supported configuration, with eight controller modules in two DR groups. For smaller configurations, ignore the rows for the additional controller modules.

<b>Cisco 9396S</b>			
Component	Port	Switch 1	Switch 2

<b>Cisco 9396S</b>			
controller_x_3	FC-VI port a	49	
	FC-VI port b	-	49
	FC-VI port c	50	
	FC-VI port d	-	50
	HBA port a	51	
	HBA port b	-	51
	HBA port c	52	
	HBA port d	-	52
controller_x_4	FC-VI port a	53	-
	FC-VI port b	-	53
	FC-VI port c	54	-
	FC-VI port d	-	54
	HBA port a	55	-
	HBA port b	-	55
	HBA port c	56	-
	HBA port d	-	56

<b>Cisco 9148S</b>			
Component	Port	Switch 1	Switch 2

Cisco 9148S			
controller_x_3	FC-VI port a	25	
	FC-VI port b	-	25
	FC-VI port c	26	-
	FC-VI port d	-	26
	HBA port a	27	-
	HBA port b	-	27
	HBA port c	28	-
	HBA port d	-	28
controller_x_4	FC-VI port a	29	-
	FC-VI port b	-	29
	FC-VI port c	30	-
	FC-VI port d	-	30
	HBA port a	31	-
	HBA port b	-	31
	HBA port c	32	-
	HBA port d	-	32

Cisco 9132T			
MDS module 1			
Component	Port	Switch 1	Switch 2
MDS module 2			
Component	Port	Switch 1	Switch 2

Cisco 9132T			
controller_x_3	FC-VI port a	1	-
	FC-VI port b	-	1
	FC-VI port c	2	-
	FC-VI port d	-	2
	HBA port a	3	-
	HBA port b	-	3
	HBA port c	4	-
	HBA port d	-	4
controller_x_4	FC-VI port a	5	-
	FC-VI port b	-	5
	FC-VI port c	6	-
	FC-VI port d	-	6
	HBA port a	7	-
	HBA port b	-	7
	HBA port c	8	-
	HBA port d	-	8



The following table shows systems with two FC-VI ports. AFF A700 and FAS9000 systems have four FC-VI ports (a, b, c, and d). If using an AFF A700 or FAS9000 system, the port assignments move along by one position. For example, FC-VI ports c and d go to switch port 2 and HBA ports a and b go to switch port 3.

Cisco 9250i*			
Component	Port	Switch 1	Switch 2

Cisco 9250i*			
controller_x_3	FC-VI port a	7	-
	FC-VI port b	-	7
	HBA port a	8	-
	HBA port b	-	8
	HBA port c	9	-
	HBA port d	-	9
controller_x_4	FC-VI port a	10	-
	FC-VI port b	-	10
	HBA port a	11	-
	HBA port b	-	11
	HBA port c	13	-
	HBA port d	-	13

- - The Cisco 9250i switch is not supported for eight-node MetroCluster configurations.

#### Cisco port usage for FC-to-SAS bridges in a MetroCluster configuration running ONTAP 9.1 or later

Cisco 9396S			
FibreBridge 7500 using two FC ports	Port	Switch 1	Switch 2
bridge_x_1a	FC1	9	-
	FC2	-	9
bridge_x_1b	FC1	10	-
	FC2	-	10
bridge_x_2a	FC1	11	-
	FC2	-	11

Cisco 9396S			
bridge_x_2b	FC1	12	-
	FC2	-	12
bridge_x_3a	FC1	13	-
	FC2	-	13
bridge_x_3b	FC1	14	-
	FC2	-	14
bridge_x_4a	FC1	15	-
	FC2	-	15
bridge_x_4b	FC1	16	-
	FC2	-	16
		Additional bridges can be attached using ports 17 through 40 and 57 through 88 following the same pattern.	

Cisco 9148S			
FibreBridge 7500 using two FC ports	Port	Switch 1	Switch 2
		9	-
bridge_x_1a	FC1	-	9
	FC2	10	-
bridge_x_1b	FC1	-	10
	FC2	11	-
bridge_x_2a	FC1	-	11
	FC2	12	-
bridge_x_2b	FC1	-	12
	FC2	-	12

Cisco 9148S			
bridge_x_3a	FC1	13	-
	FC2	-	13
bridge_x_3b	FC1	14	-
	FC2	-	14
bridge_x_4a	FC1	15	-
	FC2	-	15
bridge_x_4b	FC1	16	-
	FC2	-	16

Cisco 9132T			
FibreBridge 7500 using two FC ports	Port		
		Switch 1	Switch 2
bridge_x_1a	FC1	9	-
	FC2	-	9
bridge_x_1b	FC1	10	-
	FC2	-	10
bridge_x_2a	FC1	11	-
	FC2	-	11
bridge_x_2b	FC1	12	-
	FC2	-	12
		Additional bridges for a second DR group or second MetroCluster configuration can be attached using the same port numbers on the second MDS module.	

Cisco 9250i			
FibreBridge 7500 using two FC ports	Port		
		Switch 1	Switch 2
bridge_x_1a	FC1	14	-
	FC2	-	14
bridge_x_1b	FC1	15	-
	FC2	-	15
bridge_x_2a	FC1	17	-
	FC2	-	17
bridge_x_2b	FC1	18	-
	FC2	-	18
bridge_x_3a	FC1	19	-
	FC2	-	19
bridge_x_3b	FC1	21	-
	FC2	-	21
bridge_x_4a	FC1	22	-
	FC2	-	22
bridge_x_4b	FC1	23	-
	FC2	-	23
		Additional bridges for a second DR group or second MetroCluster configuration can be attached using ports 25 through 48 following the same pattern.	

The following tables show bridge port usage when using FibreBridge 6500 bridges or FibreBridge 7500 bridges using one FC port (FC1 or FC2) only. For FibreBridge 7500 bridges using one FC port, either FC1 or FC2 can be cabled to the port indicated as FC1. Additional bridges can be attached using ports 25-48.

<b>FibreBridge 6500 bridge or FibreBridge 7500 using one FC port</b>	<b>Port</b>	<b>Cisco 9396S</b>	
Switch 1	Switch 2		
bridge_x_1a	FC1	9	-
bridge_x_1b	FC1	-	9
bridge_x_2a	FC1	10	-
bridge_x_2b	FC1	-	10
bridge_x_3a	FC1	11	-
bridge_x_3b	FC1	-	11
bridge_x_4a	FC1	12	-
bridge_x_4b	FC1	-	12
bridge_x_5a	FC1	13	-
bridge_x_5b	FC1	-	13
bridge_x_6a	FC1	14	-
bridge_x_6b	FC1	-	14
bridge_x_7a	FC1	15	-
bridge_x_7b	FC1	-	15
bridge_x_8a	FC1	16	-
bridge_x_8b	FC1	-	16
		Additional bridges can be attached using ports 17 through 40 and 57 through 88 following the same pattern.	

<b>FibreBridge 6500 bridge or FibreBridge 7500 using one FC port</b>	<b>Port</b>	<b>Cisco 9148S</b>	
Switch 1	Switch 2		
bridge_x_1a	FC1	9	-
bridge_x_1b	FC1	-	9
bridge_x_2a	FC1	10	-
bridge_x_2b	FC1	-	10
bridge_x_3a	FC1	11	-
bridge_x_3b	FC1	-	11
bridge_x_4a	FC1	12	-
bridge_x_4b	FC1	-	12
bridge_x_5a	FC1	13	-
bridge_x_5b	FC1	-	13
bridge_x_6a	FC1	14	-
bridge_x_6b	FC1	-	14
bridge_x_7a	FC1	15	-
bridge_x_7b	FC1	-	15
bridge_x_8a	FC1	16	-
bridge_x_8b	FC1	-	16
		Additional bridges for a second DR group or second MetroCluster configuration can be attached using ports 25 through 48 following the same pattern.	

<b>Cisco 9250i</b>			
<b>FibreBridge 6500 bridge or FibreBridge 7500 using one FC port</b>	<b>Port</b>	<b>Switch 1</b>	<b>Switch 2</b>

Cisco 9250i			
bridge_x_1a	FC1	14	-
bridge_x_1b	FC1	-	14
bridge_x_2a	FC1	15	-
bridge_x_2b	FC1	-	15
bridge_x_3a	FC1	17	-
bridge_x_3b	FC1	-	17
bridge_x_4a	FC1	18	-
bridge_x_4b	FC1	-	18
bridge_x_5a	FC1	19	-
bridge_x_5b	FC1	-	19
bridge_x_6a	FC1	21	-
bridge_x_6b	FC1	-	21
bridge_x_7a	FC1	22	-
bridge_x_7b	FC1	-	22
bridge_x_8a	FC1	23	-
bridge_x_8b	FC1	-	23
			Additional bridges can be attached using ports 25 through 48 following the same pattern.

**Cisco port usage for ISLs in an eight-node configuration in a MetroCluster configuration running ONTAP 9.1 or later**

The following table shows ISL port usage. ISL port usage is the same on all switches in the configuration.

Switch model	ISL port	Switch port
Cisco 9396S	ISL 1	44
	ISL 2	48
	ISL 3	92
	ISL 4	96
Cisco 9250i with 24 port license	ISL 1	12
	ISL 2	16
	ISL 3	20
	ISL 4	24
Cisco 9148S	ISL 1	20
	ISL 2	24
	ISL 3	44
	ISL 4	48
Cisco 9132T	ISL 1	MDS module 1 port 13
	ISL 2	MDS module 1 port 14
	ISL 3	MDS module 1 port 15
	ISL 4	MDS module 1 port 16

## Using the Interoperability Matrix Tool to find MetroCluster information

When setting up the MetroCluster configuration, you can use the Interoperability Tool to ensure you are using supported software and hardware versions.

### [NetApp Interoperability Matrix Tool](#)

After opening the Interoperability Matrix, you can use the Storage Solution field to select your MetroCluster solution.

You use the **Component Explorer** to select the components and ONTAP version to refine your search.

You can click **Show Results** to display the list of supported configurations that match the criteria.

## Where to find additional information

You can learn more about configuring, operating, and monitoring a MetroCluster configuration in NetApp's extensive documentation library.

### MetroCluster and miscellaneous guides

Guide	Content
<a href="#">ONTAP 9 Documentation Center</a>	<ul style="list-style-type: none"><li>• All MetroCluster guides</li></ul>
	<ul style="list-style-type: none"><li>• A technical overview of the MetroCluster configuration and operation.</li><li>• Best practices for MetroCluster configuration.</li></ul>
<a href="#">Fabric-attached MetroCluster installation and configuration</a>	<ul style="list-style-type: none"><li>• Fabric-attached MetroCluster architecture</li><li>• Cabling the configuration</li><li>• Configuring the FC-to-SAS bridges</li><li>• Configuring the FC switches</li><li>• Configuring the MetroCluster in ONTAP</li></ul>
<a href="#">Stretch MetroCluster installation and configuration</a>	<ul style="list-style-type: none"><li>• Stretch MetroCluster architecture</li><li>• Cabling the configuration</li><li>• Configuring the FC-to-SAS bridges</li><li>• Configuring the MetroCluster in ONTAP</li></ul>
<a href="#">MetroCluster IP installation and configuration</a>	<ul style="list-style-type: none"><li>• MetroCluster IP architecture</li><li>• Cabling the MetroCluster IP configuration</li><li>• Configuring the MetroCluster in ONTAP</li></ul>
<a href="#">Active IQ Unified Manager documentation</a> <a href="#">NetApp Documentation: Product Guides and Resources</a>	<ul style="list-style-type: none"><li>• Monitoring the MetroCluster configuration and performance</li></ul>
<a href="#">MetroCluster Tiebreaker Software Installation and Configuration Guide</a>	<ul style="list-style-type: none"><li>• Monitoring the MetroCluster configuration with the MetroCluster Tiebreaker software</li></ul>
<a href="#">Copy-based transition</a>	<ul style="list-style-type: none"><li>• Transitioning data from 7-Mode storage systems to clustered storage systems</li></ul>

## **Copyright Information**

Copyright © 2021 NetApp, Inc. All rights reserved. Printed in the U.S. No part of this document covered by copyright may be reproduced in any form or by any means-graphic, electronic, or mechanical, including photocopying, recording, taping, or storage in an electronic retrieval system- without prior written permission of the copyright owner.

Software derived from copyrighted NetApp material is subject to the following license and disclaimer:

THIS SOFTWARE IS PROVIDED BY NETAPP "AS IS" AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WHICH ARE HEREBY DISCLAIMED. IN NO EVENT SHALL NETAPP BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

NetApp reserves the right to change any products described herein at any time, and without notice. NetApp assumes no responsibility or liability arising from the use of products described herein, except as expressly agreed to in writing by NetApp. The use or purchase of this product does not convey a license under any patent rights, trademark rights, or any other intellectual property rights of NetApp.

The product described in this manual may be protected by one or more U.S. patents, foreign patents, or pending applications.

RESTRICTED RIGHTS LEGEND: Use, duplication, or disclosure by the government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer Software clause at DFARS 252.277-7103 (October 1988) and FAR 52-227-19 (June 1987).

## **Trademark Information**

NETAPP, the NETAPP logo, and the marks listed at <http://www.netapp.com/TM> are trademarks of NetApp, Inc. Other company and product names may be trademarks of their respective owners.