



USER MANUAL

Abaqus Workspace for file transfer, SSH access, job submission, and job monitoring.

1. Overview

WinUx provides one workspace for managing local files, working with an SSH server, and running Abaqus jobs.

TYPICAL WORKFLOW



Local ☐ SSH Server | INP → Abaqus Job → ODB/STA/DAT

Main features


- Browse and manage files on the local computer and SSH server.
- Upload, download, copy, move, rename, create, and delete files and folders.
- Check Abaqus INP files and calculate recommended CPU counts.
- Submit Abaqus jobs immediately or schedule them for later.
- Monitor jobs, view details, cancel jobs, open temporary folders, and download results.
- Use an interactive SSH console without leaving the application.

Before you begin

Make sure you have the SSH server address, port, username, password, and permission to access the required project folders and job scheduler.

2. Main Window

The workspace contains two file panels and a Job Viewer.

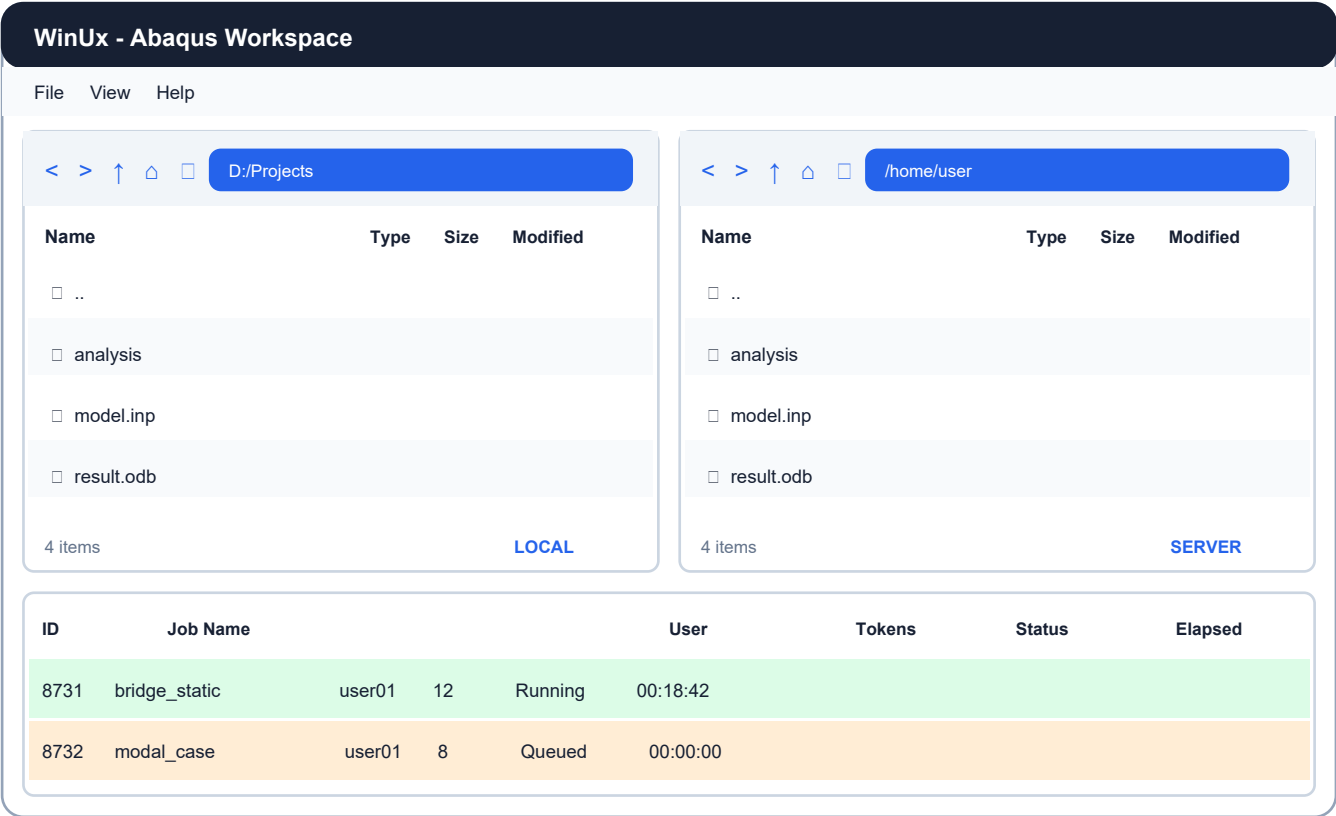

Area	Purpose	Common actions
Local panel	Files on your Windows computer	Browse files and upload data
Server panel	Files on the connected SSH server	Browse files, download data, and run jobs
Job Viewer	Jobs reported by the server scheduler	Check, edit, cancel, and download results
Status bars	Folder, connection, and selection status	Confirm the current working context

3. Connect to the SSH Server

1. Open File > Log-In.... You can also click the Server path area while disconnected.
2. Enter the server Host, Port, Username, and Password.
3. Select Remember if you want WinUx to remember the connection profile.
4. Click Log-in. The Server panel opens your home folder after a successful connection.

Choose a server folder

Click the blue path button in the Server panel. Enter an absolute path beginning with /, or type part of a folder name and choose a matching suggestion.

Connection status

Check the Server status bar before transferring files or running jobs. Sign in again if it shows that the server is disconnected.

4. Navigate and Manage Files

Action	How to use it
Back / Forward	Move through the folder history of the active panel.
Parent	Open the parent folder.
Home	Return to the local or server home folder.
Refresh	Reload the current folder. You can also press F5.
Sort	Click Name, Type, Size, or Date modified. Click again to reverse the order.
Open	Double-click or press Enter. Remote files are downloaded temporarily before opening.
Select multiple	Use Ctrl/Shift-click, drag a selection rectangle, or press Ctrl+A.

Right-click commands

Use Open, Copy, Cut, Paste, Rename, Delete, New > Folder, New > File, or Refresh. Rename edits the selected name directly in the file list.

Delete carefully

Delete permanently removes the selected items. Confirm the active panel and selection before continuing.

5. Transfer Files

Copy or move

Select the source items, press Ctrl+C to copy or Ctrl+X to move, open the destination folder, and press Ctrl+V. This works within one panel and between Local and Server.

Drag and drop

Drag selected items to the other panel. Drop on empty space to use the current folder, or drop on a folder to use it as the destination. Hold Ctrl while dropping when you want to copy.

Quick Transfer

In the Local panel, right-click and choose Quick Upload for *.inp or *.dat. In the Server panel, choose Quick Download for *.odb, *.sta, *.dat, or *.inp.

Transfer progress

The progress window shows the current item, transferred size, speed, and estimated time remaining. Click Cancel to request a safe stop.

Large transfers

Keep WinUx open and maintain the network connection until the progress window reports completion.

6. Check INP Files and Calculate CPUs

Check an INP file

Select one .inp file in either panel, right-click, and choose Check INP. WinUx displays a summary of the model data found in the file.

Calculate a CPU recommendation

Select one or more .inp files in the Server panel, choose Run Job, and click Compute. WinUx analyzes each model and recommends 32, 64, 128, or 160 CPUs.

Adjust the calculation factor

Open File > Settings..., enter the INP calculation factor (DOF/core), and click Save.

Recommendation only

Confirm the server queue limits, available licenses, memory requirements, and project guidelines before submitting a job.

7. Submit Abaqus Jobs

Select one or more .inp files in the Server panel, right-click, and choose Run Job.

Job Manager

Job Name	Abaqus Version	Num Cpus	Precision	Schedule	Execute
model_A	abq2024	64	Double	Run Now	Run
model_B	abaqus	32	Single	00:30	Run

☐ Overwrite

Compute

Run All

Setting	How to use it
Abaqus Version	Choose the Abaqus command available on the server. Right-click to add or remove a version; double-click to edit.
Num Cpus	Choose 16, 32, 64, 128, or 160 CPUs, or use Compute.
Precision	Choose Single or Double precision.
Run After	Enter a delay as HH:MM. The value must be greater than 00:00.
Run At	Enter a future time as HH:MM:SS MM-DD-YYYY.
Overwrite	Allow the existing Abaqus job files to be overwritten.
Run / Run All	Submit one row or every row. Run After and Run At cannot be enabled together.

8. Monitor and Manage Jobs

After login, the Job Viewer refreshes automatically. Running jobs appear green and queued jobs appear orange. Right-click a job to open its commands.

Command	Purpose
Check Job	Read and display the current job status.
View Details	Display detailed scheduler information.
Open Temp	Find and open the job temporary folder on the server.
Hot Download	Find the latest output file and download it to the current Local folder.
Cancel Job	Cancel the selected job after confirmation.
Edit Job	Set a start reference and schedule automatic job deletion.
Refresh	Refresh the job list immediately.

Job ownership

Commands that change or download a job are available only when the job belongs to the connected SSH user.

9. Job Schedules and SSH Console

View and manage schedules

Open View > Job Schedule. The table shows the schedule type, job, target time, remaining time, and status. Right-click a schedule to edit or cancel it, and use Refresh to update the list.

To schedule deletion, right-click a job, choose Edit Job, and enable either Delete After (HH:MM) or Delete At Time (HH:MM:SS MM-DD-YYYY).

Closing WinUx

Pending schedules are active only while WinUx remains open. The app warns you before closing when schedules are still waiting.

Use the SSH Console

Open View > Console. Type a command and press Enter. Use Up/Down to recall previous commands and Ctrl+C to interrupt the active command. The console uses the current SSH connection and server folder.

Console safety

Commands run with your SSH account permissions. Check the current folder and command carefully before deleting or modifying server data.

10. Keyboard Shortcuts

Shortcut	Action
Enter	Open the selected file or folder
Ctrl+C	Copy
Ctrl+X	Cut
Ctrl+V	Paste
F2	Rename
Delete	Delete selected items
Ctrl+Shift+N	Create a new folder
F5	Refresh the active panel
Ctrl+A	Select all items
Esc	Cancel the current drag, dialog, or supported operation
Up / Down in Console	Recall command history
Ctrl+C in Console	Interrupt the active command

Useful habits

- Open the correct project folder in both panels before transferring files.
- Use Quick Upload for INP/DAT files and Hot Download for job results.
- Check the username, Job ID, and Job Name before canceling or deleting a job.

11. Troubleshooting

Problem	What to check
Login failed	Check the host, port, network/VPN, username, password, and SSH access.
Server panel is unavailable	Sign in again and confirm that the selected server folder exists and is accessible.
Transfer failed	Check the connection, free space, write permission, file name, and destination folder. Refresh and retry.
A job is not listed	Wait for the automatic refresh or choose Refresh. Confirm that you are using the correct account.
Job submission failed	Check the Abaqus version, INP file, CPU/precision settings, available license, and displayed error.
Manual does not open	Confirm that a PDF reader is installed, then try Help > Manual again.

Open this manual

In WinUx, choose Help > Manual. The document opens in the default PDF reader.

END