

Ekinops PM_ROADM-FLEX-H20M

Documentation

Introduction

Product Features

- 20 Degree ROADM module with fix grid (50GHz, 75GHz and 100GHz).
- Per channel attenuation in the upstream section (Add direction)
- Dual OCM module (Optical Channel Monitoring)
- Automatic Flatness feature

Contents

Introduction.....	2
Product Features	2
Contents	3
Figures.....	4
Tables	4
History.....	5
References	5
Document	5
Description.....	6
Chapter A <i>PM_ROADM-FLEX-H20M Technical Specification</i>	7
A.1 Functional Description.....	8
A.1.1 General.....	8
A.1.2 Upstream Section.....	10
A.1.3 Downstream section.....	10
A.1.4 Optical Channel Monitoring	10
A.1.5 Communication Controller Block	11
A.1.6 Power Supplies	11
A.2 Optical Characteristics	12
A.2.1 1x20 WSS	12
A.2.2 OCM	12
A.3 Electrical and Environmental conditions.....	13
A.3.1 Power Consumption.....	13
A.3.2 Ambient operating Temperature	13
A.3.3 Storage Temperature	13
A.4 Front Panel Layout	14
A.5 Automatic Flatness.....	15
Chapter B <i>Multidegree ROADM architectures</i>	17
B.1 ROADM nD building rules	18
B.2 ROADM 2D	19
B.3 ROADM 5D	20
B.4 ROADM 10D	21
B.5 ROADM 5D Directionless	22
Chapter C <i>SNMP User Manual</i>.....	23
C.1 Configuration	24
C.1.1 Access Configuration.....	24
A.1.1.1 OCM Configuration	24
A.1.1.2 WSS Configuration objects	26
A.1.1.3 WSS Configuration example	28
A.1.2 How to modify the Configuration	29
C.2 Measurements.....	31
C.2.1 Module Temperature.....	32
C.2.2 Number of channels	33

C.2.3	Filtered Number of channels.....	33
C.2.4	Max Channel input power.....	34
C.2.5	Min Channel input power	35
C.2.6	Filtered Min Channel input power	36
C.2.7	Channel input power	37

Appendixes.....	39
------------------------	-----------

Appendix A: Laser Class	40
--------------------------------------	-----------

Appendix B: PM_ROADM-FLEX-H20M Leds description	41
--	-----------

Appendix C: PM_ROADM-FLEX-H20M MIB description	42
---	-----------

Figures

<i>Figure 1</i>	<i>PM_ROADM-FLEX-H20M Block diagram.....</i>	<i>9</i>
<i>Figure 2</i>	<i>PM_ROADM-FLEX-H20M front panel layout.....</i>	<i>14</i>
<i>Figure 3</i>	<i>ROADM 2D Functional diagram</i>	<i>19</i>
<i>Figure 4</i>	<i>ROADM 5D Functional diagram</i>	<i>20</i>
<i>Figure 5</i>	<i>ROADM 10D Functional diagram</i>	<i>21</i>
<i>Figure 6</i>	<i>ROADM 5D Directionless Functional diagram</i>	<i>22</i>

Tables

<i>Table 1</i>	<i>PM_ROADM-FLEX-H20M WSS optical characteristics</i>	<i>12</i>
<i>Table 2</i>	<i>PM_ROADM-FLEX-H20M OCM optical characteristics.....</i>	<i>12</i>

History

No.	Date	Status
Rev 1.01	June 4 th 2021	Added new Optical Characteristics information Updated Multi Degree ROADM Architecture
Rev 1.00	April 20 th 2021	Document creation

References

- [1] C200 Chassis Documentation
- [2] C600 Chassis Documentation
- [3] C600HC Chassis Documentation
- [4] Automatic Flatness Setup Procedure

Document

The purpose of this document is to provide you with information to install, operate and maintain the **RM_ROADM-FLEX-H20M module**.

Description

The **PM_ROADM-FLEX-H20M** range is a HW platform allowing reconfigurable optical Add/Drop Multiplexing functionalities.

This module is targeted to be used on Route & Select ROADM Node Architecture.

Chapter A PM_ROADM-FLEX-H20M

Technical Specification

A.1 Functional Description

A.1.1 General

The block diagram for the PM_ROADM-FLEX-H20M is given in Figure 1.

The PM_ROADM-FLEX-H20M is a bi-directional device. It therefore has different sections:

- Upstream Section: from Express input signals to Line output signal (Add Direction)
- Downstream Section: from Line input signal to Express output signals (Drop Direction)
- Common sections composed of :
 - Communication Controller block, providing interfacing to the C200HC/C600HC chassis controller board hosting the SNMP Agent.
 - Power supplies: generates different internal power supplies from the -48V of the chassis backplane
 - Front panel LEDs indicating the status of the PM_ROADM-FLEX-H20M common functions

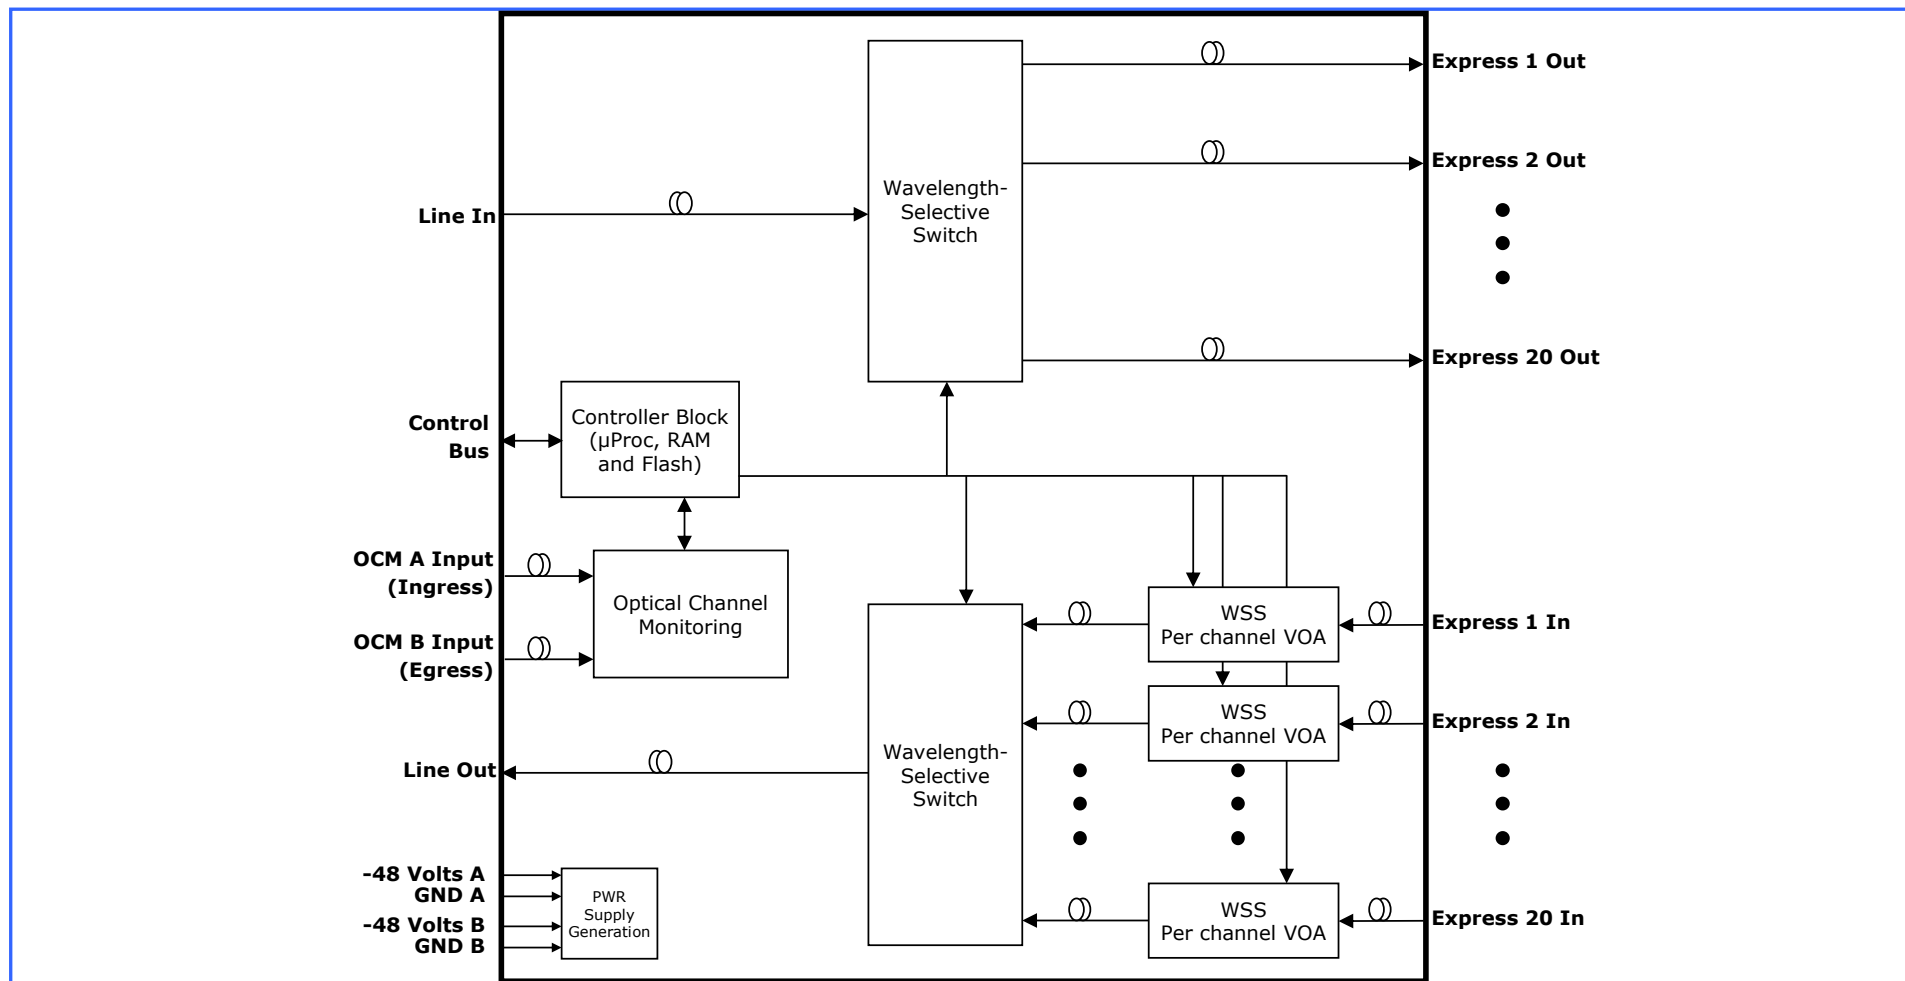


Figure 1 PM_ROADM-FLEX-H20M Block diagram

A.1.2 Upstream Section

The upstream section is mainly composed of the Wavelength-Selective Switch

This active component is used to perform the switch of any individual DWDM channel. Each DWDM channel can be either routed or switched off from Express port n to Line (n can be any value from 1 to 20)

Additionally, an individual attenuation can be applied to each DWDM channel on each individual express port in, using a Per channel Variable Optical Attenuator.

The following information can be sent to the PM_ROADM-FLEX-H20M:

- DWDM Channel per express port switch information
- DWDM Channel per express port attenuation

A.1.3 Downstream section

The downstream section is mainly composed of the Wavelength-Selective Switch

This active component is used to perform the switch of any individual DWDM channel. Each DWDM channel can be either routed or switched off from Line to Express port n (n can be any value from 1 to 20)

The following information can be sent to the PM_ROADM-FLEX-H20M:

- DWDM Channel per express port switch information

A.1.4 Optical Channel Monitoring

The Optical Channel Monitoring block is composed of an optical switch to select the input port to monitor.

The selected input port is then monitored by the Optical Power Monitoring component.

An offset may be configured for each input port to compensate the insertion loss of the monitoring ports connected to the OCM port.

The following information can be sent to the OCM:

- DWDM Spectrum offset (per input port)

The following alarm can be read on the Communication Controller Block:

- DWDM Spectrum presence (per input port)

The following measure can be read on the Communication Controller Block:

- DWDM Channel power (per channel and per input port)
- DWDM Channel maximum power (per input port), giving the power of the channel with the maximum power over the spectrum
- DWDM Channel minimum power (per input port), giving the power of the channel with the minimum power over the spectrum.

A.1.5 Communication Controller Block

The communication controller block is composed of a microprocessor associated with Flash and RAM memories.

The communication controller block collects information from different functional blocks and configures the HW according to a configuration file received.

The raw information (alarms, monitoring, inventory ...) generated by the HW are processed by the microprocessor and delivered to the MGNT as high level consolidated data.

For the operation of the PM_ROADM-FLEX-H20M refer to the Chapter C of the present document.

A.1.6 Power Supplies

The power supply block generates from the received external -48 volts, the different internal supplies needed.

A.2 Optical Characteristics

The PM_ROADM-FLEX-H20M module has the following optical characteristics

A.2.1 1x20 WSS

The optical characteristics of the Wavelength Selective Switch are given in the following table:

General	Value			Unit
	Min	Typ	Max	
Operating Wavelength	1527,41		1567,75	nm
Operating Frequency	191,225		196,275	THz
Grid		Flex		
Minimum Channel bandwidth	37,5	50		GHz
Flex spectrum channel passband increment		12,5		GHz
Insertion Loss (Line to Express)		6	8	dB
Insertion Loss (Express to Line)		6	8	dB
Wavelength Dependent Loss (All channels, one port, constant T°C)			2,2	dB
Polarization Dependent Loss – PDL_10 (VOA < 10dB)		0,3	1,0	dB
Polarization Dependent Loss – PDL_15 (10dB < VOA < 15dB)		0,5	1,3	dB
Port Isolation	22	25		dB
WSS VOA Range	0		15	dB
WSS VOA Error			2,25	dB

Table 1 PM_ROADM-FLEX-H20M WSS optical characteristics

A.2.2 OCM

The optical characteristics of the Optical Channel Monitoring are given in the following table:

General	Value			Unit
	Min	Typ	Max	
Operating Wavelength	1528,58		1567,75	nm
Operating Frequency	191,25		196,125	THz
Grid		Flex		
Minimum Channel bandwidth	37,5	50		GHz
Flex spectrum channel passband increment		12,5		GHz
Channel Input Power	-40		-10	dBm
Power Accuracy	-0.5		0.5	dB

Table 2 PM_ROADM-FLEX-H20M OCM optical characteristics

A.3 Electrical and Environmental conditions

A.3.1 Power Consumption

The power consumption of the PM_ROADM-FLEX-H20M version is:
Less than 20W

A.3.2 Ambient operating Temperature

The PM_ROADM-FLEX-H20M is designed for operating in a C200HC/C600HC chassis operated in an ambient temperature range of 0°C to 50°C.

A.3.3 Storage Temperature

In the storage temperature range of –20 to +85°C, the PM_ROADM-FLEX-H20M has no reliability deficiency.

A.4 Front Panel Layout

The PM_ROADM-FLEX-H20M occupies three slots in the chassis.

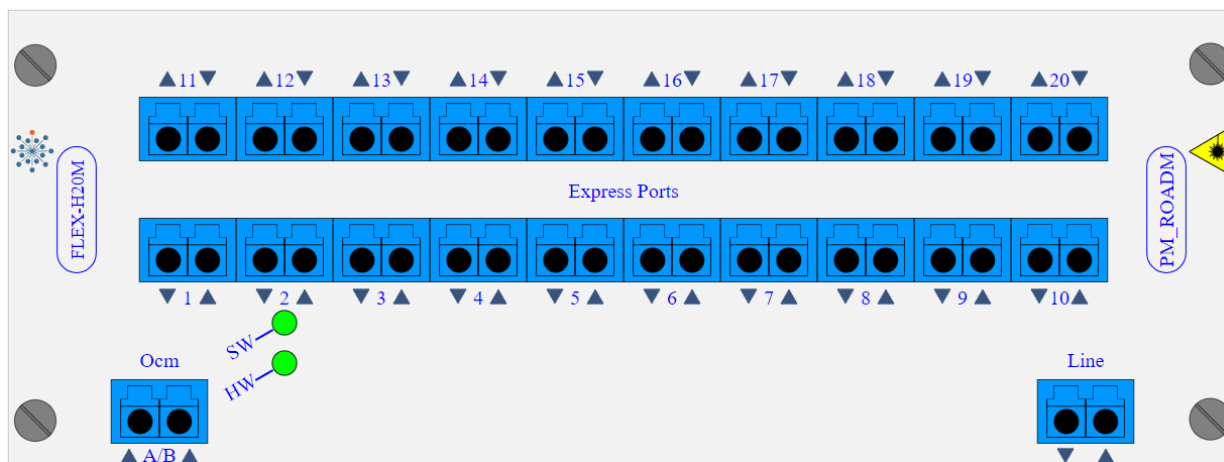


Figure 2

PM_ROADM-FLEX-H20M front panel layout

A.5 Automatic Flatness

The Automatic Flatness feature is a process managed by the PM_ROADM-FLEX-H20M in conjunction with an Amplifier with monitoring ports to equalize output power of all channels from the output of the Amplifier.

For this feature to operate correctly, refer to document [4] for setup.

Chapter B Multidegree ROADM architectures

B.1 ROADM nD building rules

Each Degree, numbered from 1 to n, of a ROADM function is composed of:

- One Optical Amplifier such as PM_OABP-HCS17, PM_OAIL-HCS17, etc...
- One PM_ROADM-FLEX-H20M

The optical connections between the optical Amplifier and PM_ROADM-FLEX-H20M are as following:

- The Line port of the PM_ROADM-FLEX-H20M is connection to the Line A of the optical amplifier
- The OCM A port of the PM_ROADM-FLEX-H20M is connection to the Mon A port of the optical amplifier
- The OCM B port of the PM_ROADM-FLEX-H20M is connection to the Mon B port of the optical amplifier

Then, the connections between each degree is done cabling the various PM_ROADM-FLEX-H20M with the following rules:

- The **Express port #x** of the **PM_ROADM-FLEX-H20M belonging to the Degree #y** of the ROADM function is always connected to the **Express port #y** of the **PM_ROADM-FLEX-H20M belonging to the Degree #x**.
- The **Express port #x** of the PM_ROADM-FLEX-H20M belonging to the **Degree #x** is used for connection to the local Add/Drop.

For example, the **Express port #3** of the PM_ROADM-FLEX-H20M used in **Degree #7** must be connected to the **Express port #7** of the PM_ROADM-FLEX-H20M used in **Degree #3**

The PM_ROADM-FLEX-H20M based on this building rules is capable of handling up to 20 Degrees ROADM Architecture.

Detailed examples of ROADM cabling are given in part B.2, B.3 and B.4

B.2 ROADM 2D

The network diagram of the ROADM 2D feature with local add/drop based on PM_ROADM-FLEX-H20M is given Figure 3.

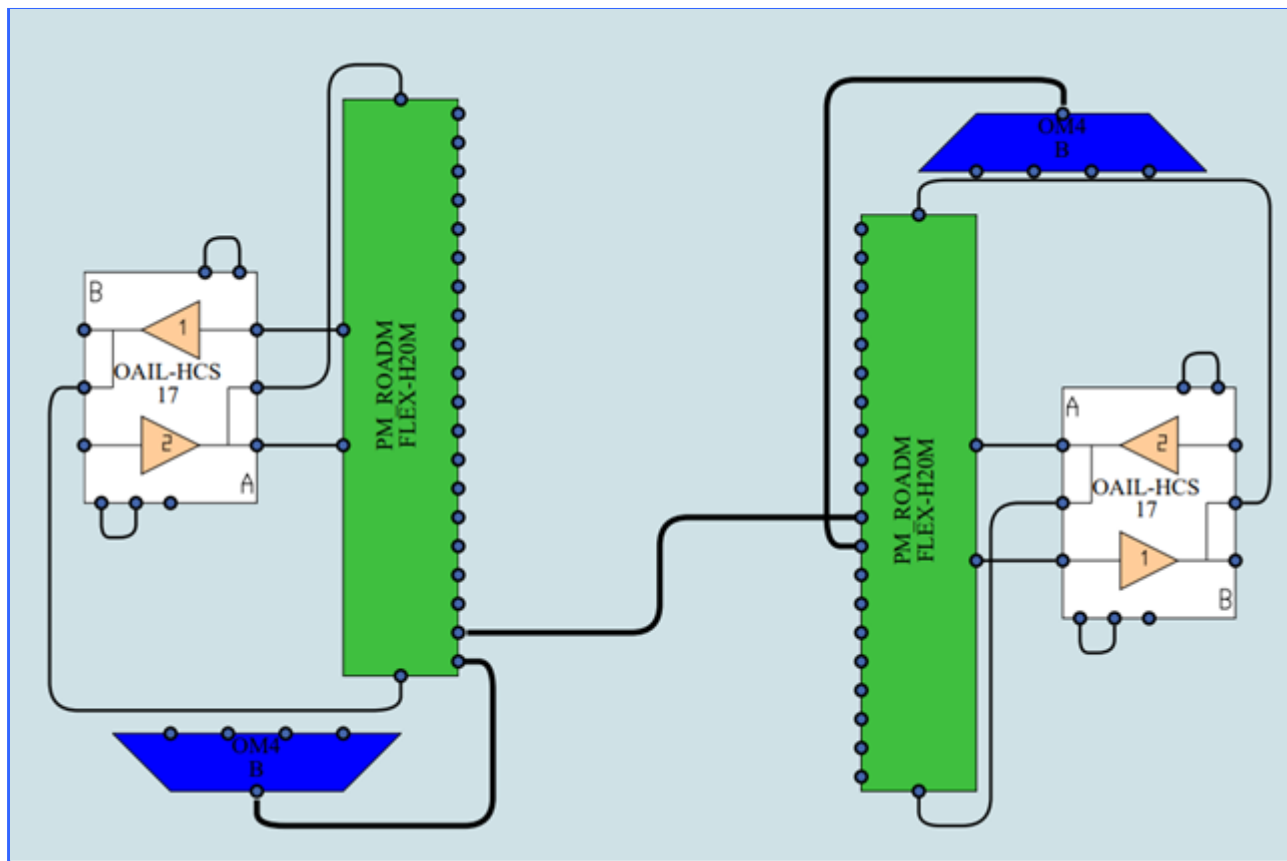


Figure 3

ROADM 2D Functional diagram

B.3 ROADM 5D

The network diagram of the ROADM 5D feature with local add/drop based on PM_ROADM-FLEX-H20M is given Figure 4.

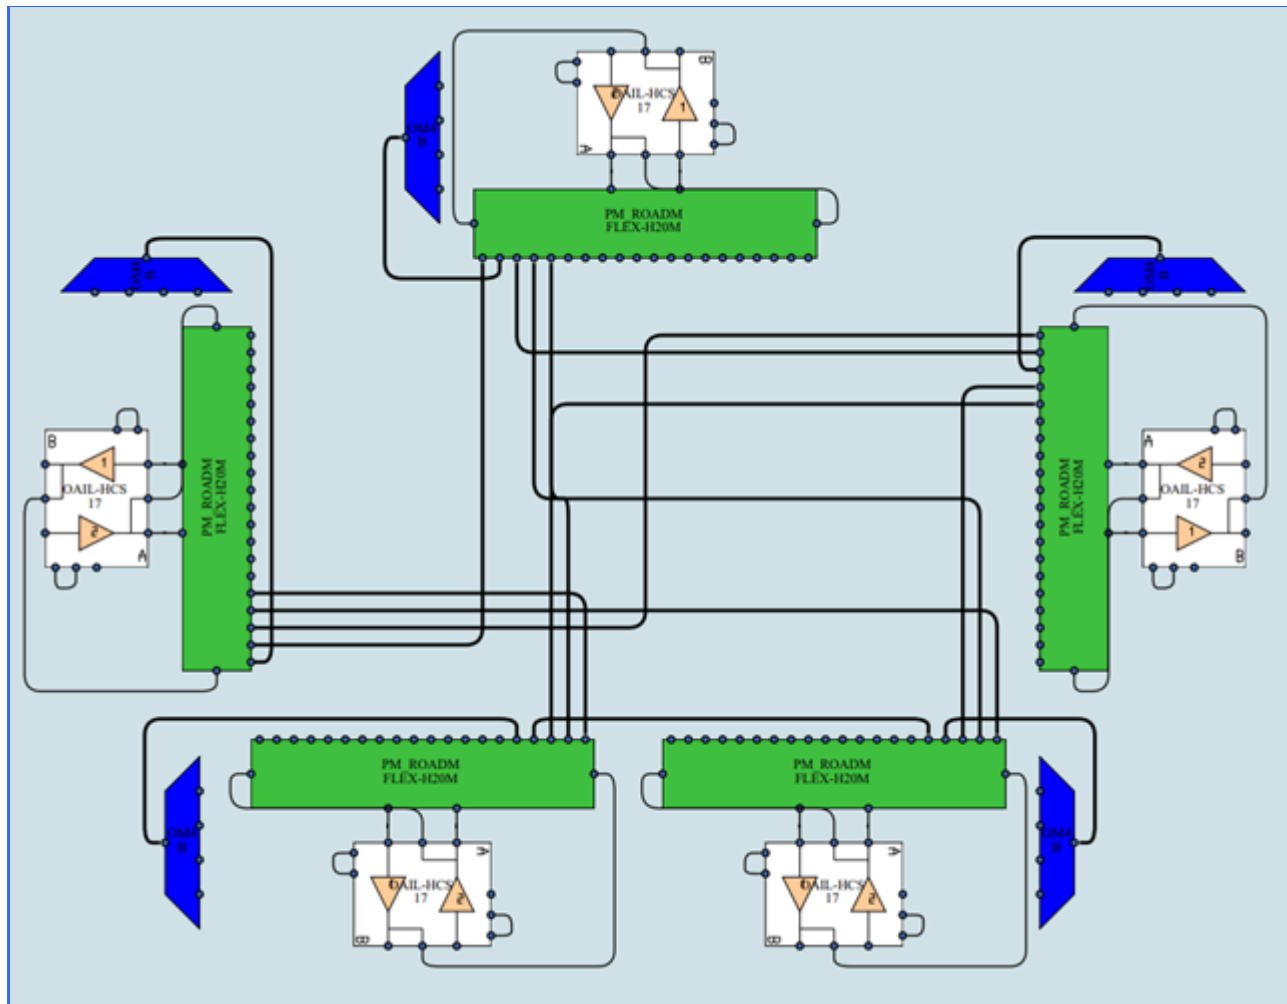


Figure 4

ROADM 5D Functional diagram

B.4 ROADM 10D

The network diagram of the ROADM 10D feature with local add/drop based on PM_ROADM-FLEX-H20M is given Figure 5.

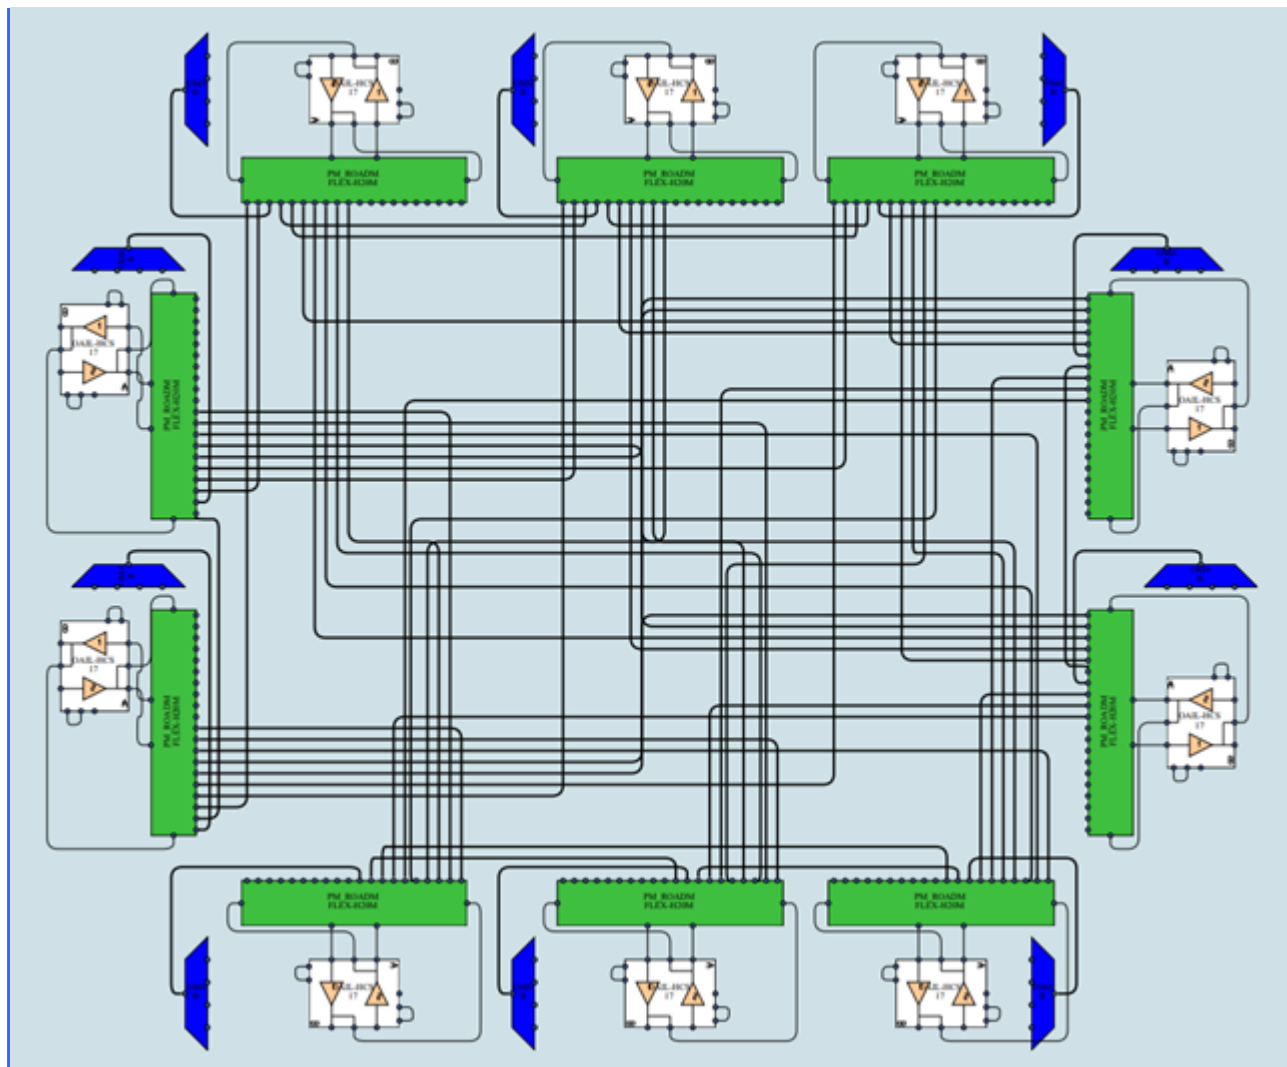


Figure 5

ROADM 10D Functional diagram

B.5 ROADM 5D Directionless

The network diagram of the ROADM 5D feature with directionless local add/drop based on PM_ROADM-FLEX-H20M is given Figure 6.

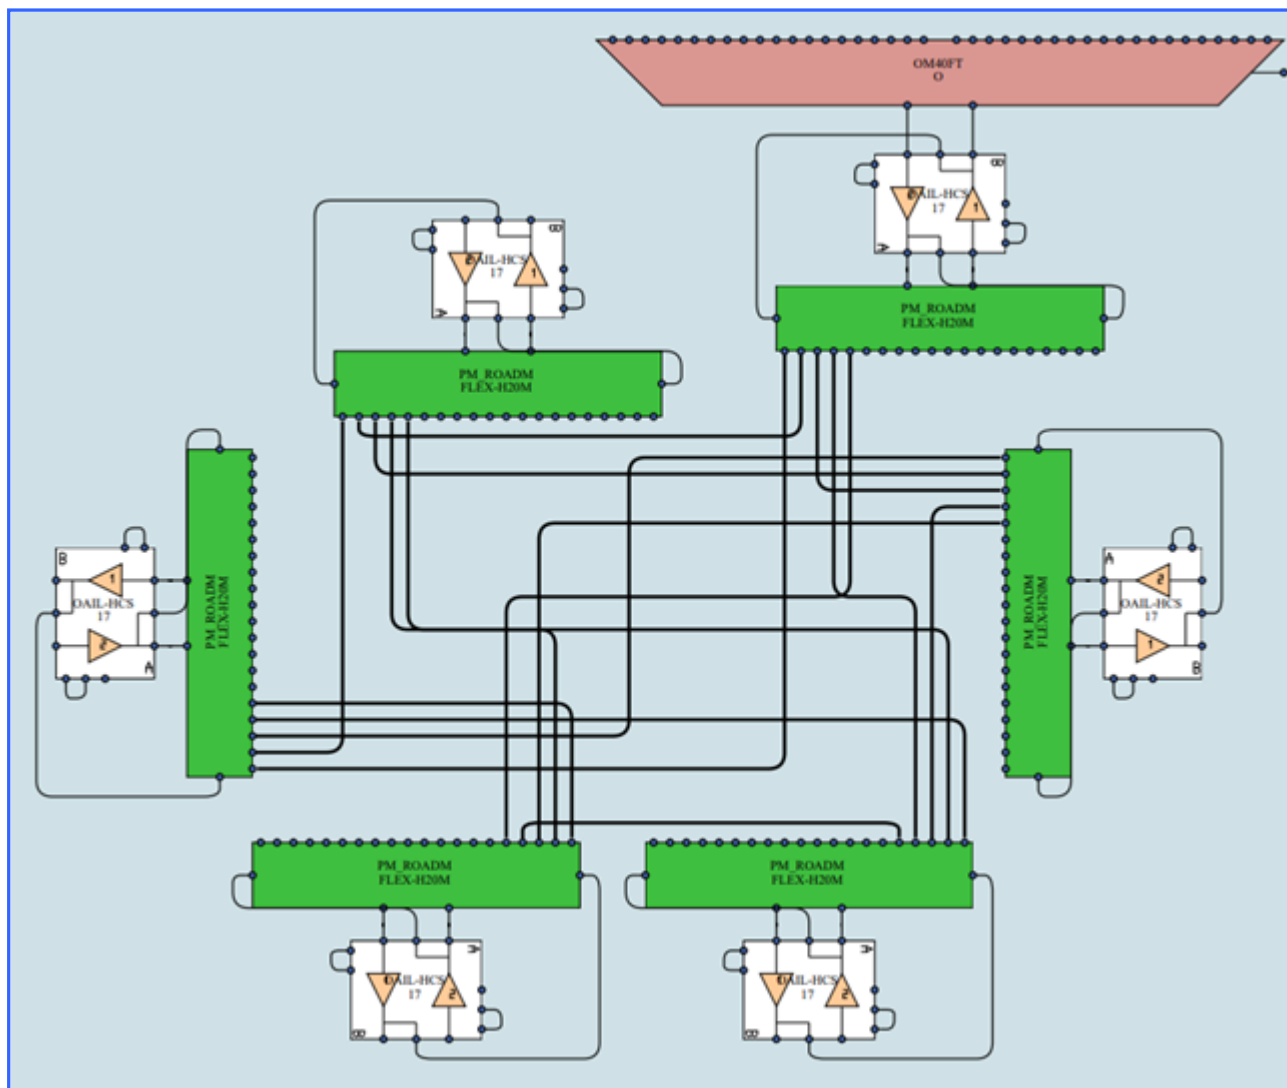


Figure 6 ROADM 5D Directionless Functional diagram

Chapter C SNMP User Manual

C.1 Configuration

C.1.1 Access Configuration

Certain aspects of the line and client ports are user modifiable.

In the following procedures the modifications are indicated at bit level.
Take note of your SNMP manager's requirements.

For example setting the bits 6, 3, 2 and 0 to 1 will yield the following values:

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0	Bit Number
0	0	0	0	0	0	0	0	0	1	0	0	1	1	0	1	Binary
4D																Hexadecimal
77																Decimal

A.1.1.1 OCM Configuration

The table **pmroadmflexh4mCfgLineStartupThreshTable**

Location:

ekinops\modulePmroadmflexh4m\pmroadmflexh4mConfig\pmroadmflexh4mCfgStartup

contains one object for each OCM input

pmroadmflexh4mCfgLambdasThresholdLinePortn

this allows the configuration of the channel Loss of Signal threshold

The following table details the meaning of each bit as well as the default values:

pmroadmflexh4mCfgLambdasThresholdLinePortn			
Bit	Default value	Bit Name	Description
Bit 15-0	- 400	Channel LOS Threshold	Signed 16-bits integer expressed in 0.1dBm. default value is - 40dBm

The table **pmroadmflexh4mCfgXfpTable**

Location:

ekinops\modulePmroadmflexh4m\pmroadmflexh4mConfig\pmroadmflexh4mCfgLineStartUp

contains two object for each OCM input

pmroadmflexh4mCfgOcmLosThresholdPortn

this allows the configuration of the OCM Loss of signal threshold

pmroadmflexh4mCfgOcmOffsetPortn

this allows the configuration of the OCM offset

The following table details the meaning of each bit as well as the default values:

pmroadmflexh4mCfgOcmLosThresholdPortn			
Bit	Default value	Bit Name	Description
Bit 15-0	- 400	OCM LOS Threshold	Signed 16-bits integer expressed in 0.1dBm. default value is -40dBm
pmroadmflexh4mCfgOcmOffsetPortn			
Bit	Default value	Bit Name	Description
Bit 15-0	0	OCM Offset	Unsigned 16-bits integer expressed in 0.1dB. default value is 0dBm

A.1.1.2 WSS Configuration objects

The OIDs:

pmroadmflexh4mCfgwaveplan1Control
pmroadmflexh4mCfgwaveplan2Control
pmroadmflexh4mCfgwaveNumberToSet

and the table

pmroadmflexh4mCfgWaveListWriteTable which contains three objects:
pmroadmflexh4mCfgWaveMiscWPortn
pmroadmflexh4mCfgWaveCentralFhzWPortn
pmroadmflexh4mCfgWaveBandwidthWPortn

Location: \ekinops\modulePmroadmflexh4m\pmroadmflexh4mConfig\
pmroadmflexh4mCfgRoadmflexWavetableWrite\

are dedicated to the waveplan management (creation, edition, deletion)

The following tables detail the meaning of each bit as well as the default values:

pmroadmflexh4mCfgwaveplan1Control			
Bit	Default value	Bit Name	Description
Bit 0	0	Delete	Set to 1 for delete operation
Bit 1	0	Create	Set to 1 for create operation
Bit 2	0	Update	Set to 1 for update operation. The update operation can only be used to modify the destination express port, the attenuation and/or the channel width. To modify the central frequency, the channel must be first deleted and then created with a new central frequency.
Bit 15-3	0	Reserved	Set to Default value
pmroadmflexh4mCfgwaveplan2Control			
Bit	Default value	Bit Name	Description
Bit 15-0	0	Reserved	Reserved for future use
pmroadmflexh4mCfgwaveNumberToSet			
Bit	Default value	Bit Name	Description
Bit 7-0	0	Number of channel	Used only in create operation. Define the number of channel to create
Bit 15-8	0	Reserved	Reserved for future use

pmroadmflexh4mCfgWaveMiscWPortn

Bit	Default value	Bit Name	Description
Bit 7-0	0	Attenuation	Attenuation to apply to the Channel expressed in 0.1dB.
Bit 11-8	0	Destination Express port	Define the Express port where the channel must be routed: 0: no routing, channel OFF 1: Express 1 2: Express 2 3: Express 3 4: Express 4 5: Express 5 6: Express 6 7: Express 7 8: Express 8 9: Express 9 10: Express 10
Bit 13-12	0	Reserved	Reserved for future use
Bit 14	0	Create/Delete	Set to 1 to create a channel Set to 0 to delete a channel
Bit 15	0	Update	Set to 1 to update an existing channel

pmroadmflexh4mCfgWaveCentralFhzWPortn

Bit	Default value	Bit Name	Description
Bit 15-0	0	Channel Central Frequency	Define the central frequency of the channel in THz expressed in step of 3.125 GHz

pmroadmflexh4mCfgWaveBandwidthWPortn

Bit	Default value	Bit Name	Description
Bit 15-0	0	Channel width	Define the total width of the channel in THz expressed in step of 3.125 GHz

A.1.1.3 WSS Configuration example

To create a 40 Channels grid with 100GHz spacing starting on ITU channel CH20.00 (192.0 THz) with all channels routed to Express 2 with 0dB attenuation, the following objects must be used:

```
pmroadmflexh4mCfgwaveplan1Control = 0x0002    (waveplan create)
pmroadmflexh4mCfgwaveplan2Control = 0x0000    (not used)
pmroadmflexh4mCfgwaveNumberToSet = 0x0028    (40 channels)
```

The table pmroadmflexh4mCfgWavelistWriteTable must contain one entry with the following objects

```
pmroadmflexh4mCfgWaveMiscWPortn= 0x4200    (create, Express 2, no
att.)
pmroadmflexh4mCfgWaveCentralFhzWPortn= 0xF000    (F=192.0THz)
pmroadmflexh4mCfgWaveBandwidthWPortn= 0x0020(width=100GHz)
```

To delete a complete waveplan, the following objects must be used

```
pmroadmflexh4mCfgwaveplan1Control = 0x0001    (waveplan delete)
```

To delete a single channel, defined by its central frequency (CH41.5 – 194.15 THz), the following objects must be used

```
pmroadmflexh4mCfgwaveplan1Control = 0x0004    (waveplan update)
pmroadmflexh4mCfgwaveplan2Control = 0x0000    (not used)
pmroadmflexh4mCfgwaveNumberToSet = 0x0000    (not used)
```

The table pmroadmflexh4mCfgWavelistWriteTable must contain one entry with the following objects

```
pmroadmflexh4mCfgWaveMiscWPortn= 0x8000    (channel delete)
pmroadmflexh4mCfgWaveCentralFhzWPortn= 0xF2B0    (F=194.15THz)
pmroadmflexh4mCfgWaveBandwidthWPortn= 0x0000(not used)
```

To create these two new channels

Frequency	Width	Routing	Attenuation
193 THz	50 GHz	Express 4	5 dB
194.35 THz	75 GHz	Express 1	2 dB

, the following objects must be used

```
pmroadmflexh4mCfgwaveplan1Control = 0x0004    (waveplan update)
pmroadmflexh4mCfgwaveplan2Control = 0x0000    (not used)
pmroadmflexh4mCfgwaveNumberToSet = 0x0000    (not used)
```

The table pmroadmflexh4mCfgWavelistWriteTable must contain two entries with the following objects

```
pmroadmflexh4mCfgWaveMiscWPortn= 0x4432    (channel create,
Express 4, 5dB)
pmroadmflexh4mCfgWaveCentralFhzWPortn= 0xF140    (F=193THz)
pmroadmflexh4mCfgWaveBandwidthWPortn= 0x0010(50GHz)
pmroadmflexh4mCfgWaveMiscWPortn= 0x4114    (channel create,
Express 1, 2dB)
pmroadmflexh4mCfgWaveCentralFhzWPortn= 0xF2F0    (F=194.35THz)
pmroadmflexh4mCfgWaveBandwidthWPortn= 0x0018(75GHz)
```

A.1.2 How to modify the Configuration

The following procedure outlines how to modify any configuration. This can be performed at any time, keeping in mind that the cold reset will affect the traffic.

Note

This is module type dependant. Consult the table in the **Description** section to determine if it is applicable or not.

The following modifications may be achieved by using control objects in:

...\ekinops\modulePmroadmC\pmroadmCcontrolsWrite\

However modifications made in this way are lost following a reset

Each configuration modification can be performed at the same time and applied at the same time with one reset.

Traffic implications will depend on your choice of reset.

Procedure

- Ensure that the correct module is selected for management. Consult the object:
mgnt2GigmSelectedBoard

Location:...\ekinops\mgnt2\mgnt2SNMPAgentData\mgnt2ModulesManagement\

- Change if necessary.

- Determine a value corresponding to the configuration profile you require.

- Perform an **SNMP SET** to write the value corresponding to the required configuration profile into the SNMP agent.

- Perform a **SET** to “on” the object:
pmroadmCCfgWriteConfiguration.

Location: ...\\ekinops\modulePmroadmC\pmroadmCConfig\

This will load the new configuration from the SNMP agent to the modules RAM.

- Transfer the new configuration into the module using the object:
pmroadmCCtrlConf2Flash1

Location:

```
...\ekinops\modulePmroadmC\pmroadmCcontrolsWrite\pmroadmCCtrlOther\
pmroadmCCtrlsynth0\
```

This saves the configuration of the module as user configuration in the flash memory.

-Restart the module using a cold reset or by powering down/up to apply the configuration modification. Reset information can be found in the **Software management** section.

Note

At that point, user configuration becomes the start-up configuration of the PM.

End

C.2 Measurements

In order to manage the various measurements available a polling mechanism is required, thereby allowing the uploading of several physical parameters such as temperature, optical input power, etc.

A description of all the available measurements can be found in Appendix C: PM_ROADM-FLEX-H20M MIB description

The following describes the method of interpretation of the different types of measurements:

C.2.1 Module Temperature

The object:

pmroadmflexh4mMesrocmTemp,

Location:...\ekinops\modulePmroadmflexh4m\pmroadmflexh4mmeasures\pmroadmflexh4mMesrOther\

This object gives the temperature value of the WSS module in the RM_ROADM-H4-WB (Unit = °C).

The following formula must be applied to the returned value in order to obtain the actual temperature:

$$T (^{\circ}\text{C}) = AV/256$$

Parameter	Meaning	Format
AV	Article Value	Unsigned Word

For example:

The object **pmroadmflexh4mMesrocmTemp** outputs the following:

1: pmroadmflexh4mMesrocmTemp.0 (gauge) 11066

The value returned from the WSS is: 11066.

So applying the formula: $T = 11066/256$

Gives an actual temperature of: + 43.23°C

C.2.2 Number of channels

A listing of the table:

pmroadmflexh4mMesrwssChannelNumberTable,

Location:...\ekinops\modulePmroadmflexh4m\pmroadmflexh4mmeasures\pmroadmflexh4mMesrLine\

Returns the objects:

pmroadmflexh4mMesrwssChannelNumberPortn
for each OCM port in the module.

This object gives the total number of channel configured in the OCM.

C.2.3 Filtered Number of channels

A listing of the table:

pmroadmflexh4mMesrocmPwrMinFilteredTable,

Location:...\ekinops\modulePmroadmflexh4m\pmroadmflexh4mmeasures\pmroadmflexh4mMesrLine\

Returns the objects:

pmroadmflexh4mMesrocmPwrMinFilteredPortn
for each OCM port in the module.

This object gives the total number of channel detected by the OCM using the Loss of Signal Threshold (see part OCM Configuration for details about threshold configuration).

C.2.4 Max Channel input power

A listing of the table:

pmroadmflexh4mMesrocmPwrMaxTable,

Location:...\ekinops\modulePmroadmflexh4m\pmroadmflexh4mmeasures\pmroadmflexh4mMesrLine\

Returns the objects:

pmroadmflexh4mMesrocmPwrMaxPortn
for each OCM port in the module.

This object gives the maximum channel input power on the OCM port.

The following formula must be applied to the returned value in order to obtain the actual power in dBm:

$$P \text{ (dBm)} = AV \times 0.1$$

Parameter	Meaning	Format
AV	Article Value	Signed Word

For example:

The object **pmroadmflexh4mMesrocmPwrMaxTable** outputs the following for the first port:

1: pmroadmflexh4mMesrocmPwrMaxTable.1.2.0 (gauge) -100

The value returned from the OCM is: -100.

So applying the formula: $P = -100 \times 0.1$

Gives an actual power of: -10 dBm

C.2.5 Min Channel input power

A listing of the table:

pmroadmflexh4mMesrocmPwrMinTable,

Location:...\ekinops\modulePmroadmflexh4m\pmroadmflexh4mmeasures\pmroadmflexh4mMesrLine\

Returns the objects:

pmroadmflexh4mMesrocmPwrMinPortn
for each OCM port in the module.

This object gives the minimum channel input power on the OCM port.

The following formula must be applied to the returned value in order to obtain the actual power in dBm:

$$P \text{ (dBm)} = AV \times 0.1$$

Parameter	Meaning	Format
AV	Article Value	Signed Word

For example:

The object **pmroadmflexh4mMesrocmPwrMinTable** outputs the following for the first port:

1: pmroadmflexh4mMesrocmPwrMinTable.1.2.0 (gauge) -100

The value returned from the OCM is: -100.

So applying the formula: $P = -100 \times 0.1$

Gives an actual power of: -10 dBm

C.2.6 Filtered Min Channel input power

A listing of the table:

pmroadmflexh4mMesrocmPwrMinFilteredTable,

Location:...\ekinops\modulePmroadmflexh4m\pmroadmflexh4mmeasures\pmroadmflexh4mMesrLine\

Returns the objects:

pmroadmflexh4mMesrocmPwrMinFilteredPortn
for each OCM port in the module.

This object gives the minimum channel input power on the OCM port on the filtered list of channels. The filtered list of channels is obtained using the Loss Of Signal threshold (see part OCM Configuration for details about threshold configuration).

The following formula must be applied to the returned value in order to obtain the actual power in dBm:

$$P \text{ (dBm)} = AV \times 0.1$$

Parameter	Meaning	Format
AV	Article Value	Signed Word

For example:

The object **pmroadmflexh4mMesrocmPwrMinFilteredTable** outputs the following for the first port:

1: pmroadmflexh4mMesrocmPwrMinFilteredTable.1.2.0 (gauge) -100

The value returned from the OCM is: -100.

So applying the formula: $P = -100 \times 0.1$

Gives an actual power of: -10 dBm

C.2.7 Channel input power

The objects:

pmroadmflexh4mMesrnbChannelXTable
pmroadmflexh4mMesrpwrChannelXTable,

where X stands for the measure index (X=1 for the first measure, 2 for the second measure, etc...).

Location:...\ekinops\modulePmroadmflexh4m\pmroadmflexh4mmeasures\pmroadmflexh4mMesrLine\

Returns respectively the objects:

pmroadmflexh4mMesrnbChannel1Portn and
pmroadmflexh4mMesrpwrChannel1Portn
for each OCM port in the module.

These objects give respectively the channel frequency (pmroadmflexh4mMesrnbChannel1Portn) and the channel power (pmroadmflexh4mMesrpwrChannel1Portn)

The following formula must be applied to the returned value in order to obtain the actual power in dBm:

$$F(\text{Thz}) = AV1 \times 0.003125$$

$$P(\text{dBm}) = AV2 \times 0.1$$

Parameter	Meaning	Format
AV1	Article Value from pmroadmflexh4mMesrnbChannel1Portn	Unsigned Word
AV2	Article Value from pmroadmflexh4mMesrpwrChannel1Portn	Signed Word

For example:

The object **pmroadmflexh4mMesrnbChannel1Table** outputs the following for the first OCM input port:

1: pmroadmflexh4mMesrnbChannel1Table.1.2.0 (gauge) 62112

The value returned from the OCM is: 62112

So applying the formula: $F = 62112 \times 0.003125$

Gives an actual frequency of: 194.1 THz

The object **pmroadmflexh4mMesrpwrChannelXTable** outputs the following for the first OCM input port:

1: pmroadmflexh4mMesrpwrChannelXTable.1.2.0 (gauge) -100

The value returned from the OCM is: -100

So applying the formula: $P = -100 \times 0.1$

Gives an actual power of: -10 dBm

Combining the two results give the following

The channel with frequency 194.1THz (ITU Channel 41.00) has a power of -10dBm.

Appendixes

Appendix A: Laser Class

Laser Class	Risks	General Requirements
1	Considered safe to eye and Skin under all reasonably foreseeable conditions of operation.	• Protective housing: may be required.

Appendix B: PM_ROADM-FLEX-H20M Leds description

LED	Status	Condition
SW	Green On	Normal
	Red On	Boot
	Orange	Software Power Down
HW	Green On	Normal
	Red On	Init./Reboot

Appendix C: PM_ROADM-FLEX-H20M MIB description

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98	modulePmroadmflexh4m			
root.98.2	pmroadmflexh4malarms			
root.98.2.1	pmroadmflexh4mAlmOther			
root.98.2.1.1	pmroadmflexh4mAlmOtherNurg			
root.98.2.1.1.2	pmroadmflexh4mAlmsynthAlm2			
root.98.2.1.1.2.1	pmroadmflexh4mAlmConfTableSave	read-only	PM Configuration Save	This OID is at 1 during the saving of a new configuration table in the module Flash memory. <Condtype> CONF_TABLE_SAVE <Probcause> informationalStatus(1000) <Alarmtype> other (1) <Polarity> (2)
root.98.2.1.1.2.2	pmroadmflexh4mAlmInvUpload	read-only	Inventory Upload	This OID is at 1 during the uploading of PM inventory information. <Condtype> INV_UPLOAD <Probcause> informationalStatus(1000) <Alarmtype> other (1) <Polarity> (2)
root.98.2.1.1.2.3	pmroadmflexh4mAlmConfTableLoad	read-only	PM Configuration Load	This OID is at 1 during the loading of configuration tables in the modules RAM. <Condtype> CONF_TABLE_LOAD <Probcause> informationalStatus(1000) <Alarmtype> other (1) <Polarity> (2)
root.98.2.1.1.2.4	pmroadmflexh4mAlmCorrelatOff	read-only	Not Used	This OID, when set, indicates that alarm correlation is not being performed. <Condtype> CORRELAT_OFF <Probcause> informationalStatus(1000) <Alarmtype> other (1) <Polarity> (2)
root.98.2.1.2	pmroadmflexh4mAlmOtherUrg			

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.2.1.2.196	pmroadmflexh4mAlmocmFailure			
root.98.2.1.2.196.1	pmroadmflexh4mAlmOcmHardwareError	read-only	OCM Fail	This alarm indicates that a failure is occurring on the OCM <Help> This alarm indicates that a failure is occurring on the OCM <Condtype> OCM_HARDWARE_ERROR <Probcause> equipmentMalfunction(16) <Alarmtype> equipmentAlarm (5) <Polarity> (2)
root.98.2.1.2.196.2	pmroadmflexh4mAlmOcmNotReady	read-only	OCM Not Ready	This status indicates that the OCM initialization is not completed <Help> This status indicates that the OCM initialization is not completed <Condtype> OCM_NOT_READY <Probcause> equipmentMalfunction(16) <Alarmtype> other (1) <Polarity> (2)
root.98.2.1.2.196.9	pmroadmflexh4mAlmOcmJunctionTemp	read-only	OCM Junction Temp	This alarm indicates that the OCM internal processor junction temperature is out of range <Help> This alarm indicates that the OCM internal processor junction temperature is out of range <Condtype> OCM_JUNCTION_TEMP <Probcause> equipmentMalfunction(16) <Alarmtype> other (1) <Polarity> (2)

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.2.1.2.196.10	pmroadmflexh4mAlmOcmInternalTemp	read-only	OCM Internal Temp	This alarm indicates that the OCM internal temperature is out of range <Help> This alarm indicates that the OCM internal temperature is out of range <Condtype> OCM_INTERNAL_TEMP <Probcause> equipmentMalfunction(16) <Alarmtype> other (1) <Polarity> (2)
root.98.2.1.2.196.11	pmroadmflexh4mAlmOcmPowerRail	read-only	OCM Power Rail	This alarm indicates that the OCM power supply is out of range <Help> This alarm indicates that the OCM power supply is out of range <Condtype> OCM_POWER_RAIL <Probcause> equipmentMalfunction(16) <Alarmtype> other (1) <Polarity> (2)
root.98.2.1.2.196.12	pmroadmflexh4mAlmOcmInternalFailure	read-only	OCM Internal Failure	This alarm indicates that the OCM has an internal error <Help> This alarm indicates that the OCM has an internal error <Condtype> OCM_INTERNAL_FAILURE <Probcause> equipmentMalfunction(16) <Alarmtype> other (1) <Polarity> (2)
root.98.2.1.2.196.13	pmroadmflexh4mAlmOcmOpticalOverPower	read-only	OCM Optical Over Power	This alarm indicates that the OCM input power is out of range <Help> This alarm indicates that the OCM input power is out of range <Condtype> OCM_OPTICAL_OVER_POWER <Probcause> equipmentMalfunction(16) <Alarmtype> other (1) <Polarity> (2)
root.98.2.1.3	pmroadmflexh4mAlmOtherCrit			

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.2.1.3.0	pmroadmflexh4mAlmsynthAlm0			
root.98.2.1.3.0.9	pmroadmflexh4mAlmModGlobFail	read-only	Module Failure	This OID is set on detection of a failure originating from the RM <Help> This alarm is set on detection of a failure originating from the equipment <Condtype> MOD_GLOB_FAIL <Probcause> other (1) <Alarmtype> synthesisAlarm (12) <Polarity> (2)
root.98.2.1.3.0.15	pmroadmflexh4mAlmDefFuseA	read-only	Fuse A Fail	This OID indicates that the fuse of the power input A is in fail condition <Help> Status of the Fuse A <Condtype> DEF_FUSE_A <Probcause> powerProblem (36) <Alarmtype> equipmentAlarm (5) <Polarity> (2)
root.98.2.1.3.0.16	pmroadmflexh4mAlmDefFuseB	read-only	Fuse B Fail	This OID indicates that the fuse of the power input B is in fail condition <Help> Status of the Fuse B <Condtype> DEF_FUSE_B <Probcause> powerProblem (36) <Alarmtype> equipmentAlarm (5) <Polarity> (2)
root.98.2.2	pmroadmflexh4mAlmClient			
root.98.2.2.1	pmroadmflexh4mAlmClientNurg			
root.98.2.2.2	pmroadmflexh4mAlmClientUrg			
root.98.2.2.3	pmroadmflexh4mAlmClientCrit			
root.98.2.2.3.8	pmroadmflexh4mAlmsynthAlmPortTable	not-accessible		List of pmroadmflexh4mAlmsynthAlmPort Article
root.98.2.2.3.8.1	pmroadmflexh4mAlmsynthAlmPortEntry	not-accessible		Row definition for the pmroadmflexh4mAlmsynthAlmPort table

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.2.2.3.8.1.1	pmroadmflexh4mAlmsynthAlmPortIndex	read-only		Index definition for the pmroadmflexh4mAlmsynthAlmPort table
root.98.2.2.3.8.1.7	pmroadmflexh4mAlmClientLocalOosPortn	read-only	Local Client Port In Service	This OID indicates that the local Client port is In Service (1) or Out of Service (2) <Help> This status indicates if the local client port is in service <Condtype> CLIENT_LOCAL_OOS <Probcause> informationalStatus(1000) <Alarmtype> other (1) <Polarity> (2)
root.98.2.3	pmroadmflexh4mAlmLine			
root.98.2.3.1	pmroadmflexh4mAlmLineNurg			
root.98.2.3.1.184	pmroadmflexh4mAlmwssComponentTable	not-accessible		List of pmroadmflexh4mAlmwssComponent Article
root.98.2.3.1.184.1	pmroadmflexh4mAlmwssComponentEntry	not-accessible		Row definition for the pmroadmflexh4mAlmwssComponent table
root.98.2.3.1.184.1.1	pmroadmflexh4mAlmwssComponentIndex	read-only		Index definition for the pmroadmflexh4mAlmwssComponent table
root.98.2.3.1.184.1.2	pmroadmflexh4mAlmWssNotReadyPortn	read-only	WSS Not Ready	This status indicates that the WSS initialization is not completed <Help> This status indicates that the WSS initialization is not completed <Condtype> WSS_NOT_READY <Probcause> equipmentMalfunction(16) <Alarmtype> other (1) <Polarity> (2)

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.2.3.1.184.1.3	pmroadmflexh4mAlmWssConfigInProgressPortn	read-only	WSS Config In Progress	This status indicates that the WSS configuration is under progress <Help> This status indicates that the WSS configuration is under progress <Condtype> WSS_CONFIG_IN_PROGRESS <Probcause> other (1) <Alarmtype> other (1) <Polarity> (2)
root.98.2.3.1.184.1.4	pmroadmflexh4mAlmWssErrorPortn	read-only	WSS Error	This alarm indicates that the WSS is detecting an out of range error <Help> This alarm indicates that the WSS is detecting an out of range error <Condtype> WSS_ERROR <Probcause> other (1) <Alarmtype> equipmentAlarm (5) <Polarity> (2)
root.98.2.3.1.184.1.5	pmroadmflexh4mAlmWssOverlapPortn	read-only	WSS Config Not Allowed	This alarm indicates that the configuration file doesn't match with the WSS internal specification <Help> This alarm indicates that the configuration file doesn't match with the WSS internal specification <Condtype> WSS_OVERLAP <Probcause> other (1) <Alarmtype> other (1) <Polarity> (2)
root.98.2.3.1.186	pmroadmflexh4mAlmwssTemperatureWarningTable	not-accessible		List of pmroadmflexh4mAlmwssTemperatureWarning Article
root.98.2.3.1.186.1	pmroadmflexh4mAlmwssTemperatureWarningEntry	not-accessible		Row definition for the pmroadmflexh4mAlmwssTemperatureWarning table
root.98.2.3.1.186.1.1	pmroadmflexh4mAlmwssTemperatureWarningIndex	read-only		Index definition for the pmroadmflexh4mAlmwssTemperatureWarning table

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.2.3.1.186.1.2	pmroadmflexh4mAlmModuleTempLowWarningPortn	read-only	WSS Module Temperature Low Warning	Alarm indicating that the temperature of the module is lower than the warning threshold value <Help> This Warning indicates if the temperature of the WSS is lower than the warning threshold value. <Condtype> MODULE_TEMP_LOW_WARNING <Probcause> temperatureUnacceptable (51) <Alarmtype> equipmentAlarm (5) <Polarity> (2)
root.98.2.3.1.186.1.3	pmroadmflexh4mAlmModuleTempHighWarningPortn	read-only	WSS Module Temperature High Warning	Alarm indicating that the temperature of the module is higher than the warning threshold value <Help> This Warning indicates if the temperature of the WSS is higher than the warning threshold value. <Condtype> MODULE_TEMP_HIGH_WARNING <Probcause> temperatureUnacceptable (51) <Alarmtype> equipmentAlarm (5) <Polarity> (2)
root.98.2.3.1.186.1.4	pmroadmflexh4mAlmCaseTempLowWarningPortn	read-only	WSS Case Temperature Low Warning	Alarm indicating that the temperature of the case is lower than the warning threshold value <Help> This Warning indicates if the temperature of the case is lower than the warning threshold value. <Condtype> CASE_TEMP_LOW_WARNING <Probcause> temperatureUnacceptable (51) <Alarmtype> equipmentAlarm (5) <Polarity> (2)

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.2.3.1.186.1.5	pmroadmflexh4mAlmCaseTempHighWarningPortn	read-only	WSS Case Temperature High Warning	Alarm indicating that the temperature of the case is higher than the warning threshold value <Help> This Warning indicates if the temperature of the case is higher than the warning threshold value. <Condtype> CASE_TEMP_HIGH_WARNING <Probcause> temperatureUnacceptable (51) <Alarmtype> equipmentAlarm (5) <Polarity> (2)
root.98.2.3.1.188	pmroadmflexh4mAlmwssTemperatureAlarmTable	not-accessible		List of pmroadmflexh4mAlmwssTemperatureAlarm Article
root.98.2.3.1.188.1	pmroadmflexh4mAlmwssTemperatureAlarmEntry	not-accessible		Row definition for the pmroadmflexh4mAlmwssTemperatureAlarm table
root.98.2.3.1.188.1.1	pmroadmflexh4mAlmwssTemperatureAlarmIndex	read-only		Index definition for the pmroadmflexh4mAlmwssTemperatureAlarm table
root.98.2.3.1.188.1.2	pmroadmflexh4mAlmModuleTempLowAlaPortn	read-only	WSS Module Temperature Low Alarm	Alarm indicating that the temperature of the module is lower than the alarm threshold value <Help> This Alarm indicates if the temperature of the WSS is lower than the alarm threshold value. <Condtype> MODULE_TEMP_LOW_ALA <Probcause> temperatureUnacceptable (51) <Alarmtype> equipmentAlarm (5) <Polarity> (2)

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.2.3.1.188.1.3	pmroadmflexh4mAlmModuleTempHighAlaPortn	read-only	WSS Module Temperature High Alarm	Alarm indicating that the temperature of the module is higher than the alarm threshold value <Help> This Alarm indicates if the temperature of the WSS is higher than the alarm threshold value. <Condtype> MODULE_TEMP_HIGH_ALA <Probcause> temperatureUnacceptable (51) <Alarmtype> equipmentAlarm (5) <Polarity> (2)
root.98.2.3.1.188.1.4	pmroadmflexh4mAlmCaseTempLowAlaPortn	read-only	WSS Case Temperature Low Alarm	Alarm indicating that the temperature of the case is lower than the alarm threshold value <Help> This Alarm indicates if the temperature of the case is lower than the alarm threshold value. <Condtype> CASE_TEMP_LOW_ALA <Probcause> temperatureUnacceptable (51) <Alarmtype> equipmentAlarm (5) <Polarity> (2)
root.98.2.3.1.188.1.5	pmroadmflexh4mAlmCaseTempHighAlaPortn	read-only	WSS Case Temperature High Alarm	Alarm indicating that the temperature of the case is higher than the alarm threshold value <Help> This Alarm indicates if the temperature of the case is higher than the alarm threshold value. <Condtype> CASE_TEMP_HIGH_ALA <Probcause> temperatureUnacceptable (51) <Alarmtype> equipmentAlarm (5) <Polarity> (2)

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.2.3.1.190	pmroadmflexh4mAlmocmComponentTable	not-accessible		List of pmroadmflexh4mAlmocmComponent Article
root.98.2.3.1.190.1	pmroadmflexh4mAlmocmComponentEntry	not-accessible		Row definition for the pmroadmflexh4mAlmocmComponent table
root.98.2.3.1.190.1.1	pmroadmflexh4mAlmocmComponentIndex	read-only		Index definition for the pmroadmflexh4mAlmocmComponent table
root.98.2.3.1.190.1.2	pmroadmflexh4mAlmScanInProgressPortn	read-only	OCM Scan In Progress	This status indicates that the scan is in progress on the OCM <Help> This status indicates that the scan is in progress on the OCM <Condtype> SCAN_IN_PROGRESS <Probcause> other (1) <Alarmtype> other (1) <Polarity> (2)
root.98.2.3.1.190.1.3	pmroadmflexh4mAlmScanAvailablePortn	read-only	OCM Scan Available	This status indicates that the scan is acheived on the OCM <Help> This status indicates that the scan is acheived on the OCM <Condtype> SCAN_AVAILABLE <Probcause> other (1) <Alarmtype> other (1) <Polarity> (2)
root.98.2.3.1.190.1.4	pmroadmflexh4mAlmScanFailPortn	read-only	OCM Scan Fail	This alarm indicates that the scan has failed on the OCM <Help> This alarm indicates that the scan has failed on the OCM <Condtype> SCAN_FAIL <Probcause> other (1) <Alarmtype> equipmentAlarm (5) <Polarity> (2)

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.2.3.1.190.1.6	pmroadmflexh4mAlmLossOfSignalPortn	read-only	OCM Input Loss Of Signal	This OID indicates a Loss of Signal is detected on the OCM input <Help> This alarm indicates that a Loss Of Signal is detected on the OCM input <Probcause> lossOfSignal(30) <Alarmtype> equipmentAlarm (5) <Polarity> (2)
root.98.2.3.2	pmroadmflexh4mAlmLineUrg			
root.98.2.3.3	pmroadmflexh4mAlmLineCrit			
root.98.3	pmroadmflexh4mmeasures			
root.98.3.1	pmroadmflexh4mMesrOther			
root.98.3.1.16	pmroadmflexh4mMesrocmTemp	read-only	OCM Temperature	This OID gives the temperature value of the OCM (Temperature = AV_S16/256) (Unit = C) <Help> This Measure gives the temperature value of the OCM
root.98.3.1.18	pmroadmflexh4mMesrmoduleTemp	read-only	Module Temperature	This OID gives the temperature value of the PM (Temperature = AV_S16/256) (Unit = C) <Help> This Measure gives the temperature value of the Module
root.98.3.1.19	pmroadmflexh4mMesrwss1CaseTemp	read-only	WSS 1 Case Temperature	This OID gives the case temperature value of the WSS (Temperature = AV_S16/256) (Unit = C) <Help> This Measure gives the temperature value of the WSS
root.98.3.1.20	pmroadmflexh4mMesrwss1ModuleTemp	read-only	WSS 1 Module Temperature	This OID gives the module temperature value of the WSS (Temperature = AV_S16/256) (Unit = C) <Help> This Measure gives the temperature value of the WSS

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.3.1.21	pmroadmflexh4mMesrwss2CaseTemp	read-only	WSS 2 Case Temperature	This OID gives the case temperature value of the WSS (Temperature = AV_S16/256) (Unit = C) <Help> This Measure gives the temperature value of the WSS
root.98.3.1.22	pmroadmflexh4mMesrwss2ModuleTemp	read-only	WSS 2 Module Temperature	This OID gives the module temperature value of the WSS (Temperature = AV_S16/256) (Unit = C) <Help> This Measure gives the temperature value of the WSS
root.98.3.2	pmroadmflexh4mMesrClient			
root.98.3.3	pmroadmflexh4mMesrLine			
root.98.3.3.32	pmroadmflexh4mMesrwssChannelNumberTable	not-accessible		List of pmroadmflexh4mMesrwssChannelNumber Article
root.98.3.3.32.1	pmroadmflexh4mMesrwssChannelNumberEntry	not-accessible		Row definition for the pmroadmflexh4mMesrwssChannelNumber table
root.98.3.3.32.1.1	pmroadmflexh4mMesrwssChannelNumberIndex	read-only		Index definition for the pmroadmflexh4mMesrwssChannelNumber table
root.98.3.3.32.1.2	pmroadmflexh4mMesrwssChannelNumberPortn	read-only	Wave Count	This OID gives the wave count used on the WSS (Wave Count = AV_U16) (Unit = waves) <Help> This Measure gives the wave count used on the WSS
root.98.3.3.36	pmroadmflexh4mMesrocmPwrMinTable	not-accessible		List of pmroadmflexh4mMesrocmPwrMin Article
root.98.3.3.36.1	pmroadmflexh4mMesrocmPwrMinEntry	not-accessible		Row definition for the pmroadmflexh4mMesrocmPwrMin table
root.98.3.3.36.1.1	pmroadmflexh4mMesrocmPwrMinIndex	read-only		Index definition for the pmroadmflexh4mMesrocmPwrMin table

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.3.3.36.1.2	pmroadmflexh4mMesrocmPwrMinPortn	read-only	Channel Minimum Power	This OID indicates the minimum channel power on the input port (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the minimum channel power on the OCM input port
root.98.3.3.37	pmroadmflexh4mMesrocmPwrMaxTable	not-accessible		List of pmroadmflexh4mMesrocmPwrMax Article
root.98.3.3.37.1	pmroadmflexh4mMesrocmPwrMaxEntry	not-accessible		Row definition for the pmroadmflexh4mMesrocmPwrMax table
root.98.3.3.37.1.1	pmroadmflexh4mMesrocmPwrMaxIndex	read-only		Index definition for the pmroadmflexh4mMesrocmPwrMax table
root.98.3.3.37.1.2	pmroadmflexh4mMesrocmPwrMaxPortn	read-only	Channel Maximum Power	This OID indicates the maximum channel power on the input port (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the maximum channel power on the OCM input port
root.98.3.3.38	pmroadmflexh4mMesrocmPwrMinFilteredTable	not-accessible		List of pmroadmflexh4mMesrocmPwrMinFiltered Article
root.98.3.3.38.1	pmroadmflexh4mMesrocmPwrMinFilteredEntry	not-accessible		Row definition for the pmroadmflexh4mMesrocmPwrMinFiltered table
root.98.3.3.38.1.1	pmroadmflexh4mMesrocmPwrMinFilteredIndex	read-only		Index definition for the pmroadmflexh4mMesrocmPwrMinFiltered table

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.3.3.38.1.2	pmroadmflexh4mMesrocmPwrMinFilteredPortn	read-only	Filtered Channel Minimum Power	This OID indicates the minimum channel power on the input port after filtering upon the configured threshold (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the minimum channel power on the OCM input port after filtering upon the configured threshold
root.98.3.3.39	pmroadmflexh4mMesrwssFilteredChannelNumberTable	not-accessible		List of pmroadmflexh4mMesrwssFilteredChannelNumber Article
root.98.3.3.39.1	pmroadmflexh4mMesrwssFilteredChannelNumberEntry	not-accessible		Row definition for the pmroadmflexh4mMesrwssFilteredChannelNumber table
root.98.3.3.39.1.1	pmroadmflexh4mMesrwssFilteredChannelNumberIndex	read-only		Index definition for the pmroadmflexh4mMesrwssFilteredChannelNumber table
root.98.3.3.39.1.2	pmroadmflexh4mMesrwssFilteredChannelNumberPortn	read-only	Filtered Wave Count	This OID gives the wave count used on the WSS and filtered upon a threshold (Wave Count = AV_U16) (Unit = waves) <Help> This Measure gives the wave count used on the WSS and selected upon a threshold
root.98.3.3.64	pmroadmflexh4mMesrnbChannel1Table	not-accessible		List of pmroadmflexh4mMesrnbChannel1 Article
root.98.3.3.64.1	pmroadmflexh4mMesrnbChannel1Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel1 table
root.98.3.3.64.1.1	pmroadmflexh4mMesrnbChannel1Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel1 table

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.3.3.64.1.2	pmroadmflexh4mMesrnbChannel1Portn	read-only	Channel Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.65	pmroadmflexh4mMesrpwrChannel1Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel1 Article
root.98.3.3.65.1	pmroadmflexh4mMesrpwrChannel1Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel1 table
root.98.3.3.65.1.1	pmroadmflexh4mMesrpwrChannel1Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel1 table
root.98.3.3.65.1.2	pmroadmflexh4mMesrpwrChannel1Portn	read-only	Channel Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.66	pmroadmflexh4mMesrnbChannel2Table	not-accessible		List of pmroadmflexh4mMesrnbChannel2 Article
root.98.3.3.66.1	pmroadmflexh4mMesrnbChannel2Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel2 table
root.98.3.3.66.1.1	pmroadmflexh4mMesrnbChannel2Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel2 table
root.98.3.3.66.1.2	pmroadmflexh4mMesrnbChannel2Portn	read-only	Channel2 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.67	pmroadmflexh4mMesrpwrChannel2Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel2 Article
root.98.3.3.67.1	pmroadmflexh4mMesrpwrChannel2Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel2 table

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.3.3.67.1.1	pmroadmflexh4mMesrpwrChannel2Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel2 table
root.98.3.3.67.1.2	pmroadmflexh4mMesrpwrChannel2Portn	read-only	Channel2 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.68	pmroadmflexh4mMesrnbChannel3Table	not-accessible		List of pmroadmflexh4mMesrnbChannel3 Article
root.98.3.3.68.1	pmroadmflexh4mMesrnbChannel3Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel3 table
root.98.3.3.68.1.1	pmroadmflexh4mMesrnbChannel3Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel3 table
root.98.3.3.68.1.2	pmroadmflexh4mMesrnbChannel3Portn	read-only	Channel3 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.69	pmroadmflexh4mMesrpwrChannel3Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel3 Article
root.98.3.3.69.1	pmroadmflexh4mMesrpwrChannel3Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel3 table
root.98.3.3.69.1.1	pmroadmflexh4mMesrpwrChannel3Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel3 table
root.98.3.3.69.1.2	pmroadmflexh4mMesrpwrChannel3Portn	read-only	Channel3 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.70	pmroadmflexh4mMesrnbChannel4Table	not-accessible		List of pmroadmflexh4mMesrnbChannel4 Article

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.3.3.70.1	pmroadmflexh4mMesrnbChannel4Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel4 table
root.98.3.3.70.1.1	pmroadmflexh4mMesrnbChannel4Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel4 table
root.98.3.3.70.1.2	pmroadmflexh4mMesrnbChannel4Portn	read-only	Channel4 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.71	pmroadmflexh4mMesrpwrChannel4Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel4 Article
root.98.3.3.71.1	pmroadmflexh4mMesrpwrChannel4Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel4 table
root.98.3.3.71.1.1	pmroadmflexh4mMesrpwrChannel4Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel4 table
root.98.3.3.71.1.2	pmroadmflexh4mMesrpwrChannel4Portn	read-only	Channel4 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.72	pmroadmflexh4mMesrnbChannel5Table	not-accessible		List of pmroadmflexh4mMesrnbChannel5 Article
root.98.3.3.72.1	pmroadmflexh4mMesrnbChannel5Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel5 table
root.98.3.3.72.1.1	pmroadmflexh4mMesrnbChannel5Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel5 table
root.98.3.3.72.1.2	pmroadmflexh4mMesrnbChannel5Portn	read-only	Channel5 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.3.3.73	pmroadmflexh4mMesrpwrChannel5Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel5 Article
root.98.3.3.73.1	pmroadmflexh4mMesrpwrChannel5Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel5 table
root.98.3.3.73.1.1	pmroadmflexh4mMesrpwrChannel5Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel5 table
root.98.3.3.73.1.2	pmroadmflexh4mMesrpwrChannel5Portn	read-only	Channel5 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.74	pmroadmflexh4mMesrnbChannel6Table	not-accessible		List of pmroadmflexh4mMesrnbChannel6 Article
root.98.3.3.74.1	pmroadmflexh4mMesrnbChannel6Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel6 table
root.98.3.3.74.1.1	pmroadmflexh4mMesrnbChannel6Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel6 table
root.98.3.3.74.1.2	pmroadmflexh4mMesrnbChannel6Portn	read-only	Channel6 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.75	pmroadmflexh4mMesrpwrChannel6Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel6 Article
root.98.3.3.75.1	pmroadmflexh4mMesrpwrChannel6Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel6 table
root.98.3.3.75.1.1	pmroadmflexh4mMesrpwrChannel6Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel6 table

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.3.3.75.1.2	pmroadmflexh4mMesrpwrChannel6Portn	read-only	Channel6 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.76	pmroadmflexh4mMesrnbChannel7Table	not-accessible		List of pmroadmflexh4mMesrnbChannel7 Article
root.98.3.3.76.1	pmroadmflexh4mMesrnbChannel7Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel7 table
root.98.3.3.76.1.1	pmroadmflexh4mMesrnbChannel7Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel7 table
root.98.3.3.76.1.2	pmroadmflexh4mMesrnbChannel7Portn	read-only	Channel7 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.77	pmroadmflexh4mMesrpwrChannel7Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel7 Article
root.98.3.3.77.1	pmroadmflexh4mMesrpwrChannel7Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel7 table
root.98.3.3.77.1.1	pmroadmflexh4mMesrpwrChannel7Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel7 table
root.98.3.3.77.1.2	pmroadmflexh4mMesrpwrChannel7Portn	read-only	Channel7 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.78	pmroadmflexh4mMesrnbChannel8Table	not-accessible		List of pmroadmflexh4mMesrnbChannel8 Article
root.98.3.3.78.1	pmroadmflexh4mMesrnbChannel8Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel8 table

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.3.3.78.1.1	pmroadmflexh4mMesrnbChannel8Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel8 table
root.98.3.3.78.1.2	pmroadmflexh4mMesrnbChannel8Portn	read-only	Channel8 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.79	pmroadmflexh4mMesrpwrChannel8Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel8 Article
root.98.3.3.79.1	pmroadmflexh4mMesrpwrChannel8Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel8 table
root.98.3.3.79.1.1	pmroadmflexh4mMesrpwrChannel8Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel8 table
root.98.3.3.79.1.2	pmroadmflexh4mMesrpwrChannel8Portn	read-only	Channel8 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.80	pmroadmflexh4mMesrnbChannel9Table	not-accessible		List of pmroadmflexh4mMesrnbChannel9 Article
root.98.3.3.80.1	pmroadmflexh4mMesrnbChannel9Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel9 table
root.98.3.3.80.1.1	pmroadmflexh4mMesrnbChannel9Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel9 table
root.98.3.3.80.1.2	pmroadmflexh4mMesrnbChannel9Portn	read-only	Channel9 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.81	pmroadmflexh4mMesrpwrChannel9Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel9 Article

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.3.3.81.1	pmroadmflexh4mMesrpwrChannel9Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel9 table
root.98.3.3.81.1.1	pmroadmflexh4mMesrpwrChannel9Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel9 table
root.98.3.3.81.1.2	pmroadmflexh4mMesrpwrChannel9Portn	read-only	Channel9 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.82	pmroadmflexh4mMesrnbChannel10Table	not-accessible		List of pmroadmflexh4mMesrnbChannel10 Article
root.98.3.3.82.1	pmroadmflexh4mMesrnbChannel10Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel10 table
root.98.3.3.82.1.1	pmroadmflexh4mMesrnbChannel10Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel10 table
root.98.3.3.82.1.2	pmroadmflexh4mMesrnbChannel10Portn	read-only	Channel10 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.83	pmroadmflexh4mMesrpwrChannel10Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel10 Article
root.98.3.3.83.1	pmroadmflexh4mMesrpwrChannel10Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel10 table
root.98.3.3.83.1.1	pmroadmflexh4mMesrpwrChannel10Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel10 table
root.98.3.3.83.1.2	pmroadmflexh4mMesrpwrChannel10Portn	read-only	Channel10 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.3.3.84	pmroadmflexh4mMesrnbChannel11Table	not-accessible		List of pmroadmflexh4mMesrnbChannel11 Article
root.98.3.3.84.1	pmroadmflexh4mMesrnbChannel11Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel11 table
root.98.3.3.84.1.1	pmroadmflexh4mMesrnbChannel11Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel11 table
root.98.3.3.84.1.2	pmroadmflexh4mMesrnbChannel11Portn	read-only	Channel11 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.85	pmroadmflexh4mMesrpwrChannel11Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel11 Article
root.98.3.3.85.1	pmroadmflexh4mMesrpwrChannel11Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel11 table
root.98.3.3.85.1.1	pmroadmflexh4mMesrpwrChannel11Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel11 table
root.98.3.3.85.1.2	pmroadmflexh4mMesrpwrChannel11Portn	read-only	Channel11 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.86	pmroadmflexh4mMesrnbChannel12Table	not-accessible		List of pmroadmflexh4mMesrnbChannel12 Article
root.98.3.3.86.1	pmroadmflexh4mMesrnbChannel12Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel12 table
root.98.3.3.86.1.1	pmroadmflexh4mMesrnbChannel12Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel12 table

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.3.3.86.1.2	pmroadmflexh4mMesrnbChannel12Portn	read-only	Channel12 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.87	pmroadmflexh4mMesrpwrChannel12Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel12 Article
root.98.3.3.87.1	pmroadmflexh4mMesrpwrChannel12Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel12 table
root.98.3.3.87.1.1	pmroadmflexh4mMesrpwrChannel12Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel12 table
root.98.3.3.87.1.2	pmroadmflexh4mMesrpwrChannel12Portn	read-only	Channel12 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.88	pmroadmflexh4mMesrnbChannel13Table	not-accessible		List of pmroadmflexh4mMesrnbChannel13 Article
root.98.3.3.88.1	pmroadmflexh4mMesrnbChannel13Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel13 table
root.98.3.3.88.1.1	pmroadmflexh4mMesrnbChannel13Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel13 table
root.98.3.3.88.1.2	pmroadmflexh4mMesrnbChannel13Portn	read-only	Channel13 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.89	pmroadmflexh4mMesrpwrChannel13Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel13 Article
root.98.3.3.89.1	pmroadmflexh4mMesrpwrChannel13Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel13 table

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.3.3.89.1.1	pmroadmflexh4mMesrpwrChannel13Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel13 table
root.98.3.3.89.1.2	pmroadmflexh4mMesrpwrChannel13Portn	read-only	Channel13 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.90	pmroadmflexh4mMesrnbChannel14Table	not-accessible		List of pmroadmflexh4mMesrnbChannel14 Article
root.98.3.3.90.1	pmroadmflexh4mMesrnbChannel14Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel14 table
root.98.3.3.90.1.1	pmroadmflexh4mMesrnbChannel14Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel14 table
root.98.3.3.90.1.2	pmroadmflexh4mMesrnbChannel14Portn	read-only	Channel14 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.91	pmroadmflexh4mMesrpwrChannel14Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel14 Article
root.98.3.3.91.1	pmroadmflexh4mMesrpwrChannel14Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel14 table
root.98.3.3.91.1.1	pmroadmflexh4mMesrpwrChannel14Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel14 table
root.98.3.3.91.1.2	pmroadmflexh4mMesrpwrChannel14Portn	read-only	Channel14 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.92	pmroadmflexh4mMesrnbChannel15Table	not-accessible		List of pmroadmflexh4mMesrnbChannel15 Article

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.3.3.92.1	pmroadmflexh4mMesrnbChannel15Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel15 table
root.98.3.3.92.1.1	pmroadmflexh4mMesrnbChannel15Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel15 table
root.98.3.3.92.1.2	pmroadmflexh4mMesrnbChannel15Portn	read-only	Channel15 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.93	pmroadmflexh4mMesrpwrChannel15Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel15 Article
root.98.3.3.93.1	pmroadmflexh4mMesrpwrChannel15Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel15 table
root.98.3.3.93.1.1	pmroadmflexh4mMesrpwrChannel15Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel15 table
root.98.3.3.93.1.2	pmroadmflexh4mMesrpwrChannel15Portn	read-only	Channel15 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.94	pmroadmflexh4mMesrnbChannel16Table	not-accessible		List of pmroadmflexh4mMesrnbChannel16 Article
root.98.3.3.94.1	pmroadmflexh4mMesrnbChannel16Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel16 table
root.98.3.3.94.1.1	pmroadmflexh4mMesrnbChannel16Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel16 table
root.98.3.3.94.1.2	pmroadmflexh4mMesrnbChannel16Portn	read-only	Channel16 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.3.3.95	pmroadmflexh4mMesrpwrChannel16Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel16 Article
root.98.3.3.95.1	pmroadmflexh4mMesrpwrChannel16Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel16 table
root.98.3.3.95.1.1	pmroadmflexh4mMesrpwrChannel16Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel16 table
root.98.3.3.95.1.2	pmroadmflexh4mMesrpwrChannel16Portn	read-only	Channel16 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.96	pmroadmflexh4mMesrnbChannel17Table	not-accessible		List of pmroadmflexh4mMesrnbChannel17 Article
root.98.3.3.96.1	pmroadmflexh4mMesrnbChannel17Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel17 table
root.98.3.3.96.1.1	pmroadmflexh4mMesrnbChannel17Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel17 table
root.98.3.3.96.1.2	pmroadmflexh4mMesrnbChannel17Portn	read-only	Channel17 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.97	pmroadmflexh4mMesrpwrChannel17Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel17 Article
root.98.3.3.97.1	pmroadmflexh4mMesrpwrChannel17Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel17 table
root.98.3.3.97.1.1	pmroadmflexh4mMesrpwrChannel17Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel17 table

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.3.3.97.1.2	pmroadmflexh4mMesrpwrChannel17Portn	read-only	Channel17 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.98	pmroadmflexh4mMesrnbChannel18Table	not-accessible		List of pmroadmflexh4mMesrnbChannel18 Article
root.98.3.3.98.1	pmroadmflexh4mMesrnbChannel18Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel18 table
root.98.3.3.98.1.1	pmroadmflexh4mMesrnbChannel18Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel18 table
root.98.3.3.98.1.2	pmroadmflexh4mMesrnbChannel18Portn	read-only	Channel18 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.99	pmroadmflexh4mMesrpwrChannel18Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel18 Article
root.98.3.3.99.1	pmroadmflexh4mMesrpwrChannel18Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel18 table
root.98.3.3.99.1.1	pmroadmflexh4mMesrpwrChannel18Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel18 table
root.98.3.3.99.1.2	pmroadmflexh4mMesrpwrChannel18Portn	read-only	Channel18 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.100	pmroadmflexh4mMesrnbChannel19Table	not-accessible		List of pmroadmflexh4mMesrnbChannel19 Article
root.98.3.3.100.1	pmroadmflexh4mMesrnbChannel19Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel19 table

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.3.3.100.1.1	pmroadmflexh4mMesrnbChannel19Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel19 table
root.98.3.3.100.1.2	pmroadmflexh4mMesrnbChannel19Portn	read-only	Channel19 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.101	pmroadmflexh4mMesrpwrChannel19Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel19 Article
root.98.3.3.101.1	pmroadmflexh4mMesrpwrChannel19Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel19 table
root.98.3.3.101.1.1	pmroadmflexh4mMesrpwrChannel19Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel19 table
root.98.3.3.101.1.2	pmroadmflexh4mMesrpwrChannel19Portn	read-only	Channel19 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.102	pmroadmflexh4mMesrnbChannel20Table	not-accessible		List of pmroadmflexh4mMesrnbChannel20 Article
root.98.3.3.102.1	pmroadmflexh4mMesrnbChannel20Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel20 table
root.98.3.3.102.1.1	pmroadmflexh4mMesrnbChannel20Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel20 table
root.98.3.3.102.1.2	pmroadmflexh4mMesrnbChannel20Portn	read-only	Channel20 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.103	pmroadmflexh4mMesrpwrChannel20Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel20 Article

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.3.3.103.1	pmroadmflexh4mMesrpwrChannel20Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel20 table
root.98.3.3.103.1.1	pmroadmflexh4mMesrpwrChannel20Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel20 table
root.98.3.3.103.1.2	pmroadmflexh4mMesrpwrChannel20Portn	read-only	Channel20 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.104	pmroadmflexh4mMesrnbChannel21Table	not-accessible		List of pmroadmflexh4mMesrnbChannel21 Article
root.98.3.3.104.1	pmroadmflexh4mMesrnbChannel21Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel21 table
root.98.3.3.104.1.1	pmroadmflexh4mMesrnbChannel21Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel21 table
root.98.3.3.104.1.2	pmroadmflexh4mMesrnbChannel21Portn	read-only	Channel21 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.105	pmroadmflexh4mMesrpwrChannel21Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel21 Article
root.98.3.3.105.1	pmroadmflexh4mMesrpwrChannel21Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel21 table
root.98.3.3.105.1.1	pmroadmflexh4mMesrpwrChannel21Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel21 table
root.98.3.3.105.1.2	pmroadmflexh4mMesrpwrChannel21Portn	read-only	Channel21 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.3.3.106	pmroadmflexh4mMesrnbChannel22Table	not-accessible		List of pmroadmflexh4mMesrnbChannel22 Article
root.98.3.3.106.1	pmroadmflexh4mMesrnbChannel22Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel22 table
root.98.3.3.106.1.1	pmroadmflexh4mMesrnbChannel22Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel22 table
root.98.3.3.106.1.2	pmroadmflexh4mMesrnbChannel22Portn	read-only	Channel22 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.107	pmroadmflexh4mMesrpwrChannel22Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel22 Article
root.98.3.3.107.1	pmroadmflexh4mMesrpwrChannel22Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel22 table
root.98.3.3.107.1.1	pmroadmflexh4mMesrpwrChannel22Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel22 table
root.98.3.3.107.1.2	pmroadmflexh4mMesrpwrChannel22Portn	read-only	Channel22 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.108	pmroadmflexh4mMesrnbChannel23Table	not-accessible		List of pmroadmflexh4mMesrnbChannel23 Article
root.98.3.3.108.1	pmroadmflexh4mMesrnbChannel23Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel23 table
root.98.3.3.108.1.1	pmroadmflexh4mMesrnbChannel23Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel23 table

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.3.3.108.1.2	pmroadmflexh4mMesrnbChannel23Portn	read-only	Channel23 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.109	pmroadmflexh4mMesrpwrChannel23Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel23 Article
root.98.3.3.109.1	pmroadmflexh4mMesrpwrChannel23Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel23 table
root.98.3.3.109.1.1	pmroadmflexh4mMesrpwrChannel23Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel23 table
root.98.3.3.109.1.2	pmroadmflexh4mMesrpwrChannel23Portn	read-only	Channel23 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.110	pmroadmflexh4mMesrnbChannel24Table	not-accessible		List of pmroadmflexh4mMesrnbChannel24 Article
root.98.3.3.110.1	pmroadmflexh4mMesrnbChannel24Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel24 table
root.98.3.3.110.1.1	pmroadmflexh4mMesrnbChannel24Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel24 table
root.98.3.3.110.1.2	pmroadmflexh4mMesrnbChannel24Portn	read-only	Channel24 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.111	pmroadmflexh4mMesrpwrChannel24Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel24 Article
root.98.3.3.111.1	pmroadmflexh4mMesrpwrChannel24Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel24 table

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.3.3.111.1.1	pmroadmflexh4mMesrpwrChannel24Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel24 table
root.98.3.3.111.1.2	pmroadmflexh4mMesrpwrChannel24Portn	read-only	Channel24 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.112	pmroadmflexh4mMesrnbChannel25Table	not-accessible		List of pmroadmflexh4mMesrnbChannel25 Article
root.98.3.3.112.1	pmroadmflexh4mMesrnbChannel25Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel25 table
root.98.3.3.112.1.1	pmroadmflexh4mMesrnbChannel25Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel25 table
root.98.3.3.112.1.2	pmroadmflexh4mMesrnbChannel25Portn	read-only	Channel25 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.113	pmroadmflexh4mMesrpwrChannel25Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel25 Article
root.98.3.3.113.1	pmroadmflexh4mMesrpwrChannel25Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel25 table
root.98.3.3.113.1.1	pmroadmflexh4mMesrpwrChannel25Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel25 table
root.98.3.3.113.1.2	pmroadmflexh4mMesrpwrChannel25Portn	read-only	Channel25 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.114	pmroadmflexh4mMesrnbChannel26Table	not-accessible		List of pmroadmflexh4mMesrnbChannel26 Article

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.3.3.114.1	pmroadmflexh4mMesrnbChannel26Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel26 table
root.98.3.3.114.1.1	pmroadmflexh4mMesrnbChannel26Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel26 table
root.98.3.3.114.1.2	pmroadmflexh4mMesrnbChannel26Portn	read-only	Channel26 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.115	pmroadmflexh4mMesrpwrChannel26Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel26 Article
root.98.3.3.115.1	pmroadmflexh4mMesrpwrChannel26Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel26 table
root.98.3.3.115.1.1	pmroadmflexh4mMesrpwrChannel26Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel26 table
root.98.3.3.115.1.2	pmroadmflexh4mMesrpwrChannel26Portn	read-only	Channel26 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.116	pmroadmflexh4mMesrnbChannel27Table	not-accessible		List of pmroadmflexh4mMesrnbChannel27 Article
root.98.3.3.116.1	pmroadmflexh4mMesrnbChannel27Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel27 table
root.98.3.3.116.1.1	pmroadmflexh4mMesrnbChannel27Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel27 table
root.98.3.3.116.1.2	pmroadmflexh4mMesrnbChannel27Portn	read-only	Channel27 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.3.3.117	pmroadmflexh4mMesrpwrChannel27Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel27 Article
root.98.3.3.117.1	pmroadmflexh4mMesrpwrChannel27Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel27 table
root.98.3.3.117.1.1	pmroadmflexh4mMesrpwrChannel27Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel27 table
root.98.3.3.117.1.2	pmroadmflexh4mMesrpwrChannel27Portn	read-only	Channel27 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.118	pmroadmflexh4mMesrnbChannel28Table	not-accessible		List of pmroadmflexh4mMesrnbChannel28 Article
root.98.3.3.118.1	pmroadmflexh4mMesrnbChannel28Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel28 table
root.98.3.3.118.1.1	pmroadmflexh4mMesrnbChannel28Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel28 table
root.98.3.3.118.1.2	pmroadmflexh4mMesrnbChannel28Portn	read-only	Channel28 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.119	pmroadmflexh4mMesrpwrChannel28Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel28 Article
root.98.3.3.119.1	pmroadmflexh4mMesrpwrChannel28Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel28 table
root.98.3.3.119.1.1	pmroadmflexh4mMesrpwrChannel28Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel28 table

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.3.3.119.1.2	pmroadmflexh4mMesrpwrChannel28Portn	read-only	Channel28 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.120	pmroadmflexh4mMesrnbChannel29Table	not-accessible		List of pmroadmflexh4mMesrnbChannel29 Article
root.98.3.3.120.1	pmroadmflexh4mMesrnbChannel29Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel29 table
root.98.3.3.120.1.1	pmroadmflexh4mMesrnbChannel29Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel29 table
root.98.3.3.120.1.2	pmroadmflexh4mMesrnbChannel29Portn	read-only	Channel29 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.121	pmroadmflexh4mMesrpwrChannel29Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel29 Article
root.98.3.3.121.1	pmroadmflexh4mMesrpwrChannel29Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel29 table
root.98.3.3.121.1.1	pmroadmflexh4mMesrpwrChannel29Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel29 table
root.98.3.3.121.1.2	pmroadmflexh4mMesrpwrChannel29Portn	read-only	Channel29 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.122	pmroadmflexh4mMesrnbChannel30Table	not-accessible		List of pmroadmflexh4mMesrnbChannel30 Article
root.98.3.3.122.1	pmroadmflexh4mMesrnbChannel30Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel30 table

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.3.3.122.1.1	pmroadmflexh4mMesrnbChannel30Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel30 table
root.98.3.3.122.1.2	pmroadmflexh4mMesrnbChannel30Portn	read-only	Channel30 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.123	pmroadmflexh4mMesrpwrChannel30Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel30 Article
root.98.3.3.123.1	pmroadmflexh4mMesrpwrChannel30Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel30 table
root.98.3.3.123.1.1	pmroadmflexh4mMesrpwrChannel30Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel30 table
root.98.3.3.123.1.2	pmroadmflexh4mMesrpwrChannel30Portn	read-only	Channel30 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.124	pmroadmflexh4mMesrnbChannel31Table	not-accessible		List of pmroadmflexh4mMesrnbChannel31 Article
root.98.3.3.124.1	pmroadmflexh4mMesrnbChannel31Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel31 table
root.98.3.3.124.1.1	pmroadmflexh4mMesrnbChannel31Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel31 table
root.98.3.3.124.1.2	pmroadmflexh4mMesrnbChannel31Portn	read-only	Channel31 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.125	pmroadmflexh4mMesrpwrChannel31Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel31 Article

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.3.3.125.1	pmroadmflexh4mMesrpwrChannel31Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel31 table
root.98.3.3.125.1.1	pmroadmflexh4mMesrpwrChannel31Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel31 table
root.98.3.3.125.1.2	pmroadmflexh4mMesrpwrChannel31Portn	read-only	Channel31 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.126	pmroadmflexh4mMesrnbChannel32Table	not-accessible		List of pmroadmflexh4mMesrnbChannel32 Article
root.98.3.3.126.1	pmroadmflexh4mMesrnbChannel32Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel32 table
root.98.3.3.126.1.1	pmroadmflexh4mMesrnbChannel32Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel32 table
root.98.3.3.126.1.2	pmroadmflexh4mMesrnbChannel32Portn	read-only	Channel32 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.127	pmroadmflexh4mMesrpwrChannel32Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel32 Article
root.98.3.3.127.1	pmroadmflexh4mMesrpwrChannel32Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel32 table
root.98.3.3.127.1.1	pmroadmflexh4mMesrpwrChannel32Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel32 table
root.98.3.3.127.1.2	pmroadmflexh4mMesrpwrChannel32Portn	read-only	Channel32 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.3.3.128	pmroadmflexh4mMesrnbChannel33Table	not-accessible		List of pmroadmflexh4mMesrnbChannel33 Article
root.98.3.3.128.1	pmroadmflexh4mMesrnbChannel33Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel33 table
root.98.3.3.128.1.1	pmroadmflexh4mMesrnbChannel33Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel33 table
root.98.3.3.128.1.2	pmroadmflexh4mMesrnbChannel33Portn	read-only	Channel33 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.129	pmroadmflexh4mMesrpwrChannel33Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel33 Article
root.98.3.3.129.1	pmroadmflexh4mMesrpwrChannel33Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel33 table
root.98.3.3.129.1.1	pmroadmflexh4mMesrpwrChannel33Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel33 table
root.98.3.3.129.1.2	pmroadmflexh4mMesrpwrChannel33Portn	read-only	Channel33 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.130	pmroadmflexh4mMesrnbChannel34Table	not-accessible		List of pmroadmflexh4mMesrnbChannel34 Article
root.98.3.3.130.1	pmroadmflexh4mMesrnbChannel34Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel34 table
root.98.3.3.130.1.1	pmroadmflexh4mMesrnbChannel34Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel34 table

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.3.3.130.1.2	pmroadmflexh4mMesrnbChannel34Portn	read-only	Channel34 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.131	pmroadmflexh4mMesrpwrChannel34Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel34 Article
root.98.3.3.131.1	pmroadmflexh4mMesrpwrChannel34Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel34 table
root.98.3.3.131.1.1	pmroadmflexh4mMesrpwrChannel34Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel34 table
root.98.3.3.131.1.2	pmroadmflexh4mMesrpwrChannel34Portn	read-only	Channel34 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.132	pmroadmflexh4mMesrnbChannel35Table	not-accessible		List of pmroadmflexh4mMesrnbChannel35 Article
root.98.3.3.132.1	pmroadmflexh4mMesrnbChannel35Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel35 table
root.98.3.3.132.1.1	pmroadmflexh4mMesrnbChannel35Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel35 table
root.98.3.3.132.1.2	pmroadmflexh4mMesrnbChannel35Portn	read-only	Channel35 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.133	pmroadmflexh4mMesrpwrChannel35Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel35 Article
root.98.3.3.133.1	pmroadmflexh4mMesrpwrChannel35Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel35 table

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.3.3.133.1.1	pmroadmflexh4mMesrpwrChannel35Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel35 table
root.98.3.3.133.1.2	pmroadmflexh4mMesrpwrChannel35Portn	read-only	Channel35 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.134	pmroadmflexh4mMesrnbChannel36Table	not-accessible		List of pmroadmflexh4mMesrnbChannel36 Article
root.98.3.3.134.1	pmroadmflexh4mMesrnbChannel36Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel36 table
root.98.3.3.134.1.1	pmroadmflexh4mMesrnbChannel36Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel36 table
root.98.3.3.134.1.2	pmroadmflexh4mMesrnbChannel36Portn	read-only	Channel36 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.135	pmroadmflexh4mMesrpwrChannel36Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel36 Article
root.98.3.3.135.1	pmroadmflexh4mMesrpwrChannel36Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel36 table
root.98.3.3.135.1.1	pmroadmflexh4mMesrpwrChannel36Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel36 table
root.98.3.3.135.1.2	pmroadmflexh4mMesrpwrChannel36Portn	read-only	Channel36 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.136	pmroadmflexh4mMesrnbChannel37Table	not-accessible		List of pmroadmflexh4mMesrnbChannel37 Article

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.3.3.136.1	pmroadmflexh4mMesrnbChannel37Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel37 table
root.98.3.3.136.1.1	pmroadmflexh4mMesrnbChannel37Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel37 table
root.98.3.3.136.1.2	pmroadmflexh4mMesrnbChannel37Portn	read-only	Channel37 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.137	pmroadmflexh4mMesrpwrChannel37Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel37 Article
root.98.3.3.137.1	pmroadmflexh4mMesrpwrChannel37Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel37 table
root.98.3.3.137.1.1	pmroadmflexh4mMesrpwrChannel37Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel37 table
root.98.3.3.137.1.2	pmroadmflexh4mMesrpwrChannel37Portn	read-only	Channel37 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.138	pmroadmflexh4mMesrnbChannel38Table	not-accessible		List of pmroadmflexh4mMesrnbChannel38 Article
root.98.3.3.138.1	pmroadmflexh4mMesrnbChannel38Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel38 table
root.98.3.3.138.1.1	pmroadmflexh4mMesrnbChannel38Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel38 table
root.98.3.3.138.1.2	pmroadmflexh4mMesrnbChannel38Portn	read-only	Channel38 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.3.3.139	pmroadmflexh4mMesrpwrChannel38Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel38 Article
root.98.3.3.139.1	pmroadmflexh4mMesrpwrChannel38Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel38 table
root.98.3.3.139.1.1	pmroadmflexh4mMesrpwrChannel38Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel38 table
root.98.3.3.139.1.2	pmroadmflexh4mMesrpwrChannel38Portn	read-only	Channel38 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.140	pmroadmflexh4mMesrnbChannel39Table	not-accessible		List of pmroadmflexh4mMesrnbChannel39 Article
root.98.3.3.140.1	pmroadmflexh4mMesrnbChannel39Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel39 table
root.98.3.3.140.1.1	pmroadmflexh4mMesrnbChannel39Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel39 table
root.98.3.3.140.1.2	pmroadmflexh4mMesrnbChannel39Portn	read-only	Channel39 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.141	pmroadmflexh4mMesrpwrChannel39Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel39 Article
root.98.3.3.141.1	pmroadmflexh4mMesrpwrChannel39Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel39 table
root.98.3.3.141.1.1	pmroadmflexh4mMesrpwrChannel39Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel39 table

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.3.3.141.1.2	pmroadmflexh4mMesrpwrChannel39Portn	read-only	Channel39 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.142	pmroadmflexh4mMesrnbChannel40Table	not-accessible		List of pmroadmflexh4mMesrnbChannel40 Article
root.98.3.3.142.1	pmroadmflexh4mMesrnbChannel40Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel40 table
root.98.3.3.142.1.1	pmroadmflexh4mMesrnbChannel40Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel40 table
root.98.3.3.142.1.2	pmroadmflexh4mMesrnbChannel40Portn	read-only	Channel40 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.143	pmroadmflexh4mMesrpwrChannel40Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel40 Article
root.98.3.3.143.1	pmroadmflexh4mMesrpwrChannel40Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel40 table
root.98.3.3.143.1.1	pmroadmflexh4mMesrpwrChannel40Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel40 table
root.98.3.3.143.1.2	pmroadmflexh4mMesrpwrChannel40Portn	read-only	Channel40 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.144	pmroadmflexh4mMesrnbChannel41Table	not-accessible		List of pmroadmflexh4mMesrnbChannel41 Article
root.98.3.3.144.1	pmroadmflexh4mMesrnbChannel41Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel41 table

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.3.3.144.1.1	pmroadmflexh4mMesrnbChannel41Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel41 table
root.98.3.3.144.1.2	pmroadmflexh4mMesrnbChannel41Portn	read-only	Channel41 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.145	pmroadmflexh4mMesrpwrChannel41Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel41 Article
root.98.3.3.145.1	pmroadmflexh4mMesrpwrChannel41Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel41 table
root.98.3.3.145.1.1	pmroadmflexh4mMesrpwrChannel41Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel41 table
root.98.3.3.145.1.2	pmroadmflexh4mMesrpwrChannel41Portn	read-only	Channel41 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.146	pmroadmflexh4mMesrnbChannel42Table	not-accessible		List of pmroadmflexh4mMesrnbChannel42 Article
root.98.3.3.146.1	pmroadmflexh4mMesrnbChannel42Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel42 table
root.98.3.3.146.1.1	pmroadmflexh4mMesrnbChannel42Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel42 table
root.98.3.3.146.1.2	pmroadmflexh4mMesrnbChannel42Portn	read-only	Channel42 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.147	pmroadmflexh4mMesrpwrChannel42Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel42 Article

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.3.3.147.1	pmroadmflexh4mMesrpwrChannel42Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel42 table
root.98.3.3.147.1.1	pmroadmflexh4mMesrpwrChannel42Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel42 table
root.98.3.3.147.1.2	pmroadmflexh4mMesrpwrChannel42Portn	read-only	Channel42 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.148	pmroadmflexh4mMesrnbChannel43Table	not-accessible		List of pmroadmflexh4mMesrnbChannel43 Article
root.98.3.3.148.1	pmroadmflexh4mMesrnbChannel43Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel43 table
root.98.3.3.148.1.1	pmroadmflexh4mMesrnbChannel43Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel43 table
root.98.3.3.148.1.2	pmroadmflexh4mMesrnbChannel43Portn	read-only	Channel43 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.149	pmroadmflexh4mMesrpwrChannel43Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel43 Article
root.98.3.3.149.1	pmroadmflexh4mMesrpwrChannel43Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel43 table
root.98.3.3.149.1.1	pmroadmflexh4mMesrpwrChannel43Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel43 table
root.98.3.3.149.1.2	pmroadmflexh4mMesrpwrChannel43Portn	read-only	Channel43 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.3.3.150	pmroadmflexh4mMesrnbChannel44Table	not-accessible		List of pmroadmflexh4mMesrnbChannel44 Article
root.98.3.3.150.1	pmroadmflexh4mMesrnbChannel44Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel44 table
root.98.3.3.150.1.1	pmroadmflexh4mMesrnbChannel44Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel44 table
root.98.3.3.150.1.2	pmroadmflexh4mMesrnbChannel44Portn	read-only	Channel44 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.151	pmroadmflexh4mMesrpwrChannel44Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel44 Article
root.98.3.3.151.1	pmroadmflexh4mMesrpwrChannel44Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel44 table
root.98.3.3.151.1.1	pmroadmflexh4mMesrpwrChannel44Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel44 table
root.98.3.3.151.1.2	pmroadmflexh4mMesrpwrChannel44Portn	read-only	Channel44 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.152	pmroadmflexh4mMesrnbChannel45Table	not-accessible		List of pmroadmflexh4mMesrnbChannel45 Article
root.98.3.3.152.1	pmroadmflexh4mMesrnbChannel45Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel45 table
root.98.3.3.152.1.1	pmroadmflexh4mMesrnbChannel45Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel45 table

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.3.3.152.1.2	pmroadmflexh4mMesrnbChannel45Portn	read-only	Channel45 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.153	pmroadmflexh4mMesrpwrChannel45Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel45 Article
root.98.3.3.153.1	pmroadmflexh4mMesrpwrChannel45Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel45 table
root.98.3.3.153.1.1	pmroadmflexh4mMesrpwrChannel45Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel45 table
root.98.3.3.153.1.2	pmroadmflexh4mMesrpwrChannel45Portn	read-only	Channel45 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.154	pmroadmflexh4mMesrnbChannel46Table	not-accessible		List of pmroadmflexh4mMesrnbChannel46 Article
root.98.3.3.154.1	pmroadmflexh4mMesrnbChannel46Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel46 table
root.98.3.3.154.1.1	pmroadmflexh4mMesrnbChannel46Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel46 table
root.98.3.3.154.1.2	pmroadmflexh4mMesrnbChannel46Portn	read-only	Channel46 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.155	pmroadmflexh4mMesrpwrChannel46Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel46 Article
root.98.3.3.155.1	pmroadmflexh4mMesrpwrChannel46Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel46 table

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.3.3.155.1.1	pmroadmflexh4mMesrpwrChannel46Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel46 table
root.98.3.3.155.1.2	pmroadmflexh4mMesrpwrChannel46Portn	read-only	Channel46 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.156	pmroadmflexh4mMesrnbChannel47Table	not-accessible		List of pmroadmflexh4mMesrnbChannel47 Article
root.98.3.3.156.1	pmroadmflexh4mMesrnbChannel47Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel47 table
root.98.3.3.156.1.1	pmroadmflexh4mMesrnbChannel47Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel47 table
root.98.3.3.156.1.2	pmroadmflexh4mMesrnbChannel47Portn	read-only	Channel47 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.157	pmroadmflexh4mMesrpwrChannel47Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel47 Article
root.98.3.3.157.1	pmroadmflexh4mMesrpwrChannel47Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel47 table
root.98.3.3.157.1.1	pmroadmflexh4mMesrpwrChannel47Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel47 table
root.98.3.3.157.1.2	pmroadmflexh4mMesrpwrChannel47Portn	read-only	Channel47 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.158	pmroadmflexh4mMesrnbChannel48Table	not-accessible		List of pmroadmflexh4mMesrnbChannel48 Article

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.3.3.158.1	pmroadmflexh4mMesrnbChannel48Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel48 table
root.98.3.3.158.1.1	pmroadmflexh4mMesrnbChannel48Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel48 table
root.98.3.3.158.1.2	pmroadmflexh4mMesrnbChannel48Portn	read-only	Channel48 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.159	pmroadmflexh4mMesrpwrChannel48Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel48 Article
root.98.3.3.159.1	pmroadmflexh4mMesrpwrChannel48Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel48 table
root.98.3.3.159.1.1	pmroadmflexh4mMesrpwrChannel48Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel48 table
root.98.3.3.159.1.2	pmroadmflexh4mMesrpwrChannel48Portn	read-only	Channel48 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.160	pmroadmflexh4mMesrnbChannel49Table	not-accessible		List of pmroadmflexh4mMesrnbChannel49 Article
root.98.3.3.160.1	pmroadmflexh4mMesrnbChannel49Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel49 table
root.98.3.3.160.1.1	pmroadmflexh4mMesrnbChannel49Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel49 table
root.98.3.3.160.1.2	pmroadmflexh4mMesrnbChannel49Portn	read-only	Channel49 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.3.3.161	pmroadmflexh4mMesrpwrChannel49Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel49 Article
root.98.3.3.161.1	pmroadmflexh4mMesrpwrChannel49Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel49 table
root.98.3.3.161.1.1	pmroadmflexh4mMesrpwrChannel49Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel49 table
root.98.3.3.161.1.2	pmroadmflexh4mMesrpwrChannel49Portn	read-only	Channel49 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.162	pmroadmflexh4mMesrnbChannel50Table	not-accessible		List of pmroadmflexh4mMesrnbChannel50 Article
root.98.3.3.162.1	pmroadmflexh4mMesrnbChannel50Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel50 table
root.98.3.3.162.1.1	pmroadmflexh4mMesrnbChannel50Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel50 table
root.98.3.3.162.1.2	pmroadmflexh4mMesrnbChannel50Portn	read-only	Channel50 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.163	pmroadmflexh4mMesrpwrChannel50Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel50 Article
root.98.3.3.163.1	pmroadmflexh4mMesrpwrChannel50Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel50 table
root.98.3.3.163.1.1	pmroadmflexh4mMesrpwrChannel50Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel50 table

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.3.3.163.1.2	pmroadmflexh4mMesrpwrChannel50Portn	read-only	Channel50 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.164	pmroadmflexh4mMesrnbChannel51Table	not-accessible		List of pmroadmflexh4mMesrnbChannel51 Article
root.98.3.3.164.1	pmroadmflexh4mMesrnbChannel51Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel51 table
root.98.3.3.164.1.1	pmroadmflexh4mMesrnbChannel51Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel51 table
root.98.3.3.164.1.2	pmroadmflexh4mMesrnbChannel51Portn	read-only	Channel51 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.165	pmroadmflexh4mMesrpwrChannel51Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel51 Article
root.98.3.3.165.1	pmroadmflexh4mMesrpwrChannel51Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel51 table
root.98.3.3.165.1.1	pmroadmflexh4mMesrpwrChannel51Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel51 table
root.98.3.3.165.1.2	pmroadmflexh4mMesrpwrChannel51Portn	read-only	Channel51 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.166	pmroadmflexh4mMesrnbChannel52Table	not-accessible		List of pmroadmflexh4mMesrnbChannel52 Article
root.98.3.3.166.1	pmroadmflexh4mMesrnbChannel52Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel52 table

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.3.3.166.1.1	pmroadmflexh4mMesrnbChannel52Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel52 table
root.98.3.3.166.1.2	pmroadmflexh4mMesrnbChannel52Portn	read-only	Channel52 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.167	pmroadmflexh4mMesrpwrChannel52Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel52 Article
root.98.3.3.167.1	pmroadmflexh4mMesrpwrChannel52Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel52 table
root.98.3.3.167.1.1	pmroadmflexh4mMesrpwrChannel52Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel52 table
root.98.3.3.167.1.2	pmroadmflexh4mMesrpwrChannel52Portn	read-only	Channel52 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.168	pmroadmflexh4mMesrnbChannel53Table	not-accessible		List of pmroadmflexh4mMesrnbChannel53 Article
root.98.3.3.168.1	pmroadmflexh4mMesrnbChannel53Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel53 table
root.98.3.3.168.1.1	pmroadmflexh4mMesrnbChannel53Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel53 table
root.98.3.3.168.1.2	pmroadmflexh4mMesrnbChannel53Portn	read-only	Channel53 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.169	pmroadmflexh4mMesrpwrChannel53Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel53 Article

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.3.3.169.1	pmroadmflexh4mMesrpwrChannel53Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel53 table
root.98.3.3.169.1.1	pmroadmflexh4mMesrpwrChannel53Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel53 table
root.98.3.3.169.1.2	pmroadmflexh4mMesrpwrChannel53Portn	read-only	Channel53 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.170	pmroadmflexh4mMesrnbChannel54Table	not-accessible		List of pmroadmflexh4mMesrnbChannel54 Article
root.98.3.3.170.1	pmroadmflexh4mMesrnbChannel54Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel54 table
root.98.3.3.170.1.1	pmroadmflexh4mMesrnbChannel54Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel54 table
root.98.3.3.170.1.2	pmroadmflexh4mMesrnbChannel54Portn	read-only	Channel54 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.171	pmroadmflexh4mMesrpwrChannel54Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel54 Article
root.98.3.3.171.1	pmroadmflexh4mMesrpwrChannel54Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel54 table
root.98.3.3.171.1.1	pmroadmflexh4mMesrpwrChannel54Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel54 table
root.98.3.3.171.1.2	pmroadmflexh4mMesrpwrChannel54Portn	read-only	Channel54 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.3.3.172	pmroadmflexh4mMesrnbChannel55Table	not-accessible		List of pmroadmflexh4mMesrnbChannel55 Article
root.98.3.3.172.1	pmroadmflexh4mMesrnbChannel55Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel55 table
root.98.3.3.172.1.1	pmroadmflexh4mMesrnbChannel55Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel55 table
root.98.3.3.172.1.2	pmroadmflexh4mMesrnbChannel55Portn	read-only	Channel55 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.173	pmroadmflexh4mMesrpwrChannel55Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel55 Article
root.98.3.3.173.1	pmroadmflexh4mMesrpwrChannel55Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel55 table
root.98.3.3.173.1.1	pmroadmflexh4mMesrpwrChannel55Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel55 table
root.98.3.3.173.1.2	pmroadmflexh4mMesrpwrChannel55Portn	read-only	Channel55 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.174	pmroadmflexh4mMesrnbChannel56Table	not-accessible		List of pmroadmflexh4mMesrnbChannel56 Article
root.98.3.3.174.1	pmroadmflexh4mMesrnbChannel56Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel56 table
root.98.3.3.174.1.1	pmroadmflexh4mMesrnbChannel56Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel56 table

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.3.3.174.1.2	pmroadmflexh4mMesrnbChannel56Portn	read-only	Channel56 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.175	pmroadmflexh4mMesrpwrChannel56Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel56 Article
root.98.3.3.175.1	pmroadmflexh4mMesrpwrChannel56Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel56 table
root.98.3.3.175.1.1	pmroadmflexh4mMesrpwrChannel56Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel56 table
root.98.3.3.175.1.2	pmroadmflexh4mMesrpwrChannel56Portn	read-only	Channel56 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.176	pmroadmflexh4mMesrnbChannel57Table	not-accessible		List of pmroadmflexh4mMesrnbChannel57 Article
root.98.3.3.176.1	pmroadmflexh4mMesrnbChannel57Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel57 table
root.98.3.3.176.1.1	pmroadmflexh4mMesrnbChannel57Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel57 table
root.98.3.3.176.1.2	pmroadmflexh4mMesrnbChannel57Portn	read-only	Channel57 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.177	pmroadmflexh4mMesrpwrChannel57Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel57 Article
root.98.3.3.177.1	pmroadmflexh4mMesrpwrChannel57Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel57 table

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.3.3.177.1.1	pmroadmflexh4mMesrpwrChannel57Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel57 table
root.98.3.3.177.1.2	pmroadmflexh4mMesrpwrChannel57Portn	read-only	Channel57 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.178	pmroadmflexh4mMesrnbChannel58Table	not-accessible		List of pmroadmflexh4mMesrnbChannel58 Article
root.98.3.3.178.1	pmroadmflexh4mMesrnbChannel58Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel58 table
root.98.3.3.178.1.1	pmroadmflexh4mMesrnbChannel58Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel58 table
root.98.3.3.178.1.2	pmroadmflexh4mMesrnbChannel58Portn	read-only	Channel58 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.179	pmroadmflexh4mMesrpwrChannel58Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel58 Article
root.98.3.3.179.1	pmroadmflexh4mMesrpwrChannel58Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel58 table
root.98.3.3.179.1.1	pmroadmflexh4mMesrpwrChannel58Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel58 table
root.98.3.3.179.1.2	pmroadmflexh4mMesrpwrChannel58Portn	read-only	Channel58 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.180	pmroadmflexh4mMesrnbChannel59Table	not-accessible		List of pmroadmflexh4mMesrnbChannel59 Article

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.3.3.180.1	pmroadmflexh4mMesrnbChannel59Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel59 table
root.98.3.3.180.1.1	pmroadmflexh4mMesrnbChannel59Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel59 table
root.98.3.3.180.1.2	pmroadmflexh4mMesrnbChannel59Portn	read-only	Channel59 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.181	pmroadmflexh4mMesrpwrChannel59Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel59 Article
root.98.3.3.181.1	pmroadmflexh4mMesrpwrChannel59Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel59 table
root.98.3.3.181.1.1	pmroadmflexh4mMesrpwrChannel59Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel59 table
root.98.3.3.181.1.2	pmroadmflexh4mMesrpwrChannel59Portn	read-only	Channel59 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.182	pmroadmflexh4mMesrnbChannel60Table	not-accessible		List of pmroadmflexh4mMesrnbChannel60 Article
root.98.3.3.182.1	pmroadmflexh4mMesrnbChannel60Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel60 table
root.98.3.3.182.1.1	pmroadmflexh4mMesrnbChannel60Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel60 table
root.98.3.3.182.1.2	pmroadmflexh4mMesrnbChannel60Portn	read-only	Channel60 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.3.3.183	pmroadmflexh4mMesrpwrChannel60Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel60 Article
root.98.3.3.183.1	pmroadmflexh4mMesrpwrChannel60Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel60 table
root.98.3.3.183.1.1	pmroadmflexh4mMesrpwrChannel60Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel60 table
root.98.3.3.183.1.2	pmroadmflexh4mMesrpwrChannel60Portn	read-only	Channel60 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.184	pmroadmflexh4mMesrnbChannel61Table	not-accessible		List of pmroadmflexh4mMesrnbChannel61 Article
root.98.3.3.184.1	pmroadmflexh4mMesrnbChannel61Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel61 table
root.98.3.3.184.1.1	pmroadmflexh4mMesrnbChannel61Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel61 table
root.98.3.3.184.1.2	pmroadmflexh4mMesrnbChannel61Portn	read-only	Channel61 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.185	pmroadmflexh4mMesrpwrChannel61Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel61 Article
root.98.3.3.185.1	pmroadmflexh4mMesrpwrChannel61Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel61 table
root.98.3.3.185.1.1	pmroadmflexh4mMesrpwrChannel61Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel61 table

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.3.3.185.1.2	pmroadmflexh4mMesrpwrChannel61Portn	read-only	Channel61 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.186	pmroadmflexh4mMesrnbChannel62Table	not-accessible		List of pmroadmflexh4mMesrnbChannel62 Article
root.98.3.3.186.1	pmroadmflexh4mMesrnbChannel62Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel62 table
root.98.3.3.186.1.1	pmroadmflexh4mMesrnbChannel62Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel62 table
root.98.3.3.186.1.2	pmroadmflexh4mMesrnbChannel62Portn	read-only	Channel62 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.187	pmroadmflexh4mMesrpwrChannel62Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel62 Article
root.98.3.3.187.1	pmroadmflexh4mMesrpwrChannel62Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel62 table
root.98.3.3.187.1.1	pmroadmflexh4mMesrpwrChannel62Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel62 table
root.98.3.3.187.1.2	pmroadmflexh4mMesrpwrChannel62Portn	read-only	Channel62 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.188	pmroadmflexh4mMesrnbChannel63Table	not-accessible		List of pmroadmflexh4mMesrnbChannel63 Article
root.98.3.3.188.1	pmroadmflexh4mMesrnbChannel63Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel63 table

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.3.3.188.1.1	pmroadmflexh4mMesrnbChannel63Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel63 table
root.98.3.3.188.1.2	pmroadmflexh4mMesrnbChannel63Portn	read-only	Channel63 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.189	pmroadmflexh4mMesrpwrChannel63Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel63 Article
root.98.3.3.189.1	pmroadmflexh4mMesrpwrChannel63Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel63 table
root.98.3.3.189.1.1	pmroadmflexh4mMesrpwrChannel63Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel63 table
root.98.3.3.189.1.2	pmroadmflexh4mMesrpwrChannel63Portn	read-only	Channel63 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.190	pmroadmflexh4mMesrnbChannel64Table	not-accessible		List of pmroadmflexh4mMesrnbChannel64 Article
root.98.3.3.190.1	pmroadmflexh4mMesrnbChannel64Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel64 table
root.98.3.3.190.1.1	pmroadmflexh4mMesrnbChannel64Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel64 table
root.98.3.3.190.1.2	pmroadmflexh4mMesrnbChannel64Portn	read-only	Channel64 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.191	pmroadmflexh4mMesrpwrChannel64Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel64 Article

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.3.3.191.1	pmroadmflexh4mMesrpwrChannel64Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel64 table
root.98.3.3.191.1.1	pmroadmflexh4mMesrpwrChannel64Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel64 table
root.98.3.3.191.1.2	pmroadmflexh4mMesrpwrChannel64Portn	read-only	Channel64 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.192	pmroadmflexh4mMesrnbChannel65Table	not-accessible		List of pmroadmflexh4mMesrnbChannel65 Article
root.98.3.3.192.1	pmroadmflexh4mMesrnbChannel65Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel65 table
root.98.3.3.192.1.1	pmroadmflexh4mMesrnbChannel65Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel65 table
root.98.3.3.192.1.2	pmroadmflexh4mMesrnbChannel65Portn	read-only	Channel65 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.193	pmroadmflexh4mMesrpwrChannel65Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel65 Article
root.98.3.3.193.1	pmroadmflexh4mMesrpwrChannel65Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel65 table
root.98.3.3.193.1.1	pmroadmflexh4mMesrpwrChannel65Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel65 table
root.98.3.3.193.1.2	pmroadmflexh4mMesrpwrChannel65Portn	read-only	Channel65 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.3.3.194	pmroadmflexh4mMesrnbChannel66Table	not-accessible		List of pmroadmflexh4mMesrnbChannel66 Article
root.98.3.3.194.1	pmroadmflexh4mMesrnbChannel66Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel66 table
root.98.3.3.194.1.1	pmroadmflexh4mMesrnbChannel66Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel66 table
root.98.3.3.194.1.2	pmroadmflexh4mMesrnbChannel66Portn	read-only	Channel66 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.195	pmroadmflexh4mMesrpwrChannel66Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel66 Article
root.98.3.3.195.1	pmroadmflexh4mMesrpwrChannel66Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel66 table
root.98.3.3.195.1.1	pmroadmflexh4mMesrpwrChannel66Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel66 table
root.98.3.3.195.1.2	pmroadmflexh4mMesrpwrChannel66Portn	read-only	Channel66 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.196	pmroadmflexh4mMesrnbChannel67Table	not-accessible		List of pmroadmflexh4mMesrnbChannel67 Article
root.98.3.3.196.1	pmroadmflexh4mMesrnbChannel67Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel67 table
root.98.3.3.196.1.1	pmroadmflexh4mMesrnbChannel67Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel67 table

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.3.3.196.1.2	pmroadmflexh4mMesrnbChannel67Portn	read-only	Channel67 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.197	pmroadmflexh4mMesrpwrChannel67Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel67 Article
root.98.3.3.197.1	pmroadmflexh4mMesrpwrChannel67Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel67 table
root.98.3.3.197.1.1	pmroadmflexh4mMesrpwrChannel67Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel67 table
root.98.3.3.197.1.2	pmroadmflexh4mMesrpwrChannel67Portn	read-only	Channel67 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.198	pmroadmflexh4mMesrnbChannel68Table	not-accessible		List of pmroadmflexh4mMesrnbChannel68 Article
root.98.3.3.198.1	pmroadmflexh4mMesrnbChannel68Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel68 table
root.98.3.3.198.1.1	pmroadmflexh4mMesrnbChannel68Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel68 table
root.98.3.3.198.1.2	pmroadmflexh4mMesrnbChannel68Portn	read-only	Channel68 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.199	pmroadmflexh4mMesrpwrChannel68Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel68 Article
root.98.3.3.199.1	pmroadmflexh4mMesrpwrChannel68Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel68 table

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.3.3.199.1.1	pmroadmflexh4mMesrpwrChannel68Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel68 table
root.98.3.3.199.1.2	pmroadmflexh4mMesrpwrChannel68Portn	read-only	Channel68 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.200	pmroadmflexh4mMesrnbChannel69Table	not-accessible		List of pmroadmflexh4mMesrnbChannel69 Article
root.98.3.3.200.1	pmroadmflexh4mMesrnbChannel69Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel69 table
root.98.3.3.200.1.1	pmroadmflexh4mMesrnbChannel69Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel69 table
root.98.3.3.200.1.2	pmroadmflexh4mMesrnbChannel69Portn	read-only	Channel69 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.201	pmroadmflexh4mMesrpwrChannel69Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel69 Article
root.98.3.3.201.1	pmroadmflexh4mMesrpwrChannel69Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel69 table
root.98.3.3.201.1.1	pmroadmflexh4mMesrpwrChannel69Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel69 table
root.98.3.3.201.1.2	pmroadmflexh4mMesrpwrChannel69Portn	read-only	Channel69 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.202	pmroadmflexh4mMesrnbChannel70Table	not-accessible		List of pmroadmflexh4mMesrnbChannel70 Article

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.3.3.202.1	pmroadmflexh4mMesrnbChannel70Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel70 table
root.98.3.3.202.1.1	pmroadmflexh4mMesrnbChannel70Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel70 table
root.98.3.3.202.1.2	pmroadmflexh4mMesrnbChannel70Portn	read-only	Channel70 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.203	pmroadmflexh4mMesrpwrChannel70Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel70 Article
root.98.3.3.203.1	pmroadmflexh4mMesrpwrChannel70Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel70 table
root.98.3.3.203.1.1	pmroadmflexh4mMesrpwrChannel70Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel70 table
root.98.3.3.203.1.2	pmroadmflexh4mMesrpwrChannel70Portn	read-only	Channel70 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.204	pmroadmflexh4mMesrnbChannel71Table	not-accessible		List of pmroadmflexh4mMesrnbChannel71 Article
root.98.3.3.204.1	pmroadmflexh4mMesrnbChannel71Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel71 table
root.98.3.3.204.1.1	pmroadmflexh4mMesrnbChannel71Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel71 table
root.98.3.3.204.1.2	pmroadmflexh4mMesrnbChannel71Portn	read-only	Channel71 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.3.3.205	pmroadmflexh4mMesrpwrChannel71Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel71 Article
root.98.3.3.205.1	pmroadmflexh4mMesrpwrChannel71Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel71 table
root.98.3.3.205.1.1	pmroadmflexh4mMesrpwrChannel71Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel71 table
root.98.3.3.205.1.2	pmroadmflexh4mMesrpwrChannel71Portn	read-only	Channel71 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.206	pmroadmflexh4mMesrnbChannel72Table	not-accessible		List of pmroadmflexh4mMesrnbChannel72 Article
root.98.3.3.206.1	pmroadmflexh4mMesrnbChannel72Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel72 table
root.98.3.3.206.1.1	pmroadmflexh4mMesrnbChannel72Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel72 table
root.98.3.3.206.1.2	pmroadmflexh4mMesrnbChannel72Portn	read-only	Channel72 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.207	pmroadmflexh4mMesrpwrChannel72Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel72 Article
root.98.3.3.207.1	pmroadmflexh4mMesrpwrChannel72Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel72 table
root.98.3.3.207.1.1	pmroadmflexh4mMesrpwrChannel72Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel72 table

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.3.3.207.1.2	pmroadmflexh4mMesrpwrChannel72Portn	read-only	Channel72 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.208	pmroadmflexh4mMesrnbChannel73Table	not-accessible		List of pmroadmflexh4mMesrnbChannel73 Article
root.98.3.3.208.1	pmroadmflexh4mMesrnbChannel73Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel73 table
root.98.3.3.208.1.1	pmroadmflexh4mMesrnbChannel73Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel73 table
root.98.3.3.208.1.2	pmroadmflexh4mMesrnbChannel73Portn	read-only	Channel73 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.209	pmroadmflexh4mMesrpwrChannel73Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel73 Article
root.98.3.3.209.1	pmroadmflexh4mMesrpwrChannel73Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel73 table
root.98.3.3.209.1.1	pmroadmflexh4mMesrpwrChannel73Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel73 table
root.98.3.3.209.1.2	pmroadmflexh4mMesrpwrChannel73Portn	read-only	Channel73 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.210	pmroadmflexh4mMesrnbChannel74Table	not-accessible		List of pmroadmflexh4mMesrnbChannel74 Article
root.98.3.3.210.1	pmroadmflexh4mMesrnbChannel74Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel74 table

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.3.3.210.1.1	pmroadmflexh4mMesrnbChannel74Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel74 table
root.98.3.3.210.1.2	pmroadmflexh4mMesrnbChannel74Portn	read-only	Channel74 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.211	pmroadmflexh4mMesrpwrChannel74Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel74 Article
root.98.3.3.211.1	pmroadmflexh4mMesrpwrChannel74Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel74 table
root.98.3.3.211.1.1	pmroadmflexh4mMesrpwrChannel74Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel74 table
root.98.3.3.211.1.2	pmroadmflexh4mMesrpwrChannel74Portn	read-only	Channel74 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.212	pmroadmflexh4mMesrnbChannel75Table	not-accessible		List of pmroadmflexh4mMesrnbChannel75 Article
root.98.3.3.212.1	pmroadmflexh4mMesrnbChannel75Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel75 table
root.98.3.3.212.1.1	pmroadmflexh4mMesrnbChannel75Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel75 table
root.98.3.3.212.1.2	pmroadmflexh4mMesrnbChannel75Portn	read-only	Channel75 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.213	pmroadmflexh4mMesrpwrChannel75Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel75 Article

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.3.3.213.1	pmroadmflexh4mMesrpwrChannel75Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel75 table
root.98.3.3.213.1.1	pmroadmflexh4mMesrpwrChannel75Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel75 table
root.98.3.3.213.1.2	pmroadmflexh4mMesrpwrChannel75Portn	read-only	Channel75 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.214	pmroadmflexh4mMesrnbChannel76Table	not-accessible		List of pmroadmflexh4mMesrnbChannel76 Article
root.98.3.3.214.1	pmroadmflexh4mMesrnbChannel76Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel76 table
root.98.3.3.214.1.1	pmroadmflexh4mMesrnbChannel76Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel76 table
root.98.3.3.214.1.2	pmroadmflexh4mMesrnbChannel76Portn	read-only	Channel76 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.215	pmroadmflexh4mMesrpwrChannel76Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel76 Article
root.98.3.3.215.1	pmroadmflexh4mMesrpwrChannel76Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel76 table
root.98.3.3.215.1.1	pmroadmflexh4mMesrpwrChannel76Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel76 table
root.98.3.3.215.1.2	pmroadmflexh4mMesrpwrChannel76Portn	read-only	Channel76 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.3.3.216	pmroadmflexh4mMesrnbChannel77Table	not-accessible		List of pmroadmflexh4mMesrnbChannel77 Article
root.98.3.3.216.1	pmroadmflexh4mMesrnbChannel77Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel77 table
root.98.3.3.216.1.1	pmroadmflexh4mMesrnbChannel77Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel77 table
root.98.3.3.216.1.2	pmroadmflexh4mMesrnbChannel77Portn	read-only	Channel77 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.217	pmroadmflexh4mMesrpwrChannel77Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel77 Article
root.98.3.3.217.1	pmroadmflexh4mMesrpwrChannel77Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel77 table
root.98.3.3.217.1.1	pmroadmflexh4mMesrpwrChannel77Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel77 table
root.98.3.3.217.1.2	pmroadmflexh4mMesrpwrChannel77Portn	read-only	Channel77 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.218	pmroadmflexh4mMesrnbChannel78Table	not-accessible		List of pmroadmflexh4mMesrnbChannel78 Article
root.98.3.3.218.1	pmroadmflexh4mMesrnbChannel78Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel78 table
root.98.3.3.218.1.1	pmroadmflexh4mMesrnbChannel78Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel78 table

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.3.3.218.1.2	pmroadmflexh4mMesrnbChannel78Portn	read-only	Channel78 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.219	pmroadmflexh4mMesrpwrChannel78Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel78 Article
root.98.3.3.219.1	pmroadmflexh4mMesrpwrChannel78Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel78 table
root.98.3.3.219.1.1	pmroadmflexh4mMesrpwrChannel78Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel78 table
root.98.3.3.219.1.2	pmroadmflexh4mMesrpwrChannel78Portn	read-only	Channel78 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.220	pmroadmflexh4mMesrnbChannel79Table	not-accessible		List of pmroadmflexh4mMesrnbChannel79 Article
root.98.3.3.220.1	pmroadmflexh4mMesrnbChannel79Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel79 table
root.98.3.3.220.1.1	pmroadmflexh4mMesrnbChannel79Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel79 table
root.98.3.3.220.1.2	pmroadmflexh4mMesrnbChannel79Portn	read-only	Channel79 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.221	pmroadmflexh4mMesrpwrChannel79Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel79 Article
root.98.3.3.221.1	pmroadmflexh4mMesrpwrChannel79Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel79 table

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.3.3.221.1.1	pmroadmflexh4mMesrpwrChannel79Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel79 table
root.98.3.3.221.1.2	pmroadmflexh4mMesrpwrChannel79Portn	read-only	Channel79 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.222	pmroadmflexh4mMesrnbChannel80Table	not-accessible		List of pmroadmflexh4mMesrnbChannel80 Article
root.98.3.3.222.1	pmroadmflexh4mMesrnbChannel80Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel80 table
root.98.3.3.222.1.1	pmroadmflexh4mMesrnbChannel80Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel80 table
root.98.3.3.222.1.2	pmroadmflexh4mMesrnbChannel80Portn	read-only	Channel80 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.223	pmroadmflexh4mMesrpwrChannel80Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel80 Article
root.98.3.3.223.1	pmroadmflexh4mMesrpwrChannel80Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel80 table
root.98.3.3.223.1.1	pmroadmflexh4mMesrpwrChannel80Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel80 table
root.98.3.3.223.1.2	pmroadmflexh4mMesrpwrChannel80Portn	read-only	Channel80 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.224	pmroadmflexh4mMesrnbChannel81Table	not-accessible		List of pmroadmflexh4mMesrnbChannel81 Article

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.3.3.224.1	pmroadmflexh4mMesrnbChannel81Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel81 table
root.98.3.3.224.1.1	pmroadmflexh4mMesrnbChannel81Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel81 table
root.98.3.3.224.1.2	pmroadmflexh4mMesrnbChannel81Portn	read-only	Channel81 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.225	pmroadmflexh4mMesrpwrChannel81Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel81 Article
root.98.3.3.225.1	pmroadmflexh4mMesrpwrChannel81Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel81 table
root.98.3.3.225.1.1	pmroadmflexh4mMesrpwrChannel81Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel81 table
root.98.3.3.225.1.2	pmroadmflexh4mMesrpwrChannel81Portn	read-only	Channel81 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.226	pmroadmflexh4mMesrnbChannel82Table	not-accessible		List of pmroadmflexh4mMesrnbChannel82 Article
root.98.3.3.226.1	pmroadmflexh4mMesrnbChannel82Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel82 table
root.98.3.3.226.1.1	pmroadmflexh4mMesrnbChannel82Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel82 table
root.98.3.3.226.1.2	pmroadmflexh4mMesrnbChannel82Portn	read-only	Channel82 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.3.3.227	pmroadmflexh4mMesrpwrChannel82Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel82 Article
root.98.3.3.227.1	pmroadmflexh4mMesrpwrChannel82Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel82 table
root.98.3.3.227.1.1	pmroadmflexh4mMesrpwrChannel82Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel82 table
root.98.3.3.227.1.2	pmroadmflexh4mMesrpwrChannel82Portn	read-only	Channel82 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.228	pmroadmflexh4mMesrnbChannel83Table	not-accessible		List of pmroadmflexh4mMesrnbChannel83 Article
root.98.3.3.228.1	pmroadmflexh4mMesrnbChannel83Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel83 table
root.98.3.3.228.1.1	pmroadmflexh4mMesrnbChannel83Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel83 table
root.98.3.3.228.1.2	pmroadmflexh4mMesrnbChannel83Portn	read-only	Channel83 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.229	pmroadmflexh4mMesrpwrChannel83Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel83 Article
root.98.3.3.229.1	pmroadmflexh4mMesrpwrChannel83Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel83 table
root.98.3.3.229.1.1	pmroadmflexh4mMesrpwrChannel83Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel83 table

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.3.3.229.1.2	pmroadmflexh4mMesrpwrChannel83Portn	read-only	Channel83 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.230	pmroadmflexh4mMesrnbChannel84Table	not-accessible		List of pmroadmflexh4mMesrnbChannel84 Article
root.98.3.3.230.1	pmroadmflexh4mMesrnbChannel84Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel84 table
root.98.3.3.230.1.1	pmroadmflexh4mMesrnbChannel84Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel84 table
root.98.3.3.230.1.2	pmroadmflexh4mMesrnbChannel84Portn	read-only	Channel84 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.231	pmroadmflexh4mMesrpwrChannel84Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel84 Article
root.98.3.3.231.1	pmroadmflexh4mMesrpwrChannel84Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel84 table
root.98.3.3.231.1.1	pmroadmflexh4mMesrpwrChannel84Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel84 table
root.98.3.3.231.1.2	pmroadmflexh4mMesrpwrChannel84Portn	read-only	Channel84 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.232	pmroadmflexh4mMesrnbChannel85Table	not-accessible		List of pmroadmflexh4mMesrnbChannel85 Article
root.98.3.3.232.1	pmroadmflexh4mMesrnbChannel85Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel85 table

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.3.3.232.1.1	pmroadmflexh4mMesrnbChannel85Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel85 table
root.98.3.3.232.1.2	pmroadmflexh4mMesrnbChannel85Portn	read-only	Channel85 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.233	pmroadmflexh4mMesrpwrChannel85Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel85 Article
root.98.3.3.233.1	pmroadmflexh4mMesrpwrChannel85Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel85 table
root.98.3.3.233.1.1	pmroadmflexh4mMesrpwrChannel85Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel85 table
root.98.3.3.233.1.2	pmroadmflexh4mMesrpwrChannel85Portn	read-only	Channel85 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.234	pmroadmflexh4mMesrnbChannel86Table	not-accessible		List of pmroadmflexh4mMesrnbChannel86 Article
root.98.3.3.234.1	pmroadmflexh4mMesrnbChannel86Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel86 table
root.98.3.3.234.1.1	pmroadmflexh4mMesrnbChannel86Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel86 table
root.98.3.3.234.1.2	pmroadmflexh4mMesrnbChannel86Portn	read-only	Channel86 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.235	pmroadmflexh4mMesrpwrChannel86Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel86 Article

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.3.3.235.1	pmroadmflexh4mMesrpwrChannel86Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel86 table
root.98.3.3.235.1.1	pmroadmflexh4mMesrpwrChannel86Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel86 table
root.98.3.3.235.1.2	pmroadmflexh4mMesrpwrChannel86Portn	read-only	Channel86 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.236	pmroadmflexh4mMesrnbChannel87Table	not-accessible		List of pmroadmflexh4mMesrnbChannel87 Article
root.98.3.3.236.1	pmroadmflexh4mMesrnbChannel87Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel87 table
root.98.3.3.236.1.1	pmroadmflexh4mMesrnbChannel87Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel87 table
root.98.3.3.236.1.2	pmroadmflexh4mMesrnbChannel87Portn	read-only	Channel87 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.237	pmroadmflexh4mMesrpwrChannel87Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel87 Article
root.98.3.3.237.1	pmroadmflexh4mMesrpwrChannel87Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel87 table
root.98.3.3.237.1.1	pmroadmflexh4mMesrpwrChannel87Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel87 table
root.98.3.3.237.1.2	pmroadmflexh4mMesrpwrChannel87Portn	read-only	Channel87 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.3.3.238	pmroadmflexh4mMesrnbChannel88Table	not-accessible		List of pmroadmflexh4mMesrnbChannel88 Article
root.98.3.3.238.1	pmroadmflexh4mMesrnbChannel88Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel88 table
root.98.3.3.238.1.1	pmroadmflexh4mMesrnbChannel88Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel88 table
root.98.3.3.238.1.2	pmroadmflexh4mMesrnbChannel88Portn	read-only	Channel88 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.239	pmroadmflexh4mMesrpwrChannel88Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel88 Article
root.98.3.3.239.1	pmroadmflexh4mMesrpwrChannel88Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel88 table
root.98.3.3.239.1.1	pmroadmflexh4mMesrpwrChannel88Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel88 table
root.98.3.3.239.1.2	pmroadmflexh4mMesrpwrChannel88Portn	read-only	Channel88 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.240	pmroadmflexh4mMesrnbChannel89Table	not-accessible		List of pmroadmflexh4mMesrnbChannel89 Article
root.98.3.3.240.1	pmroadmflexh4mMesrnbChannel89Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel89 table
root.98.3.3.240.1.1	pmroadmflexh4mMesrnbChannel89Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel89 table

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.3.3.240.1.2	pmroadmflexh4mMesrnbChannel89Portn	read-only	Channel89 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.241	pmroadmflexh4mMesrpwrChannel89Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel89 Article
root.98.3.3.241.1	pmroadmflexh4mMesrpwrChannel89Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel89 table
root.98.3.3.241.1.1	pmroadmflexh4mMesrpwrChannel89Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel89 table
root.98.3.3.241.1.2	pmroadmflexh4mMesrpwrChannel89Portn	read-only	Channel89 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.242	pmroadmflexh4mMesrnbChannel90Table	not-accessible		List of pmroadmflexh4mMesrnbChannel90 Article
root.98.3.3.242.1	pmroadmflexh4mMesrnbChannel90Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel90 table
root.98.3.3.242.1.1	pmroadmflexh4mMesrnbChannel90Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel90 table
root.98.3.3.242.1.2	pmroadmflexh4mMesrnbChannel90Portn	read-only	Channel90 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.243	pmroadmflexh4mMesrpwrChannel90Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel90 Article
root.98.3.3.243.1	pmroadmflexh4mMesrpwrChannel90Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel90 table

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.3.3.243.1.1	pmroadmflexh4mMesrpwrChannel90Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel90 table
root.98.3.3.243.1.2	pmroadmflexh4mMesrpwrChannel90Portn	read-only	Channel90 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.244	pmroadmflexh4mMesrnbChannel91Table	not-accessible		List of pmroadmflexh4mMesrnbChannel91 Article
root.98.3.3.244.1	pmroadmflexh4mMesrnbChannel91Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel91 table
root.98.3.3.244.1.1	pmroadmflexh4mMesrnbChannel91Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel91 table
root.98.3.3.244.1.2	pmroadmflexh4mMesrnbChannel91Portn	read-only	Channel91 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.245	pmroadmflexh4mMesrpwrChannel91Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel91 Article
root.98.3.3.245.1	pmroadmflexh4mMesrpwrChannel91Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel91 table
root.98.3.3.245.1.1	pmroadmflexh4mMesrpwrChannel91Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel91 table
root.98.3.3.245.1.2	pmroadmflexh4mMesrpwrChannel91Portn	read-only	Channel91 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.246	pmroadmflexh4mMesrnbChannel92Table	not-accessible		List of pmroadmflexh4mMesrnbChannel92 Article

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.3.3.246.1	pmroadmflexh4mMesrnbChannel92Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel92 table
root.98.3.3.246.1.1	pmroadmflexh4mMesrnbChannel92Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel92 table
root.98.3.3.246.1.2	pmroadmflexh4mMesrnbChannel92Portn	read-only	Channel92 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.247	pmroadmflexh4mMesrpwrChannel92Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel92 Article
root.98.3.3.247.1	pmroadmflexh4mMesrpwrChannel92Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel92 table
root.98.3.3.247.1.1	pmroadmflexh4mMesrpwrChannel92Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel92 table
root.98.3.3.247.1.2	pmroadmflexh4mMesrpwrChannel92Portn	read-only	Channel92 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.248	pmroadmflexh4mMesrnbChannel93Table	not-accessible		List of pmroadmflexh4mMesrnbChannel93 Article
root.98.3.3.248.1	pmroadmflexh4mMesrnbChannel93Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel93 table
root.98.3.3.248.1.1	pmroadmflexh4mMesrnbChannel93Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel93 table
root.98.3.3.248.1.2	pmroadmflexh4mMesrnbChannel93Portn	read-only	Channel93 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.3.3.249	pmroadmflexh4mMesrpwrChannel93Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel93 Article
root.98.3.3.249.1	pmroadmflexh4mMesrpwrChannel93Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel93 table
root.98.3.3.249.1.1	pmroadmflexh4mMesrpwrChannel93Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel93 table
root.98.3.3.249.1.2	pmroadmflexh4mMesrpwrChannel93Portn	read-only	Channel93 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.250	pmroadmflexh4mMesrnbChannel94Table	not-accessible		List of pmroadmflexh4mMesrnbChannel94 Article
root.98.3.3.250.1	pmroadmflexh4mMesrnbChannel94Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel94 table
root.98.3.3.250.1.1	pmroadmflexh4mMesrnbChannel94Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel94 table
root.98.3.3.250.1.2	pmroadmflexh4mMesrnbChannel94Portn	read-only	Channel94 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.251	pmroadmflexh4mMesrpwrChannel94Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel94 Article
root.98.3.3.251.1	pmroadmflexh4mMesrpwrChannel94Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel94 table
root.98.3.3.251.1.1	pmroadmflexh4mMesrpwrChannel94Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel94 table

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.3.3.251.1.2	pmroadmflexh4mMesrpwrChannel94Portn	read-only	Channel94 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.252	pmroadmflexh4mMesrnbChannel95Table	not-accessible		List of pmroadmflexh4mMesrnbChannel95 Article
root.98.3.3.252.1	pmroadmflexh4mMesrnbChannel95Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel95 table
root.98.3.3.252.1.1	pmroadmflexh4mMesrnbChannel95Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel95 table
root.98.3.3.252.1.2	pmroadmflexh4mMesrnbChannel95Portn	read-only	Channel95 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.253	pmroadmflexh4mMesrpwrChannel95Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel95 Article
root.98.3.3.253.1	pmroadmflexh4mMesrpwrChannel95Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel95 table
root.98.3.3.253.1.1	pmroadmflexh4mMesrpwrChannel95Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel95 table
root.98.3.3.253.1.2	pmroadmflexh4mMesrpwrChannel95Portn	read-only	Channel95 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.254	pmroadmflexh4mMesrnbChannel96Table	not-accessible		List of pmroadmflexh4mMesrnbChannel96 Article
root.98.3.3.254.1	pmroadmflexh4mMesrnbChannel96Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel96 table

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.3.3.254.1.1	pmroadmflexh4mMesrnbChannel96Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel96 table
root.98.3.3.254.1.2	pmroadmflexh4mMesrnbChannel96Portn	read-only	Channel96 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.255	pmroadmflexh4mMesrpwrChannel96Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel96 Article
root.98.3.3.255.1	pmroadmflexh4mMesrpwrChannel96Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel96 table
root.98.3.3.255.1.1	pmroadmflexh4mMesrpwrChannel96Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel96 table
root.98.3.3.255.1.2	pmroadmflexh4mMesrpwrChannel96Portn	read-only	Channel96 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.256	pmroadmflexh4mMesrnbChannel97Table	not-accessible		List of pmroadmflexh4mMesrnbChannel97 Article
root.98.3.3.256.1	pmroadmflexh4mMesrnbChannel97Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel97 table
root.98.3.3.256.1.1	pmroadmflexh4mMesrnbChannel97Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel97 table
root.98.3.3.256.1.2	pmroadmflexh4mMesrnbChannel97Portn	read-only	Channel97 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.257	pmroadmflexh4mMesrpwrChannel97Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel97 Article

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.3.3.257.1	pmroadmflexh4mMesrpwrChannel97Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel97 table
root.98.3.3.257.1.1	pmroadmflexh4mMesrpwrChannel97Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel97 table
root.98.3.3.257.1.2	pmroadmflexh4mMesrpwrChannel97Portn	read-only	Channel97 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.258	pmroadmflexh4mMesrnbChannel98Table	not-accessible		List of pmroadmflexh4mMesrnbChannel98 Article
root.98.3.3.258.1	pmroadmflexh4mMesrnbChannel98Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel98 table
root.98.3.3.258.1.1	pmroadmflexh4mMesrnbChannel98Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel98 table
root.98.3.3.258.1.2	pmroadmflexh4mMesrnbChannel98Portn	read-only	Channel98 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.259	pmroadmflexh4mMesrpwrChannel98Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel98 Article
root.98.3.3.259.1	pmroadmflexh4mMesrpwrChannel98Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel98 table
root.98.3.3.259.1.1	pmroadmflexh4mMesrpwrChannel98Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel98 table
root.98.3.3.259.1.2	pmroadmflexh4mMesrpwrChannel98Portn	read-only	Channel98 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.3.3.260	pmroadmflexh4mMesrnbChannel99Table	not-accessible		List of pmroadmflexh4mMesrnbChannel99 Article
root.98.3.3.260.1	pmroadmflexh4mMesrnbChannel99Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel99 table
root.98.3.3.260.1.1	pmroadmflexh4mMesrnbChannel99Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel99 table
root.98.3.3.260.1.2	pmroadmflexh4mMesrnbChannel99Portn	read-only	Channel99 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.261	pmroadmflexh4mMesrpwrChannel99Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel99 Article
root.98.3.3.261.1	pmroadmflexh4mMesrpwrChannel99Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel99 table
root.98.3.3.261.1.1	pmroadmflexh4mMesrpwrChannel99Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel99 table
root.98.3.3.261.1.2	pmroadmflexh4mMesrpwrChannel99Portn	read-only	Channel99 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.262	pmroadmflexh4mMesrnbChannel100Table	not-accessible		List of pmroadmflexh4mMesrnbChannel100 Article
root.98.3.3.262.1	pmroadmflexh4mMesrnbChannel100Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel100 table
root.98.3.3.262.1.1	pmroadmflexh4mMesrnbChannel100Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel100 table

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.3.3.262.1.2	pmroadmflexh4mMesrnbChannel100Portn	read-only	Channel100 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.263	pmroadmflexh4mMesrpwrChannel100Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel100 Article
root.98.3.3.263.1	pmroadmflexh4mMesrpwrChannel100Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel100 table
root.98.3.3.263.1.1	pmroadmflexh4mMesrpwrChannel100Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel100 table
root.98.3.3.263.1.2	pmroadmflexh4mMesrpwrChannel100Portn	read-only	Channel100 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.3.3.264	pmroadmflexh4mMesrnbChannel101Table	not-accessible		List of pmroadmflexh4mMesrnbChannel101 Article
root.98.3.3.264.1	pmroadmflexh4mMesrnbChannel101Entry	not-accessible		Row definition for the pmroadmflexh4mMesrnbChannel101 table
root.98.3.3.264.1.1	pmroadmflexh4mMesrnbChannel101Index	read-only		Index definition for the pmroadmflexh4mMesrnbChannel101 table
root.98.3.3.264.1.2	pmroadmflexh4mMesrnbChannel101Portn	read-only	Channel101 Number	This OID indicates the channel number (Fhz =AV_U16*0.003125) (Unit = Thz) <Help> This measure indicates the channel number
root.98.3.3.265	pmroadmflexh4mMesrpwrChannel101Table	not-accessible		List of pmroadmflexh4mMesrpwrChannel101 Article
root.98.3.3.265.1	pmroadmflexh4mMesrpwrChannel101Entry	not-accessible		Row definition for the pmroadmflexh4mMesrpwrChannel101 table

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.3.3.265.1.1	pmroadmflexh4mMesrpwrChannel101Index	read-only		Index definition for the pmroadmflexh4mMesrpwrChannel101 table
root.98.3.3.265.1.2	pmroadmflexh4mMesrpwrChannel101Portn	read-only	Channel101 Power	This OID indicates the channel power (Power =AV_S16/10) (Unit = dBm) <Help> This measure indicates the channel power
root.98.6	pmroadmflexh4mcontrolsWrite			
root.98.6.1	pmroadmflexh4mCtrlOther			
root.98.6.1.1	pmroadmflexh4mCtrlconfMgmt1			
root.98.6.1.1.1	pmroadmflexh4mCtrlConf1Load1	read-write	Load Configuration Tables Set Nb 1	When set this OID enables loading from flash configuration1 into the PM.
root.98.6.1.1.2	pmroadmflexh4mCtrlConf2Load1	read-write	Load Configuration Tables Set Nb 2	When set this OID enables loading from flash configuration2 into the PM.
root.98.6.1.1.10	pmroadmflexh4mCtrlConf2Flash1	read-write	Write Configuration Tables	This OID saves the current configuration of the PM as configuration2 in the flash. <Help> This control saves the customer configuration on the module
root.98.6.1.1.14	pmroadmflexh4mCtrlConf2Clear1	read-write	Clear Configuration Tables	This OID clears the configuration tables from configuration2 in the flash. <Help> This control restores the default configuration of the module
root.98.6.1.4	pmroadmflexh4mCtrlswMgmt			
root.98.6.1.4.1	pmroadmflexh4mCtrlCorrelatOn	read-write	Enable Alarm Correlation	This OID enables the alarm correlation in the PM.
root.98.6.1.4.2	pmroadmflexh4mCtrlCorrelatOff	read-write	Disable Alarm Correlation	This OID disables the alarm correlation in the PM.
root.98.6.1.5	pmroadmflexh4mCtrlswMgmt			

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.6.1.5.2	pmroadmflexh4mCtrlColdReset	read-write	PM Cold Reset	This OID, when set, causes a cold reset of the PM. This reset is traffic affecting, and the configuration of PM is reloaded on start-up. <Help> This control initiates a cold reset of the module.
root.98.6.1.5.3	pmroadmflexh4mCtrlWarmReset	read-write	PM Warm Reset	This OID, when set, causes a warm reset of the PM. This reset is not traffic affecting, and the configuration of PM remains unchanged. <Help> This control initiates a warm reset of the module.
root.98.6.1.5.5	pmroadmflexh4mCtrlLoadSwBank1	read-write	Set Software Nb 1 As Active	This OID, when set, loads the SW from bank1 into the PM. It must be followed by a reset. <Help> This controls selects the first SW bank as the active bank for the next module reset
root.98.6.1.5.6	pmroadmflexh4mCtrlLoadSwBank2	read-write	Set Software Nb 2 As Active	This OID, when set, loads the SW from bank2 into the PM. It must be followed by a reset. <Help> This controls selects the second SW bank as the active bank for the next module reset
root.98.6.1.6	pmroadmflexh4mCtrlGwMgnt			
root.98.6.1.6.1	pmroadmflexh4mCtrlCurrentGwReset	read-write	Active Gateway Reset	This OID, when set, resets the active gateway. It is traffic affecting.
root.98.6.1.6.5	pmroadmflexh4mCtrlLoadGwBank1	read-write	Set Gateway Nb 1 As Active	This OID, when set, loads the GW from bank1 (Flash) into the PM. It is followed by an automatic gateway cold reset. <Help> This controls initiates a cold reset of the module and select the first GW bank as the active bank

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.6.1.6.6	pmroadmflexh4mCtrlLoadGwBank2	read-write	Set Gateway Nb 2 As Active	This OID, when set, loads the GW from bank2 (Flash) into the PM. It is followed by an automatic gateway cold reset.
root.98.6.1.6.7	pmroadmflexh4mCtrlLoadGwBank3	read-write	Set Gateway Nb 3 As Active	This OID, when set, loads the GW from bank3 (Flash) into the PM. It is followed by an automatic gateway cold reset. <Help> This controls initiates a cold reset of the module and select the third GW bank as the active bank
root.98.6.1.6.8	pmroadmflexh4mCtrlLoadGwBank4	read-write	Set Gateway Nb 4 As Active	This OID, when set, loads the GW from bank4 (Flash) into the PM. It is followed by an automatic gateway cold reset.
root.98.6.1.192	pmroadmflexh4mCtrlledTest			
root.98.6.1.192.1	pmroadmflexh4mCtrlGreenLed	read-write	Green Leds Test	This OID switches on all the green Leds as a test feature. <Help> This control initiates a test leds turning all the LEDs to green
root.98.6.1.192.2	pmroadmflexh4mCtrlRedLed	read-write	Red Leds Test	This OID switches on all the red Leds as a test feature. <Help> This control initiates a test leds turning all the LEDs to red
root.98.6.1.192.3	pmroadmflexh4mCtrlLedOff	read-write	Leds Off	This OID switches off all the Leds as a test feature. <Help> This control initiates a test leds turning all the LEDs to OFF
root.98.6.1.193	pmroadmflexh4mCtrlresetWss			
root.98.6.1.193.1	pmroadmflexh4mCtrlResetWss	read-write	WSS Reload Factory Setting	This OID resets the WSS <Help> This control initiates a reset on the WSS on the module.
root.98.6.1.194	pmroadmflexh4mCtrlresetOcm			

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.6.1.194.1	pmroadmflexh4mCtrlRestOcm	read-write	OCM Reset	This OID resets the OCM <Help> This control initiates a reset on the OCM on the module.
root.98.6.1.195	pmroadmflexh4mCtrlScanLaunch			
root.98.6.1.195.1	pmroadmflexh4mCtrlScanActivation	read-write	OCM Scan Activation	This OID starts the measurement scan <Help> This control initiates the module to scan the measurements on the selected line input.
root.98.6.1.264	pmroadmflexh4mCtrlWssConfigFileAvailable			
root.98.6.1.264.1	pmroadmflexh4mCtrlWssConfigFileDownloaded	read-write	WSS Config_File Available	This OID is set when the WSS file configuration is downloaded on the module <Help> This control gives an information that the file is dowloaded and can be used on the module
root.98.6.2	pmroadmflexh4mCtrlClient			
root.98.6.3	pmroadmflexh4mCtrlLine			
root.98.6.3.16	pmroadmflexh4mCtrlcalibrationTable	not-accessible		List of pmroadmflexh4mCtrlcalibration Article
root.98.6.3.16.1	pmroadmflexh4mCtrlcalibrationEntry	not-accessible		Row definition for the pmroadmflexh4mCtrlcalibration table
root.98.6.3.16.1.1	pmroadmflexh4mCtrlcalibrationIndex	read-only		Index definition for the pmroadmflexh4mCtrlcalibration table
root.98.6.3.16.1.2	pmroadmflexh4mCtrlcalibrationPortn	read-write	OCM Calibration	This OID initiates the OPM input calibration to define automatically the OCM offset value. <Help> This parameter initiates the OCM input calibration to define automatically the OCM offset value.
root.98.6.3.64	pmroadmflexh4mCtrlinputPowerRefTable	not-accessible		List of pmroadmflexh4mCtrlinputPowerRef Article

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.6.3.64.1	pmroadmflexh4mCtrlInputPowerRefEntry	not-accessible		Row definition for the pmroadmflexh4mCtrlInputPowerRef table
root.98.6.3.64.1.1	pmroadmflexh4mCtrlInputPowerRefIndex	read-only		Index definition for the pmroadmflexh4mCtrlInputPowerRef table
root.98.6.3.64.1.2	pmroadmflexh4mCtrlInputPowerRefPortn	read-write	Input Power Reference	This OID defines the input power reference used to calibrate the OCM input power. (AV =Power*10) (Unit = dBm) <Help> This parameter defines the input power reference used to calibrate the OCM input power.
root.98.7	pmroadmflexh4mri			
root.98.7.2	pmroadmflexh4mRinvReloadInventory	read-write	Reload the inventory	This OID triggers an inventory reload.
root.98.7.3	pmroadmflexh4mRinvHwPlatform	read-only	HW platform description	This OID contains the description of the Hardware platform.
root.98.7.4	pmroadmflexh4mRinvModulePlatform	read-only	Module platform description	This OID contains the description of the Module.
root.98.7.5	pmroadmflexh4mRinvSwPlatform	read-only	SW platform description	This OID contains the description of the Software platform.
root.98.7.6	pmroadmflexh4mRinvOcm	read-only	OCM description	This OID contains the description of the OCM component.
root.98.7.7	pmroadmflexh4mriCompTable			
root.98.7.7.1	pmroadmflexh4mRinvWssTable	not-accessible		List of the Wss's on the selected module
root.98.7.7.1.1	pmroadmflexh4mRinvWssEntry	not-accessible		Row definition for the WSS table
root.98.7.7.1.1.1	pmroadmflexh4mRinvWssIndex	read-only		Index for WSS table
root.98.7.7.1.1.2	pmroadmflexh4mRinvWss	read-only	Inventory for the WSS	This OID contains the inventory for the WSS
root.98.8	pmroadmflexh4mdownload			
root.98.8.1	pmroadmflexh4mDwlOther			

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.8.1.0	pmroadmflexh4mDwlrestartProcess			
root.98.8.1.0.1	pmroadmflexh4mDwlWarmRestartProcessed	read-only	Warm Restart	This OID indicates that the module last restart was a Warm RESTART
root.98.8.1.0.2	pmroadmflexh4mDwlColdRestartProcessed	read-only	Cold Restart	This OID indicates that the module last restart was a Cold RESTART
root.98.8.1.1	pmroadmflexh4mDwlswBanksUsed			
root.98.8.1.1.1	pmroadmflexh4mDwlSwBank1Used	read-only	SW bank 1 active	This OID indicates the module is working on SW bank 1 <Help> This status indicates if the SW bank 1 is active or standby
root.98.8.1.1.2	pmroadmflexh4mDwlSwBank2Used	read-only	SW bank 2 active	This OID indicates the module is working on SW bank 2 <Help> This status indicates if the SW bank 2 is active or standby
root.98.8.1.1.5	pmroadmflexh4mDwlSwBank1Notempty	read-only	SW bank 1 loaded	This OID indicates a software is loaded in SW bank 1 <Help> This status indicates if the SW bank 1 contains SW package
root.98.8.1.1.6	pmroadmflexh4mDwlSwBank2Notempty	read-only	SW bank 2 loaded	This OID indicates a software is loaded in SW bank 2 <Help> This status indicates if the SW bank 2 contains SW package
root.98.8.1.2	pmroadmflexh4mDwlGwBanksUsed			
root.98.8.1.2.1	pmroadmflexh4mDwlGwBank1Used	read-only	GW bank 1 active	This OID indicates the module is working on GW bank 1 <Help> This status indicates if the GW bank 1 is active or standby
root.98.8.1.2.2	pmroadmflexh4mDwlGwBank2Used	read-only	GW bank 2 active	This OID indicates the module is working on GW bank 2
root.98.8.1.2.3	pmroadmflexh4mDwlGwBank3Used	read-only	GW bank 3 active	This OID indicates the module is working on GW bank 3 <Help> This status indicates if the GW bank 3 is active or standby
root.98.8.1.2.4	pmroadmflexh4mDwlGwBank4Used	read-only	GW bank 4 active	This OID indicates the module is working on GW bank 4

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.8.1.2.5	pmroadmflexh4mDwlGwBank1NotEmpty	read-only	GW bank 1 loaded	This OID indicates a gateway is loaded in GW bank 1 <Help> This status indicates if the GW bank 1 contains GW package
root.98.8.1.2.6	pmroadmflexh4mDwlGwBank2NotEmpty	read-only	GW bank 2 loaded	This OID indicates a gateway is loaded in GW bank 2
root.98.8.1.2.7	pmroadmflexh4mDwlGwBank3NotEmpty	read-only	GW bank 3 loaded	This OID indicates a gateway is loaded in GW bank 3 <Help> This status indicates if the GW bank 3 contains GW package
root.98.8.1.2.8	pmroadmflexh4mDwlGwBank4NotEmpty	read-only	GW bank 4 loaded	This OID indicates a gateway is loaded in GW bank 4
root.98.8.2	pmroadmflexh4mDwlClient			
root.98.8.3	pmroadmflexh4mDwlLine			
root.98.9	pmroadmflexh4mConfig			
root.98.9.1	pmroadmflexh4mCfgAccessCAisCsf			
root.98.9.2	pmroadmflexh4mCfgLabels			
root.98.9.2.1	pmroadmflexh4mCfgLabelclientTable	not-accessible		List of Article
root.98.9.2.1.1	pmroadmflexh4mCfgLabelclientEntry	not-accessible		Row definition for the labels table
root.98.9.2.1.1.1	pmroadmflexh4mCfgLabelclientIndex	read-only		Index definition for the labelclient table
root.98.9.2.1.1.3	pmroadmflexh4mCfgLabelclientPortn	read-write	Default settings on the label of the Ports	These registers configures the default initialisation settings of the labels of the ports.
root.98.9.2.2	pmroadmflexh4mCfgLabellineTable	not-accessible		List of Article
root.98.9.2.2.1	pmroadmflexh4mCfgLabellineEntry	not-accessible		Row definition for the labels table
root.98.9.2.2.1.1	pmroadmflexh4mCfgLabellineIndex	read-only		Index definition for the labelline table
root.98.9.2.2.1.3	pmroadmflexh4mCfgLabellinePortn	read-write	Default settings on the label of the lines	These registers configures the default initialisation settings of the labels of the lines.
root.98.9.3	pmroadmflexh4mCfgStartup			

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.9.3.1	pmroadmflexh4mCfgLineStartupThreshTable	not-accessible		List of Article
root.98.9.3.1.1	pmroadmflexh4mCfgLineStartupThreshEntry	not-accessible		Row definition for the startup table
root.98.9.3.1.1.1	pmroadmflexh4mCfgLineStartupThreshIndex	read-only		Index definition for the lineStartupThresh table
root.98.9.3.1.1.3	pmroadmflexh4mCfgLambdasThresholdLinePortn	read-write	Default settings on the Line	This register configures the default initialisation settings on MSA
root.98.9.4	pmroadmflexh4mCfgLineStartUp			
root.98.9.4.1	pmroadmflexh4mCfgXfpTable	not-accessible		List of Article
root.98.9.4.1.1	pmroadmflexh4mCfgXfpEntry	not-accessible		Row definition for the lineStartUp table
root.98.9.4.1.1.1	pmroadmflexh4mCfgXfpIndex	read-only		Index definition for the xfp table
root.98.9.4.1.1.3	pmroadmflexh4mCfgOcmLosThresholdPortn	read-write	Default Settings on OCM LOS threshold	This OID configures the default initialisation settings on the OCM LOS threshold
root.98.9.4.1.1.4	pmroadmflexh4mCfgOcmOffsetPortn	read-write	Default Settings on OCM offset value	This OID configures the default initialisation settings on the OCM offset value
root.98.9.5	pmroadmflexh4mCfgRoadmflexWavetableRead			
root.98.9.5.1	pmroadmflexh4mCfgWavelistReadTable	not-accessible		List of Article
root.98.9.5.1.1	pmroadmflexh4mCfgWavelistReadEntry	not-accessible		Row definition for the roadmflexWavetableRead table
root.98.9.5.1.1.1	pmroadmflexh4mCfgWavelistReadIndex	read-only		Index definition for the wavelistRead table
root.98.9.5.1.1.3	pmroadmflexh4mCfgWaveMiscRPortn	read-only	Wave parameters	This OID defines the wave parameters
root.98.9.5.1.1.4	pmroadmflexh4mCfgWaveCentralFhzRPortn	read-only	Wave central frequency	This OID defines the wave central frequency
root.98.9.5.1.1.5	pmroadmflexh4mCfgWaveBandwidthRPortn	read-only	Wave bandwidth	This OID defines the wave bandwidth
root.98.9.6	pmroadmflexh4mCfgRoadmflexWavetableWrite			
root.98.9.6.1	pmroadmflexh4mtablewavelistControl			

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.9.6.1.2	pmroadmflexh4mCfgwaveplan1Control	read-write	Wave parameters	This OID defines the wave parameters
root.98.9.6.1.3	pmroadmflexh4mCfgwaveplan2Control	read-write	Wave central frequency	This OID defines the wave central frequency
root.98.9.6.1.4	pmroadmflexh4mCfgwaveNumberToSet	read-write	Wave bandwidth	This OID defines the wave bandwidth
root.98.9.6.2	pmroadmflexh4mCfgWavelistWriteTable	not-accessible		List of Article
root.98.9.6.2.1	pmroadmflexh4mCfgWavelistWriteEntry	not-accessible		Row definition for the roadmflexWavetableWrite table
root.98.9.6.2.1.1	pmroadmflexh4mCfgWavelistWriteIndex	read-only		Index definition for the wavelistWrite table
root.98.9.6.2.1.3	pmroadmflexh4mCfgWaveMiscWPortn	read-write	Wave parameters	This OID defines the wave parameters
root.98.9.6.2.1.4	pmroadmflexh4mCfgWaveCentralFhzWPortn	read-write	Wave central frequency	This OID defines the wave central frequency
root.98.9.6.2.1.5	pmroadmflexh4mCfgWaveBandwidthWPortn	read-write	Wave bandwidth	This OID defines the wave bandwidth
root.98.9.7	pmroadmflexh4mCfgOther			
root.98.9.7.1	pmroadmflexh4mtablemoduleOther			
root.98.9.7.1.9	pmroadmflexh4mCfgroadmMode	read-write	Module Mode	This register selects the configuration mode of the module
root.98.9.8	pmroadmflexh4mCfgStartuptablefive			
root.98.9.8.1	pmroadmflexh4mCfgOtxtlhcapabilitiesTable	not-accessible		List of Article
root.98.9.8.1.1	pmroadmflexh4mCfgOtxtlhcapabilitiesEntry	not-accessible		Row definition for the startuptablefive table
root.98.9.8.1.1.1	pmroadmflexh4mCfgOtxtlhcapabilitiesIndex	read-only		Index definition for the otxtlhcapabilities table
root.98.9.8.1.1.3	pmroadmflexh4mCfgComponentTypePortn	read-only	Component parameters	This OID defines the component parameters
root.98.9.8.1.1.4	pmroadmflexh4mCfgMiscellaneousPortn	read-only	Miscellaneous default settings	This OID defines the miscellaneous parameters
root.98.9.8.1.1.5	pmroadmflexh4mCfgFirstChannelPortn	read-only	Number of the first channel of the component	This OID defines the first channel number of the PM

MIB Name	pmroadmflexh4m.txt	Root OID	1.3.6.1.4.1.20044	
OID	Name	Access	Label	Description
root.98.9.8.1.1.6	pmroadmflexh4mCfgLastChannelPortn	read-only	Number of the last channel of the component	This OID defines the last channel number of the PM
root.98.9.8.1.1.7	pmroadmflexh4mCfgGridPortn	read-only	Grid value of the component	This OID defines the grid of the PM
root.98.9.8.1.1.12	pmroadmflexh4mCfgFlexCentfhzBandwidthStepsPortn	read-only	Flex steps settings	This OID defines the central frequency and the bandwidth steps
root.98.9.8.1.1.13	pmroadmflexh4mCfgFlexMaxBandwidthPortn	read-only	Flex max bandwidth	This OID defines the maximum bandwidth allowable on a wavelength
root.98.9.257	pmroadmflexh4mCfgWriteConfiguration	read-write	Write configuration to module	This OID writes the complete configuration to the module
root.98.10	pmroadmflexh4mtraps			
root.98.10.4	pmroadmflexh4mtrapBoardNumber	read-only		Last module which generates a trap