


PG-1 WIRING: every part goes to the Seed3 socket board (Seed3 pin numbers, seen from outside, USB-C at the bottom)

Coloured line = one wire, soldered to that socket pin. ⊥ = that point goes on a ground chain (black wire, part to part): see the 2 chains at the bottom

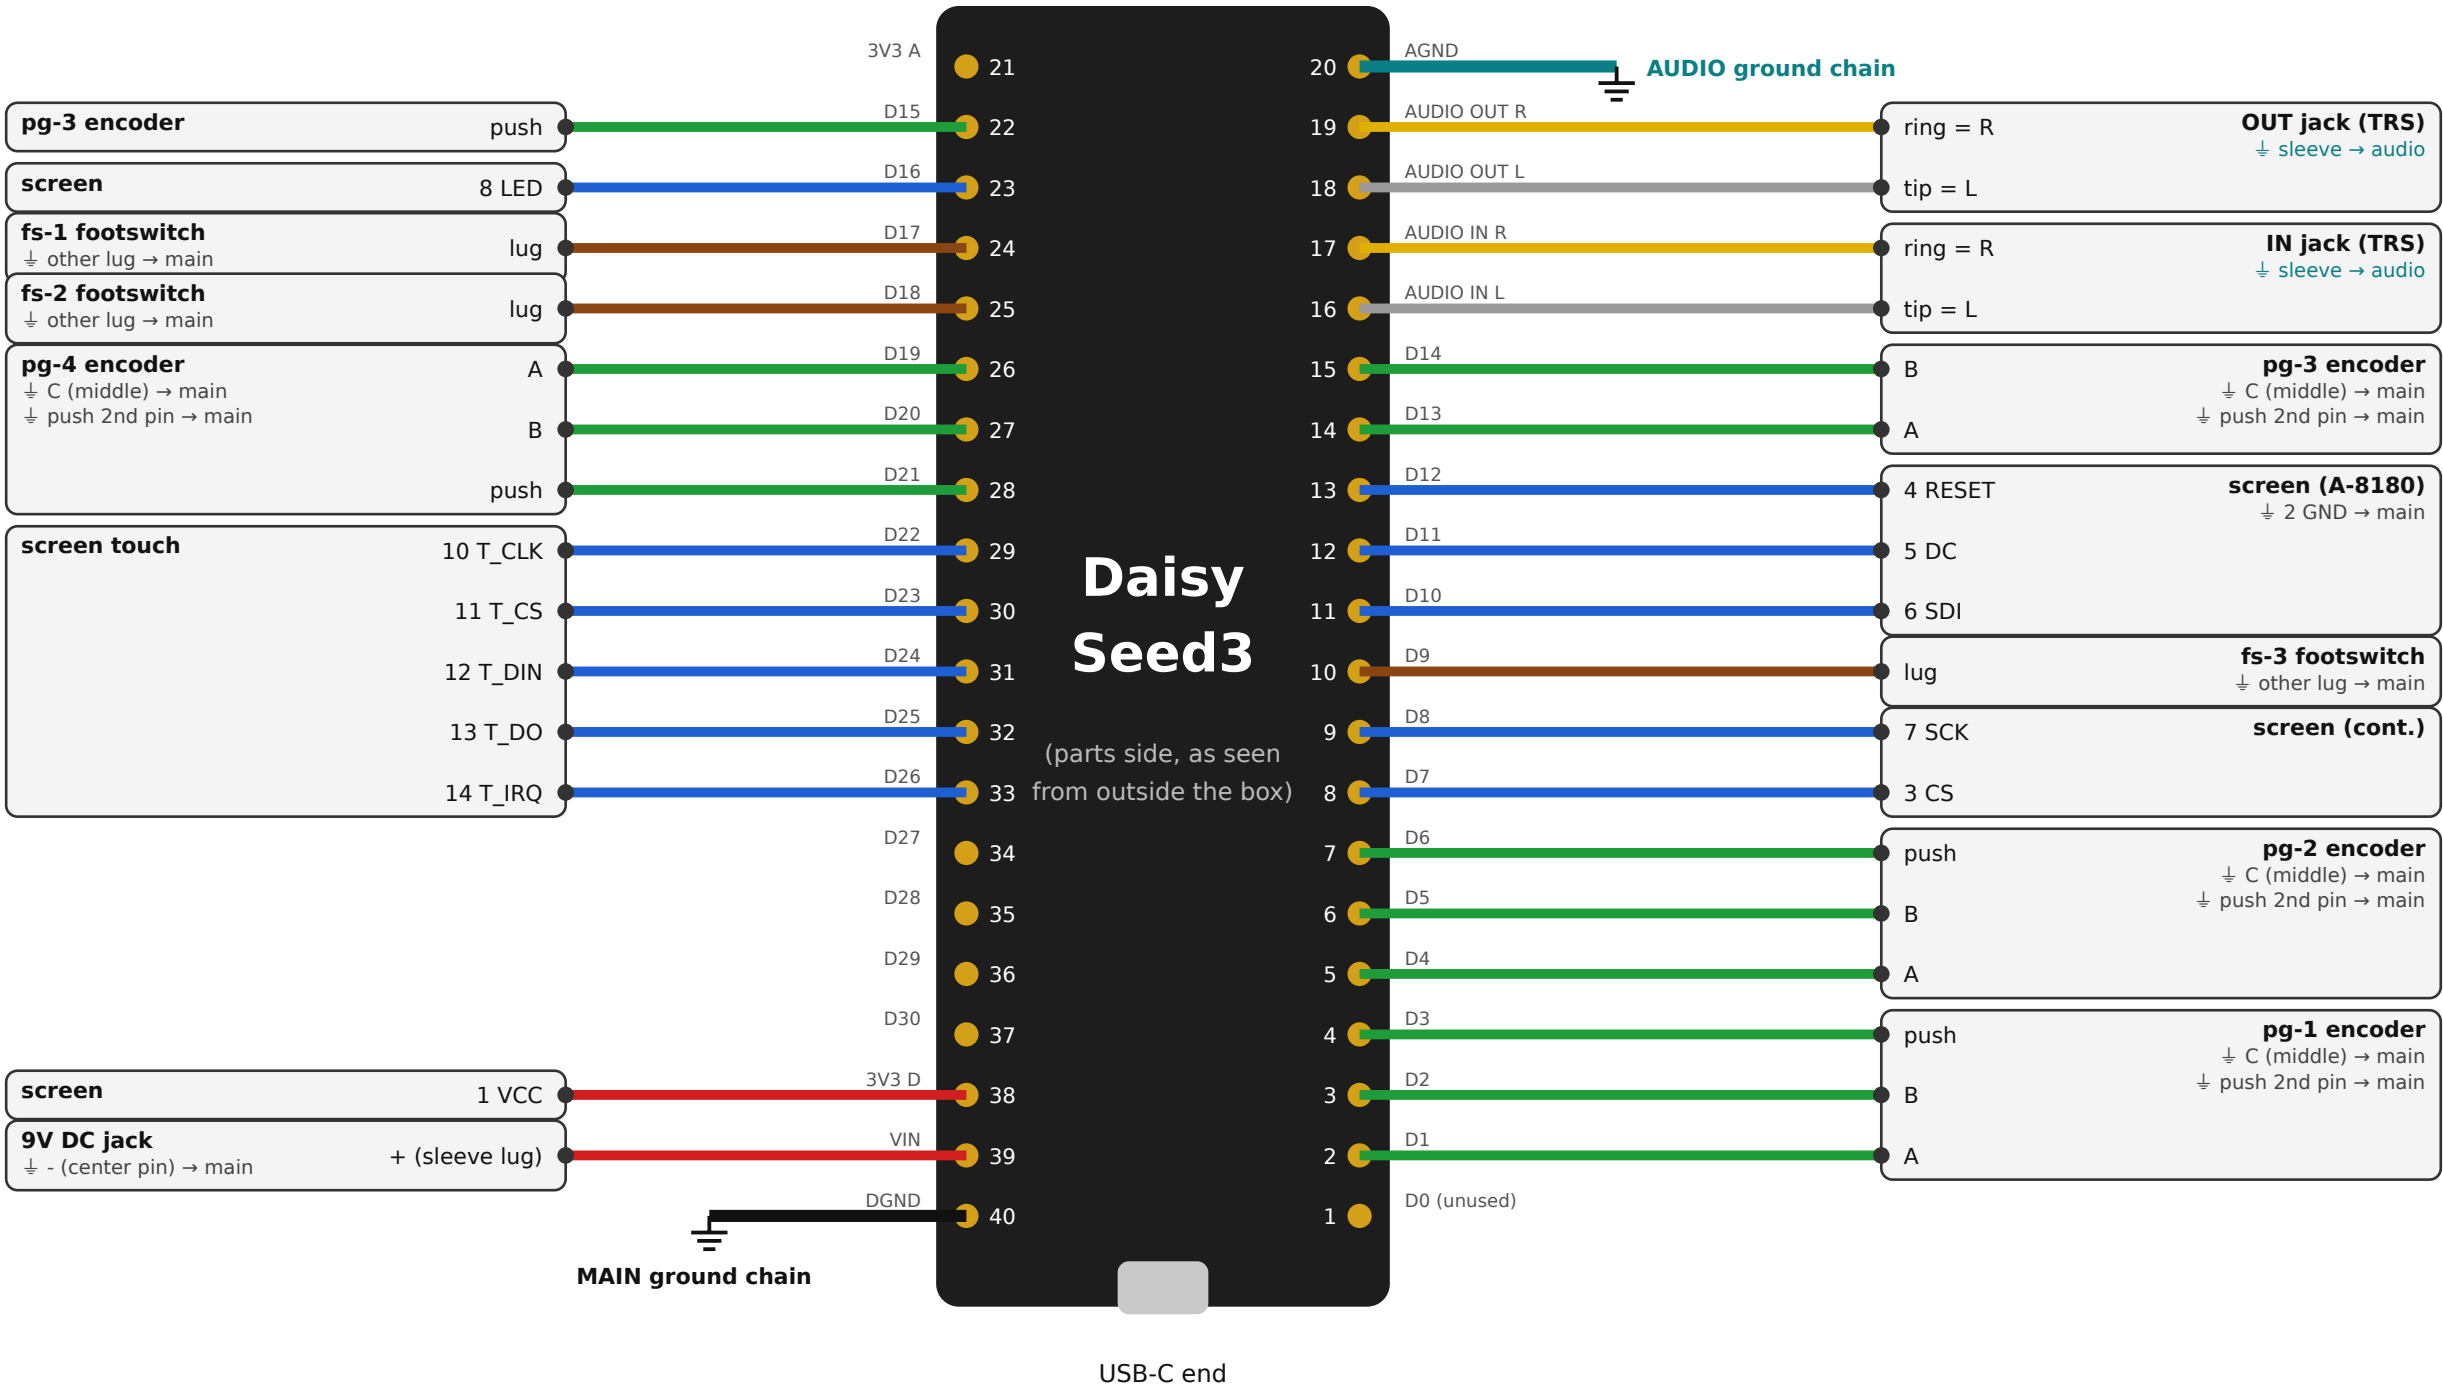

Encoders: 3 pins = A, C, B (C is the middle one). The 2 pins on the other side are the push switch. Screen pin 9 (SDO) is not used. Free for later: pins 34, 36, 37 (35 = exp jack later). The Seed3 itself is never soldered: it plugs into 2 female headers on the socket board. Wires are soldered to the header tails on the board's back (mirror image of this view!). Screen ends can be plug-on jumpers.

GROUND CHAINS: one black wire from each point to the next, in this order. Don't join the two chains, and don't loop back.

