


PG-1 WIRING: every part goes straight to the Daisy Seed3 (top view, USB-C at the bottom)


Coloured line = one plug-on jumper wire. ⊥ = that point goes on a ground chain (black wire, part to part): see the 2 chains at the bottom

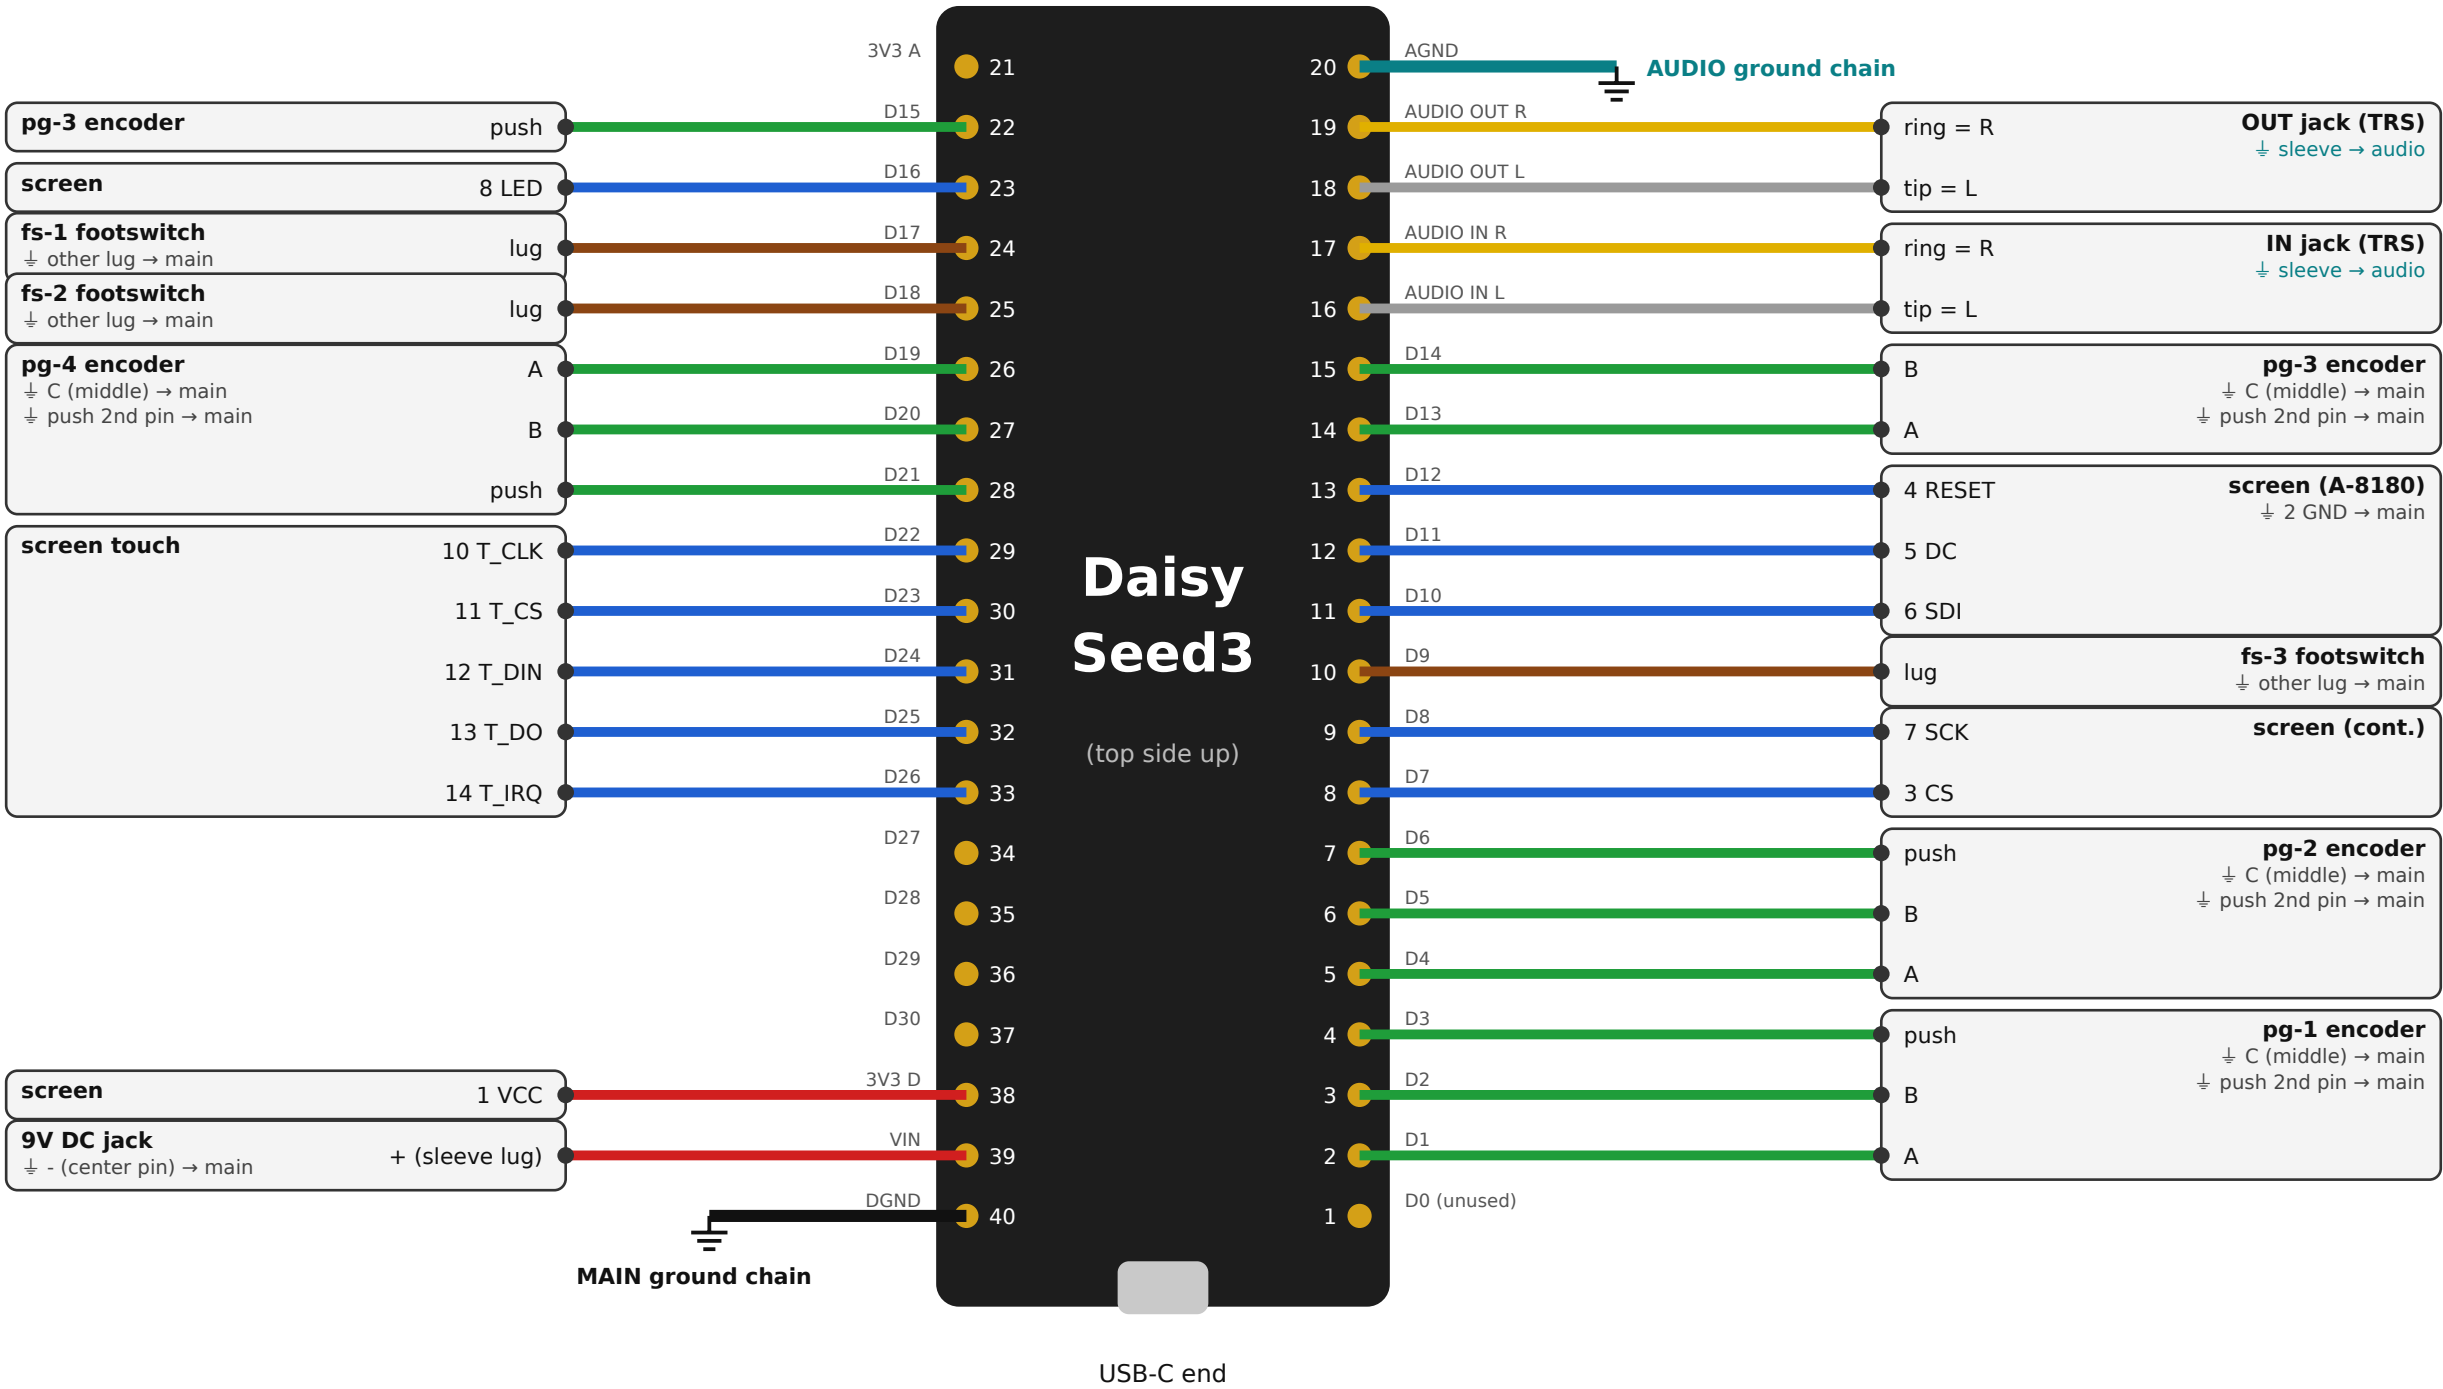

left audio (tip) right audio (ring) encoders screen footswitches power

Encoders: 3 pins = A, C, B (C is the middle one). The 2 pins on the other side are the push switch. Screen pin 9 (SDO) is not used. Free for later: pins 34, 36, 37 (35 = exp jack later).
Every coloured line is a female jumper wire pushed onto the Seed3 pin (no soldering on the Seed3). Screen ends plug on too; other ends are soldered to the part.

GROUND CHAINS: one black wire from each point to the next, in this order. Don't join the two chains, and don't loop back.

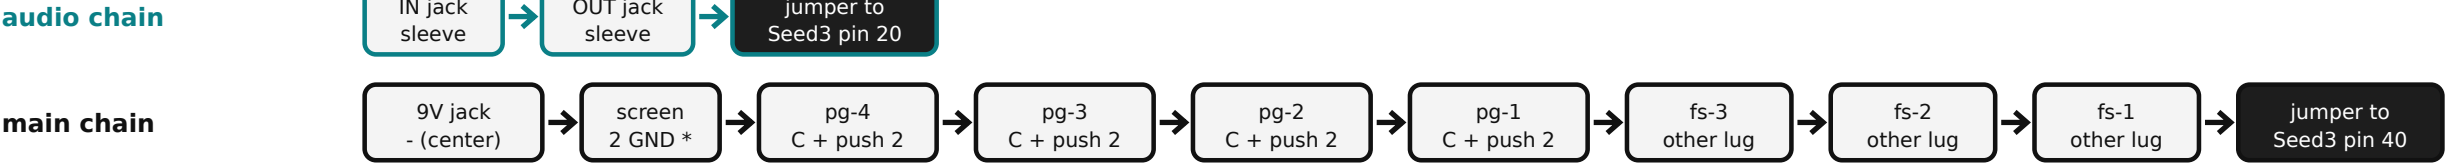

* the screen GND is a plug-on jumper at the screen end: cut its other end off and solder that end into the chain. (exp jack sleeve joins the audio chain only once the exp jack is used.)