

PG-1 WIRING: every part goes to a Seed3 socket place (Seed3 pin numbers, seen from outside, USB-C at the bottom)


Coloured line = one jumper wire, its female end in that socket place. ⊥ = that point goes on a ground chain (black wire, part to part): see the 2 chains at the bottom



left audio (tip) right audio (ring) encoders screen footswitches power

Encoders: 3 pins = A, C, B (C is the middle one). The 2 pins on the other side are the push switch. Screen pin 9 (SDO) is not used. Free for later: pins 34, 36, 37 (35 = exp jack later).  
The Seed3 is never soldered: the jumpers' female ends, glued into a block in the wall window, are its socket (WIRING.md). Seen from inside it's a mirror image of this view: use seed-socket-board.png.

GROUND CHAINS: one black wire from each point to the next, in this order. Don't join the two chains, and don't loop back.

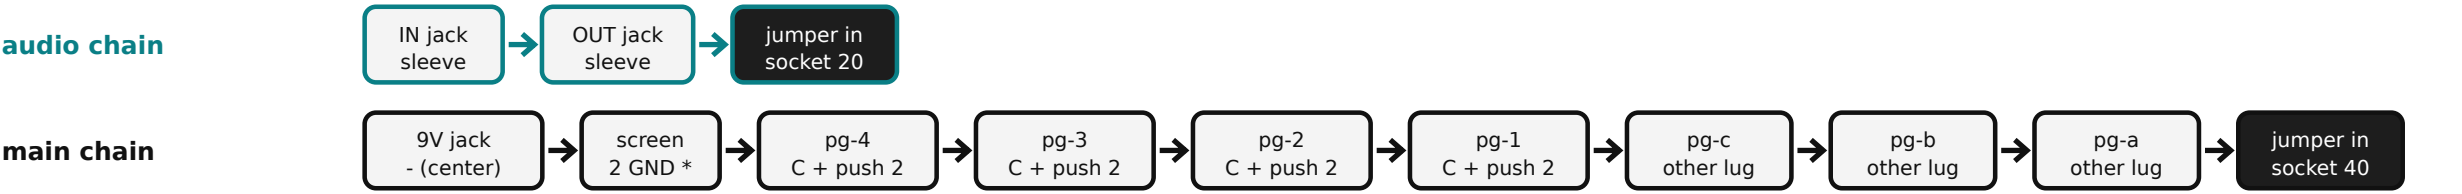

\* the screen GND is a plug-on jumper at the screen end: cut its other end off and solder that end into the chain. (exp jack sleeve joins the audio chain only once the exp jack is used.)