# x0x bass

A 303-style voice: diode ladder filter, accent, slide and tie · the TR-606 is **overleaf**
Toggle up: **step mode** · down: **live mode** · **CHOMPI held:** every second control

## 1 WAVE

- Pg 1 — **Saw / Square** · **CHOMPI + Turn:** Pulse Width
- Pg 2 — **Pattern Length** · **CHOMPI + Turn:** Tuning ±1 st

## 2 ENV MOD

- Turn — **Env Mod**: how far the filter sweeps
- **CHOMPI + Turn:** Accent Level

As on a 303: little below 12 o'clock, a lot above.

## 3 DECAY

- Turn — **Decay**: the sweep's length
- **CHOMPI + Turn:** Slide Time

## 4 EFFECTS

- Pg 1 — **Delay Mix** · **CHOMPI:** synced time. Push + turn: free time, with a tape swoop
- Pg 2 — **Tape Feedback** · **CHOMPI:** tone
- Pg 3 — **Chorus → Flanger** · **CHOMPI:** width
- Pg 4 — **Bit Crush** · **CHOMPI:** rate

## 5 FILTER

- Turn — **Cutoff**
- **CHOMPI:** Resonance
- Press — **Tap Tempo**

Its two lights flash the eighth notes, left and right.


## 6 VOLUME

- Pg 1 — **Volume** · **CHOMPI:** drive
- Pg 2 — **Tempo** · **CHOMPI:** swing
- Pg 3 — **Mix** drums ↔ bass · **CHOMPI:** effects balance
- Pg 4 — **Compressor** · **CHOMPI:** kick sidechain

Press a knob: next page · **CHOMPI + Press:** reset that page · **CHOMPI + Push 2 s:** reset every page (knobs 1–3) · Knobs **accelerate**: click slowly for fine steps, spin for the whole range.

## Step Mode — toggle up


build the pattern one step at a time

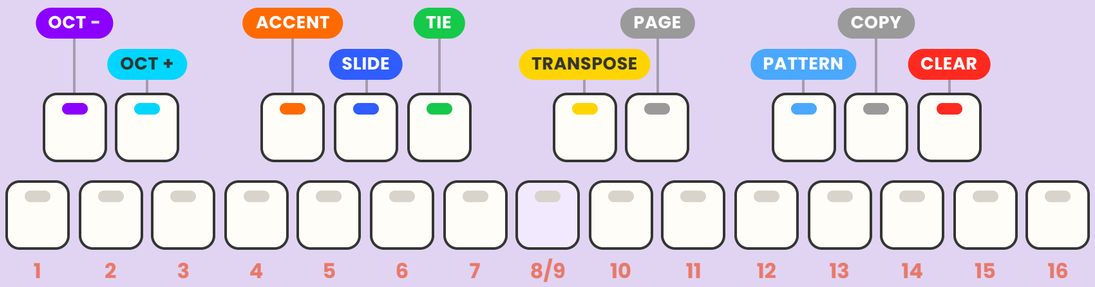


| | |
|---|---|
| **Step key** | press once to select a step, again to turn it on or off. Middle C is step 8 or 9, depending on which page you're viewing |
| **CHOMPI + any key** | set the selected step's note, using the white and black keys like a regular keyboard |
| OCT - … TIE | a page: the step keys toggle octave down / up, accent, slide or tie on each step |
| TRANSPOSE | press any key to transpose the pattern. To leave, double-tap any key or hold C#4 for 2 s |
| PATTERN | the bass's pattern page: **A**, or **B** with CHOMPI held. Running, a pick waits for the bar; again: now |
| **PATTERN held + key** | on the page: **both** bass and drums there, together at the bar |
| **PATTERN held 2 s** | **write protect**, while stopped: play freely, nothing saves |
| **Pattern key held 2 s** | export every pattern as MIDI to `/X0X/MIDI` |
| COPY **+ step key** | copy the pattern there · **+ PATTERN**: to its other side, A ⇄ B |
| CLEAR | tap: the selected step · hold 1 s: the pattern |
| COPY + CLEAR | **undo** the last clear (again: redo) |
| **LOOP** | switch to the **drums** · **CHOMPI + LOOP:** mute / unmute the bass |

## Live Mode — toggle down

play, record, arpeggiate

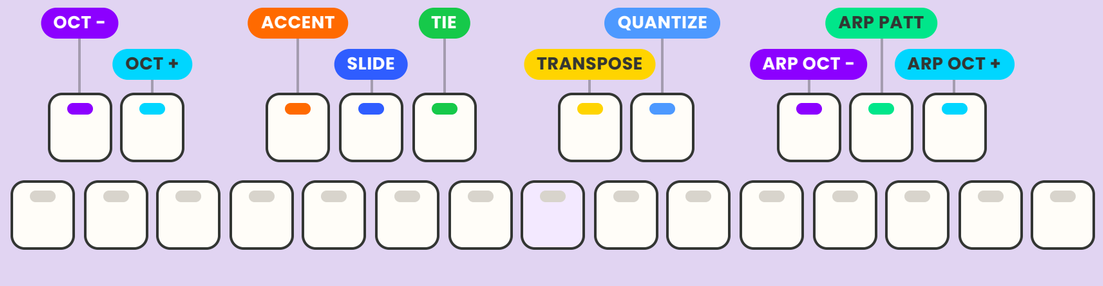


| | |
|---|---|
| **Keys** | play; overlapping notes **slide**. Top-row functions: with CHOMPI held |
| **LOOP** | record on / off · hold 2 s: clear the pattern |
| **Recording, running** | notes go in, held notes tie. CHOMPI + accent / slide / tie: on the step playing |
| **Recording, stopped** | **note entry**: each note fills the next step. CHOMPI + the blinking step: a rest |
| QUANTIZE | on / off · CHOMPI + white key 1–3: grid 1/16, 1/8, 1/4 · hold 2 s: for good |
| **CHOMPI + PLAY** | **arpeggiator** on / off · **CHOMPI + LOOP:** latch |
| ARP OCT PATT | octaves below / above (0–2); up, down, up-down, random, as played |
| TRANSPOSE | keys transpose the pattern (or the arp); tap a key twice to leave |
| **CHOMPI, tapped twice** | switch to the **drums** (in either mode) |

### PATTERNS & THE CARD

16 patterns, **A** and **B** sides; each holds a bassline **and** a drum part, and the two sides can play **different patterns**

Edits save to `/X0X` by themselves, unless write-protected

**Import a MIDI file**: name it after a pattern (`3B.mid`), put it in `/X0X/IMPORT` on the card and power on. Channel 10 becomes the drums, everything else the bassline

### BASS & DRUMS

Both always play: **LOOP** (step mode) or **CHOMPI tapped twice** picks which you edit

**CHOMPI + LOOP** (step mode): mute the side you're on

Volume Pg 3: **mix** · **CHOMPI: effects balance** · Pg 4: **compressor** · **CHOMPI:** each kick ducks the rest

### LIGHTS

- **Steps** red; accent bright, tie dim · **patterns** **A** / **B**, **magenta** / **orange** protected
- **CHOMPI** and **LOOP** purple on the bass, amber on the drums; LOOP blinks if muted
- **PLAY** green while running · **LOOP** red while recording



Not an official CHOMPI Club release

# x0x drums

A TR-606: BD SD LT HT CY OH CH Knobs act on the **selected voice** (the last voice key) unless noted.
Get here: **LOOP** in step mode, or **CHOMPI tapped twice** · **CHOMPI held:** every second control

## 1 VOICE & LFO

- **Pg 1** **Level** · **CHOMPI:** pan
- **Pg 2** **Accent Level** · **CHOMPI:** drum part length
- **Pg 3** **LFO Speed**, 4 bars … 1/32 · **CHOMPI:** shape
- **Pg 4** **LFO Depth**, this voice · **CHOMPI:** target

One LFO, in time; each voice picks what it moves (below).

## 2 ATTACK

- **Pg 1** **Attack**: click / snap **CHOMPI + Turn:** Tuning ±24 st
- **Pg 2** **Kit Filter**: low-pass left, high-pass right, off in the middle **CHOMPI + Turn:** Resonance

## 3 DECAY

- **Pg 1** **Decay** **CHOMPI + Turn:** Feedback FM, grit to glitch
- **Pg 2** **Filter Envelope**: each hit sweeps the kit filter **CHOMPI + Turn:** its Decay

## 4 EFFECTS

- **Pg 1** **Reverb Send** · **CHOMPI:** size
- **Pg 2** **Delay Send** · **CHOMPI:** delay time
- **Pg 3** **Bit Crush** · **CHOMPI:** rate
- **Hold** **+ a voice key**: that voice in / out of the reverb & delay

## 5 TEMPO

- **Turn** **Tempo**
- **CHOMPI:** Swing
- **Press** **Tap Tempo**


## 6 VOLUME

- **Pg 1** **Volume** · **CHOMPI:** drum distortion
- **Pg 3** **Mix** drums ↔ bass · **CHOMPI:** effects balance
- **Pg 4** **Compressor** · **CHOMPI:** kick sidechain

No tempo page on this side: the purple knob has it.


Voice pages light in the **voice's colour**. The kit filter, its envelope, the effects and the volume knob act on **all** the drums · **CHOMPI + Push 2 s:** reset every page of knobs 1–3.

## Step Mode — toggle up — program each voice on its page

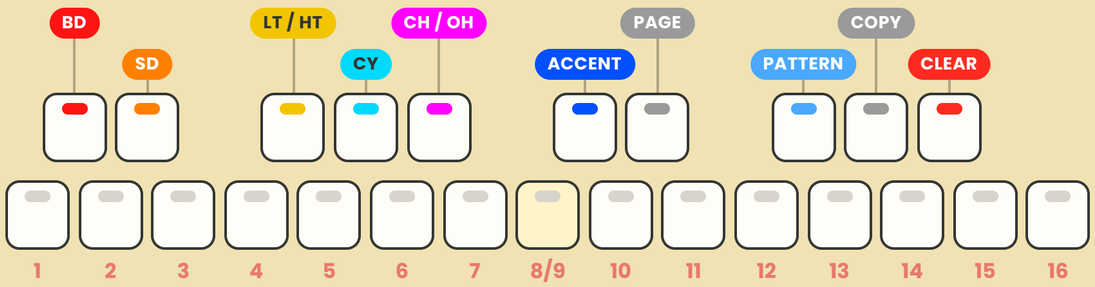


| | |
|---|---|
| **Voice key** | that voice's page; the toms' and hats' keys alternate (again: the other) |
| **Step key** | the voice's hit on / off; others' hits dim, accented ones tinted blue |
| ACCENT | the accent page · **hold 2 s**: unmute every voice |
| **CHOMPI + voice** | **mute** / unmute (it blinks) |
| **Voice held 2 s** | **solo**: the rest muted; bring them back with CHOMPI. Again when it's the only one: all back |
| PATTERN | the **drums'** pattern page: **A**, or **B** with CHOMPI held (lit: slots with drum parts). Running, a pick waits for the end of the drum part; again: now |
| **PATTERN held + key** | on the page: **both** drums and bass there, together at the bar |
| **PATTERN held 2 s** | **write protect**, while stopped: play freely, nothing saves |
| **Pattern key held 2 s** | export every pattern as MIDI to `/X0X/MIDI` |
| COPY **+ step key** | copy the **drum part** there (its bassline kept) · **+ PATTERN**: to its other side, A ⇄ B |
| CLEAR | tap: this voice's hits (or the accents) · hold 1 s: the whole drum part |
| COPY + CLEAR | **undo** the last clear (again: redo) |
| **LOOP** | switch to the **bass** · **CHOMPI + LOOP:** mute / unmute the drums |

## Live Mode — toggle down — every voice its own key

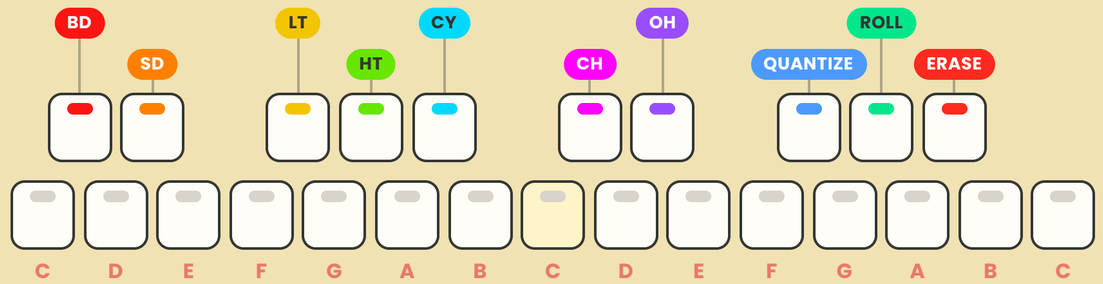


| | |
|---|---|
| **Voice keys** | play, and record. Mute and solo as in step mode |
| **Bottom row** | the last voice **pitched**, C major an octave either way; recorded at that pitch |
| **LOOP** | record on / off · hold 2 s: clear the drum part · **CHOMPI + LOOP:** accent your hits |
| QUANTIZE | tap: on / off (off keeps your timing) · held + key 1–3: grid 1/16, 1/8, 1/4 |
| ROLL | held + voice keys: they repeat in time · held + key 1–5: 1/8, 1/8T, 1/16, 1/16T, 1/32 |
| ERASE | held + voice keys while it runs: their hits wiped as they pass |
| **CHOMPI, tapped twice** | switch to the **bass** |

### LFO TARGETS · CHOMPI + KNOB 1, PG 4

**1** off · **2** level: dips it, as far as silent · **3** pan: swings it either side

**4** tuning: an octave either way · **5** filter: its own low-pass, swept down from open

**6** feedback FM: adds grit · **7** decay: longer or shorter, hit by hit

Shapes (CHOMPI + Pg 3): off, triangle, ramp up, ramp down, sample & hold. **The LFO restarts when you press PLAY**, so it always lines up with the start of the pattern

### SOUND

A drum part in every pattern, with its **own length** (polymeters) and its own pattern

Accent: up to 3× as loud · a closed hat chokes the open one

A plate reverb; the delay is the bass's, so the echoes line up

MIDI channel 10, GM notes: BD 36 · SD 38 · LT 45 · HT 50 · CY 49 · OH 46 · CH 42

### LIGHTS

- **Voice keys** in their colours; the selected one bright; each flashes as it plays
- **Muted**: blinks slowly · **whole kit back**: all flash white
- **Accent** blue · **roll** green · **erase** red, with the voices it's erasing
- **CHOMPI** amber on this side; it flashes on the beat



Not an official CHOMPI Club release