x0x bass

A 303-style voice: diode ladder filter, accent, slide and tie · the TR-606 is **overleaf**
Toggle up: **step mode** · down: **live mode** · **CHOMPI held:** every second control

1 WAVE

Pg 1 — **Saw / Square** · **CHOMPI + Turn:** Pulse Width

Pg 2 — **Pattern Length** · **CHOMPI + Turn:** Tuning ±1 st

2 ENV MOD

Turn — **Env Mod**: how far the filter sweeps

CHOMPI + Turn: Accent Level

As on a 303: little below 12 o'clock, a lot above.

3 DECAY

Turn — **Decay**: the sweep's length

CHOMPI + Turn: Slide Time

4 EFFECTS

Pg 1 — **Delay Mix** · **CHOMPI:** synced time
Push + turn: free time, with a tape swoop

Pg 2 — **Tape Feedback** · **CHOMPI:** tone

Pg 3 — **Chorus → Flanger** · **CHOMPI:** width

Pg 4 — **Bit Crush** · **CHOMPI:** rate

5 FILTER

Turn — **Cutoff**

CHOMPI: Resonance

Press — **Tap Tempo**

Its two lights flash the eighth notes, left and right.

6 VOLUME

Pg 1 — **Volume** · **CHOMPI:** drive


Pg 2 — **Tempo** · **CHOMPI:** swing

Pg 3 — **Mix** drums ↔ bass · **CHOMPI:** effects balance

Pg 4 — **Compressor** · **CHOMPI:** kick sidechain


Press a knob: next page · **CHOMPI + Press:** reset that page · **CHOMPI + Push 2 s:** reset every page (knobs 1–3) · Knobs **accelerate**: click slowly for fine steps, spin for the whole range.

Step Mode — toggle up — build the pattern one step at a time

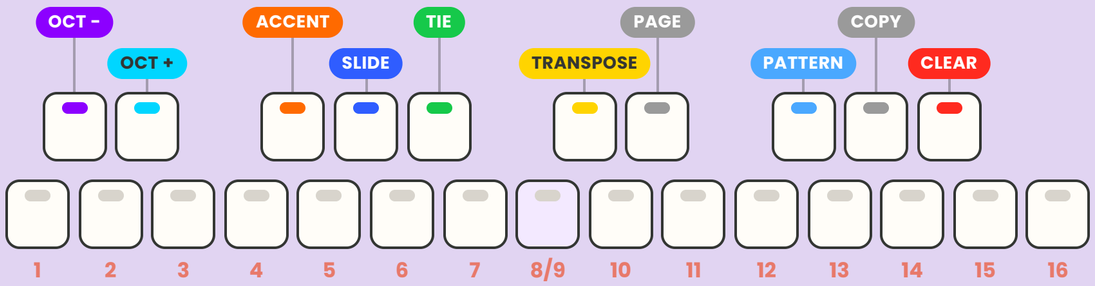

Step key	press once to select a step, again to turn it on or off. Middle C is step 8 or 9, depending on which page you're viewing
CHOMPI + any key	set the selected step's note, using the white and black keys like a regular keyboard
OCT - … TIE	a page: the step keys toggle octave down / up, accent, slide or tie on each step
TRANSPOSE	press any key to transpose the pattern. To leave, double-tap any key or hold C#4 for 2 s
PATTERN	the bass's pattern page: **A**, or **B** with CHOMPI held. Running, a pick waits for the bar; again: now
PATTERN held + key	on the page: **both** bass and drums there, together at the bar
PATTERN held 2 s	**write protect**, while stopped: play freely, nothing saves
Pattern key held 2 s	export every pattern as MIDI to `/X0X/MIDI`
COPY **+ step key**	copy the pattern there · **+ PATTERN**: to its other side, A ⇄ B
CLEAR	tap: the selected step · hold 1 s: the pattern
LOOP	switch to the **drums** · **CHOMPI + LOOP:** mute / unmute the bass

Live Mode — toggle down — play, record, arpeggiate

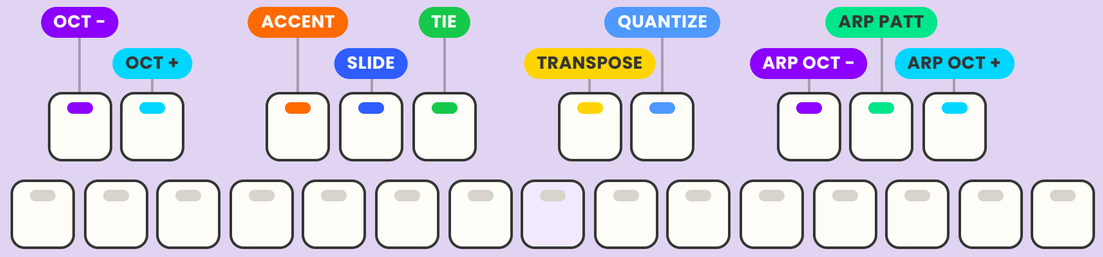

Keys	play; overlapping notes **slide**. Top-row functions: with CHOMPI held
LOOP	record on / off · hold 2 s: clear the pattern
Recording, running	notes go in, held notes tie. CHOMPI + accent / slide / tie: on the step playing
Recording, stopped	**note entry**: each note fills the next step. CHOMPI + the blinking step: a rest
QUANTIZE	on / off · CHOMPI + white key 1–3: grid 1/16, 1/8, 1/4 · hold 2 s: for good
CHOMPI + PLAY	**arpeggiator** on / off · **CHOMPI + LOOP:** latch
ARP OCT PATT	octaves below / above (0–2); up, down, up-down, random, as played
TRANSPOSE	keys transpose the pattern (or the arp); tap a key twice to leave
CHOMPI, tapped twice	switch to the **drums** (in either mode)

PATTERNS & THE CARD

16 patterns, **A** and **B** sides; each holds a bassline **and** a drum part, and the two sides can play **different patterns**

Edits save to `/X0X` by themselves, unless write-protected

Import: `3B.mid` into `/X0X/IMPORT`, then power on (drums: channel 10)

BASS & DRUMS

Both always play: **LOOP** (step mode) or **CHOMPI tapped twice** picks which you edit

CHOMPI + LOOP (step mode): mute the side you're on

Volume Pg 3: **mix** · **CHOMPI: effects balance** · Pg 4: **compressor** · **CHOMPI:** each kick ducks the rest

LIGHTS

Steps red; accent bright, tie dim · **patterns** **A** / **B**, **magenta** / **orange** protected

CHOMPI and **LOOP** purple on the bass, amber on the drums; LOOP blinks if muted

PLAY green while running · **LOOP** red while recording

Not an official CHOMPI Club release

x0x drums

A TR-606: BD SD LT HT CY OH CH Knobs act on the **selected voice** (the last voice key) unless noted.
Get here: **LOOP** in step mode, or **CHOMPI tapped twice** · **CHOMPI held:** every second control

1 VOICE & LFO

- Pg 1 — **Level** · **CHOMPI:** pan
- Pg 2 — **Accent Level** · **CHOMPI:** drum part length
- Pg 3 — **LFO Speed**, 4 bars … 1/32 · **CHOMPI:** shape
- Pg 4 — **LFO Depth**, this voice · **CHOMPI:** target

One LFO, in time; each voice picks what it moves (below).

2 ATTACK

- Pg 1 — **Attack**: click / snap · **CHOMPI + Turn:** Tuning ±24 st
- Pg 2 — **Kit Filter**: low-pass left, high-pass right, off in the middle · **CHOMPI + Turn:** Resonance

3 DECAY

- Pg 1 — **Decay** · **CHOMPI + Turn:** Feedback FM, grit to glitch
- Pg 2 — **Filter Envelope**: each hit sweeps the kit filter · **CHOMPI + Turn:** its Decay

4 EFFECTS

- Pg 1 — **Reverb Send** · **CHOMPI:** size
- Pg 2 — **Delay Send** · **CHOMPI:** delay time
- Pg 3 — **Bit Crush** · **CHOMPI:** rate
- Hold — **+ a voice key**: that voice in / out of the reverb & delay

5 TEMPO

- Turn — **Tempo**
- **CHOMPI:** Swing
- Press — **Tap Tempo**


6 VOLUME

- Pg 1 — **Volume** · **CHOMPI:** drum distortion
- Pg 3 — **Mix** drums ↔ bass · **CHOMPI:** effects balance
- Pg 4 — **Compressor** · **CHOMPI:** kick sidechain

No tempo page on this side: the purple knob has it.


Voice pages light in the **voice's colour**. The kit filter, its envelope, the effects and the volume knob act on **all** the drums · **CHOMPI + Push 2 s:** reset every page of knobs 1–3.

Step Mode — toggle up — program each voice on its page

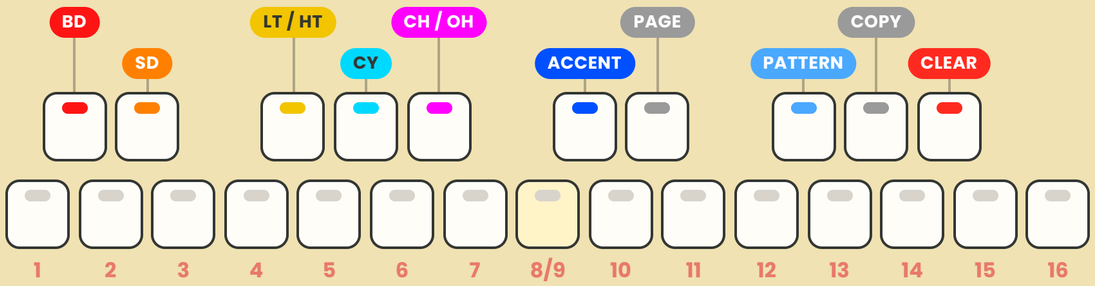

Voice key	that voice's page; the toms' and hats' keys alternate (again: the other)
Step key	the voice's hit on / off; others' hits dim, accented ones tinted blue
ACCENT	the accent page · **hold 2 s**: unmute every voice
CHOMPI + voice	**mute** / unmute (it blinks)
Voice held 2 s	**solo**: the rest muted; bring them back with CHOMPI. Again when it's the only one: all back
PATTERN	the **drums'** pattern page (lit: slots with drum parts) · **held + key**: both sides
COPY **+ step key**	copy the **drum part** there (its bassline kept) · **+ PATTERN**: A ⇄ B
CLEAR	tap: this voice's hits (or the accents) · hold 1 s: the whole drum part
LOOP	switch to the **bass** · **CHOMPI + LOOP:** mute / unmute the drums

Live Mode — toggle down — every voice its own key

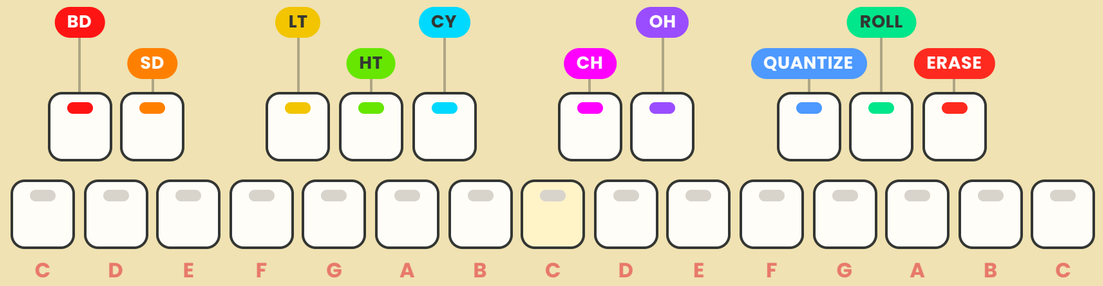

Voice keys	play, and record. Mute and solo as in step mode
Bottom row	the last voice **pitched**, C major an octave either way; recorded at that pitch
LOOP	record on / off · hold 2 s: clear the drum part · **CHOMPI + LOOP:** accent your hits
QUANTIZE	tap: on / off (off keeps your timing) · held + key 1–3: grid 1/16, 1/8, 1/4
ROLL	held + voice keys: they repeat in time · held + key 1–5: 1/8, 1/8T, 1/16, 1/16T, 1/32
ERASE	held + voice keys while it runs: their hits wiped as they pass
CHOMPI, tapped twice	switch to the **bass**

LFO TARGETS · CHOMPI + KNOB 1, PG 4

1 off · **2** level: dips it, as far as silent · **3** pan: swings it either side

4 tuning: an octave either way · **5** filter: its own low-pass, swept down from open

6 feedback FM: adds grit · **7** decay: longer or shorter, hit by hit

Shapes: off, triangle, ramp up, ramp down, sample & hold; from the top of the bar on PLAY

SOUND

A drum part in every pattern, with its **own length** (polymeters) and its own pattern

Accent: up to 3× as loud · a closed hat chokes the open one

A plate reverb; the delay is the bass's, so the echoes line up

MIDI channel 10, GM notes: BD 36 · SD 38 · LT 45 · HT 50 · CY 49 · OH 46 · CH 42

LIGHTS

- **Voice keys** in their colours; the selected one bright; each flashes as it plays
- **Muted**: blinks slowly · **whole kit back**: all flash white
- **Accent** blue · **roll** green · **erase** red, with the voices it's erasing
- **CHOMPI** amber on this side; it flashes on the beat

Not an official CHOMPI Club release