# x0x bass

A 303-style voice: diode ladder filter, accent, slide and tie · the TR-606 is **overleaf**
Toggle up: **step mode** · down: **live mode** · **CHOMPI held:** every second control

## 1 WAVE

- Pg 1 — **Saw / Square** · **CHOMPI + Turn:** Pulse Width
- Pg 2 — **Pattern Length** · **CHOMPI + Turn:** Tuning ±1 st · **Push + Turn:** Step scale 1/16 · 1/16T · 1/8T (16 steps ↔ 12)

## 2 ENV MOD

- Turn — **Env Mod**: how far the Filter sweeps
- **CHOMPI + Turn:** Accent Level

## 3 DECAY

- Turn — **Decay**: the sweep's length
- **CHOMPI + Turn:** Slide Time

## 4 FX

- Pg 1 — **Delay Mix** · **CHOMPI:** synced time · *Push + turn*: free time, with a tape swoop
- Pg 2 — **Tape Feedback** · **CHOMPI:** tone
- Pg 3 — **Chorus → Flanger** · **CHOMPI:** width
- Pg 4 — **Bit Crush** · **CHOMPI:** rate

## 5 FILTER

- Turn — **Cutoff**
- **CHOMPI:** Resonance
- Press — **Tap Tempo**


## 6 VOLUME

- Pg 1 — **Volume** · **CHOMPI:** distortion · **CHOMPI + Press:** Metronome on/off
- Pg 2 — **Tempo** · **CHOMPI:** swing
- Pg 3 — **Mix** drums ↔ bass · **CHOMPI: FX mix** drums ↔ bass
- Pg 4 — **Compressor** · **CHOMPI:** kick sidechain

Press a knob: next page · **CHOMPI + Press:** reset that page (volume knob: metronome) · **CHOMPI + Push 2s:** reset every page (knobs 1–3) · Knobs **accelerate**: turn slowly for fine steps, quickly for the whole range.

## Step Mode — toggle up


build the pattern one step at a time

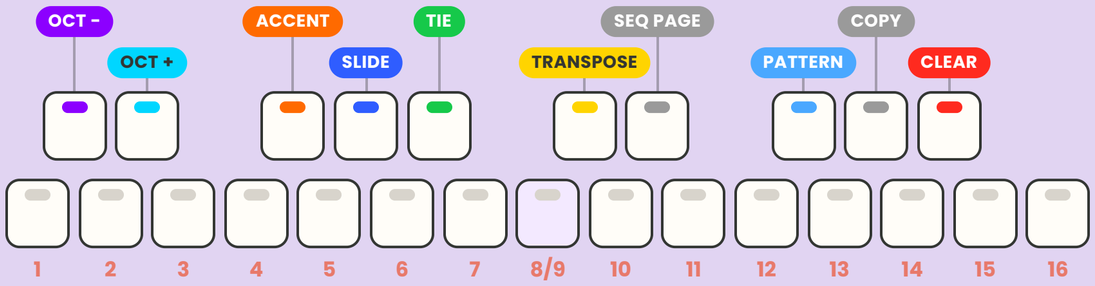


| | |
|---|---|
| **Step key** | Press ONCE to select step, again to turn it on/off. **Middle C** is step 8 or 9, depending on which **SEQUENCER PAGE** you're viewing (triplets: keys 1–12 are steps 1–12) · **Hold SEQ PAGE + turn knob 5**: shift the sequence a step each way · **Hold a step + turn knob 5**: microtiming, early/late (press knob 5: reset) |
| **CHOMPI + any key** | Set the selected step's note while **holding CHOMPI**, using the white and black keys like a regular piano/keyboard |
| OCT - … TIE | Press to view each parameter's page: the step keys toggle **OCT-/+**, **ACCENT**, **SLIDE** or **TIE** on each step in the sequence · **TIE** again: **RATCHET** page, steps cycle 1–4 hits |
| TRANSPOSE | Press any key to transpose the pattern. To exit this view, double-tap any key or hold **Middle C#** for 2 s |
| PATTERN | The pattern menu: each slot has an **A** [default] and **B** pattern. To view the **B** slots hold **CHOMPI**. If the sequencer is running, tap any pattern to cue it, or simply double-tap a slot to change pattern immediately. |
| **PATTERN held + key** | Holding the **PATTERN** key and selecting a slot plays **both** bass and drums from that slot. Otherwise select drum and bass patterns freely. |
| **PATTERN held 2 s** | **Write Protect ON/OFF** (only while sequencer is stopped) |
| **Pattern key held 2 s** | Export every pattern as MIDI to `/X0X/MIDI` |
| COPY **+ pattern slot** | Copy **bass pattern;** repeat on another pattern slot pastes the pattern · **Tap COPY**, then a step: pastes the selected step · **COPY + PATTERN**: Copy to its other side, **A** ⇄ **B** |
| CLEAR | Tap: deletes currently selected step · Hold 1s: deletes current pattern |
| COPY + CLEAR | Undo the last clear (again: redo) |
| **LOOP** | Toggle to the **drums** · **CHOMPI + LOOP:** mute/unmute the bass |

## Live Mode — toggle down

play, record, arpeggiate

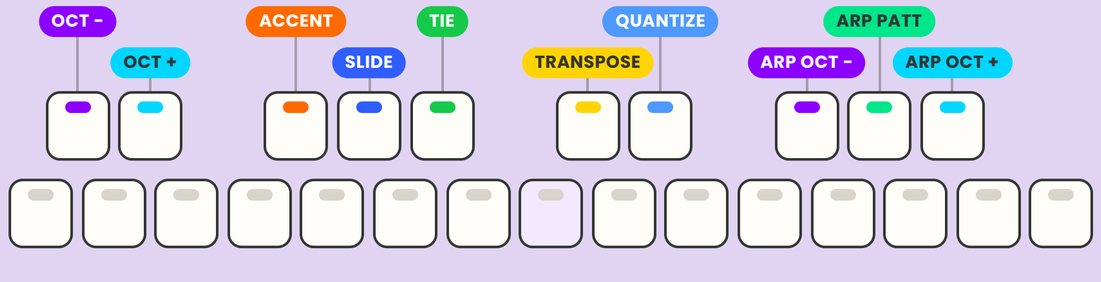


| | |
|---|---|
| **Keys** | Free play (overlapping notes **SLIDE**). **Hold CHOMPI** to show menu options. |
| **LOOP** | **RECORD** ON/OFF· Hold 2s: to clear the bass sequence |
| **Recording, running** | Records to sequencer in real time (held notes will **TIE**). **CHOMPI + ACCENT/SLIDE/TIE**: input these parameters in real time. **CHOMPI + white key (13–15)**: **RATCHET** held notes ×2/×3/×4 (again: off). |
| **Recording, stopped** | **Note input**: fills the sequencer with each subsequent note played. **CHOMPI +** the flashing step: inputs a **REST.** |
| QUANTIZE | ON/OFF · **CHOMPI + white key (1–3)**: 1/16, 1/8, 1/4 · Hold 2s: "Locks in" the quantized pattern (otherwise unquantized performance returns when quantization is turned OFF). |
| **CHOMPI + PLAY** | **ARPEGGIATOR** ON/OFF · **CHOMPI + LOOP:** Latch *[Tip: using* **RECORD** *while arpeggiator is running overwrites sequenced notes]* |
| ARP OCT PATT | OCT DOWN (-1/-2) and UP (+1/+2); **ARP PATTERNS:** Up, Down, Up-Down, Random, As Played |
| TRANSPOSE | Keys transpose the **SEQUENCE** (or the **ARP**); tap any key twice to leave |
| **CHOMPI double-tap** | Switches to the **drums** *[Tip: this also works in* ***Step Mode****]* |

### PATTERNS & THE CARD

16 patterns, **A** and **B** sides; each holds a bassline **and** a drum part, and the two sides can play **different patterns**

Edits save to `/X0X` by themselves, unless write-protected

**Import** a MIDI file: name it after a pattern (`3B.mid`), put it in `/X0X/IMPORT` on the card and power on. Channel 10 becomes the drums, everything else the bassline

### BASS & DRUMS

Both are always playing/stopped: use **LOOP** (in **Step Mode**) or **CHOMPI double-tap** to switch between bass/drums edit

**CHOMPI + LOOP** (**Step Mode**): mutes the current side you're on

**VOLUME** knob: Pg. 3: **Mix** · **CHOMPI: FX Balance**
Pg. 4: **Compressor** · **CHOMPI: Side-Chain**: kick ducks the rest

### LIGHTS

- **Steps** red; accent bright, tie dim · **patterns A** / **B**, **magenta** / **orange** protected
- **CHOMPI** and **LOOP** purple on the bass, amber on the drums; LOOP blinks if muted
- **PLAY** green while running · **LOOP** red while recording



Not an official CHOMPI Club release

# x0x drums

A TR-606: BD SD LT HT CY OH CH Knobs act on the **selected voice** unless noted.
Switch to/from bass: **LOOP** (**Step Mode**) or **CHOMPI double-tap** · **CHOMPI held:** alt. control

## 1 VOICE & LFO

- **Pg 1** **Level** · **CHOMPI:** Pan
- **Pg 2** **Accent Level** · **CHOMPI:** drum part Length **Push + Turn:** Step scale 1/16 · 1/16T · 1/8T (16 steps ↔ 12)
- **Pg 3** **LFO Speed**, 4 bars … 1/32 · **CHOMPI:** Shape
- **Pg 4** **LFO Depth** (per voice) · **CHOMPI:** LFO Target

One LFO, in time; each voice picks what the LFO targets *(see below)*.

## 2 ATTACK

- **Pg 1** **Attack**: Snap/click **CHOMPI + Turn:** Tuning ±24 st
- **Pg 2** **Kit Filter**: Low-Pass (left)/OFF (center)/ High-Pass (right) **CHOMPI + Turn:** Resonance

## 3 DECAY

- **Pg 1** **Decay** **CHOMPI + Turn:** Feedback FM
- **Pg 2** **Filter Envelope**: each hit sweeps the kit filter **CHOMPI + Turn:** Filter Env Decay

## 4 EFFECTS

- **Pg 1** **Reverb Send** · **CHOMPI:** Size
- **Pg 2** **Delay Send** · **CHOMPI:** Delay time
- **Pg 3** **Bit Crush** · **CHOMPI:** Rate
- **Hold** **+ a black key**: drum voice in/out of Reverb & Delay send mix

## 5 TEMPO

- **Turn** **Tempo**
- **CHOMPI:** Swing
- **Press** **Tap Tempo**


## 6 VOLUME

- **Pg 1** **Volume** · **CHOMPI:** Distortion **CHOMPI + Press:** Metronome on/off
- **Pg 3** **Mix** drums ↔ bass · **CHOMPI:** **FX Mix**: drums ↔ bass
- **Pg 4** **Compressor** · **CHOMPI:** Kick Side-Chain

No tempo page on this side: the purple knob controls tempo.


Voice pages light in the **voice's colour**. The kit filter, its envelope, the effects and the volume knob act on **all** the drums · **Knobs 1-3**: **CHOMPI + Push for 2s** reset every page on that knob.

## Step Mode — toggle up — program each voice on its page

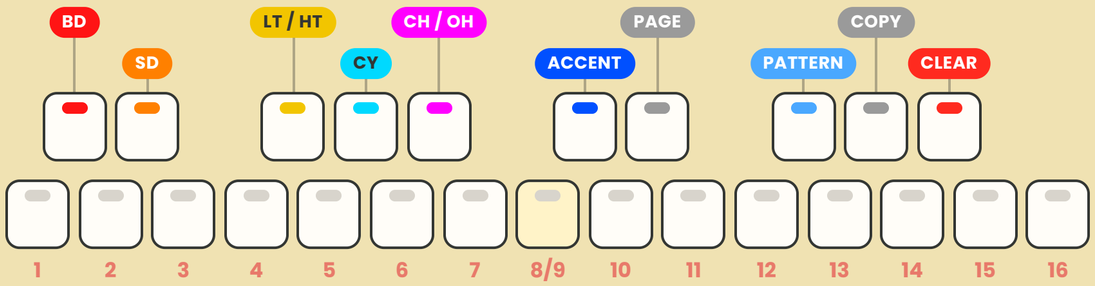


| | |
|---|---|
| **Voice key** | Sequence page (per voice). Tap **LT/HT and CH/OH** keys to toggle voices |
| **Step key** | Step ON/OFF (per voice); dim white LEDs: other voices in the sequence · **Hold PAGE + turn knob 5**: shift the drum part a step each way · **Hold a step + turn knob 5**: microtiming, early/late (press knob 5: reset) |
| ACCENT | Input **ACCENT** events · again: the voice's **RATCHET** page (1–4 hits) · **Hold 2s**: Unmutes every voice |
| **CHOMPI + voice** | **Mute**/**Unmute** (it blinks when muted) |
| **Voice held 2 s** | **Solo** that voice; unmute other voices with **CHOMPI + voice(s)**. To **Un-Solo**: Hold voice key for 2s to bring back all voices. |
| PATTERN | The pattern menu (shows slots with drum parts): each slot has an **A** [default] and **B** pattern. To view the **B** slots hold **CHOMPI**. If the sequencer is running, tap any pattern to cue it (it changes at the end of the drum part), or double-tap a slot to change pattern immediately. |
| **PATTERN held + key** | Holding the **PATTERN** key and selecting a slot plays **both** bass and drums from that slot. Otherwise select drum and bass patterns freely. |
| **PATTERN held 2 s** | **Write Protect ON/OFF** (only while sequencer is stopped) |
| **Pattern key held 2 s** | Export every pattern as MIDI to `/X0X/MIDI` |
| COPY **+ pattern slot** | Copy **drum pattern;** repeat on another pattern slot pastes the pattern · **Tap COPY**, a step, then another: pastes it · **COPY + PATTERN**: Copy to its other side **A** ⇄ **B** |
| CLEAR | Tap: delete all steps for that voice · Hold 1s: delete entire drum sequence |
| COPY + CLEAR | Undo the last clear (again: redo) |
| **LOOP** | Toggle to the **bass** · **CHOMPI + LOOP:** mute/unmute the drums |

## Live Mode — toggle down — every voice its own key

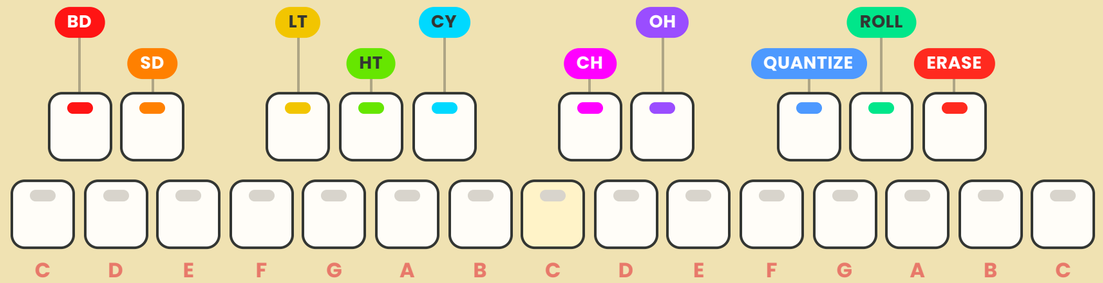


| | |
|---|---|
| **Voice keys (black)** | Free play; Mute and solo works the same as in **Step Mode** |
| **Note keys (white)** | Choose pitch (per voice) *[Tip: in* **RECORD** *voices are recorded at whatever pitch they are played]* |
| **LOOP** | **RECORD ON/OFF** · Hold 2s: clears the drum sequence · **CHOMPI + LOOP:** add **ACCENTs** to sequence (only in real time recording) |
| QUANTIZE | ON/OFF · **CHOMPI + white key (1–3)**: 1/16, 1/8, 1/4 · Hold 2s: "Locks in" the quantized pattern (otherwise unquantized performance returns when quantization is turned OFF). |
| ROLL | **Hold + voice keys**: hits repeat in time · **Hold + white keys (1–5)**: select repeat rate: 1/8, 1/8T, 1/16, 1/16T, 1/32 (records as **RATCHETs**) |
| ERASE | **Hold + voice key(s)** while sequencer runs: clears voice as it plays |
| **CHOMPI, tapped twice** | Switches to the **bass** *[Tip: also works in* ***Step Mode****]* |

### LFO TARGETS · CHOMPI + KNOB 1, PG 4

**1** off · **2** level · **3** pan **4** tuning (+/- octave) · **5** filter: low-pass, swept down from open **6** feedback FM · **7** decay

LFO Shapes: off, triangle, ramp up, ramp down, sample & hold. The LFO restarts when you press PLAY, so it always lines up with the start of the pattern

### SOUND

In every pattern, each drum part has its **own length** (polymeters)

Accent: up to 3× as loud · a closed hat chokes the open one

A plate reverb; the delay is shared with the bass, so the echoes line up

MIDI channel 10, GM notes: BD 36 · SD 38 · LT 45 · HT 50 · CY 49 · OH 46 · CH 42

### LIGHTS

- **Voice keys** in their colours; the selected voice is bright; each voice LED flashes as it plays
- **Muted**: voice blinks slowly · **whole kit unmuted**: all flash white
- **Accent** blue · **roll** green · **erase** red, with the voices it's erasing
- **CHOMPI** amber on this side; it flashes on the beat



Not an official CHOMPI Club release