Station: pairing with the host and workstation setup

This is an informational translation. The matching Russian revision is authoritative. Step-by-step guide for Markiro Autonom technicians: pairing a station with the host on the local network with a code from the office, choosing the line, printers and print assignment, scanners and read check, sound, updating and unpairing the station.

Document code	MKR-INS-04
Revision	2026.11/01
Effective from	13 November 2026
Revision verification	https://markiro.app/d/MKR-INS-04/2026.11/01/13.11.2026
Language	EN
Operator	Богатырев Владислав Сергеевич
Contacts	https://markiro.app · hello@v-b.tech · +7 934 355-14-90

1. Purpose

This instruction covers how a technician or an administrator pairs a Markiro Autonom station with the host — the site's main computer — and sets up its workstation: label printers, scanners, sound and the program version. The operator's work at the station is covered in MKR-INS-01–03.

Note: The station interface is in Russian only. Screen labels are quoted in Russian, with an English translation in brackets. The screenshots use demo data: addresses, device names, the host fingerprint and codes on your site will differ.

2. Before you start


- The host is installed and running; the station and the host are on the same local network.
- You have administrator access to the Markiro Autonom office: the pairing code is created in the office, under “Устройства” (Devices).
- You know the addresses of network printers, or Windows printers and COM devices are connected.

If the station app is installed on the same computer as the host, it pairs with the host by itself — sections 3.1–3.4 can be skipped.

3. Pairing the station with the host

Step 1. 3.1. Go to network pairing


On its first start a station on its own computer does not find a host and shows “Служба хоста не отвечает” (The host service is not responding). Tap “Подключиться к хосту в сети” (Connect to the host on the network).

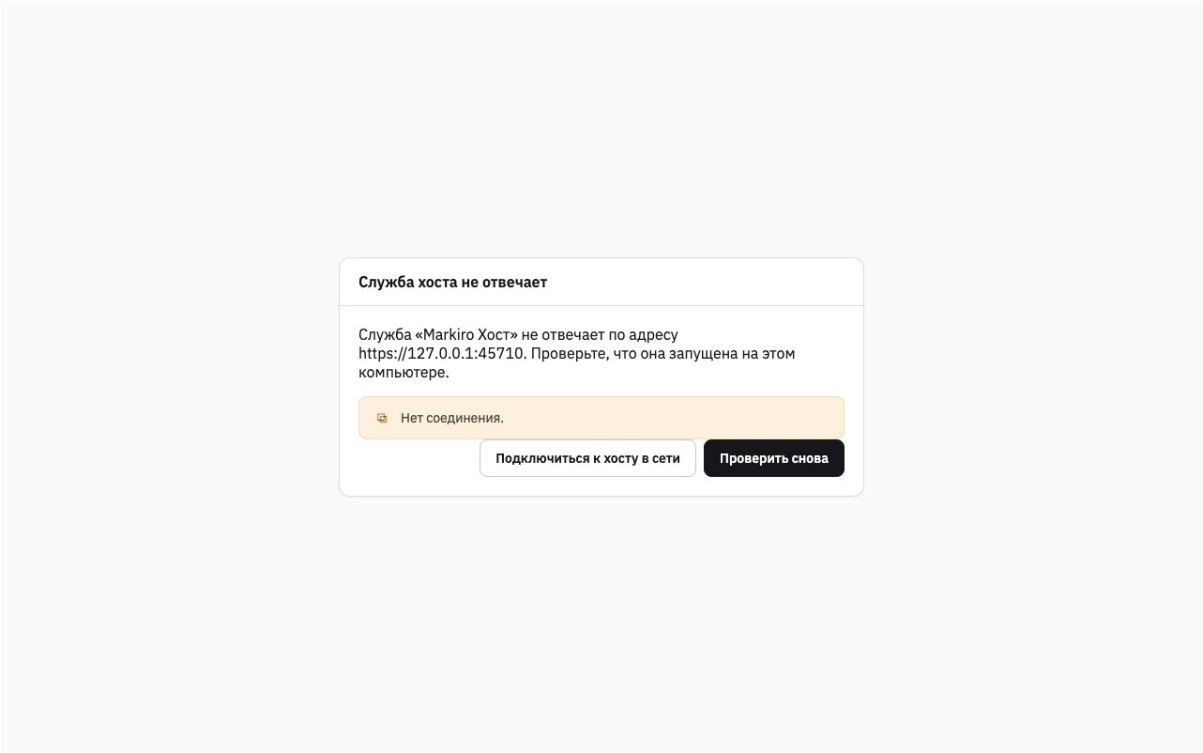

First start: there is no host on this computer

Step 2. 3.2. Scan the code from the office screen


In the office open “Устройства” (Devices) and click “Подключить устройство” (Connect a device): the office shows a pairing code for the scanner, the code itself, and the host's address and fingerprint. On the station set “Имя устройства” (Device name) — the station is called so in the office — point the station's scanner at the code on the office screen and tap “Подключить” (Connect).

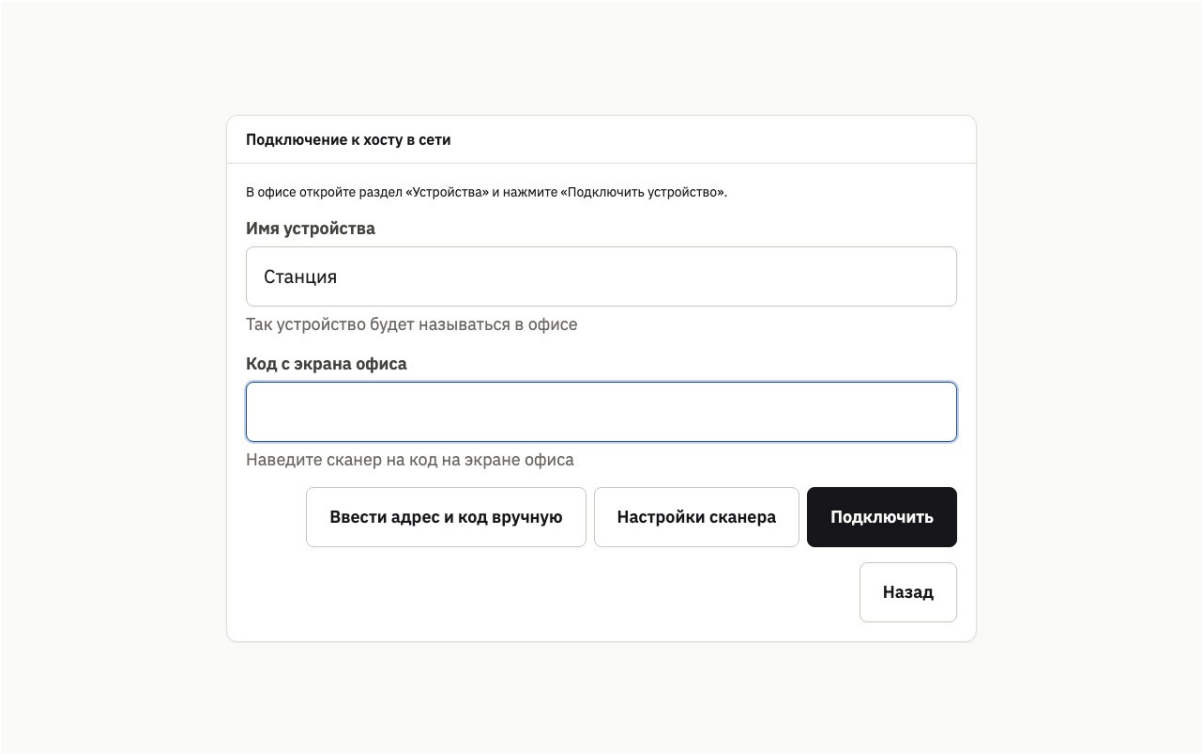

Connecting to the host on the network: device name and the code from the office screen

Step 3. 3.3. Or enter the address and code by hand


If the scanner cannot read the code from the screen, tap “Ввести адрес и код вручную” (Enter the address and code by hand). Enter “Адрес хоста” (Host address) — for example 192.168.1.10; port 45710 is added by itself — and the 10-character “Код подключения” (Pairing code) from the office screen, then “Далее” (Next).

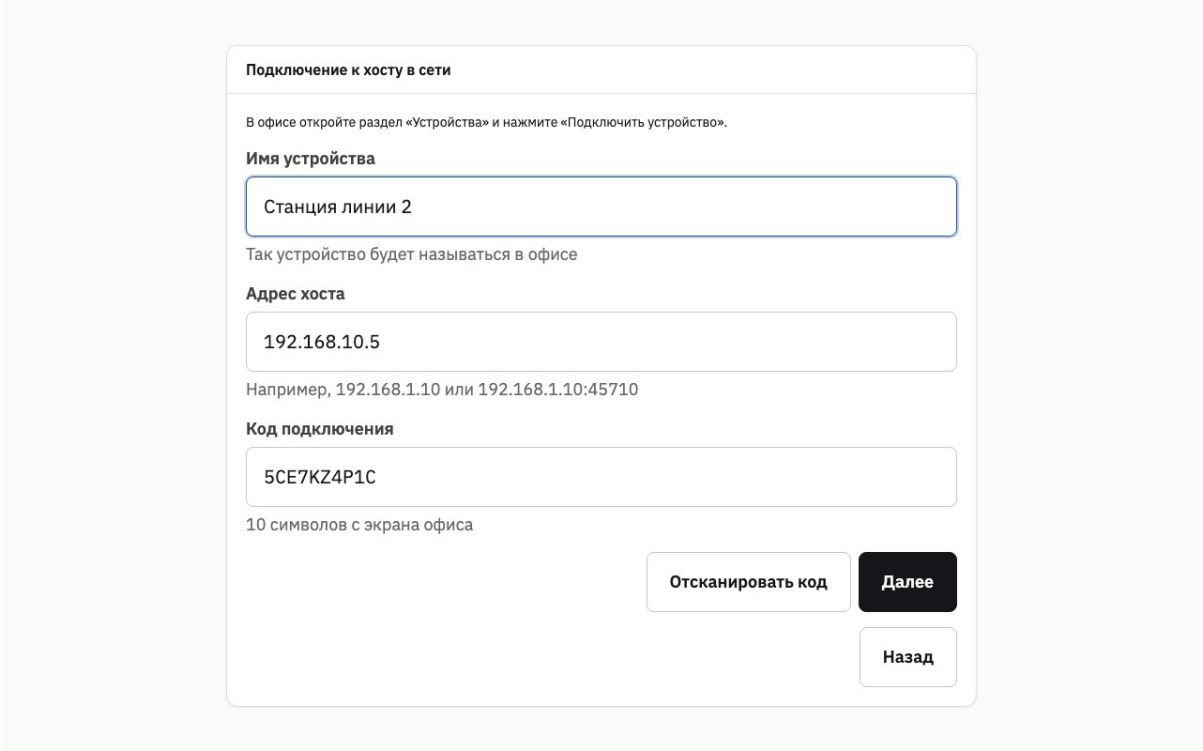

The host address and pairing code entered by hand

Step 4. 3.4. Compare the host fingerprint


The station shows the fingerprint of the host at that address. Compare it with the fingerprint on the office screen: the code goes to the host only if they match. Tap “Отпечаток совпадает” (Fingerprint matches); if the fingerprint differs, tap “Не совпадает” (Does not match) and check the host address.

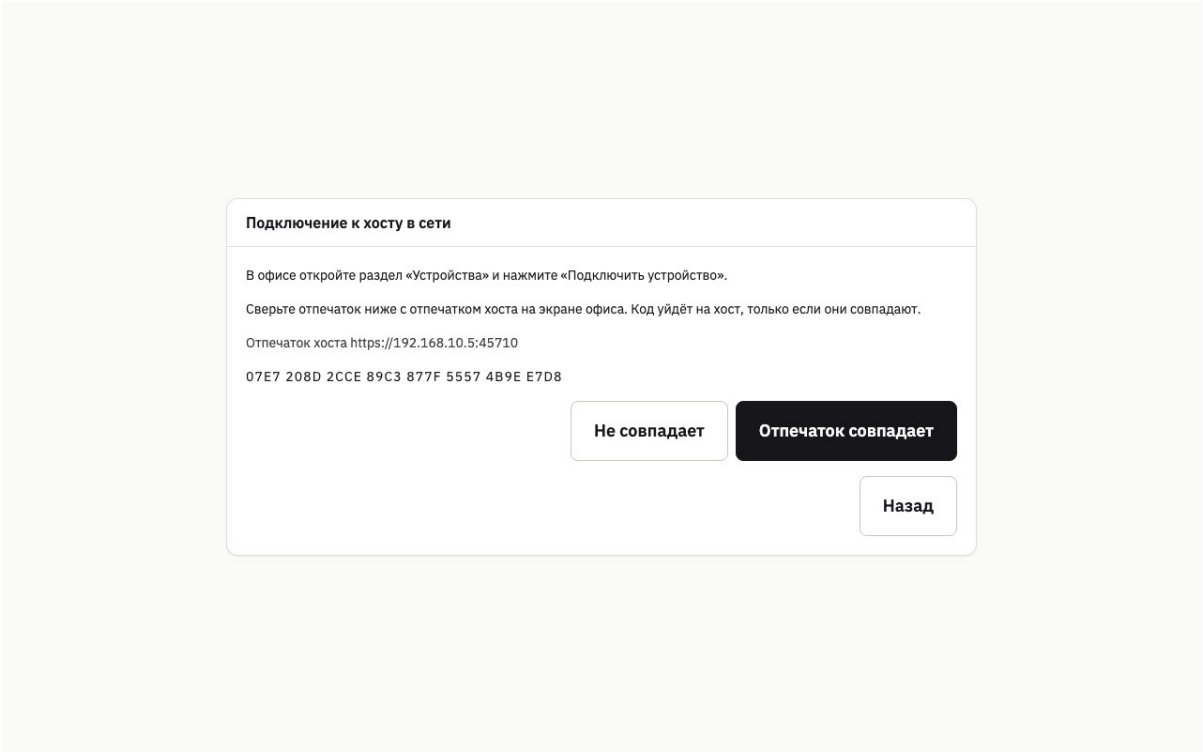

Comparing the host fingerprint before the code is sent

Step 5. 3.5. Choose the line

After pairing the station gets reference data from the host and shows “Выбор линии” (Line selection). Tap the line this station works on.

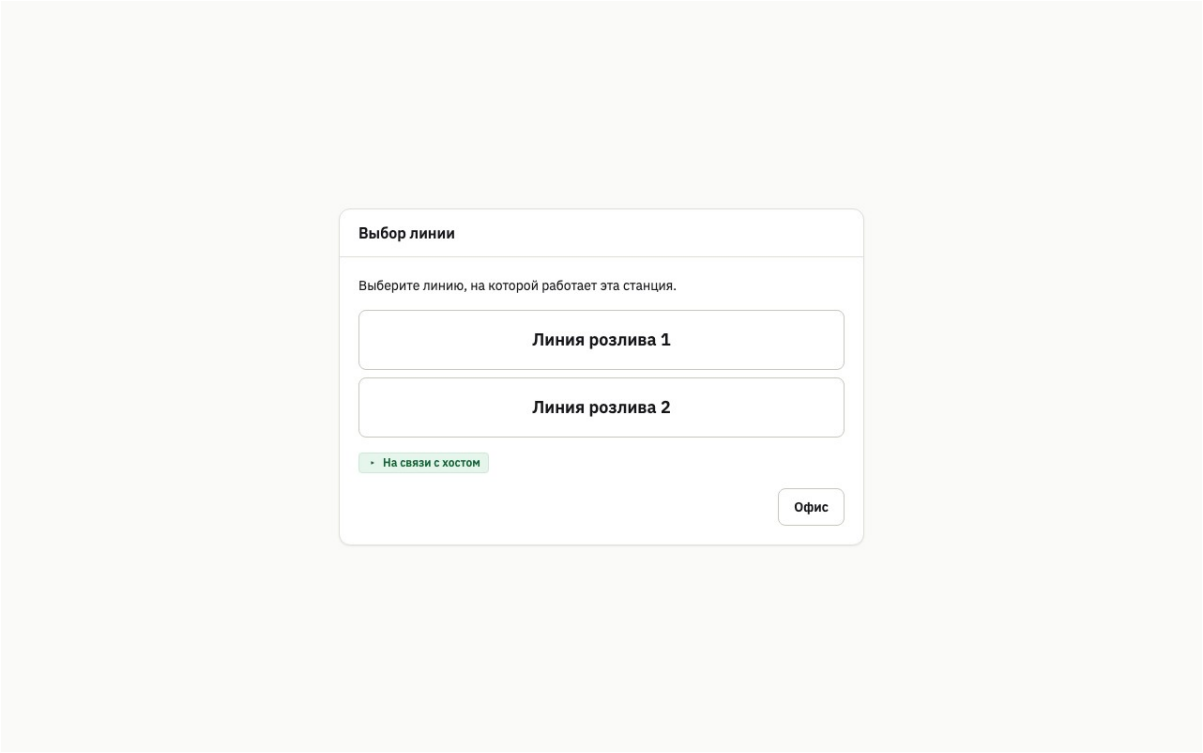

Choosing the station's line

Expected result: The station shows “Вход оператора” (Operator sign-in) with the station's and the line's names in the header.


Important: A pairing code is single-use and valid for a limited time; after five wrong attempts from any device it stops working. If the station says the code is wrong or expired, create a new code in the office.

4. Printers

The station's setup opens with the “Рабочее место” (Workstation) button on the “Смены линии” (Line shifts) screen (after an operator signs in). Its tabs are “Принтеры” (Printers), “Сканеры” (Scanners), “Звук” (Sound) and “Станция” (Station). Changes take effect after “Сохранить” (Save); while there are none, the bottom reads “Нет изменений” (No changes).

Step 1. Add a printer


On the “Принтеры” (Printers) tab tap “Добавить принтер” (Add printer). Set “Название” (Name) and “Подключение” (Connection): “Сеть” (Network) — the printer's address and “Порт” (Port, usually 9100); “COM-порт” (COM port) — the port and speed; “Windows” — a printer installed in Windows with a driver. Choose “Язык принтера” (Printer language): ZPL for Zebra printers, TSPL for TSC printers, and “Разрешение принтера” (Printer resolution) — 203 or 300 dpi, as the printer itself has. For a thermal printer, use “Размер пробной этикетки” (Test label size) to match the width and feed length of the labels on the loaded roll, for example 75 × 120 mm. If the size is absent, choose “Свой размер” (Custom size) and enter the dimensions in millimetres. Tap “Готово” (Done).

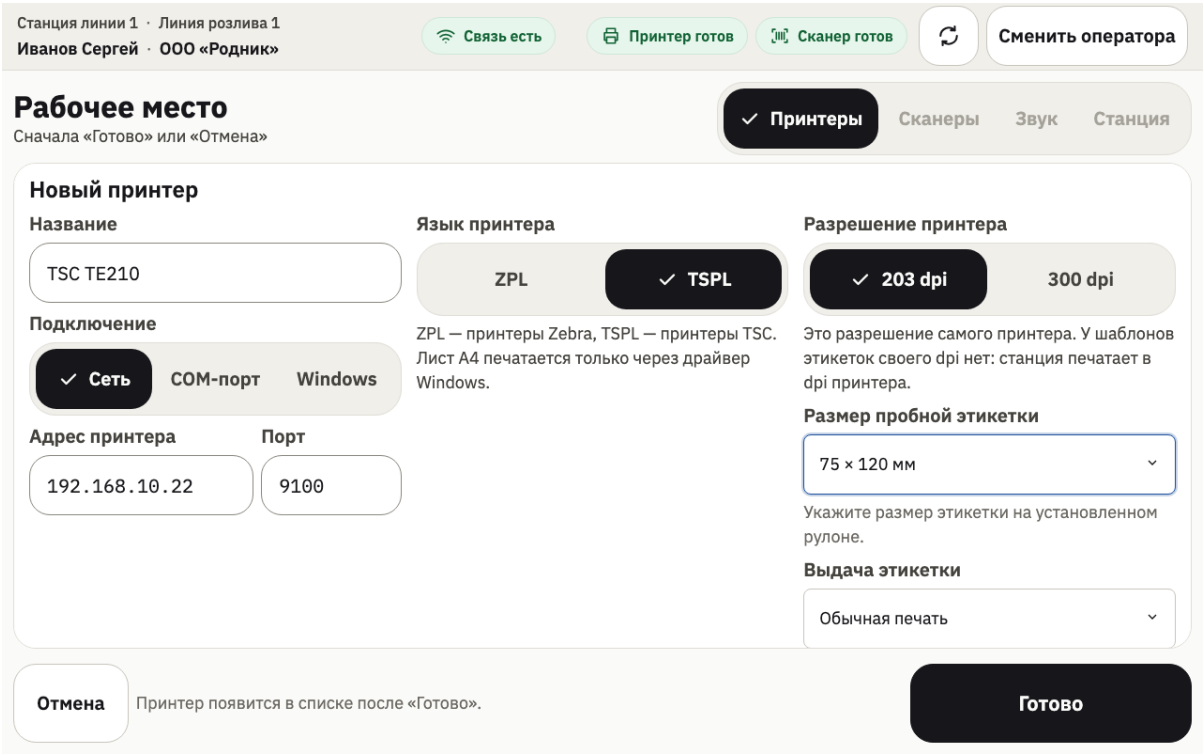

Network printer with a 75 × 120 mm test label

Step 2. Assign printing and test the printer

Under “Что на каком принтере” (What prints where) choose a printer for “Этикетка короба” (Box label), “Этикетка паллеты” (Pallet label) and “Дубль кода” (Code duplicate). Press “Пробная печать” (Test print) on that printer. If its settings open, select the roll size, tap “Готово” (Done), and run the test again. Wait for the label to come out, scan its printed code and look for “Код совпал: принтер и сканер работают.” (The code matches: the printer and the scanner work). The “Проверять этикетку короба” (Check the box label) switch turns on checking every box label with a scan of its SSCC (MKR-INS-02). Tap “Сохранить” (Save).

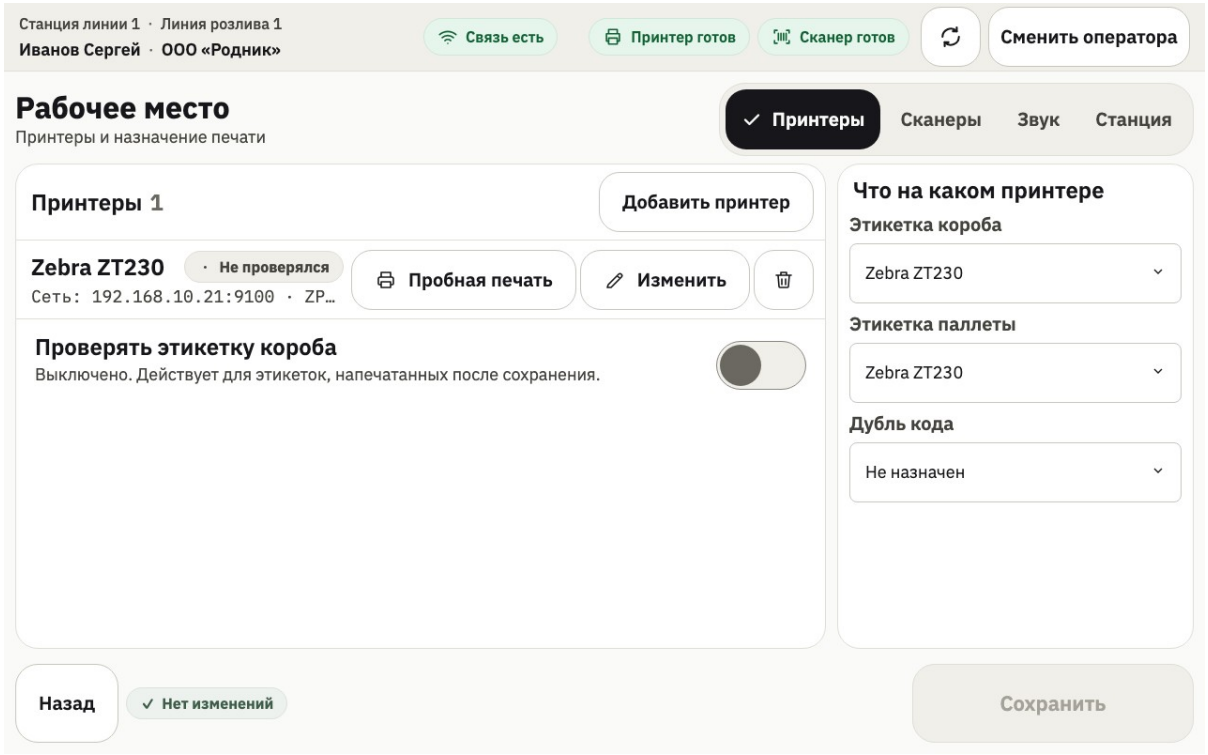


The workstation's printers and print assignment

Note: The test label size applies to the test. The selected template sets the production label size. An A4 sheet prints a pallet on an ordinary printer: only for “Этикетка паллеты” (Pallet label), at 300 dpi, through the Windows driver.

5. Scanners

Step 1. Connect the scanner and check the reading

“Сканер в режиме клавиатуры” (Keyboard-mode scanner) — a USB scanner in keyboard mode — always works, with no setup. Add a scanner on a COM port: choose “COM-порт” (COM port) and “Скорость, бод” (Speed, baud) — as set in the scanner itself — and tap “Добавить” (Add); “Обновить список портов” (Refresh the port list) rereads the computer's ports. On the right is “Проверка сканера” (Scanner check): the station shows a test code (“Простой код” — Plain code, or “DataMatrix с GS” — DataMatrix with GS), you scan it from the screen, and the station compares what arrived with what is shown, character by character — including GS separators and the keyboard layout. Tap “Сохранить” (Save).

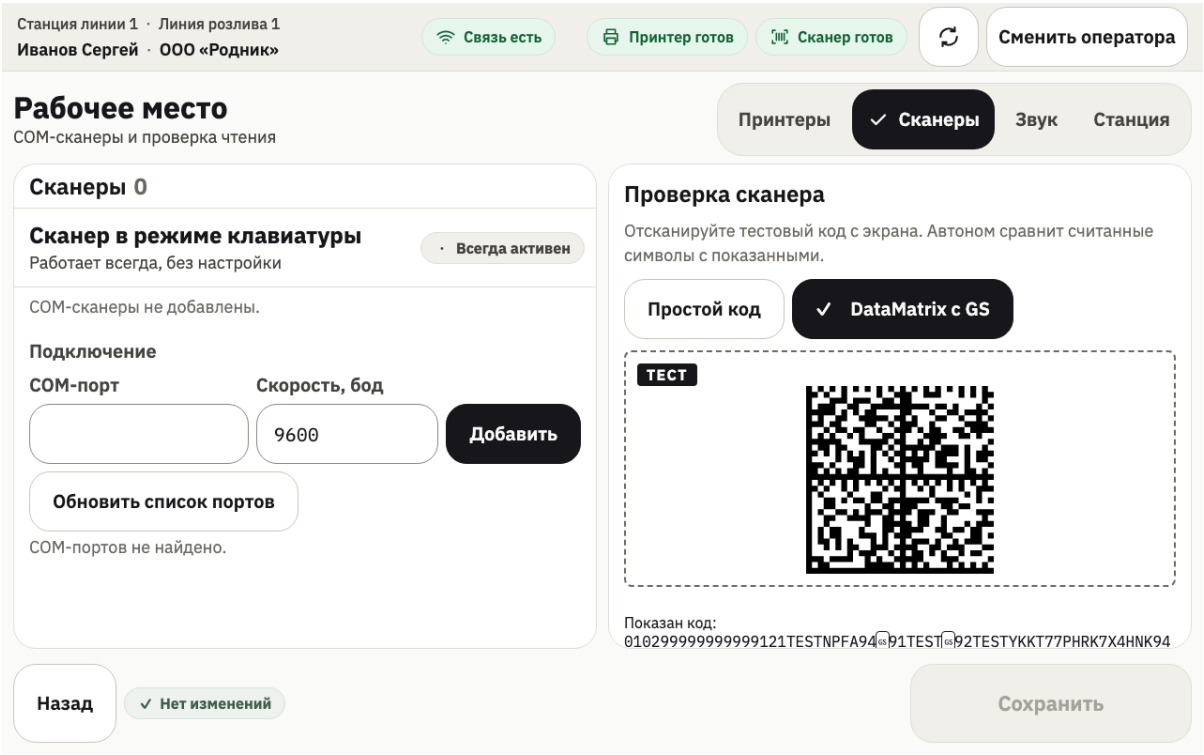

Station scanners and the DataMatrix check with a GS separator


If the scanner reads only from paper, select a thermal printer under “Проверка сканера” (Scanner check) and click “Печать” (Print). Set the test label size for the selected printer. Scan the test code just printed and check the result on screen.

If the scanner types in the Russian layout, switch the station computer's layout to English. If a COM scanner stops responding, the sign-in screen shows a “Настройки сканера” (Scanner settings) button.

6. Sound

Step 1. Set up the signal sound

On the “Звук” (Sound) tab the “Звук сигналов” (Signal sound) switch turns the scan beeps on; with sound off the visual signals remain. “Громкость сигналов” (Signal volume) has ten levels, with “Тише” (Quieter) and “Громче” (Louder) buttons. “Проверить звук” (Test the sound) plays a signal. Set a level that is clearly heard on the shop floor and tap “Сохранить” (Save).

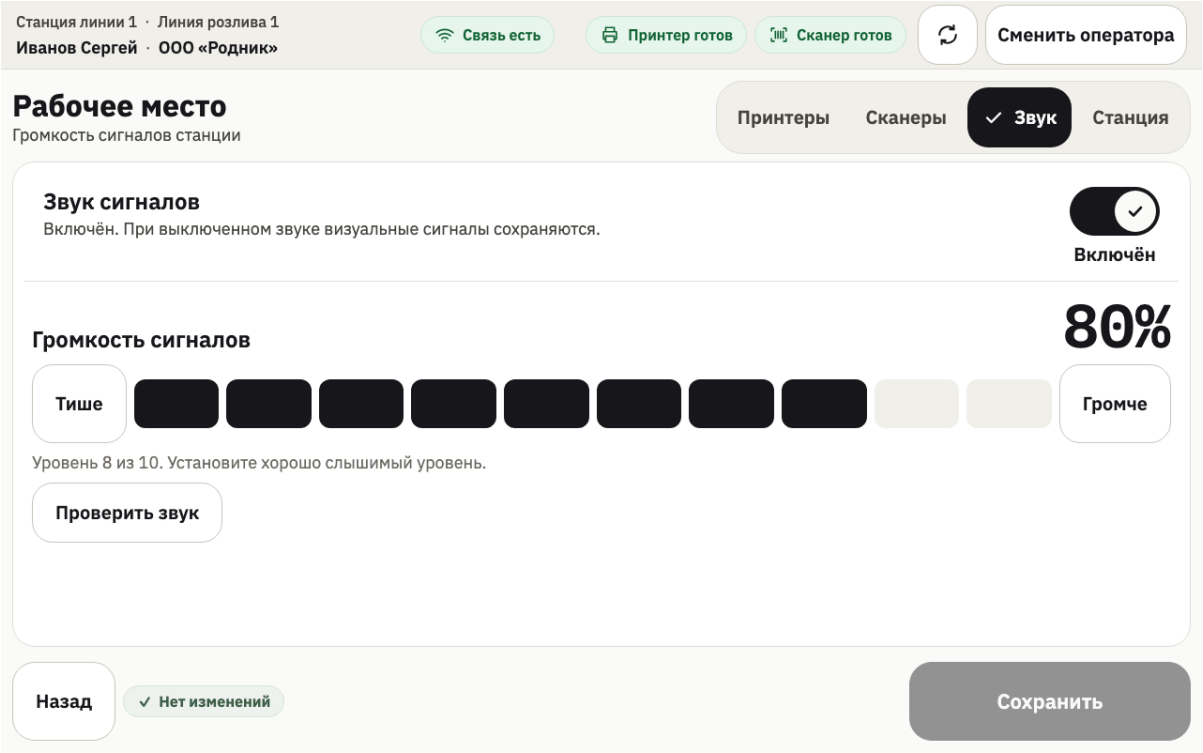


Signal sound and volume

7. Station: version, update and unpairing

Step 1. Check the pairing and the version

The “Станция” (Station) tab shows “Эта станция” (This station): the station's name, the device and the host address, and “Тема цеха” (Shop-floor theme) — “Системная” (System), “Светлая” (Light) or “Тёмная” (Dark). “Версия программы” (Program version) shows the station's version; “Проверить обновление” (Check for an update) asks the host whether there is a newer version. The update comes from the host computer, without the internet; the “Обновить” (Update) button installs it. Updates are installed outside a shift.

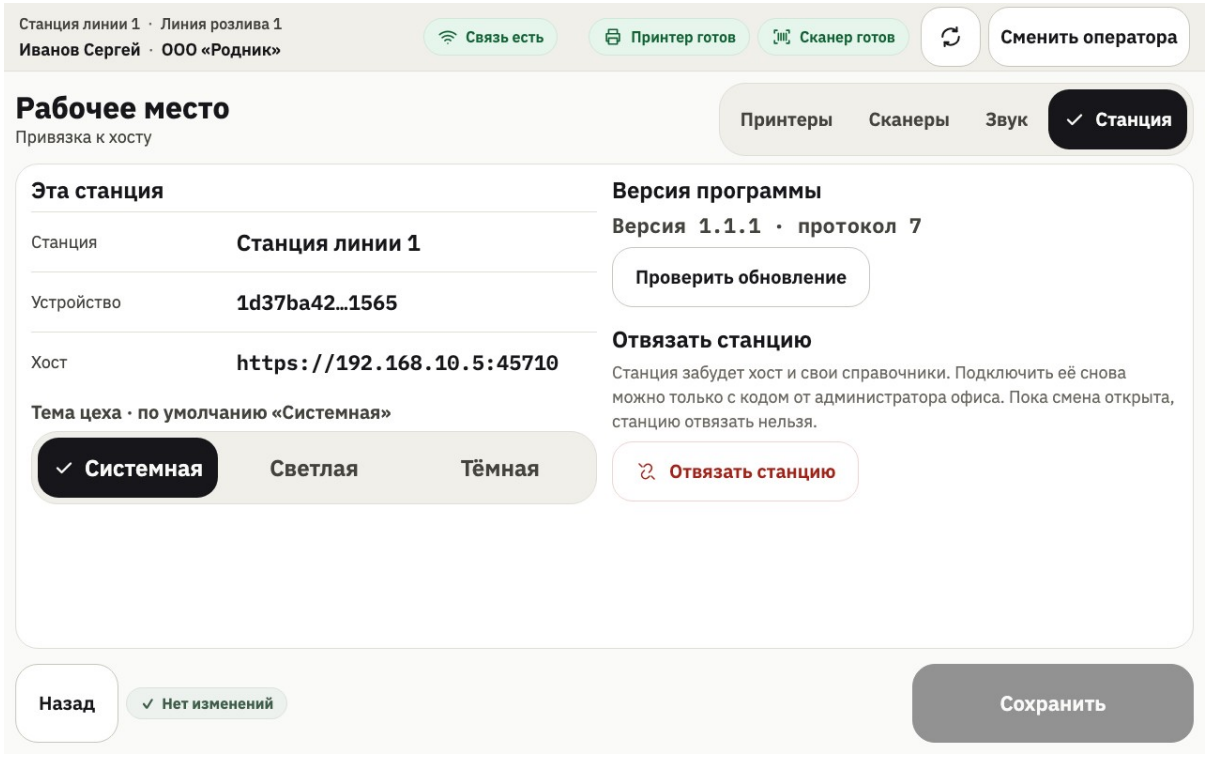

The “Станция” (Station) tab: pairing, theme, version and unpairing

“Отвязать станцию” (Unpair the station) is for moving the station to another host or taking it out of service. The station forgets the host and its reference data; it can be paired again only with a new code from the office. While a shift is open, the station cannot be unpaired. Before unpairing, the station shows how many records are not yet sent to the host — records remain on disk, but will not be sent if you connect as a new device or to another host — and asks you to confirm it is you: with a badge or a personnel number and PIN.

8. Common problems

The host does not answer at this address — Check the address, that the host computer is on and on the same network, and that the host's firewall lets port 45710 through.

Another program answers at the address — The address points at another computer or another program. Check the host address in the office.

The code is not accepted — The station says “Проверьте код: 10 символов” (Check the code: 10 characters) or “Код набран русскими буквами — переключите раскладку на английскую” (The code is typed in Russian letters — switch the layout to English). If the code has expired or used up its attempts, create a new one in the office.

The host does not accept this device — The device was disconnected in the office, the host database was restored from a backup, or the host changed. Tap “Подключить заново” (Pair again). To reconnect as the same device, open “Устройства” (Devices) in the office, choose “Привязать заново” (Re-pair) for this station, and use the code issued specifically for it. A device disconnected in the office cannot be recovered this way. To connect as a new device, choose “Подключить как новое устройство” (Connect as a new device) on the station and create an ordinary code with “Подключить устройство” (Connect a device); the previous device's unsent records will not be sent.

The printer does not print — Check the connection and address, the language (ZPL or TSPL) and the printer's resolution, then do a “Пробная печать” (Test print).

If your problem is not listed above, contact your organization's administrator or Markiro support: hello@v-b.tech.