

Scanning station: workstation setup

This is an informational translation. The matching Russian revision is authoritative. Technician's guide: pairing the station with the cabinet, connecting the scanner and the printer, sound, and station updates.

Document code	MKR-INS-04
Revision	2026.09/01
Effective from	26 September 2026
Revision verification	https://markiro.app/d/MKR-INS-04/2026.09/01/26.09.2026
Language	EN
Operator	Богатырев Владислав Сергеевич
Contacts	https://markiro.app · hello@v-b.tech · +7 934 355-14-90

1. Purpose

This instruction is intended for a technician or an administrator and covers preparing a scanning station workstation: pairing the station with the cabinet, connecting the barcode scanner and the label printer, sound, and updates. It is performed when a new workstation is commissioned or when hardware is replaced.

The operator's daily work is covered by separate instructions: sign-in and shift start (MKR-INS-01), the work cycle (MKR-INS-02), exceptions (MKR-INS-03).

Note: The screenshots use demo data. Addresses, version numbers and names on your station will differ.

2. Pairing the station

Step 1. Create a pairing code in the cabinet

Open the station page in the administrator cabinet and create an eight-digit pairing code for this line. The code is single-use and valid for a limited time.

Step 2. Enter the code on the station

On the “Connect station” screen, type the eight-digit code into the “Pairing code” field on the on-screen keyboard or scan it, then tap “Pair station”. The station shows “Pairing...” — the code is being checked and the settings are being downloaded.



маркиро
Production line station
Code verification, aggregation, and label printing on the production line.
`admin.markiro.app`

1. Open the station page in the administrator cabinet.
2. Create an eight-digit pairing code for this production line.
3. Enter or scan the code here.

Connect station

Pairing code

1 2 3
4 5 6
7 8 9
Backspace 0 Clear

Pair station

Equipment setup Service setup


The “Connect station” screen: entering the code from the cabinet

Expected result: The station showed “Station connected”.

Step 3. Move on to hardware setup

After the “Station connected” message the station proceeds to work by itself. Open the hardware setup with the “Equipment setup” button on the connection screen (before entering the code) or the “Workstation setup” button on the shift selection screen. Configure the scanner, the printers and the sound (sections 3–5).



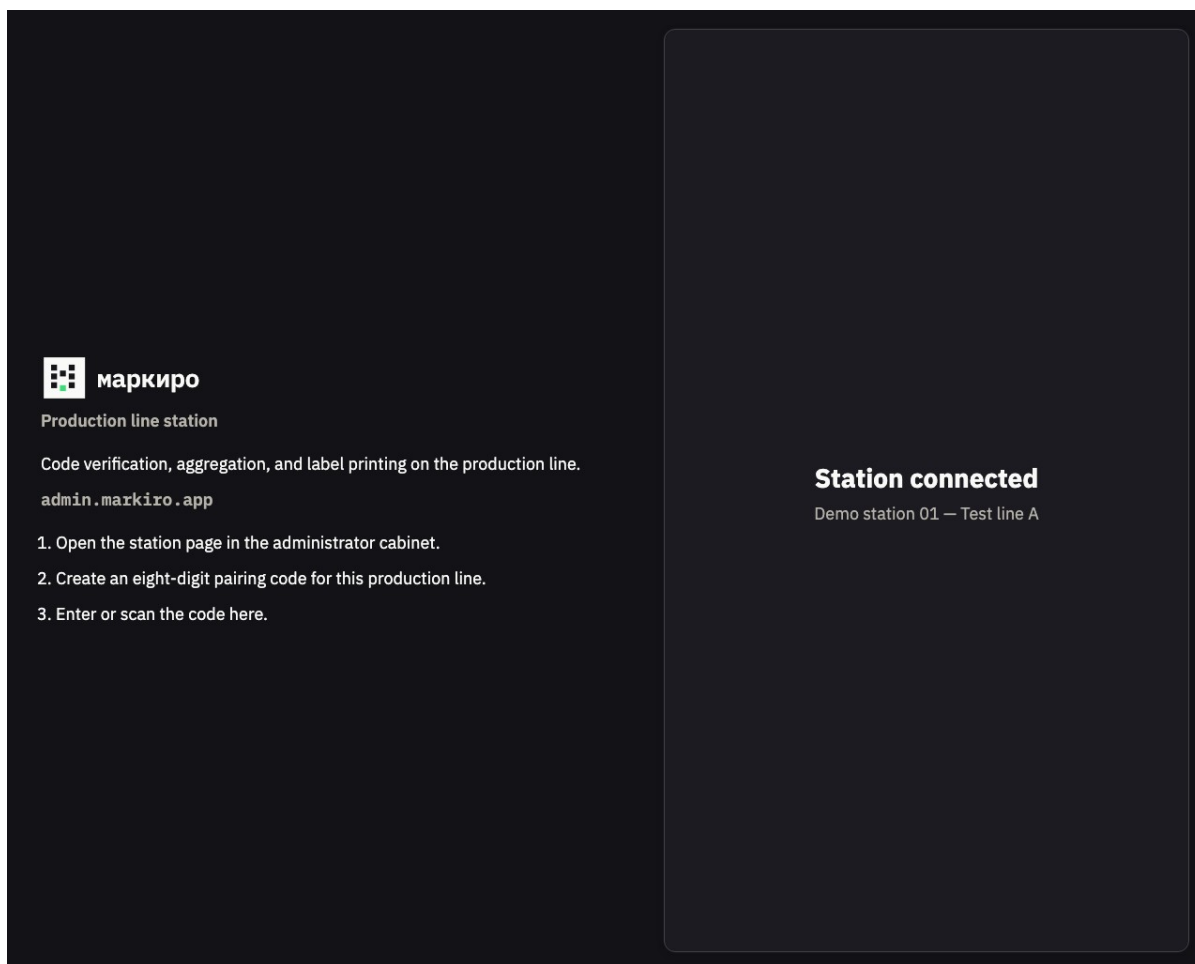

The station is connected to the cabinet

Note: The scanner and printer settings are saved by the “Done” button at the bottom of the screen; “Next” moves to the next tab, and “Back” closes the setup without saving. Sound applies immediately.

Important: If the station reports “This pairing code is not valid” or “This pairing code has expired”, create a new pairing code in the cabinet and enter it here. The old code will not work again.

3. Scanner

Step 1. Connect and check the scanner

On the “Scanner” tab, in the “Connection” block, choose the “Port” and the “Baud rate” according to the scanner's datasheet, then tap “Connect scanner”. Next to it is the “Scanner check” block: the station shows a barcode with a caption and asks you to “Scan this code straight off the screen”. Scan it from the monitor — on success you will see “Code matches — the scanner works correctly”. If a different code came in, the station shows exactly what it received; the “New code” button issues a fresh code for another check.



Demo station 01 · Test line A
Sample Operator

● Sync 0 ● Conflicts 0 ●

Printers 3 / 3

! Change operator

Workstation setup

Scanner Printers Sound

Connection

Port
DEMO-COM1

Baud rate
9600

Save or connect to start

Add scanner

All saved ports work together. Use any scanner without switching. Connections restore automatically.

Connect scanner

Scanner check
Scan this code straight off the screen



MKR-TDFATK

✓ Code matches — the scanner works correctly

New code

Scan any code to test the connection.

Back Next Done

Scanner setup: connection and the on-screen code check

Expected result: “Code matches — the scanner works correctly”.

If the scanner works in keyboard mode (input emulation), choose “No serial scanner (keyboard-wedge)” — the port and the baud rate are not configured in this mode.

If the workstation has several scanners, add each one with “Add scanner” and set its port and baud rate. All saved ports work together: there is no need to switch between scanners, and connections restore automatically.

4. Printers

The station prints three types of labels — “Box”, “Code duplicate” and “Pallet” — and each type is assigned a printer from this station's printer list. One printer can print all three types. The “Printers” tab also opens from the “Printers” button in the header of the shift selection screen, which shows how many types are assigned, for example 3 / 3.

Step 1. Add a printer

On the “Printers” tab, tap “Add printer”. Set the “Printer name” — the assignments list printers by it. Under “Printer connection” choose: “Network (TCP)” — the “Printer address” and the “Printer TCP port”; “Serial (COM port)” — the “Printer port” and the “Printer baud rate”; “Windows (USB)” — an installed printer from the “Windows printer” list (the “Refresh list” button re-reads it). The “Printer language” is ZPL or TSPL, per the printer's documentation. The “Printer resolution” is 203 or 300 dpi, per the datasheet: until it is set, box labels print at the template's resolution and duplicate printing is unavailable.



Demo station 01 · Test line A
Sample Operator
● Sync 0 ● Conflicts 0 ●
Printers 3 / 3
! Change operator

Workstation setup

Scanner
Printers
Sound

Printer name
192.168.10.20
Printer resolution
Not configured

Printer connection
☐ No printer
☒ Network (TCP)
☐ Serial (COM port)
☐ Windows (USB)

Printer address
192.168.10.20
Printer TCP port
9100
Printer language
☒ ZPL
☐ TSPL

Print check

192.168.10.20
Print a test label, then scan it
Every label prints at this resolution. Until it is set, box labels print at the template's resolution and duplicate printing is unavailable.

Test print



✓ Label printed and recognized — the printer works

Test label sent to 192.168.10.20. Scan the printed code to check it.

Cancel
Remove printer
Save printer
Done

The printer card: connection and the print check

Step 2. Pass the print check

In the “Print check” block the station asks you to “Print a test label, then scan it”. Tap “Test print” — the message that the label was sent only confirms the sending. Then scan the code from the label that came out: on success you will see “Label printed and recognized — the printer works”. This checks the whole chain at once — the connection, the printer language, the print quality and the scanner. Then tap “Save printer” — it appears in the “Printers on this station” list.

Expected result: “Label printed and recognized — the printer works”.

Step 3. Assign where labels print

In the “Label destinations” block, choose a printer for each label type. The station assigns the first printer you add to all three types at once. Leave a type this workstation does not print as “Not assigned”. The “Edit” button next to a printer in the list opens its card again; “Remove printer” is there too. New assignments apply to new labels: labels already prepared print on their original printer.



Demo station 01 · Test line A
Sample Operator
● Sync 0 ● Conflicts 0 ●
Printers 3 / 3
! Change operator

Workstation setup

Scanner
Printers
Sound

Printers on this station 3
Add printer

Zebra at conveyor — finished product boxes
192.168.10.20:9100 · ZPL · 203 dpi
Box
Edit

TSC at operator — product code duplicates
192.168.10.21:9100 · TSPL · 300 dpi
Code duplicate
Edit

Zebra at palletizer — warehouse shipments
192.168.10.22:9100 · ZPL · 203 dpi
Pallet
Edit

Label destinations
Box
Zebra at conveyor — finished product boxes
Code duplicate
TSC at operator — product code duplicates
Pallet
Zebra at palletizer — warehouse shipments

☒ Verify each box label by scanning it back

Assignments apply to future labels. Prepared print jobs keep their original printer.

Back
Next
Done

The station's printers and the assignments by label type

Note: The “Verify each box label by scanning it back” checkbox under the printer list enables the mandatory box label verification after printing (covered by the work cycle instruction). It is available once a printer is assigned to the “Box” type; keep it on at aggregation workstations.

5. Sound

Step 1. Turn the station sound on

On the “Sound” tab, clear the “Mute” checkbox, set the “Volume” and tap “Test sound”. Line operators rely on the scan verdict sounds — without them it is easy to miss a duplicate or an error while not looking at the screen.



Demo station 01 · Test line A
Sample Operator

● Sync 0

● Conflicts 0

Printers 3 / 3

! Change operator

Workstation setup

Scanner

Printers

Sound

☐ Mute

Volume 0.7

Test sound

Set a clearly audible level; visual signals remain available when muted.

Back

Done


Station sound setup

6. Station updates

Step 1. Check the station version

Open “Station updates” with the updates button in the header of the shift selection screen — the  icon, or an exclamation mark with a dot once a new version is out — and tap “Check for updates”. If the version is current, the station reports: “This station is up to date.”



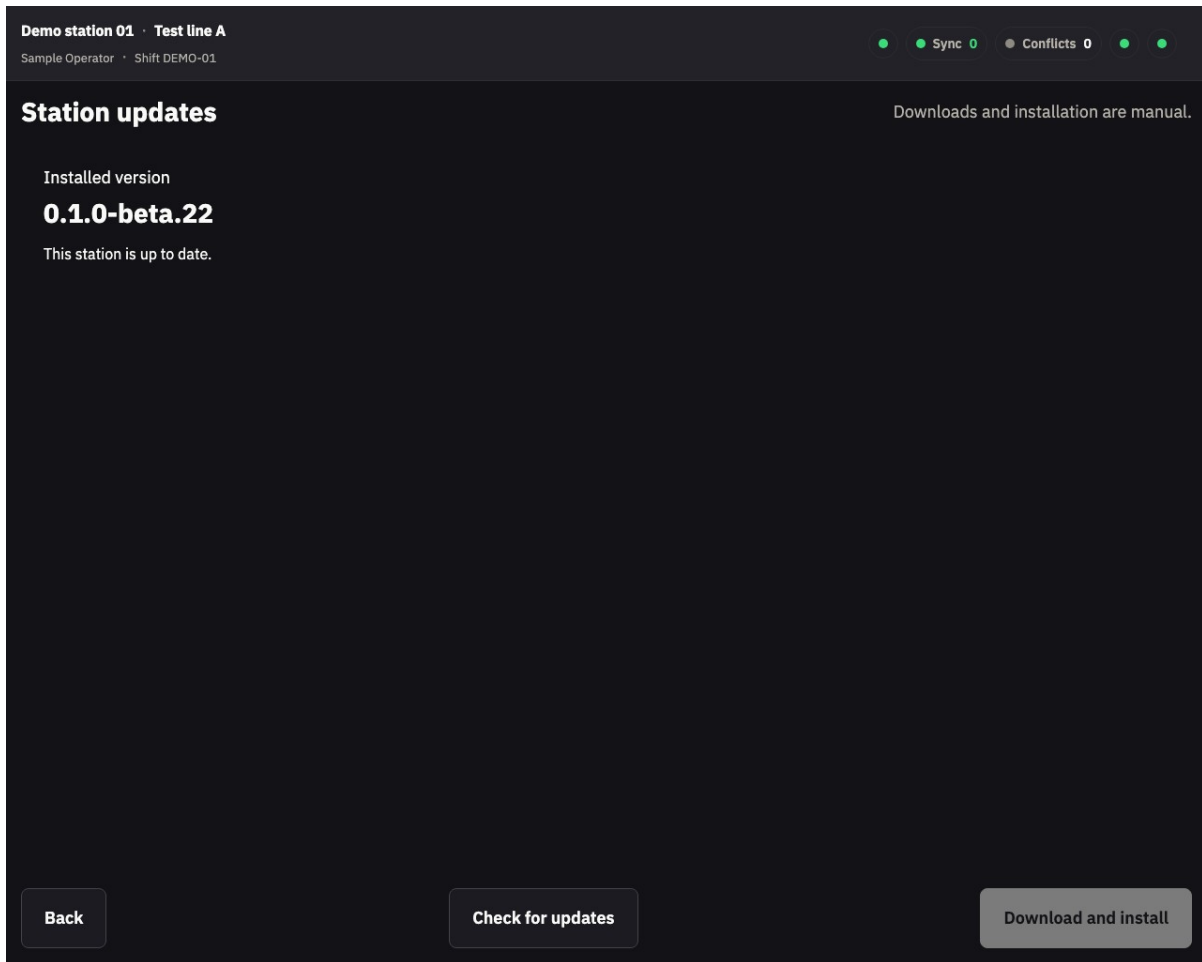

The update center: the version is current

Step 2. Install an available update

If a new version is available, the station shows its age: “Released recently”, “This release is more than 7 days old” or “This release is more than 30 days old; update when convenient”. Tap “Download and install” and confirm — the version is downloaded and the station restarts. Updates are installed manually only.



Demo station 01 · Test line A

Sample Operator · Shift DEMO-01

● Sync 0 ● Conflicts 0 ● ●

Station updates

Downloads and installation are manual.

Installed version

Available version

0.1.0-beta.22

1.4.2-beta.1

This release is more than 7 days old

UPDATE SOURCE

Source: Markiro (Yandex)

Back

Check for updates

Download and install


An update is available: the release age and installation

Expected result: The station restarted on the new version.

Step 3. Do not update the station during a shift

While a shift is active, installation is blocked: “Leave the active shift before installing”. Wait until the operator closes the shift; unsent operations must reach the server too.



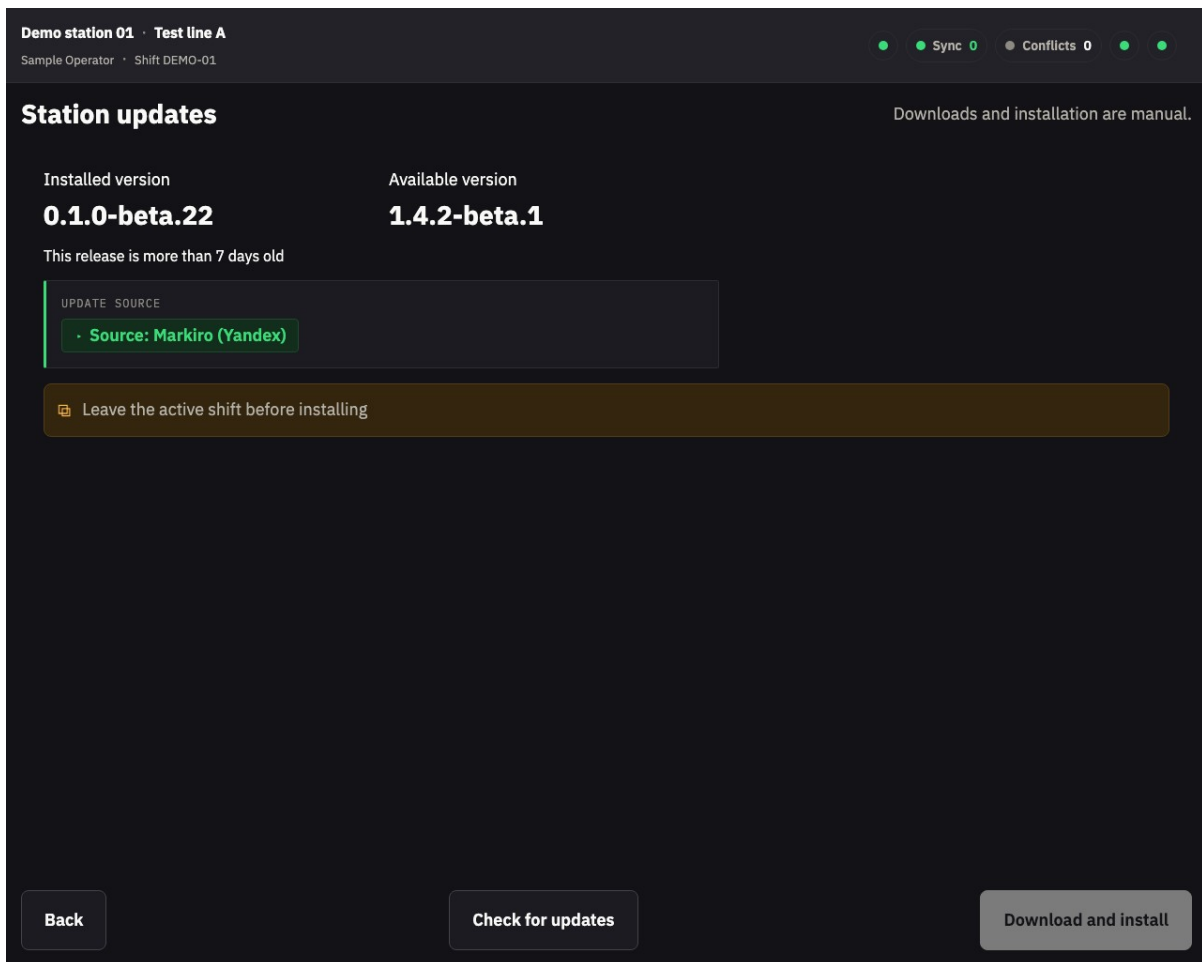

Installation is blocked by an active shift

7. Service operations

The “Re-pair this station” button (in the workstation setup) is used only when a service user needs to pair this same station again: the device key is deleted, and the local production records stay on the station. “Service connection” is a separate path with credentials issued by support; it does not replace the normal code-based pairing.

Important: Both operations are rare and are performed only together with Markiro support. Do not run them to fix ordinary connectivity or hardware problems.

8. Frequently asked questions

The scanner or the printer is labelled configured, not detected — The saved device was not found on this machine: check the cable and the power, then pick the port or the printer again in the setup.

No installed Windows printers found — Install the printer driver through Windows, then tap “Refresh list” on the card of a printer with the “Windows (USB)” connection.

Code duplicates do not print — Check that a printer is assigned to the “Code duplicate” type and that this printer has its “Printer resolution” set: without a resolution, duplicate printing is unavailable.

The test label did not come out or is not recognized — The sent message does not guarantee printing. Check the connection address/port, the printer language (ZPL/TSPL per the documentation) and the ribbon, then repeat “Test print”. The check only counts after scanning the code from the label — if the station shows that a different code came in, you scanned the wrong label (for example, yesterday's test one).

The pairing code has expired — Codes are single-use and time-limited. Create a new code in the administrator cabinet and enter it on the station.



The station must move to another line — Contact Markiro support — re-pairing on your own without guidance is not recommended.

If your problem is not listed above, contact Markiro support: hello@v-b.tech.

