


MINOR CHANGES IN SOW (SUMMARY OF V 2.3)

1.1 Definitions

Term	Definition
Ht	High Time (BLDC Equipment run time (<i>Highest</i>) for each operation)
Sensitivity	Variable value “x” which define how much less “Lt” will be from “Ht”
Lt	“Lt = Ht – Sensitivity”
Tolerance	Earlier → Ht-Lt Tolerance (In settings) Tolerance will be applicable only for Ht (Default – 0%, selectable from settings menu 0 – 20%) Tolerance defines how much excess in Ht will be accepted as OK.

1.2 The Concept of Ht and Lt

- **Acceptable Tolerance (For Ht only)**
User can select acceptable tolerance range, can be selected from 0-20%. The settings will be available in “Fastening Time Setup” settings menu, by default set to “0”

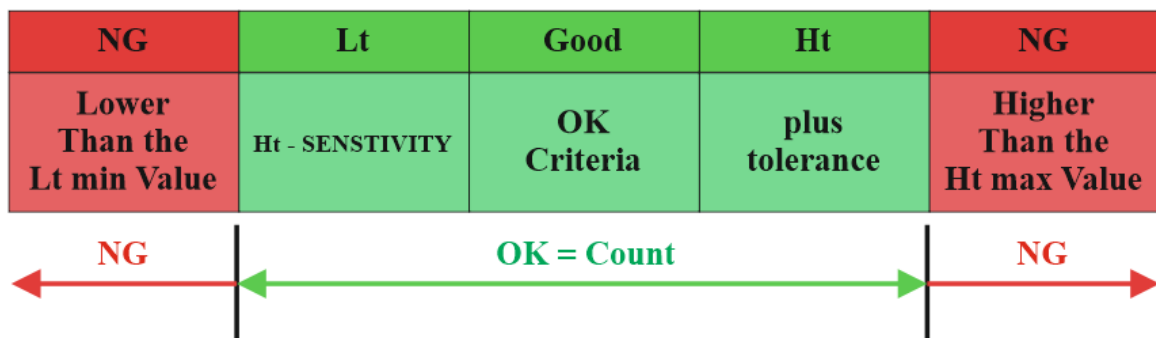

1.3 Auto-Learn Function (Only for Ht)

P1 - P10 {Select Program}

Auto Learning Mode is ON

Initialize Auto Learning timer
Counter=0

If Fin=0V
Timer Start
Fout=0V

if TRPin=0V

STOP timer
if timer >Ht
Ht=timer;

Counter ++

REVERSE FUNCTION WILL NOT WORK HERE

After 10 readings are recorded, a beep, 1 second long will sound up

If user presses "Set" button for 3 seconds here, if counter is <10, system prompts: Exit without saving settings? YES or NO. If NO, continues to take readings, if YES then discards any changes and exits system. If counter is >=10, system prompts SAVE? Select between YES/NO by using Up/Down buttons.

On successful saving, a beep of 2 seconds and save the results.

Results Saved under **Selected** Program (P1~P10): Ht

1.4 Settings Menu

1. Fastening Time Setup

- a. Set High time **Ht** (displays existing value set to selected program) *Default 1.999 ms*
- b. Set **SENSITIVITY** (displays existing value set to selected program) *Default 0.200 ms*
- c. Ht Tolerance (Select from 0-20%) ----- *Default → 0%*

d.

1.5 Input Output Function

S. No.	Connectors / Pins	Name	In/Out	wave pattern of signals	Content
3	CN3	OKALL	Out		Gives O/P Voltage of VIN /100mA for moving coil continuously when AOK