


NOMAD TORONTO

Complete System Wiring Diagram | 18 Loudspeakers | Armonía-Verified | March 2026

FOH Signal Line-Out Dist Booth Signal Entrance
Speaker Crossover NL4 = Adapter

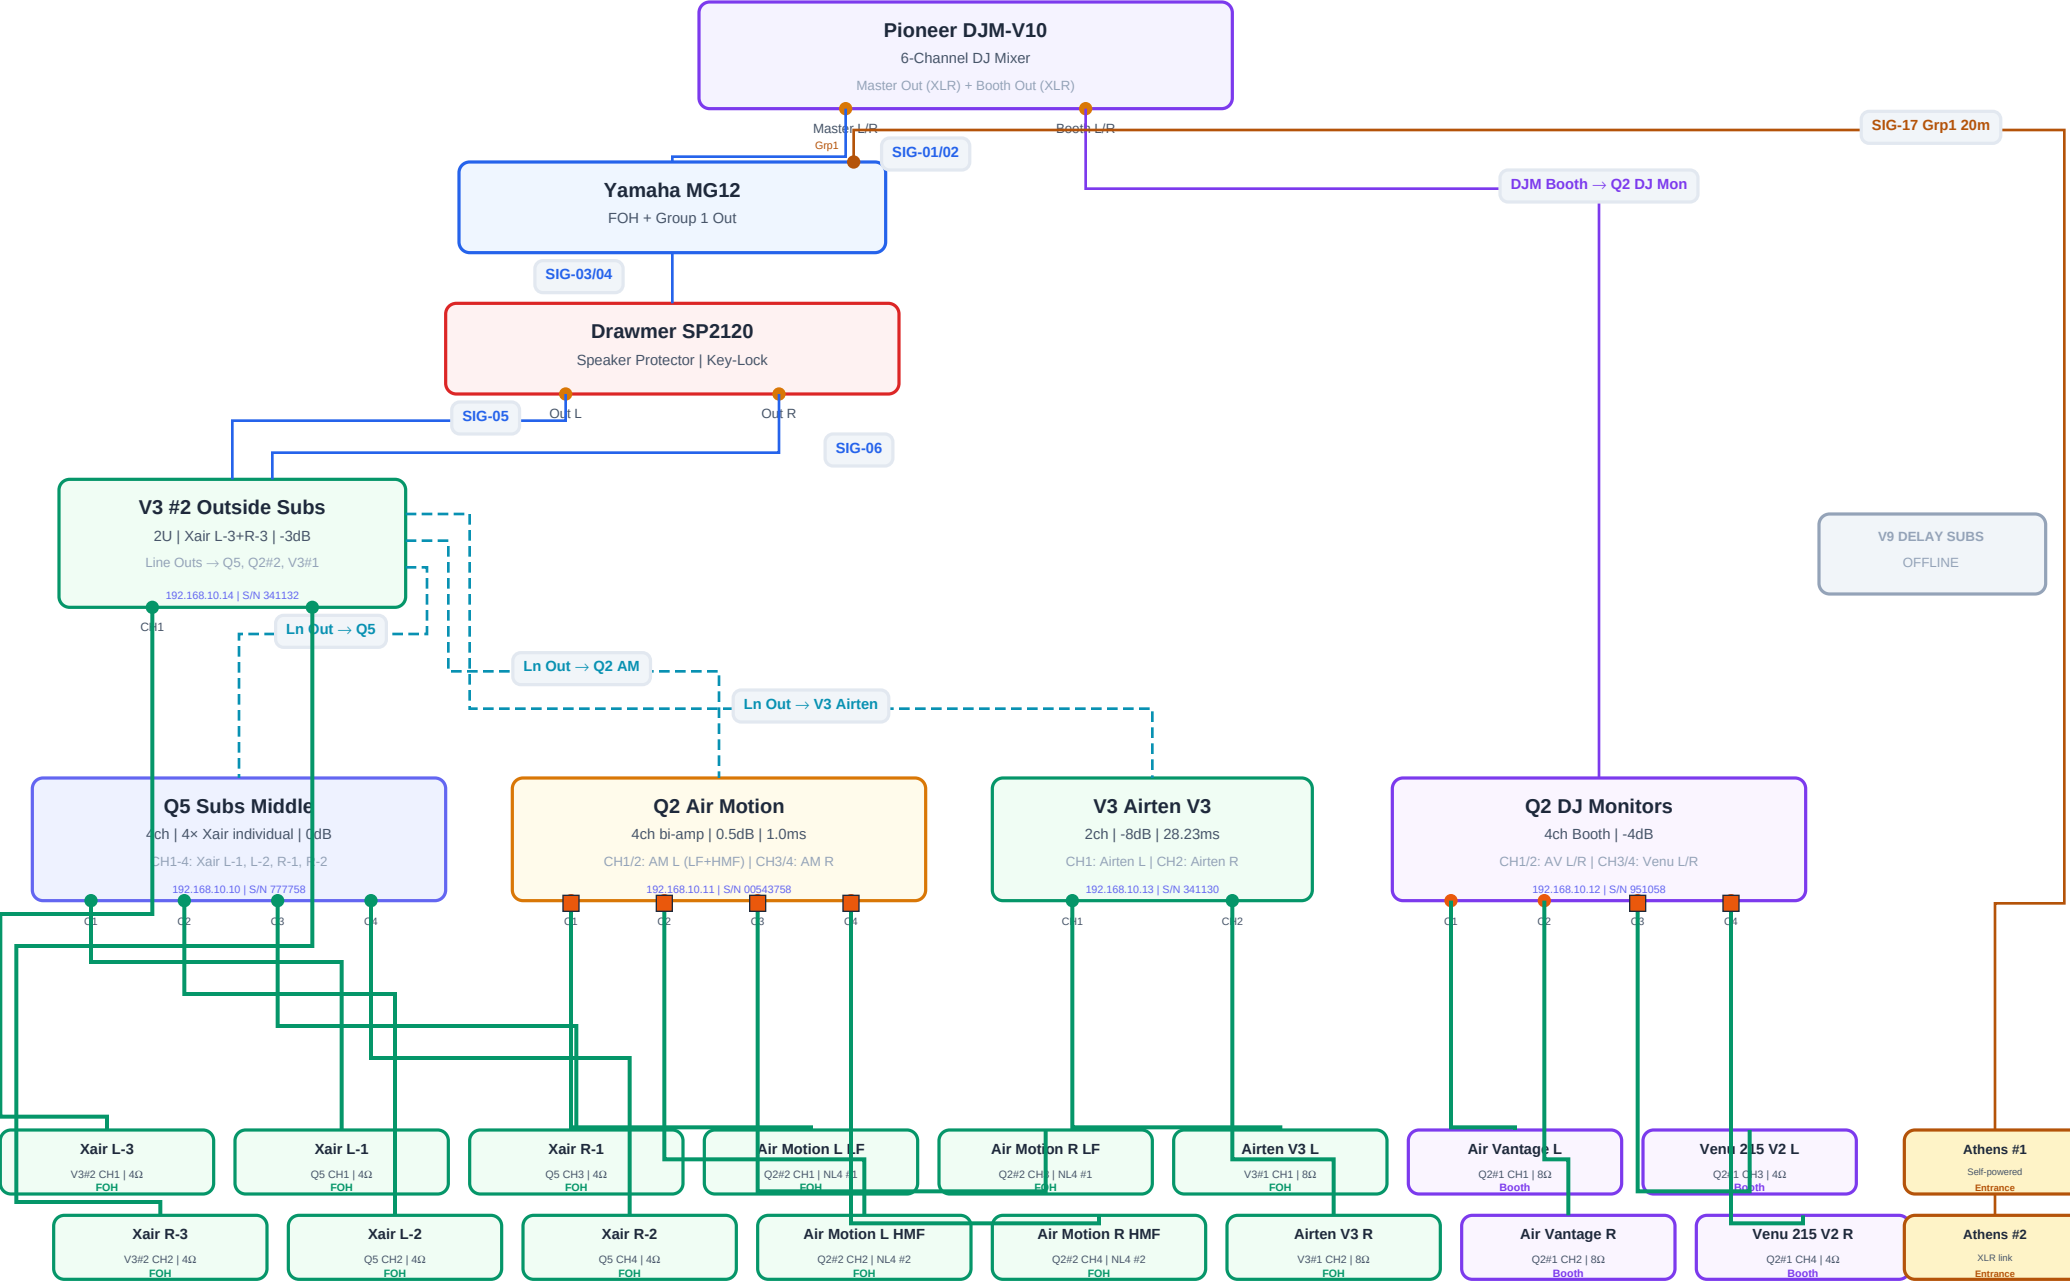

FOH: 6x Xair + 2x Air Motion + 2x Airten = 12

BOOTH: 2x AV + 2x Venu = 4

ENTRANCE: 2x Athens = 2

NOMAD TORONTO | Amplifier Rack Layout & Connection Summary (Armonía-Verified)

18 Loudspeakers | Corrected from Armonía workspace screenshots | March 2026

Drawmer SP2120
1U | Speaker Protector
In: 2× XLR-F | Out: 2× XLR-M
Power: IEC 115/230V

V3 #1 “air ten v3”
2U | Airten V3 L/R | -8dB 28.23ms
In: 2× XLR-F | Out: 2× NL4 | Line: 2× XLR-M
Power: IEC C20
192.168.10.13:8002 | S/N 341130 | AESOP | 37°C

Q2 #1 “DJ Monitors”
1U | AV L/R + Venu L/R | -4dB
In: Phoenix 12-pin | Out: Phoenix 8-pin
Power: IEC C20
192.168.10.12:ZMQ | S/N 951058 | Lat.Comp: disabled

V9 “DELAY SUBS”
2U | OFFLINE
All disconnected
Power: CPC 45A off

Q2 #2 “Air Motion”
1U | AM bi-amp 4ch | 0.5dB 1.0ms
In: Phoenix 12-pin | Out: Phoenix 8-pin
Power: IEC C20
192.168.10.11:ZMQ | S/N 00543758 | Dante: BiasQ2-00543758 | K style

V3 #2 “Outside Subs”
2U | Xair L-3+R-3 | -3dB
In: 2× XLR-F | Out: 2× NL4 | Line: 2× XLR-M
Power: IEC C20
192.168.10.14:8002 | S/N 341132 | AESOP | Preset: outside subs | 39°C

Q5 “Subs Middle”
1U | 4× Xair individual | 0dB
In: 4× XLR-F | Out: 2× NL4
Power: Phoenix 5-pin
192.168.10.10:ZMQ | S/N 777758 | K style

Channel Assignment (Armonía)

Amplifier	CH1	CH2	CH3	CH4	Level	Delay	Zone
V3 #2	Xair L-3	Xair R-3	—	—	-3dB	0ms	FOH
Q5	Xair L-1	Xair L-2	Xair R-1	Xair R-2	0dB	0ms	FOH
Q2 #2	AM L LF	AM L HMF	AM R LF	AM R HMF	0.5dB	1ms	FOH
V3 #1	Airten L	Airten R	—	—	-8dB	28ms	FOH
V9	—	—	—	—	N/A	N/A	OFF
Q2 #1	AV L	AV R	Venu L	Venu R	-4dB	0ms	Booth

Required Adapter & Special Cables

Type	Qty	Connection
XLR→Phoenix signal (V3#2 Ln → Q2#2)	2	V3 #2 Line Out → Q2 #2 Air Motion inputs
XLR→Phoenix signal (Booth → Q2#1)	2	DJM Booth Out → Q2 #1 DJ Monitors inputs
Phoenix→NL4 speaker (Q2#2 → AM)	4	Q2 #2 CH1–4 → Air Motion LF/HMF NL4 #1/#2
Phoenix→NL4 speaker (Q2#1 → AV)	2	Q2 #1 CH1/2 → Air Vantage NL4
Phoenix→Phoenix speaker (Q2#1 → Venu)	2	Q2 #1 CH3/4 → Venu 215 V2 Phoenix
TRS→XLR adapter cable (MG12 → Athens)	1	MG12 Group Out 1 (TRS) → Athens #1 (XLR) 20m

Equipment PDF Manuals (20 documents) — click to open

- [Bias V3/V9 User Guide](#)
 - [Bias Q2 User Guide](#)
 - [Bias Q5 User Guide](#)
 - [Air Motion V2 Guide V2.2](#)
 - [Stasys Xair Guide V2.1](#)
 - [Airten V3 User Guide](#)
- [Air Vantage User Guide](#)
 - [Venu V2 Series Guide](#)
 - [Drawmer SP2120 Manual](#)
 - [Pioneer DJM-V10 Specs](#)
 - [Yamaha MG12 Manual](#)
 - [Armonía Pro Audio](#)