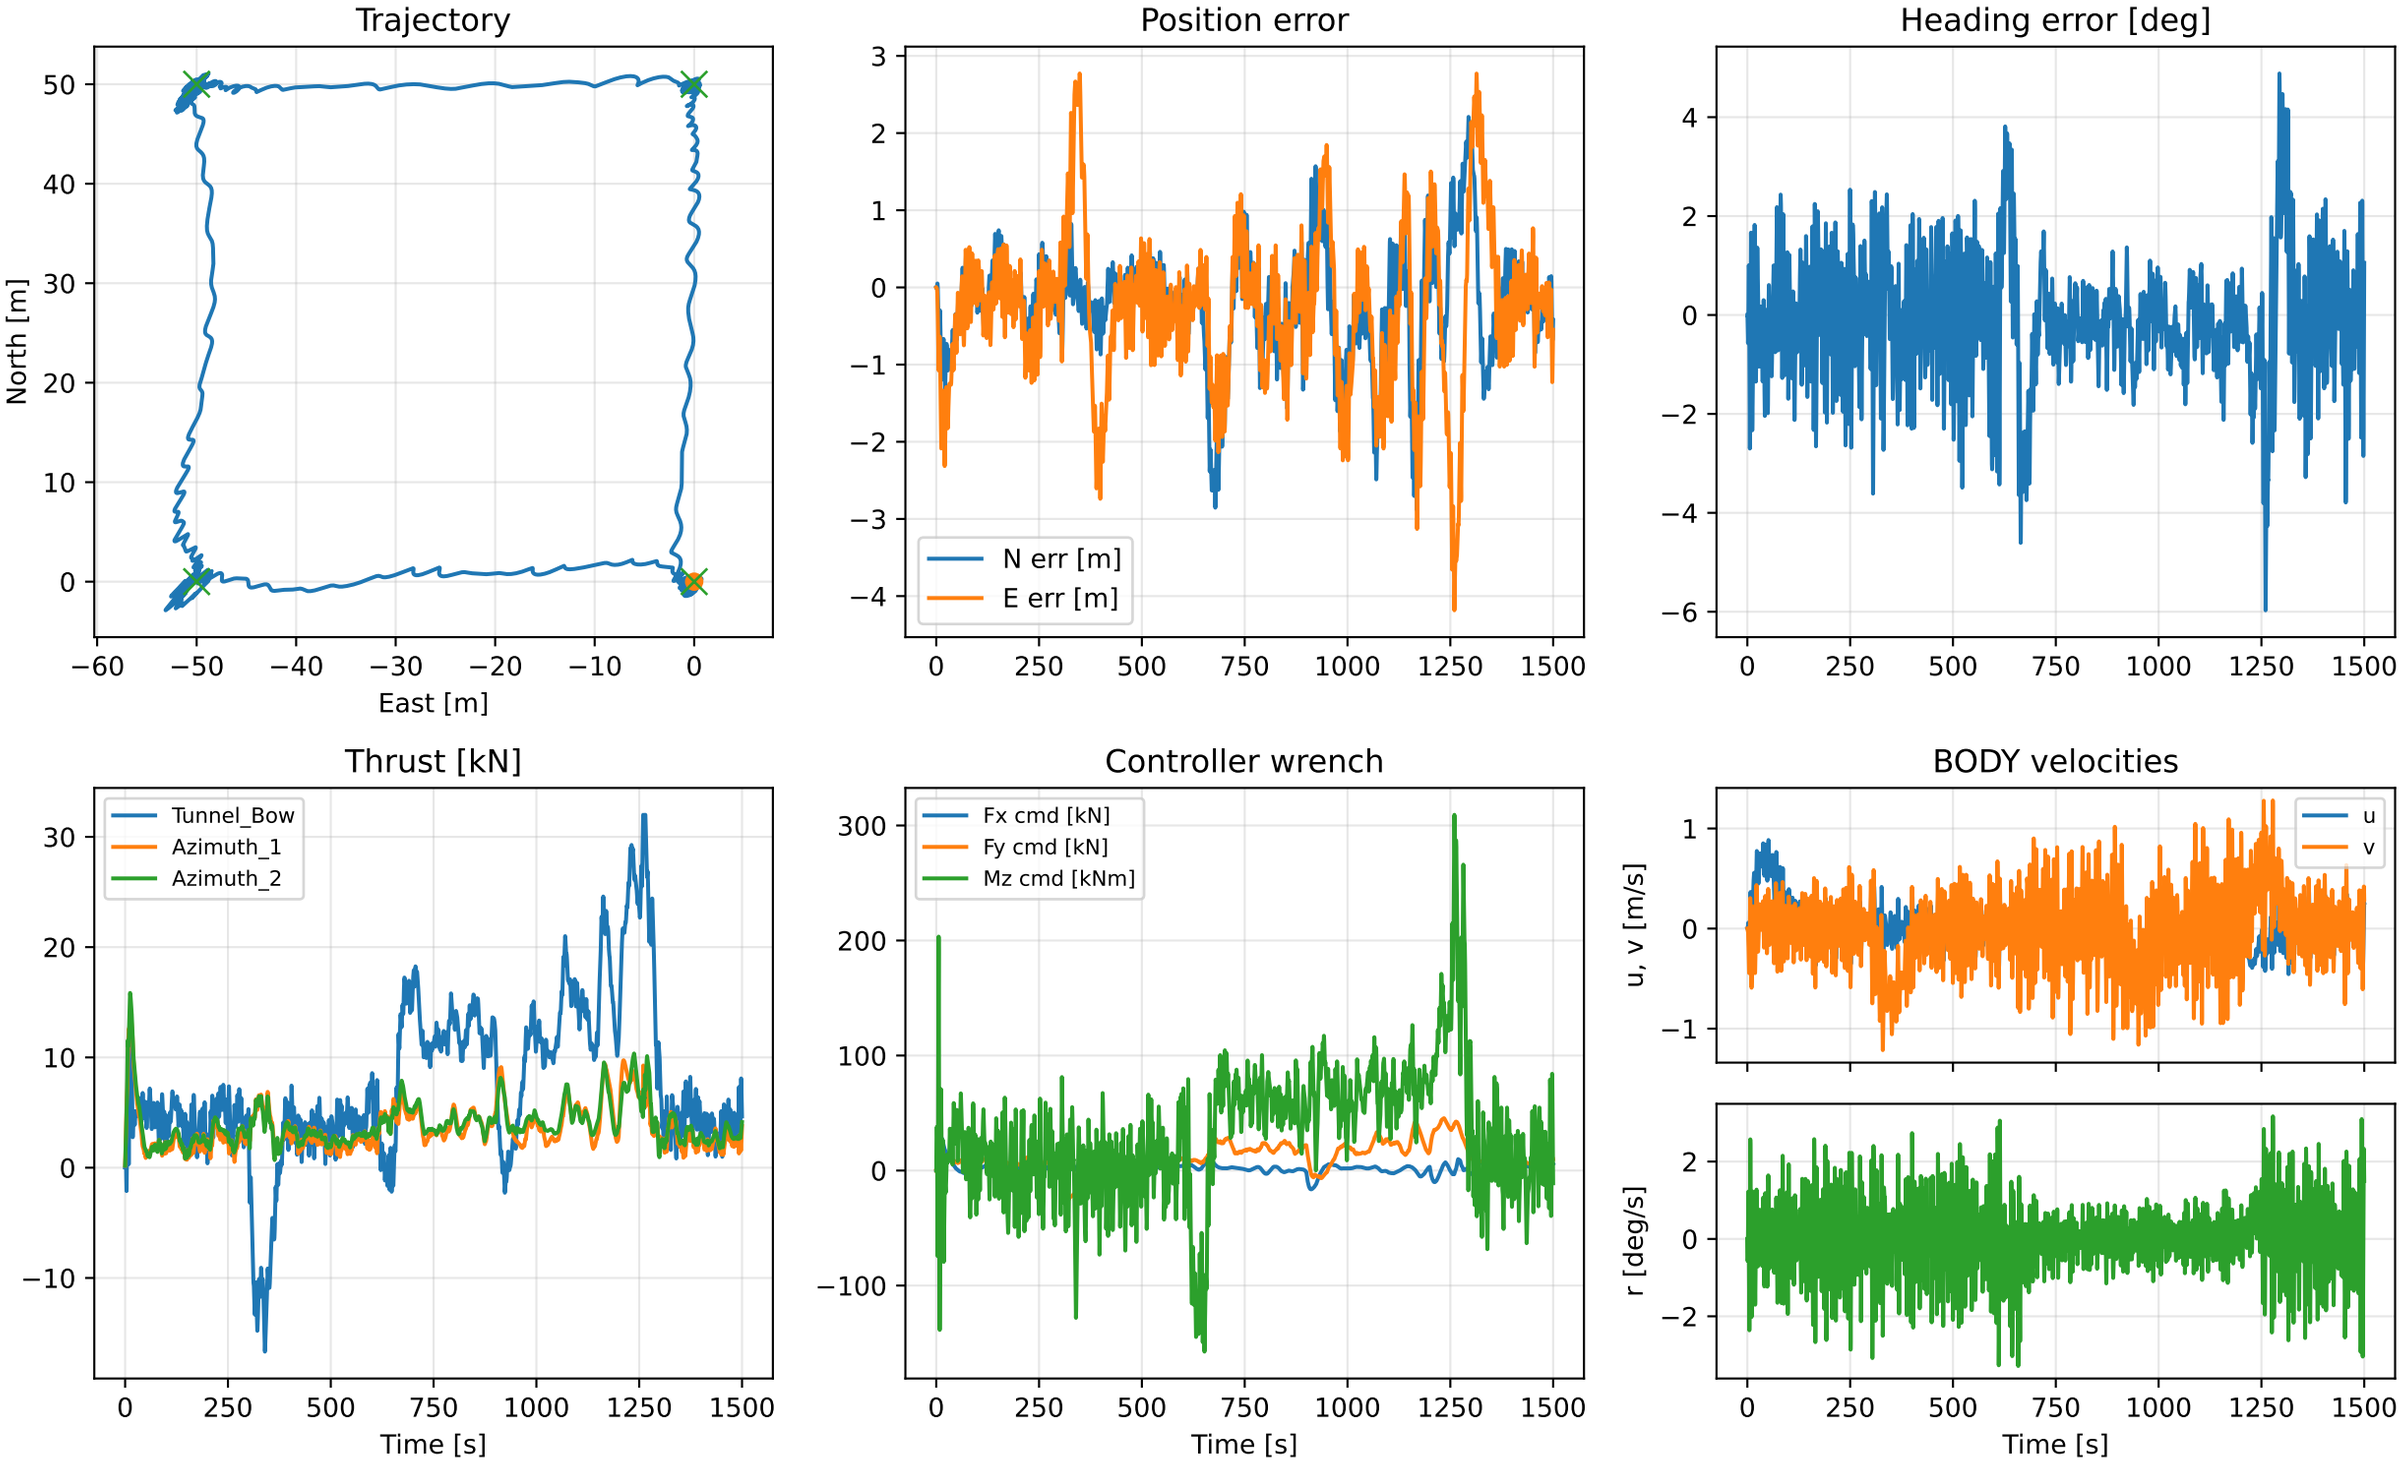

Trajectory
North [m]
East [m]
Position error
N err [m]
E err [m]
Heading error [deg]
Thrust [kN]
Tunnel_Bow
Azimuth_1
Azimuth_2
Time [s]
Controller wrench
Fx cmd [kN]
Fy cmd [kN]
Mz cmd [kNm]
Time [s]
BODY velocities
u, v [m/s]
u
v
r [deg/s]
Time [s]