



KONFIGURASI NAT MIKROTIK

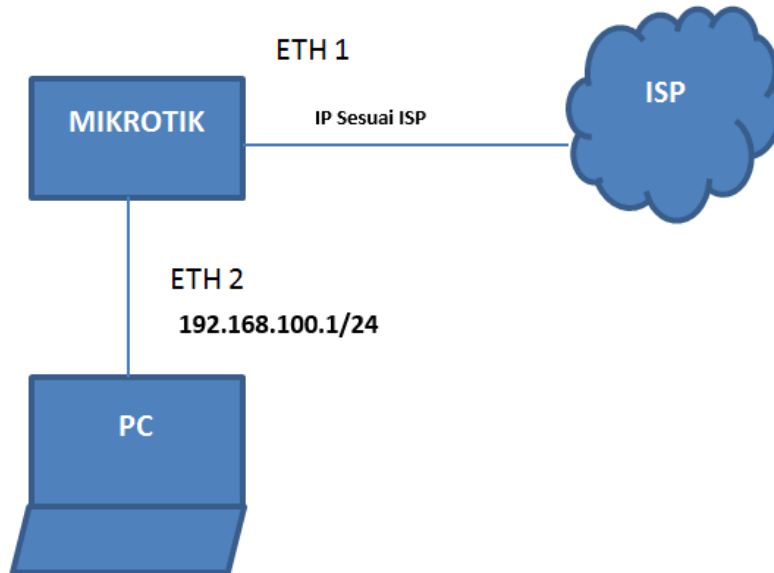


Topologi konfigurasi nat

1. Sambungkan Kabel LAN seperti Topologi diatas.
2. Pada PC client buka Winbox lalu masuk ke setting MikroTik kemudian klik Connect.

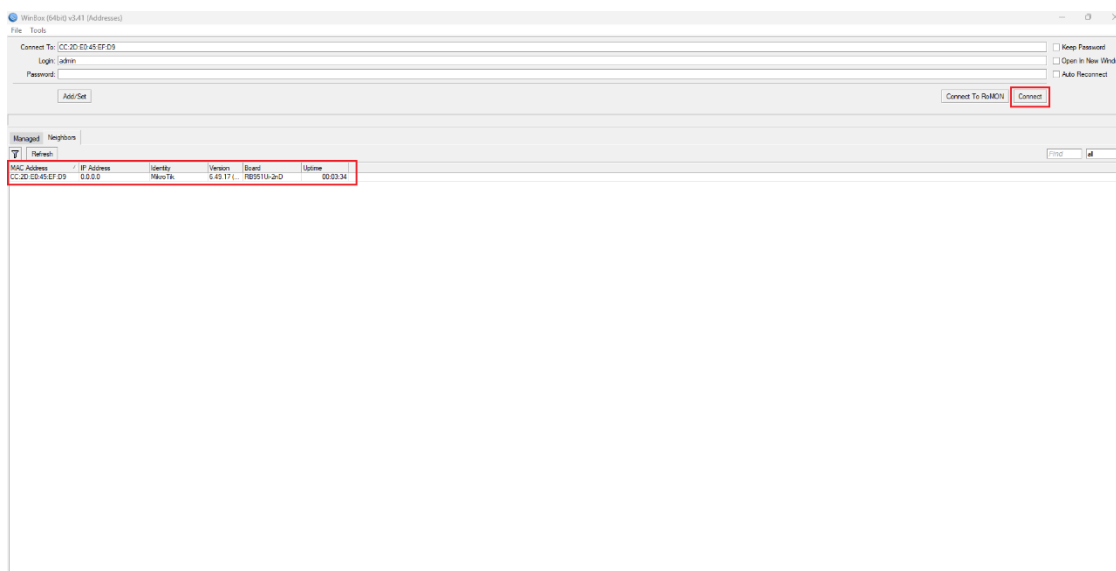

3. Masuk ke settingan DHCP Client pada mikrotik :


IP > DHCP Client >

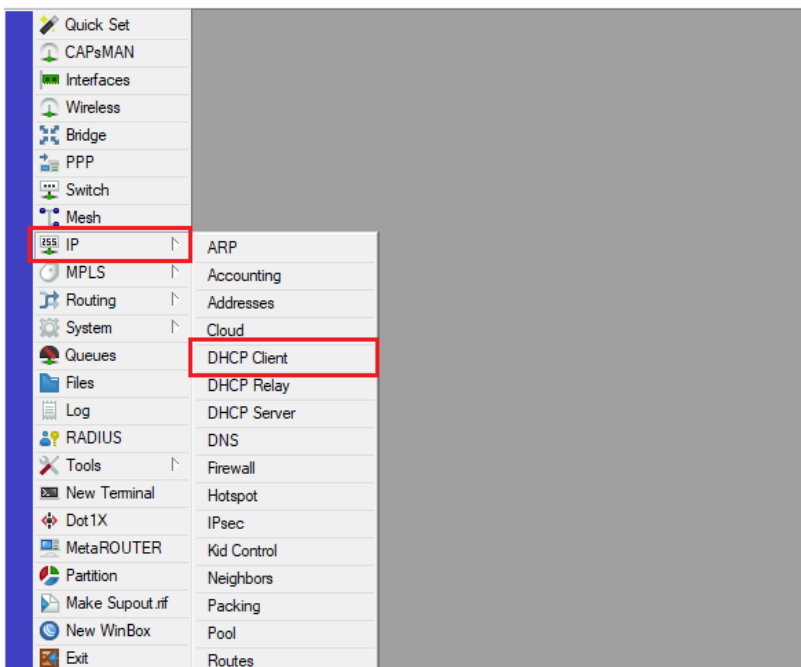

4. Klik tanda (+) :


Interface : ether1 : Kabel yang tersambung ke internet

Apply > Ok

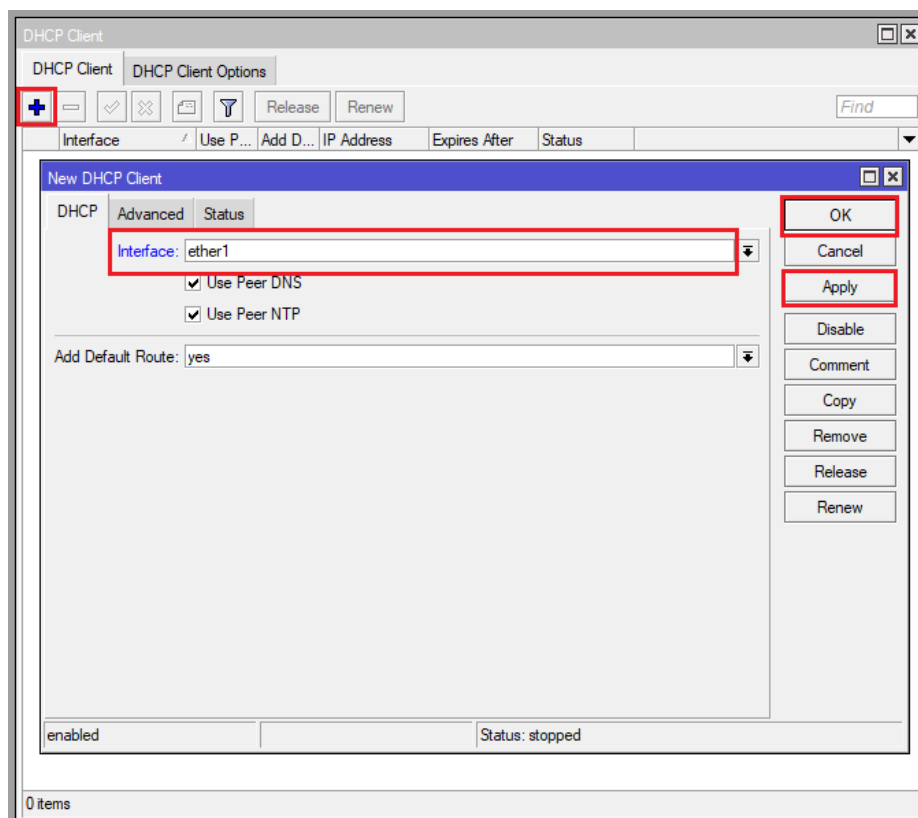

5. Sekarang buat IP address pada ether2 atau ether lainnya yang tersambung ke PC client.

IP > Addresses

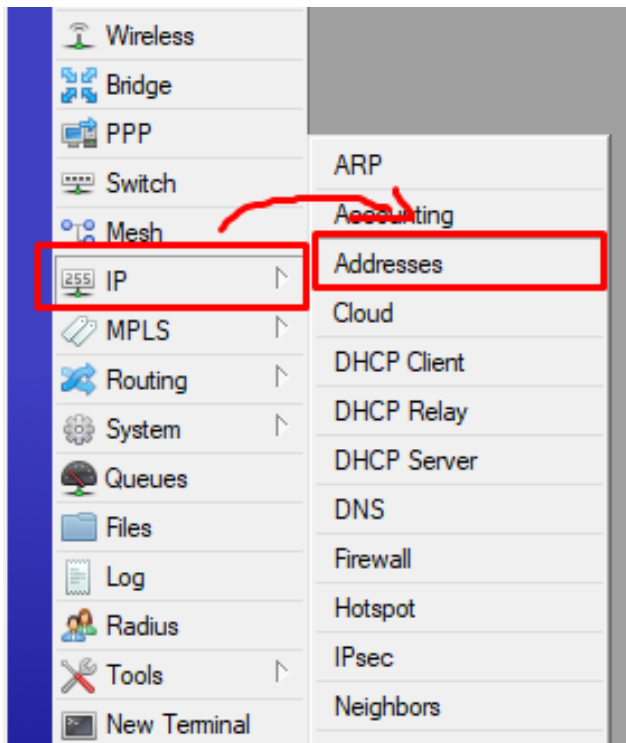


6. Lalu klik tanda (+) masukkan IP privat misal :

Address : 192.168.10.1/24

Interface : ether2

Apply > Ok

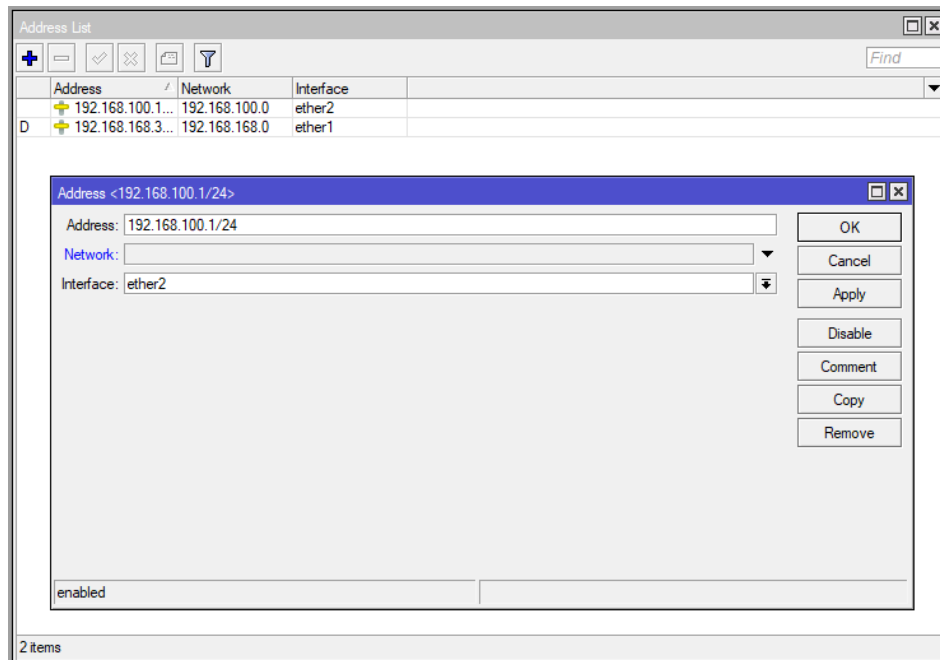


7. Sekarang setting NAT, dengan cara :


IP > Firewall > Pada tab NAT pilih tanda (+)

Chain : srcnat

Out. Interface : ether1

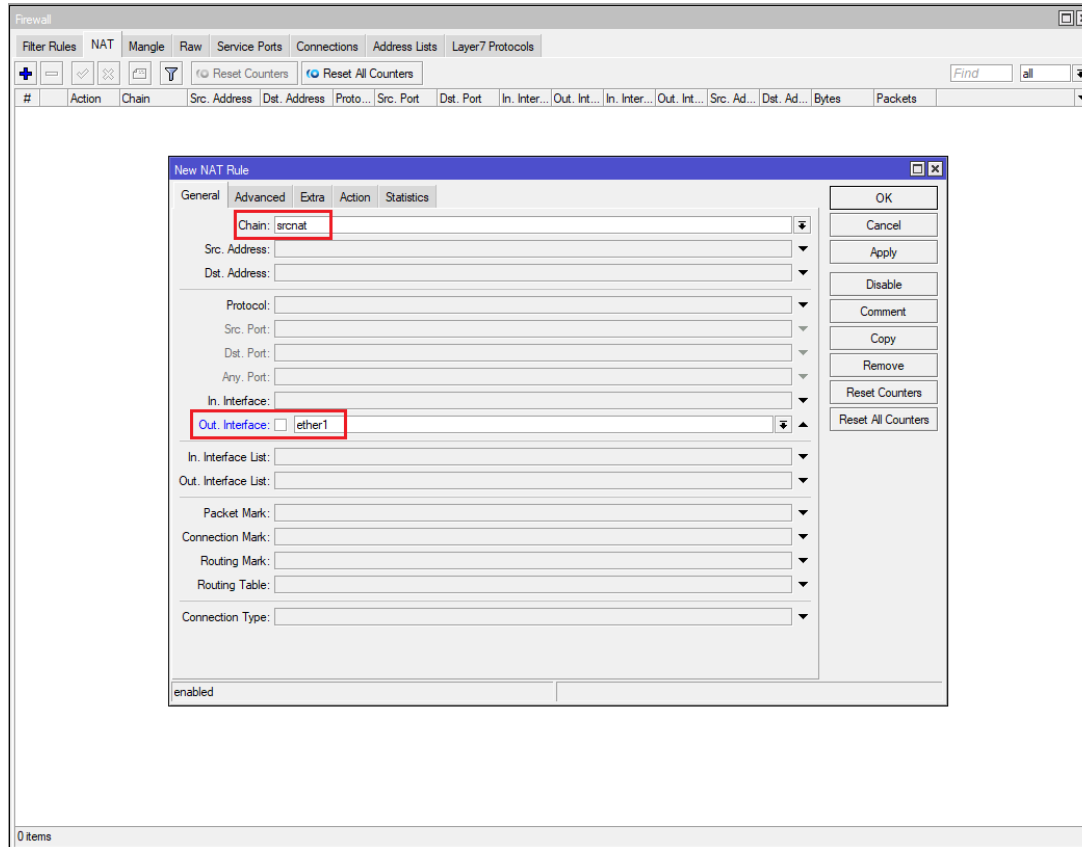

8. Pada Tab Action pilih masquerade lalu OK :

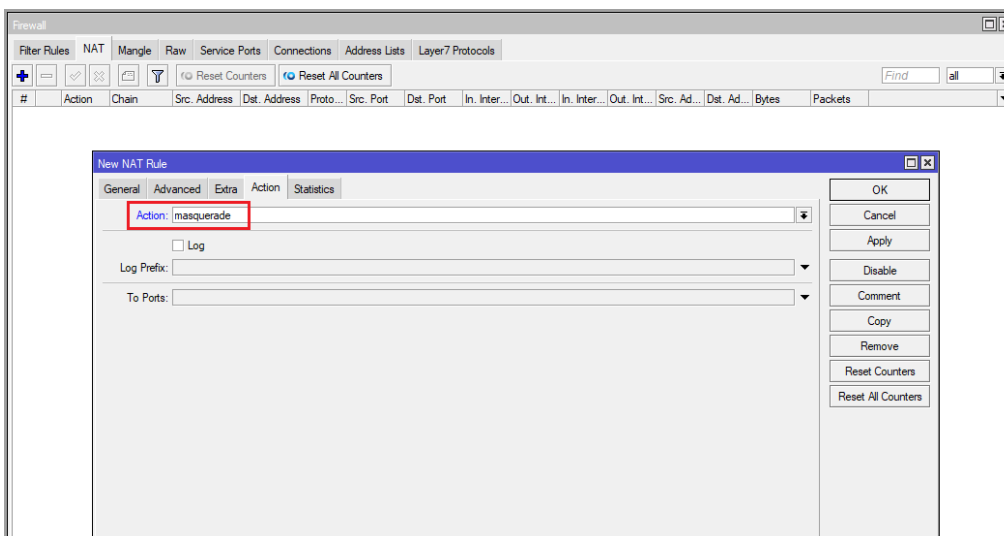

9. setting DNS dengan pilih IP-DNS
tambahkan DNS google : 8.8.8.8 dan 8.8.4.4

DNS Settings

Servers: 8.8.8.8
8.8.4.4

Dynamic Servers: 185.228.168.10
185.228.169.11

Use DoH Server: Static

☐ Verify DoH Certificate

☒ Allow Remote Requests

Max UDP Packet Size: 4096

Query Server Timeout: 2.000 s

Query Total Timeout: 10.000 s

Max. Concurrent Queries: 100

Max. Concurrent TCP Sessions: 20

Cache Size: 2048 KiB

Cache Max TTL: 7d 00:00:00

Cache Used: 25 KiB

OK
Cancel
Apply
Static
Cache

10. kemudian tambah dan DHCP server di ether2 dengan cara :

IP > DHCP Server

DHCP Server

DHCP Networks Leases Options Option Sets Vendor Classes Alerts

DHCP Config DHCP Setup


Select interface to run DHCP server on

DHCP Server Interface: ether2

Back Next Cancel

0 items

11. Kemudian Klik Next sampai muncul tulisan seperti di bawah ini :

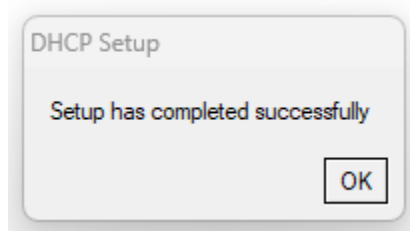

12. Tes ping pada terminal

Note : apabila disuruh masukkan password silahkan klik **ctrl + c**

```
Terminal <1>

MMM      MMM      KKK                      TTTTTTTTTT      KKK
MMMM     MMMM     KKK                      TTTTTTTTTT      KKK
MMM MMMM  MMM  III  KKK  KKK  RRRRRR      000000      TTT      III  KKK  KKK
MMM MM  MMM  III  KKKKK  RRR  RRR  000  000      TTT      III  KKKKK
MMM      MMM  III  KKK  KKK  RRRRRR      000  000      TTT      III  KKK  KKK
MMM      MMM  III  KKK  KKK  RRR  RRR  000000      TTT      III  KKK  KKK

MikroTik RouterOS 6.49.17 (c) 1999-2024      http://www.mikrotik.com/

[?]          Gives the list of available commands
command [?]  Gives help on the command and list of arguments

[Tab]        Completes the command/word. If the input is ambiguous,
              a second [Tab] gives possible options

/            Move up to base level
..          Move up one level
/command     Use command at the base level

Change your password
new password> 
```

13. Cek koneksi google dengan perintah ping google.com

apabila status ping kosong maka sudah bisa terkoneksi ke internet

```
[admin@MikroTik] > ping google.com

SEQ HOST                      SIZE TTL TIME  STATUS
0 216.239.38.120              56 113 27ms
1 216.239.38.120              56 113 27ms
2 216.239.38.120              56 113 28ms
3 216.239.38.120              56 113 27ms
4 216.239.38.120              56 113 27ms
5 216.239.38.120              56 113 27ms
```