

The first thing is a line-edit field for specifying the number of copies to be printed. Below that are radio buttons that allow you to print all of the document or only a range of pages and two line-edit fields for specifying the starting and ending pages. As usual, you can use the Tab key to move from one line-edit field to another. (Tabbing into the From or To fields automatically switches the “Pages” radio buttons to “Range”—thus, to print a range of pages, just hit Tab after specifying the number of copies and enter the starting page number, then tab again and enter the ending page number.)

The ImageWriter driver supports four print modes, which can be selected from the Quality pop-up menu. Text-only uses the built-in ImageWriter typeface to print a draft of your document without any graphics; Fast prints a draft of your document using the typefaces you chose and the graphics you included. Standard does a little better job, and Best yields the best results but takes a long time to print and uses more ink. The Epson driver supports three print modes—Better Text, Better Color, and Draft.

The Chroma pop-up menu allows you to choose either black and white or color printing (the option for color printing is dimmed if a color ribbon isn’t installed in the printing). And the Sheet Feed option lets you select whether the printer stops before every page to allow you to insert a sheet of pre-cut paper. The StyleWriter driver also allows you to re-specify the print quality (360 DPI or 180 DPI) in the Print dialog.

Once you’ve chosen your options, click “OK” or press Return and the printing operation will begin. (Or click “Cancel” or press Escape to exit the dialog without printing anything.)

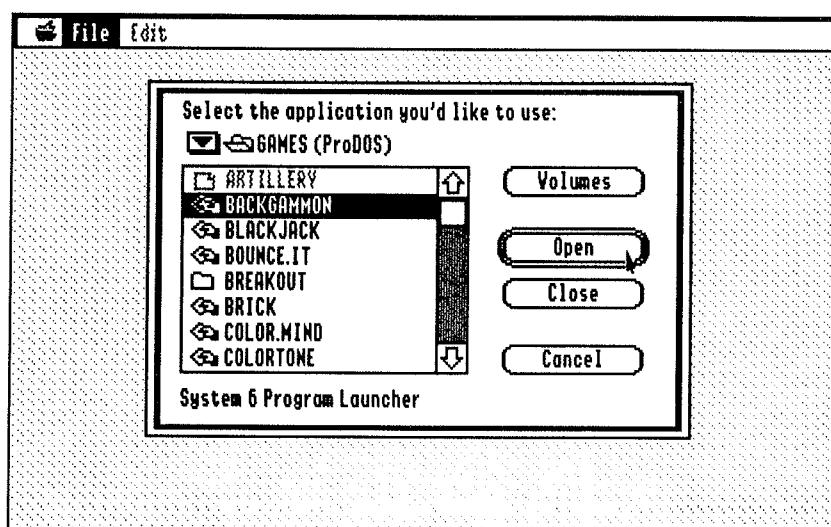


Figure 7F—The System 6 Launcher