

The ImageWriter LQ has two additional checkboxes for darker printing and unidirectional printing. With unidirectional printing, the print head only prints when traveling from left to right, for better alignment in graphics.

The LaserWriter has two checkboxes for smoothing and font substitution. Smoothing can help reduce the jagged edges encountered when printing graphics and certain kinds of text. Font Substitution makes the printer use Helvetica in place of Geneva and Courier in place of Monaco when printing text; since Helvetica and Courier are built into the printer but Geneva and Monaco are not, this can improve the print speed and the quality of the final output.

The StyleWriter driver has a pop-up menu to allow you to choose either automatic or manual sheet feed and another to select one of two print qualities. With manual sheet feeding, the computer will pause and ask you to insert a sheet of paper before each page is printed. Changing the print quality allows you to trade off your time for better print quality—360 DPI printing is much slower than 180 DPI.

Once you've set your Page Setup options, click "OK" or press Return to accept them. Page Setup options are saved with each document. If you decide you don't want to change the options after all, click "Cancel" or press Escape. Now you're ready to work on your document.

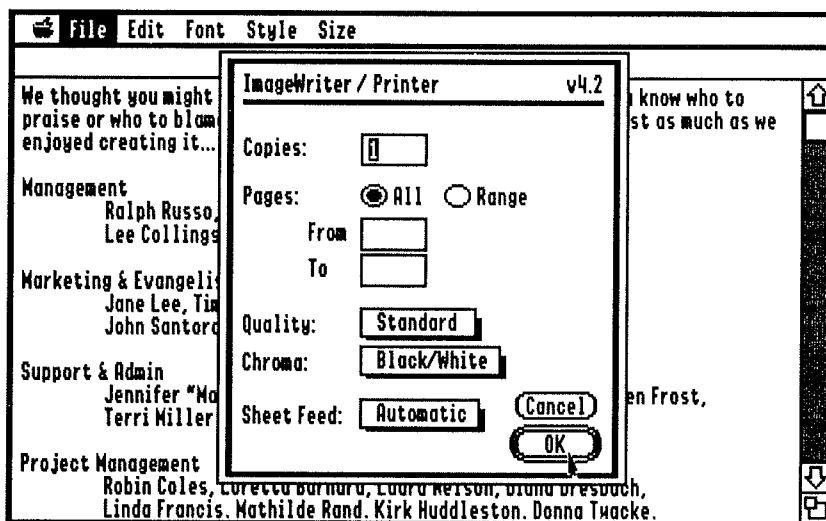


Figure 7E—Print Dialog (ImageWriter)

The Print Dialog

Once you've completed a document and are ready to print it, choose "Print" from the File menu. The Print dialog (Figure 7E) will appear. As before, we'll concentrate on the ImageWriter version of this dialog and mention how other printers' Print dialogs differ from it.