



01

2.4G SSID: [WAVLINK-AX_XXXX](#) Default Login Password: [admin](#)
5G SSID: [WAVLINK-AX_5G_XXXX](#) Official Website: [www.wavlink.com](#)
Default IP: [192.168.10.1](#) Technical Support: [support@wavlink.com](#)
Login: [http://waplogin.link](#)

Mode	LED Status	Description
Router mode	Slow blinking	No Internet/The device is in pair.
	Solid on	The device has connected to the Internet.
Repeater mode	Slow blinking	The device has connected to the upstream router but no access to the Internet.
	Solid on	The device has connected to the upstream router and the Internet has been connected.
	Fast blinking	The device has not connected to the upstream router.
Agent mode	Slow blinking	The device has connected to the upstream router but no access to the Internet.
	Solid on	The device has connected to the upstream router and the Internet has been connected.
	Fast blinking	The device has not connected to the upstream router.
AP mode	Solid on	The device has connected/disconnected to the Internet.

02

- ① Pass the RJ45 cable through the waterproof connector cover.
- ② Screw the waterproof seal into the waterproof connector bracket.
- ③ Pass the RJ45 cable through the waterproof connector bracket, and screw the waterproof connector bracket into the cover.
- ④ Put the waterproof sealing ring on the waterproof connector bracket.
- ⑤ Connect the RJ45 cable to WAN/LAN port.
- ⑥ Screw the connecting cable into the 2.4G and 5G antenna connector and screw up the connector.

03

Note: If it is installed in an area where lightning occurs frequently, we recommend you to install the device via a ground connection to strengthen the lightning protection function.

Diagram illustrating the PoE Converter setup. A PoE Converter is connected to a PoE Switch (labeled 04) and a PoE Injector. The PoE Converter is connected to a PoE Switch (labeled 04) and a PoE Injector. The PoE Converter is connected to a PoE Switch (labeled 04) and a PoE Injector.

04

Wireless


05

05

If you are using the AP/Router function of this device, please connect the LAN DATA IN Port to the LAN port of the upper router after finishing 4.3 and 4.4.

When the router is connected to your devices at its first time, the login page will pop up, you also can enter [192.168.10.1](#) or [waplogin.link](#) into the address bar of browser of your PC/laptop or phone. The default password is [admin](#).

06



07


08



You can change the **SSID** or use the default one, as for the **Encryption Mode** the default is **WPA2-PSK**, we recommend you to select **WPA3/WPA2-MIX** if your devices support. For your network security, please set a new password according to the rule. Then click on "**Save**" and wait for the setting process to complete.




If you choose the Router Mode, the system will guide you to select the **WAN Type**. As for the **Encryption Mode**, the default is **WPA2-PSK**, we recommend you to select **WPA3/WPA2-MIX** if your devices support. For you network security, we suggest you set a **Password**.



When you need to change your Wi-Fi password, please click on **"Wireless"**.

10

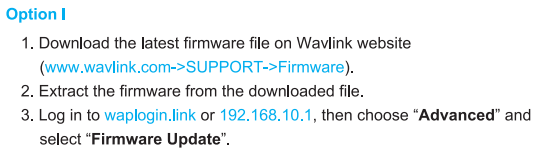

Note: After updating firmware, please Reset The Device And Clear Your Browser Cache.

Firmware fixes bugs for your device, contains new features, and improves the experience of using the product. For your device update and security, please ask us for help, wrong upgrade may damage your device and void the product warranty.

For more details, please visit our website www.wavlink.com and our technical support: support@wavlink.com.

12



- You may have entered the incorrect Wi-Fi password of your host Wi-Fi during the configuration. Please log into the device's web-based interface to check the password and try again.
- Reset the device and go through the configuration again.

For more details, please refer to www.wavlink.com.

This product includes software codes developed by third parties. These software codes are subject to either the GNU General Public License (GPL), Version 2, June 1991 or the GNU Lesser General Public License (LGPL), Version 2.1, February 1999. You can copy, distribute, and/or modify in accordance with the terms and conditions of GPL or LGPL.

The source code should be complete, if you want us to provide any additional source code files under GNU General Public License (GPL), please contact us in these matters. We are committed to meeting the requirements of the GNU General Public License (GPL). You are welcome to contact our local office to get the corresponding software and licenses. Please inform us of your contact details (full address) and the product code. We will send you a software package with the software and license for free.

The respective programs are distributed WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE.

Please refer to the GNU General Public License website for further information.
<http://www.gnu.org/licenses/old-licenses/lgpl-2.0.html>
<http://www.gnu.org/licenses/gpl.html>

 At the end of its serviceable life, this product should not be treated as household or general waste. It should be handed over to the applicable collection point for the recycling of electrical and electronic equipment, or returned to the supplier for disposal.

the LEDs turn on momentarily.

13

14