


MULTI-HEAD SCREEN TAPPER

USER MANUAL

MODEL G30

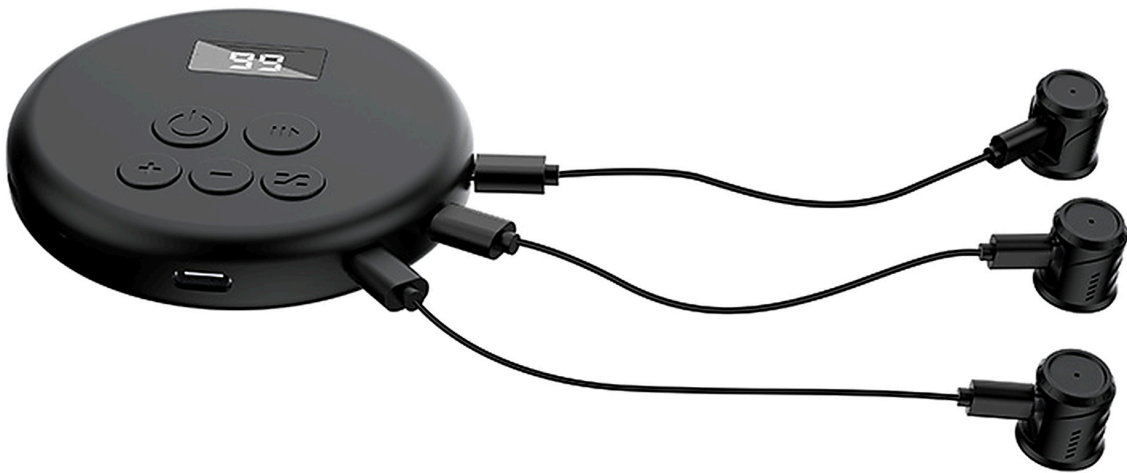


The WINDIN G30 Screen Tapper runs up to three detachable tapping heads from a single controller, so three phones or tablets can be tapped at the same time. Capacitive air-tap technology works just above the glass — completely silent, with no contact and no marks on the screen. 199 adjustable speed levels cover everything from 99 taps per second down to one tap every 99 seconds, a random-interval mode varies the gap between taps, and the 400 mAh battery keeps the tapper running even while it charges.

CONTENTS

- 1. WHAT’S INSIDE 3
- 2. TECHNICAL SPECIFICATIONS 5
- 3. GETTING STARTED 6
- 4. TAP SPEED & RANDOM TAP MODE 8
- 5. RUNNING SEVERAL DEVICES AT ONCE 9
- 6. CHARGING THE TAPPER 10
- 7. USER & AFTER-SALES GUIDE 11
- 8. LEGALESE 13


1. WHAT'S INSIDE

THE CONTROLLER

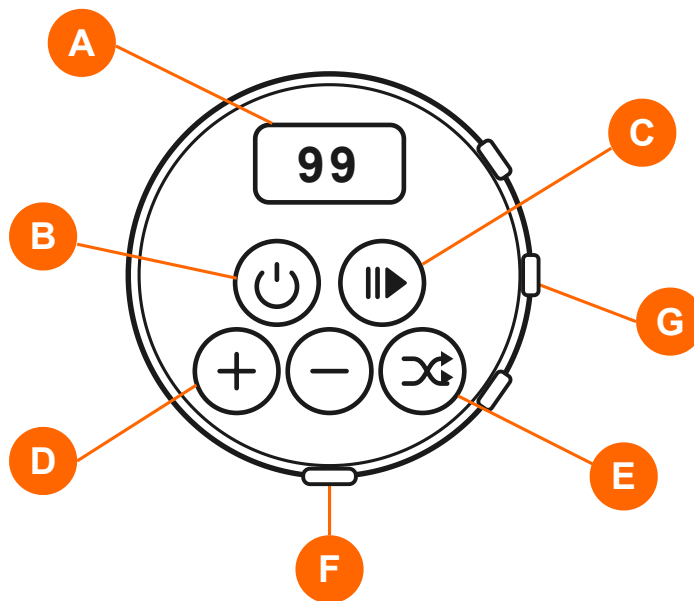


- A. LED Display:** Shows the current speed level, and stays lit while the tapper is running.
- B. Power On/Off:** Press briefly to switch the controller on or off.
- C. Start/Pause:** Press briefly to start tapping; press again to pause.
- D. Speed + / -:** Adjusts the tapping speed. Tap to move one level, hold to run quickly through the range.
- E. Random:** Press once to switch between fixed intervals and random intervals.
- F. USB Type-C Port:** For charging the built-in battery.
- G. Tapping Head Ports:** Plug in up to three tapping heads, in any combination.

THE TAPPING HEAD (× 3)

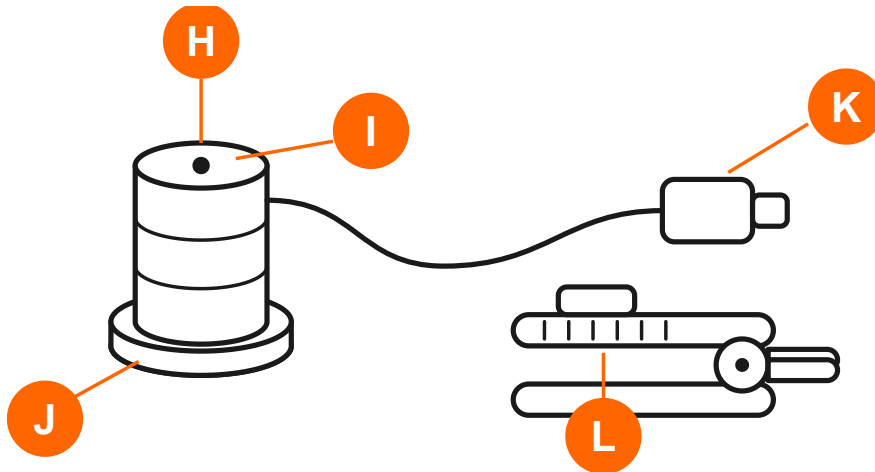

- H. Tapping Head:** The core component. It taps the screen silently, without touching the glass.
- I. Status Indicator:** Lights up when the head is connected and working.
- J. Contact Ring:** Sits on the screen and keeps the head steady and square to the glass.
- K. Connector Plug:** Plugs into any of the tapping-head ports on the edge of the controller.
- L. Fixing Clip:** Clamps onto the edge of a phone or tablet and holds the head in position.


IN THE BOX

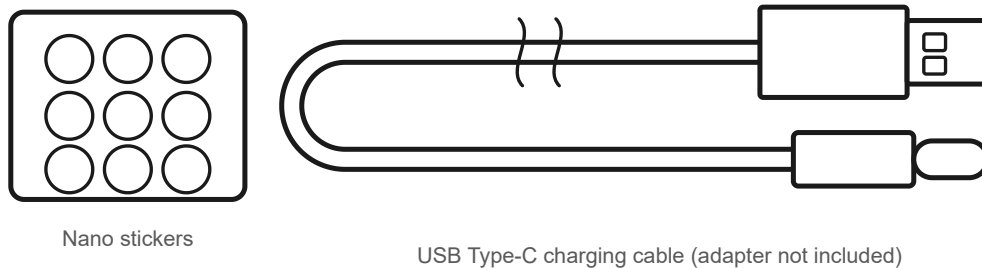

- 1 × Controller
- 3 × Tapping heads, with attached cables
- 3 × Fixing clips
- 10 × Nano stickers
- 1 × USB Type-C charging cable
- 1 × User manual

Power adapter not included.

2. TECHNICAL SPECIFICATIONS

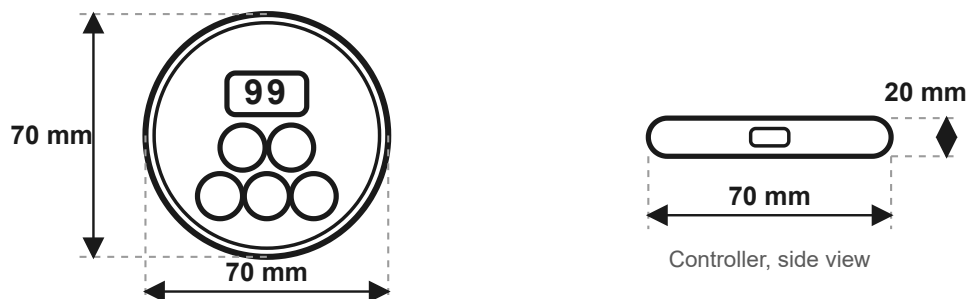


Product	Screen tapper / auto clicker
Model	G30 (1 controller + 3 tapping heads)
Tapping technology	Capacitive air-tap, non-contact
Tap speed range	99 taps per second – 1 tap per 99 seconds
Speed levels	199, adjustable
Speed control	One shared setting — all heads tap at the same speed
Tap modes	Fixed interval / random interval
Tapping heads	Up to 3, detachable
Display	LED speed display
Battery	400 mAh built-in, rechargeable
Charging	USB Type-C, 5 V — works while charging
Controller dimensions	70 × 70 × 20 mm
Controller weight	Approx. 40 g
Colour	Black
Compatibility	Capacitive touchscreens — iOS and Android phones and tablets

KEY FEATURES

- One controller drives up to three tapping heads at the same time
- Silent, non-contact tapping — no noise, no marks on the screen
- 199 adjustable speed levels, shown on the LED display
- Random-interval tap mode for a less mechanical tapping pattern
- 400 mAh rechargeable battery, and it keeps working while charging
- Clip mount or nano-sticker mount, for phones and tablets of any thickness
- No app and no pairing — plug the heads in and press start

3. GETTING STARTED


1. **Connect the tapping heads.** Push the plug on each head cable fully into one of the ports around the edge of the controller. Connect one, two or all three heads — the ports are identical and any port can be used.

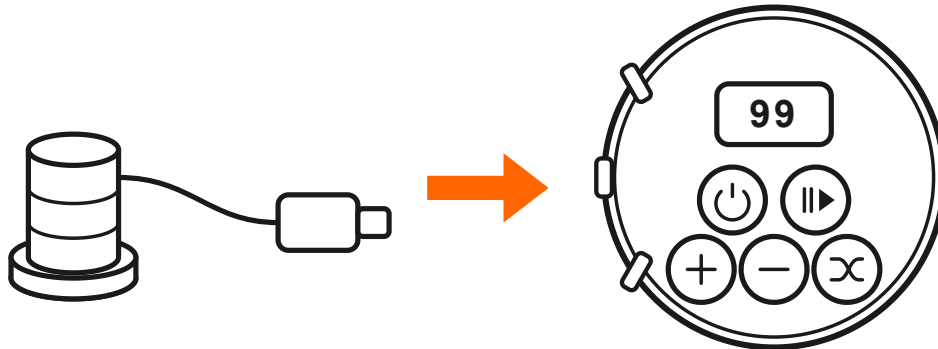

Push each tapping-head plug fully into a port on the edge of the controller.

i *Unused ports can be left empty. Only the heads that are plugged in will tap.*

2. **Mount the head on the screen.** Open the fixing clip, clamp it onto the edge of the phone or tablet, and swing the head over the area you want tapped. On a tablet, or anywhere the clip cannot reach, use one of the nano stickers to hold the head on the screen instead.

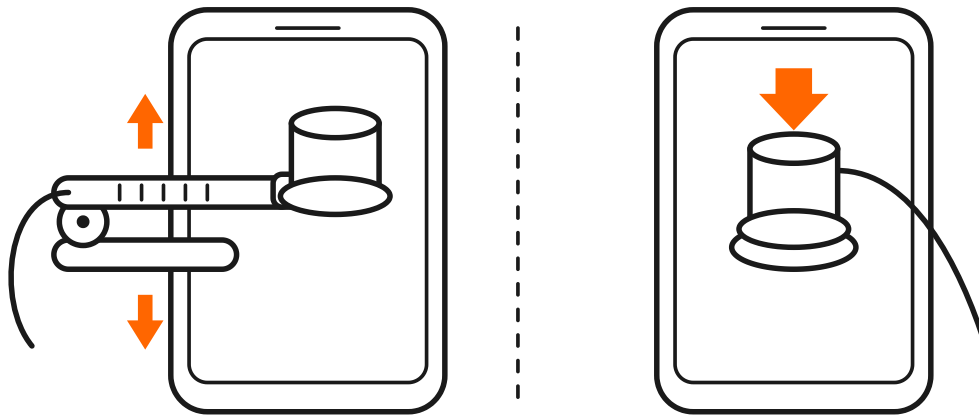


1. Clip the head onto the edge of the phone

2. Or mount it with a nano sticker

i *The head does not have to press into the glass. Rest the contact ring flat on the screen, directly over the spot that needs tapping.*

3. **Power on, set the speed, and start.** Press the Power On/Off button. The LED display lights up and shows the current speed level. Use Speed + / – to set the speed you need, then press Start/Pause to begin tapping. Press Start/Pause again at any time to pause.

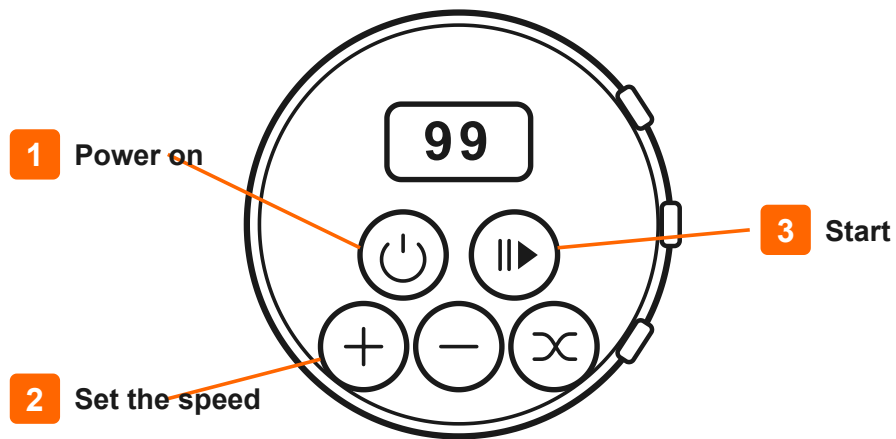


- i** The controller remembers the last speed level used. When you switch it on it returns to that level and waits in standby until you press Start/Pause. When you have finished, press Power On/Off to switch it off.

4. TAP SPEED & RANDOM TAP MODE

SETTING THE SPEED

The G30 has 199 speed levels. At the fast end of the range the taper reaches 99 taps per second; at the slow end it taps once every 99 seconds. The level currently selected is shown on the LED display.

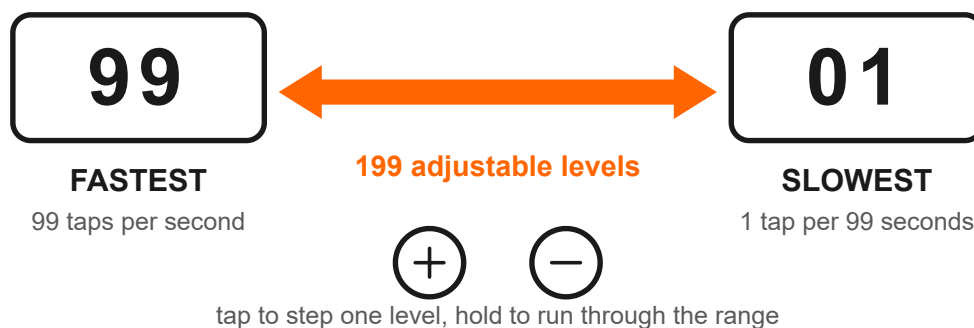

Tap the + or – button to move one level at a time. Hold either button down to run quickly through the range. The speed can be changed while the taper is running — there is no need to pause first. The speed you set applies to every connected head at once.

i If taps are being missed, the speed is set higher than the phone can register. Lower the speed a few levels and the taps will register reliably.

RANDOM TAP MODE

By default the gap between taps is fixed. Press the Random button once and the controller varies the gap instead, so the tapping pattern is no longer perfectly even. Press it again to return to fixed intervals.



RANDOM key

one press switches between fixed and random intervals

FIXED




RANDOM



5. RUNNING SEVERAL DEVICES AT ONCE

One controller drives up to three tapping heads, and each head can be mounted on a different phone or tablet. Connect the heads, mount each one on its own device, then press Start/Pause once — all connected heads start together.

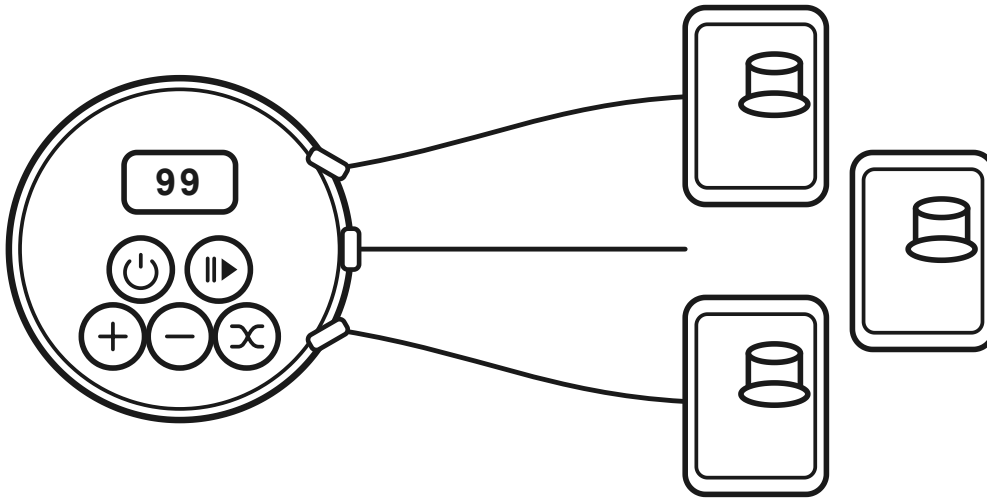


All three heads always tap at the same speed. The controller has one speed setting and one tap mode for the whole set, so the heads cannot be given different speeds from one another. Changing the speed changes it for every connected head at the same moment.

To take one device out of the session, simply unplug that head from the controller — the remaining heads carry on tapping.

- i** *If two devices need different tapping speeds, they have to be run in separate sessions, or with a second controller.*
- i** *Heads can be plugged in and unplugged at any time, including while the tapper is running.*

6. CHARGING THE TAPPER

The controller has a built-in 400 mAh rechargeable battery. Connect the supplied USB Type-C cable to the port on the edge of the controller and to any standard 5 V USB power adapter, laptop or power bank. A full charge takes approximately 2 hours.

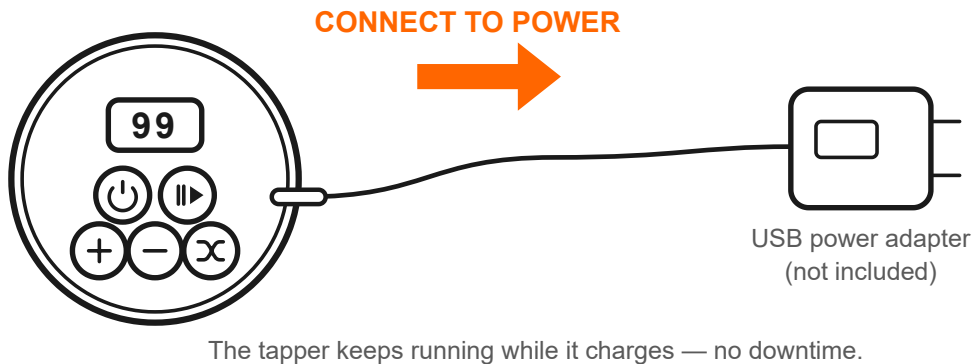

The G30 keeps tapping while it charges, so a long session does not have to be interrupted. If the tapper slows down, stops responding or will not switch on, charge it for one to two hours before using it again.

- i** Use only a standard 5 V USB power source. Do not charge the controller with a fast-charge adapter set to a higher voltage.

7. USER & AFTER-SALES GUIDE

Thank you for choosing our screen tapper. To get the best out of it, please read through this guide before use.

TROUBLESHOOTING & FAQ

The controller will not switch on:

Charge it for one to two hours with the supplied cable, then try again. A flat battery is the most common cause.

A head is not tapping:

1. Check that the plug is pushed fully into the port on the controller.
2. Try the same head in a different port. If it works there, the first port is at fault; if it does not, the head is at fault — please contact us.
3. Make sure the head is switched into the session: all connected heads start together when Start/Pause is pressed.

The screen is not responding to the taps:

1. Check that the contact ring is sitting flat on the screen.
2. Clean the screen — dust, water marks and thick screen protectors can block the tap.
3. Lower the speed. Some phones cannot register very fast taps and will skip some of them.

The tapping stops after a while:

Check the battery, and confirm the head has not been knocked out of position. Plugging the charging cable in lets the tapper carry on running.

WARRANTY & AFTER-SALES SUPPORT

We are committed to providing you with premium after-sales service and support:

- **12-Month Warranty:** We offer a 12-month warranty covering any non-artificial quality defects starting from the date of purchase.
- **30-Day Return & Replacement Policy:** If your product arrives damaged, defective, or with missing accessories, please contact us within 30 days of delivery for a hassle-free replacement or refund.
- **Customer Support:** If you have any questions or require technical assistance during use, please feel free to reach out to us at any time via Amazon Buyer-Seller Messages ("Contact Seller"). Our dedicated support team will respond within 24 hours.

Friendly Reminder: Please keep your Amazon Order ID and the original product packaging safely, as they serve as your proof of purchase for warranty claims. Thank you for your continued support and trust!

8. LEGALESE

COPYRIGHT AND INTELLECTUAL PROPERTY INFORMATION

©2026 WINDIN. All rights reserved. WINDIN and the WINDIN logo are trademarks or registered trademarks of WINDIN and/or affiliated companies. All other trademarks mentioned in this guide are the property of their respective owners.

WINDIN may have copyright, trademarks, trade secrets, patents, patent applications, or other intellectual property rights (whether registered or unregistered) concerning the Multi-Head Screen Tapper (the “Product”). Furnishing of this guide does not give you a license to any such copyright, trademark, patent or other intellectual property right. The Product may differ from pictures whether on packaging or otherwise. WINDIN assumes no responsibility for such differences or for any errors that may appear. Information contained herein is subject to change without notice.

LIMITED PRODUCT WARRANTY

The Product is covered by a 12-month limited warranty against non-artificial quality defects, starting from the date of purchase. If your product arrives damaged, defective, or with missing accessories, you may contact us within 30 days of delivery for a replacement or refund. For warranty claims, please contact us via Amazon Buyer-Seller Messages (“Contact Seller”) with your Amazon Order ID.

LIMITATION OF LIABILITY

WINDIN shall in no event be liable for any lost profits, loss of information or data, special, incidental, indirect, punitive or consequential or incidental damages, arising in any way out of distribution of, sale of, resale of, use of, or inability to use the Product. In no event shall WINDIN’s liability exceed the retail purchase price of the Product.

GENERAL

These terms shall be governed by and construed under the laws of the jurisdiction in which the Product was purchased. If any term herein is held to be invalid or unenforceable, then such term (in so far as it is invalid or unenforceable) shall be given no effect and deemed to be excluded without invalidating any of the remaining terms. WINDIN reserves the right to amend any term at any time without notice.