Redhill & Shoreham Aviation

Piper PA28

Checklist

UNOFFICIAL – FOR REFERENCE ONLY

G-CEZO edition (PA-28-161 Cadet)

with references to the G-CEZO POH (Report VB-1360)

Name: _____

31st March 2021 - Revision 1.0

FOR REFERENCE AND DOUBLE-CHECKING ONLY. Unofficial transcription. Part A is the Redhill & Shoreham checklist as printed; boxed **POH** notes are references to the G-CEZO POH and are not checklist items; Part B reproduces the POH checklists. The POH/AFM and the operator's procedures are authoritative. The pilot in command is responsible for the flight. Provided "as is" without warranty; to the fullest extent permitted by law no liability is accepted for any loss, damage, injury or death arising from its use.

Contents

Part A — Normal Checklist (Redhill & Shoreham) 4
External Checks . . . 4
Before Engine Start Checks . . . 8
Starting . . . 8
After Start . . . 9
Taxying . . . 9
Power Checks . . . 10
Pre-Takeoff Checks . . . 11
Take Off . . . 11
After Take-Off . . . 12
Climb . . . 12
En-Route Checks (FREDA) . . . 13
HASELL Checks (Stalls) . . . 13
Airfield Approach Checks: FFREDA . . . 14
Pre-Landing Checks . . . 14
Approach and Landing . . . 14
Glide Approaches . . . 16
Go-Around (Missed Approach) . . . 16
After Landing . . . 16
Shut Down . . . 17
After Engine Stop . . . 17

Part A — Emergencies (Redhill & Shoreham) 18
Engine Failure After Takeoff . . . 18
Crash Drill . . . 18
Engine Fire During Start . . . 18
Engine Fire In The Air . . . 19
Electrical Fire In The Air . . . 19
Cabin Fire In The Air . . . 19
Forced Landing Without Power . . . 20
Forced Landing With Power . . . 20
Ditching . . . 21
Low-Voltage/Electrical Failure . . . 22

Radio Failure 22
Uncertain of Position / Lost Procedure 22

Part A — Reference (Redhill & Shoreham) **24**

Part B — POH Checklists (reference) 26

1 Emergency Procedures (POH Section 3) **27**

2 Normal Procedures (POH Section 4) **33**


3 Cockpit Placards (POH 2.23) **42**

Part A — Normal Checklist (Redhill & Shoreham, Rev 1.0)

External Checks

Check documents are current and correct. Visually check the aircraft's general condition. Remove tie-down ropes, pitot head cover, chocks and any external control locks. In cold weather, remove even small accumulations of frost, ice or snow from the aircraft.

Check that the aircraft is parked in a free area, so that it may easily move onto the taxyway. Check that a fire extinguisher is available.

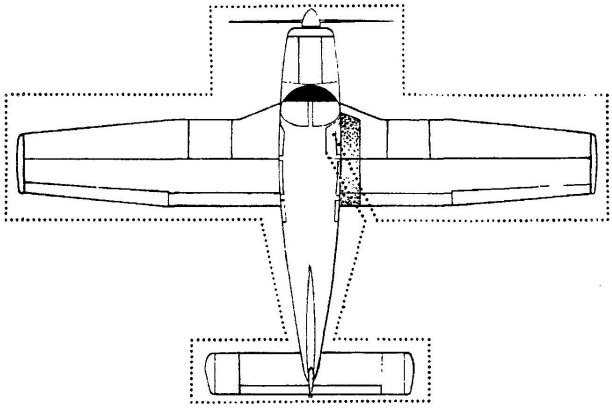

POH *4.5a Preparation (4.9) and 4.5b Preflight Checklists (4.11) — see Part B.*

1. Cockpit Preparation

Aircraft Documents ..... Stowed
Parking Brake ..... On
I.F. Screens ..... Stowed
First Aid Kit ..... Stowed
Fire Extinguisher ..... Checked
Magneto Switches ..... Off
Avionics Master Switch ..... Off
Circuit Breakers ..... Check In
Trim Indicator ..... Correct Movement/Set
Flying Controls ..... Full Free Correct Movement
Battery Switch ..... On

Pitot Heat ..... On
Fuel Contents ..... Check
Fuel selector ..... Emptier Tank
Annunciator/low voltage lights ..... Test/On

*Leave cockpit and check externally as necessary, and then re-enter cockpit before carrying out full external pre-flight inspection.

*Recognition/landing lights ..... On/Check/Off

1. Cockpit Preparation (Continued)

*Anti-collision lights ..... On/Check/Off
*Navigation lights ..... On/Check/Off (Leave on at night)
*Pitot heater ..... On/Check/Off
*Stall Warner ..... On/Check/Off
*Panel lighting ..... Check (Leave on at night)
Battery switch ..... Off
Pitot static drains ..... Operate
Flaps ..... Fully Down/Check All Stages

POH *4.11a COCKPIT — see Part B. It also includes: Mixture . . . IDLE CUT-OFF; Trim . . . CHECK, SET NEUTRAL.*

2. External: Cabin Upper Fuselage

Door ..... Closed Flush
Starboard Windows ..... Clean
Upper Fuselage ..... Check/Undamaged
Towbar (If Carried) ..... Stowed
Baggage Door ..... Secure

3. Starboard Wing

Flap ..... Check/Undamaged
Aileron (Surface, Hinges & Static Wicks) ..... Check/ Undamaged
Wing Tip ..... Undamaged
Strobe & Navigation Light ..... Undamaged
Wing Surfaces ..... Undamaged
Fuel Tank (Contents, Cap Secure, Vent, Drain, No Seepage) ..... Check
Main Gear (Oleo Extension 4½") ..... Check Security
Tyre (Inflation, Creep, No Damage) ..... Check
Brakes (Pads, No Hydraulic Leaks, Undamaged) ..... Check
Fresh Air Intake ..... Unobstructed

POH *4.11b RIGHT WING: Main Gear Strut . . . PROPER INFLATION (4.50 in.)*

4. Nose Section

Windscreen . . . . . Clean
OAT Probe . . . . . Check
Oil Contents (8 Qts Min 2 Qts, Recommended Minimum 6 Qts) . . . . . Check/Cap Secure
Starboard Cowling . . . . . Secure
Propeller/Spinner . . . . . Undamaged/Secure
Air Intakes . . . . . Unobstructed
Alternator Belt . . . . . Check Tension

Continues on next page

4. Nose Section (Continued)

Landing Light . . . . . Undamaged
Nose Gear (Oleo Extension 3¼") . . . . . Check Security
Tyre (Inflation, Creep, No Damage) . . . . . Check
Brake Fluid . . . . . Check
Port Cowling . . . . . Secure
Fuel Drain . . . . . Sample/No Seepage
Port Window . . . . . Clean

POH *4.11c NOSE SECTION: Nose Gear Strut . . . PROPER INFLATION (3.25 in.); Fuel Strainer . . . DRAIN, CHECK for water, sediment and proper fuel.*

5. Port Wing

Fresh Air Intake . . . . . Unobstructed
Brakes (Pads, No Hydraulic Leaks, Undamaged) . . . . . Check
Tyre (Inflation, Creep, No Damage) . . . . . Check
Main Gear (Oleo Extension 4½") . . . . . Check Security
Fuel Tank (Contents, Cap Secure, Vent, Drain, No Seepage) . . . . . Check
Pitot Head/Static . . . . . Unobstructed/Secure
Stall Warning Vane . . . . . Free/Undamaged
Wing Surfaces . . . . . Undamaged
Wing Tip . . . . . Undamaged
Strobe & Navigation Light . . . . . Undamaged
Aileron (Surface, Hinges & Static Wicks) . . . . . Check/ Undamaged
Flap . . . . . Check/Undamaged

POH *4.11d LEFT WING: Main Gear Strut . . . PROPER INFLATION (4.50 in.); Pitot/Static Head . . . REMOVE COVER - HOLES CLEAR.*

6. Rear Fuselage, Fin And Stabilator

Radio Aerials ..... Secure
Port Fuselage & Window ..... Undamaged/Clean
Fresh Air Intake ..... Check
Fin Surface ..... Undamaged/Secure
Rudder & Nav Light ..... Undamaged
Stabilator ..... Free/Undamaged
Air Conditioning Scoop (If Fitted) ..... Flush/Undamaged
Starboard Fuselage & Window ..... Undamaged/Clean
Static Vents (If Fitted) ..... Unobstructed/Clean

POH *4.11e FUSELAGE — see Part B.*

UNOFFICIAL – FOR REFERENCE ONLY

Before Engine Start Checks

1. Flaps ..... Retracted
2. External Checks ..... Completed
3. Passenger Briefing ..... Completed
4. Cabin Door ..... Closed & Latched
5. Seats
   Seat Backs Upright ..... Adjusted & Locked
6. Seat Belts & Shoulder Straps ..... Fitted & Secure
7. Alternate Static Selector (If Fitted) ..... Check/Normal
8. Flight Instruments
   Standby Compass & Deviation Card ..... Check Condition
9. Battery Master Switch ..... On
10. Annunciator/Low Voltage Light ..... Check/On
11. VAC Off Caption ..... On
12. Avionics/Radio Master Switch ..... Off

POH *4.5c Before Starting Engine (4.13): Brakes ... SET; Carburetor Heat ... FULL OFF; Fuel Selector ... DESIRED TANK; Avionics ... OFF; ALTR Switch ... ON.*

Starting

1. Anti-Collision Light ..... On
2. Fuel Selector ..... Tank With Lowest Contents
3. Mixture ..... Exercise/Set Rich
4. Throttle ..... Exercise/Set ¼”
5. Electric Fuel Pump ..... On, check pressure, Off
6. Prime ..... As Required & Lock
7. Lookout ..... Clear All Round, Open Window “CLEAR PROP”
8. Magnetos ..... On Both
9. Starter ..... Operate & Release as Soon as Engine Starts

POH *4.5d Engine Start (4.15). Cold engine: Throttle ... ¼ INCH OPEN; “If engine does not start within 10 sec., prime and repeat starting procedure.” Hot engine: Throttle ... ½ INCH OPEN. Flooded: Throttle OPEN FULL, Electric Fuel Pump OFF, Mixture IDLE CUT-OFF — see Part B.*

After Start

1. Starter Warning Light ..... Out, If Not Immediately Turn Magnetos Off
2. Oil Pressure ..... Within 30 secs 25 PSI Minimum (If Not, Shut down)
3. RPM ..... Set to 1200
4. Alternator/Ammeter ..... On & Holding Positive Charge
6. Low Voltage Light ..... Out
7. Suction ..... Check Registering, VAC off Caption Out
8. Annunciator Panel Lights ..... All Out
9. Fuel Pressure ..... Check
10. Avionics/Radio Master Switch ..... On (If Fitted)
11. Electric Trim (If Fitted) ..... Check
12. Flight Instruments ..... Check (AI erect, DI set, VSI, Turn Co-ord flag away) HSI/RMI Heading, Standby Compass/Slaving Meter
13. Avionics ..... Checked and Set As Required
14. Auto-Pilot (If Fitted) ..... Check and Off
15. Magnetos ..... Check at 1200 RPM
16. Radios ..... Radio Check, ATIS (if available) & Taxi Clearance
17. Altimeters ..... Cross Check & Set

POH *2.7(e) Oil Pressure Minimum (red line) 25 PSI. 4.17 Engine Warm-Up: Throttle . . . 800 to 1200 RPM.*

Taxying

1. Brakes & Nosewheel Steering ..... Check Operation Satisfactory For Both Pilots
2. Flight Intruments ..... During Turns Check Compass & D.I turning in same direction, turn Indicator: Turn & Skid. AI steady

POH *4.5f Taxiing (4.19) — see Part B.*

Power Checks

1. Position ..... Into wind. Avoid Rough Ground and Loose Stones. Clear of Aircraft and Personnel
2. Parking Brake ..... On
3. Fuel Selector ..... Change Tank to Fuller Tank
4. RPM ..... Check Clear All Round. Set to 2000
5. Carb. Heat ..... Check Operation & Return to Cold
6. Magnetos ..... Check Each Magneto in Turn. Max Permissible Drop 175 RPM; and Max. Differential is 50 RPM
7. Alternator Output ..... Check
8. Suction ..... 4.9 to 5.1" Hg.
9. Temperature & Pressure ..... Check, Steady and Within Limits
10. RPM ..... Smoothly Close the Throttle, Check Idle.Temps and Pressures Steady, Within Limits. Then Reset 1200

POH *4.21 Ground Check: Throttle . . . 2000 RPM; Magnetos . . . max. drop 175 RPM -max. diff. 50 RPM.*

POH differs *4.21 Ground Check: Vacuum . . . 4.8 to 5.1 in. Hg (Redhill item 8: 4.9 to 5.1" Hg).*

Pre-Takeoff Checks

1. Trim ..... Set for Take-Off
2. Throttle Friction ..... Finger Tight
3. Mixture ..... Mixture Rich.
4. Magnetos ..... Magnetos on Both. Master Switch On
5. Carb Heat ..... Off
6. Fuel Selector ..... On Fuller Tank, Check Contents
7. Fuel Pump ..... On, Pressure Checked
8. Flaps ..... Set (Normal 0°)
9. Engine Instruments ..... Check (Temperatures & Pressures)
10. Seat Belts / Seat Backs ..... Secure/Erect
11. Cabin Doors ..... Locked/Latched
12. Annunciator Panel ..... Test/All Lights Out
13. Flying Controls ..... Full Free Correct Movement
15. Radio & Transponder ..... Confirm Radio/Nav Set. Transponder set, Alt.
16. Flight Instruments ..... Check/Altimeters Set. Pitot Heat as Required
17. Lights ..... Recognition/Landing Lights and Anit-Cols Lights On
18. Take-Off Brief ... Review Speeds, Crosswind, Departure Brief & Emergency Procedures

POH *4.5h Before Takeoff (4.23) and the 2.23 TAKEOFF CHECKLIST placard — see Part B.*

Take Off

Normal Take-Off

1. Lookout ..... Obtain Clearance, Check Approach Clear Visually
2. Line up ..... On Runway Centreline, Ensure Nosewheel Straight, D.I. Indicating Runway Heading. Controls Free
3. Brakes ..... Off, Heels on Floor
4. Throttle ..... Smoothly Open to Full; Check Power
5. Oil ..... Temperature and Pressure Steady and in Green
6. Airspeed ..... Increasing
7. Elevator Control ..... Lift Nose by 60 Kts
8. Climb Speed ..... 80 Kts (Clean).

POH *4.25a Normal: Accelerate to 45 to 55 KIAS; Control Wheel . . . back pressure to rotate to climb attitude.*

POH differs *4.3(a) Best Rate of Climb Speed 79 KIAS (Redhill item 8: 80 Kts).*

Short Field Take-Off (Hard Surface)

1. Flaps ..... 25°
2. Brakes ..... Hold (Keep Moving During a Soft Field Take-Off)
3. Throttle ..... Fully Open, Check power, Oil Temp and Pressure
4. Brakes ..... Release
5. Elevator Control ..... Slight Back Pressure
6. Climb Speed ..... 80 Kts (Best angle of Climb is 65 Kts)

POH *4.25c 25° Flaps Takeoff: Accelerate to 40-50 KIAS (depending on weight) . . . maintain 44 to 55 KIAS (depending on weight) until obstacle clearance is achieved and climb out at 79 KIAS.*

POH differs *4.3(b) Best Angle of Climb Speed 63 KIAS (Redhill item 6: 65 Kts); 4.3(a) Best Rate 79 KIAS (Redhill: 80 Kts).*

After Take-Off

1. Lookout ..... Point Selected Left of Nose, Check Drift
2. Flaps ..... Retract Above 200' a.g.l, Not Below 65 Kts
3. Oil ..... Temperature and Pressure Steady, Within Limits
4. Recognition/Landing Lights ..... Off
5. Fuel Pump ..... Off (Above 1000ft a.g.l)

POH *4.25c Flaps . . . RETRACT SLOWLY. 4.27 Electric Fuel Pump . . . OFF at desired altitude.*

Climb

Normal Climb

1. Airspeed ..... Clean: 80 Kts (Best Rate of Climb)
2. Throttle ..... Fully Open
3. Mixture ..... Rich Below 3000'

POH differs *4.27 Best Rate Climb Speed (Flaps Up) 79 KIAS (Redhill item 1: 80 Kts).*

En-Route Climb

1. Airspeed ..... 90 Kts
2. Throttle ..... Fully Open
3. Mixture ..... As Required

POH differs *4.27 En Route 87 KIAS (Redhill item 1: 90 Kts).*

En-Route Checks (FREDA)

1. **F**uel ..... Check Contents/Balanced
2. **R**adio / Radio aids Check Volume; Frequency Change if Required / Radio Aids Identified
3. **E**ngine ..... Oil Temperature and Pressure Steady and Within Limits. Ammeter Charging. Suction Within Limits. Check for Carb. Icing. Mixture as Required.
4. **D**irection Indicator ..... Check D.I.
5. **A**ltimeter ..... Set

POH *4.5k Cruise (4.29): Normal Maximum Power . . . 75%; Power . . . SET per power table; Mixture . . . ADJUST.*

HASELL Checks (Stalls)

1. **H**eight ..... Sufficient to Recover by 2000' AGL
2. **A**irframe ..... Flaps as Required. Brakes off
3. **S**ecurity ..... Doors, Windows and Harnesses Secure; No Loose Articles
4. **E**ngine ..... Check Oil Temperature and Pressure, Mixture as Required, Check Fuel Contents, Fuel Pump On, Clear Carb Ice
5. **L**ocation Clear of Airfields, Built Up Areas, Controlled Airspace or Cloud and Danger Areas
6. **L**ookout ..... Check No Aircraft Around, Particularly Below

POH *3.2a Stall speeds: 2325 lbs (0° Flap) 50 KIAS; 2325 lbs (Full Flap 44 KIAS. 3.3k Spin Recovery — see Part B.*

HELL (For Continued Exercise)

1. **H**eight ..... Sufficient to Recover by 2000' AGL
2. **E**ngine ..... Check Oil Temperature and Pressure, Mixture as Required, Check Fuel Contents, Clear Carb Ice
3. **L**ocation Clear of Airfields, Built Up Areas, Controlled Airspace or Cloud and Danger Areas
4. **L**ookout ..... Check No Aircraft Around, Particularly Below

Note: Reset D.I after completion of the exercise

Airfield Approach Checks: FFREDA

1. **F**uel ..... Check Quantity/Balanced
2. **F**uel Pump ..... On
2. **R**adio ..... Correct Frequency Volume Up. Radio Aids Identified
3. **E**ngine ..... Temperature and Pressure in Limits, Mixture Rich
4. **D**irection Indicator ..... D.I. Reset
5. **A**ltimeters ..... Altimeters Set

Pre-Landing Checks

1. **B**rakes ..... Brakes Off; Pressure Up
2. **M**ixture ..... Mixture Rich
3. **C**arb. Heat ..... Carb. Heat, Check for Icing and then Return to Cold
4. **F**uel ..... Fuel On, Sufficient for Go Around
5. **O**il ..... Oil Temperature and Pressure Within Limits
6. **H**atches and Harnesses ..... Pilot and Passenger Secure
7. **L**ights ..... Recognition/Landing Lights On

POH *4.5n Approach and Landing (4.33) and the 2.23 LANDING CHECKLIST placard — see Part B.*

Approach and Landing

Normal Landing

1. Carb. Heat ..... Apply Full Heat Before Closing Throttle
2. Flaps ..... Select 25° When Speed is Below V_{FE}
3. Airspeed ..... Initially 70 Kts. Final Approach, 63 Kts, Flap 40°
4. Touchdown ..... Mainwheels First, Lower Nose Wheel Gently
5. Braking ..... Minimum Required

POH *4.33: Flaps . . . SET - 103 KIAS MAXIMUM; Trim to 70 KIAS; Final Approach Speed (Flaps 40°) . . . 63 KIAS. 2.5 White Arc (Flap Down) 44 KTS to 103 KTS.*

Flapless Landing

1. Airspeed ..... 75 Kts

Shortfield Landing

1. Flaps ..... 40°
2. Airspeed ..... 65 Kts
3. Touchdown ..... Main Wheels, Lower the Nose
4. Brakes ..... Apply Positively

POH differs *4.3(e) Landing Final Approach Speed (Flaps 40°) 63 KIAS (Redhill item 2: 65 Kts).*

Glide Approaches

Airspeed ..... 75 Kts
Flap ..... As Required

Notes: 1. During prolonged glides; the engine should be warmed every 500'.
2. The approach speeds are for calm conditions, in gusty or turbulent conditions the figures should be increased.

POH differs *3.2d Power Off Glide Speed 2325 lbs (0° Flap) 73 KIAS (Redhill: 75 Kts).*

Go-Around (Missed Approach)

1. Throttle ..... Full Power
2. Carb. Heat ..... Cold
3. Airspeed ..... 65 Kts Until Clear of Obstacles, then 80 Kts
4. Flaps .... If 30°, Retract to 25° as Soon as Possible. Retract Remaining 25° Above 200'
5. Radio ..... Inform ATC

POH *4.3: Best Angle of Climb Speed 63 KIAS; Best Rate of Climb Speed 79 KIAS.*

Continues on next page

After Landing

Clear the runway and stop the aircraft

1. Carb Heat ..... Cold
2. Flaps ..... Up
3. Fuel Pump ..... Off
3. Pitot heat ..... Off
4. Strobe Lights / Landing Lights ..... Off / As Required
5. Trimmers ..... Set Neutral
5. Transponder ..... Standby
6. Non-essential Electrics ..... Off

Shut Down

1. Park ..... Into Wind, Nosewheel Straight
2. Parking brake ..... On
3. Engine ..... 1200 RPM for 30 secs; Check Oil Temperature and Pressure
4. Magnetos ..... Check
5. Avionics/Radio Master Switch ..... Off
6. Mixture ..... Full Lean
7. Throttle ..... Closed

POH *4.5o Stopping Engine (4.35): . . . Throttle . . . FULL AFT; Mixture . . . IDLE CUT-OFF; Magnetos . . . OFF; ALTR Switch . . . OFF; BATT MASTR Switch . . . OFF — full list in Part B.*

After Engine Stop

1. Magnetos ..... Off, Key Out
2. Exterior Lights ..... All Off
3. Fuel Selector ..... Off
4. Interior Lights ..... Off
5. Battery & Alternator Masters ..... Off
6. Harnesses ..... Tidy
7. External ..... Pitot Cover On. Lock up and tie down. Use Chocks if necessary

POH *4.5p Mooring (4.37) — see Part B.*

End of Normal Checklist

Part A — Emergencies (Redhill & Shoreham, Rev 1.0)

Engine Failure After Takeoff

If the engine fails after take-off you should (as soon as you notice the loss of power):

1. Lower the Nose and Maintain the Aircraft's Gliding Speed
2. Close the Throttle
3. Select the Most Suitable Landing Area, Compatible With Obstructions and Wind Direction; Preferably Straight Ahead or Within 30° Either Side
4. Maintain Speed and Use Flap as Necessary
5. If Time Permits: - Mixture to I.C.O., Fuel Off, Fuel Pump Off, Magnetos Off, Door Unlocked and Harnesses Tight, Mayday Call, Master Switch Off
6. After Touchdown Leave the Aircraft as Quickly as Possible

POH *3.3b Engine Power Loss During Takeoff (3.9) and 3.3d Power Off Landing — see Part B. 3.2d Power off glide speed 73 KIAS.*

Crash Drill

1. Mixture I.C.O, Fuel Pump Off
2. Fuel Selector Off
3. Magnetos Off
4. Brakes Off
5. Harnesses Very Tight
6. Hatches Unlatched
7. Master Switch Off (After Electrical Services are No Longer Required)

POH *3.3d When committed to landing: Ignition . . . OFF; BATT MASTR Switch . . . OFF; ALTR Switch . . . OFF; Fuel Selector . . . OFF; Mixture . . . IDLE CUT-OFF; Seat Belts and Harnesses . . . TIGHT.*

Engine Fire During Start

1. Starter - Crank Engine
2. Mixture - Idle Cut Off
3. Throttle - Open
4. Electric Fuel Pump - Off
5. Fuel Selector - Off
6. Abandon Aircraft if Fire Continues

POH *3.3a Engine Fire During Start (3.7) — same items, see Part B.*

Engine Fire In The Air

1. Fuel Selector - Off
2. Throttle - Closed
3. Mixture - Idle Cut-Off
4. Electric Fuel Pump - Check Off
5. Heater and Defroster - Off
6. Proceed with Power Off Landing Procedure

POH *3.3e Fire In Flight (3.15), Engine fire — same items; proceed with POWER OFF LANDING procedure (3.3d).*

Electrical Fire In The Air

1. Master Switch Off, Alternator Off
2. Vents - Open
3. Cabin Heat - Off
4. Land as soon as Practicable.

POH *3.3e Electrical fire (smoke in cabin): BATT MASTR Switch . . . OFF; ALTR Switch . . . OFF; Vents . . . OPEN; Cabin Heat . . . OFF; Land as soon as practical.*

Cabin Fire In The Air

1. Master Switch Off
2. Vents, Cabin Air/Heat Closed
3. Use Fire Extinguisher and Then Ventilate The Cabin
4. Land as Soon as Possible.

POH *No separate POH procedure; see 3.3e Fire In Flight.*

Continues on next page

Forced Landing Without Power

1. Adopt Glide and Trim for Correct Gliding Speed
2. Check Wind Direction
3. Select Landing Area and 1000' Area
4. Plan Circuit
5. Complete Failure Checks:
   - Switch Tanks
   - Electric Fuel Pump On
   - Mixture Rich
   - Carb. Heat Change Position
   - Magnetos on Both
   - Primer Locked
6. Mayday Call on Radio
7. Complete Crash Drill
8. Use Full Flap for the Touchdown if Possible
9. Apply Heavy Braking

POH *3.3c Engine Power Loss In Flight (3.11) and 3.3d Power Off Landing (3.13): Trim for 73 KIAS; 1000 ft. above field at downwind position for normal landing approach; slow to 63 KIAS for shortest landing — see Part B.*

Forced Landing With Power

1. Assess the Time Available and Check Fuel State, Hours of Daylight and Rate of Weather Deterioration
2. Check Wind Direction
3. Select Suitable Landing Area
4. Carry Out an Inspection Run at Slow Safe Cruising Speed; Initially at 500' to Check for Obstructions and Secondly at 100' Over the Landing Area to Reassess the Approach Path, Landing Surface and Overshoot Area (if time permits)
5. Set up For a Short or Soft Field Landing (as appropriate)

Ditching

1. Set up Minimum Rate of Descent (75 Kts)
2. Mayday Call
3. Secure or Jettison Heavy Objects
4. With High Winds and Heavy Seas: Approach Into Wind.
   With Light Winds and Heavy Swells: Approach Parallel to Swells.
5. Unlatch the Door
6. Touchdown in a Level Attitude
7. Evacuate Through the Cabin Door; if Necessary Open Window to Equalise Pressure

Notes:

1. Ideally, land ahead and either side of a small ship.
2. **Do not inflate life jackets in the cockpit.**

POH *No ditching procedure in the POH. 3.2d Power off glide speed 73 KIAS.*

Low-Voltage/Electrical Failure

1. Check Ammeter, if Reading Zero, Alternator Off
2. Reset Circuit Breaker
3. Alternator On
4. Reduce Electrical Load

Notes:

1. If total electrical failure occurs, keep an extra good lookout. Land when safe to do so, clear the runway as quickly as possible and phone ATC at once.

POH *3.3i Electrical Failures (3.23), 3.3j Electrical Overload (3.25) — see Part B.*

Radio Failure

1. Check Correct Frequency
2. Check Squelch Setting (if applicable)
3. Check Volume
4. Check Microphone Plug Secure
5. Check Circuit Breaker
6. Try to Communicate Using the Other PTT Switch

Notes:

1. If the radio is unserviceable: flash the landing light on approach and land on visual signals.
2. If flying outside of the circuit, follow lost comm procedure from AIP.

Uncertain of Position / Lost Procedure

Uncertain of Position

Inform ATC immediately on the frequency you are in communication with.

Check flight plan, log, compass and heading for gross errors; calculate DR position; from flight time decide radius of circle of uncertainty; mark on map using DR position as Centre; estimate new heading from DR position to regain destination or track. Utilise Nav aids including moving map if available.

Lost Procedure

a) Radio Available

Check frequency selection; declare that you are lost; make maximum use of aids available; consider increasing height to improve range (taking account of controlled airspace). R/T procedure: urgency or distress call to obtain fix. You are no longer lost. Follow the ATC instructions in full.

b) Radio Not Available

i. Check remaining fuel and calculate endurance; consider daylight remaining, weather tendency, nature of terrain in relation to probable position, minimum safe altitude; re-check flight log for errors; switch transponder, if available, to emergency code.

ii. Map reading from ground to map and try to identify the likely area from the nature of the terrain before checking other features. Look for prominent features in the distance as well as nearby; adhere to a calculated heading and keep map properly orientated.

iii. Decide on a positive course of action; relative merits of square search, flight towards prominent or line feature outside of circle of uncertainty; consider precautionary landing (see Ex 17) if you are short of fuel or are unable to continue the flight.

End of Emergency Checklist

POH *POH emergency procedures with no Redhill equivalent: 3.3f Loss of Oil Pressure; 3.3g Loss of Fuel Pressure; 3.3h High Oil Temperature; 3.3j Electrical Overload; 3.3k Spin Recovery; 3.3m Open Door; 3.3n Engine Roughness; 3.3o Carburetor Icing — see Part B.*

Part A — Reference (Redhill & Shoreham, Rev 1.0)

Altimeter Setting Procedures

		No. 1	No. 2
Pre-flight	Check +50 ft / -75 ft of datum, 50 ft of each other	Airport QFE Airport QNH	Airport QFE Airport QNH
Departure	For take-off Cleared to a FL.	Airport QNH 1013	Airport / zone QNH Airport / zone QNH
Cruise	Above Transition Alt At / below Transition Alt	1013 Regional QNH	Regional QNH Regional QNH
Note	In or below TMA use TMA QNH not regional QNH		
Descent	Cleared to FL Cleared to Altitude	1013 Zone / airport QNH	Zone / regional QNH Zone / regional QNH
Final Approach / Circuits		Airport QNH / QFE	Airport QNH
Missed Approach		Airport QNH	Airport QNH
Note	Airport QNH is valid within 25m of airport		

Recommended Operating Speeds / Limitations

		Archer 181	Warrior 161
Take-Off	Rotate (depending on weight) *Reduced by 5 kts for soft fields*	60	60
Climb	0° Flap / Best Rate 0° Flap / Best Angle Cruise Climb *Minimum speed of 60 kts for flap retraction*	79 65 90	79 63 90
Cruise	Normal / 2200 RPM Bad Vis. 20° Flap / 2000 RPM	100 70	90 70
Approach	Normal (25° Flap) Glide Flapless Performance / Short-field (40° Flap) *1. For max performance approach speed is 63 kts* *2. Add 5kts to take-off speeds and V_{AT} in strong winds / turbulence, reducing flap settings as necessary*	70 75 75 65	70 75 75 65
Max Airspeeds	V_{FE} (White Arc) V_{NO} (Green Arc) V_{NE} (Red Line) V_A (Manoeuvring Speed @ MAUW)	102 125 154 113	103 126 160 111
Max X-Wind		17	17

Crosswind Angle	10°	20°	30°	40°	50°	60°	70°	80°	90°
Crosswind Factor	0.2	0.3	0.5	0.6	0.7	0.8	0.9	0.9	1.0

POH *G-CEZO is a PA-28-161 (Warrior 161 column). G-CEZO POH values: stall 2325 lbs 0° flap 50 KIAS, full flap 44*

KIAS (3.2a); Best Angle 63 KIAS, Best Rate 79 KIAS (4.3); En Route climb 87 KIAS (4.27); Maneuvering V_A 111 KIAS at 2325 LBS, 88 KIAS at 1531 LBS (2.3); White Arc 44 KTS to 103 KTS, Green Arc 50 KTS to 126 KTS, Yellow Arc 126 KTS to 160 KTS, Red Radial Line 160 KTS (2.5); Power off glide 73 KIAS (3.2d); Final approach (Flaps 40°) 63 KIAS (4.3); Maximum Demonstrated Crosswind Velocity 17 KTS (4.3).

Part B — POH Checklists (reference)

Reproduced word for word from the G-CEZO POH (Report VB-1360), including original spelling. Paragraph numbers in brackets refer to the amplified procedures in the POH.

Emergency Procedures (POH Section 3)

3.2 AIRSPEEDS FOR SAFE OPERATIONS

3.2a STALL SPEEDS

2325 lbs (0° Flap) ..... 50 KIAS
2325 lbs (Full Flap ..... 44 KIAS

3.2b MANEUVERING SPEEDS

2325 lbs ..... 111 KIAS
1531 lbs ..... 88 KIAS

3.2c NEVER EXCEED SPEED

Never Exceed Speed ..... 160 KIAS

3.2d POWER OFF GLIDE SPEED

2325 lbs (0° Flap) ..... 73 KIAS

3.3 EMERGENCY PROCEDURES CHECKLIST

3.3a ENGINE FIRE DURING START (3.7)

Starter ..... CRANK ENGINE
Mixture ..... IDLE CUT-OFF
Throttle ..... OPEN
Electric Fuel Pump ..... OFF
Fuel Selector ..... OFF
Abandon if fire continues

3.3b ENGINE POWER LOSS DURING TAKEOFF (3.9)

If sufficient runway remains for a normal landing, land straight ahead.

If insufficient runway remains:
Maintain safe airspeed
Make only shallow turn to avoid obstructions
Flaps as situation requires

If sufficient altitude has been gained to attempt a restart:
Maintain safe airspeed
Fuel Selector ..... SWITCH to tank containing fuel
Electric Fuel Pump ..... CHECK ON
Mixture ..... CHECK RICH
Carburetor Heat ..... ON
Primer ..... LOCKED

If power is not regained, proceed with power off landing (3.3d).

3.3c ENGINE POWER LOSS IN FLIGHT (3.11)

Fuel Selector ..... SWITCH to tank containing fuel
Electric Fuel Pump ..... ON
Mixture ..... RICH
Carburetor Heat ..... ON
Engine Gauges ..... CHECK for indication of cause of power loss
Primer ..... CHECK LOCKED
If no fuel pressure is indicated, check tank selector position to be sure it is on a tank containing fuel.

When power is restored:
Carburetor Heat ..... OFF
Electric Fuel Pump ..... OFF

If power is not restored, prepare for power off landing (3.3d).
Trim for 73 KIAS

3.3d POWER OFF LANDING (3.13)

Locate suitable field.
Establish spiral pattern.
1000 ft. above field at downwind position for normal landing approach. When field can easily be reached slow to 63 KIAS for shortest landing.

Touchdowns should normally be made at lowest possible airspeed with full flaps extended.

When committed to landing:
Ignition ..... OFF
BATT MASTR Switch ..... OFF
ALTR Switch ..... OFF
Fuel Selector ..... OFF
Mixture ..... IDLE CUT-OFF
Seat Belts and Harnesses ..... TIGHT

3.3e FIRE IN FLIGHT (3.15)

Source of Fire ..... CHECK

Electrical fire (smoke in cabin):

BATT MASTR Switch ..... OFF
ALTR Switch ..... OFF
Vents ..... OPEN
Cabin Heat ..... OFF
Land as soon as practical.

Engine fire:

Fuel Selector ..... OFF
Throttle ..... CLOSED
Mixture ..... IDLE CUT-OFF
Electric Fuel Pump ..... CHECK OFF
Heater ..... OFF
Defroster ..... OFF
Proceed with POWER OFF LANDING procedure (3.3d).

NOTE

The possibility of an engine fire in flight is extremely remote. The procedure given is general and pilot judgement should be the determining factor for action in such an emergency.

3.3f LOSS OF OIL PRESSURE (3.17)

Land as soon as possible and investigate cause.
Prepare for power off landing (3.3d).

3.3g LOSS OF FUEL PRESSURE (3.19)

Electric Fuel Pump ..... ON
Fuel Selector ..... CHECK on TANK CONTAINING FUEL

3.3h HIGH OIL TEMPERATURE (3.21)

Land at nearest airport and investigate the problem.
Prepare for power off landing (3.3d).

3.3i ELECTRICAL FAILURES (3.23)

NOTE

When operating with light electrical load and a fully charged battery, the Alternator Inop. light may illuminate due to minimal alternator output. If the alternator is functional a slight increase in electrical load should extinguish the Inop. indication.

ALT annunciator light illuminated:
Ammeter ..... CHECK to VERIFY inop. alt.

If ammeter shows zero:
ALTR switch ..... OFF

Reduce electrical loads to minimum:
ALTNTR. FIELD Circuit Breaker ..... CHECK and RESET as required
ALTR Switch ..... ON

If power not restored:
ALTR Switch ..... OFF
If alternator output cannot be restored, reduce electrical loads and land as soon as practical. The battery is the only remaining source of electrical power.

3.3j ELECTRICAL OVERLOAD (Alternator over 20 amps above known electrical load) (3.25)

ALTR Switch ..... ON
BATT MASTR Switch ..... OFF

If alternator loads are reduced:
Electrical Load ..... REDUCE to Minimum
Land as soon as practical.

NOTE

Due to increased system voltage and radio frequency noise, operation with ALT switch ON and BATT switch OFF should be made only when required by an electrical system failure.

If alternator loads are not reduced:
ALTR switch ..... OFF
BATT MASTR Switch ..... AS REQUIRED
Land as soon as possible. Anticipate complete electrical failure.

3.3k SPIN RECOVERY (3.27)

Throttle ..... IDLE
Ailerons ..... NEUTRAL
Rudder ..... FULL OPPOSITE to DIRECTION of ROTATION
Control Wheel ..... FULL FORWARD
Rudder ..... NEUTRAL (when rotation stops)
Control Wheel ... AS REQUIRED to SMOOTHLY REGAIN LEVEL FLIGHT ATTITUDE

3.3m OPEN DOOR (3.29)

If both upper and lower latches are open, the door will trail slightly open and airspeeds will be reduced slightly.

To close the door in flight:
Slow airplane to 89 KIAS
Cabin Vents ..... CLOSE
Storm Window ..... OPEN
If upper latch is open ..... LATCH
If side latch if open PULL on ARMREST while moving latch handle to LATCH position.
If both latches are open ..... LATCH SIDE LATCH then TOP LATCH.

3.3n ENGINE ROUGHNESS (3.31)

Carburetor Heat ..... ON

If roughness continues after one minute:
Carburetor Heat ..... OFF
Mixture ..... ADJUST for MAXIMUM SMOOTHNESS
Electric Fuel Pump ..... ON
Fuel Selector ..... SWITCH TANKS
Engine Gauges ..... CHECK
Magneto Switch ..... L then R then BOTH

If operation is satisfactory on either magneto, continue on that magneto at reduced power and full RICH mixture to first airport.

Prepare for power off landing (3.3d).

NOTE

Partial carburetor heat may be worse than no heat at all, since it may melt part of the ice which will refreeze in the intake system. Therefore, when using carburetor heat always use full heat; and, when ice is removed, return the control to the full cold position.

3.3o CARBURETOR ICING (3.33)

Carburetor Heat ..... ON
Mixture ..... ADJUST for MAXIMUM SMOOTHNESS

Normal Procedures (POH Section 4)

4.3 AIRSPEEDS FOR SAFE OPERATIONS

(a) Best Rate of Climb Speed ..... 79 KIAS
(b) Best Angle of Climb Speed ..... 63 KIAS
(c) Turbulent Air Operating Speed (See Subsection 2.3) ..... 111 KIAS
(d) Maximum Flap Speed ..... 103 KIAS
(e) Landing Final Approach Speed (Flaps 40°) ..... 63 KIAS
(f) Maximum Demonstrated Crosswind Velocity ..... 17 KTS

4.5 NORMAL PROCEDURES CHECKLIST

4.5a Preparation (4.9)

Airplane Status ..... AIRWORTHY, PAPERS ON BOARD
Weather ..... SUITABLE
Baggage ..... WEIGHED, STOWED, TIED
Weight and C.G. ..... WITHIN LIMITS
Navigation ..... PLANNED
Charts and Navigation Equipment ..... ON BOARD
Performance and Range ..... COMPUTED AND SAFE

CAUTION

The flap position should be noted before boarding the airplane. The flaps must be placed in the UP position before they will lock and support weight on the step.

4.5b Preflight Checklists (4.11)

COCKPIT (4.11a)

Control Wheel ..... RELEASE BELTS
Circuit Breakers ..... IN
Avionics ..... OFF
Parking Brake ..... SET
Electric Switches ..... OFF
Magneto Switch ..... OFF
Mixture ..... IDLE CUT-OFF
BATT MASTR Switch ..... ON
Fuel Quantity Gauges ..... CHECK
Annunciator Panel ..... CHECK
BATT MASTR Switch ..... OFF

Flight Controls ..... CHECK
Flaps ..... CHECK
Trim ..... CHECK, SET NEUTRAL
Pitot Drain ..... DRAIN, CLOSE
Static Drain ..... DRAIN, CLOSE
Windows ..... CHECK, CLEAN
Tow Bar ..... STOW
Baggage ..... SECURE

RIGHT WING (4.11b)

Wing ..... FREE of ICE, SNOW, FROST
Control Surfaces ..... CHECK for interference - CLEAR of ICE, SNOW, FROST
Hinges ..... CHECK for interference
Static Wicks ..... CHECK
Wing Tip and Lights ..... CHECK
Fuel Tank ..... CHECK supply visually - SECURE CAPS

CAUTION

When draining any amount of fuel, care should be taken to ensure that no fire hazard exists before starting engine.

Fuel Tank Sump ..... DRAIN, CHECK for water, sediment and proper fuel
Fuel Vent ..... CLEAR
Tie Down and Chock ..... REMOVE
Main Gear Strut ..... PROPER INFLATION (4.50 in.)
Tire ..... CHECK
Brake Block and Disc ..... CHECK
Fresh Air Inlet ..... CLEAR

NOSE SECTION (4.11c)

Fuel and Oil ..... CHECK FOR LEAKS
Cowling ..... SECURE
Windshield ..... CLEAN
Propeller and Spinner ..... CHECK
Air Inlets ..... CLEAR
Alternator Belt ..... CHECK TENSION
Landing Light ..... CHECK
Nose Chock ..... REMOVE
Nose Gear Strut ..... PROPER INFLATION (3.25 in.)
Nose Wheel Tire ..... CHECK
Oil ..... CHECK LEVEL
Dipstick ..... PROPERLY SEATED
Fuel Strainer ..... DRAIN, CHECK for water, sediment and proper fuel

LEFT WING (4.11d)

Wing ..... FREE of ICE, SNOW, FROST
Fresh Air Inlet ..... CLEAR
Main Gear Strut ..... PROPER INFLATION (4.50 in.)
Tire ..... CHECK
Brake Block and Disc ..... CHECK
Fuel Tank Sumps ..... DRAIN, CHECK for water, sediment and proper fuel
Fuel Vent ..... CLEAR
Tie Down and Chock ..... REMOVE
Fuel Tanks ..... CHECK supply visually - SECURE CAPS
Pitot/Static Head ..... REMOVE COVER - HOLES CLEAR
Wing Tip and Lights ..... CHECK
Control Surfaces ..... CHECK for interference - FREE of ICE, SNOW, FROST
Hinges ..... CHECK for interference
Static Wicks ..... CHECK

FUSELAGE (4.11e)

Antennas ..... CHECK
Empennage ..... FREE of ICE, SNOW, FROST
Fresh Air Inlet ..... CLEAR
Stabilator and Trim Tab ..... CHECK for interference
Tie Down ..... REMOVE
BATT MASTR Switch ..... ON
Cockpit Lighting ..... CHECK
Nav and Strobe Lights ..... CHECK
Stall Warning ..... CHECK
Pitot Heat ..... CHECK
All Switches ..... OFF
Passengers ..... BOARD
Cabin Door ..... CLOSE and SECURE
Seat Belts and Harnesses ..... FASTEN - CHECK interia reel

4.5c Before Starting Engine Checklist (4.13)

BEFORE STARTING ENGINE (4.13)

Brakes ..... SET
Carburetor Heat ..... FULL OFF
Fuel Selector ..... DESIRED TANK
Avionics ..... OFF
ALTR Switch ..... ON

4.5d Engine Start Checklist (4.15)

NORMAL START - COLD ENGINE (4.15a)

Throttle ..... ¼ INCH OPEN
BATT MASTR Switch ..... ON
Electric Fuel Pump ..... ON
Mixture ..... FULL RICH
Starter ..... ENGAGE
Throttle ..... ADJUST
Oil Pressure ..... CHECK
If engine does not start within 10 sec., prime and repeat starting procedure.

NORMAL START - HOT ENGINE (4.15b)

Throttle ..... ½ INCH OPEN
BATT MASTR Switch ..... ON
Electric Fuel Pump ..... ON
Mixture ..... FULL RICH
Starter ..... ENGAGE
Throttle ..... ADJUST
Oil Pressure ..... CHECK

ENGINE START WHEN FLOODED (4.15c)

Throttle ..... OPEN FULL
BATT MASTR Switch ..... ON
Electric Fuel Pump ..... OFF
Mixture ..... IDLE CUT-OFF
Starter ..... ENGAGE
Mixture ..... ADVANCE
Throttle ..... RETARD
Oil Pressure ..... CHECK

ENGINE START WITH EXTERNAL POWER SOURCE (4.15d)

BATT MASTR Switch ..... OFF
All Electrical Equipment ..... OFF
Terminals ..... CONNECT
External Power Plug ..... INSERT in receptacle

NOTE

For all normal operations using the PEP jumper cables, the battery master switch should be OFF. However, it is possible to use the ship's battery in parallel by turning the battery master switch ON. This will give longer cranking capabilities, but will not increase the amperage.

CAUTION

Care should be exercised, because, if the ship's battery has been depleted, the external power supply can be reduced to the level of the ship's battery. This can be tested by turning the battery master switch ON momentarily while the starter is engaged. If cranking speed increases, the ship's battery is at a higher level than the external power supply.

Proceed with normal start
Throttle ..... LOWEST POSSIBLE RPM
External Power Plug ..... DISCONNECT from receptacle
BATT MASTR Switch ..... ON - CHECK AMMETER
Oil Pressure ..... CHECK

4.5e Engine Warm-Up Checklist (4.17)

ENGINE WARM-UP (4.17)

Throttle ..... 800 to 1200 RPM

4.5f Taxiing Checklist (4.19)

TAXIING (4.19)

Parking Brake ..... RELEASE
Taxi Area ..... CLEAR
Throttle ..... APPLY SLOWLY
Brakes ..... CHECK
Steering ..... CHECK

4.5g Ground Check Checklist (4.21)

GROUND CHECK (4.21)

Parking Brake ..... SET
Throttle ..... 2000 RPM
Magnetos ..... max. drop 175 RPM -max. diff. 50 RPM
Vacuum ..... 4.8 to 5.1 in. Hg
Oil Temperature ..... CHECK
Oil Pressure ..... CHECK
Air Conditioner ..... CHECK
Annunciator Panel ..... PRESS-TO-TEST
Carburetor Heat ..... CHECK
Engine is warm for takeoff when throttle can be opened without engine faltering.
Electric Fuel Pump ..... OFF
Fuel Pressure ..... CHECK
Throttle ..... RETARD

4.5h Before Takeoff Checklist (4.23)

BEFORE TAKEOFF (4.23)

Battery Master Switch ..... ON
Alternator Switch ..... ON
Flight Instruments ..... CHECK
Fuel Selector ..... PROPER TANK
Electric Fuel Pump ..... ON
Engine Gauges ..... CHECK
Carburetor Heat ..... OFF
Seat Backs ..... ERECT

NOTE

The mixture should be set FULL RICH, but a minimum amount of leaning is permitted for smooth engine operation when taking off at high elevation.

Mixture ..... SET
Primer ..... LOCK

NOTE

The inertia reel type shoulder harness should be given a pull test to check its locking restraint feature.

NOTE

If the fixed shoulder harness (non-inertial reel type) are installed for the aft seat occupants they should be adjusted to provide adequate restraint.

Belts Harness ..... FASTENED CHECK
Empty Seats ..... SEAT BELTS SNUGLY FASTENED
Flaps ..... SET
Trim ..... SET
Controls ..... FREE
Door ..... LATCHED
Air Conditioner ..... OFF

4.5i Takeoff Checklist (4.25)

NORMAL (4.25a)

Flaps ..... SET
Trim ..... SET
Accelerate to 45 to 55 KIAS
Control Wheel ..... back pressure to rotate to climb attitude

0° FLAPS TAKEOFF PERFORMANCE (4.25b)

Flaps ..... UP
Accelerate to 40-50 KIAS (depending on weight)
Control Wheel ..... back pressure to rotate to climb attitude

Accelerate to and maintain 44 to 55 KIAS (depending on weight) until obstacle clearance is achieved and climb out at 79 KIAS.

25° FLAPS TAKEOFF PERFORMANCE (4.25c)

Flaps ..... 25° (second notch)
Accelerate to 40-50 KIAS (depending on weight)
Control Wheel ..... back pressure to rotate to climb attitude

Accelerate to and maintain 44 to 55 KIAS (depending on weight) until obstacle clearance is achieved and climb out at 79 KIAS.
Flaps ..... RETRACT SLOWLY

SOFT FIELD, OBSTACLE CLEARANCE (4.25d)

Flaps ..... 25° (second notch)

Accelerate and lift off nose gear as soon as possible. Lift off at lowest possible airspeed. Accelerate just above ground to 52 KIAS to climb past obstacle height. Continue climbing while accelerating to best rate of climb speed, 79 KIAS.
Flaps ..... RETRACT SLOWLY

SOFT FIELD, NO OBSTACLE (4.25e)

Flaps ..... 25° (second notch)

Accelerate and lift off nose gear as soon as possible. Lift off at lowest possible airspeed. Accelerate just above ground to best rate of climb speed, 79 KIAS.
Flaps ..... RETRACT SLOWLY

4.5j Climb Checklist (4.27)

CLIMB (4.27)

Best Rate Climb Speed (Flaps Up) ..... 79 KIAS
Best Angle Climb Speed (Flaps Up) ..... 63 KIAS
En Route ..... 87 KIAS
Electric Fuel Pump ..... OFF at desired altitude

4.5k Cruise Checklist (4.29)

CRUISE

Reference performance charts and Avco-Lycoming Operators Manual.

Normal Maximum Power 75%
Power ..... SET per power table
Mixture ..... ADJUST

4.5m Descent Checklist (4.31)

NORMAL DESCENT (4.31a)

Throttle ..... 2500 rpm
Airspeed ..... 126 KIAS
Mixture ..... RICH
Carburetor Heat ..... ON if required

POWER OFF DESCENT (4.31b)

Carburetor Heat ..... ON if required
Throttle ..... CLOSE
Airspeed ..... AS REQUIRED
Mixture ..... AS REQUIRED
Power ..... VERIFY with throttle EVERY 30 SECONDS

4.5n Approach And Landing Checklist (4.33)

APPROACH AND LANDING (See charts in Section 5) (4.33)

Fuel Selector ..... PROPER TANK
Seat Backs ..... ERECT
Belts/Harness ..... FASTEN/CHECK

NOTE

If the fixed shoulder harness (non-inertia reel type) is installed, it must be connected to the seat belt and adjusted to allow proper accessibility to all controls including fuel selector, flaps, trim, etc, while maintaining adequate restraint for the occupant.

NOTE

If the inertia reel type shoulder harness is installed, a pull test of its locking restraint feature should be performed.

Electric Fuel Pump ..... ON
Mixture ..... SET
Flaps ..... SET - 103 KIAS MAXIMUM

Air Conditioner ..... OFF
Trim to 70 KIAS
Final Approach Speed (Flaps 40°) ..... 63 KIAS

4.5o Stopping Engine Checklist (4.35)

STOPPING ENGINE (4.35)

Flaps ..... RETRACT
Electric Fuel Pump ..... OFF
Electrical Switches ..... OFF
Air Conditioner ..... OFF
Radios ..... OFF
Throttle ..... FULL AFT
Mixture ..... IDLE CUT-OFF
Magnetos ..... OFF
ALTR Switch ..... OFF
BATT MASTR Switch ..... OFF
Trim ..... SET

NOTE

When alternate fuels are used, the engine should be run up to 1200 rpm for one minute prior to shutdown to clean out any unburned fuel.

NOTE

The flaps must be placed in the UP position for the flap step to support weight. Passengers should be cautioned accordingly.

4.5p Mooring Checklist (4.37)

MOORING (4.37)

Parking Brake ..... SET
Control Wheel ..... SECURE with belts
Flaps ..... FULL UP
Wheel Chocks ..... IN PLACE
Tie Downs ..... SECURE

Cockpit Placards (POH 2.23)

TAKEOFF CHECKLIST

In full view of the pilot:

Fuel on proper tank
Electric fuel pump on
Engine gauges checked
Flaps - set
Carb. heat off
Mixture set
Primer locked
Seat backs erect
Fasten belts/harness
Trim tab - set
Controls - free
Door - latched
Air conditioner off

LANDING CHECKLIST

Fuel on proper tank
Mixture rich
Electric fuel pump on
Seat backs erect
Flaps - set (White Arc)
Fasten belts/harness
Air conditioner off

In air conditioned aircraft, the AIR COND OFF item in the takeoff and landing checklists above, is mandatory.