



8038989A

HEADRUSHTM



Micro System

HRM 589

Owner's Manual

Contents

What's in the Box	2
Important Safety Instructions	3-4
Safety	3
Identifying the Parts	5-6
Main Unit	5
Rear View	6
Remote Control	6
Preparations	7
Preparing the Remote Control	7
Replacing the Remote Control Battery	7
Connections	8
Use LINE IN socket	8
Connect the FM Aerial	8
Power Connection	8
Set the Clock	9
Set the Alarm Timer	9
General Operation	10
Standby/ON	10
Select Modes	10
Adjust the Volume	10
Select the Equalizer	10
Adjust the Brightness	10
Adjust the Bass	10
Set the Sleep Timer	10
LINE IN Operation	11
CD/USB Operation	11-12
CD Operation	11
USB Operation	11
Play Control	11
About the Discs	12
Bluetooth® Operation	12-13
Pair Bluetooth®-enabled Devices	12
NFC (Near Field Communication) Operation	13
Listen to Music from Bluetooth® Device	13
FM Operation	13
Auto Scan and Save Preset Stations	13
Tuning in a Station	13
Presetting Stations Manually	13
Troubleshooting	14
Specifications	14
Warranty	14

What's in the Box



Main Unit



Remote Control



Instruction Manual




AC Power Cord



RCA to 3.5mm Audio Cable




FM Wire Antenna



Antenna Connector

Design and specifications are subject to change without notice.

Important Safety Instructions

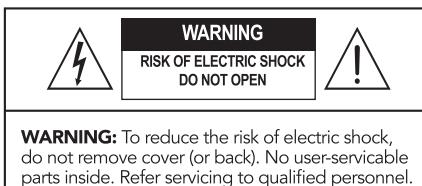

WARNING: To reduce the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified personnel.



This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude as to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

SAFETY

- 1 Read these instructions – All the safety and operating instructions should be read before this product is operated.
- 2 Keep these instructions – The safety and operating instructions should be retained for future reference.
- 3 Heed all warnings – All warnings on the appliance and in the operating instructions should be adhered to.
- 4 Follow all instructions – All operating and usage instructions should be followed.
- 5 Clean only with dry cloth.
- 6 Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 7 Do not override the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, ask an electrician to replace the obsolete outlet.
- 8 Protect the power cord from being walked on or pinched, particularly at the plugs, convenience receptacles and at the point where they exit from the apparatus.
- 9 Only use attachments/accessories specified by the manufacturer.
- 10  Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 11 Unplug the apparatus during lightning storms or when unused for long periods of time.
- 12 Refer all servicing to qualified personnel.

Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the unit has been exposed to rain or moisture, does not operate normally, or has been dropped.

- 13 This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.
- 14 The apparatus shall not be exposed to dripping or splashing. No objects filled with liquids, such as vases, shall be placed on the apparatus.
- 15 Minimum distance around the apparatus for sufficient ventilation is 5cm.
- 16 The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, tablecloths, curtains, etc...
- 17 No naked flame sources, such as lighted candles, should be placed on the apparatus.
- 18 The apparatus shall be used in moderate climates only.
- 19 The plug shall remain readily operable.
- 20 CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- 21 Warning: The apparatus shall be connected to a main socket with a protective earthing connection.
- 22 Different types of batteries or new and used batteries are not to be mixed.
- 23 Batteries are to be inserted with the correct polarity.
- 24 Exhausted batteries are to be removed from the product.
- 25 Batteries shall be disposed of in a safe way. Only dispose of batteries in specific collection containers (contact the retailer for more information) in order to protect the environment.
- 26 Warning: Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
- 27 If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- 28 Batteries should be set up with the correct polarity.
- 29 The supplier is clear from his responsibility for all kinds of incidents caused by the non-respect of battery polarity; the appliance will not be covered by the warranty if damaged.
- 30 Before operating this system, check the voltage of this system to see if it is identical to the voltage of your local power supply.
- 31 Changes or modifications to this unit not expressly approved by the party responsible for compliance will void the user's authority to operate the equipment.
- 32 The rating label is pasted on the bottom of the

equipment.

WARNING: DO NOT INGEST BATTERY, CHEMICAL BURN HAZARD

The remote control supplied with this product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

This apparatus includes this label:



WARNING

To avoid danger of suffocation, keep this bag away from babies and children. Do not use in cribs, beds, carriages or playpens. This bag is not a toy. Discard bag and any other packing materials immediately after removing product. Do not re-use this bag.

Notice for CD-R/CD-RW MP3 users:

Depending on the type of CD burner, on the disc brand, the burning speed and the MP3 compression level, some reading problems may occur.



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc. and any use of such marks by The Source (Bell) Electronics Inc. is under license. Other trademarks and trade names are those of their respective owners.



The N Mark is a trademark or registered trademark of NFC Forum, Inc. in the United States and in other countries.

FCC STATEMENT (for US customers)

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

- **Warning:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

- **Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to a radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC ID: Z8M-CD750


FOR CANADIAN CONSUMERS

This device complies with Industry Canada licence exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

IC:255A - 8038989

Identifying the Parts

MAIN UNIT

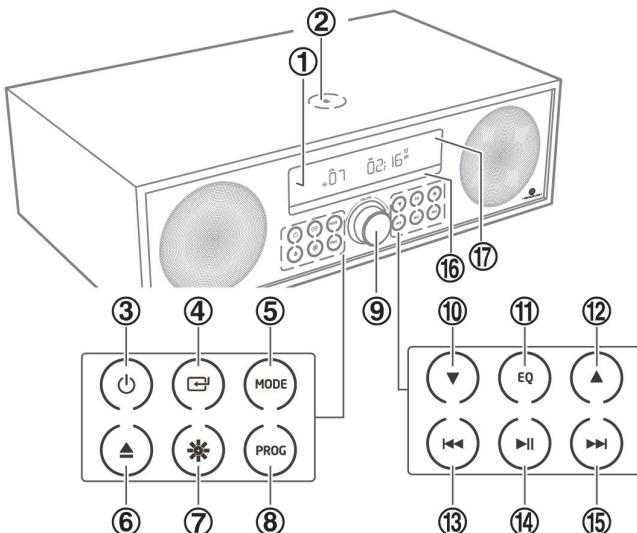

1 Remote Control Sensor

Receive the signal from the remote control.

2 NFC Sensor area

button

Switch the unit between ON and Standby mode.

4 button

Select a play function.

5 MODE button

Select shuffle play mode.

Select repeat play modes.

6 button

Open and close the disc compartment.

7 button

Adjust display brightness.

8 PROG button

Program soundtracks.

Presets radio stations.

Press and hold to scan for radio stations in FM mode.

9 VOLUME +/- dial

Increase/decrease the volume level.

10 button

Select a previous preset station.

Skip to the previous album.

11 EQ button

Select the preset equalizer.

12 button

Select the next preset station.

Skip to the next album.

13 button

In CD/USB/Bluetooth® mode, skip to previous audio track.

In CD/USB mode, press and hold the button to search backward within a track/disc.

In FM mode, search radio stations manually, press and hold the button to search automatically.

14 button

Play/pause/resume playback.

Press and hold to activate the pairing function in Bluetooth® mode and disconnect the existing paired Bluetooth® device.

Confirm a selection.

15 button

In CD/USB/Bluetooth® mode, skip to next audio track.

In CD/USB mode, press and hold the button to search forward within a track/disc.


In FM mode, search radio stations manually, press and hold the button to search automatically.

16 Disc Compartment

17 Display

REAR VIEW

- 1 **LINE IN (R L)** Sockets
- 2 **FM Antenna** Socket
Connect to a FM Antenna.
- 3 **USB** Socket
- 4 **AC~** Socket
Connect power cord.

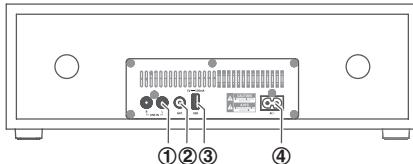

REMOTE CONTROL


- 1 Switch the unit between ON and Standby mode.
- 2 **SOURCE** buttons Select the play function.
- 3 **INFO** Displays playback information.
- 4 **INTRO** In CD/USB mode, every soundtrack will be played for 10 Sec.
- 5 ■ Stop play.
- 6 **ALBUM/PRESET** ▲, ▼ Select a next/previous preset station.
Skip to the next/previous album.
- 7 **Numeric keypad (0~9)** In CD/USB mode, select a track number for playback.
In FM mode, choose the preset radio station.
- 8 **DIMMER** Adjust display brightness.
- 9 Open or close disc compartment.
- 10 **SHUFFLE** Select shuffle play mode.
- 11 **REPEAT** Select repeat play mode.
- 12 Mute or resume the sound.
- 13 ▶ II/PAIR Play/pause/resume playback.
Press and hold to activate the pairing function in Bluetooth® mode and disconnect the existing paired Bluetooth® device.
- 14 ▲◀◀▶▶ In CD/USB/BT mode, skip to previous/next track.
In CD/USB mode, press and hold search backward/forward within a track/disc. In FM mode, search radio stations manually, press and hold the button to search automatically. In clock/alarm setup, press the button to adjust.
- 15 **VOL+/VOL-** Increase/decrease the volume level.
- 16 **EQ** Select the preset equalizer.
- 17 **BASS** Turn the bass ON/OFF.
- 18 **SLEEP/TIMER** Set the sleep timer.
In standby mode, press and hold to set the alarm timer.
- 19 **CLOCK** In standby mode, press and hold to activate clock setup.
Display current clock.
- 20 **PROG** Program soundtracks.
Presets radio stations.
Press and hold to scan for radio stations in FM mode.

Preparations


PREPARING THE REMOTE CONTROL

The provided remote control allows the unit to be operated from a distance.

- Even if the remote control is operated within the effective range (6m), remote control operation may be impossible if there are any obstacles between the unit and the remote control
- If the remote control is operated near other products that generate infrared rays, or if other remote control devices using infrared rays are used near the unit, it may operate incorrectly. Conversely, the other products may operate incorrectly

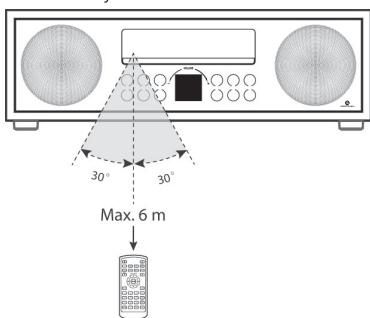

First time use:



The unit has a pre-installed lithium CR2025 battery. Remove the protective tab to activate the remote control battery.

Replacing the remote control battery:

- 1 Pull out the battery tray and remove the old battery.
- 2 Place a new CR2025 battery into the battery tray with correct polarity (+/-) as indicated.
- 3 Insert the battery tray back into the slot.

We recommend InfiniCell batteries for maximum performance.



Precautions concerning batteries


- When the remote control is not going to be used for a long time (more than a month), remove the battery from the remote control to prevent it from leaking

- If the batteries leak, wipe away the leakage inside the battery compartment and replace the batteries with new ones
- Do not use any batteries other than those specified
- Do not heat or disassemble batteries
- Never throw them in fire or water
- Do not carry or store batteries with other metallic objects as this may cause the batteries to short-circuit, leak or explode
- Never recharge a battery unless it is confirmed to be a rechargeable type


Connections

USE LINE IN SOCKET

- Use a RCA to RCA audio cable (not included) to connect the TV's audio output sockets to the **LINE IN (R L)** sockets on the unit.

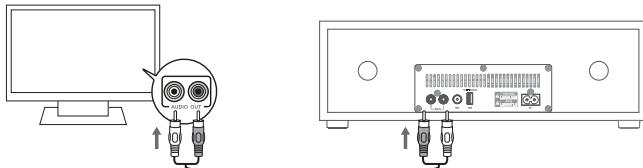


- Use a RCA to 3.5mm audio cable (included) to connect the audio player's headphone socket to the **LINE IN (R L)** sockets on the unit.

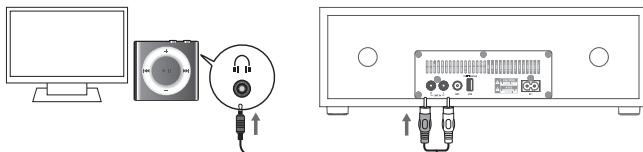

CONNECT THE FM AERIAL

Connect the supplied FM wire antenna to the **ANT** socket on the unit. Then position the aerial to obtain optimal reception.

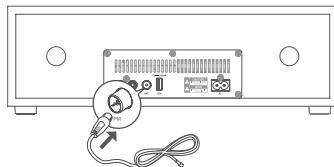


IMPORTANT:

- You may need to adjust the position of the FM aerial when tuning the radio to receive the strongest signal.
- Never leave the aerial where it can be pulled by young children.

POWER CONNECTION

Risk of product damage!

- Ensure that the power supply voltage corresponds to the voltage printed on the back or the underside of the unit.
- Connect the power to the **AC~** socket on the unit and a wall outlet.

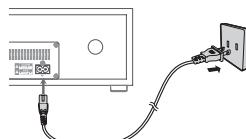

Note:

- Ensure all connections are connected before connecting to the main power socket.
- Be sure to unplug the power cord from the outlet when the system is not in use for an extended period of time.

Set the Clock

- Setting the clock manually can only be done in **STANDBY** mode.
- 1 In **STANDBY** mode, press and hold the **CLOCK** button on the remote control until the hour digits are flashing.
- Press the **> II** button on the unit or the **> II/PAIR** button on the remote control to select 12/24 hour format.
- 2 Press the **<>/>>** buttons on the remote control or on the unit to adjust the hour digits while flashing, then press **CLOCK** buttons on the remote control to confirm, then the minute digits will flash.
- 3 Press the **<>/>>** buttons on the remote control or on the unit to adjust the minute digits while flashing, then press the **CLOCK** button on the remote control to confirm.
- Each activated state will be cleared if any buttons are not pressed within 15 seconds.

Set the Alarm Timer

- The clock must be correctly set for the timer to operate correctly.
- 1 In **STANDBY** mode, press and hold the **TIMER/SLEEP** button on the remote control until the hour digits flash on the display.
- 2 Press the **<>/>>** buttons on the remote control or on the unit to adjust the hour digits, and then press the **TIMER/SLEEP** button on the remote control to confirm. The minute digits will flash on the display.
- Press the **<>/>>** buttons on the remote control or on the unit to adjust the minute digits, and then press the **TIMER/SLEEP** button on the remote control to confirm. The mode will flash on the display.
- 4 Press the **<>/>>** buttons on the remote control or on the unit to select:
 - **FM** (to wake to your selected FM radio station)
 - **BUZZER** (to wake to a buzzer sound)
 - **DISC** (to wake to your DISC music)
 - **USB** (to wake to your USB music)Press the **TIMER/SLEEP** button on the remote control to confirm. The display will show the volume level.
- 5 Press the **<>/>>** buttons on the remote control or on the unit to adjust the volume, and then press the **TIMER/SLEEP** button on the remote control to confirm, the display will show the selected time and “**Q**” will appear on the display. The “**Q**” will flash on the display when the alarm sounds.

Tips:

- Each enabled state on the display will be cleared if a button is not pressed within 15 seconds.
- The FM tuner timer will show the last tuned station.
- **Activate and Deactivate the Alarm Timer**
 - Press the **TIMER/SLEEP** button on the remote control to view the alarm settings or activate the alarm.
 - To deactivate the alarm, press the **TIMER/SLEEP** two times. The “**Q**” will disappear from the display on the front of the unit.
 - To activate the alarm, press the **TIMER/SLEEP** two times. The “**Q**” will show from the display on the front of the unit.
- **Stop Alarm Ring**
 - When the alarm rings, press the **U** button on the remote control or on the unit. The alarm stops but the alarm settings remain.

General Operation

STANDBY/ON

When you first connect the main unit to the main socket, the main unit will be in Standby mode.

- Press the  button on the remote control or on main unit to switch the main unit **ON**
- Press the  button on the remote control or on main unit to switch the main unit back to **Standby** mode

Tips:

- When turning the system **ON**, the system will continue in the mode it was in when it was turned **OFF** last time.
- Disconnect the main plug from the main socket if you want to switch the unit **OFF** completely.
- If there is no signal under the **CD, USB, BT (Bluetooth®) or LINE IN** mode, the unit will automatically switch off within 15 minutes.

- 1 Press the **TIMER/SLEEP** button on the remote control repeatedly to select your desired number of minutes. The number of minutes shown will display in this sequence:
SLEEP 90- SLEEP 60- SLEEP 30- SLEEP 15- SLEEP 00.
- 2 Stop pressing the **SLEEP** button when your desired number of minutes is displayed. The sleep timer is now set.
 - Press the **SLEEP** button to view the remaining time before switch OFF.
 - To cancel the sleep timer, press the **SLEEP** button repeatedly until "**SLEEP 00**" shows on the display.

SELECT MODES

Press the  button repeatedly on the unit or press the **CD, USB, FM or LINE IN/BT** buttons on the remote control to select the desired mode. The selected mode will show on the display.

ADJUST THE VOLUME

- Press the **VOL+/-** buttons on the remote control or turn the **VOLUME +/-** dial on the unit to adjust the volume.
- If you wish to turn the sound off, press the  button on the remote control. Press the  button again or press **VOL+/-** button on the remote control or turn the **VOLUME +/-** dial on the unit to resume normal volume.

SELECT THE EQUALIZER

Press the **EQ** button on the remote control or on the unit repeatedly to select:

[Pop]-[Classic]-[Jazz]-[Rock]-[Flat]

Note: [Flat] mode does not display.

ADJUST THE BRIGHTNESS

Press the **DIMMER** button on the remote control or the  button on the unit to select brightness level.

ADJUST THE BASS

Press the **BASS** button on the remote control to enable and disable the bass.

SET THE SLEEP TIMER

This unit can switch to standby automatically after a set period of time.


LINE IN Operation

- Ensure that the unit is connected to a TV or audio device.
- 1 Press the  button on the main unit or press the **BT/LINE IN** button on the remote control to select **LINE IN** mode.
- 2 Operate your audio device directly for playback features.
- 3 Press the **VOL+/-** button to adjust the volume level.

CD/USB Operation


CD OPERATION

- 1 Press the  button repeatedly on the unit or press the **CD** button on the remote control to select **DISC** mode.
- 2 Press the  button on the unit or on the remote control and the disc tray will open.
- 3 Place the CD/MP3 disc with the label side facing up into the CD compartment and then press the  button on the unit or on the remote control to close the disc tray.
- The current playing time of the track will be shown on the display, and the unit will play the first track on the CD/MP3 disc automatically.
- If there is no disc or the disc can't be read, "**NO DISC**" will show on the display.

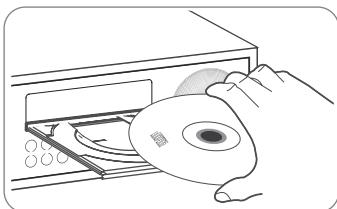

USB OPERATION

- 1 Insert the USB device.
- 2 Press the  button on the main unit or press the **USB** button on the remote control to select **USB** mode.

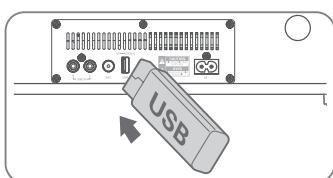

PLAY CONTROL

- To stop play, press the  button on the remote control. The total tracks of the CD will show on the display.
- To pause or resume play, press the  button on the unit or the  button on the remote control.
- To skip to the previous/next track, press the  buttons on the unit or on the remote control.
- Press and hold the  buttons on the unit or on the remote control to perform fast forward or reverse playback. Release the button to resume normal playback.
- Press the **ALBUM/PRESET**  buttons to skip to the previous/next album (only for MP3/WMA discs).
- Press the **INFO** button on the remote control to display the current play information.

INTRO PLAYBACK

- Press the **INTRO** button on the remote control. The unit will play the first 10 seconds of each track.
- Press the **INTRO** button on the remote control again to resume normal playback.

RANDOM PLAYBACK

- Press the **SHUFFLE** button on the remote control or the **MODE** button on the unit to switch the random song choice **ON/OFF**.
- **SHUFFLE**: Randomly play the song. "" lights up.
- **SHUFF OFF**: Turn off random song selection.

SELECT REPEAT PLAY OPTIONS

Press the **REPEAT** button repeatedly on the remote control or the **MODE** button on the unit to select **Repeat** play modes. The selected mode will show on the display.

- **RPT ONE**: Repeat current track. "" blinks.
- **RPT ALL**: Repeat all tracks. "" lights up.
- **RPT OFF**: Repeat turned off.

PROGRAM SETTING

You can program up to 20 tracks in CD/USB mode in any desired order. Program mode is activated while in **STOP** mode.

- 1 Press the  button on the remote control.
- 2 Press the **PROG** button on the remote control or on the unit to enter **MEMORY** mode.
- 3 Press the number (0-9) buttons or  buttons on the remote control or on the unit to select the track that you want to preset, then press **PROG** button to confirm.
- 4 Repeat step 3 to program more tracks.
- 5 Press the  button to playback program tracks.

Bluetooth® Operation

Note:

- If you want to change the programmed files, press the ■ button two times to clear the current program files. Display shows "PRG CLR", then repeat the program steps as above to re-enter the new program files.
- Or open the CD door to clear the current program files.

ABOUT THE DISCS

Do not move the unit during playback

- During playback, the disc rotates at high speed.
- Do not lift or move the unit during playback, as doing so may damage the disc or the unit.

WHEN MOVING THIS UNIT

- When moving the unit, be sure to remove the disc and close the disc tray. Then, press the power switch to turn the power OFF before disconnecting the power cord. Moving this unit with the disc loaded may result in damage to this unit.

Handling

Do not touch the playback side of discs. Hold discs by the edges to avoid leaving fingerprints on the surface.



Any dust, fingerprints or scratches may cause malfunction.

Never attach a label or sticky tape to the disc.

Storage

Put disc back in their case after playing them.

Never expose disc to direct sunlight or heat sources. Never leave discs inside a car parked in full sunlight.



Cleaning

Use a clean soft lint-free cloth to clean the discs, working from the centre outwards in a straight line. Do not use solvents such as petrol, thinners, commercially available cleaners or antistatic sprays for vinyl records.



You can listen to music from a Bluetooth®-enabled device via this player.

Note:

- The operational range between this player and a Bluetooth® device is approximately 8 metres (without any object between the Bluetooth® device and the unit.)
- Before you connect a Bluetooth® device to this unit, ensure you know the device's capabilities.
- Compatibility with all Bluetooth® devices is not guaranteed.
- Any obstacle between this unit and a Bluetooth® device can reduce the operational range.
- If the signal strength is weak your Bluetooth® receiver may disconnect, but it will re-enter pairing mode automatically.

Pair Bluetooth®-enabled Devices

- 1 Press the button on the main unit or press the BT/LINE IN button on the remote control to select BT (Bluetooth®) mode. "NO BT" will show on the display if the unit is not paired to any Bluetooth® device.
- 2 The system has entered pairing mode. Or press and hold the "▶ II/PAIR" button on the remote control or the "▶ II" button on the unit to be discoverable. The display will show "PAIRING" and you will hear "Pairing" from the unit.
- 3 Activate your Bluetooth® device and select the search mode. "HRM 589" will appear on your Bluetooth® device.
- 4 Select "HRM 589" in the pairing list. On successful pairing, you will hear "Paired" from the unit, and the display panel will show "BT".
- 5 Play music from the connected device.

To disconnect the Bluetooth® function, you can:

- Switch to another function on the unit.
- Disable the function from your Bluetooth® device. The Bluetooth® device will be disconnected from the unit after the "Disconnected" voice prompt.
- Press and hold the "▶ II/PAIR" button on the remote control or the "▶ II" button on the unit.

Tips:

- Enter "0000" for the password if necessary.
- If a connection exists, press and hold the button on the remote control or the "▶ II/PAIR" button on the remote control or the "▶ II" button on the unit to re-activate the pairing mode. The connection will be interrupted.
- If no other Bluetooth® device pairs with this player within two minutes, the player will recover its previous connection.
- The player will also be disconnected when your

- device is moved beyond the operational range.
- If you want to reconnect your device to this player, place it within the operational range.
 - If the device is moved beyond the operational range, when it is brought back, please check if the device is still connected to the player.
 - If they are connected, display panel shows "**BT**".
 - If the connection is lost, display panel shows "**NO BT**". Follow the instruction above to pair your device to the player again.



NFC (NEAR FIELD COMMUNICATION) OPERATION

Pair your NFC-enabled mobile device directly with this unit by just a single tap.

- 1 Press the **[BT]** button on the main unit or press the **BT/LINE IN** button on the remote control to select **BT** (Bluetooth®) mode.
- 2 Activate NFC on your mobile device.
- 3 Tap the mobile device on the NFC sensing area of the unit. The device vibrates or a message appears.
- 4 Operate your mobile device directly for playback features.
- To disconnect, tap the mobile device on the NFC sensing area of the unit again or disable NFC from your mobile device.

NOTE:

- The NFC function only works with mobile devices that support NFC technology.
- You may need to remove your mobile device case to connect via NFC.

LISTEN TO MUSIC FROM Bluetooth® DEVICE

- If the connected Bluetooth® device supports Advanced Audio Distribution Profile (A2DP), you can listen to the music stored on the device through the player.
 - If the device also supports Audio Video Remote Control Profile (AVRCP), you can use the player's remote control to play music stored on the device.
- 1 Pair your device with the player.
 - 2 Play music via your device (if it supports A2DP).
 - 3 Use supplied remote control to control play (if it supports AVRCP).
 - To pause/resume play, press the "**> II**" button on the unit or the "**> II/PAIR**" button on the remote control.
 - To skip to a track, press the **◀◀/▶▶** buttons on the unit or on the remote control.

FM Operation

AUTO SCAN AND SAVE PRESET STATION

- 1 Press the **[FM]** button on the main unit or press the **FM** button on the remote control to select **FM** mode.
- 2 Press and hold the **PROG** button on the remote control to activate automatic programming. All available stations are programmed in the order of waveband reception strength.
- The first programmed radio station is played automatically.

Tune to a Preset radio station

- Press the **▲, ▼** buttons to select a preset number that you want.

TUNING IN A STATION

Tune in radio stations automatically

- Press and hold **◀◀/▶▶** buttons, the frequency changes up or down automatically until a station is found.
- The search may not stop at a station with a very weak signal.

Tune in radio stations manually

- Press the **◀◀/▶▶** buttons repeatedly until you find the station you want.
- If reception is still poor, try to adjust the position of the aerial or try to move the unit to another location.

PRESETTING STATIONS MANUALLY

You can preset up to 30 FM stations.

- 1 Tune in to the desired station, then press the **PROG** button.
- 2 Press the **▲, ▼** or number (0-9) buttons to select the preset number.
- 3 Press the **PROG** button to store the station.
- 4 Repeat above steps 1 to 3 for each station you want to store in memory with a preset number.

Troubleshooting

No power

- Ensure that the AC power adapter of the unit is connected properly.
- Ensure that there is power at the AC outlet.
- Press Standby button to turn the unit ON.

Remote control does not work

- Before you press any playback control button, first select the correct source.
- Reduce the distance between the remote control and the unit.
- Insert the battery with its polarities (+/-) aligned as indicated.
- Replace the battery.
- Aim the remote control directly at the sensor on the front of the unit.

I can't find the Bluetooth® name of this unit on my Bluetooth® device

- Ensure the Bluetooth® function is activated on your Bluetooth® device.
- Re-pair the unit with your Bluetooth® device.

Poor radio reception

- Increase the distance between the unit and your TV/VCR.

Clock setting erased

- Power has been interrupted or the power cord has been disconnected.
- Reset the clock.

No response from the unit

- Disconnect and reconnect the AC power plug, then turn ON the unit again.

The disc does not play

- There is no disc inside the unit ("NO DISC" appears on the display).
- Insert the disc correctly with the label side facing up.
- Clean the disc.
- **PAUSE** mode may be activated, deactivate it.
- A non-valid disc has been inserted.
- Condensation may have formed inside the unit due to a sudden change in temperature. Wait about an hour for it to clear and try again.

Specifications

General

Power requirements.....	AC 120V~60 Hz
Power Consumption	30W
Power Consumption of standby mode.....	<1W
Output Power (max.).....	15W x 2
Total Harmonic Distortion.....	1% (1kHz, 1W)
Audio Input Sensitivity	500mV
Frequency Response	45Hz-20kHz
Tuning Range87.5-108.0 MHz
Dimensions (W x H x D)	366 x 120 x 232 mm
Impedance	6 Ω

Remote Control

Distance	6m
Angle.....	30°

THE SOURCE - WARRANTY



The Source warrants that this product will be free from defects in materials and workmanship for a period of one (1) year from the date of purchase. Within this period, simply take the product and your proof of purchase to any The Source store or participating dealer and the product will be replaced (where available) without charge. Any product which has been subject to misuse or accidental damage is excluded from this warranty.

This warranty is only applicable to a product purchased through The Source company-owned stores or participating dealers in Canada where the warranty is included with the product. While this warranty does not confer any legal rights other than those set out above, you may have additional statutory rights which will vary under the laws of the various countries, states, provinces and other governmental entities in which The Source operates. This warranty is subject to all statutory rights you may have in Canada.

Imported by:

The Source,
Barrie, Ontario, Canada, L4M 4W5

Manufactured in China

For product support please visit
www.headrushaudio.com



Please Recycle

© 2016 The Source
All rights reserved.