


— DIGITIZING EQUIPMENT

PRODUCT CATALOG 2026

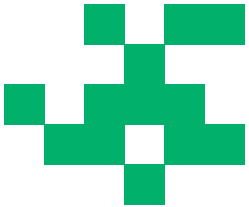


Nova · Aqua · Hydra · Cross · TIM APP



One ecosystem. Every operation.

From rate control to full GNSS auto section, Tim engineers the digital layer of farming — rate controllers, spraying and navigation computers, liquid and hydraulic control boxes, GNSS receivers and the TIM APP platform, all designed to work together.

FIELD-PROVEN · SIMPLE BY DESIGN · BUILT TO LAST · LOCAL SUPPORT

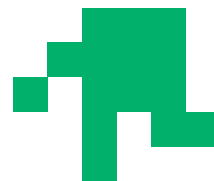

NOVA FIELD

Field rate & section control computers

NOVA 100 · NOVA 200

03

NOVA ORCHARD

Orchard rate & section control computers

NOVA 110 · NOVA 210

08

NOVA SPREADER

Spreader rate control computer

NOVA 130

12

NOVA NAVIGATION

GNSS navigation computer & sprayer navigation kits

NOVA 2N · NOVA 2N ORCHARD · NOVA 2N FIELD 500 · NOVA 2N FIELD 700

14

AQUA

Section control boxes & AIR ECU wireless versions

AQUA 200 · AQUA 500 · AQUA 700 · AQUA 200 / 500 / 700 AIR

24

HYDRA

Hydraulic boom control & AIR ECU wireless versions

HYDRA 500 · HYDRA 700 · HYDRA 500 / 700 AIR

33

GNSS RECEIVERS

GNSS smart antennas & RTK positioning

CROSS 200 · CROSS 300

39

TIM APP

Smart farm management

TIM APP

41

NOVA 100

RATE CONTROLLER COMPUTER



Sustains the required application rate (lt/ha) at every tractor speed using flow, pressure and speed sensors.

GENERAL FEATURES

- **Rate Controller**
Keeps the set application rate constant at all tractor speeds.
- **Job Registration**
10 jobs can be saved and recalled at any time.
- **Min-Max Pressure**
System keeps pressure between the set operating limits during the job.
- **Row-Turn Spraying**
Prevents pressure loss when restarting the job at row turns.
- **Large Display**
20 × 4 character screen for user-friendly navigation.
- **Automatic Spray Shut-off**
Spraying stops below minimum set pressure and speed.
- **Custom Nozzle Spacing**
Regulates the spray job correctly for different nozzle spacings.
- **Data Transfer**
SD card export and USB connection for software updates.

Package & options


CORE ELEMENTS - 4



TNOV100.01
Nova 100 Computer



SIM014
2 m Power Cable



KYP044
Compact GNSS



SIM015
Nova 100 - 4.5 + 1.5 m Valve Cable

OPTIONAL - 6



SIM016
10.5 + 1.5 m Valve Cable



KYP029
Triple Suction Cup Mount - 6 cm short arm



KYP037
Screw Mount - 6 cm short arm



KYP030
Speed Sensor - 2 m cable



KYP021
Level Sensor 0.4 BAR - 2 m cable



KYP022
Pressure Sensor 25 BAR - G 1/4

REQUIRED PRODUCTS

20 BAR 5W WOLF FLOWMETER ELECTROVALVE KIT



TA 871T502
20 BAR Main Control Valve



TA 863T024S
Proportional Valve



TA 32621M3
Line Filter



TA 4626415
Wolf Flow Meter



TA 863T0150
5W Section Valve

FITTINGS & MANOMETER



TA 1091313
Hose Connector 13 mm - x5



TA G11058V
Gasket - x5



TA 1190425
Elbow Fitting - x1



TA 010004
Fitting Set - x1



TA 911025
Manometer - x1

OPTIONALS



TA 864050250
200 l/min Main Control Valve




TA 46211A4A5B5
ORION Flow Meter



TA 1091316
Hose Connector 16 mm

NOVA 200

AUTO SECTION CONTROL COMPUTER




GNSS-guided spraying: automatic section control, automatic rate control and field boundaries on one computer.

GENERAL FEATURES

- **Auto Section Control**
Sections switch on/off from the field map and GPS position — no overlaps, no skips, less chemical waste.
- **Automatic Rate Control**
Target rate held constant in real time regardless of speed or field conditions.
- **Field Boundary**
Record the exact field perimeter with GNSS; flow stops automatically outside the boundary.
- **A-B Guidance**
Straight-line guidance from two reference points for uniform passes.
- **Cross GNSS Options**
Cross 200 Smart GNSS antenna; Cross 300 Smart Antenna for centimeter RTK accuracy.

Guidance features

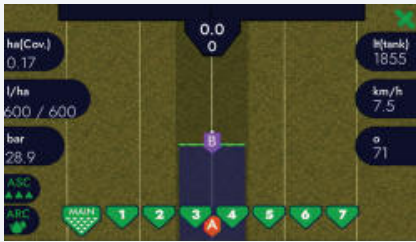


■ A-B Straight Line

Define a straight guidance path by marking two reference points (A and B). Nova 200 then generates perfectly parallel lines, ensuring precise and consistent navigation across the entire field.



■ Shift Line

Move guidance lines left or right without redefining the A-B line — a quick adjustment for implement width changes, overlaps or missed passes.

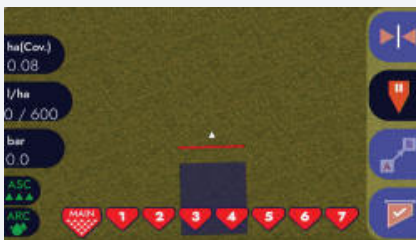


■ Pause Point

Stop spraying and resume later from the exact GPS location where you left off. Job data is recorded during pauses, so refills, obstacles or short breaks never cause overlaps or missed areas.



■ Equipment / Tractor Database

Add, configure and save multiple sprayer and tractor profiles. Each profile stores boom width, number of sections and calibration data for quick setup and consistent performance on every machine.

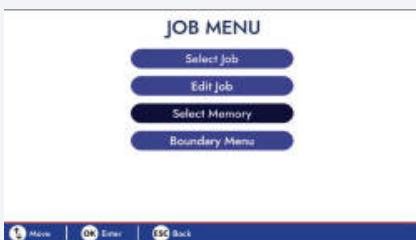

■ Auto Save

All spraying data is recorded continuously in real time — no manual job completion or confirmation needed. Nothing is lost if the operator exits the job screen, shuts down the system or pauses the operation.

Package & options

CORE ELEMENTS - 5



TNOV200.01
Nova 200 Computer



SIM014
2 m Power Cable



SIM100
Nova 200 - 4.5 + 1.5 m Valve Cable



KYP036
Cross 200 Smart GNSS



KYP054
Smart GNSS Harness

OPTIONAL - 8



SIM101
10.5 + 1.5 m Valve Cable



KYP029
Triple Suction Cup Mount - 6 cm short arm



KYP030
Speed Sensor - 2 m cable



KYP055
GNSS 14 Pin Cable



KYP067
Cross 300 Smart Antenna



KYP021
Level Sensor 0.4 BAR - 2 m cable



KYP022
Pressure Sensor 25 BAR - G 1/4



KYP037
Screw Mount - 6 cm short arm

REQUIRED PRODUCTS

20 BAR 7W WOLF FLOWMETER ELECTROVALVE KIT



TA 871T502
20 BAR Main Control Valve



TA 863T024S
Proportional Valve



TA 32621M3
Line Filter



TA 4626415
Wolf Flow Meter



TA 863T0150
5W Section Valve



TA 863T0120
2W Section Valve

FITTINGS & MANOMETER



TA 1091313
Hose Connector 13 mm - x7



TA G11058V
Gasket - x7



TA 1190425
Elbow Fitting - x1



TA 010004
Fitting Set - x1



TA 911025
Manometer - x1

OPTIONALS



TA 864050250
200 l/min Main Control Valve



TA 46211A4A5B5
ORION Flow Meter



TA 1091316
Hose Connector 16 mm

NOVA 110

ORCHARD RATE CONTROLLER



Rate control tuned for orchards — the required application rate at every speed, with orchard-specific spraying workflow.

GENERAL FEATURES

- **Rate Controller**
Keeps the set application rate constant at all tractor speeds.
- **Large Display**
20 × 4 character screen for user-friendly navigation.
- **Job Registration**
10 jobs can be saved and recalled at any time.
- **Automatic Spray Shut-off**
Spraying stops below minimum set pressure and speed.
- **Min-Max Pressure**
System keeps pressure between the set operating limits during the job.
- **Data Transfer**
SD card export and USB connection for software updates.

Package & options

CORE ELEMENTS · 4



TNOV110.01
Nova 110 Computer



SIM014
2 m Power Cable



KYP044
Compact GNSS



SIM021
Nova 110 · 3 + 1.5 m Valve Cable

OPTIONAL · 5



KYP029
Triple Suction Cup Mount · 6 cm short arm



KYP037
Screw Mount · 6 cm short arm



KYP030
Speed Sensor · 2 m cable



KYP021
Level Sensor 0.4 BAR · 2 m cable



KYP022
Pressure Sensor 60 BAR · G 1/4

REQUIRED PRODUCTS

2W ELECTRO VALVE ORION KIT



TA 881B14252D
40 BAR 2W Electro Valve Orion Kit

FITTINGS & MANOMETER



TA 010004
Fitting Set · ×1



TA 1190425
Elbow Fitting · ×1



TA 911040
Manometer · ×1

2W ELECTRO VALVE WOLF KIT



TA 881B14252K
40 BAR 2W Electro Valve Wolf Kit

FITTINGS & MANOMETER



TA 010004
Fitting Set · ×1



TA 1190425
Elbow Fitting · ×1



TA 911040
Manometer · ×1

NOVA 210

ORCHARD NAVIGATION CONTROL COMPUTER



GNSS-guided orchard spraying: automatic section control, automatic rate control and field boundaries on one computer — built for tree rows.

GENERAL FEATURES

- **Auto Section Control**
2 or 4 sections switch on/off from the field map and GPS position — no overlaps, no skips, less chemical waste.
- **Field Boundary**
Record the exact orchard perimeter with GNSS; flow stops automatically outside the boundary.
- **Cross GNSS Options**
Cross 200 Smart GNSS antenna; Cross 300 Smart Antenna for centimeter RTK accuracy.
- **Automatic Rate Control**
Target rate held constant in real time regardless of speed or field conditions.
- **A-B Guidance**
Straight-line guidance along tree rows from two reference points for uniform passes.
- **Orchard Sprayers**
Compact 2 / 4 section layout for orchard and vineyard sprayers — the Nova 200 workflow, sized for trees.

Package & options

CORE ELEMENTS · 5



TNOV210.01
Nova 210 Computer



SIM014
2 m Power Cable



SIM100
Nova 200 · 4.5 + 1.5 m Valve Cable



KYP036
Cross 200 Smart GNSS



KYP054
Smart GNSS Harness

OPTIONAL · 8



SIM101
10.5 + 1.5 m Valve Cable



KYP029
Triple Suction Cup Mount · 6 cm short arm



KYP030
Speed Sensor · 2 m cable



KYP055
GNSS 14 Pin Cable



KYP067
Cross 300 Smart Antenna



KYP021
Level Sensor 0.4 BAR · 2 m cable



KYP022
Pressure Sensor 25 BAR · G 1/4



KYP037
Screw Mount · 6 cm short arm

REQUIRED PRODUCTS

2W ELECTRO VALVE ORION KIT



TA 881B14252D
40 BAR 2W Electro Valve Orion Kit

FITTINGS & MANOMETER



TA 010004
Fitting Set · ×1



TA 1190425
Elbow Fitting · ×1




TA 911040
Manometer · ×1

2W ELECTRO VALVE WOLF KIT



TA 881B14252K
40 BAR 2W Electro Valve Wolf Kit

FITTINGS & MANOMETER



TA 010004
Fitting Set · ×1



TA 1190425
Elbow Fitting · ×1



TA 911040
Manometer · ×1

NOVA 130

SPREADER RATE CONTROLLER



Spreader rate control with LINAK electromotors — the required application rate at every tractor speed.

GENERAL FEATURES

- **Rate Controller**
Application rate held constant using flow sensing and LINAK electromotors.
- **Job Registration**
10 jobs can be saved and recalled at any time.
- **Row-Turn Spreading**
Ensures efficient spreading after row turns.
- **Large Display**
20 × 4 character screen for user-friendly navigation.
- **Automatic Shut-off**
Spreading stops below minimum set pressure and speed.
- **Data Transfer**
SD card export and USB connection for software updates.

Package & options

CORE ELEMENTS · 4



TNOV130.01
Nova 130 Computer



SIM014
2 m Power Cable



KYP044
Compact GNSS



SIM023
Nova 130 · 3 + 1.5 m Valve
Cable

OPTIONAL · 2



KYP029
Triple Suction Cup Mount ·
6 cm short arm



KYP037
Screw Mount · 6 cm short
arm

REQUIRED PRODUCTS

LINAK ACTUATORS




KYP059
LINAK LA12 Actuator · × 2
unit



KYP068
LINAK LA14 Actuator · × 2
unit

NOVA 2N

GNSS NAVIGATION COMPUTER

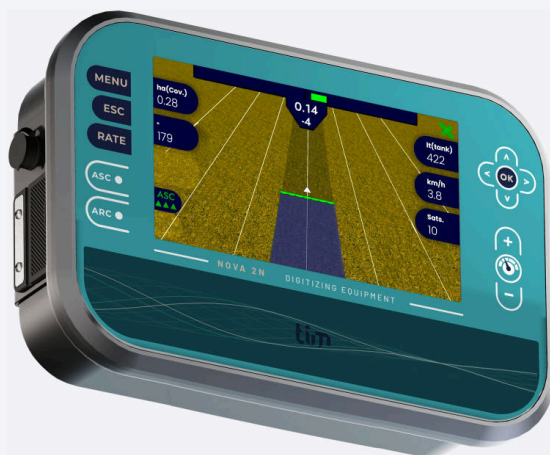

GNSS navigation on the Nova 200 platform — A-B guidance, field boundaries and live coverage on one screen. Navigation only, fully upgradable to automatic section and rate control.

GENERAL FEATURES

A-B Guidance & Boundary

Straight-line guidance with shift-line and pause point; record the field perimeter with GNSS.

Navigation Only

Clean front panel without switches — the Nova 200 interface, guidance only.

Coverage Map

Covered area (ha) and satellite status tracked live on the field view.

Upgradable

Grows into the Orchard or Field sprayer kits — automatic section and rate control whenever you need it.

CORE ELEMENTS · 4



TNOV2N.01
Nova 2N
Computer



SIM014
2 m Power Cable



KYP028
Basic GNSS
Antenna



KYP054
Smart GNSS
Harness



KYP029
Triple Suction
Cup Mount · 6 cm
short arm



KYP036
Cross 200 Smart
GNSS



KYP067
Cross 300 Smart
Antenna

OPTIONAL · 3

SPRAYER NAVIGATION KIT VERSIONS

The Nova 2N is also available as a complete sprayer kit: the navigation computer paired with an Aqua control box for automatic section and rate control, delivered with the matching valve kit.



NOVA 2N ORCHARD

Orchard sprayer kit · 2 way

[PAGE 15](#)



NOVA 2N FIELD 500

Field sprayer kit · 5 way

[PAGE 18](#)



NOVA 2N FIELD 700

Field sprayer kit · 7 way

[PAGE 21](#)

NOVA 2N ORCHARD

ORCHARD SPRAYER NAVIGATION KIT · 2 WAY



Nova 2N navigation with automatic section and rate control — Aqua 200 box and AIR ECU for a complete 2-section orchard sprayer kit, with no valve cable pulled into the cab.

GENERAL FEATURES

- A-B Guidance & Boundary**
 Straight-line guidance with shift-line and pause point; record the orchard perimeter with GNSS.
- Automatic Rate Control**
 Target rate held constant in real time regardless of speed or field conditions.
- 40 BAR Orchard Valves**
 Works with the 2W Orion or Wolf electro valve kit for high-pressure orchard spraying.
- Automatic Section Control**
 2 sections switch on/off automatically from the field map and GPS position; Aqua 200 switches for manual override.
- AIR ECU Wireless Link**
 The 2-way valve harness plugs into ECU socket 1 on the sprayer; the cab link is wireless.
- Cross GNSS Options**
 Cross 200 Smart GNSS antenna; Cross 300 Smart Antenna for higher precision.

Package & options

CORE ELEMENTS · 8



TNOV2N.01
Nova 2N Computer



SIM014
2 m Power Cable



KYP054
Smart GNSS Harness



KYP046
AIR ECU Box



SIM106
AIR ECU Main Cable · 12 V + 2 way



KYP029
Triple Suction Cup Mount · 6 cm short arm



KYP036
Cross 200 Smart GNSS



TAQU200.01
Aqua 200 Control Box

OPTIONAL · 4



KYP021
Level Sensor 0.4 BAR · 2 m cable



KYP022
Pressure Sensor 25 BAR · G 1/4



KYP067
Cross 300 Smart Antenna



KYP055
GNSS 14 Pin Cable

REQUIRED PRODUCTS

2W ELECTRO VALVE ORION KIT



TA 881B14252D
40 BAR 2W Electro Valve Orion Kit

FITTINGS & MANOMETER



TA 010004
Fitting Set · ×1



TA 1190425
Elbow Fitting · ×1




TA 911040
Manometer · ×1

2W ELECTRO VALVE WOLF KIT



TA 881B14252K
40 BAR 2W Electro Valve Wolf Kit

FITTINGS & MANOMETER



TA 010004
Fitting Set · ×1



TA 1190425
Elbow Fitting · ×1



TA 911040
Manometer · ×1

How it connects

Orchard version: the Aqua 200 valve harness plugs into socket 1 of the AIR ECU on the sprayer; the link to the Nova 2N and the Aqua 200 box in the cab is wireless.

AIR ECU – WIRELESS VALVE INTERFACE



The AIR ECU is mounted on the sprayer, next to the valves. The valve harness plugs straight into its sealed, numbered sockets and the ECU talks to the Nova 2N in the cab wirelessly – no thick valve cable has to be pulled into the tractor cab. Power and wireless-link LEDs on the front plate show the status at a glance.



SOCKET MAP – NOVA 2N ORCHARD

1

SOCKET
SIM106

Main cable · 2 way + 12 V power in.

2

SOCKET
NOT USED

Free in the orchard version.

3

SOCKET
RESERVED

Kept free for future expansion.

4

SOCKET
NOT USED

Free in the orchard version.

NOVA 2N FIELD 500

FIELD SPRAYER NAVIGATION KIT · 5 WAY



Nova 2N navigation with automatic section and rate control – Aqua 500 box and AIR ECU, five boom sections controlled from the cab, valves connected wirelessly on the sprayer.

GENERAL FEATURES

■ A-B Guidance & Boundary

Straight-line guidance with shift-line and pause point; field perimeter recorded with GNSS.

■ Automatic Rate Control

Target rate held constant in real time regardless of speed or field conditions.

■ 20 BAR Wolf Flowmeter Kit

Main control valve, line filter, control valve and 5W section valve for field booms.

■ Automatic Section Control

5 sections switch on/off automatically from the field map and GPS position; Aqua 500 switches for manual override.

■ AIR ECU Wireless Link

The 5-way valve harness plugs into ECU sockets 1 + 2 on the sprayer; the cab link is wireless.

■ Hydra Ready

Add a Hydra 500 / 700 hydraulic boom kit on ECU socket 4 – both kits run on one ECU.

Package & options

CORE ELEMENTS · 9


TNOV2N.01

Nova 2N Computer


SIM014

2 m Power Cable


KYP054

Smart GNSS Harness


KYP046

AIR ECU Box


SIM106

 AIR ECU Main Cable · 12 V +
2 way

SIM107

AIR ECU Cable · 5 way


KYP029

 Triple Suction Cup Mount ·
6 cm short arm

KYP036

Cross 200 Smart GNSS


TAQU500.01

Aqua 500 Control Box

OPTIONAL · 7


KYP021

 Level Sensor 0.4
BAR · 2 m cable

KYP022

 Pressure Sensor
25 BAR · G 1/4

THYD500.01

 Hydra 500 Control
Box

THYD700.01

 Hydra 700 Control
Box

SIM109

 AIR ECU Hydra
Cable

KYP067

 Cross 300 Smart
Antenna

KYP055

GNSS 14 Pin Cable

REQUIRED PRODUCTS

20 BAR 5W WOLF FLOWMETER ELECTROVALVE KIT


TA 871T502

20 BAR Main Control Valve


TA 863T024S

Proportional Valve


TA 32621M3

Line Filter


TA 4626415

Wolf Flow Meter


TA 863T0150

5W Section Valve

FITTINGS & MANOMETER


TA 1091313

Hose Connector 13 mm · ×5


TA G11058V

Gasket · ×5


TA 1190425

Elbow Fitting · ×1


TA 010004

Fitting Set · ×1


TA 911025

Manometer · ×1

OPTIONALS


TA 864050250

 200 l/min Main Control
Valve

TA 46211A4A5B5

ORION Flow Meter


TA 1091316

Hose Connector 16 mm


How it connects

Field version: the Aqua 500 valve harness plugs into sockets 1 + 2 of the AIR ECU on the sprayer; the link to the Nova 2N and the Aqua 500 box in the cab is wireless.

AIR ECU – WIRELESS VALVE INTERFACE



The AIR ECU is mounted on the sprayer, next to the valves. The valve harness plugs straight into its sealed, numbered sockets and the ECU talks to the Nova 2N in the cab wirelessly – no thick valve cable has to be pulled into the tractor cab. Power and wireless-link LEDs on the front plate show the status at a glance.

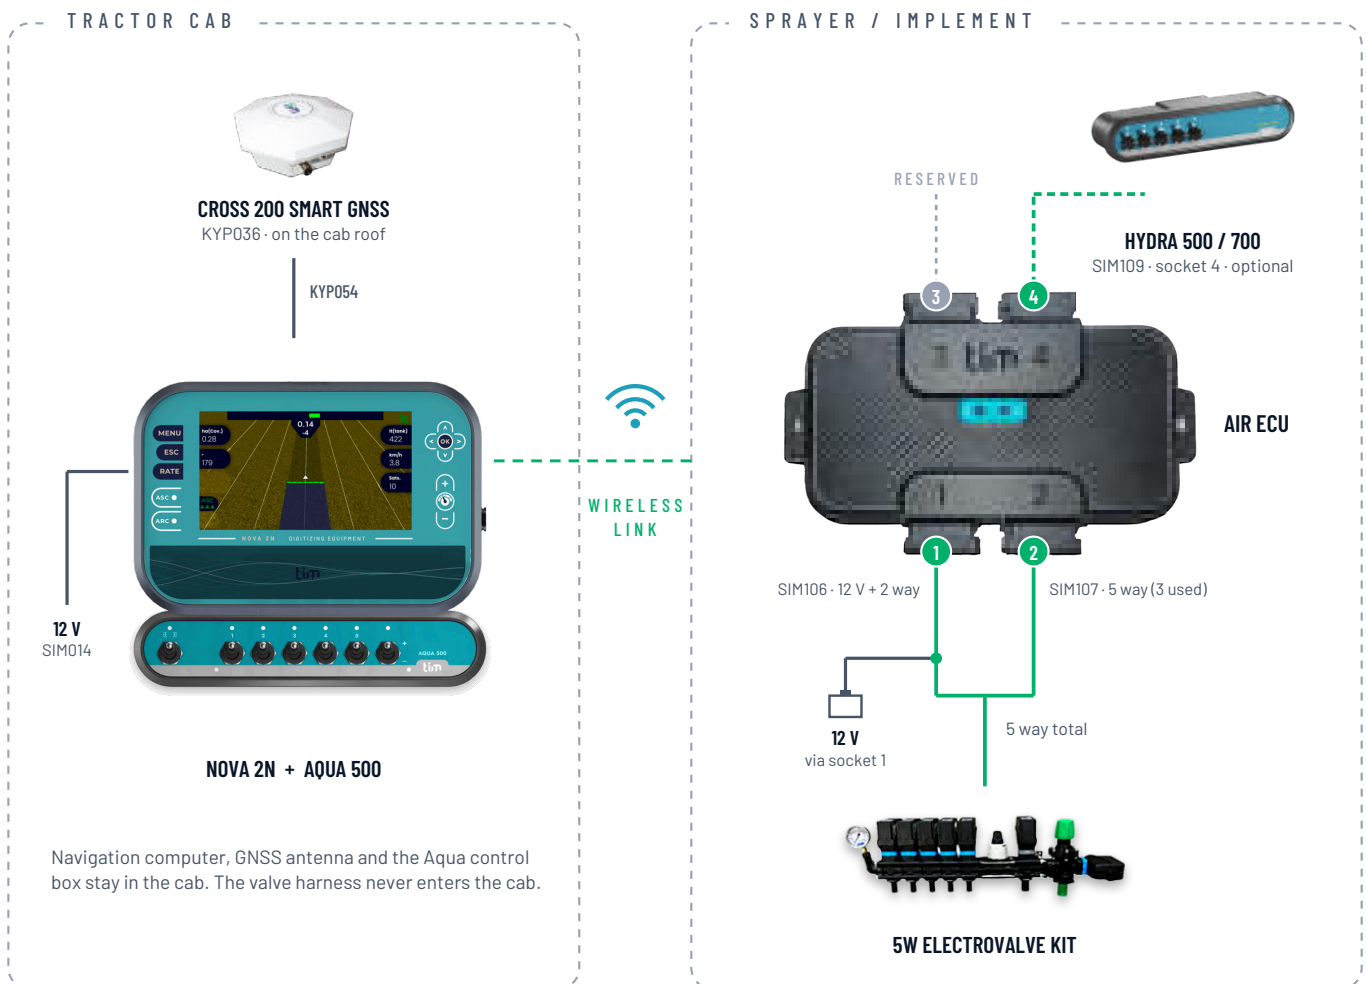

SOCKET MAP – NOVA 2N FIELD 500

1

SOCKET
SIM106

Main cable · 12 V power + 2 way.

2

SOCKET
SIM107

5 way cable, 3 used · 5 way in total.

3

SOCKET
RESERVED

Kept free for future expansion.

4

SOCKET
SIM109

Hydra 500 / 700 cable · optional.

NOVA 2N FIELD 700

FIELD SPRAYER NAVIGATION KIT · 7 WAY



Nova 2N navigation with automatic section and rate control – Aqua 700 box and AIR ECU, seven boom sections controlled from the cab, valves connected wirelessly on the sprayer.

GENERAL FEATURES

■ A-B Guidance & Boundary

Straight-line guidance with shift-line and pause point; field perimeter recorded with GNSS.

■ Automatic Rate Control

Target rate held constant in real time regardless of speed or field conditions.

■ 20 BAR Wolf Flowmeter Kit

Main control valve, line filter, control valve, 5W + 2W section valves for wide booms.

■ Automatic Section Control

7 sections switch on/off automatically from the field map and GPS position; Aqua 700 switches for manual override.

■ AIR ECU Wireless Link

The 7-way valve harness plugs into ECU sockets 1 + 2 on the sprayer; the cab link is wireless.

■ Hydra Ready

Add a Hydra 500 / 700 hydraulic boom kit on ECU socket 4 – both kits run on one ECU.

Package & options

CORE ELEMENTS · 9


TNOV2N.01

Nova 2N Computer


SIM014

2 m Power Cable


KYP054

Smart GNSS Harness


KYP046

AIR ECU Box


SIM106

AIR ECU Main Cable · 12 V + 2 way


SIM107

AIR ECU Cable · 5 way


KYP029

Triple Suction Cup Mount · 6 cm short arm


KYP036

Cross 200 Smart GNSS


TAQU700.01

Aqua 700 Control Box

OPTIONAL · 7


KYP021

Level Sensor 0.4 BAR · 2 m cable


KYP022

Pressure Sensor 25 BAR · G 1/4


THYD500.01

Hydra 500 Control Box


THYD700.01

Hydra 700 Control Box


SIM109

AIR ECU Hydra Cable


KYP067

Cross 300 Smart Antenna


KYP055

GNSS 14 Pin Cable

REQUIRED PRODUCTS

20 BAR 7W WOLF FLOWMETER ELECTROVALVE KIT


TA 871T502

20 BAR Main Control Valve


TA 863T024S

Proportional Valve


TA 32621M3

Line Filter


TA 4626415

Wolf Flow Meter


TA 863T0150

5W Section Valve


TA 863T0120

2W Section Valve

FITTINGS & MANOMETER


TA 1091313

Hose Connector 13 mm · ×7


TA G11058V

Gasket · ×7


TA 1190425

Elbow Fitting · ×1


TA 010004

Fitting Set · ×1


TA 911025

Manometer · ×1

OPTIONALS


TA 864050250

200 l/min Main Control Valve


TA 46211A4A5B5

ORION Flow Meter


TA 1091316

Hose Connector 16 mm


How it connects

Field version: the Aqua 700 valve harness plugs into sockets 1 + 2 of the AIR ECU on the sprayer; the link to the Nova 2N and the Aqua 700 box in the cab is wireless.

AIR ECU – WIRELESS VALVE INTERFACE



The AIR ECU is mounted on the sprayer, next to the valves. The valve harness plugs straight into its sealed, numbered sockets and the ECU talks to the Nova 2N in the cab wirelessly – no thick valve cable has to be pulled into the tractor cab. Power and wireless-link LEDs on the front plate show the status at a glance.

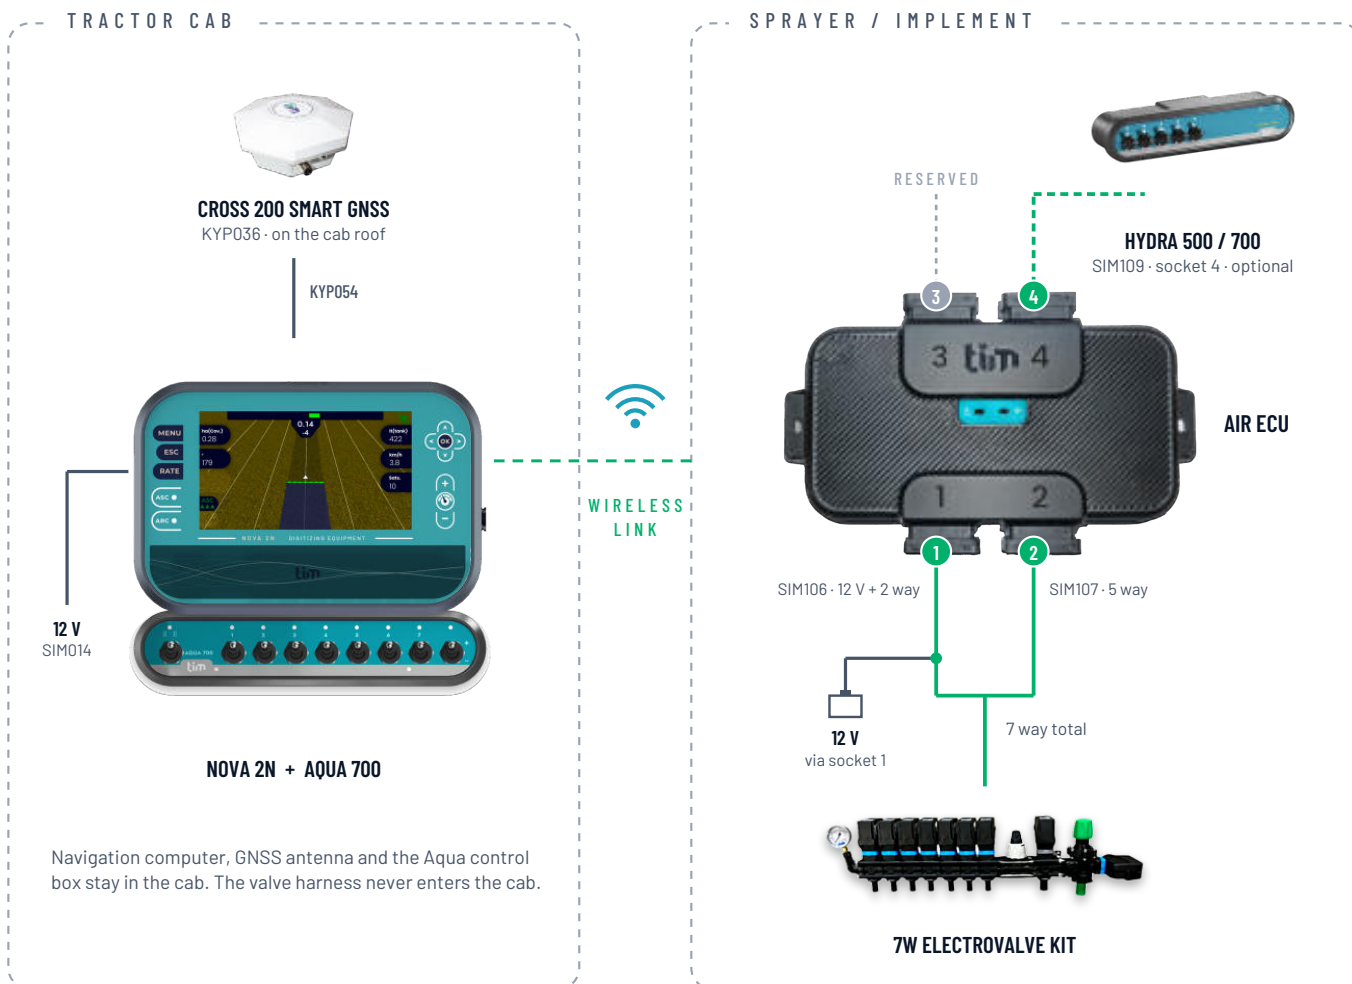

SOCKET MAP – NOVA 2N FIELD 700

1

SOCKET
SIM106

Main cable · 12 V power + 2 way.

2

SOCKET
SIM107

5 way cable · 7 way in total.

3

SOCKET
RESERVED

Kept free for future expansion.

4

SOCKET
SIM109

Hydra 500 / 700 cable · optional.

AQUA 200

2 WAY CONTROL BOX



Easy section control prevents pressure deviation in section opening / closing – safe application without a spraying hose in the cab.

GENERAL FEATURES

■ Spraying Dosage

Increase or decrease the pressure manually; adjusts spraying dosage during operation.

■ In-Cab Control

No chemical hoses carried inside the cabin – safe and easy spraying control.

■ Control Box

Controls 2 section valves open/close, main valve open/close and pressure regulation.

■ AIR ECU Version

Also available as AQUA 200 AIR with the wireless valve interface – see page 27.

CORE ELEMENTS · 3



TAQU200.01
2W Control Box



SIM024
2 m Power Cable



SIM025
4.5 m 2W Valve Cable



KYP037
Screw Mount · 6 cm short arm

OPTIONAL · 1

REQUIRED PRODUCTS

■ 40 BAR 2W ELECTRO VALVE KIT



TA 881214242
40 BAR 2W Electro Valve Kit

■ FITTINGS & MANOMETER



TA 1193425
45° Elbow Fitting · optional



TA 1091425
Hose Connector · optional



TA 1191425
Elbow Fitting · x1



TA 010004
Fitting Set · x1



TA 911040
Manometer · x1



TA G11054
Gasket · x1

AQUA 500

5 WAY CONTROL BOX



Easy section control prevents pressure deviation in section opening / closing – safe application without a spraying hose in the cab.

GENERAL FEATURES

■ Spraying Dosage

Increase or decrease the pressure manually; adjusts spraying dosage during operation.

■ In-Cab Control

No chemical hoses carried inside the cabin – safe and easy spraying control.

■ Control Box

Controls 5 section valves open/close, main valve open/close and pressure regulation.

■ AIR ECU Version

Also available as AQUA 500 AIR with the wireless valve interface – see page 29.

CORE ELEMENTS · 3



TAQU500.01
5W Control Box



SIM024
2 m Power Cable



SIM026
4.5 m 5W Valve Cable



KYP029
Triple Suction Cup Mount ·
6 cm short arm



KYP037
Screw Mount · 6 cm short
arm

REQUIRED PRODUCTS

■ 20 BAR 5W ELECTRO VALVE KIT



TA 871T502
20 BAR Main Control Valve



TA 863T024S
Proportional Valve



TA 32621M3
Line Filter



TA 863T0150
5W Section Valve

■ FITTINGS & MANOMETER



TA 1091313
Hose Connector 13 mm · ×5



TA G11058V
Gasket · ×5



TA 1190425
Elbow Fitting · ×1



TA 010004
Fitting Set · ×1



TA 911025
Manometer · ×1

AQUA 700

7 WAY CONTROL BOX



Easy section control prevents pressure deviation in section opening / closing – safe application without a spraying hose in the cab.

GENERAL FEATURES

■ Spraying Dosage

Increase or decrease the pressure manually; adjusts spraying dosage during operation.

■ In-Cab Control

No chemical hoses carried inside the cabin – safe and easy spraying control.

■ Control Box

Controls 7 section valves open/close, main valve open/close and pressure regulation.

■ AIR ECU Version

Also available as AQUA 700 AIR with the wireless valve interface – see page 31.

CORE ELEMENTS · 3



TAQU700.01
7W Control Box



SIM024
2 m Power Cable



SIM026
4.5 m 7W Valve Cable



KYP029
Triple Suction Cup Mount ·
6 cm short arm



KYP037
Screw Mount · 6 cm short
arm

REQUIRED PRODUCTS

■ 20 BAR 7W ELECTRO VALVE KIT



TA 871T502
20 BAR Main Control Valve



TA 863T024S
Proportional Valve



TA 32621M3
Line Filter



TA 863T0150
5W Section Valve



TA 863T0120
2W Section Valve

■ FITTINGS & MANOMETER



TA 1091313
Hose Connector 13 mm · ×7



TA G11058V
Gasket · ×7



TA 1190425
Elbow Fitting · ×1



TA 010004
Fitting Set · ×1



TA 911025
Manometer · ×1

AQUA 200 AIR

2 WAY CONTROL BOX · AIR ECU WIRELESS



The Aqua 200 control box with the AIR ECU wireless valve interface — manual section control from the cab, valves connected on the sprayer, no valve cable through the cab.

GENERAL FEATURES

Control Box

Controls 2 section valves, main valve and pressure regulation — no valve harness in the cab.

AIR ECU Wireless Link

The valve harness plugs into the ECU on the sprayer; box and ECU communicate wirelessly.

CORE ELEMENTS · 4



TAQU200.02
2W Control Box · AIR



SIM024
2 m Power Cable



KYP046
AIR ECU Box



SIM106
AIR ECU Main Cable · 12 V + 2 way



KYP037
Screw Mount · 6 cm short arm

REQUIRED PRODUCTS

40 BAR 2W ELECTRO VALVE KIT



TA 881214242
40 BAR 2W Electro Valve Kit

FITTINGS & MANOMETER



TA 1193425
45° Elbow Fitting · optional



TA 1091425
Hose Connector · optional



TA 1191425
Elbow Fitting · ×1



TA 010004
Fitting Set · ×1



TA 911040
Manometer · ×1



TA 611054
Gasket · ×1


How it connects

The Aqua 200 switch box stays in the cab; its 2 way valve harness plugs into socket 1 of the AIR ECU on the sprayer – the link between box and ECU is wireless.

AIR ECU – WIRELESS VALVE INTERFACE



The AIR ECU is mounted on the sprayer, next to the valves. The valve harness plugs straight into its sealed, numbered sockets and the ECU talks to the Aqua 200 box in the cab wirelessly – no thick valve cable has to be pulled into the tractor cab. Power and wireless-link LEDs on the front plate show the status at a glance.

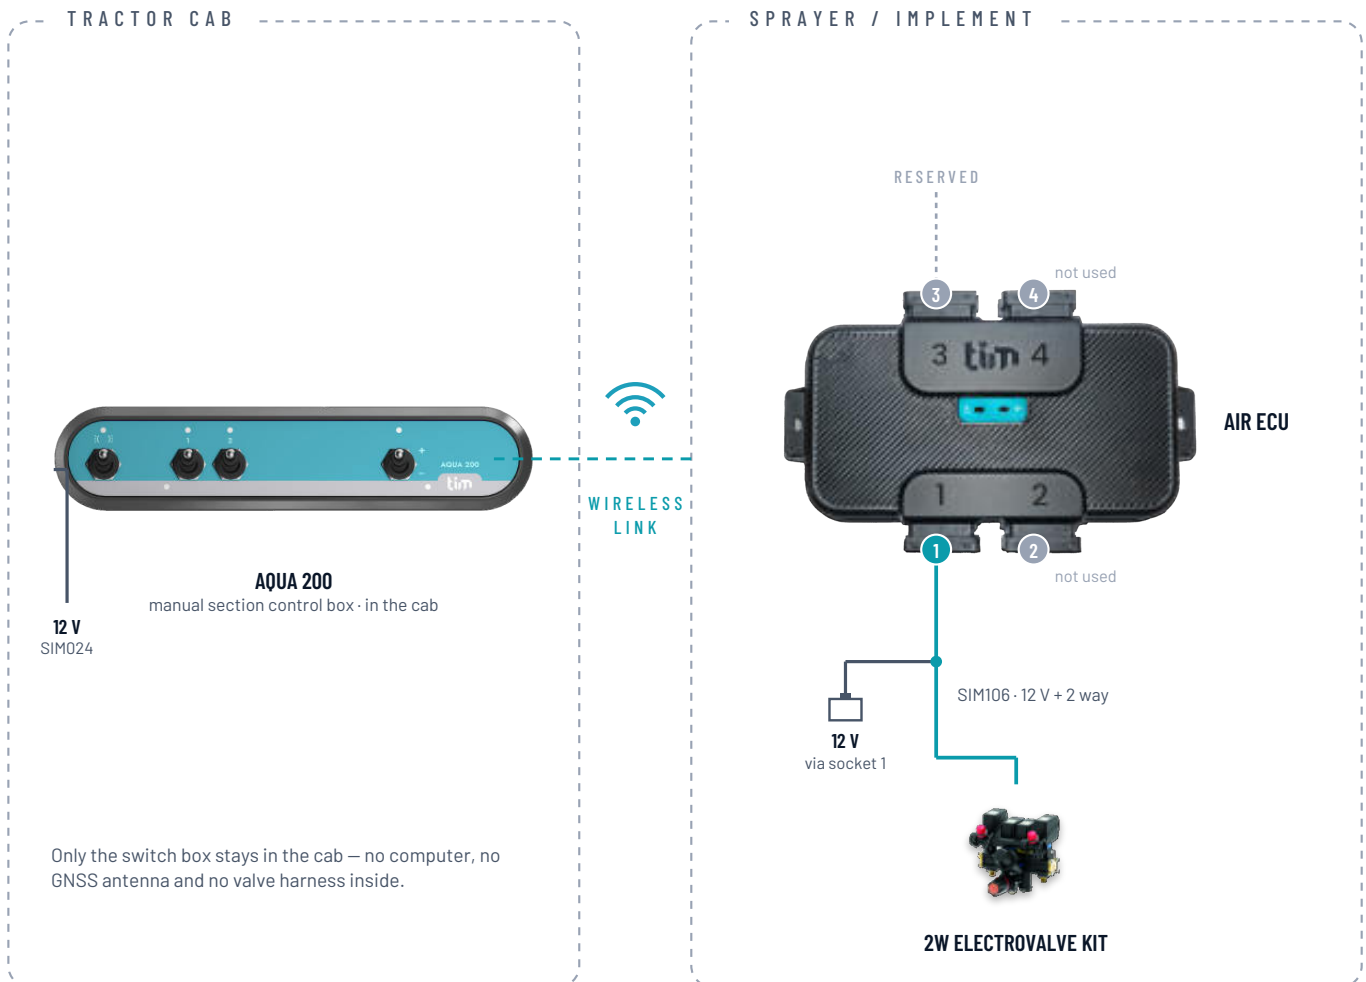

SOCKET MAP – AQUA 200 AIR

1

SOCKET
SIM106

Main cable · 2 way + 12 V power in.

2

SOCKET
NOT USED

Free in the 2 way version.

3

SOCKET
RESERVED

Kept free for future expansion.

4

SOCKET
NOT USED

Free in the 2 way version.

AQUA 500 AIR

5 WAY CONTROL BOX · AIR ECU WIRELESS



The Aqua 500 control box with the AIR ECU wireless valve interface — manual section control from the cab, valves connected on the sprayer, no valve cable through the cab.

GENERAL FEATURES

Control Box

Controls 5 section valves, main valve and pressure regulation — no valve harness in the cab.

AIR ECU Wireless Link

The valve harness plugs into the ECU on the sprayer; box and ECU communicate wirelessly.

CORE ELEMENTS · 5



TAQU500.02
5W Control Box · AIR



SIM024
2 m Power Cable



KYP046
AIR ECU Box



SIM106
AIR ECU Main Cable · 12 V +
2 way



SIM107
AIR ECU Cable · 5 way

OPTIONAL · 5



KYP029
Triple Suction Cup Mount ·
6 cm short arm



KYP037
Screw Mount · 6 cm short
arm



THYD500.01
Hydra 500 Control Box



THYD700.01
Hydra 700 Control Box



SIM109
AIR ECU Hydra Cable

REQUIRED PRODUCTS

20 BAR 5W ELECTRO VALVE KIT



TA 871T502
20 BAR Main Control Valve



TA 863T024S
Proportional Valve



TA 32621M3
Line Filter



TA 863T0150
5W Section Valve

FITTINGS & MANOMETER



TA 1091313
Hose Connector 13 mm · ×5



TA G11058V
Gasket · ×5



TA 1190425
Elbow Fitting · ×1



TA 010004
Fitting Set · ×1



TA 911025
Manometer · ×1


How it connects

The Aqua 500 switch box stays in the cab; its valve harness plugs into sockets 1 + 2 of the AIR ECU on the sprayer – the link between box and ECU is wireless.

AIR ECU – WIRELESS VALVE INTERFACE



The AIR ECU is mounted on the sprayer, next to the valves. The valve harness plugs straight into its sealed, numbered sockets and the ECU talks to the Aqua 500 box in the cab wirelessly – no thick valve cable has to be pulled into the tractor cab. Power and wireless-link LEDs on the front plate show the status at a glance.

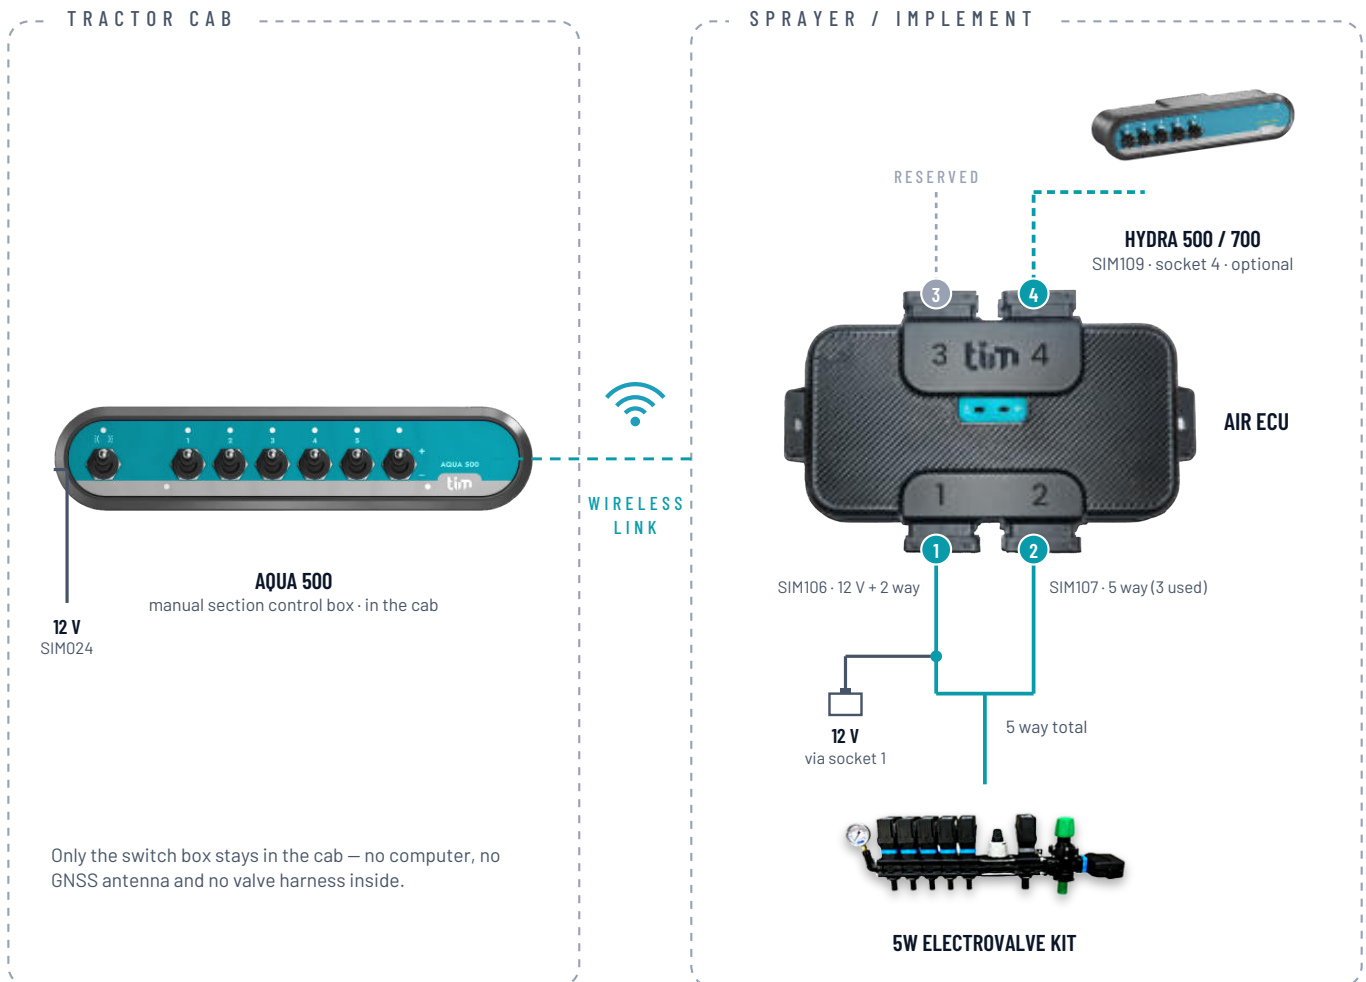

SOCKET MAP – AQUA 500 AIR

1

SOCKET
SIM106

Main cable · 12 V power + 2 way.

2

SOCKET
SIM107

5 way cable, 3 used · 5 way in total.

3

SOCKET
RESERVED

Kept free for future expansion.

4

SOCKET
SIM109

Hydra 500 / 700 cable · optional.

AQUA 700 AIR

7 WAY CONTROL BOX · AIR ECU WIRELESS



The Aqua 700 control box with the AIR ECU wireless valve interface — manual section control from the cab, valves connected on the sprayer, no valve cable through the cab.

GENERAL FEATURES

Control Box

Controls 7 section valves, main valve and pressure regulation — no valve harness in the cab.

AIR ECU Wireless Link

The valve harness plugs into the ECU on the sprayer; box and ECU communicate wirelessly.

CORE ELEMENTS · 5



TAQU700.02
7W Control Box · AIR



SIM024
2 m Power Cable



KYP046
AIR ECU Box



SIM106
AIR ECU Main Cable · 12 V +
2 way



SIM107
AIR ECU Cable · 5 way

OPTIONAL · 5



KYP029
Triple Suction Cup Mount ·
6 cm short arm



KYP037
Screw Mount · 6 cm short
arm



THYD500.01
Hydra 500 Control Box



THYD700.01
Hydra 700 Control Box



SIM109
AIR ECU Hydra Cable

REQUIRED PRODUCTS

20 BAR 7W ELECTRO VALVE KIT



TA 871T502
20 BAR Main Control Valve



TA 863T024S
Proportional Valve



TA 32621M3
Line Filter



TA 863T0150
5W Section Valve



TA 863T0120
2W Section Valve

FITTINGS & MANOMETER



TA 1091313
Hose Connector 13 mm · ×7



TA G11058V
Gasket · ×7



TA 1190425
Elbow Fitting · ×1



TA 010004
Fitting Set · ×1



TA 911025
Manometer · ×1

CONNECTION DIAGRAM ■ NEXT PAGE

How it connects

The Aqua 700 switch box stays in the cab; its valve harness plugs into sockets 1 + 2 of the AIR ECU on the sprayer – the link between box and ECU is wireless.

AIR ECU – WIRELESS VALVE INTERFACE



The AIR ECU is mounted on the sprayer, next to the valves. The valve harness plugs straight into its sealed, numbered sockets and the ECU talks to the Aqua 700 box in the cab wirelessly – no thick valve cable has to be pulled into the tractor cab. Power and wireless-link LEDs on the front plate show the status at a glance.

TRACTOR CAB



12 V
SIM024


AQUA 700
manual section control box · in the cab

Only the switch box stays in the cab – no computer, no GNSS antenna and no valve harness inside.



WIRELESS
LINK

SPRAYER / IMPLEMENT

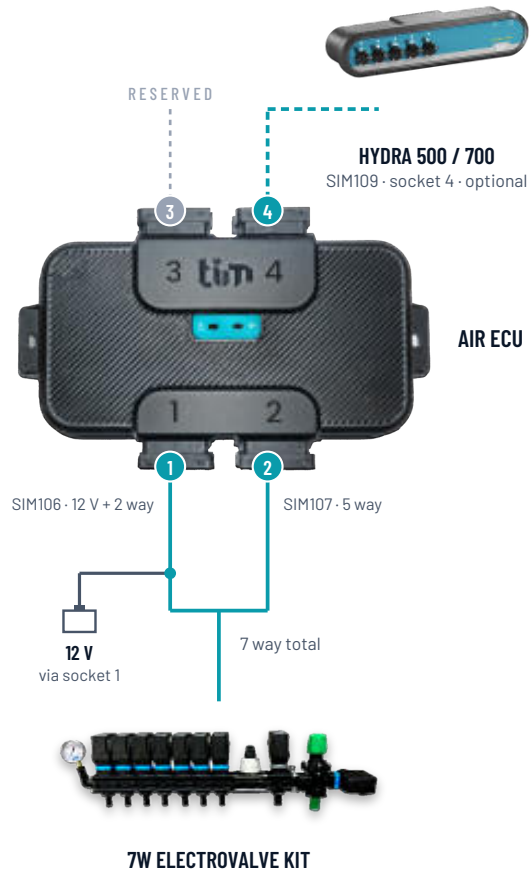

SOCKET MAP – AQUA 700 AIR

1

SOCKET
SIM106

Main cable · 12 V power + 2 way.

2

SOCKET
SIM107

5 way cable · 7 way in total.

3

SOCKET
RESERVED

Kept free for future expansion.

4

SOCKET
SIM109

Hydra 500 / 700 cable · optional.

HYDRA 500

5 WAY HYDRAULIC CONTROL BOX



Controls the flow and pressure of hydraulic fluid from the sprayer to cylinders and motors – adjusting boom level, direction and angle.

GENERAL FEATURES

Hydraulic Boom Movements

Hydraulic valves in the system let you control every boom movement from the cab.

5 Way

Leveling, height, lock and 2 boom movements.

CORE ELEMENTS - 3



THYD500.01
5W Control Box



SIM024
2 m Power Cable



SIM027
6 m Valve Cable

OPTIONAL - 3



KYP029
Triple Suction Cup Mount -
6 cm short arm



KYP037
Screw Mount - 6 cm short
arm



SIM002
11 m Valve Cable

REQUIRED PRODUCTS

SOLENOID DIRECTIONAL VALVES



TIMFAYP16
Solenoid 6-Spool
Directional Valves

HYDRA 700

7 WAY HYDRAULIC CONTROL BOX



Controls the flow and pressure of hydraulic fluid from the sprayer to cylinders and motors – adjusting boom level, direction and angle.

GENERAL FEATURES

Hydraulic Boom Movements

Hydraulic valves in the system let you control every boom movement from the cab.

7 Way

Leveling, height, lock and 4 boom movements.

CORE ELEMENTS - 3



THYD700.01
7W Control Box



SIM024
2 m Power Cable



SIM027
6 m Valve Cable

OPTIONAL - 3



KYP029
Triple Suction Cup Mount -
6 cm short arm



KYP037
Screw Mount - 6 cm short
arm



SIM013
11 m Valve Cable

REQUIRED PRODUCTS

SOLENOID DIRECTIONAL VALVES



TIMFAYP18
Solenoid 7-Spool
Directional Valves

HYDRA 500 AIR

5 WAY HYDRAULIC CONTROL BOX · AIR ECU WIRELESS



The Hydra 500 hydraulic control box with the AIR ECU wireless valve interface — boom movements from the cab, solenoid valves connected on the sprayer, no valve cable through the cab.

GENERAL FEATURES

Hydraulic Boom Movements

Leveling, height, lock and 2 boom movements — every movement from the cab.

AIR ECU Wireless Link

The SIM109 valve cable plugs into ECU socket 4 on the sprayer; box and ECU communicate wirelessly.

CORE ELEMENTS · 4



THYD500.02
5W Control Box - AIR



SIM024
2 m Power Cable



KYP046
AIR ECU Box



SIM109
AIR ECU Hydra Cable

OPTIONAL · 2



KYP029
Triple Suction Cup Mount -
6 cm short arm



KYP037
Screw Mount - 6 cm short
arm

REQUIRED PRODUCTS

SOLENOID DIRECTIONAL VALVES



TIMFAYP16
Solenoid 6-Spool
Directional Valves

CONNECTION DIAGRAM ■ NEXT PAGE

How it connects

The Hydra 500 box stays in the cab; its SIM109 valve cable plugs into socket 4 of the AIR ECU on the sprayer – the link between box and ECU is wireless.

AIR ECU – WIRELESS VALVE INTERFACE



The AIR ECU is mounted on the sprayer, next to the valves. The valve harness plugs straight into its sealed, numbered sockets and the ECU talks to the Hydra 500 box in the cab wirelessly – no thick valve cable has to be pulled into the tractor cab. Power and wireless-link LEDs on the front plate show the status at a glance.

TRACTOR CAB



Only the switch box stays in the cab – no computer, no GNSS antenna and no valve harness inside.

SPRAYER / IMPLEMENT



SOCKET MAP – HYDRA 500 AIR

1 SOCKET NOT USED

Free in the Hydra version.

2 SOCKET NOT USED

Free in the Hydra version.

3 SOCKET RESERVED

Kept free for future expansion.

4 SOCKET SIM109

Hydra cable · 5 way + 12 V power in.

HYDRA 700 AIR

7 WAY HYDRAULIC CONTROL BOX · AIR ECU WIRELESS



The Hydra 700 hydraulic control box with the AIR ECU wireless valve interface — boom movements from the cab, solenoid valves connected on the sprayer, no valve cable through the cab.

GENERAL FEATURES

Hydraulic Boom Movements

Leveling, height, lock and 4 boom movements — every movement from the cab.

AIR ECU Wireless Link

The SIM109 valve cable plugs into ECU socket 4 on the sprayer; box and ECU communicate wirelessly.

CORE ELEMENTS · 4



THYD700.02
7W Control Box - AIR



SIM024
2 m Power Cable



KYP046
AIR ECU Box



SIM109
AIR ECU Hydra Cable

OPTIONAL · 2



KYP029
Triple Suction Cup Mount -
6 cm short arm



KYP037
Screw Mount - 6 cm short
arm

REQUIRED PRODUCTS

SOLENOID DIRECTIONAL VALVES



TIMFAYP18
Solenoid 7-Spool
Directional Valves

CONNECTION DIAGRAM ■ NEXT PAGE


How it connects

The Hydra 700 box stays in the cab; its SIM109 valve cable plugs into socket 4 of the AIR ECU on the sprayer – the link between box and ECU is wireless.

AIR ECU – WIRELESS VALVE INTERFACE



The AIR ECU is mounted on the sprayer, next to the valves. The valve harness plugs straight into its sealed, numbered sockets and the ECU talks to the Hydra 700 box in the cab wirelessly – no thick valve cable has to be pulled into the tractor cab. Power and wireless-link LEDs on the front plate show the status at a glance.

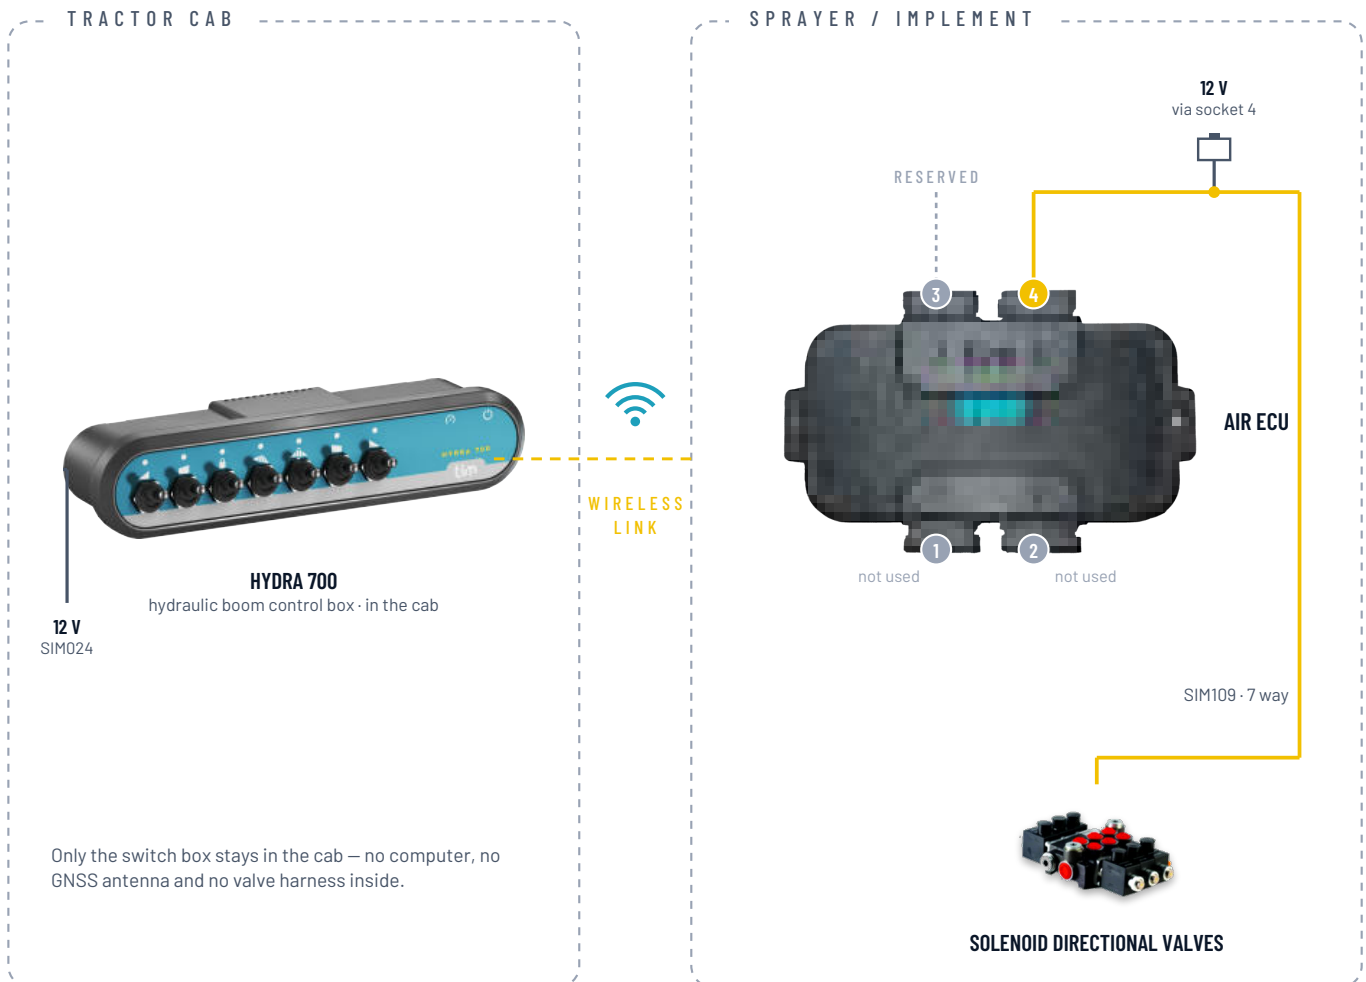

SOCKET MAP – HYDRA 700 AIR

1 SOCKET NOT USED

Free in the Hydra version.

2 SOCKET NOT USED

Free in the Hydra version.

3 SOCKET RESERVED

Kept free for future expansion.

4 SOCKET SIM109

Hydra cable · 7 way + 12 V power in.

CROSS 200

SUB-METER GNSS SMART ANTENNA



Sub-meter GNSS smart antenna for agricultural machinery – dual-band L1/L5 receiver with a built-in survey-grade antenna stays stable even between tree rows; one-cable connection to your existing machine.

GENERAL FEATURES

■ Sub-meter Accuracy

Sub-meter positioning with SBAS correction for agricultural guidance.

■ 10 Updates per Second

10 Hz position stream for fast, smooth track following.

■ Dual Band L1 + L5

6 satellite systems – GPS, Galileo, BeiDou, GLONASS, QZSS, NavIC.

■ Operating LED for Status

Status LED shows power and satellite fix at a glance.

TECHNICAL SUMMARY

Product code	KYP036
3 m harness code	KYP054
GNSS receiver	Dual band L1 / L5
Update rate	10 Hz
Operating temperature	–35 °C ... +80 °C
Dimensions	151.5 × 52.7 mm (octagonal housing)

CROSS 300

HIGH PRECISION GNSS RECEIVER



High precision GNSS receiver for agricultural machinery — dual-band receiver with a built-in motion sensor keeps working under the canopy; Wi-Fi and Bluetooth stream data instantly, single-connector installation.

GENERAL FEATURES


- High Precision**
 Dual-band tracking of 4 satellite systems (GPS, GLONASS, Galileo, BeiDou).
- RTK Ready**
 Centimeter-level RTK with a cellular correction service or an RTK base station.
- Uninterrupted Position**
 Built-in IMU keeps producing position even during signal loss.
- Easy Integration**
 Single connector, Wi-Fi + Bluetooth 5, NMEA 0183 output.

TECHNICAL SUMMARY

Product code	KYP067
3 m harness code	KYP054
GNSS receiver	Dual band, IMU fusion
Accuracy	RTK ready
Wireless	Wi-Fi 802.11 b/g/n · Bluetooth 5 LE
Interfaces	RS232 · NMEA 0183 output
Power	12 V DC (vehicle supply), protected input

TIM APP

FARM REPORTS & TRACKING

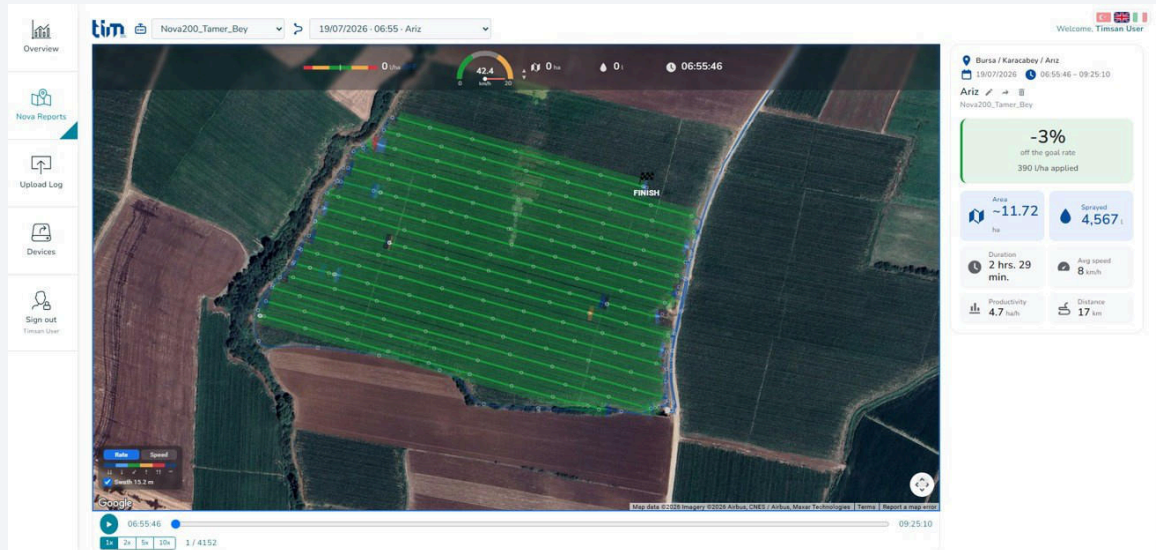


Monitor, manage and optimize field operations — connect your equipment and operators, bring traceability to every stage.

GENERAL FEATURES

Traceability

Every job carried out with a Nova computer is logged and can be replayed on the field map — route, working speed, applied rate versus target, covered area, sprayed volume, duration and distance. Reports are stored per device and per job, so office and field see the same data.

INSIDE THE APP

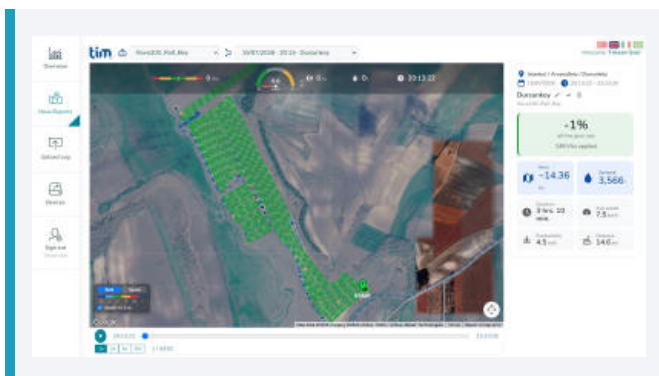

REPORTS — RATE

Applied rate versus target along the route — verify accuracy, optimize input usage.



REPORTS — SPEED

Real-time and average working speed per job, on the field map.

iOS · Android · Web — works with the Nova family computers.


Nova computers at a glance

Which Nova fits the job? Rate control, GNSS section control and navigation side by side – from the compact Nova 100 to the wireless Nova 2N sprayer kits.

									
	NOVA 100	NOVA 200	NOVA 110	NOVA 210	NOVA 130	NOVA 2N	NOVA 2N ORCHARD	NOVA 2N FIELD 500	NOVA 2N FIELD 700
	Rate controller	Auto section control	Orchard rate controller	Orchard navigation	Spreader rate controller	GNSS navigation	Orchard sprayer kit · 2 way	Field sprayer kit · 5 way	Field sprayer kit · 7 way
Automatic rate control	✓	✓	✓	✓	✓	–	✓	✓	✓
Automatic section control (GNSS)	–	✓	–	✓	–	–	✓	✓	✓
A-B guidance	–	✓	–	✓	–	✓	✓	✓	✓
Field boundary	–	✓	–	✓	–	✓	✓	✓	✓
Live coverage map	–	✓	–	✓	–	✓	✓	✓	✓
Wireless valve link (AIR ECU)	–	–	–	–	–	–	✓	✓	✓
Hydra boom control option	–	–	–	–	–	–	–	✓	✓
TIM APP reports	✓	✓	✓	✓	✓	✓	✓	✓	✓
Catalog page	3	5	8	10	12	14	15	18	21

Control boxes & GNSS at a glance

Aqua and Hydra control boxes, their AIR ECU wireless versions and Cross GNSS receivers – the building blocks that complete every Nova system.



AQUA 200	AQUA 500	AQUA 700	AQUA 200 AIR	AQUA 500 AIR	AQUA 700 AIR	HYDRA 500	HYDRA 700	HYDRA 500 AIR	HYDRA 700 AIR	CROSS 200	CROSS 300
2 way control box	5 way control box	7 way control box	2 way - wireless	5 way - wireless	7 way - wireless	5 way hydraulic	7 way hydraulic	5 way - wireless	7 way - wireless	GNSS smart	High precision

Liquid section control	✓	✓	✓	✓	✓	✓	-	-	-	-	-	-
Hydraulic boom control	-	-	-	-	-	-	✓	✓	✓	✓	-	-
GNSS positioning	-	-	-	-	-	-	-	-	-	-	✓	✓
Main valve + pressure ±	✓	✓	✓	✓	✓	✓	-	-	-	-	-	-
Wireless valve link (AIR ECU)	-	-	-	✓	✓	✓	-	-	✓	✓	-	-
No valve cable into the cab	-	-	-	✓	✓	✓	-	-	✓	✓	-	-
Hydra option on the same ECU	-	-	-	-	✓	✓	-	-	-	-	-	-
Boom leveling · height · lock	-	-	-	-	-	-	✓	✓	✓	✓	-	-
Sub-meter GNSS	-	-	-	-	-	-	-	-	-	-	✓	-
RTK ready	-	-	-	-	-	-	-	-	-	-	-	✓
Built-in IMU	-	-	-	-	-	-	-	-	-	-	-	✓
Wi-Fi + Bluetooth	-	-	-	-	-	-	-	-	-	-	-	✓
Catalog page	24	25	26	27	29	31	33	34	35	37	39	40



Let's digitize your equipment.

One ecosystem. Every operation.

Tim Dijital Teknolojiler A.Ş.

OFFICE

Esenehir Mah. Haseki Sok. No: 20/2, Ümraniye · İstanbul · Türkiye

E-MAIL

info@timdigitize.com

WEB

timdigitize.com