DIGITIZING EQUIPMENT

PRODUCT CATALOG 2026

Nova · Aqua · Hydra · Cross · TIM APP

DIGITAL FARMING

One ecosystem.
Every operation.

From rate control to full GNSS auto section, Tim engineers the digital layer of farming — rate controllers, spraying and navigation computers, liquid and hydraulic control boxes, GNSS receivers and the TIM APP platform, all designed to work together.

FIELD-PROVEN · SIMPLE BY DESIGN · BUILT TO LAST · LOCAL SUPPORT

NOVA FIELD — 03
Field rate & section control computers
NOVA 100 · NOVA 200

NOVA ORCHARD — 08
Orchard rate & section control computers
NOVA 110 · NOVA 210

NOVA SPREADER — 12
Spreader rate control computer
NOVA 130

NOVA NAVIGATION — 14
GNSS navigation computer & sprayer navigation kits
NOVA 2N · NOVA 2N ORCHARD · NOVA 2N FIELD 500 · NOVA 2N FIELD 700

AQUA — 24
Section control boxes & AIR ECU wireless versions
AQUA 200 · AQUA 500 · AQUA 700 · AQUA 200 / 500 / 700 AIR

HYDRA — 33
Hydraulic boom control & AIR ECU wireless versions
HYDRA 500 · HYDRA 700 · HYDRA 500 / 700 AIR

GNSS RECEIVERS — 39
GNSS smart antennas & RTK positioning
CROSS 200 · CROSS 300

TIM APP — 41
Smart farm management
TIM APP

NOVA 100

RATE CONTROLLER COMPUTER



Sustains the required application rate (lt/ha) at every tractor speed using flow, pressure and speed sensors.

GENERAL FEATURES

- **Rate Controller**
  Keeps the set application rate constant at all tractor speeds.
- **Large Display**
  20 × 4 character screen for user-friendly navigation.
- **Job Registration**
  10 jobs can be saved and recalled at any time.
- **Automatic Spray Shut-off**
  Spraying stops below minimum set pressure and speed.
- **Min–Max Pressure**
  System keeps pressure between the set operating limits during the job.
- **Custom Nozzle Spacing**
  Regulates the spray job correctly for different nozzle spacings.
- **Row-Turn Spraying**
  Prevents pressure loss when restarting the job at row turns.
- **Data Transfer**
  SD card export and USB connection for software updates.

PACKAGE & ORDER CODES NEXT PAGE

Package & options


CORE ELEMENTS · 4



TNOV100.01
Nova 100 Computer



SIM014
2 m Power Cable



KYP044
Compact GNSS



SIM015
Nova 100 · 4.5 + 1.5 m Valve Cable

OPTIONAL · 6



SIM016
10.5 + 1.5 m Valve Cable



KYP029
Triple Suction Cup Mount · 6 cm short arm



KYP037
Screw Mount · 6 cm short arm



KYP030
Speed Sensor · 2 m cable



KYP021
Level Sensor 0.4 BAR · 2 m cable



KYP022
Pressure Sensor 25 BAR · G 1/4

REQUIRED PRODUCTS

20 BAR 5W WOLF FLOWMETER ELECTROVALVE KIT



TA 871T502
20 BAR Main Control Valve



TA 863T024S
Proportional Valve



TA 32621M3
Line Filter



TA 4626415
Wolf Flow Meter



TA 863T0150
5W Section Valve

FITTINGS & MANOMETER



TA 1091313
Hose Connector 13 mm · ×5



TA G11058V
Gasket · ×5



TA 1190425
Elbow Fitting · ×1



TA 010004
Fitting Set · ×1



TA 911025
Manometer · ×1

OPTIONALS



TA 864050250
200 l/min Main Control Valve



TA 46211A4A5B5
ORION Flow Meter



TA 1091316
Hose Connector 16 mm

NOVA 200

AUTO SECTION CONTROL COMPUTER




GNSS-guided spraying: automatic section control, automatic rate control and field boundaries on one computer.

GENERAL FEATURES

- **Auto Section Control**
  Sections switch on/off from the field map and GPS position — no overlaps, no skips, less chemical waste.
- **Field Boundary**
  Record the exact field perimeter with GNSS; flow stops automatically outside the boundary.
- **Cross GNSS Options**
  Cross 200 Smart GNSS antenna; Cross 300 Smart Antenna for centimeter RTK accuracy.
- **Automatic Rate Control**
  Target rate held constant in real time regardless of speed or field conditions.
- **A–B Guidance**
  Straight-line guidance from two reference points for uniform passes.

PACKAGE & ORDER CODES NEXT PAGE

Guidance features

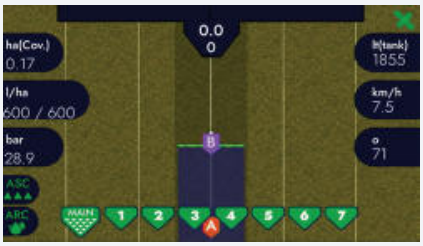


A–B Straight Line

Define a straight guidance path by marking two reference points (A and B). Nova 200 then generates perfectly parallel lines, ensuring precise and consistent navigation across the entire field.



Shift Line

Move guidance lines left or right without redefining the A–B line — a quick adjustment for implement width changes, overlaps or missed passes.

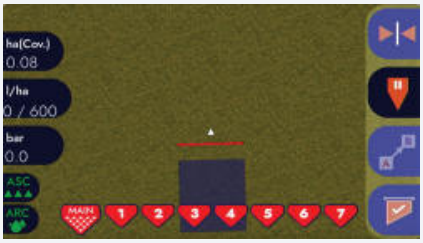

Pause Point

Stop spraying and resume later from the exact GPS location where you left off. Job data is recorded during pauses, so refills, obstacles or short breaks never cause overlaps or missed areas.



Equipment / Tractor Database

Add, configure and save multiple sprayer and tractor profiles. Each profile stores boom width, number of sections and calibration data for quick setup and consistent performance on every machine.



Auto Save

All spraying data is recorded continuously in real time — no manual job completion or confirmation needed. Nothing is lost if the operator exits the job screen, shuts down the system or pauses the operation.

Package & options

CORE ELEMENTS · 5



TNOV200.01
Nova 200 Computer



SIM014
2 m Power Cable



SIM100
Nova 200 · 4.5 + 1.5 m Valve Cable



KYP036
Cross 200 Smart GNSS



KYP054
Smart GNSS Harness

OPTIONAL · 8



SIM101
10.5 + 1.5 m Valve Cable



KYP029
Triple Suction Cup Mount · 6 cm short arm



KYP030
Speed Sensor · 2 m cable



KYP055
GNSS 14 Pin Cable



KYP067
Cross 300 Smart Antenna



KYP021
Level Sensor 0.4 BAR · 2 m cable



KYP022
Pressure Sensor 25 BAR · G 1/4



KYP037
Screw Mount · 6 cm short arm

REQUIRED PRODUCTS

20 BAR 7W WOLF FLOWMETER ELECTROVALVE KIT



TA 871T502
20 BAR Main Control Valve



TA 863T024S
Proportional Valve



TA 32621M3
Line Filter



TA 4626415
Wolf Flow Meter



TA 863T0150
5W Section Valve



TA 863T0120
2W Section Valve

FITTINGS & MANOMETER



TA 1091313
Hose Connector 13 mm · ×7



TA G11058V
Gasket · ×7



TA 1190425
Elbow Fitting · ×1



TA 010004
Fitting Set · ×1



TA 911025
Manometer · ×1

OPTIONALS



TA 864050250
200 l/min Main Control Valve



TA 46211A4A5B5
ORION Flow Meter



TA 1091316
Hose Connector 16 mm

NOVA 110

ORCHARD RATE CONTROLLER



Rate control tuned for orchards – the required application rate at every speed, with orchard-specific spraying workflow.

GENERAL FEATURES

- **Rate Controller**
  Keeps the set application rate constant at all tractor speeds.
- **Job Registration**
  10 jobs can be saved and recalled at any time.
- **Min–Max Pressure**
  System keeps pressure between the set operating limits during the job.
- **Large Display**
  20 × 4 character screen for user-friendly navigation.
- **Automatic Spray Shut-off**
  Spraying stops below minimum set pressure and speed.
- **Data Transfer**
  SD card export and USB connection for software updates.

PACKAGE & ORDER CODES NEXT PAGE

Package & options

CORE ELEMENTS · 4



TN0V110.01
Nova 110 Computer



SIM014
2 m Power Cable



KYP044
Compact GNSS



SIM021
Nova 110 · 3 + 1.5 m Valve Cable

OPTIONAL · 5



KYP029
Triple Suction Cup Mount · 6 cm short arm



KYP037
Screw Mount · 6 cm short arm



KYP030
Speed Sensor · 2 m cable



KYP021
Level Sensor 0.4 BAR · 2 m cable



KYP069
Pressure Sensor 60 BAR · G 1/4

REQUIRED PRODUCTS

2W ELECTRO VALVE ORION KIT



TA 881B14252D
40 BAR 2W Electro Valve Orion Kit

FITTINGS & MANOMETER



TA 010004
Fitting Set · ×1



TA 1190425
Elbow Fitting · ×1



TA 911040
Manometer · ×1

2W ELECTRO VALVE WOLF KIT



TA 881B14252K
40 BAR 2W Electro Valve Wolf Kit

FITTINGS & MANOMETER



TA 010004
Fitting Set · ×1



TA 1190425
Elbow Fitting · ×1



TA 911040
Manometer · ×1

NOVA 210

ORCHARD NAVIGATION CONTROL COMPUTER



GNSS-guided orchard spraying: automatic section control, automatic rate control and field boundaries on one computer — built for tree rows.

GENERAL FEATURES

- **Auto Section Control**
  2 or 4 sections switch on/off from the field map and GPS position — no overlaps, no skips, less chemical waste.
- **Field Boundary**
  Record the exact orchard perimeter with GNSS; flow stops automatically outside the boundary.
- **Cross GNSS Options**
  Cross 200 Smart GNSS antenna; Cross 300 Smart Antenna for centimeter RTK accuracy.
- **Automatic Rate Control**
  Target rate held constant in real time regardless of speed or field conditions.
- **A–B Guidance**
  Straight-line guidance along tree rows from two reference points for uniform passes.
- **Orchard Sprayers**
  Compact 2 / 4 section layout for orchard and vineyard sprayers — the Nova 200 workflow, sized for trees.

PACKAGE & ORDER CODES NEXT PAGE

Package & options

CORE ELEMENTS · 5



TNOV210.01
Nova 210 Computer



SIM014
2 m Power Cable



SIM100
Nova 200 · 4.5 + 1.5 m Valve Cable



KYP036
Cross 200 Smart GNSS



KYP054
Smart GNSS Harness

OPTIONAL · 8



SIM101
10.5 + 1.5 m Valve Cable



KYP029
Triple Suction Cup Mount · 6 cm short arm



KYP030
Speed Sensor · 2 m cable



KYP055
GNSS 14 Pin Cable



KYP067
Cross 300 Smart Antenna



KYP021
Level Sensor 0.4 BAR · 2 m cable



KYP022
Pressure Sensor 25 BAR · G 1/4



KYP037
Screw Mount · 6 cm short arm

REQUIRED PRODUCTS

2W ELECTRO VALVE ORION KIT



TA 881B14252D
40 BAR 2W Electro Valve Orion Kit

FITTINGS & MANOMETER



TA 010004
Fitting Set · ×1



TA 1190425
Elbow Fitting · ×1




TA 911040
Manometer · ×1

2W ELECTRO VALVE WOLF KIT



TA 881B14252K
40 BAR 2W Electro Valve Wolf Kit

FITTINGS & MANOMETER



TA 010004
Fitting Set · ×1



TA 1190425
Elbow Fitting · ×1



TA 911040
Manometer · ×1

NOVA 130

SPREADER RATE CONTROLLER



Spreader rate control with LINAK electromotors – the required application rate at every tractor speed.

GENERAL FEATURES

- **Rate Controller**
  Application rate held constant using flow sensing and LINAK electromotors.
- **Job Registration**
  10 jobs can be saved and recalled at any time.
- **Row-Turn Spreading**
  Ensures efficient spreading after row turns.
- **Large Display**
  20 × 4 character screen for user-friendly navigation.
- **Automatic Shut-off**
  Spreading stops below minimum set pressure and speed.
- **Data Transfer**
  SD card export and USB connection for software updates.

PACKAGE & ORDER CODES NEXT PAGE

Package & options

CORE ELEMENTS · 4



TNOV130.01
Nova 130 Computer



SIM014
2 m Power Cable



KYP044
Compact GNSS



SIM023
Nova 130 · 3 + 1.5 m Valve Cable

OPTIONAL · 2



KYP029
Triple Suction Cup Mount · 6 cm short arm



KYP037
Screw Mount · 6 cm short arm

REQUIRED PRODUCTS

LINAK ACTUATORS




KYP059
LINAK LA12 Actuator · × 2 unit



KYP068
LINAK LA14 Actuator · × 2 unit

NOVA 2N

GNSS NAVIGATION COMPUTER

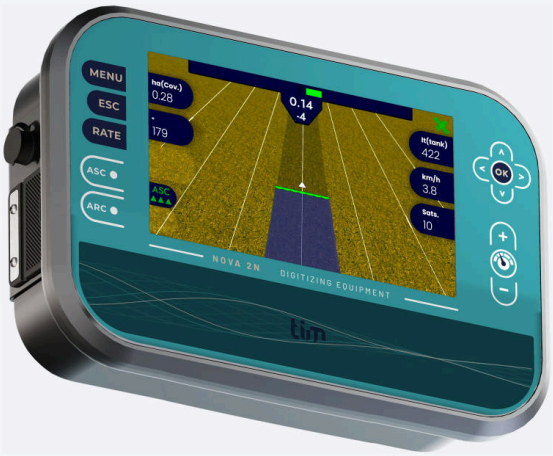

GNSS navigation on the Nova 200 platform — A–B guidance, field boundaries and live coverage on one screen. Navigation only, fully upgradable to automatic section and rate control.

GENERAL FEATURES

- **A–B Guidance & Boundary**
  Straight-line guidance with shift-line and pause point; record the field perimeter with GNSS.
- **Navigation Only**
  Clean front panel without switches — the Nova 200 interface, guidance only.
- **Coverage Map**
  Covered area (ha) and satellite status tracked live on the field view.
- **Upgradable**
  Grows into the Orchard or Field sprayer kits — automatic section and rate control whenever you need it.

CORE ELEMENTS · 4



TNOV2N.01
Nova 2N Computer



SIM014
2 m Power Cable



KYP028
Basic GNSS Antenna



KYP054
Smart GNSS Harness

OPTIONAL · 3



KYP029
Triple Suction Cup Mount · 6 cm short arm



KYP036
Cross 200 Smart GNSS



KYP067
Cross 300 Smart Antenna

SPRAYER NAVIGATION KIT VERSIONS

The Nova 2N is also available as a complete sprayer kit: the navigation computer paired with an Aqua control box for automatic section and rate control, delivered with the matching valve kit.



NOVA 2N ORCHARD
Orchard sprayer kit · 2 way
PAGE 15



NOVA 2N FIELD 500
Field sprayer kit · 5 way
PAGE 18



NOVA 2N FIELD 700
Field sprayer kit · 7 way
PAGE 21

NOVA 2N ORCHARD

ORCHARD SPRAYER NAVIGATION KIT · 2 WAY



Nova 2N navigation with automatic section and rate control — Aqua 200 box and AIR ECU for a complete 2-section orchard sprayer kit, with no valve cable pulled into the cab.

GENERAL FEATURES

- **A–B Guidance & Boundary**
  Straight-line guidance with shift-line and pause point; record the orchard perimeter with GNSS.
- **Automatic Rate Control**
  Target rate held constant in real time regardless of speed or field conditions.
- **40 BAR Orchard Valves**
  Works with the 2W Orion or Wolf electro valve kit for high-pressure orchard spraying.
- **Automatic Section Control**
  2 sections switch on/off automatically from the field map and GPS position; Aqua 200 switches for manual override.
- **AIR ECU Wireless Link**
  The 2-way valve harness plugs into ECU socket 1 on the sprayer; the cab link is wireless.
- **Cross GNSS Options**
  Cross 200 Smart GNSS antenna; Cross 300 Smart Antenna for higher precision.

PACKAGE & ORDER CODES ■ NEXT PAGE

Package & options

CORE ELEMENTS · 8



TN0V2N.01
Nova 2N Computer



SIM014
2 m Power Cable



KYP054
Smart GNSS Harness



KYP046
AIR ECU Box



SIM106
AIR ECU Main Cable · 12 V + 2 way



KYP029
Triple Suction Cup Mount · 6 cm short arm



KYP036
Cross 200 Smart GNSS



TAQU200.01
Aqua 200 Control Box

OPTIONAL · 4



KYP021
Level Sensor 0.4 BAR · 2 m cable



KYP022
Pressure Sensor 25 BAR · G 1/4



KYP067
Cross 300 Smart Antenna



KYP055
GNSS 14 Pin Cable

REQUIRED PRODUCTS

2W ELECTRO VALVE ORION KIT



TA 881B14252D
40 BAR 2W Electro Valve Orion Kit

FITTINGS & MANOMETER



TA 010004
Fitting Set · ×1



TA 1190425
Elbow Fitting · ×1




TA 911040
Manometer · ×1

2W ELECTRO VALVE WOLF KIT



TA 881B14252K
40 BAR 2W Electro Valve Wolf Kit

FITTINGS & MANOMETER



TA 010004
Fitting Set · ×1



TA 1190425
Elbow Fitting · ×1



TA 911040
Manometer · ×1

CONNECTION DIAGRAM ■ NEXT PAGE

How it connects

Orchard version: the Aqua 200 valve harness plugs into socket 1 of the AIR ECU on the sprayer; the link to the Nova 2N and the Aqua 200 box in the cab is wireless.

AIR ECU — WIRELESS VALVE INTERFACE



The AIR ECU is mounted on the sprayer, next to the valves. The valve harness plugs straight into its sealed, numbered sockets and the ECU talks to the Nova 2N in the cab wirelessly — no thick valve cable has to be pulled into the tractor cab. Power and wireless-link LEDs on the front plate show the status at a glance.




SOCKET MAP — NOVA 2N ORCHARD

1 SOCKET **SIM106**	2 SOCKET **NOT USED**	3 SOCKET **RESERVED**	4 SOCKET **NOT USED**
Main cable · 2 way + 12 V power in.	Free in the orchard version.	Kept free for future expansion.	Free in the orchard version.

NOVA 2N FIELD 500

FIELD SPRAYER NAVIGATION KIT · 5 WAY

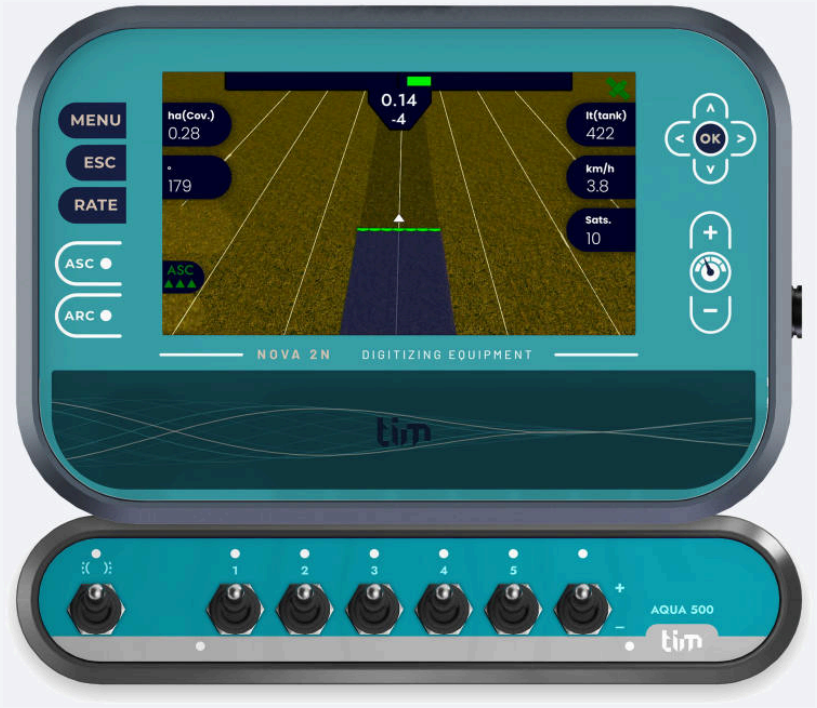

Nova 2N navigation with automatic section and rate control — Aqua 500 box and AIR ECU, five boom sections controlled from the cab, valves connected wirelessly on the sprayer.

GENERAL FEATURES

- **A–B Guidance & Boundary**
  Straight-line guidance with shift-line and pause point; field perimeter recorded with GNSS.
- **Automatic Rate Control**
  Target rate held constant in real time regardless of speed or field conditions.
- **20 BAR Wolf Flowmeter Kit**
  Main control valve, line filter, control valve and 5W section valve for field booms.
- **Automatic Section Control**
  5 sections switch on/off automatically from the field map and GPS position; Aqua 500 switches for manual override.
- **AIR ECU Wireless Link**
  The 5-way valve harness plugs into ECU sockets 1 + 2 on the sprayer; the cab link is wireless.
- **Hydra Ready**
  Add a Hydra 500 / 700 hydraulic boom kit on ECU socket 4 — both kits run on one ECU.

PACKAGE & ORDER CODES ■ NEXT PAGE

Package & options

CORE ELEMENTS ·9



TN0V2N.01
Nova 2N Computer



SIM014
2 m Power Cable



KYP054
Smart GNSS Harness



KYP046
AIR ECU Box



SIM106
AIR ECU Main Cable · 12 V + 2 way



SIM107
AIR ECU Cable · 5 way



KYP029
Triple Suction Cup Mount · 6 cm short arm



KYP036
Cross 200 Smart GNSS



TAQU500.01
Aqua 500 Control Box

OPTIONAL ·7



KYP021
Level Sensor 0.4 BAR · 2 m cable



KYP022
Pressure Sensor 25 BAR · G 1/4



THYD500.01
Hydra 500 Control Box



THYD700.01
Hydra 700 Control Box



SIM109
AIR ECU Hydra Cable



KYP067
Cross 300 Smart Antenna



KYP055
GNSS 14 Pin Cable

REQUIRED PRODUCTS

20 BAR 5W WOLF FLOWMETER ELECTROVALVE KIT



TA 871T502
20 BAR Main Control Valve



TA 863T024S
Proportional Valve



TA 32621M3
Line Filter



TA 4626415
Wolf Flow Meter



TA 863T0150
5W Section Valve

FITTINGS & MANOMETER



TA 1091313
Hose Connector 13 mm · ×5



TA G11058V
Gasket · ×5



TA 1190425
Elbow Fitting · ×1



TA 010004
Fitting Set · ×1



TA 911025
Manometer · ×1

OPTIONALS



TA 864050250
200 l/min Main Control Valve



TA 46211A4A5B5
ORION Flow Meter



TA 1091316
Hose Connector 16 mm

CONNECTION DIAGRAM ■ NEXT PAGE


How it connects

Field version: the Aqua 500 valve harness plugs into sockets 1 + 2 of the AIR ECU on the sprayer; the link to the Nova 2N and the Aqua 500 box in the cab is wireless.

AIR ECU — WIRELESS VALVE INTERFACE



The AIR ECU is mounted on the sprayer, next to the valves. The valve harness plugs straight into its sealed, numbered sockets and the ECU talks to the Nova 2N in the cab wirelessly — no thick valve cable has to be pulled into the tractor cab. Power and wireless-link LEDs on the front plate show the status at a glance.

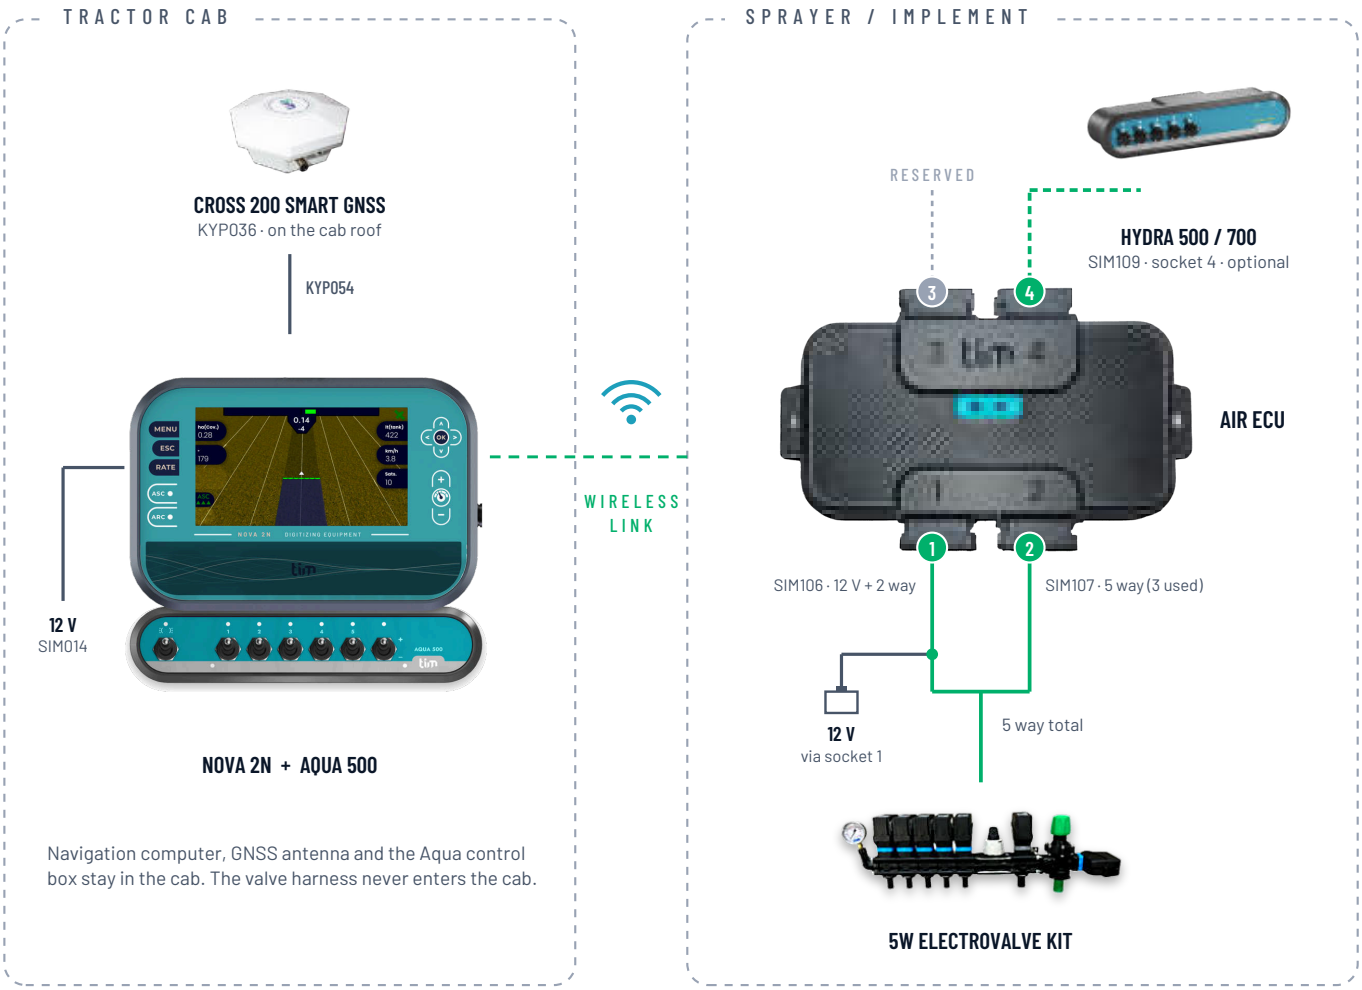

SOCKET MAP — NOVA 2N FIELD 500

1	2	3	4
SOCKET	SOCKET	SOCKET	SOCKET
SIM106	**SIM107**	**RESERVED**	**SIM109**
Main cable · 12 V power + 2 way.	5 way cable, 3 used · 5 way in total.	Kept free for future expansion.	Hydra 500 / 700 cable · optional.

NOVA 2N FIELD 700

FIELD SPRAYER NAVIGATION KIT · 7 WAY



Nova 2N navigation with automatic section and rate control — Aqua 700 box and AIR ECU, seven boom sections controlled from the cab, valves connected wirelessly on the sprayer.

GENERAL FEATURES

- **A–B Guidance & Boundary**
  Straight-line guidance with shift-line and pause point; field perimeter recorded with GNSS.
- **Automatic Rate Control**
  Target rate held constant in real time regardless of speed or field conditions.
- **20 BAR Wolf Flowmeter Kit**
  Main control valve, line filter, control valve, 5W + 2W section valves for wide booms.
- **Automatic Section Control**
  7 sections switch on/off automatically from the field map and GPS position; Aqua 700 switches for manual override.
- **AIR ECU Wireless Link**
  The 7-way valve harness plugs into ECU sockets 1 + 2 on the sprayer; the cab link is wireless.
- **Hydra Ready**
  Add a Hydra 500 / 700 hydraulic boom kit on ECU socket 4 — both kits run on one ECU.

PACKAGE & ORDER CODES ■ NEXT PAGE

Package & options

CORE ELEMENTS ·9



TN0V2N.01
Nova 2N Computer



SIM014
2 m Power Cable



KYP054
Smart GNSS Harness



KYP046
AIR ECU Box



SIM106
AIR ECU Main Cable · 12 V + 2 way



SIM107
AIR ECU Cable · 5 way



KYP029
Triple Suction Cup Mount · 6 cm short arm



KYP036
Cross 200 Smart GNSS



TAQU700.01
Aqua 700 Control Box

OPTIONAL ·7



KYP021
Level Sensor 0.4 BAR · 2 m cable



KYP022
Pressure Sensor 25 BAR · G 1/4



THYD500.01
Hydra 500 Control Box



THYD700.01
Hydra 700 Control Box



SIM109
AIR ECU Hydra Cable



KYP067
Cross 300 Smart Antenna



KYP055
GNSS 14 Pin Cable

REQUIRED PRODUCTS

20 BAR 7W WOLF FLOWMETER ELECTROVALVE KIT



TA 871T502
20 BAR Main Control Valve



TA 863T024S
Proportional Valve



TA 32621M3
Line Filter



TA 4626415
Wolf Flow Meter



TA 863T0150
5W Section Valve



TA 863T0120
2W Section Valve

FITTINGS & MANOMETER



TA 1091313
Hose Connector 13 mm · ×7



TA G11058V
Gasket · ×7



TA 1190425
Elbow Fitting · ×1



TA 010004
Fitting Set · ×1



TA 911025
Manometer · ×1

OPTIONALS



TA 864050250
200 l/min Main Control Valve



TA 46211A4A5B5
ORION Flow Meter



TA 1091316
Hose Connector 16 mm

CONNECTION DIAGRAM ■ NEXT PAGE


How it connects

Field version: the Aqua 700 valve harness plugs into sockets 1 + 2 of the AIR ECU on the sprayer; the link to the Nova 2N and the Aqua 700 box in the cab is wireless.

AIR ECU — WIRELESS VALVE INTERFACE



The AIR ECU is mounted on the sprayer, next to the valves. The valve harness plugs straight into its sealed, numbered sockets and the ECU talks to the Nova 2N in the cab wirelessly — no thick valve cable has to be pulled into the tractor cab. Power and wireless-link LEDs on the front plate show the status at a glance.

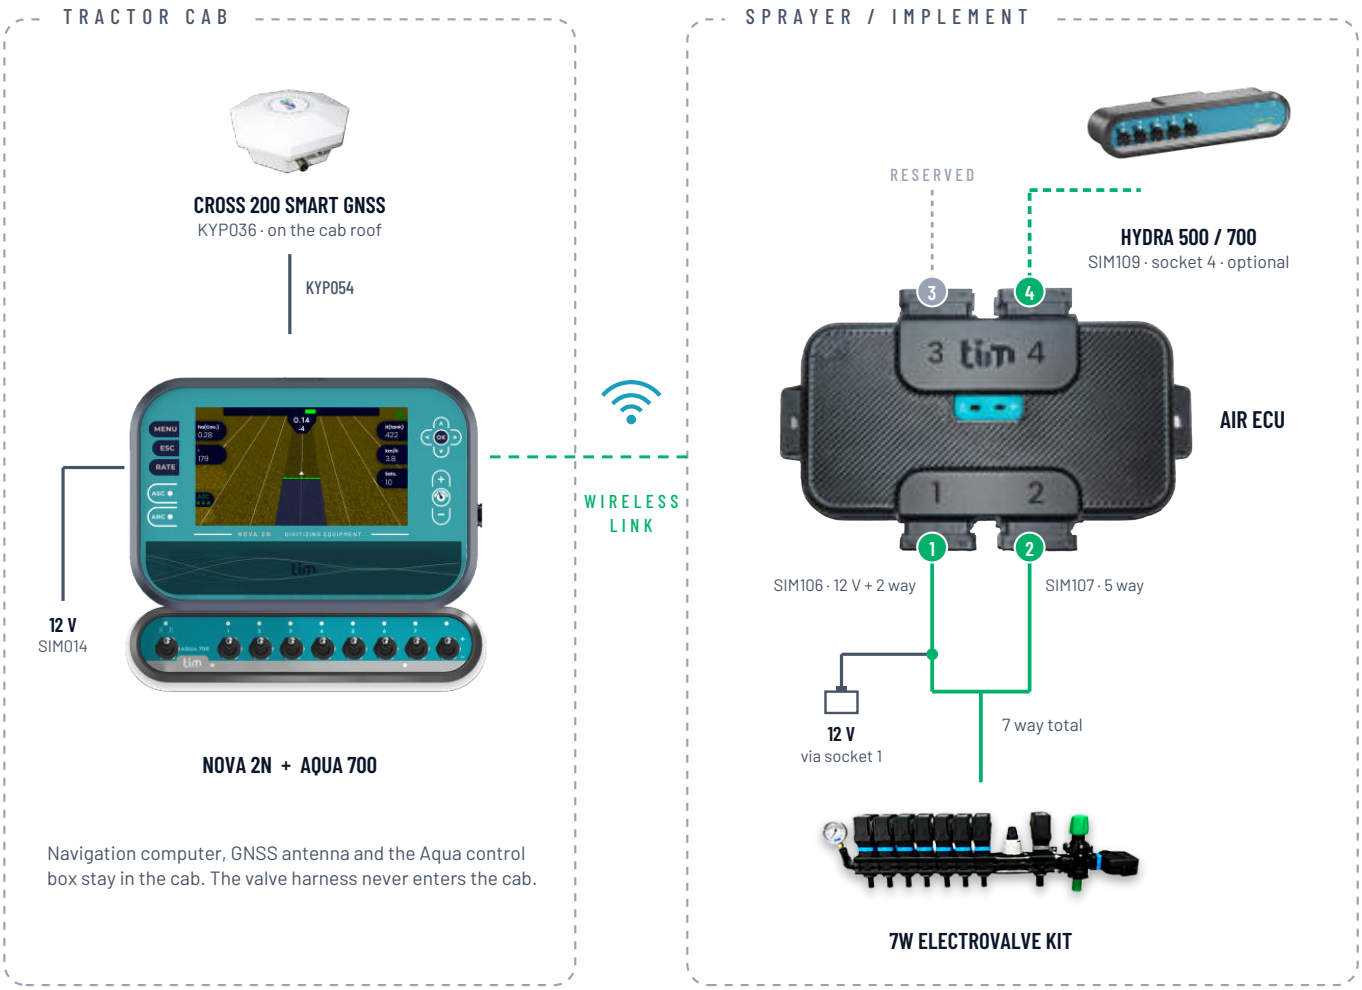

SOCKET MAP — NOVA 2N FIELD 700

1 SOCKET **SIM106**	2 SOCKET **SIM107**	3 SOCKET **RESERVED**	4 SOCKET **SIM109**
Main cable · 12 V power + 2 way.	5 way cable · 7 way in total.	Kept free for future expansion.	Hydra 500 / 700 cable · optional.

AQUA 200

2 WAY CONTROL BOX



Easy section control prevents pressure deviation in section opening / closing — safe application without a spraying hose in the cab.

GENERAL FEATURES

- **Spraying Dosage**
  Increase or decrease the pressure manually; adjusts spraying dosage during operation.
- **In-Cab Control**
  No chemical hoses carried inside the cabin — safe and easy spraying control.
- **Control Box**
  Controls 2 section valves open/close, main valve open/close and pressure regulation.
- **AIR ECU Version**
  Also available as AQUA 200 AIR with the wireless valve interface — see page 27.

CORE ELEMENTS ·3



TAQU200.01
2W Control Box



SIM024
2 m Power Cable



SIM025
4.5 m 2W Valve Cable

OPTIONAL ·1



KYP037
Screw Mount · 6 cm short arm

REQUIRED PRODUCTS

40 BAR 2W ELECTRO VALVE KIT



TA 881214242
40 BAR 2W Electro Valve Kit

FITTINGS & MANOMETER



TA 1193425
45° Elbow Fitting · optional



TA 1091425
Hose Connector · optional



TA 1191425
Elbow Fitting · ×1



TA 010004
Fitting Set · ×1



TA 911040
Manometer · ×1



TA G11054
Gasket · ×1

AQUA 500

5 WAY CONTROL BOX



Easy section control prevents pressure deviation in section opening / closing — safe application without a spraying hose in the cab.

GENERAL FEATURES

- **Spraying Dosage**
  Increase or decrease the pressure manually; adjusts spraying dosage during operation.
- **In-Cab Control**
  No chemical hoses carried inside the cabin — safe and easy spraying control.
- **Control Box**
  Controls 5 section valves open/close, main valve open/close and pressure regulation.
- **AIR ECU Version**
  Also available as AQUA 500 AIR with the wireless valve interface — see page 29.

CORE ELEMENTS · 3



TAQU500.01
5W Control Box



SIM024
2 m Power Cable



SIM026
4.5 m 5W Valve Cable

OPTIONAL · 2



KYP029
Triple Suction Cup Mount · 6 cm short arm



KYP037
Screw Mount · 6 cm short arm

REQUIRED PRODUCTS

20 BAR 5W ELECTRO VALVE KIT



TA 871T502
20 BAR Main Control Valve



TA 863T024S
Proportional Valve



TA 32621M3
Line Filter



TA 863T0150
5W Section Valve

FITTINGS & MANOMETER



TA 1091313
Hose Connector 13 mm · ×5



TA G11058V
Gasket · ×5



TA 1190425
Elbow Fitting · ×1



TA 010004
Fitting Set · ×1



TA 911025
Manometer · ×1

AQUA 700

7 WAY CONTROL BOX



Easy section control prevents pressure deviation in section opening / closing — safe application without a spraying hose in the cab.

GENERAL FEATURES

- **Spraying Dosage**
  Increase or decrease the pressure manually; adjusts spraying dosage during operation.
- **In-Cab Control**
  No chemical hoses carried inside the cabin — safe and easy spraying control.
- **Control Box**
  Controls 7 section valves open/close, main valve open/close and pressure regulation.
- **AIR ECU Version**
  Also available as AQUA 700 AIR with the wireless valve interface — see page 31.

CORE ELEMENTS · 3



TAQU700.01
7W Control Box



SIM024
2 m Power Cable



SIM026
4.5 m 7W Valve Cable

OPTIONAL · 2



KYP029
Triple Suction Cup Mount · 6 cm short arm



KYP037
Screw Mount · 6 cm short arm

REQUIRED PRODUCTS

20 BAR 7W ELECTRO VALVE KIT



TA 871T502
20 BAR Main Control Valve



TA 863T024S
Proportional Valve



TA 32621M3
Line Filter



TA 863T0150
5W Section Valve



TA 863T0120
2W Section Valve

FITTINGS & MANOMETER



TA 1091313
Hose Connector 13 mm · ×7



TA G11058V
Gasket · ×7



TA 1190425
Elbow Fitting · ×1



TA 010004
Fitting Set · ×1



TA 911025
Manometer · ×1

AQUA 200 AIR

2 WAY CONTROL BOX · AIR ECU WIRELESS



The Aqua 200 control box with the AIR ECU wireless valve interface — manual section control from the cab, valves connected on the sprayer, no valve cable through the cab.

GENERAL FEATURES

- **Control Box**
  Controls 2 section valves, main valve and pressure regulation — no valve harness in the cab.
- **AIR ECU Wireless Link**
  The valve harness plugs into the ECU on the sprayer; box and ECU communicate wirelessly.

CORE ELEMENTS · 4



TAQU200.02
2W Control Box · AIR



SIM024
2 m Power Cable



KYP046
AIR ECU Box



SIM106
AIR ECU Main Cable · 12 V + 2 way

OPTIONAL · 1



KYP037
Screw Mount · 6 cm short arm

REQUIRED PRODUCTS

40 BAR 2W ELECTRO VALVE KIT



TA 881214242
40 BAR 2W Electro Valve Kit

FITTINGS & MANOMETER



TA 1193425
45° Elbow Fitting · optional



TA 1091425
Hose Connector · optional



TA 1191425
Elbow Fitting · ×1



TA 010004
Fitting Set · ×1



TA 911040
Manometer · ×1



TA G11054
Gasket · ×1

CONNECTION DIAGRAM ■ NEXT PAGE


How it connects

The Aqua 200 switch box stays in the cab; its 2 way valve harness plugs into socket 1 of the AIR ECU on the sprayer — the link between box and ECU is wireless.

AIR ECU — WIRELESS VALVE INTERFACE



The AIR ECU is mounted on the sprayer, next to the valves. The valve harness plugs straight into its sealed, numbered sockets and the ECU talks to the Aqua 200 box in the cab wirelessly — no thick valve cable has to be pulled into the tractor cab. Power and wireless-link LEDs on the front plate show the status at a glance.

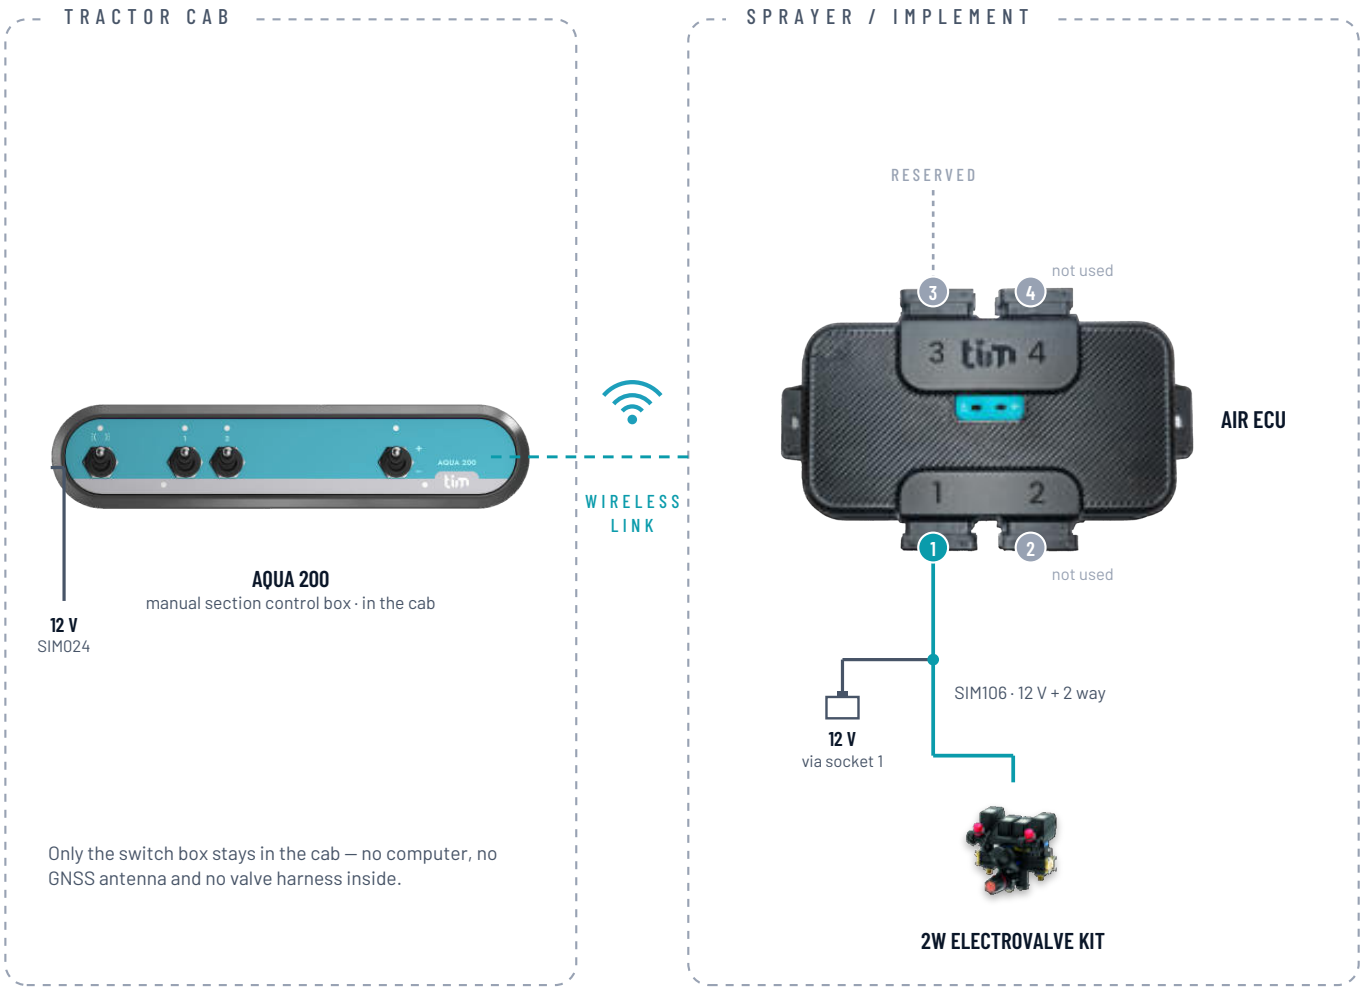

SOCKET MAP — AQUA 200 AIR

1 SOCKET **SIM106**	2 SOCKET **NOT USED**	3 SOCKET **RESERVED**	4 SOCKET **NOT USED**
Main cable · 2 way + 12 V power in.	Free in the 2 way version.	Kept free for future expansion.	Free in the 2 way version.

AQUA 500 AIR

5 WAY CONTROL BOX · AIR ECU WIRELESS



The Aqua 500 control box with the AIR ECU wireless valve interface — manual section control from the cab, valves connected on the sprayer, no valve cable through the cab.

GENERAL FEATURES

- **Control Box**
  Controls 5 section valves, main valve and pressure regulation — no valve harness in the cab.
- **AIR ECU Wireless Link**
  The valve harness plugs into the ECU on the sprayer; box and ECU communicate wirelessly.

CORE ELEMENTS · 5



TAQU500.02
5W Control Box · AIR



SIM024
2 m Power Cable



KYP046
AIR ECU Box



SIM106
AIR ECU Main Cable · 12 V + 2 way



SIM107
AIR ECU Cable · 5 way

OPTIONAL · 5



KYP029
Triple Suction Cup Mount · 6 cm short arm



KYP037
Screw Mount · 6 cm short arm



THYD500.01
Hydra 500 Control Box



THYD700.01
Hydra 700 Control Box



SIM109
AIR ECU Hydra Cable

REQUIRED PRODUCTS

20 BAR 5W ELECTRO VALVE KIT



TA 871T502
20 BAR Main Control Valve



TA 863T024S
Proportional Valve



TA 32621M3
Line Filter



TA 863T0150
5W Section Valve

FITTINGS & MANOMETER



TA 1091313
Hose Connector 13 mm · ×5



TA G11058V
Gasket · ×5



TA 1190425
Elbow Fitting · ×1



TA 010004
Fitting Set · ×1



TA 911025
Manometer · ×1

CONNECTION DIAGRAM ■ NEXT PAGE


How it connects

The Aqua 500 switch box stays in the cab; its valve harness plugs into sockets 1 + 2 of the AIR ECU on the sprayer — the link between box and ECU is wireless.

AIR ECU — WIRELESS VALVE INTERFACE



The AIR ECU is mounted on the sprayer, next to the valves. The valve harness plugs straight into its sealed, numbered sockets and the ECU talks to the Aqua 500 box in the cab wirelessly — no thick valve cable has to be pulled into the tractor cab. Power and wireless-link LEDs on the front plate show the status at a glance.

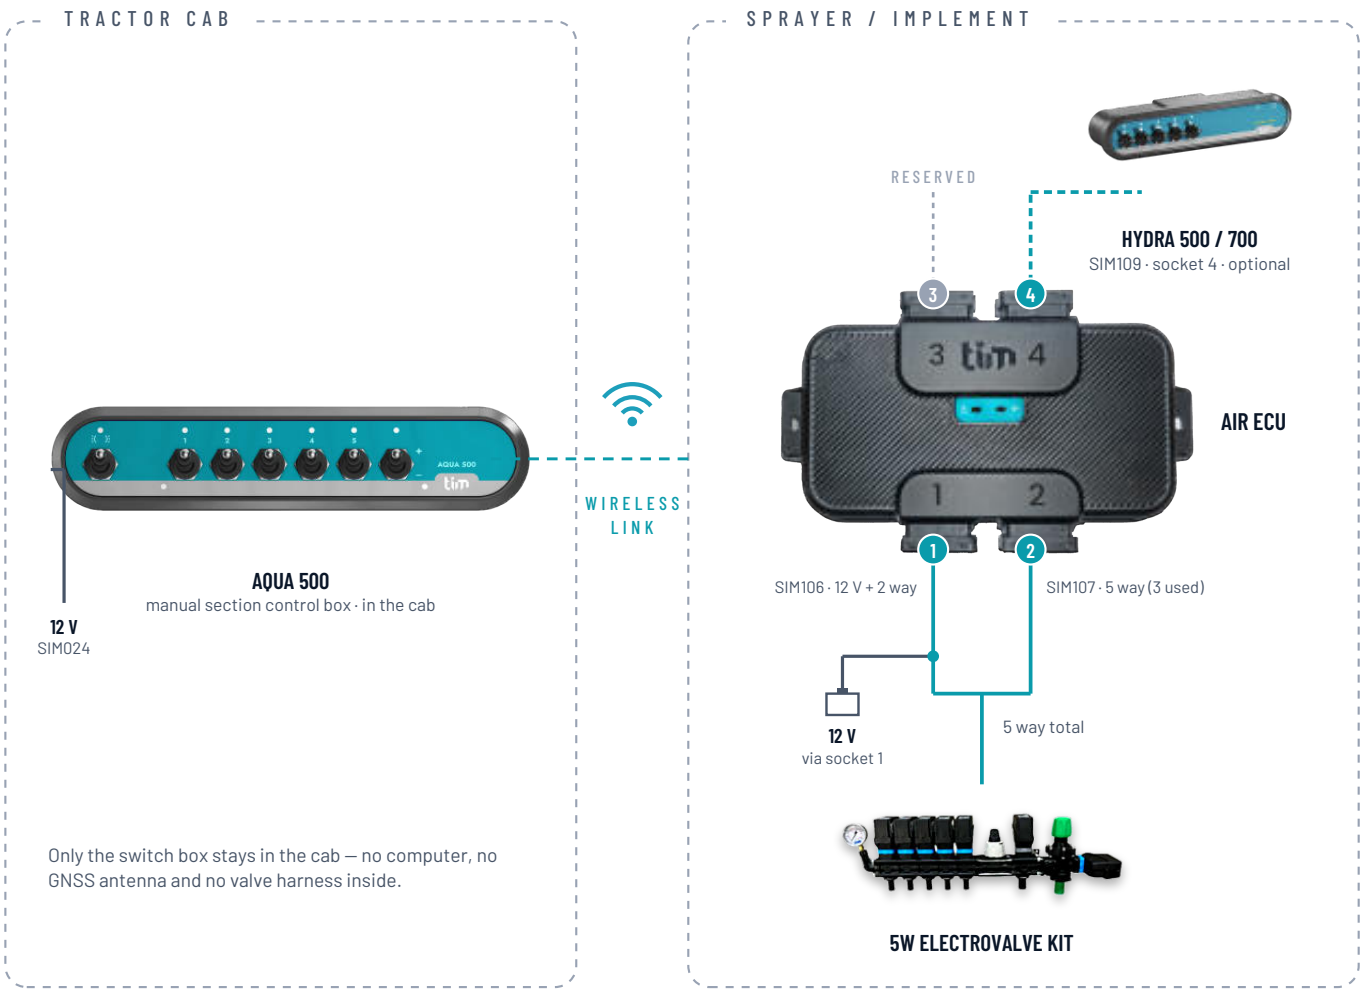

SOCKET MAP — AQUA 500 AIR

1	SOCKET **SIM106**	Main cable · 12 V power + 2 way.
2	SOCKET **SIM107**	5 way cable, 3 used · 5 way in total.
3	SOCKET **RESERVED**	Kept free for future expansion.
4	SOCKET **SIM109**	Hydra 500 / 700 cable · optional.

AQUA 700 AIR

7 WAY CONTROL BOX · AIR ECU WIRELESS



The Aqua 700 control box with the AIR ECU wireless valve interface — manual section control from the cab, valves connected on the sprayer, no valve cable through the cab.

GENERAL FEATURES

- **Control Box**
  Controls 7 section valves, main valve and pressure regulation — no valve harness in the cab.
- **AIR ECU Wireless Link**
  The valve harness plugs into the ECU on the sprayer; box and ECU communicate wirelessly.

CORE ELEMENTS · 5



TAQU700.02
7W Control Box · AIR



SIM024
2 m Power Cable



KYP046
AIR ECU Box



SIM106
AIR ECU Main Cable · 12 V + 2 way



SIM107
AIR ECU Cable · 5 way

OPTIONAL · 5



KYP029
Triple Suction Cup Mount · 6 cm short arm



KYP037
Screw Mount · 6 cm short arm



THYD500.01
Hydra 500 Control Box



THYD700.01
Hydra 700 Control Box



SIM109
AIR ECU Hydra Cable

REQUIRED PRODUCTS

20 BAR 7W ELECTRO VALVE KIT



TA 871T502
20 BAR Main Control Valve



TA 863T024S
Proportional Valve



TA 32621M3
Line Filter



TA 863T0150
5W Section Valve



TA 863T0120
2W Section Valve

FITTINGS & MANOMETER



TA 1091313
Hose Connector 13 mm · ×7



TA G11058V
Gasket · ×7



TA 1190425
Elbow Fitting · ×1



TA 010004
Fitting Set · ×1



TA 911025
Manometer · ×1

CONNECTION DIAGRAM ■ NEXT PAGE


How it connects

The Aqua 700 switch box stays in the cab; its valve harness plugs into sockets 1 + 2 of the AIR ECU on the sprayer — the link between box and ECU is wireless.

AIR ECU — WIRELESS VALVE INTERFACE



The AIR ECU is mounted on the sprayer, next to the valves. The valve harness plugs straight into its sealed, numbered sockets and the ECU talks to the Aqua 700 box in the cab wirelessly — no thick valve cable has to be pulled into the tractor cab. Power and wireless-link LEDs on the front plate show the status at a glance.

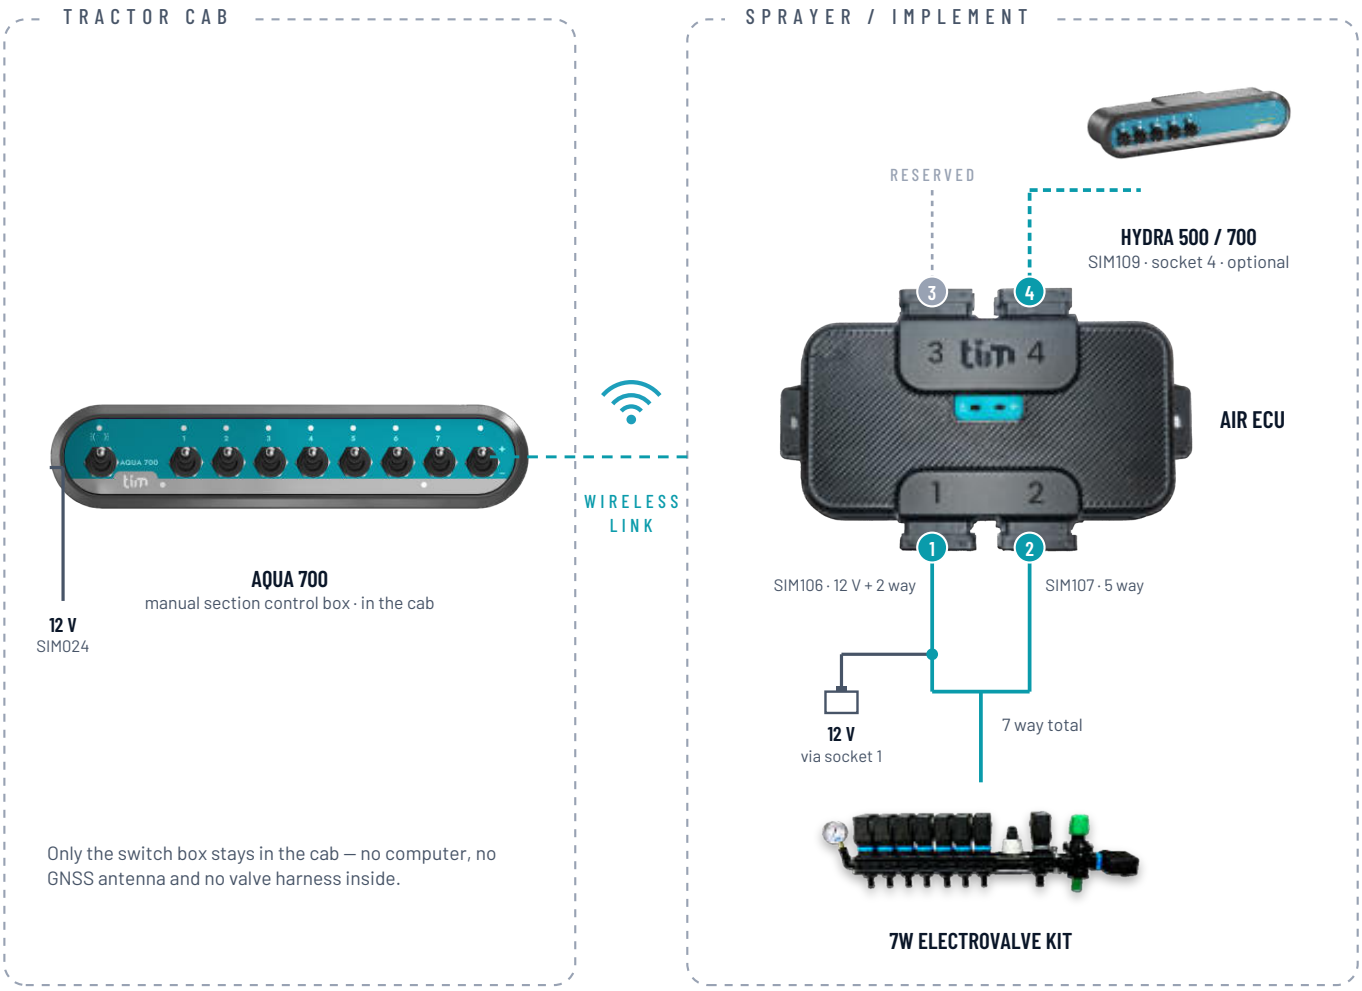

SOCKET MAP — AQUA 700 AIR

1 SOCKET **SIM106**	**2** SOCKET **SIM107**	**3** SOCKET **RESERVED**	**4** SOCKET **SIM109**
Main cable · 12 V power + 2 way.	5 way cable · 7 way in total.	Kept free for future expansion.	Hydra 500 / 700 cable · optional.

HYDRA 500

5 WAY HYDRAULIC CONTROL BOX



Controls the flow and pressure of hydraulic fluid from the sprayer to cylinders and motors – adjusting boom level, direction and angle.

GENERAL FEATURES

- **Hydraulic Boom Movements**
  Hydraulic valves in the system let you control every boom movement from the cab.
- **5 Way**
  Leveling, height, lock and 2 boom movements.

CORE ELEMENTS · 3



THYD500.01
5W Control Box



SIM024
2 m Power Cable



SIM027
6 m Valve Cable

OPTIONAL · 3



KYP029
Triple Suction Cup Mount · 6 cm short arm



KYP037
Screw Mount · 6 cm short arm



SIM002
11 m Valve Cable

REQUIRED PRODUCTS

SOLENOID DIRECTIONAL VALVES



TIMFAYP16
Solenoid 6-Spool Directional Valves

HYDRA 700

7 WAY HYDRAULIC CONTROL BOX



Controls the flow and pressure of hydraulic fluid from the sprayer to cylinders and motors – adjusting boom level, direction and angle.

GENERAL FEATURES

- **Hydraulic Boom Movements**
  Hydraulic valves in the system let you control every boom movement from the cab.
- **7 Way**
  Leveling, height, lock and 4 boom movements.

CORE ELEMENTS · 3



THYD700.01
7W Control Box



SIM024
2 m Power Cable



SIM027
6 m Valve Cable

OPTIONAL · 3



KYP029
Triple Suction Cup Mount · 6 cm short arm



KYP037
Screw Mount · 6 cm short arm



SIM013
11 m Valve Cable

REQUIRED PRODUCTS

SOLENOID DIRECTIONAL VALVES



TIMFAYP18
Solenoid 7-Spool Directional Valves

HYDRA 500 AIR

5 WAY HYDRAULIC CONTROL BOX · AIR ECU WIRELESS



The Hydra 500 hydraulic control box with the AIR ECU wireless valve interface — boom movements from the cab, solenoid valves connected on the sprayer, no valve cable through the cab.

GENERAL FEATURES

- **Hydraulic Boom Movements**
  Leveling, height, lock and 2 boom movements — every movement from the cab.
- **AIR ECU Wireless Link**
  The SIM109 valve cable plugs into ECU socket 4 on the sprayer; box and ECU communicate wirelessly.

CORE ELEMENTS · 4



THYD500.02
5W Control Box · AIR



SIM024
2 m Power Cable



KYP046
AIR ECU Box



SIM109
AIR ECU Hydra Cable

OPTIONAL · 2



KYP029
Triple Suction Cup Mount · 6 cm short arm



KYP037
Screw Mount · 6 cm short arm

REQUIRED PRODUCTS

SOLENOID DIRECTIONAL VALVES



TIMFAYP16
Solenoid 6-Spool Directional Valves

CONNECTION DIAGRAM ■ NEXT PAGE


How it connects

The Hydra 500 box stays in the cab; its SIM109 valve cable plugs into socket 4 of the AIR ECU on the sprayer — the link between box and ECU is wireless.

AIR ECU — WIRELESS VALVE INTERFACE



The AIR ECU is mounted on the sprayer, next to the valves. The valve harness plugs straight into its sealed, numbered sockets and the ECU talks to the Hydra 500 box in the cab wirelessly — no thick valve cable has to be pulled into the tractor cab. Power and wireless-link LEDs on the front plate show the status at a glance.

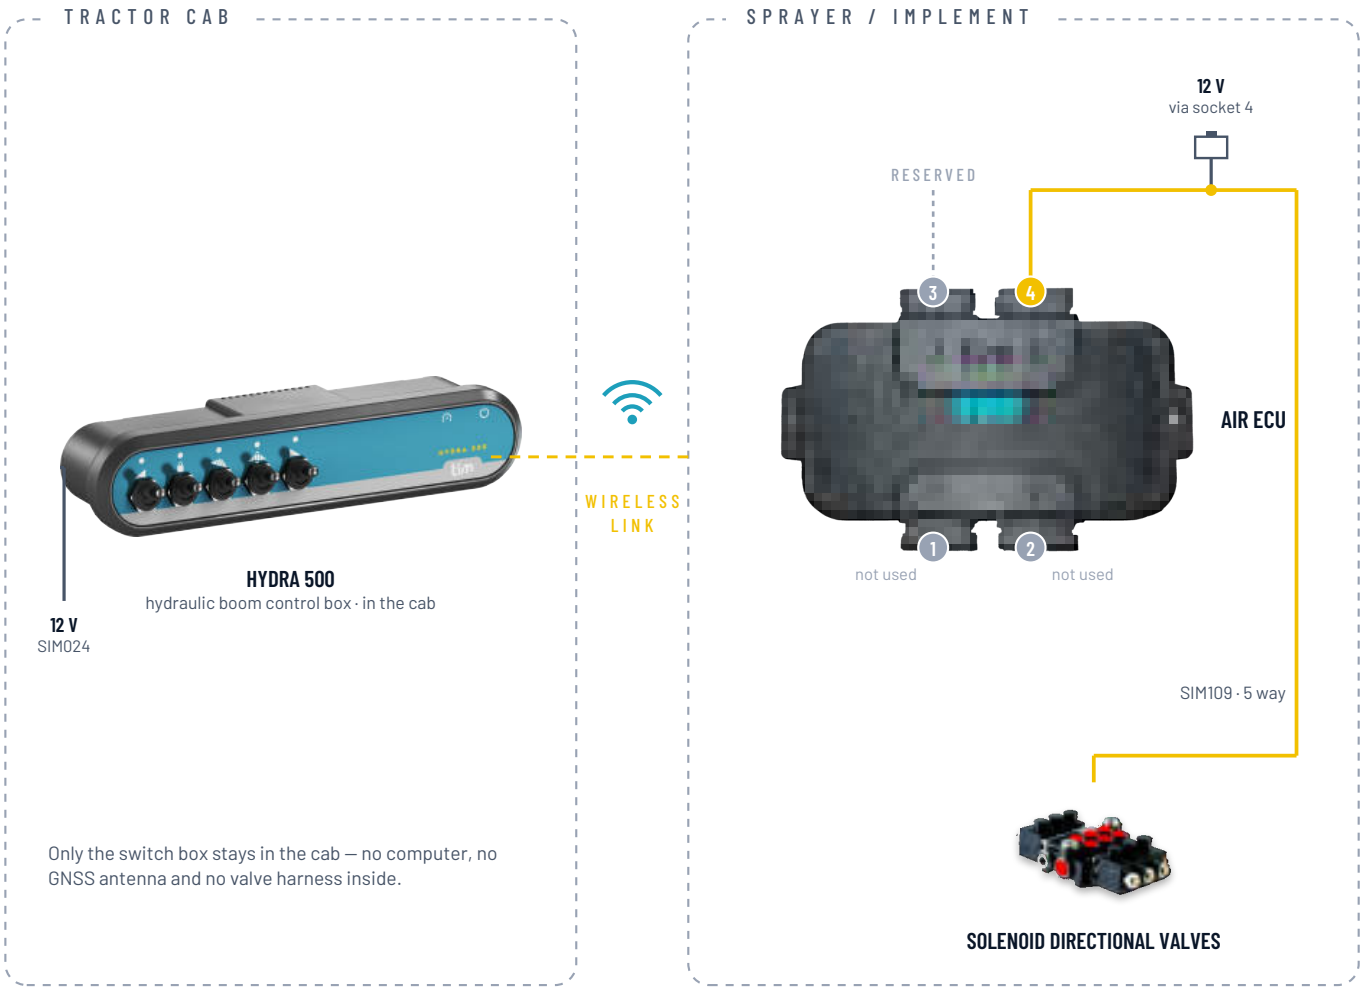

SOCKET MAP — HYDRA 500 AIR

1 SOCKET **NOT USED**	2 SOCKET **NOT USED**	3 SOCKET **RESERVED**	4 SOCKET **SIM109**
Free in the Hydra version.	Free in the Hydra version.	Kept free for future expansion.	Hydra cable · 5 way + 12 V power in.

HYDRA 700 AIR

7 WAY HYDRAULIC CONTROL BOX · AIR ECU WIRELESS



The Hydra 700 hydraulic control box with the AIR ECU wireless valve interface — boom movements from the cab, solenoid valves connected on the sprayer, no valve cable through the cab.

GENERAL FEATURES

- **Hydraulic Boom Movements**
  Leveling, height, lock and 4 boom movements — every movement from the cab.
- **AIR ECU Wireless Link**
  The SIM109 valve cable plugs into ECU socket 4 on the sprayer; box and ECU communicate wirelessly.

CORE ELEMENTS · 4



THYD700.02
7W Control Box · AIR



SIM024
2 m Power Cable



KYP046
AIR ECU Box



SIM109
AIR ECU Hydra Cable

OPTIONAL · 2



KYP029
Triple Suction Cup Mount · 6 cm short arm



KYP037
Screw Mount · 6 cm short arm

REQUIRED PRODUCTS

SOLENOID DIRECTIONAL VALVES



TIMFAYP18
Solenoid 7-Spool Directional Valves

CONNECTION DIAGRAM ■ NEXT PAGE


How it connects

The Hydra 700 box stays in the cab; its SIM109 valve cable plugs into socket 4 of the AIR ECU on the sprayer — the link between box and ECU is wireless.

AIR ECU — WIRELESS VALVE INTERFACE



The AIR ECU is mounted on the sprayer, next to the valves. The valve harness plugs straight into its sealed, numbered sockets and the ECU talks to the Hydra 700 box in the cab wirelessly — no thick valve cable has to be pulled into the tractor cab. Power and wireless-link LEDs on the front plate show the status at a glance.

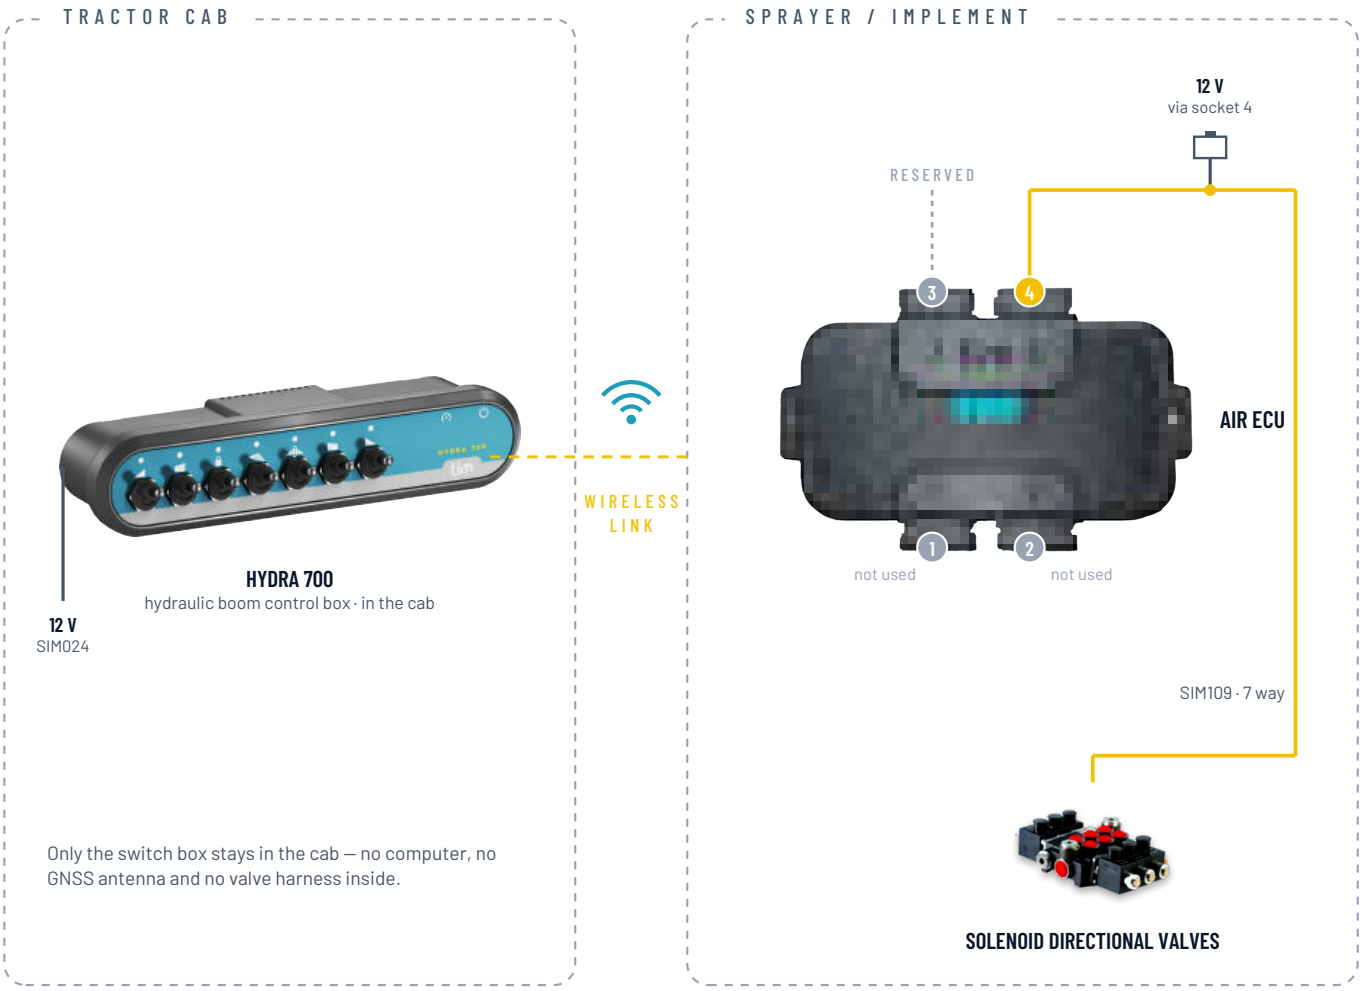

SOCKET MAP — HYDRA 700 AIR

1 SOCKET **NOT USED**	2 SOCKET **NOT USED**	3 SOCKET **RESERVED**	4 SOCKET **SIM109**
Free in the Hydra version.	Free in the Hydra version.	Kept free for future expansion.	Hydra cable · 7 way + 12 V power in.

CROSS 200

SUB-METER GNSS SMART ANTENNA



Sub-meter GNSS smart antenna for agricultural machinery — dual-band L1/L5 receiver with a built-in survey-grade antenna stays stable even between tree rows; one-cable connection to your existing machine.

GENERAL FEATURES

- **Sub-meter Accuracy**
  Sub-meter positioning with SBAS correction for agricultural guidance.
- **Dual Band L1 + L5**
  6 satellite systems — GPS, Galileo, BeiDou, GLONASS, QZSS, NavIC.
- **10 Updates per Second**
  10 Hz position stream for fast, smooth track following.
- **Operating LED for Status**
  Status LED shows power and satellite fix at a glance.

TECHNICAL SUMMARY

Product code	KYP036
3 m harness code	KYP054
GNSS receiver	Dual band L1 / L5
Update rate	10 Hz
Operating temperature	–35 °C … +80 °C
Dimensions	151.5 × 52.7 mm (octagonal housing)

CROSS 300

HIGH PRECISION GNSS RECEIVER



High precision GNSS receiver for agricultural machinery — dual-band receiver with a built-in motion sensor keeps working under the canopy; Wi-Fi and Bluetooth stream data instantly, single-connector installation.

GENERAL FEATURES


- **High Precision**
  Dual-band tracking of 4 satellite systems (GPS, GLONASS, Galileo, BeiDou).
- **Uninterrupted Position**
  Built-in IMU keeps producing position even during signal loss.
- **RTK Ready**
  Centimeter-level RTK with a cellular correction service or an RTK base station.
- **Easy Integration**
  Single connector, Wi-Fi + Bluetooth 5, NMEA 0183 output.

TECHNICAL SUMMARY

Product code	KYP067
3 m harness code	KYP054
GNSS receiver	Dual band, IMU fusion
Accuracy	RTK ready
Wireless	Wi-Fi 802.11 b/g/n · Bluetooth 5 LE
Interfaces	RS232 · NMEA 0183 output
Power	12 V DC (vehicle supply), protected input

TIM APP

FARM REPORTS & TRACKING

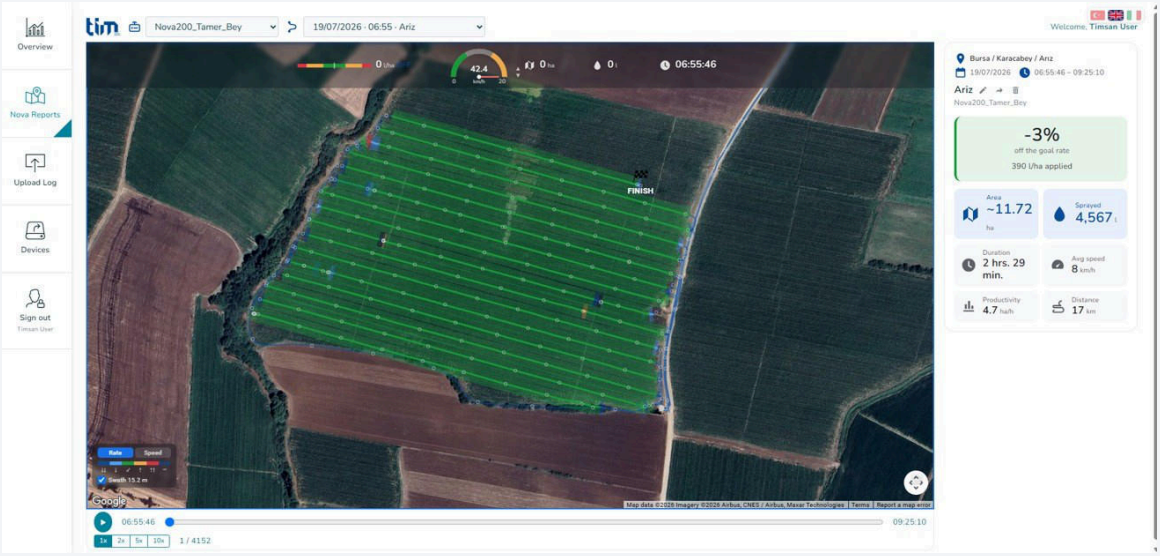


Monitor, manage and optimize field operations — connect your equipment and operators, bring traceability to every stage.

GENERAL FEATURES

- **Traceability**
  Every job carried out with a Nova computer is logged and can be replayed on the field map — route, working speed, applied rate versus target, covered area, sprayed volume, duration and distance. Reports are stored per device and per job, so office and field see the same data.

INSIDE THE APP

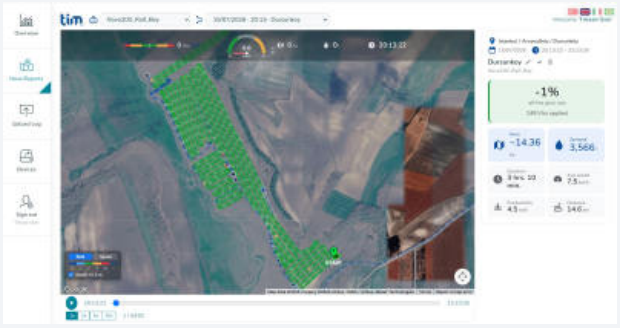

REPORTS — RATE
Applied rate versus target along the route — verify accuracy, optimize input usage.



REPORTS — SPEED
Real-time and average working speed per job, on the field map.

iOS · Android · Web — works with the Nova family computers.

Nova computers at a glance

Which Nova fits the job? Rate control, GNSS section control and navigation side by side — from the compact Nova 100 to the wireless Nova 2N sprayer kits.

	 NOVA 100 Rate controller	 NOVA 200 Auto section control	 NOVA 110 Orchard rate controller	 NOVA 210 Orchard navigation	 NOVA 130 Spreader rate controller	 NOVA 2N GNSS navigation	 NOVA 2N ORCHARD Orchard sprayer kit · 2 way	 NOVA 2N FIELD 500 Field sprayer kit · 5 way	 NOVA 2N FIELD 700 Field sprayer kit · 7 way
Automatic rate control	✓	✓	✓	✓	✓	–	✓	✓	✓
Automatic section control (GNSS)	–	✓	–	✓	–	–	✓	✓	✓
A–B guidance	–	✓	–	✓	–	✓	✓	✓	✓
Field boundary	–	✓	–	✓	–	✓	✓	✓	✓
Live coverage map	–	✓	–	✓	–	✓	✓	✓	✓
Wireless valve link (AIR ECU)	–	–	–	–	–	–	✓	✓	✓
Hydra boom control option	–	–	–	–	–	–	–	✓	✓
TIM APP reports	✓	✓	✓	✓	✓	✓	✓	✓	✓
Catalog page	3	5	8	10	12	14	15	18	21

Control boxes & GNSS at a glance

Aqua and Hydra control boxes, their AIR ECU wireless versions and Cross GNSS receivers — the building blocks that complete every Nova system.



	AQUA 200 2 way control box	AQUA 500 5 way control box	AQUA 700 7 way control box	AQUA 200 AIR 2 way · wireless	AQUA 500 AIR 5 way · wireless	AQUA 700 AIR 7 way · wireless	HYDRA 500 5 way hydraulic	HYDRA 700 7 way hydraulic	HYDRA 500 AIR 5 way · wireless	HYDRA 700 AIR 7 way · wireless	CROSS 200 GNSS smart	CROSS 300 High precision
Liquid section control	✓	✓	✓	✓	✓	✓	–	–	–	–	–	–
Hydraulic boom control	–	–	–	–	–	–	✓	✓	✓	✓	–	–
GNSS positioning	–	–	–	–	–	–	–	–	–	–	✓	✓
Main valve + pressure ±	✓	✓	✓	✓	✓	✓	–	–	–	–	–	–
Wireless valve link (AIR ECU)	–	–	–	✓	✓	✓	–	–	✓	✓	–	–
No valve cable into the cab	–	–	–	✓	✓	✓	–	–	✓	✓	–	–
Hydra option on the same ECU	–	–	–	–	✓	✓	–	–	–	–	–	–
Boom leveling · height · lock	–	–	–	–	–	–	✓	✓	✓	✓	–	–
Sub-meter GNSS	–	–	–	–	–	–	–	–	–	–	✓	–
RTK ready	–	–	–	–	–	–	–	–	–	–	–	✓
Built-in IMU	–	–	–	–	–	–	–	–	–	–	–	✓
Wi-Fi + Bluetooth	–	–	–	–	–	–	–	–	–	–	–	✓
Catalog page	24	25	26	27	29	31	33	34	35	37	39	40



Let's digitize your equipment.

One ecosystem. Every operation.

Tim Dijital Teknolojiler A.Ş.

OFFICE Esenşehir Mah. Haseki Sok. No: 20/2, Ümraniye · İstanbul · Türkiye

E-MAIL info@timdigitize.com

WEB timdigitize.com

Tim is a registered trademark of Tim Dijital Teknolojiler A.Ş.