Preface

Thank you for choosing ATOTO

With over a decade of expertise in automotive electronics, ATOTO remains committed to its core philosophy: **“Different, Better, Trusted.”**

- **Different –** We deliver products that stand apart through thoughtful design, innovation, and user oriented features.
- **Better –** We integrate professional audio visual technology with intuitive interaction to elevate every journey with superior experiences at an accessible price.
- **Trusted –** Endorsed by millions of users worldwide, ATOTO has earned a reputation for reliable products and responsive service you can count on.

This philosophy guides everything we do—from long term R&D investment, to continuous product improvement, to prompt customer support. With ATOTO, you can always expect **something different, something better, and above all, something trusted.**

Copyright Notice

All copyrights and related intellectual property rights of ATOTO Android head unit manuals (both electronic and printed) are the exclusive property of ATOTO. No part of this manual may be reproduced, distributed, adapted, translated, mirrored, or reposted for commercial use, or shared with third parties, without prior written permission from ATOTO.

FCC Compliance

ATOTO declares that this product complies with the radio frequency and electromagnetic compatibility (EMC) requirements of the U.S. Federal Communications Commission (FCC).

Specifically:

This device fully complies with Part 15 of the FCC Rules and must operate under the following conditions:

1. It may not cause harmful interference;

2. It must accept any interference received, including interference that may cause undesired operation.

Customer Support


If you experience any issues during installation or use, our support team is here to help.

Contact us via email: **support@atotoglobal.com**

Important Information

About this Manual

This installation manual is intended to guide you through the basic installation process of your ATOTO product. If you would like to explore more detailed feature operations and settings, please refer to the **"Features"** section, as shown in the image below.

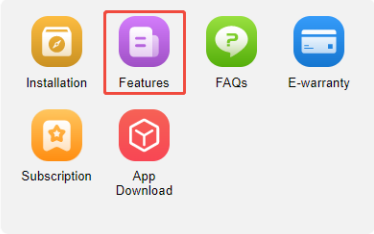

In addition to installation guides and feature tutorials, we also provide access to FAQs, Extended Warranty, Subscription Services, Firmware Upgrades, and App Downloads — all designed to enhance your overall product experience. Below is a quick overview of each section's functionality:

FAQs

Find answers to commonly asked questions about your ATOTO product. From installation tips to troubleshooting steps, this section helps you resolve issues quickly and get the most out of your device.

Extended Warranty

Register here to extend your product warranty beyond the standard coverage. Enjoy added peace of mind and continued protection for your ATOTO products.

Subscription

Subscribed to new feature updates? This section displays the latest feature releases and enhancements available for your device. Stay informed and unlock new capabilities as they become available.

App Download

Can't find certain apps on Google Play? Use this section to download our exclusive FindApps installer. It provides access to a selection of curated apps compatible with your ATOTO Android head unit or portable Android product, especially for users who experience Play Store limitations. Please note that the availability of specific apps may vary depending on your product model and system version—actual results may differ.

Firmware Upgrade

Keep your device up to date with the latest improvements. In this section, you can check for available firmware updates and download upgrade packages tailored to your specific model.

Regular updates may include new features, system optimizations, and important bug fixes to ensure optimal performance and user experience.

Chapter 1 Installation Warnings

Certified Professional Installation

Installation or service performed by individuals without proper training or experience in consumer electronics and automotive accessories may pose serious risks, including electric shock, injury, or other hazards. If you are unfamiliar with car electronics or lack installation experience, we strongly recommend seeking professional assistance to avoid potential injury or damage during installation.

Please note that installation procedures may vary depending on the make and model of your vehicle. Adjustments should be made based on your specific vehicle structure and dashboard configuration.

Disconnect the Battery Befoer Installation

To prevent electrical shorts, always disconnect the vehicle's Negative (-) battery terminal before beginning installation. Failure to do so may lead to electric shock, fire, or damage to the product and surrounding property.

Do Not Disassemble or Modify the Product

Attempting to disassemble or alter the product may cause fire, electric shock, or result in an accident.

Use Only Fuses with the Specified Rating


Replacing fuses with incorrect ratings may cause fire or result in serious property damage.


Parking Brake Wiring Must Be Installed Correctly


Improper installation may allow video playback while the vehicle is in motion, potentially distracting the driver and increasing the risk of a serious accident. This can lead to severe injury to the driver and passengers.

Chapter 2 Front Panel Appearance & Buttons, Ports and Slots

2.1 Front Panel Appearance

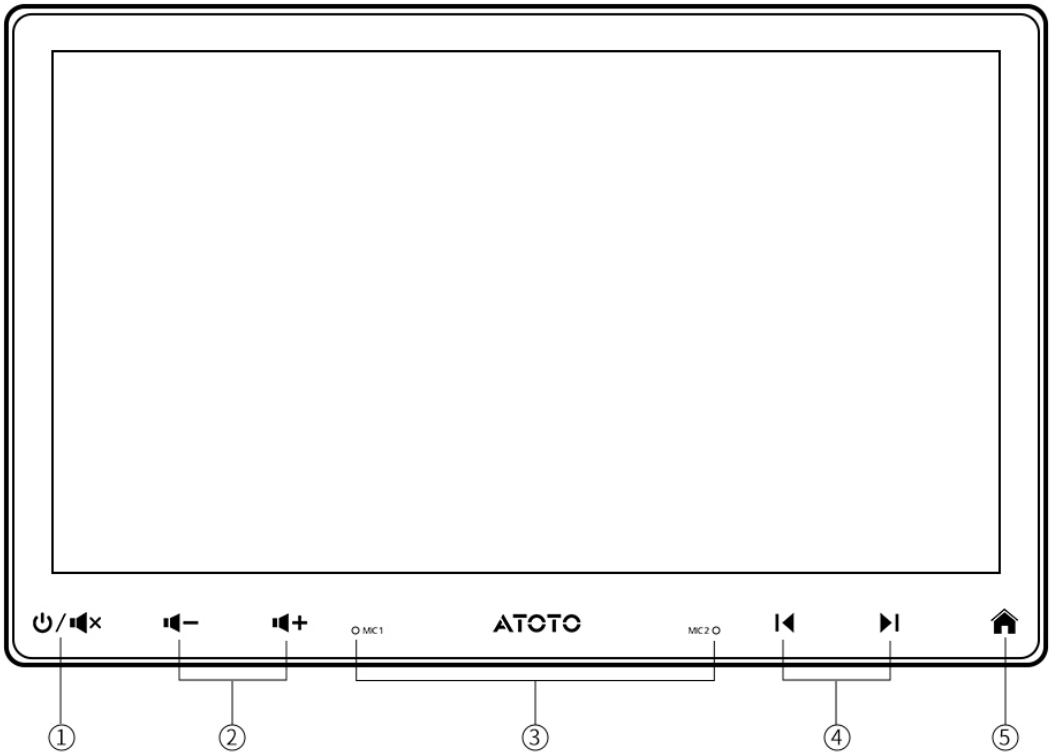

MIC 1
ATOTO
MIC 2
①
②
③
④
⑤

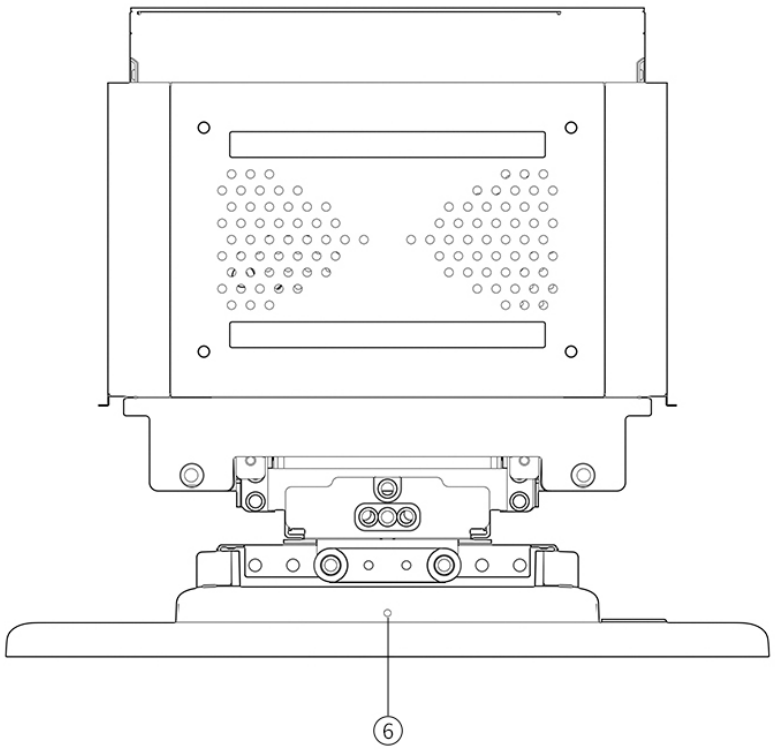

⑥

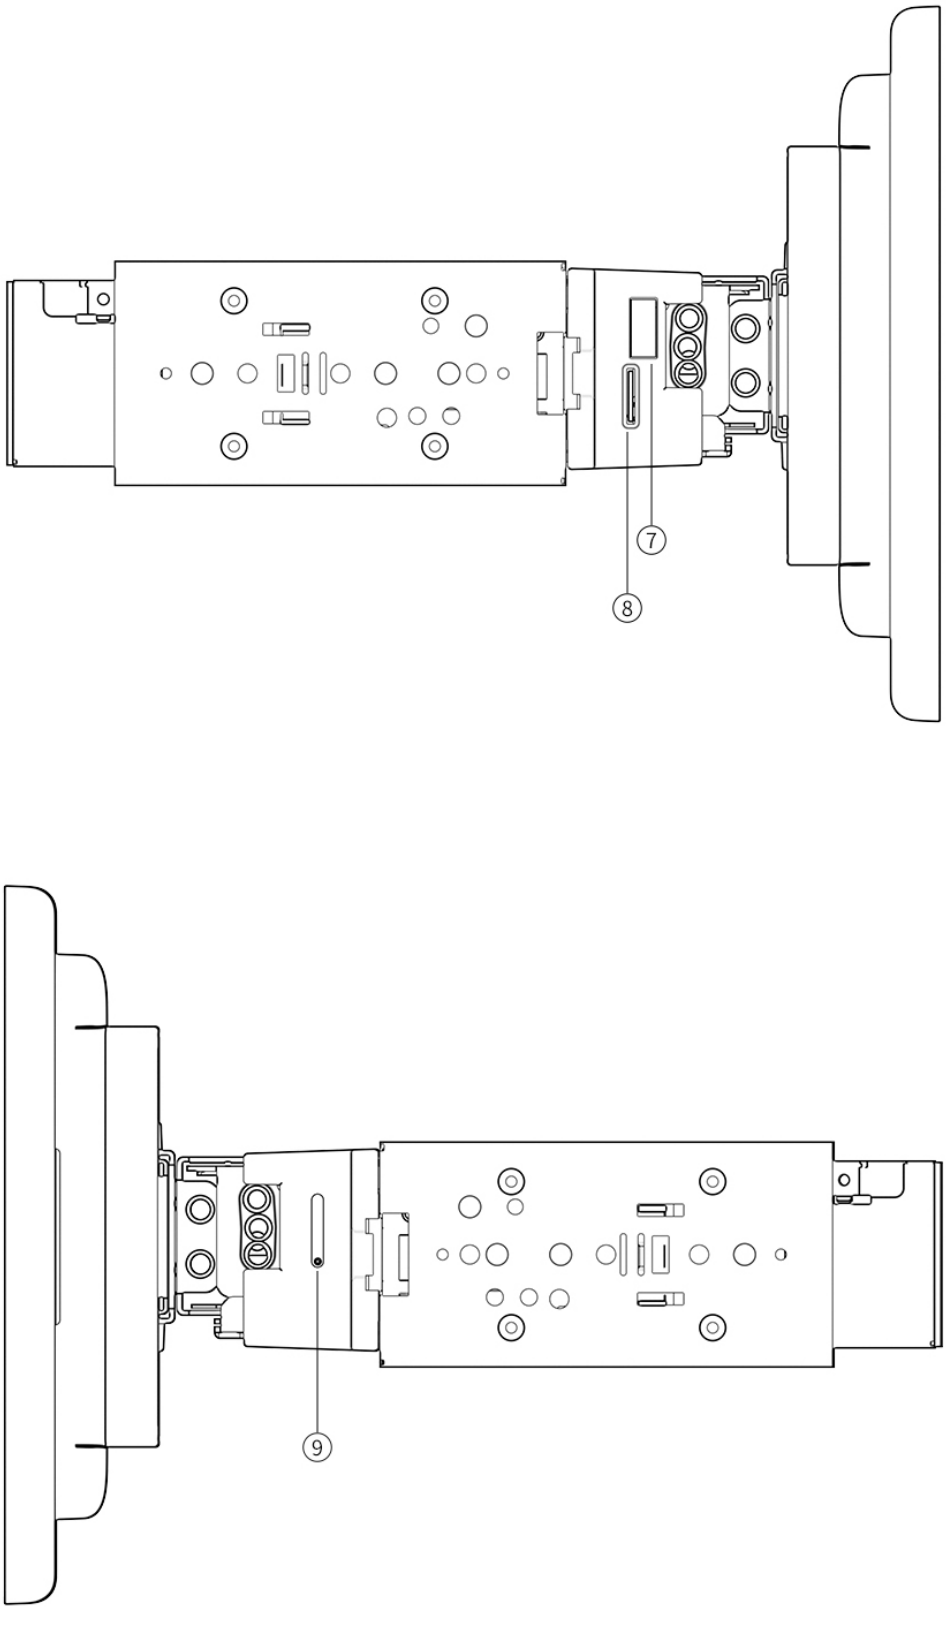



Installation Style: FlexView Pro SAH10DT1 — 10.1″ Floating, Soft-Touch Back-Lit Keys

(e.g., S8G1104MS, S8G1109UN)

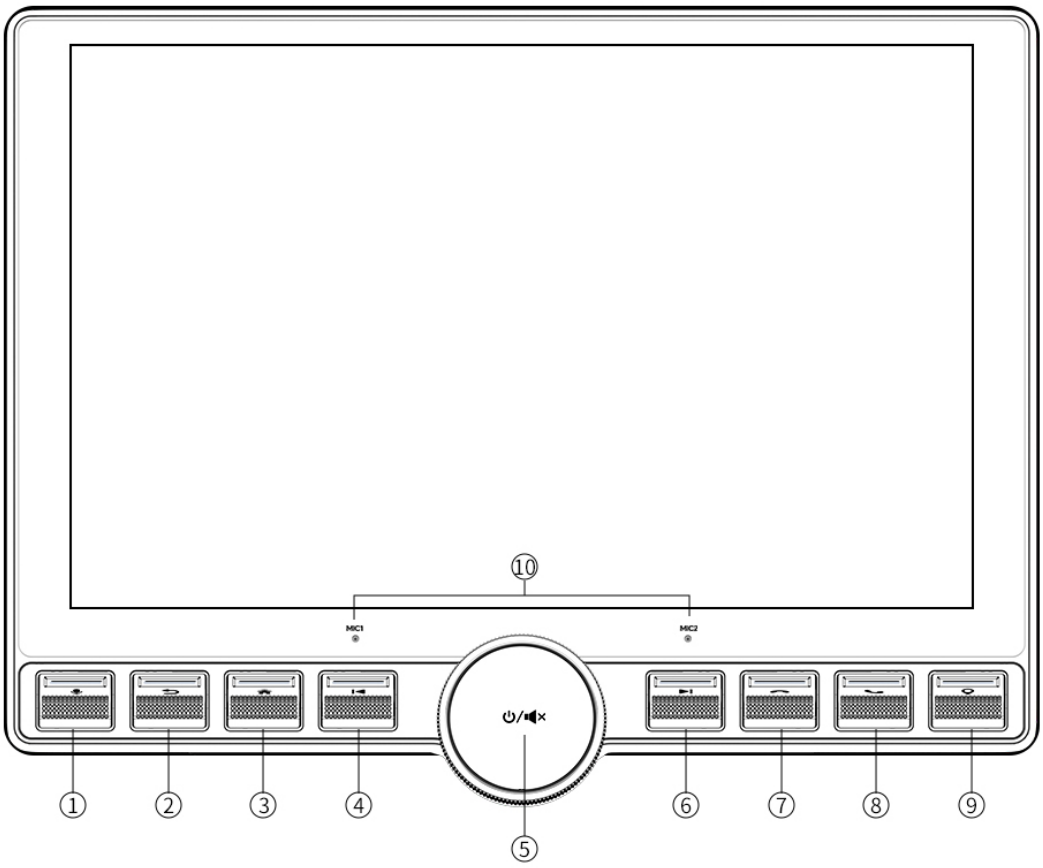
⑩
MIC1
MIC2
①
②
③
④
⑤
⑥
⑦
⑧
⑨

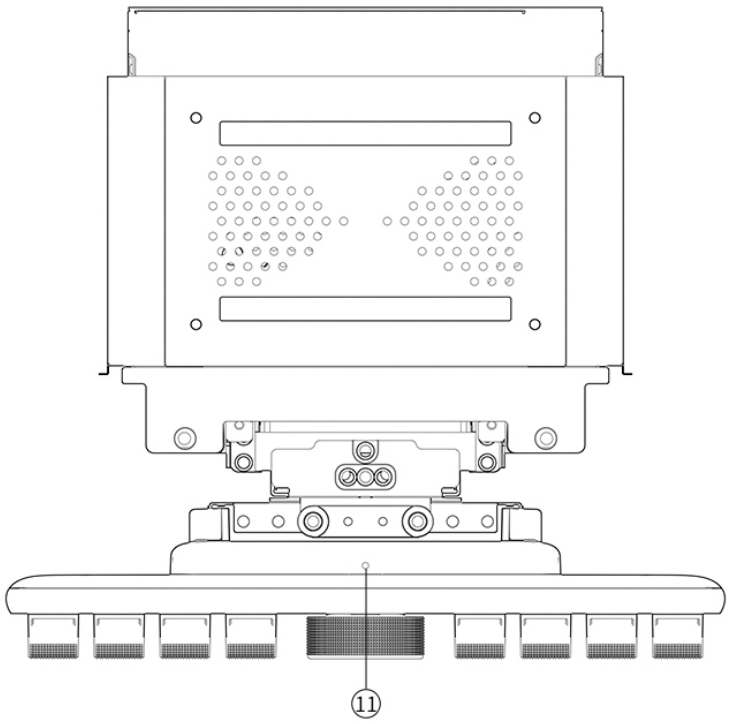
⑪

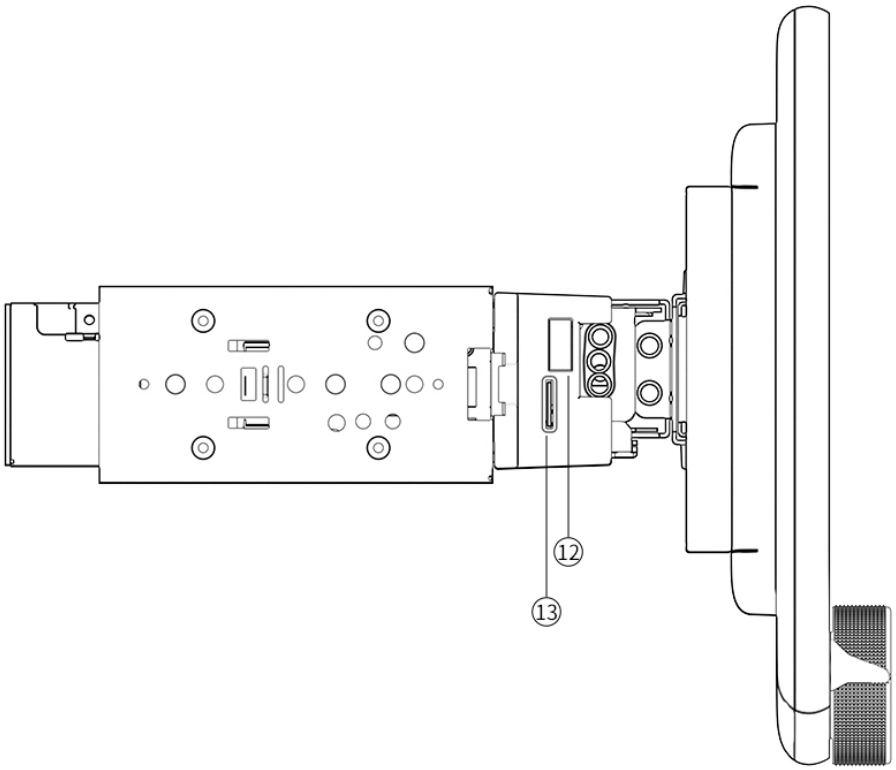


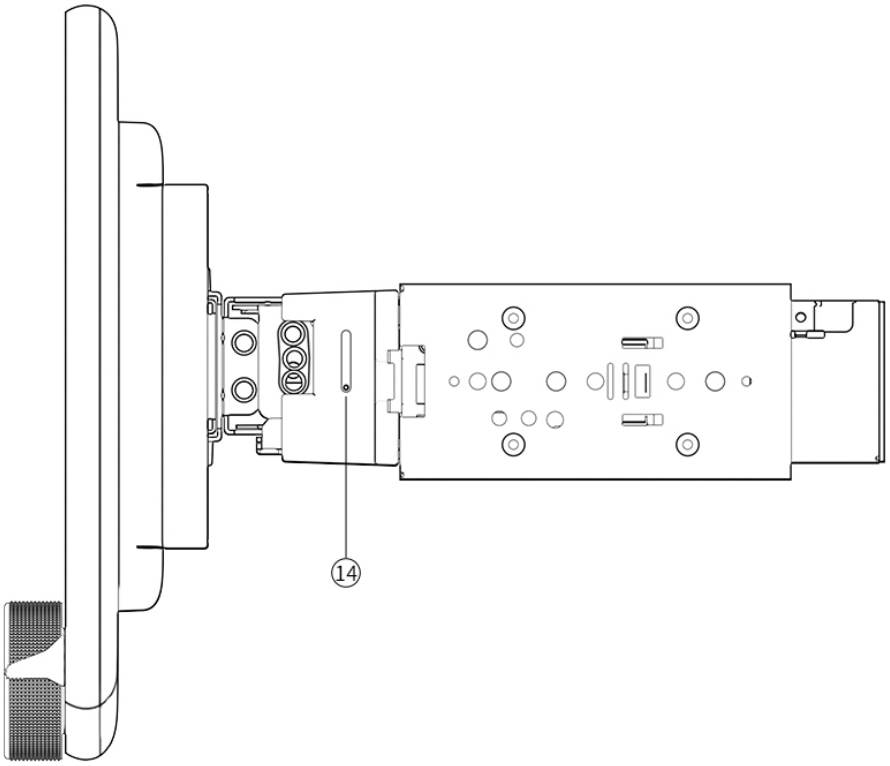



Installation Style: FlexView Pro SAH10DP2 — 10.1″ Floating, Physical Buttons + Volume Knob


(e.g., S8G1104PMS, S8G1109PUN)

2.2 Buttons, Ports & Slots

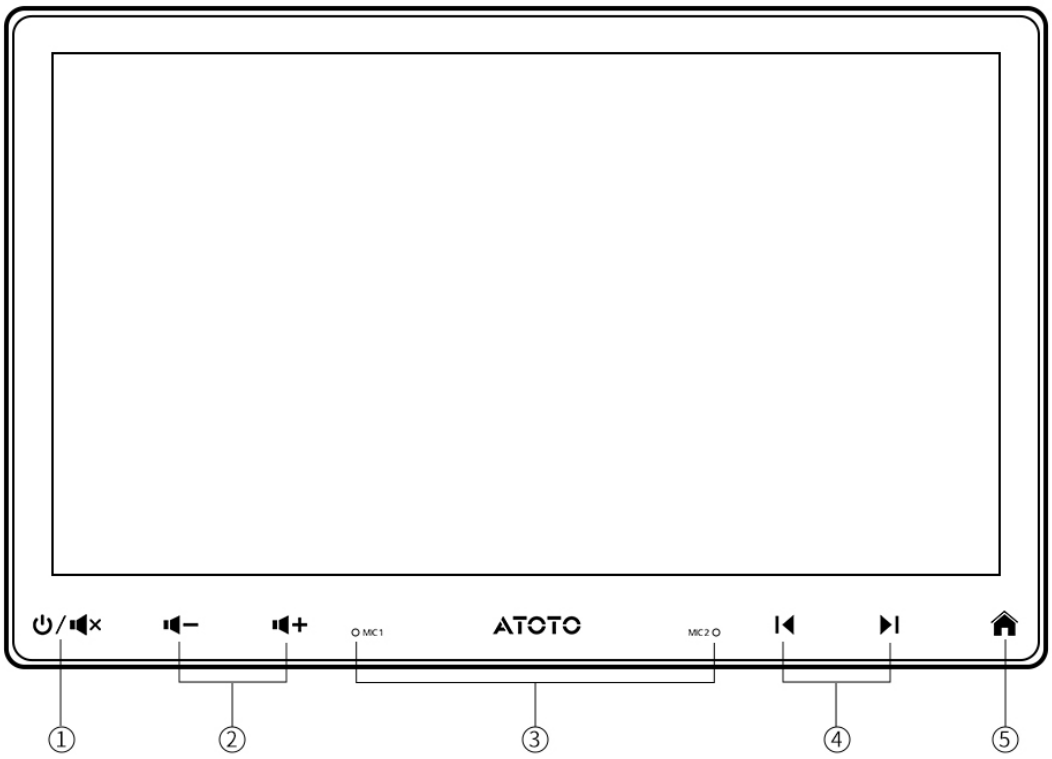

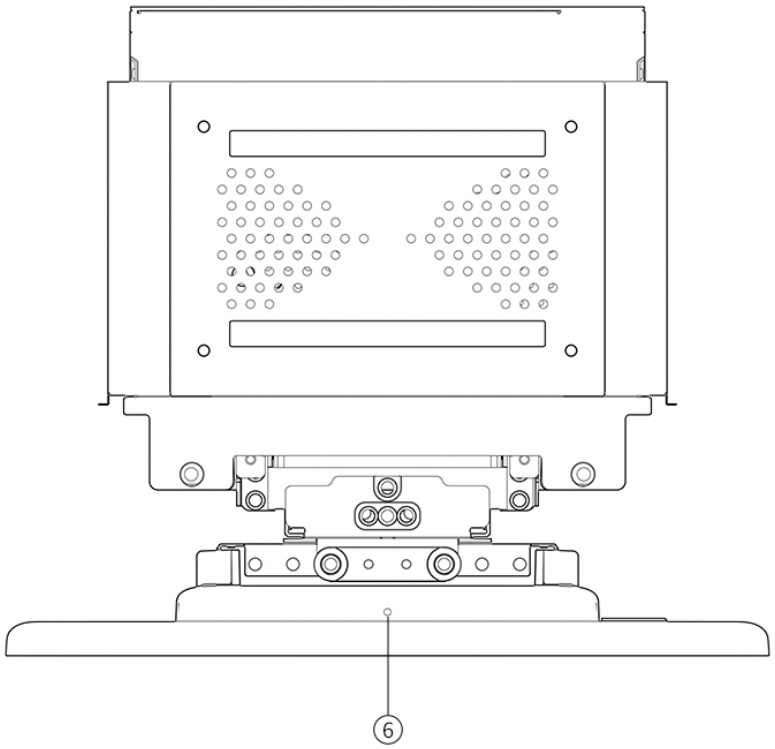

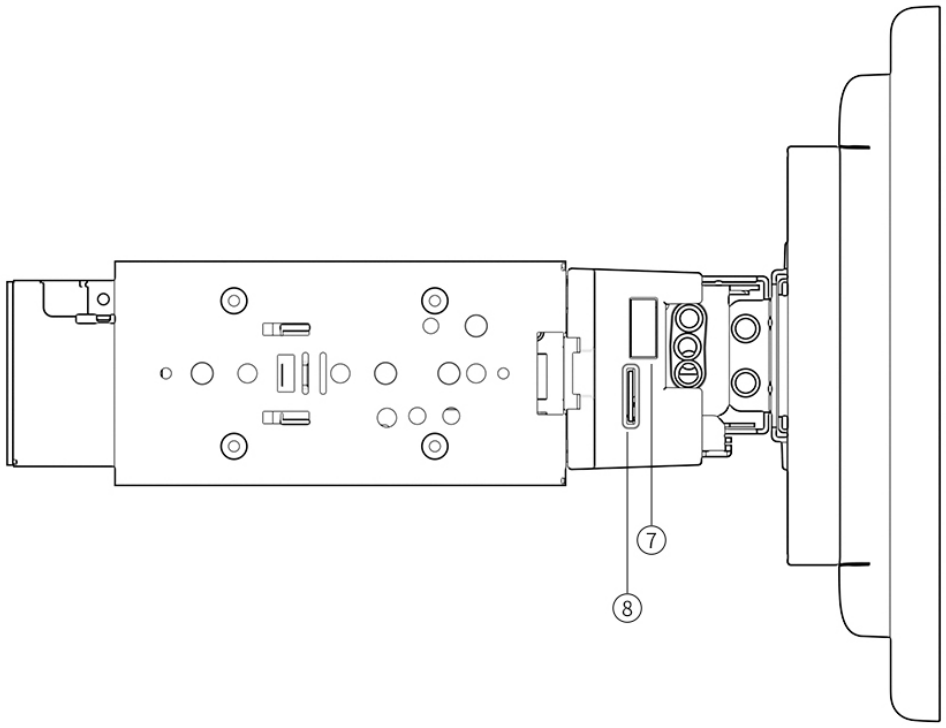

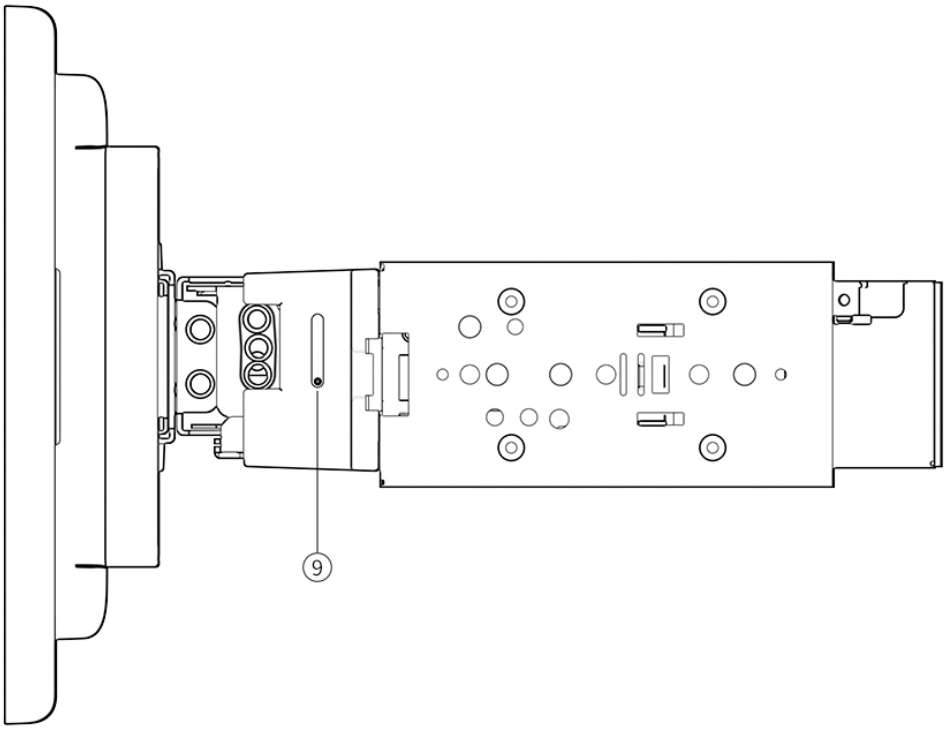

S8G1104MS, S8G1109UN

1. 2-in-1 Composite Button

Press to mute, press and hold to turn off S8 screen.

2. Volume Control Button

Press to increase or decrease volume.

3. Built-In Mics

Work with the included external mic to reduce background noise. Only one mic is functional and the other one is reserved for future use.

4. Playback Control Button

Press to switch to previous or next track, radio station, or video.

5. Home Buttom

Press to return to Home Screen.

6. Reset Button

If the unit isn’t responding, press with a pin to reset the system circuit.


7. USB Port


Audio, video or picture input from a USB flash drive.


8. Micro SD Card Slot


Audio, video or picture input from a micro SD card.

9. 4G Nano SIM Card Slot (with a card holder)

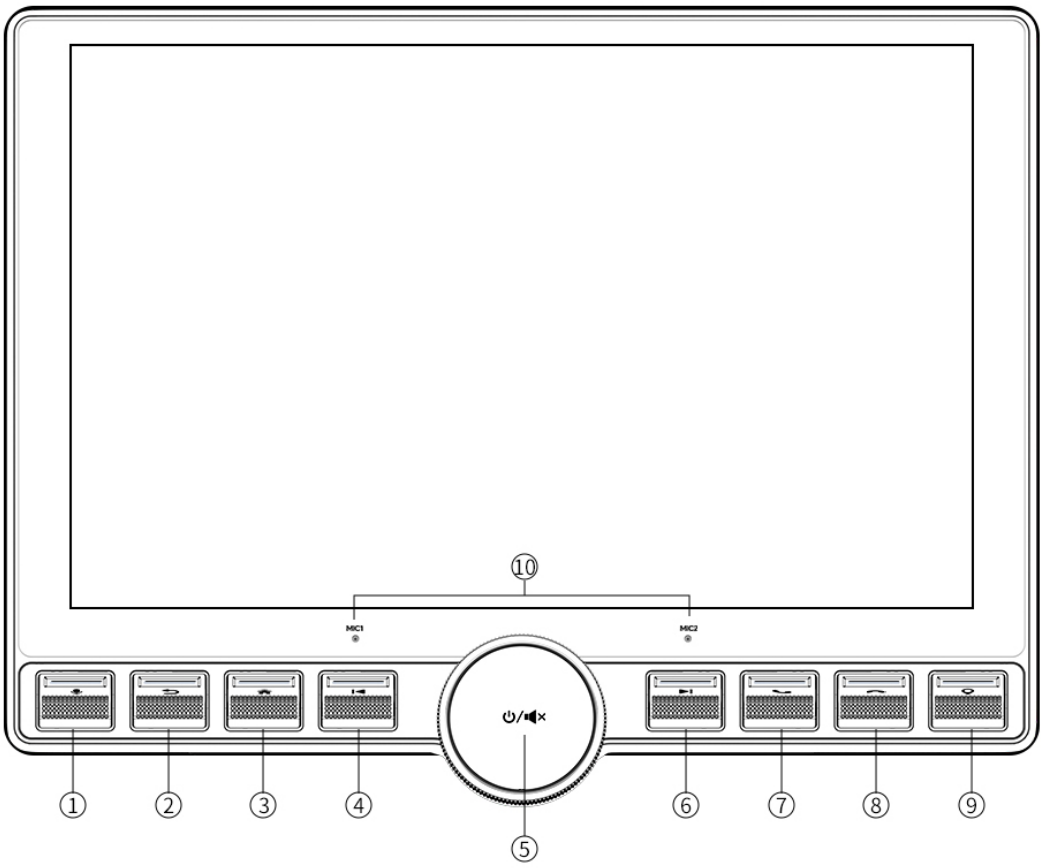
⑩
MIC1
MIC2
①
②
③
④
⑤
⑥
⑦
⑧
⑨

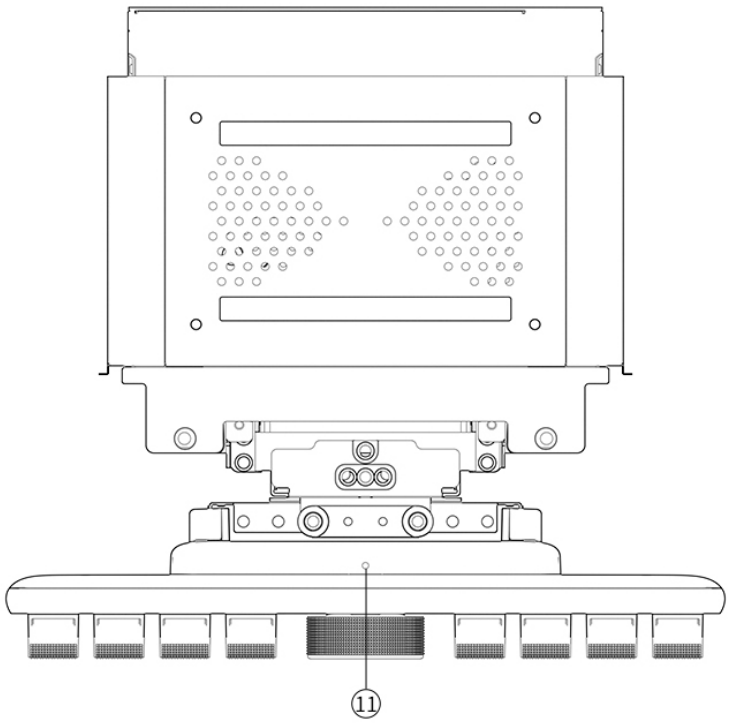
⑪

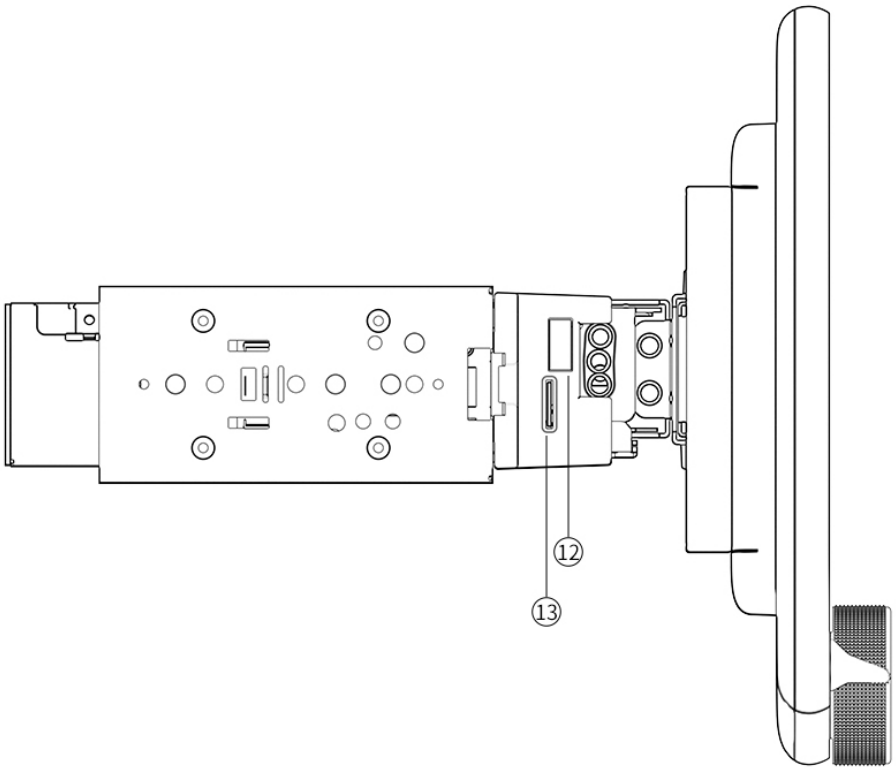

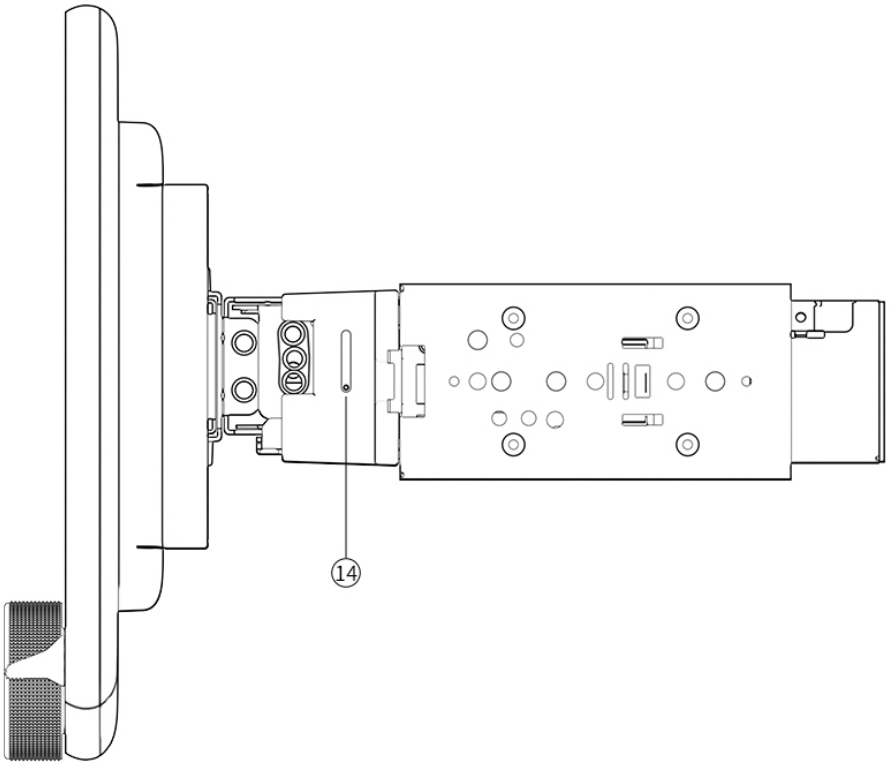

S8G1104PMS, S8G1109PUN, S8G1299PUN

1. Voice Assistant Button

Press to activate voice assistant. Enable Apple CarPlay, Android Auto, or Bluetooth connection to use voice assistant.

2. Back Button

Press to return to previous menu.

3. Home Button

Press to return to home page.

4 & 6. Playback Control Button

Press to skip to previous or next track, radio station, or video.

5. 3-in-1 Composite Button

Press to mute; Press and hold to turn off S8 screen; Rotate clockwise to increase volume, rotate counterclockwise to decrease volume.

6. Playback Control Button

Press to skip to the next track, radio station, or video.

7 & 8. Call Control Button

Press to answer or reject a Bluetooth call.

9. Navigation Shortcut Button

Press for quick access to your navigation app.

10. Built-In Mics

Work with the included external mic to reduce background noise. Only one mic is functional and the other oneis reserved for future use. Select S8 models come with a single built-in mic.

11. Reset Button

If the unit isn’t responding, press with a pin to reset the system circuit.

12. USB Port

Audio, video or picture input from a USB flash drive.

13. Micro SD Card Slot

Audio, video or picture input from a micro SD card.

14. 4G Nano SIM Card Slot (with a card holder)

Chapter 3 Installation Styles

ATOTO S8 Android head units with FlexView Pro display are available in 3 different installation styles. Each style has unique features, allowing you to choose the one that best suits your vehicle's dashboard layout, look, and usability.

Available Installation Styles:

1. FlexView Pro SAH10DT1 — 10.1″ Floating, Soft-Touch Back-Lit Keys

- 9-way adjustment (deptH, height, lateral, swivel ±30° , tilt ±10°) to clear vents/hazard/shifters; lock after install
- UN variants add HDMI-in
- Examples: S8G1104MS (MS, no HDMI-in), S8G1109UN (UN, HDMI-in)

2. FlexView Pro SAH10DP2 — 10.1″ Floating, Physical Buttons + Volume Knob

- Same 9-way adjustability; tactile controls for bumpy roads or gloves
- UN variants add HDMI-in
- Examples: S8G1104PMS (MS, no HDMI-in), S8G1109PUN (UN, HDMI-in)

3. FlexView Pro SAH29DP — 12.95″ Floating, Physical Buttons + Volume Knob

- Cinematic width with the same 9-way adjustment; confirm dash clearance
- UN adds HDMI-in
- Example: S8G1299PUN (UN, HDMI-in)

Chapter 4 Package Contents

4.1 Accessory & Image

Applicable Installation Styles

1. FlexView Pro SAH10DT1 — 10.1″ floating, soft-touch back-lit keys

- 9-way adjustment (depth, height, lateral, swivel ±30° , tilt ±10°) to clear vents/hazard/shifters; lock after install.
- UN variants add HDMI-in.
- Examples: S8G1104MS (MS, no HDMI-in), S8G1109UN (UN, HDMI-in).


2. FlexView Pro SAH10DP2 — 10.1″ floating, physical buttons + volume knob

- Same 9-way adjustability; tactile controls for bumpy roads or gloves.
- UN variants add HDMI-in.


- Examples: S8G1104PMS (MS, no HDMI-in), S8G1109PUN (UN, HDMI-in).

3. FlexView Pro SAH29DP — 12.95″ floating, physical buttons + volume knob

- Cinematic width with the same 9-way adjustment; confirm dash clearance.
- UN adds HDMI-in.
- Example: S8G1299PUN (UN, HDMI-in).

Name of Accessory	Image
Wire Harness for North America, Europe, and UK	
Wire Harness for Japan only	
ISO Connector (A / B) for Europe only	
RCA Connector	

2-in-1 USB Cable (External Storage & Phone Link)	
4-in-1 Antenna (WiFi / GPS / 4G)	
External Microphone	
DIN Sleeve 1	
DIN Sleeve 2	

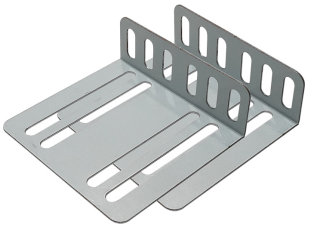DIN Pocket	
Mounting Brackets	
Mounting Screws & Removal Keys	

4.2 Important Notes

Some S8 models have been updated and the package contents may be different from what provided here. Please refer to the actual items you received. If you encountered any issues, please kindly contact ATOTO Customer Support Team at **support@atotoglobal.com**.

Chapter 5 Head Unit Installation

The S8 Android head units with FlexView Pro display support 3 different installation styles, each with its own characteristics as outlined in **Chapter 3**. This chapter provides **detailed step-by-step instructions** for each installation style to guide you through the process.

5.1 Before Installation

5.1.1 Precatious

1. Do not install this unit in vehicles without an ACC (accessory) position:

Without an ACC circuit, the display may remain powered even after the ignition is turned off, which can drain the vehicle battery.

2. Ensure all ground wires are connected to a common grounding point:

Proper grounding is essential for system stability and safety.

3. Avoid trapping wires under screws or moving parts:

Secure all cables carefully to prevent pinching or damage—especially near seat rails or adjustable components.

4. Always switch off the ignition before making any wiring connections:

This prevents potential short circuits or damage to the electrical system.

5. Connect the yellow (constant power) and red (ACC power) wires only after all other connections are completed:

This reduces the risk of accidental power surge or misconnection.

6. Insulate all unused or exposed wire ends with electrical tape:

Leaving wires uninsulated may cause short circuits or safety hazards.

7. Power lead (yellow wire) warning:

If connecting this unit alongside other stereo components, ensure the car's circuit amperage rating exceeds the total amperage required by all connected devices. Failure to do so may overload the circuit.

5.1.2 Extra Accessories for A Universal Fit Headunit Installation

1. If the vehicle you are going to install a head unit on already has an aftermarket universal fit head unit, the installation will be very straightforward, just remove the previous power cable of a head unit and replace it with a new one.

2. If this is the first time to install an head unit for your current vehicle, additional third-party accessories are often required to ensure proper integration with your vehicle. Below are the most commonly needed components:

- Mounting Dash Kit / Fascia Fitting Adapter

Fills the gap between the new head unit and the vehicle's dashboard. Required to achieve a clean and secure fit. Dash kit models vary by vehicle make and model.

- Wiring Harness / Stalk Connector

Acts as a bridge between your vehicle's factory wiring plug and the aftermarket head unit. It simplifies connection without cutting the original wires.

- Antenna Adapter

Some vehicles use different antenna connectors compared to the standard aftermarket type. An adapter may be needed to connect the factory antenna to the new unit.

- Data Interface / CAN Bus Decoder

For vehicles (typically 2005 and newer) that might use digital networks to manage electrical systems. This interface enables functions such as head unit power control, steering wheel audio button retention, accessory (ACC) power, and more.

- Amplifier Interface Harness / Amp Adapter

If your vehicle is equipped with a factory amplifier, a specific amplifier adapter may be required.

- Backup Camera Adapter

Required if you wish to retain your factory reverse camera and connect it to the new head unit.

- USB Adapter Harness

Used to retain and connect the vehicle's original USB port(s) to the aftermarket head unit.

Notice: *Please note that not all of these accessories are required for every vehicle. The exact parts needed will depend on your vehicle's make, model, and installation setup.*

If you're unsure about selecting or purchasing the appropriate wiring harness or dash kits, our support team is here to help. Feel free to reach out to us at: **support@atotoglobal.com**.

5.2 Step-by-Step Guide


Part 1: Applicable Installation Styles

- FlexView Pro SAH10DT1
- FlexView Pro SAH10DP2
- FlexView Pro SAH29DP

Part 2: Optional Accessories



DIN Pocket

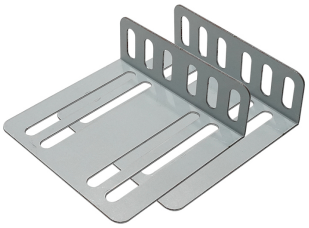

Movable Mounting Brackets



DIN Sleeve 1



DIN Sleeve 2



Mounting Screws 1



Mounting Screws 2



Mounting screws 3



Mounting Screws 4



Removal Keys

Part 3: Important Notes Before Installation


1. Check for Potential Obstruction

To avoid blocking important areas of your vehicle’s original dashboard (e.g., buttons, vents), we recommend measuring and verifying the screen’s physical dimensions before installation.

2. Before installation, please ensure that Sleeve 1, Sleeve 2 and the main unit are in a

separated state.

If either sleeve has been accidentally pushed in and stuck on the main unit, please use the removal keys to take it out. For detailed instructions, please refer to the installation guide or video on our Eproductcare website, or contact our support team for assistance.

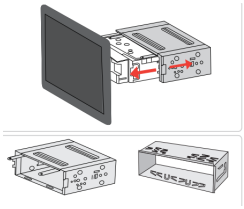


3. Vehicle Compatibility Notice

This installation guide is intended as a general reference for vehicles compatible with universal aftermarket head units. Due to variations in vehicle dashboards, wiring layouts, and structural designs, the actual installation process may differ depending on your specific car model. Please adapt accordingly or consult a professional installer if needed.


Part 4: Single-DIN Opening Installation

This part explains the installation for vehicles with a single-DIN opening (2" x 7", 50 x 178mm).


1. Remove the trim plate from the front panel. Use a screwdriver to pry open the trim plate.

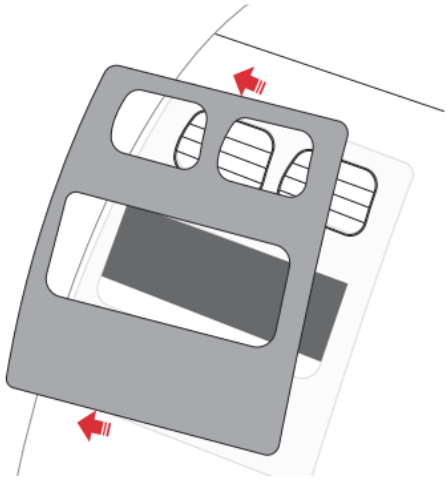


2. Secure the DIN Sleeve 2 into the dashboard opening. Bend the tabs on the sleeve to lock it into place.

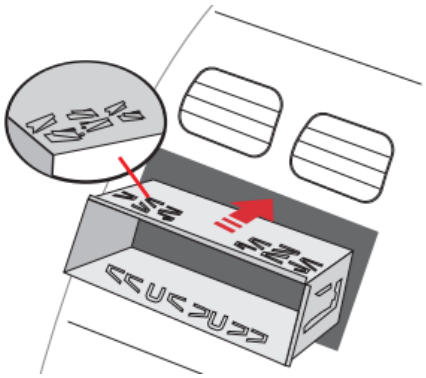


3. Pre-arrange components that require designated placement inside the vehicle in advance to avoid insufficient length or signal interference (including but not limited to the Wi-Fi antenna and the rear camera cable).

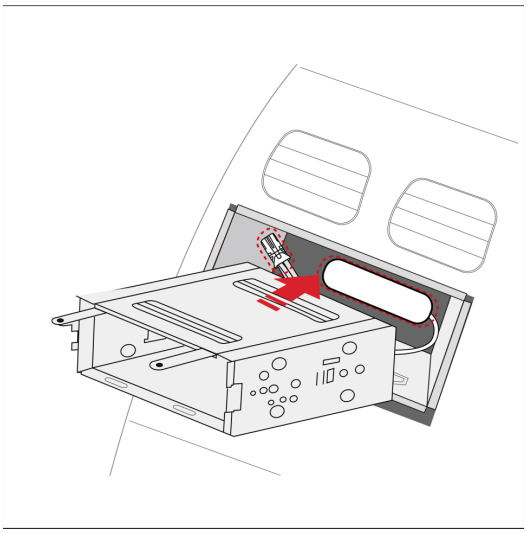

4. Insert DIN Sleeve 1 fully into DIN Sleeve 2 until it locks in place.

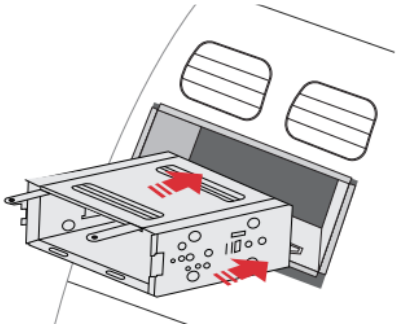


5. Replace or reinstall the trim frame of the vehicle dashboard.

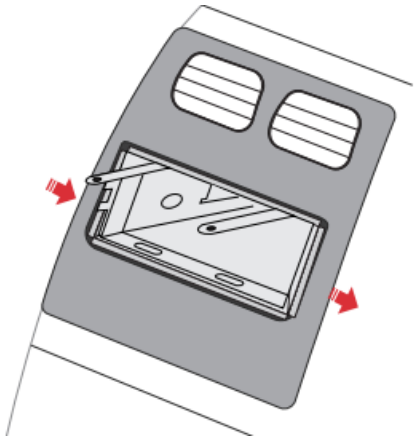


6. Complete all necessary wiring connections, including but not limited to power, speaker, and steering wheel control wiring.


*(For detailed wiring instructions, please check the **Wiring Connection** section under **Head unit Installation** for your specific product model.)*

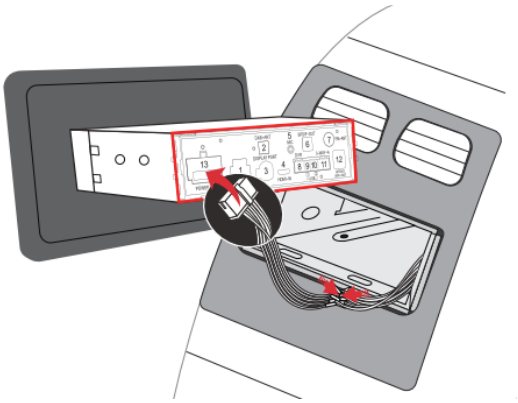


7. Insert the SIM card, SD card, or other required modules into the head unit before installation if needed, as the ports of these components may become inaccessible afterward.

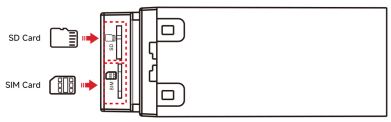


8. Insert the wired head unit into the dashboard opening.

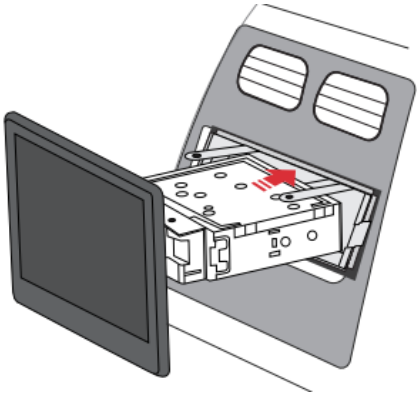

9. Secure the floating display with the screws.

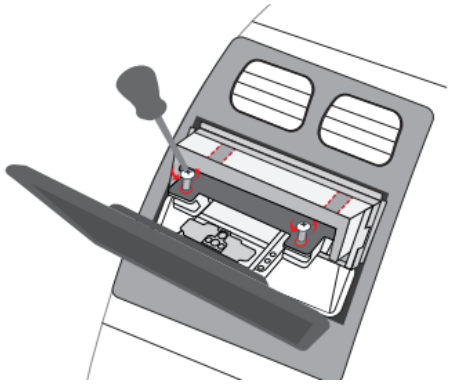


10. Installation Complete.

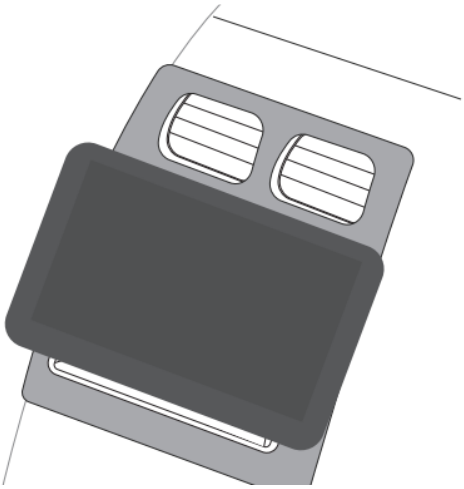

Part 5: Double-DIN Opening Installation


This part explains the installation for vehicles with a double-DIN opening (4" x 7", 100 x 178mm).

1. Remove the trim plate from the front panel. Use a screwdriver to pry open the trim plate.

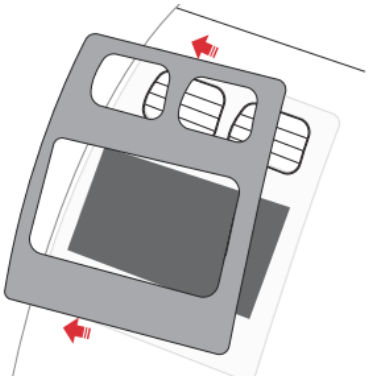


2. Fix DIN Sleeve 1 and the DIN Pocket with Mounting Brackets and screws.


(You may adjust the angle or position of the mounting brackets based on your dashboard space and preferred screen distance.)

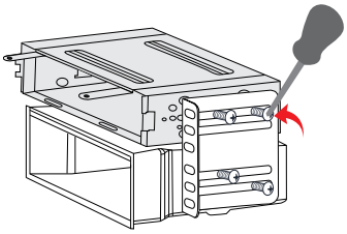

Note: The mounting brackets are designed to support flexible installation angles to accommodate different vehicle layouts and viewing preferences. In some vehicle installations, they may not even be necessary.

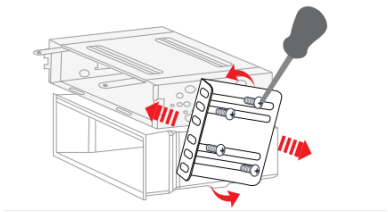


3. Pre-arrange components that require designated placement inside the vehicle in advance to avoid insufficient length or signal interference (including but not limited to the Wi-Fi antenna and the rear camera cable).

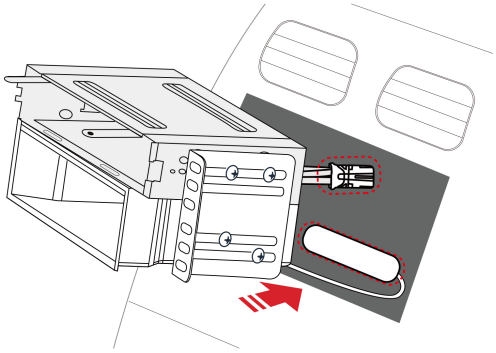


4. Install the DIN Sleeve 1 + DIN Pocket + Mounting Brackets assembly from step 2 into the dashboard opening.

Note: The position of the mounting brackets can be adjusted to better fit your specific vehicle.

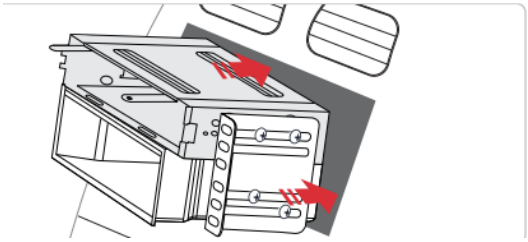


5. Complete all necessary wiring connections, including but not limited to power, speaker, and steering wheel control wiring.


(For detailed wiring instructions, please scan the QR code in the Online Manual Quick Guide and go to the ***Wiring Connection*** *section under* ***Installation*** *for your specific product model.)*

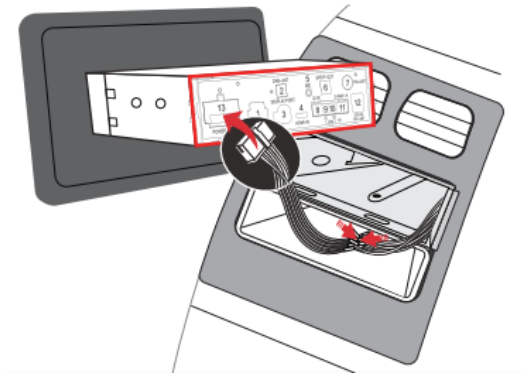


6. Insert the SIM card, SD card, or other required modules into the head unit before installation if needed, as the ports of these components may become inaccessible afterward.

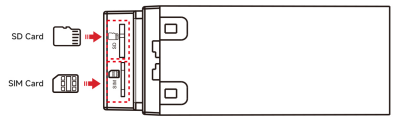


7. Replace or reinstall the trim frame of the vehicle dashboard.

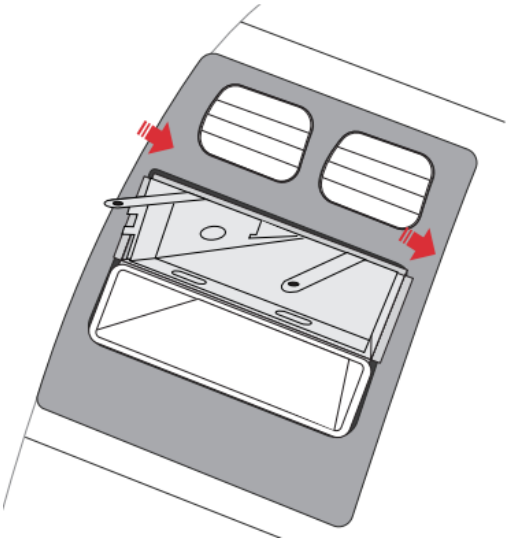


8. Insert the wired head unit into the dashboard opening.

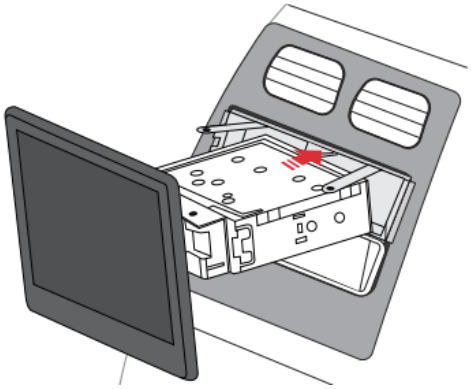

9. Secure the front of the case with the screws.

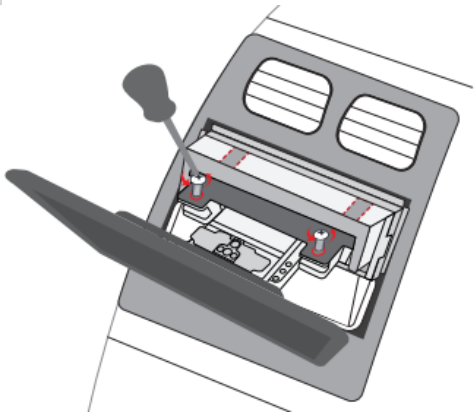

10. Installation Complete.

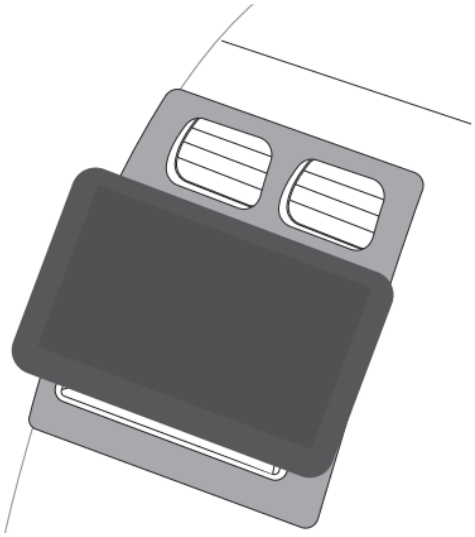


Part 6: Adjust Positioning of the Display


When attaching the display to the unit, you can adjust the display angle so that your view is clear and it does not impair your driving.

1. Adjust the Display Height

- Remove the decorative caps (a) at both left and right sides. Then remove the 2 screws (b) for height adjustment (on both sides).

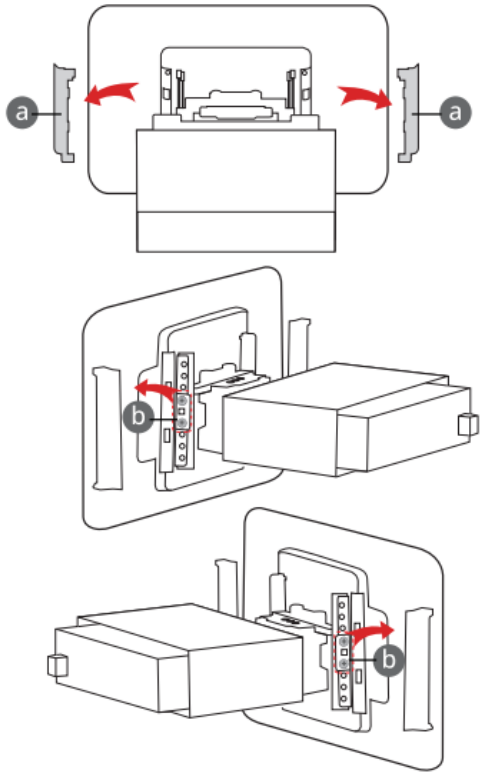


- Slide the joint bracket up or down to determine the best height position. Tighten the 2 screws (b) (on both sides) firmly to fix the height. There are 7 gear levels available for adiustment.

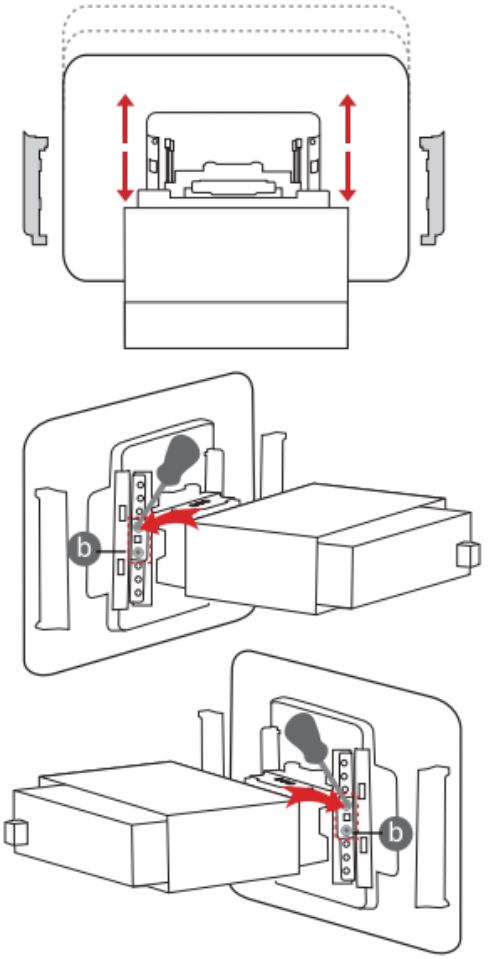


2. Tilt the Display Up and Down

- Remove the 2 screws (c) for angle adjustment (on both sides).

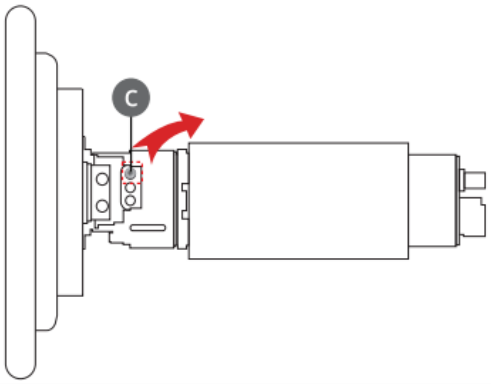


- Adjust the display angle to determine the best viewing angle. There are max 10° angles (both up and down) available for adjustment.

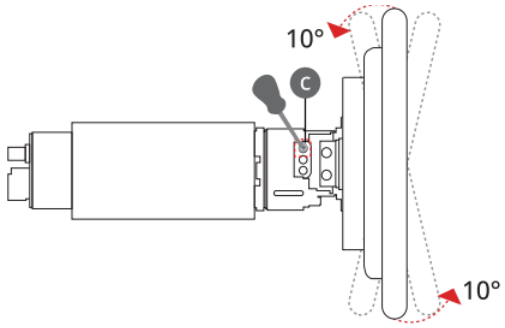

3. Move Left and Right

Remove the 2 screws (d) for horizontal adjustment (on both left and right sides).


Slide the joint bracket to the left or right to determine the best position.Tighten the 2 screws (on both sides) firmly to fix the position. There are 5 positions available for adjustment.

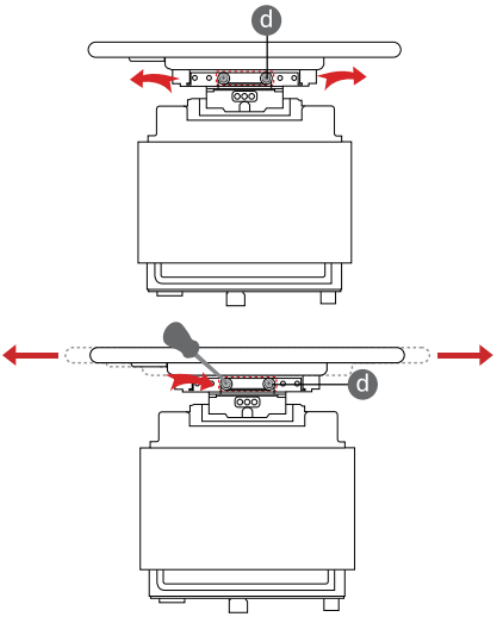

4. Tilt the Display Left and Right


Remove the 3 screws (e) (only on the up side) for angle adjustment.

Adjust the display angle to determine the best viewing angle. There are max 30° angles (both left and right) available for adjustment.

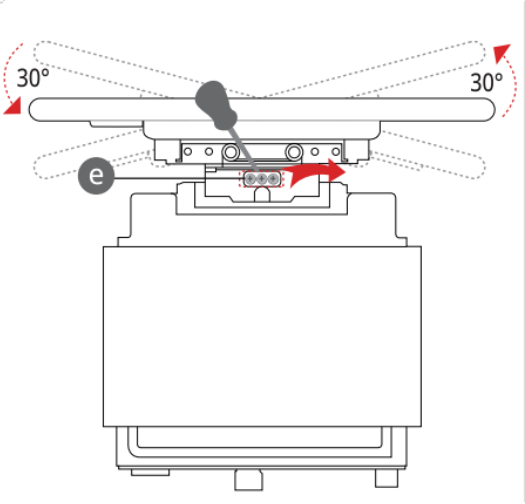

5. Slide the Screen Forward for a Closer View

Adjust the depth between the display module and the main unit to determine the best screwing position, and tighten the screws (f) to complete the installation of the display. Slide the joint bracket to determine the best screwing position. There are 2 gear levels available for adjustment.

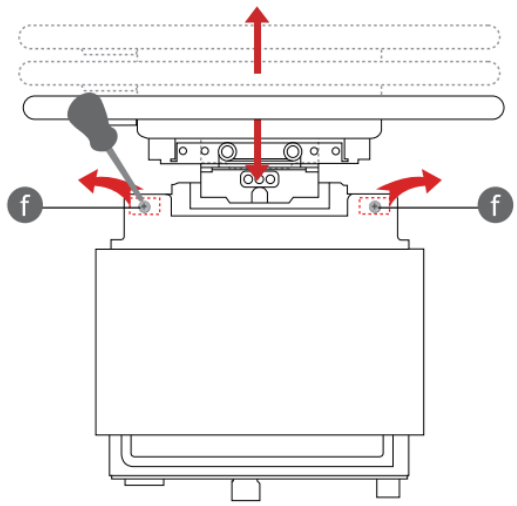

Note：

- Please trim the mounting brackets included in the package according to your installation situation. The fixing position needs to be adjusted according to the actual installation situation.
- During installation and use, if you encounter any problems or need help, please get in touch with our support team (**support@atotoglobal.com**).


5.3 Wiring Connection Instructions

This guide explains the functions and recommended connection points for each wire and interface on your ATOTO head unit. Please ensure all wiring is done carefully, and consult a professional installer if needed.

Important Note Before Wiring:

- Unused input/output wires need to be insulated with tape, heat shrink, or crimp connectors.
- Never use wire nuts.
- Always replace the faulty fuse with the same type and rating (15A).
- Dimmer input wire must be connected to the parking light for night detection.
- Reverse input wire must be connected to the reverse light wire for automatic rear camera trigger when the gear is changed to reverse.
- Consult a professional installer or our support team (support@atotoglobal.com) for a correct third-party SWC adapter for your specific vehicle.

Part 1: Main Power and Signal Harness Introduction (20-Pin Connector)

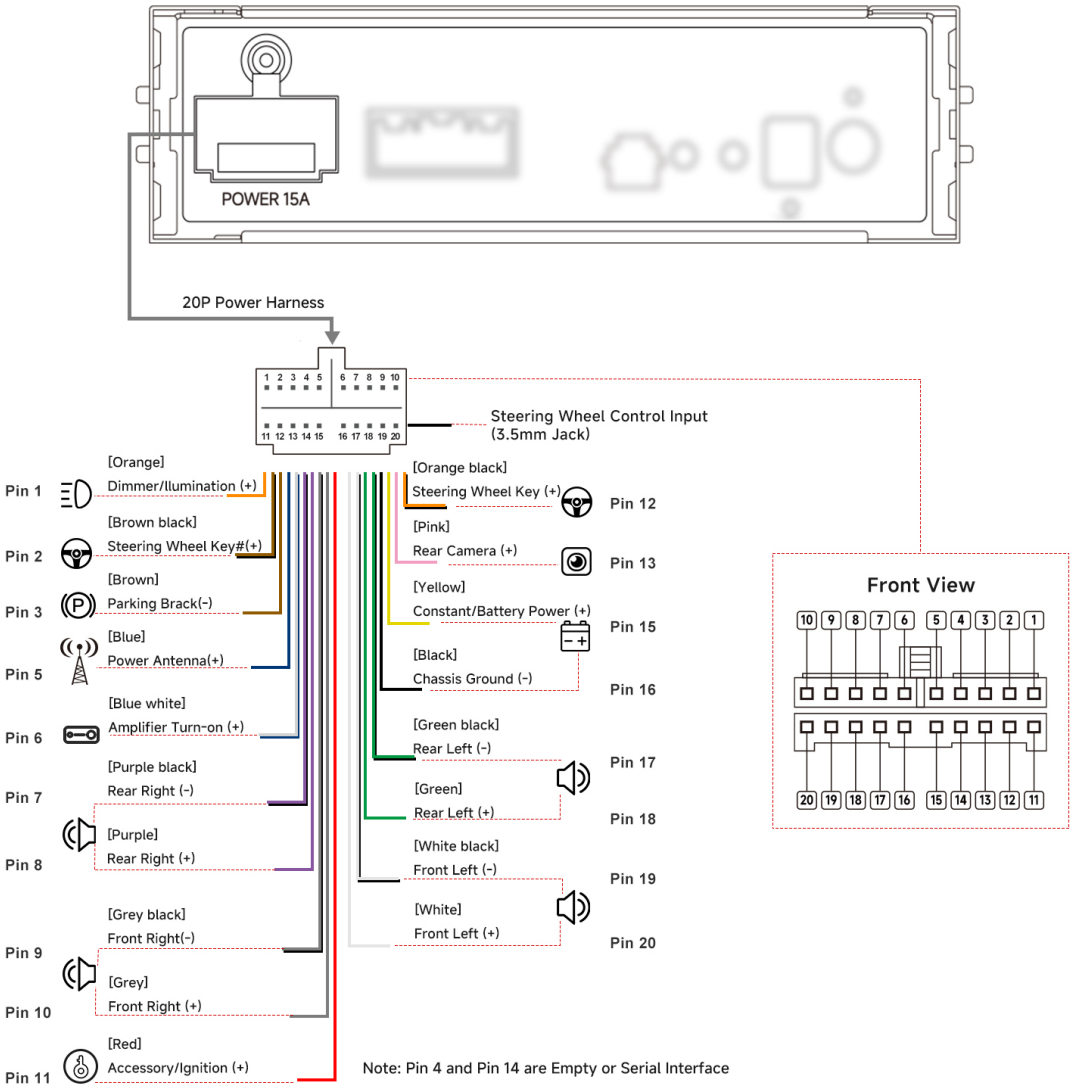

S8-WC-001

PIN 1: Dimmer/Ilumination +

Wire Color: Orange

Connect to vehicle's lighting signal wire, enables automatic screen dimming.

PIN 2: Steering Wheel Key#/SWC Key 2 (+)

Wire Color: Brown/Black

Analog Control Line. Connect either **PIN 2 (SWC#+)** or **PIN 12 (SWC+)** to the vehicle's **"KEY 1/SWC 1/KEY-A"** wire, or to the Tip contact of an aftermarket interface TRRS plug.

Although labeled differently, PIN 2 and PIN 12 serve the same function. The "#" symbol is used for identification only. Please connect only one of them, using both at the same time may cause improper operation.

Note: *For detailed wiring guidance, please refer to the* ***Steering Wheel Control Wiring Guide*** *below.*

PIN 3: Parking Brake -

Wire Color: Brown

Connect to vehicle's parking brake signal wire. Required to unlock video playback or certain settings. Leave it alone if your vehicle's factory power plug does not have such wire.

PIN 4: None (Empty or Serial Interface)

Wire Color: —

No connection; reserved for future use or specific serial communication interfaces.

PIN 5: Power Antenna +

Wire Color: Blue

Connect to car antenna control wire for power control.

PIN 6: Amplifier Turn-on +

Wire Color: Blue/White

Connect to aftermarket or factory amplifier remote turn-on wire.

PIN 7: Rear Right -

Wire Color: Purple/Black

Connect to negative terminal of the rear right speaker.

PIN 8: Rear Right +

Wire Color: Purple

Connect to positive terminal of the rear right speaker.

PIN 9: Front Right -

Wire Color: Grey/Black

Connect to negative terminal of the front right speaker.

PIN 10: Front Right +

Wire Color: Grey

Connect to positive terminal of the front right speaker.

PIN 11: Accessory/Ignition +

Wire Color: Red

Connect to ACC (accessory) power line. Provides switched 12V power when ignition key is turned to ACC or ON. Controls power on/off of the head unit.

PIN 12: Steering Wheel Key +

Wire Color: Orange/Black

Analog Control Line. Connect either **PIN 2 (SWC#+)** or **PIN 12 (SWC+)** to the vehicle's **"KEY 1/SWC 1/KEY-A"** wire, or to the Tip contact of an aftermarket interface TRRS plug.

Although labeled differently, PIN 2 and PIN 12 serve the same function. The "#" symbol is used for identification only. Please connect only one of them, using both at the same time may cause improper operation.

Note: *For detailed wiring guidance, please refer to the* ***Steering Wheel Control Wiring Guide*** *below.*

PIN 13: Rear Camera +

Wire Color: Pink

Connect to reverse gear signal wire (provides 12V when vehicle is in reverse). Triggers automatic switch to rear camera view.

PIN 14: None (Empty or Serial Interface)

Wire Color: —

No connection; reserved for future use or specific serial communication interfaces.

PIN 15: Constant/Battery Power +

Wire Color: Yellow

The main power supply for the car stereo. Connect to constant 12V power supply (battery positive terminal) of the vehicle. Maintains memory settings, clock, and stored data even when ignition is off.

PIN 16: Chassis Ground/GND -

Wire Color: Black

Connect to the main ground wire on the original vehicle power supply. If the original vehicle connector does not have a main ground wire, connect to a clean, bare metal point on the vehicle chassis.

PIN 17: Rear Left -

Wire Color: Green/Black

Connect to negative terminal of the rear left speaker.

PIN 18: Rear Left +

Wire Color: Green

Connect to positive terminal of the rear left speaker.

PIN 19: Front Left -

Wire Color: White/Black


Connect to negative terminal of the front left speaker.

PIN 20: Front Left +

Wire Color: White

Connect to positive terminal of the front left speaker.

Part 2: Main Ports Introduction

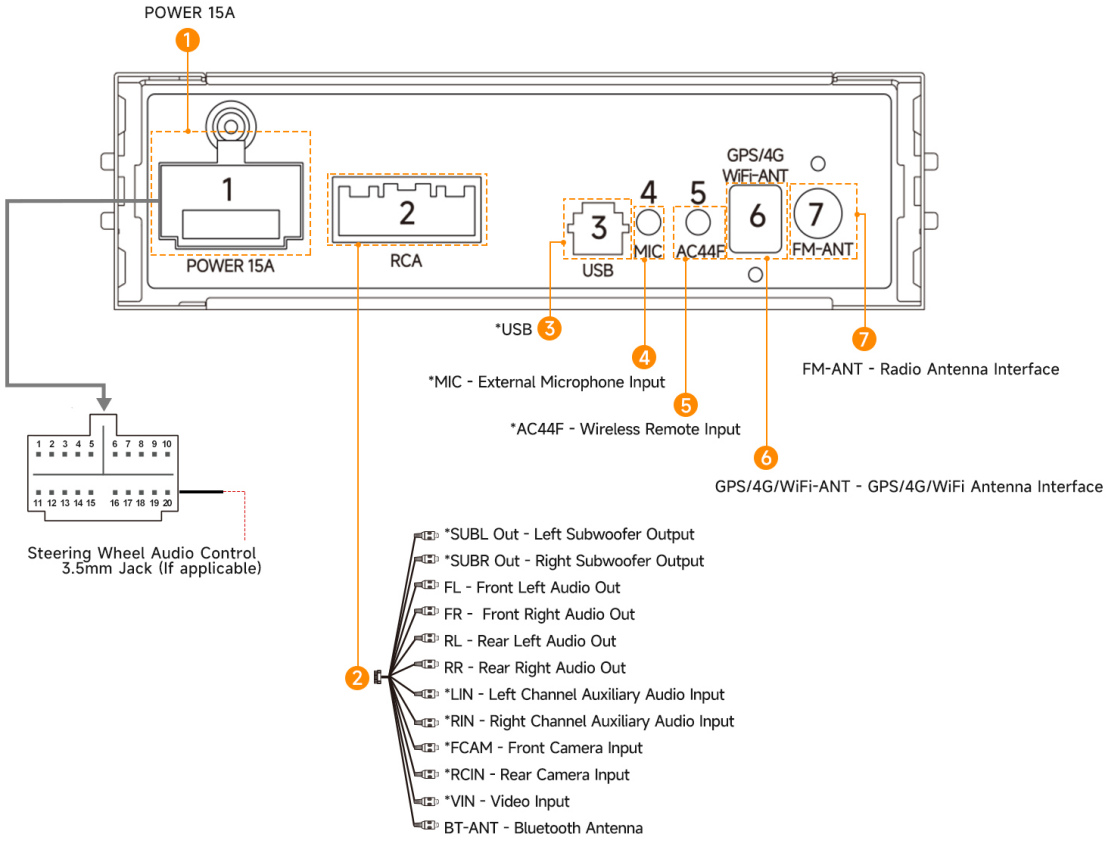

S8-WC-002

1. Power 15A Interface

The POWER 15A port is the primary power input for the S8 car stereo. It delivers the necessary power to the unit and ensures stable operation.

2. RCA Audio Out/AV Ports

Subwoofer Out (SUB1/SUB2): Connect to subwoofer amplifier

FL, FR, RL, RR: RCA outputs to external amplifiers for each speaker channel

FCAM/RCIN: Front/Rear camera video inputs

L-IN/R-IN: Left and right auxiliary audio input

V-IN: Video input

BT-ANT: Bluetooth antenna input

3. 2-in-1 USB Cable Port

Connects to the included 2-in-1 USB cable (External Storage & Phone Link) for DVR recording and wired CarPlay/Android Auto/Phone Mirroring.

4 & 5. External Device Ports

MIC: External microphone input

AC44F: ATOTO Steering wheel controller (SWC) input


6 & 7. Antenna Ports

GPS/4G/WiFi-ANT: 4-in-1 antenna input

FM-ANT: FM radio antenna input

Part 3: Wiring Connection Instructions

Module 1: Speaker Wiring

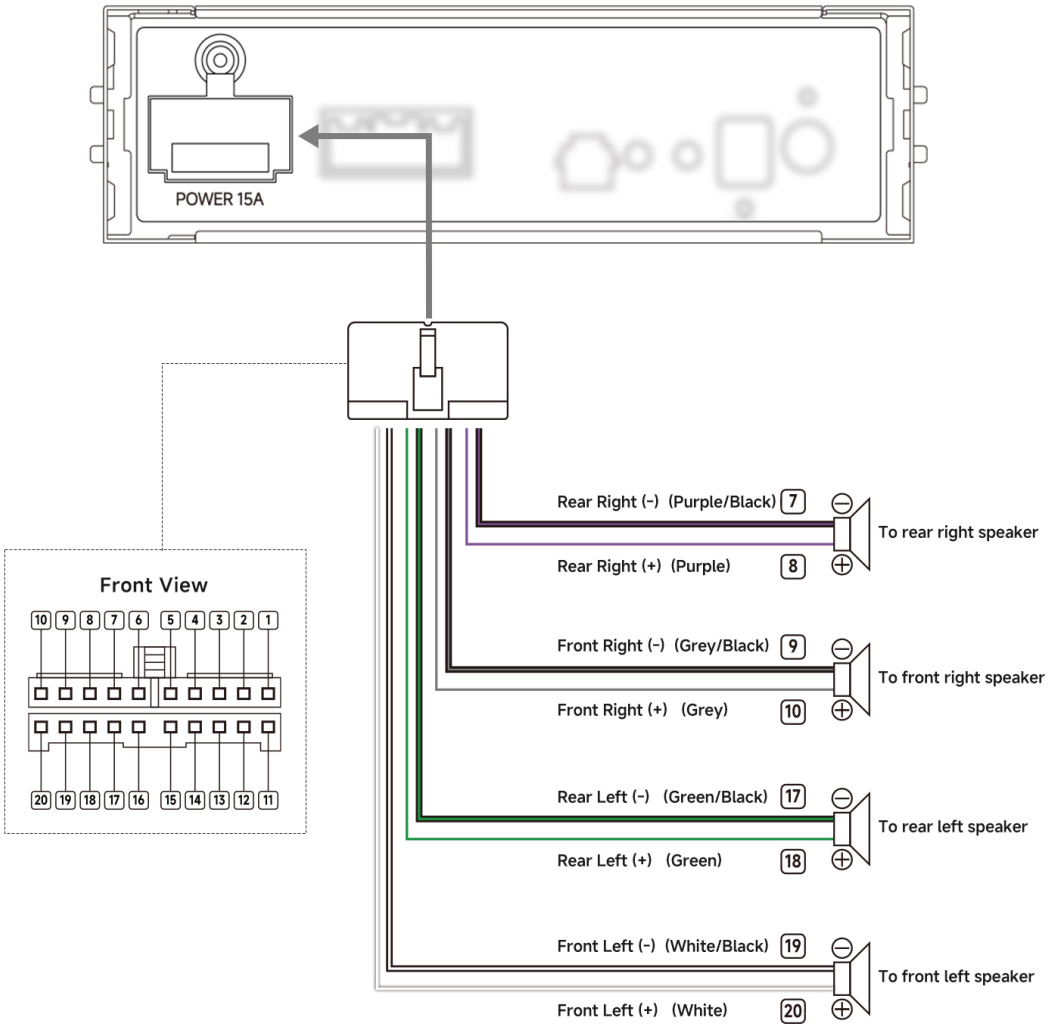

S8-WC-003

Note: *The wiring diagram and interface layout are based on the S8G1104MS model as a reference. Please locate the corresponding interface positions according to your specific model.*

How to Connect:

1. Connect the **Rear Right (-)** wire to the rear right speaker’s negative terminal.
2. Connect the **Rear Right (+)** wire to the rear right speaker’s positive terminal.
3. Connect the **Front Right (-)** wire to the front right speaker’s negative terminal.
4. Connect the **Front Right (+)** wire to the front right speaker’s positive terminal.
5. Connect the **Rear Left (-)** wire to the rear left speaker’s negative terminal.


6. Connect the **Rear Left (+)** wire to the rear left speaker's positive terminal.
7. Connect the **Front Left (-)** wire to the front left speaker's negative terminal.
8. Connect the **Front Left (+)** wire to the front left speaker's positive terminal.

Important Notes:

- Ensure proper polarity (+/-) for each speaker to avoid phase issues (e.g., weak bass or echo effect).
- Do not connect any of the speaker wires to chassis ground.
- Unused speaker wires need to be insulated with tape, heat shrink, or crimp connectors to avoid damage to the unit.

Module 2: Power Antenna, Amplifier Turn-On & Parking Brake Wiring

Purpose: These signal wires enable accessory components such as the power antenna, aftermarket amplifier, and enforce safety limitations on video playback during driving.

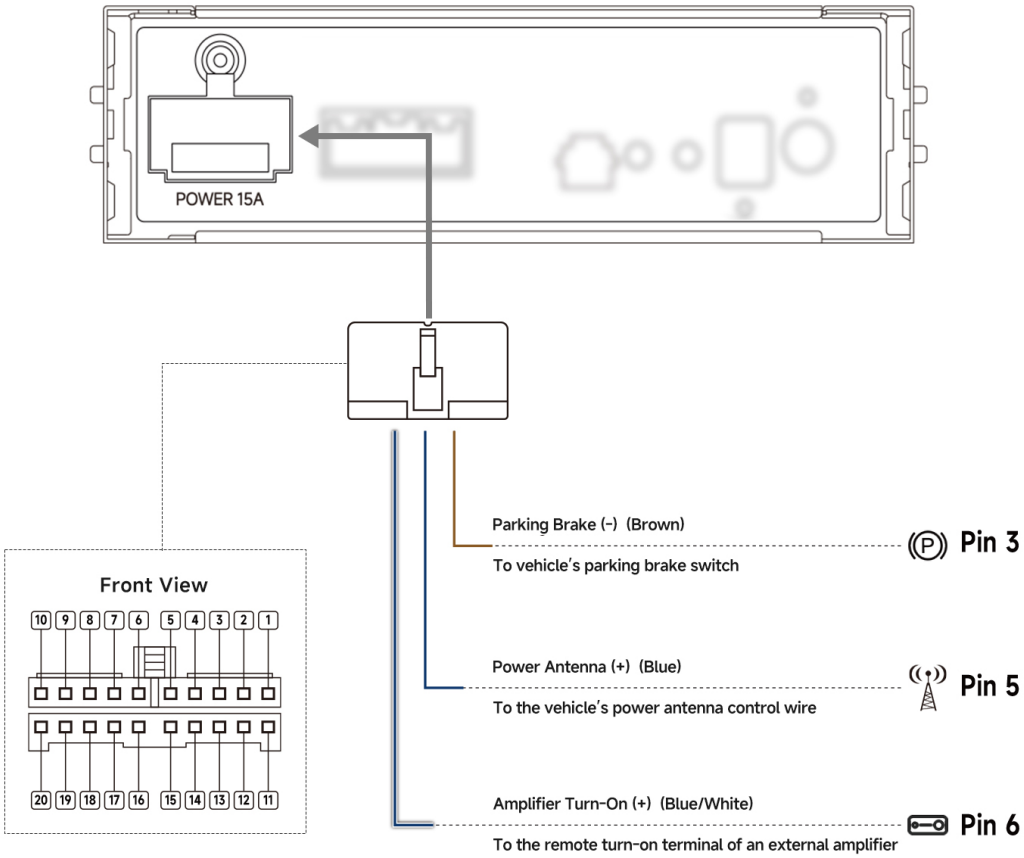

S8-WC-004

Note: *The wiring diagram and interface layout are based on the S8G1104MS model as a reference. Please locate the corresponding interface positions according to your specific model.*

How to Connect:

1. Connect the **Parking Brake (-)** wire to the parking brake signal wire of the vehicle. This is used to detect whether the parking brake is engaged, as some functions (e.g., video playback) may be restricted while driving.

2. Connect the **Power Antenna (+)** wire to the vehicle's power antenna control wire (if available). This output activates the antenna when the Radio is in use. Do not use this wire to

turn on an amplifier, or as a power supply for external devices, as the current is limited to 500mA.

3. Connect the **Amplifier Turn-On (+)** wire to the remote turn-on terminal of an external amplifier. This wire sends a 12V signal when the head unit is powered on.

Important Notes:

- Do not connect both the Power Antenna and Amplifier Turn-On wires to the same terminal. They serve different purposes.
- For parking brake detection to work properly, ensure the connection is secure and complies with local regulations.
- If your vehicle does not have a power antenna, leave the wire unconnected and insulated.

Module 3: Steering Wheel Control Wiring

Upgrading from a factory head unit to an ATOTO car stereo does not mean sacrificing the functionality of your factory steering wheel controls. With the help of aftermarket solutions from companies like Metra, PAC, and Crutchfield, you can retain control over essential functions such as volume, mode, and track selection by installing an interface module to integrate your original steering wheel controls with your new ATOTO headunit.

1. Types of Steering Wheel Control Signals

There are two main types of steering wheel control signals:

- Resistor-Based Analog Signals
- CANBUS-Based Data Signals

For CANBUS-Based Signals:

If your vehicle uses CANBUS-based steering wheel control signals, you will need to purchase a compatible CANBUS data interface. Without this interface, the factory steering wheel controls cannot be retained after replacing your head unit with an aftermarket unit.

For Resistor-Based Analog Signals:

If your vehicle uses resistor-based analog signals, you can either:

- Purchase a steering wheel control interface module.
- Locate the steering wheel control wires in your car’s harness (or wiring harness) and connect them directly to the corresponding steering wheel control wires on the ATOTO power harness.

2. Recommended Resources for Wiring Harnesses or CANBUS Interfaces

Here are some recommended resources to find compatible wiring harnesses or CANBUS interfaces:

- United States/Canada:

Metra Online, Crutchfield, https://pac-audio.com, Amazon, ebay and etc.

- Europe/Australia:

Connects2, Amazon, or eBay

- Japan:

Kanatechs, Rakuten, Amazon and etc.

3. ATOTO Power Harness Steering Wheel Control Wires


The latest ATOTO power harness includes two types of steering wheel control wiring options:

- 3.5mm Female Jack for SWC
- Separate Steering Wheel Key Wires

Important: Use only one of these options—either the 3.5mm jack or the steering wheel key wires, not both.

4. Setting Up Steering Wheel Control

4.1 Wiring Methods

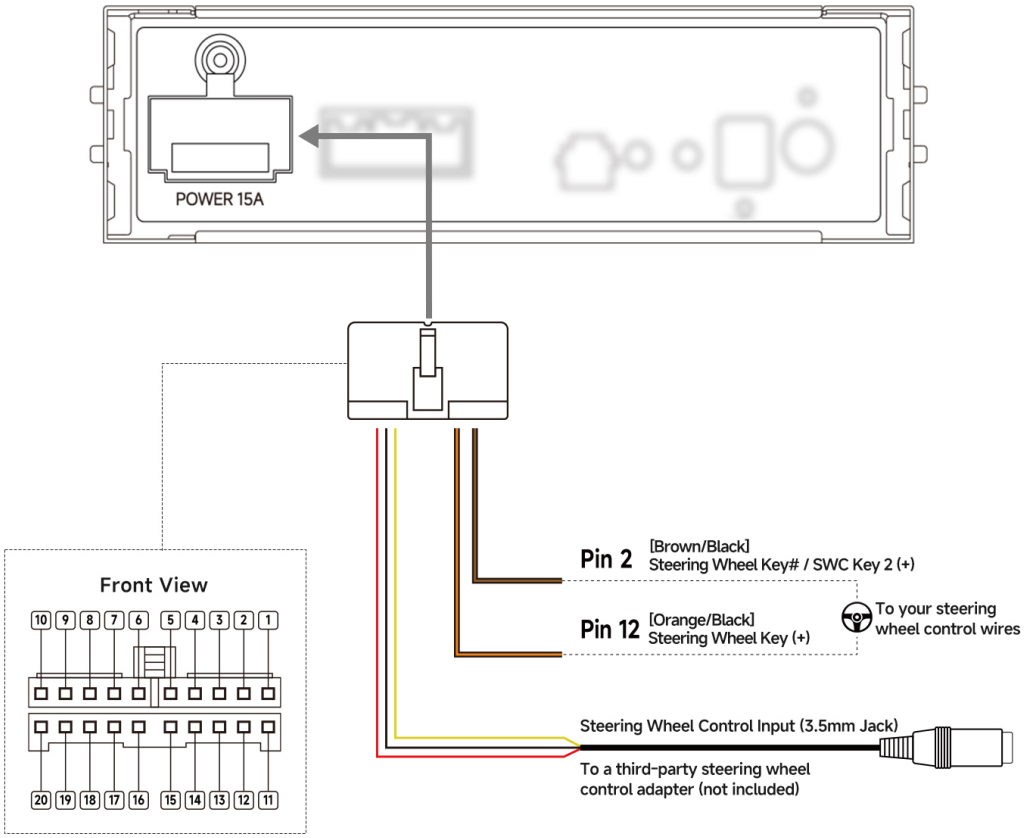

S8-WC-005

Note: *The wiring diagram and interface layout are based on the S8G1104MS model as a reference. Please locate the corresponding interface positions according to your specific model.*

There are two wiring methods depending on your setup:

Method 1:

If your purchased wiring harness includes a 3.5mm male jack for SWC, simply connect it to the 3.5mm female jack on the ATOTO power harness.

Method 2:

Step 1: If your wiring harness or car harness does not include a 3.5mm male jack but has

steering wheel control wires, connect the positive steering wheel control wires to either the **“Steering Wheel Key(+)”** or the **“Steering Wheel Key #(+)”** wire on the ATOTO power harness (sequence does not matter).

Step 2: Connect the steering wheel control ground wire to the black ground wire on the ATOTO power harness.

NOTICE:

- If the interface module requires selecting a head unit type, choose Pioneer.
- The **“Steering Wheel Key(+)”** and **“Steering Wheel Key #(+)”** wires serve the same function and are interchangeable.

4.2 Programming the Steering Wheel Control Buttons

Once the wiring is complete (via either the 3.5mm jack or the steering wheel control wires), program the steering wheel control buttons through the head uint's settings. Follow the step-by-step instructions provided in the ATOTO user manual to assign functions to each button. For detailed instructions on steering wheel control learning, scan the QR code on the box or on the Online Manual Quick Guide to access Eproductcare online resource platform. Then click the product model you purchased and navigate to **Features > Steering Wheel Control (SWC) Learning Configuration**.

5. Troubleshooting Unrecognized Buttons


If some buttons cannot be programmed or recognized:

- Verify that the steering wheel interface adapter/module is functioning properly and not defective.
- If the resistance difference between certain buttons is too small for the head unit to recognize, try adding a resistor in series with one of the two steering wheel key wires. This may resolve the issue.

Safety Reminder

We strongly recommend completing SWC wiring under the guidance of a professional installer, especially when dealing with unfamiliar vehicle wiring systems.

Module 4: RCA Audio & Video Connections

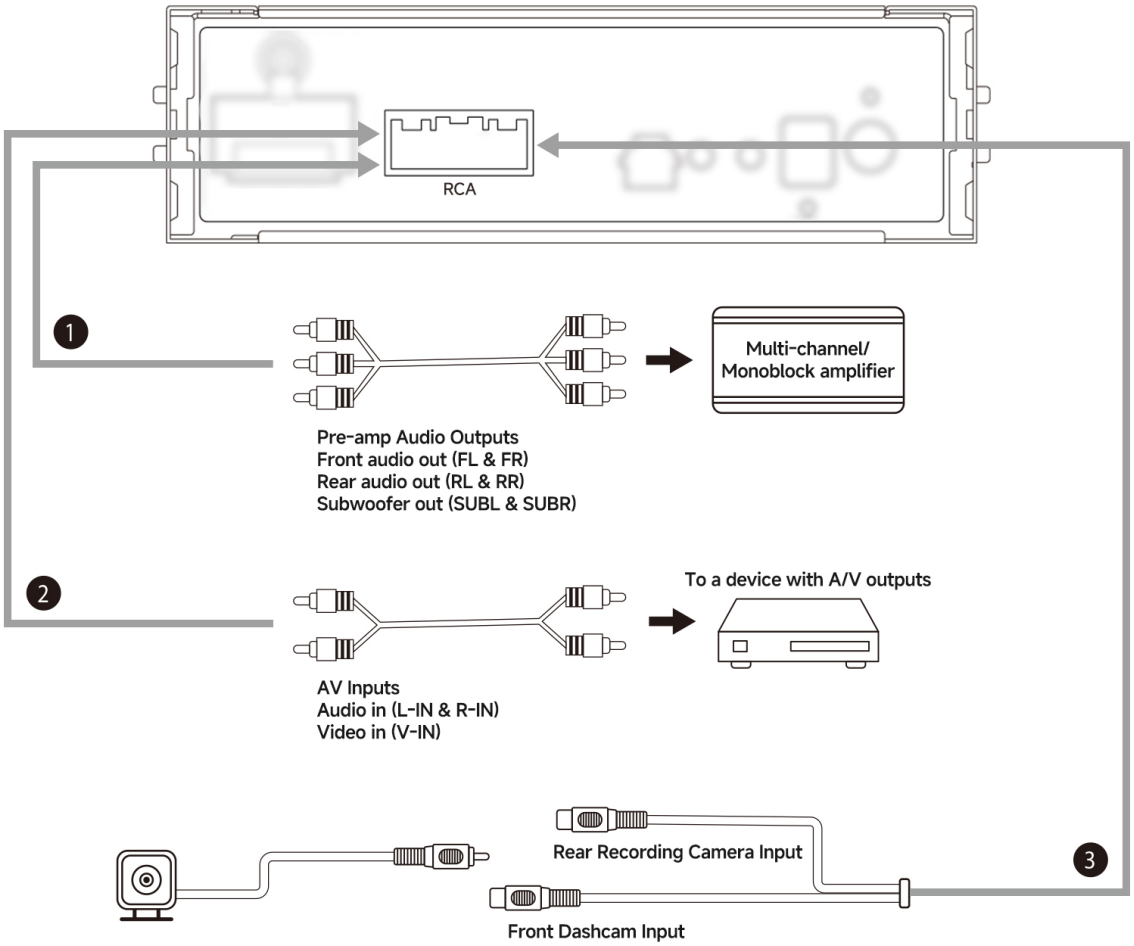

S8-WC-006

Note: The wiring diagram and interface layout are based on the S8G1104MS model as a reference. Please locate the corresponding interface positions according to your specific model.

1. Audio Outputs:

Rear Right Audio Out/Rear Left Audio Out/Front Right Audio Out/Front Left Audio Out: Use RCA cables to connect these outputs to the corresponding channels of an external amplifier for enhanced speaker output.

SUB Output (Right Subwoofer Output): Connect to the right channel of your active subwoofer amplifier.

SUBL Output (Left Subwoofer Output): Connect to the left channel of your active subwoofer amplifier.

2. Audio & Video Inputs:

Left Channel Aux Audio Input/Right Channel Aux Audio Input: Connect to external audio sources, using RCA-to-3.5mm adapters if needed.

Video Input (V-IN): Connect to an external video player, using an RCA video cable if needed.


3. Rear/Front Camera Inputs:

RCIN (Rear Camera Input): Connect to the signal cable of your rearview camera. Make sure to also connect the **“Rear Camera (+)”** trigger wire from the main harness.

FCAM (Front Camera Input): Connect to the signal cable of your front-view camera.

We recommend using the dedicated AC-FCR04W front dashcam and AC-FCR04W rear recording camera（both are sold separately) from ATOTO for the best performance and stability.

Module 5: USB Connections

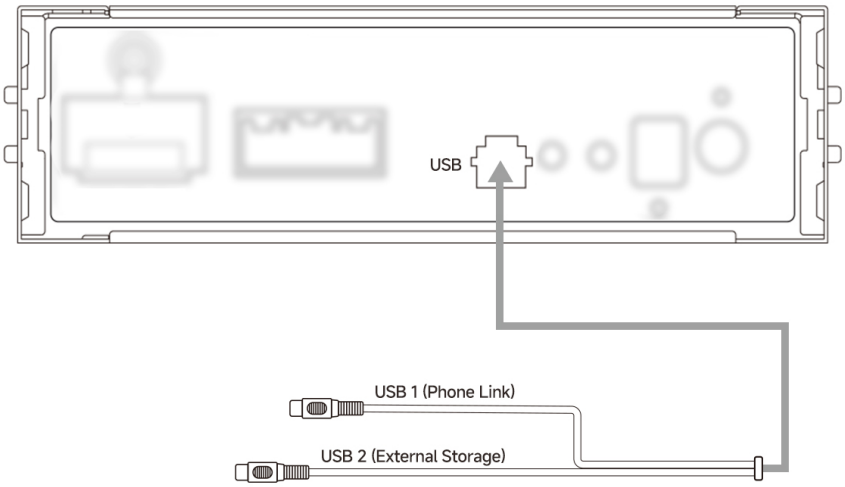

S8-WC-007


Note: The wiring diagram and interface layout are based on the S8G1104MS model as a reference. Please locate the corresponding interface positions according to your specific model.

USB Ports:

USB 1 (Phone Link): Connect with your smarphone via original USB cable for wired CarPlay/Android Auto/Phone Mirroring.

USB 2 (External Storage): Connect additional USB storage devices for media playback, file transfer, or firmware upgrades.

Module 6: Audio Outputs & Antennas

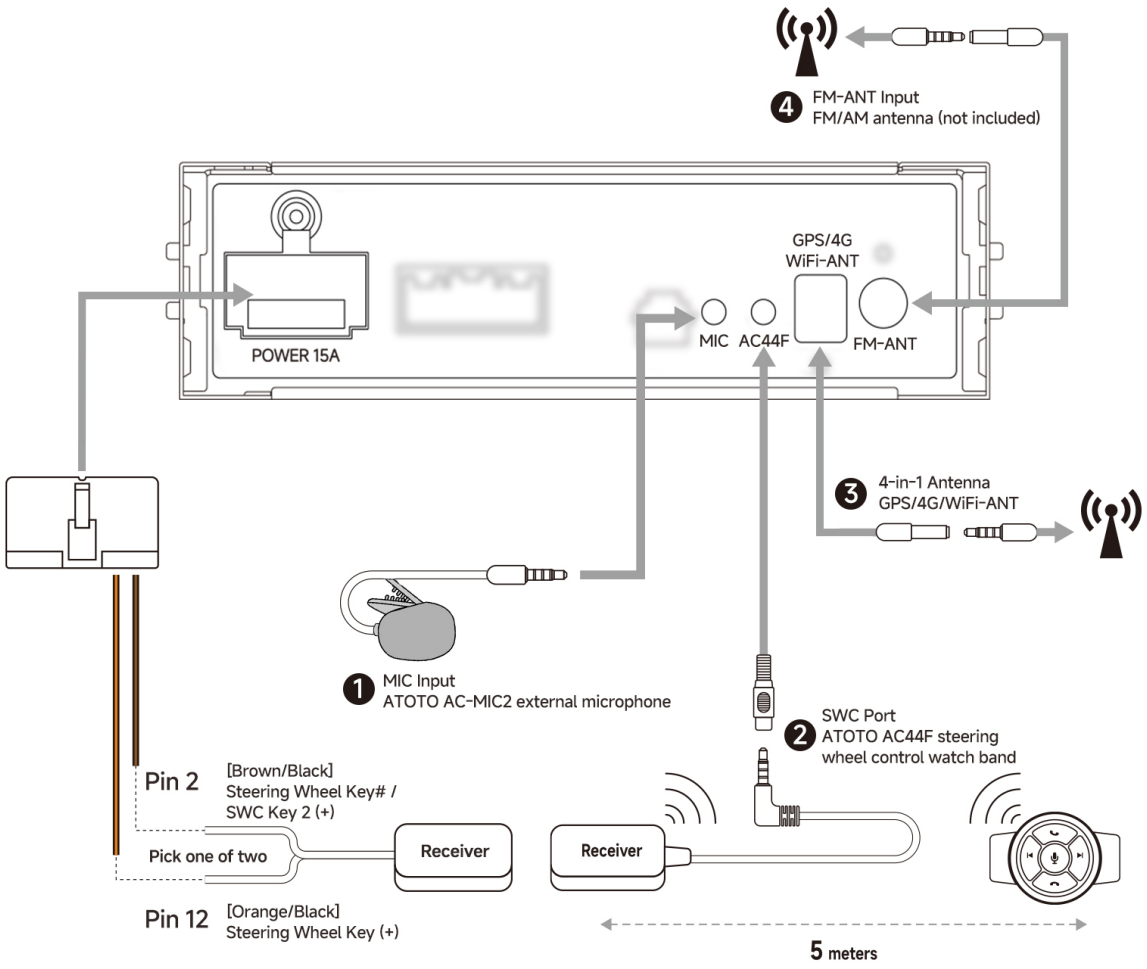

S8-WC-008

Note: The wiring diagram and interface layout are based on the S8G1104MS model as a reference. Please locate the corresponding interface positions according to your specific model.

1. MIC Input

It is specifically designed to connect to our **AC-MIC2 external microphone**.

2. SWC: Steering Wheel Control Port

This port is designed to connect the ATOTO AC44F Steering Wheel Control Watch Band (sold separately). It provides a convenient steering control solution for vehicles that do not

have built-in factory steering wheel buttons.

3. 4-in-1 Antenna Input

Included Antennas:

GPS Antenna: For satellite positioning and navigation.

Wi-Fi Antenna: For wireless internet connectivity.

4G Antenna #1: For LTE cellular signal (primary).

4G Antenna #2: For LTE signal diversity (secondary).

Installation Instructions:


- Locate the port on the head unit labeled: GPS/4G/WiFi-ANT
- This is where you'll plug the FAKRA connector. Gently insert the FAKRA plug until it clicks into place.
- Positioning the antenna module:
  - Choose a flat and unobstructed surface inside the vehicle, such as the top dashboard near the windshield.
  - Clean the surface and peel off the adhesive on the back of the red antenna base.
  - Firmly press and mount the antenna in place. Avoid metal obstructions above the antenna to ensure signal strength.

4. FM-ANT (Radio Antenna Input)

Connect your vehicle's radio antenna cable to this port to ensure proper FM/AM signal reception. If reception is weak, consider using an amplified antenna.

Module 7: Power & Ignition Wiring

Purpose: Supplies power to the head unit and ensures it turns on/off properly with vehicle ignition.

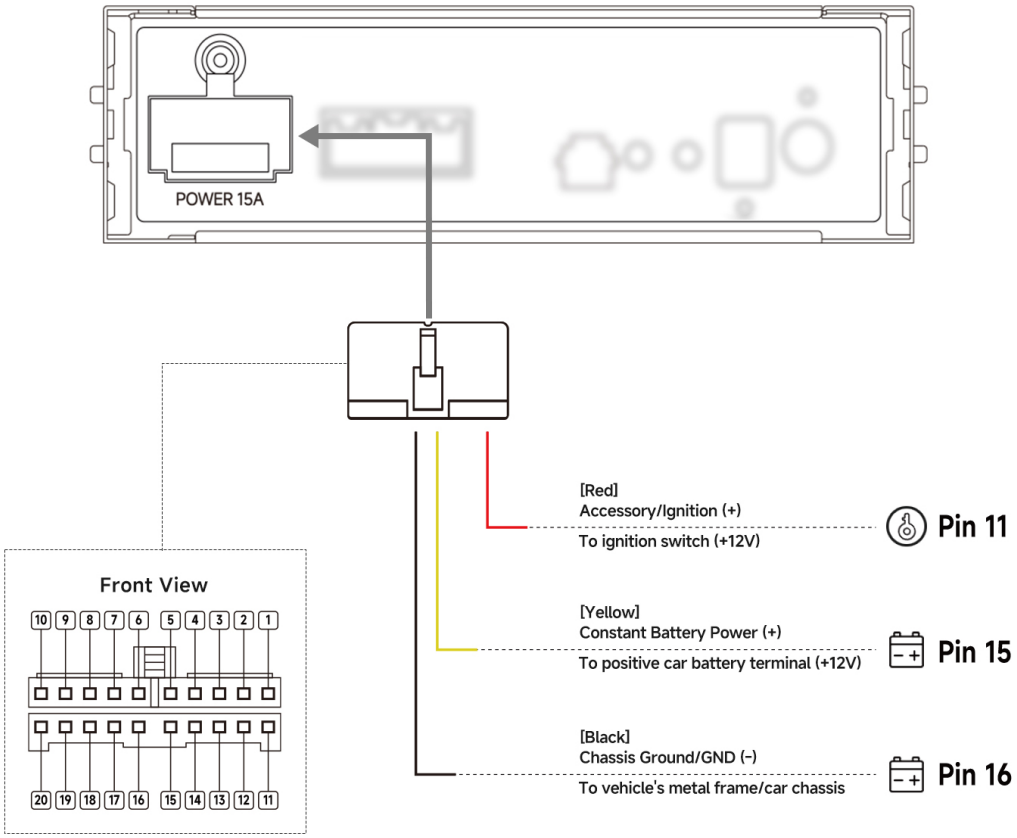

S8-WC-009

Note: The wiring diagram and interface layout are based on the S8G1104MS model as a reference. Please locate the corresponding interface positions according to your specific model.

How to Connect

1. Connect the **Chassis Ground (-)** wire to the main ground wire on the original vehicle power supply. If the original vehicle connector does not have a main ground wire, connect to a clean, bare metal point on the vehicle chassis. Poor grounding may lead to noise or instability.

2. Connect the **Constant/Battery Power (+)** wire to a constant 12V battery source in the

vehicle. This ensures system settings and memory are retained when ignition is off.

3. Connect the **Accessory/Ignition (+)** wire to the vehicle's ACC (Ignition) power source, which supplies power when the key is turned to ACC or ON position.

Note: It is recommended to connect the ground wire first, followed by the constant power wire, and finally the ignition wire. This minimizes the risk of short circuits or accidental power-related issues during the installation process.

Module 8: Supplying Power to the Head Unit

Power 15A Port: Supply power to the head unit

Connection Instruction: Plug the connector end of the included 20-pin wiring harness to the **POWER 15A** port and connect the pigtail end to the corresponding original vehicle's B+ battery positive wire. Generally, a dedicated adapter is used for installation without the need to cut original wires.

Important Reminders

1. Complete all wiring connections (speakers, antennas, cameras, USB, etc.) before plugging in the POWER 15A connector to the head unit. This helps prevent short circuits, protects internal components, and ensures a safe system startup.

2. Before securing the head unit into the dashboard opening, ensure that all basic functions are working properly. This includes testing the speakers (audio output), screen display, camera feeds, USB connections, and other essential features. Confirming functionality before final installation helps avoid the need for disassembly and reinstallation if any issues arise.