
Sub-D_37_Connector

DSUB1 DS1037-37FNAKT74-0CC GND GND GND Con11 Con10 0 19 37 0 36 0 35 Con9 O 16 34 Con8 Con7 Con6 O 15 33 Con5 o 14 32 Con4 Con3 O 13 31 Con2 Con1 o 12 30 ENA ENA Encoder B Encoder A Joystick Z Joystick Y Joystick X LED Z LED Y LED X Ecodysts 0 11 29 o 10 28 0 26 Feedrate 0 25 Rotation Speed Auswahl Z Auswahl Y Auswahl X O 5 23 OK Programm start Motor start Speed 3 Speed 2 Speed 1 +5V +5V $0 \frac{4}{22}$

0 1



Connectors

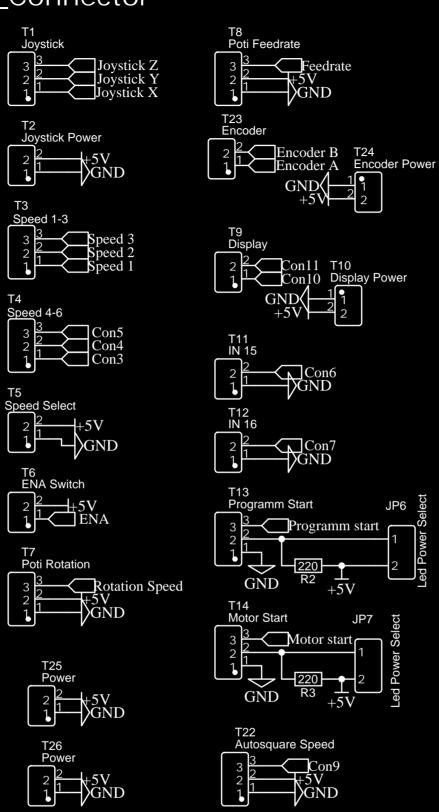