

User Manual: CO₂ Injection Pressure Interference and Saturation Analyzer

Web application at <https://co2-interference.vercel.app>

2 October 2026

1. Introduction

The CO₂ Injection Pressure Interference and Saturation Analyzer is a web application for screening-level analysis of several CO₂ injection wells operating in the same saline aquifer. For a set of wells, rates and aquifer properties it calculates how far the injected CO₂ spreads, how much the formation pressure rises at each well and at monitoring locations, how strongly the wells interfere with one another, and whether the pressure stays below a limit derived from the fracture gradient.

The application runs in a web browser; nothing needs to be installed and the inputs are not sent to a server. Open the address above on a computer (a QR code that opens the same address can be printed on posters or slides). A large screen is recommended because the inputs are on the left and the results on the right.

1.1 What the application calculates

- CO₂ saturation and plume extent around each injector (radial Buckley–Leverett front).
- Pressure buildup in the aquifer, from the Theis solution superposed over all wells, with a choice of aquifer boundary condition (infinite, constant-pressure or sealing).
- The effect of well skin, which can be typed in per well or calculated from a damaged zone.
- Well-to-well interference: how much of each well's buildup is caused by the other wells, and when a pressure effect arrives at each target.
- A pass/fail check of every well against the maximum allowable buildup, and a check of monitoring points against an interference threshold.
- A side-by-side comparison of the three boundary conditions.
- Charts, tables, a results CSV and a publication-style report in PDF or Word format.

1.2 What it is not

The model is analytical and intended for screening and for ranking well layouts. It assumes a homogeneous, confined aquifer and brine-equivalent flow (Section 10). Results should be confirmed with numerical reservoir simulation before engineering decisions are made.

2. Quick start

The page opens with a worked example (four injectors and one monitoring point), so you can try the application immediately.

- Step 1. Check the values in the Input panel on the left. Change anything you like; each number has its own unit selector beside it.
- Step 2. Check the injection wells table: location, injection rate in Mt of CO₂ per year, start and end year of injection, and skin (leave blank to calculate it).
- Step 3. Press ► RUN analysis (green-blue button at the top of the left panel, or the link in the “No results yet” message). Nothing is calculated until you do this.

- Step 4. Read the status card: with the example data and the default three-zone pressure model the peak buildup is about 8.57 MPa against an allowable 8.70 MPa, so it reports “Within limit”. (With the single-phase option in the Pressure model section the peak is about 10.05 MPa and the status is “Limit exceeded”).
- Step 5. Click through the result tabs: CO2 saturation, Pressure map, Time series, Interference matrix, Limit check and Compare boundaries.
- Step 6. Change an input and press RUN again. A yellow banner reminds you whenever the displayed results are older than the inputs.
- Step 7. Export what you need: chart images (PNG or SVG), the results CSV, or the full report (PDF or Word).

3. The screen at a glance

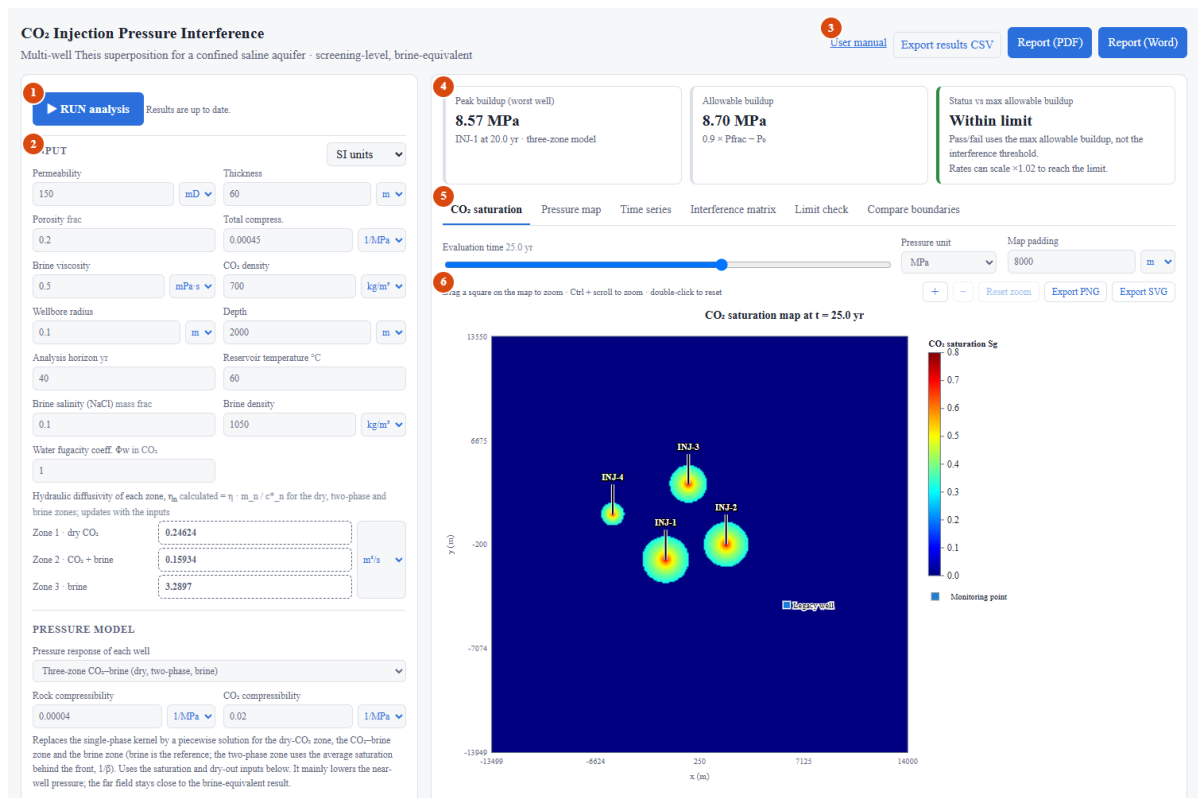


Figure 1. The main screen after pressing RUN. The numbered areas are described in Table 1.

Table 1. Areas of the main screen.

No.	Area	What it does
1	RUN analysis	Starts the calculation with the current inputs. Also shows whether results are up to date.
2	Input panel	All inputs: aquifer, pressure limit, CO2 saturation, skin, boundary, wells, monitoring points and report details.
3	Export buttons	Results CSV, Report (PDF) and Report (Word); the User manual link.
4	Status cards	Peak buildup, allowable buildup and the pass/fail status against the max allowable buildup.
5	Result tabs	CO2 saturation, Pressure map, Time series, Interference matrix, Limit check, Compare boundaries.
6	Chart toolbar	Zoom in/out, Reset zoom, Export PNG and Export SVG for the chart below it.

4. Entering the inputs

4.1 Units

Every input that has a unit carries its own unit selector directly beside the value, for example Permeability 150 [mD ▼]. Pick another unit and the number is converted automatically; the calculation is unaffected.

The small selector beside the Input heading switches all quantities at once between SI units and Field (US oilfield) units. Pressures in the results can also be switched with the Pressure unit selector above the charts.

Time is always in years. CSV import and export always use metres and Mt/yr (or longitude and latitude in degrees) so that files stay unambiguous.

INPUT SI units ▼

Permeability: 150 [mD ▼] Thickness: 60 [m ▼]

Porosity frac: 0.2 Total compress.: 0.00045 [1/MPa ▼]

Brine viscosity: 0.5 [mPa·s ▼] CO₂ density: 700 [kg/m³ ▼]

Wellbore radius: 0.1 [m ▼] Depth: 2000 [m ▼]

Analysis horizon yr: 40 Reservoir temperature °C: 60

Brine salinity (NaCl) mass frac: 0.1 Brine density: 1050 [kg/m³ ▼]

Water fugacity coeff. Φ_w in CO₂: 1

Hydraulic diffusivity of each zone, η_m calculated = $\eta \cdot m_n / c^*_n$ for the dry, two-phase and brine zones; updates with the inputs

Zone 1 · dry CO₂: 0.24624

Zone 2 · CO₂ + brine: 0.15934

Zone 3 · brine: 3.2897

[m²/s ▼]

Figure 2. The Input section with a unit selector beside every value.

4.2 Aquifer and fluid parameters

Table 2. Input parameters. Typical ranges are only a guide; use site data wherever available.

Parameter	Meaning	Typical range
Permeability	Horizontal permeability of the injection formation.	10 to 1000 mD
Thickness	Net thickness of the injection interval.	10 to 200 m
Porosity	Pore volume fraction.	0.10 to 0.30
Total compressibility	Combined rock and brine compressibility; controls how fast pressure spreads.	2×10 ⁻³ to 10 ⁻³ 1/MPa
Brine viscosity	Viscosity of the formation brine at reservoir conditions.	0.3 to 1 mPa·s

Parameter	Meaning	Typical range
CO2 density	Density of CO2 at reservoir pressure and temperature; converts injected mass into reservoir volume.	400 to 800 kg/m ³
Wellbore radius	Radius at which each well's own pressure is evaluated.	0.07 to 0.15 m
Depth	Mid-depth of the injection interval; sets the initial and fracture pressures.	800 to 4000 m
Hydraulic diffusivity (calculated)	Shown read-only under the inputs. With the three-zone pressure model it is shown for each zone (dry CO2, CO2 + brine, brine) as $\eta \times m / c^*$, and with the single-phase model as $k / (\phi \mu c_t)$. It updates as soon as you change any input; only its display unit can be chosen.	brine 0.1 to 10 m ² /s
Analysis horizon	Length of the time series, in years. The evaluation-time slider runs from 0 to this value.	20 to 100 yr
Reservoir temperature	Used for the dry-zone calculation (water content of CO2).	40 to 120 °C
Brine salinity (NaCl)	NaCl mass fraction of the brine; lowers the water activity.	0 to 0.26
Brine density	Density of the formation brine at reservoir conditions.	1000 to 1200 kg/m ³
Water fugacity coeff. Φ_w	Fugacity coefficient of water in the CO2-rich phase. 1 is the screening approximation; smaller values mean the CO2 carries more water and the dry zone is larger.	0.2 to 1

4.2.1 Pressure model

The Pressure model section chooses how the pressure around each well is calculated. The default is the Three-zone CO2–brine model, which recognises that injected CO2 creates three regions: a dry CO2 zone next to the well, a CO2–brine two-phase zone and the undisturbed brine. Each region has its own mobility (how easily it flows) and diffusivity (how fast pressure spreads), and the pressure solution is matched at the two fronts. Choose Single-phase, brine-equivalent (Theis) to treat the whole aquifer as brine, as in the earlier versions of the application.

Table 2a. How the three-zone model is set up.

Item	Setting
Reference	Brine: mobility k/μ_w and the compressibility entered above.
Zone 1 (dry CO2)	Mobility ratio $m1 = k_{rg,max} \mu_w/\mu_g$; compressibility = rock + CO2.
Zone 2 (CO2 + brine)	Evaluated at the average CO2 saturation behind the front ($1/\beta$, shown under the plume table); mobility from the relative-permeability curves; compressibility from the saturation-weighted brine and CO2.
Zone 3 (brine)	Mobility ratio 1, compressibility = the total compressibility entered above.
Rock and CO2 compressibility	Two extra inputs (default 4×10^{-4} and 0.02 1/MPa). The brine compressibility is the total minus the rock value.
Fronts	Dry front and gas front radii from the dry-out and saturation inputs; both grow with the square root of time.
Rate changes	Each rate period uses the kernel with its own rate; a shut-in uses the rate it stops.

In practice the model lowers the pressure next to each well (CO2 is more mobile than brine) and leaves the pressure far from the wells close to the brine-equivalent value.

4.3 Pressure limit

The allowable buildup is calculated as: safety factor $\times$ fracture pressure – initial pressure, where the initial pressure is the hydrostatic gradient times the depth, and the fracture pressure is the fracture gradient times the depth. The panel shows the initial pressure, the fracture pressure and the resulting maximum buildup under the inputs.

Table 3. Pressure-limit inputs.

Input	Meaning	Typical value
Hydrostatic gradient	Initial formation-pressure gradient.	0.0098 to 0.0115 MPa/m
Fracture gradient	Gradient of the pressure at which the caprock or formation would fracture.	0.015 to 0.020 MPa/m
Safety factor	Fraction of the fracture pressure that you allow to be reached.	0.8 to 0.95
Interference threshold	A small pressure rise used only to detect where and when a well's influence arrives. It is not a pass/fail limit.	0.01 to 0.1 MPa

Important: wells pass or fail against the max allowable buildup only. The interference threshold is used for the dashed map contour, the arrival-time table and the monitoring-point check.

4.4 CO2 saturation inputs

Table 4. Relative-permeability inputs used for the CO2 saturation map.

Input	Meaning	Default
Residual brine Swr	Brine saturation that cannot be displaced. The maximum CO2 saturation is $1 - Sw_r$.	0.2
Max CO2 rel. perm. krg	Relative permeability to CO2 at maximum CO2 saturation.	0.4
Corey exponent, brine	Shape of the brine relative-permeability curve.	4
Corey exponent, CO2	Shape of the CO2 relative-permeability curve.	2
CO2 viscosity	Viscosity of CO2 at reservoir conditions.	0.06 mPa-s

The defaults are illustrative; replace them with values for your formation (for example from core measurements). The temperature, salinity, brine density and Φ_w listed in Table 2 also feed the dry-zone radius shown with the saturation results.

4.5 Well skin

Skin describes extra pressure loss (positive skin, formation damage) or gain (negative skin, stimulation) near a well. Skin is set per well in the Skin column of the wells table:

- If you have a measured skin value, type it in the well's Skin cell.
- If you leave the cell empty, the application calculates the skin of that well with the Hawkins formula, $s = (k/k_s - 1) \ln(r_s/r_w)$, from the damaged-zone permeability k_s and radius r_s in the Well skin section. The calculated value is displayed in grey inside the empty cell.
- You can mix both approaches: some wells with typed skin, the others calculated.

Skin raises the pressure at the injector itself while it injects; it does not change the pressure felt at other wells.

WELL SKIN

Skin is set per well in the table below. If you have a measured skin, type it in that well's Skin cell. If you leave the cell blank, the app calculates it from the damaged zone described here.

Damaged-zone perm. k_s

50

mD ▾

Damaged-zone radius r_s

1.5

m ▾

Calculated skin: $s = (k/k_s - 1) \cdot \ln(r_s/r_w) = 5.42$ ($k_s < k$ is damage, $k_s > k$ is stimulation).

BOUNDARY CONDITION

Type

None (infinite) ▾

Line

$x = \text{const}$ ▾

Position

10000

m ▾

The Compare boundaries tab runs all three conditions side by side using this line.

Figure 3. The Well skin and Boundary condition sections.

4.6 Boundary condition

Choose how the aquifer behaves at a straight outer boundary:

- None (infinite): the aquifer extends indefinitely; pressure spreads without meeting an edge.
- Sealing fault (no-flow): a barrier that reflects the pressure; buildup is higher than in the infinite case.
- Constant pressure: an open edge that holds the pressure; buildup is lower than in the infinite case.

For the two bounded cases give the boundary as a line, $x = \text{constant}$ or $y = \text{constant}$ (or longitude or latitude when real-world coordinates are used), and its position. All wells and monitoring points must lie on the same side. The Compare boundaries tab always shows all three cases side by side using the line you entered here.

4.7 Injection wells

INJECTION WELLS

Import CSV
Export

Location input

Local x, y

Name	x m	y m	Rate Mt/yr	Start	End	Skin		
INJ-1	0	0	1	0	25	5.42	+	×
INJ-2	4000	1000	1	2	25	5.42	+	×
INJ-3	1500	5000	0.8	5	25	5.42	+	×
INJ-4	-3500	3000	0.5	8	20	5.42	+	×

+ Add well

Rate: use + on a well to add a rate change (a new rate from a later year; the last rate stays in force until End, then the well is shut in). Skin: type a value if you have it; leave it blank and the app calculates it (grey number = calculated value). CSV columns (metres or degrees, Mt/yr): name, x_m, y_m or lon_deg, lat_deg, rate_Mtpa, start_yr, end_yr, skin (optional), changes (optional, e.g. 8:0.5|15:0.2). Excel: save as CSV.

Figure 4. The Injection wells section.

Table 5. Columns of the wells table.

Column	Meaning
Name	Label shown on charts, tables and reports. Type any name you like; it updates everywhere at once, without a new RUN. You can also rename a well directly in the plume table on the CO2 saturation tab.
x, y (or Lon, Lat)	Well location. Choose the units with the selector in the column header.
Rate	CO2 injection rate of the first period (default unit Mt/yr). Change the unit in the column header.
Start, End	Year injection starts and stops. After the end year the well is shut in and its pressure recovers.
Skin	Typed skin value, or empty to calculate it (Section 4.5). Adds a rate change to the well (Section 4.7.1).
×	Removes the well.

Use + Add well to add a well. Import CSV loads a table of wells from a file and Export saves the current table (Section 9).

4.7.1 Rate changes (variable injection rate)

A well can inject at more than one rate. Click + at the end of a well's row to add a rate change: a new row appears below the well with the year from which the new rate applies and the new rate. Add as many changes as you need. Each rate stays in force until the next change, the last rate stays in force until the End year, and the well is then shut in. The pressure effect of every change is added by superposition in time, so a rate reduction partly offsets the earlier buildup and the pressure recovers after shut-in. Skin acts on the rate in force, and the CO2 plume depends on the total volume injected so far.

4.8 Real-world coordinates (longitude and latitude)

If your wells are known as longitude and latitude, set Location input to “Longitude / latitude (real-world)”. The x and y columns are replaced by Lon (°) and Lat (°); the same applies to the monitoring points. Enter WGS84 decimal degrees, with east and north positive.

- When you first switch, the existing wells are converted to example coordinates near Houston. Replace them with your own.
- The application converts the coordinates to metres with an azimuthal equidistant projection centred on the centroid of all your locations. Over a field up to about 100 km across the distance error is far below 0.5 %.
- The boundary line is then entered as a longitude (north–south line) or a latitude (east–west line).
- Maps are labelled with longitude and latitude, and the report states the projection used.
- Latitude must lie between -90° and 90° and longitude between -180° and 180° ; otherwise an error message appears.

INJECTION WELLS

Import CSV

Export

Location input

Longitude / latitude (real-world)

Enter WGS84 decimal degrees (east and north positive). Calculations use a local projection centred on the centroid of your locations (29.7712°, -95.3491°), and the pressure map is labelled in longitude and latitude. The coordinates shown are an example — replace them with your own.

Name	Lon (°)	Lat (°)	Rate Mt/yr	Start	End	Skin		
INJ-1	-95.36	29.76	1	0	25	5.42	+	×
INJ-2	-95.32	29.76	1	2	25	5.42	+	×
INJ-3	-95.35	29.80	0.8	5	25	5.42	+	×
INJ-4	-95.40	29.78	0.5	8	20	5.42	+	×

+ Add well

Rate: use + on a well to add a rate change (a new rate from a later year; the last rate stays in force until End, then the well is shut in). Skin: type a value if you have it; leave it blank and the app calculates it (grey number = calculated value). CSV columns (metres or degrees, Mt/yr): name, x_m, y_m or lon_deg, lat_deg, rate_Mtpa, start_yr, end_yr, skin (optional), changes (optional, e.g. 8:0.5|15:0.2). Excel: save as CSV.

Figure 5. The wells table in longitude / latitude mode.

4.9 Monitoring points

Monitoring points are locations where nothing is injected but pressure is of interest, for example a legacy well, a fault or the edge of a permit area. Each point appears on the maps, as a dashed curve in the time series, as a target in the arrival-time table and in the monitoring-point check on the Limit check tab. Use + Add point to add more.

4.10 Report details

Project name and Author are optional and are printed on the title block of the PDF and Word reports.

5. Running the analysis

- Press **RUN** analysis. The inputs at that moment are used for all results, tables, figures and reports.
- If you change any input afterwards, the status text next to the button and a yellow banner above the results say that the inputs have changed; press **RUN** again to refresh.
- The Evaluation time slider, the Pressure unit selector, Map padding and the tabs do not require a new **RUN**, because they only change what is displayed.
- Warnings appear above the results when something is inconsistent, for example a well that lies on the boundary, wells on both sides of the boundary, two wells at the same location, an end year that is not after the start year, or a pressure limit that is below the initial pressure.

6. Reading the results

6.1 Status cards

Three cards sit above the tabs. Peak buildup is the highest wellbore pressure buildup of any well over the whole analysis horizon and names the well and the time. Allowable buildup shows the limit that is being applied. Status reports Within limit or Limit exceeded, and says by what factor all injection rates could be scaled before the worst well reaches the limit. Because the model is linear in rate, that factor is exact within the model.

6.2 CO2 saturation tab

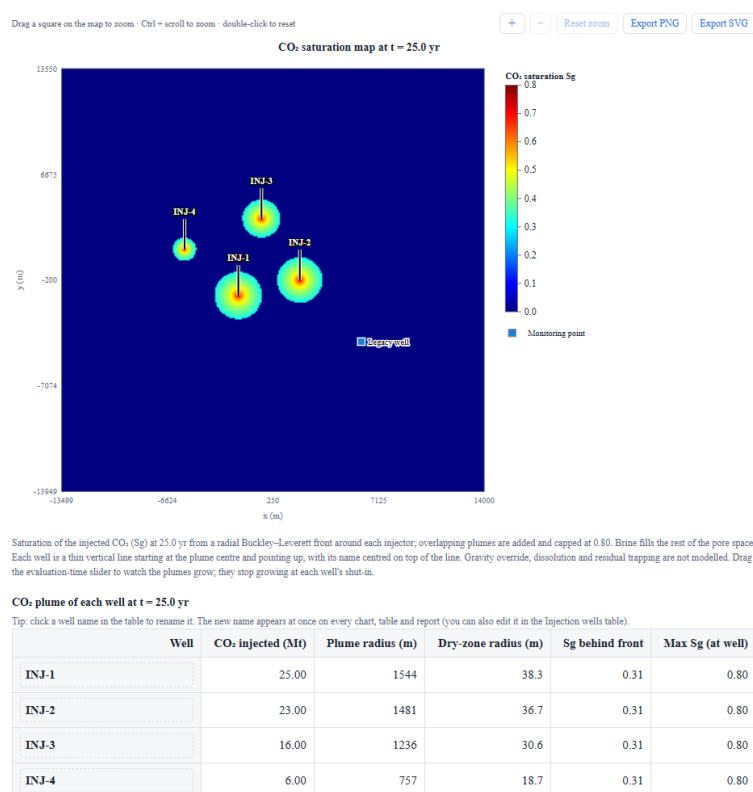


Figure 6. CO₂ saturation map with the plume of each injector and the table of plume radii.

The map shows the saturation of injected CO₂ (S_g) at the evaluation time, with a labelled colour scale from 0 up to the maximum saturation. Each injector creates a roughly circular plume; the well is drawn as a thin vertical line that starts at the plume centre and points upward, with its name centred on top of the line (click a name in the table below the map to rename it); the plume edge is where the colour returns to the dark-blue brine background. Plumes of neighbouring wells are added where they overlap. Below the map, a table lists for each well the mass injected so far, the plume radius (the CO₂ front), the dry-zone radius (the evaporation front next to the well, where the brine has been dried out), the saturation just behind the front and the maximum saturation at the well. Drag the Evaluation time slider to watch the plumes grow; each plume stops growing when its well is shut in.

6.3 Pressure map tab

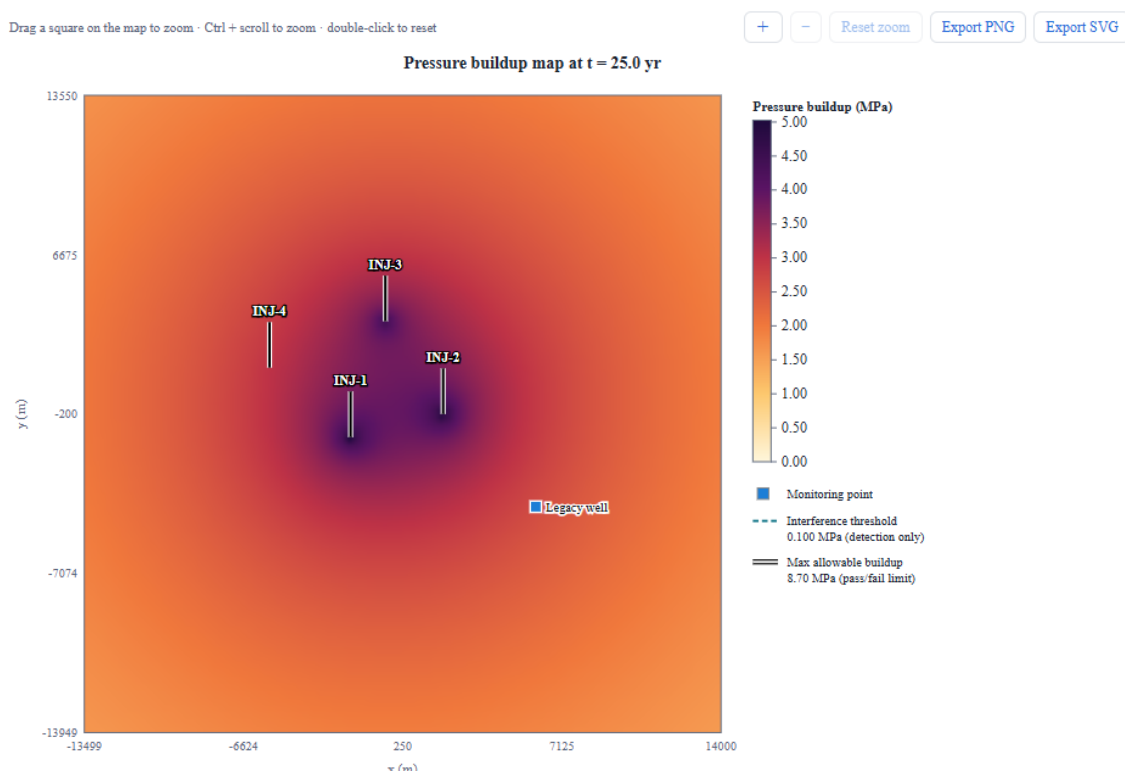


Figure 7. Pressure buildup map with the interference-threshold and allowable-buildup contours.

The map shows the total pressure buildup caused by all wells at the evaluation time, with a labelled colour scale. The dashed teal contour is the interference threshold (detection only). The solid white-and-black contour is the max allowable buildup (the pass/fail limit); it appears only near wells that approach the limit. Each well is drawn as a thin vertical line with its name on top, as on the saturation map. Use Map padding to enlarge or shrink the area drawn around the wells.

Above the pressure map, the style bar controls how the map is coloured and annotated. The choices apply to the picture, to the PNG and SVG exports and to the report figure.

Table 5a. Map style options (pressure map).

Option	What it does
Colour scale	Sunset (default), Jet, Turbo, Viridis, Plasma, Blues, Cool–warm (diverging) or Greyscale. The colour bar and its numbers follow the choice.
Fill	Smooth colours, Colour bands (the pressure is grouped into the chosen number of classes with a stepped colour bar) or No fill (white map). No fill together with Contour lines gives a classic contour plot in which every line is coloured by its pressure value and the colour bar is marked at the contour levels.

Option	What it does
Reverse colours	Flips the colour scale so that high pressure takes the colour of low pressure and vice versa.
Contour lines	Draws iso-pressure lines at round values (5, 8, 10, 15, 20, 30 or 40 levels) with the value written on each line, only within the chosen Contour reach of the wells (Close to the wells, Around the wells, Wide, Half the map or Whole map). The levels span the pressures found inside that reach, and the colour bar is marked and labelled at the same levels, so the legend and the lines always agree. Labels turns the numbers off.
Streamlines	Draws the flow paths of the brine (down the pressure gradient, away from the injectors), with an arrow showing the direction. They bend around the wells and are pushed away from a sealing boundary.
Reset style	Returns to the default colours.

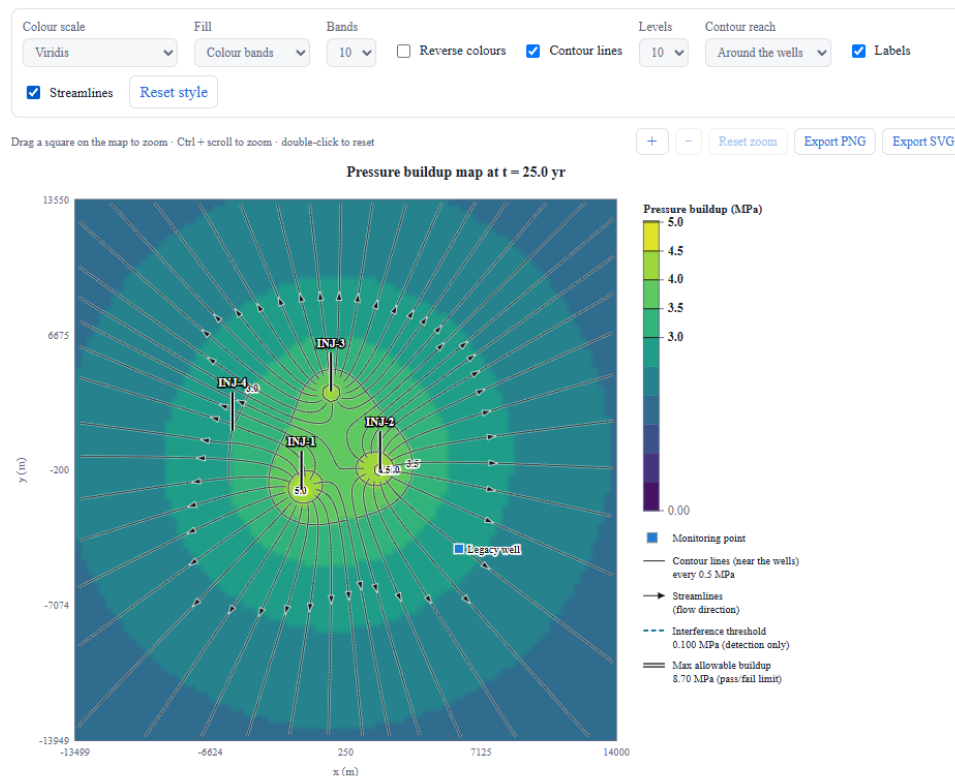


Figure 7a. The pressure map with the Viridis scale, colour bands, contour lines and streamlines.

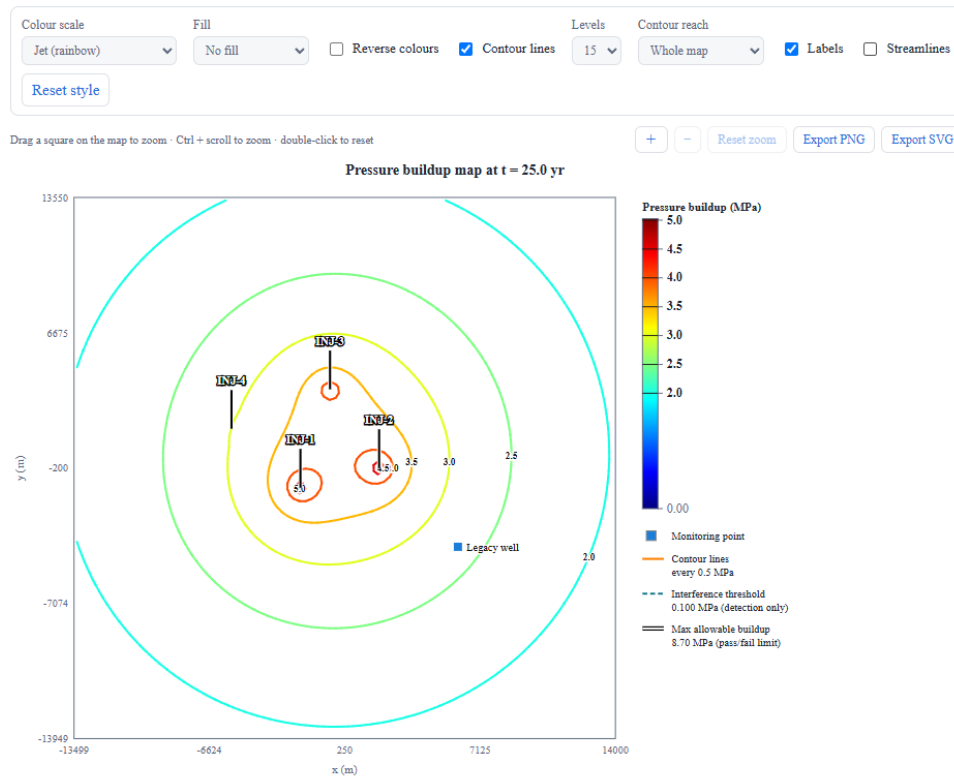


Figure 7b. A contour plot (No fill, Jet scale, 15 levels, whole map): each line is coloured by its pressure value.

6.4 Time series tab



Figure 8. Time series of pressure at every well and monitoring point, with the field maximum and average.

The Show selector chooses what is plotted: total buildup (ΔP) at each wellbore including skin; bottomhole pressure (initial pressure plus buildup), with the maximum allowable bottomhole pressure; or interference only, which removes each well's own contribution so that only the effect of the other wells remains. Dashed lines are monitoring points. The black line is the field maximum (the highest pressure of any well at each time) and the grey dash-dot line is the field average.

Under the chart, the section “What drives the field maximum” stacks the contributions of each injector and of skin at the well that has the highest pressure at each time, and a table gives the breakdown at the moment of the field peak.

6.5 Interference matrix tab

Source ↓ / Receiver →	INJ-1	INJ-2	INJ-3	INJ-4	Felt elsewhere
INJ-1	6.187	1.179	1.084	1.134	3.396
INJ-2	1.162	6.182	1.108	0.907	3.177
INJ-3	0.832	0.864	4.965	0.822	2.518
INJ-4	0.123	0.122	0.123	0.037	0.368
Total at receiver	8.304	8.347	7.279	2.900	

Arrival time of ≥ 0.100 MPa (years)

First time a source well alone raises pressure at the target by the threshold. “–” means it does not within the injection period/horizon.

Source ↓ / Target →	INJ-1	INJ-2	INJ-3	INJ-4	Legacy well
INJ-1	–	0.07	0.12	0.09	0.32
INJ-2	2.07	–	2.10	2.26	2.14
INJ-3	5.14	5.12	–	5.15	5.56
INJ-4	8.19	8.54	8.26	–	9.51

Figure 9. Interference matrix and arrival-time table.

The first table has one row per injecting well and one column per receiving well. Each cell is the pressure that the row well contributes at the column well at the evaluation time; the diagonal cells are each well's own buildup including skin. The last column gives the total felt at other wells, and the last row the total at each receiver. The second table gives the first time (years) that a single source well alone raises the pressure at each target (wells and monitoring points) by the interference threshold; a dash means it does not happen during the injection period.

6.6 Limit check tab

Well	Peak buildup (MPa)	at (yr)	of which self	of which skin	of which interference	Bottomhole P (MPa)	Margin (MPa)	Status
INJ-1	8.57	20.0	3.98	2.20	2.39	29.57	0.13	OK
INJ-2	8.51	20.0	3.97	2.20	2.34	29.51	0.19	OK
INJ-3	7.51	20.0	3.19	1.76	2.56	28.51	1.19	OK
INJ-4	5.84	20.0	2.02	1.10	2.72	26.84	2.86	OK

Interference share at the worst well: 28% of its peak buildup. Because the model is linear in rate, scaling every rate by $\times 1.02$ brings the worst well exactly to the limit.


Monitoring points vs the interference threshold (0.100 MPa)

Point	Peak buildup (MPa)	at (yr)	Threshold reached?	First reached (yr)
Legacy well	2.683	20.3	Yes	0.50

Figure 10. Limit check for each well and the monitoring-point table.

Each well is listed with its peak buildup, the time of the peak and how that peak splits into the well's own response, skin and interference from the other wells. The bottomhole pressure, the margin to the allowable buildup and an OK or Exceeds status follow. Below, the monitoring-point table shows the peak buildup at each monitoring point and whether, and when, it first reaches the interference threshold.

6.7 Compare boundaries tab

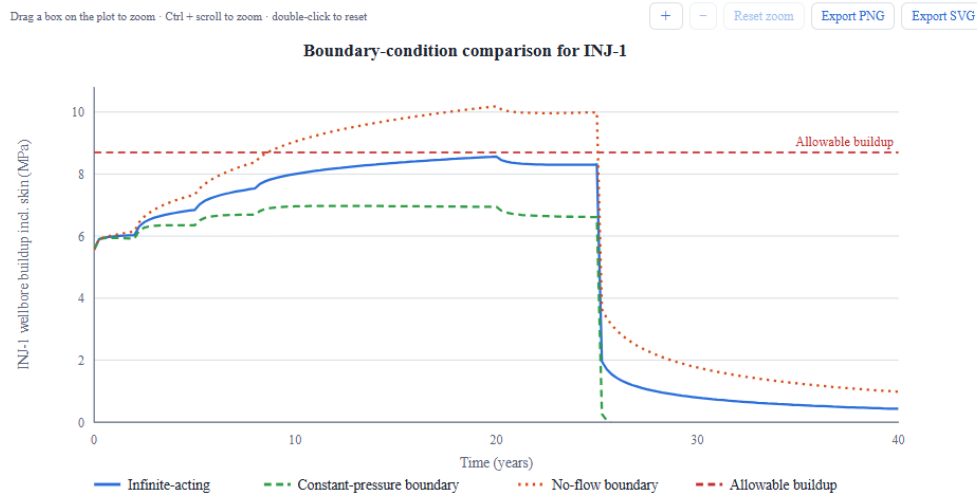

Peak wellbore buildup (MPa), skin included

Well	Infinite-acting	Constant-pressure boundary	No-flow boundary
INJ-1	8.57	6.97	10.19
INJ-2	8.51	6.64	10.44
INJ-3	7.51	5.85	9.23
INJ-4	5.84	4.46	7.26
Allowed	8.70	8.70	8.70

Figure 11. Wellbore buildup of one well for the three boundary conditions.

The chart plots the buildup of the well you select for an infinite aquifer, a constant-pressure boundary and a no-flow boundary, together with the allowable buildup. The table gives the peak buildup of every well for each case; red cells exceed the limit. The no-flow case is the most conservative and the constant-pressure case the least.

7. Working with the charts

Every chart has a title, a legend and a toolbar.

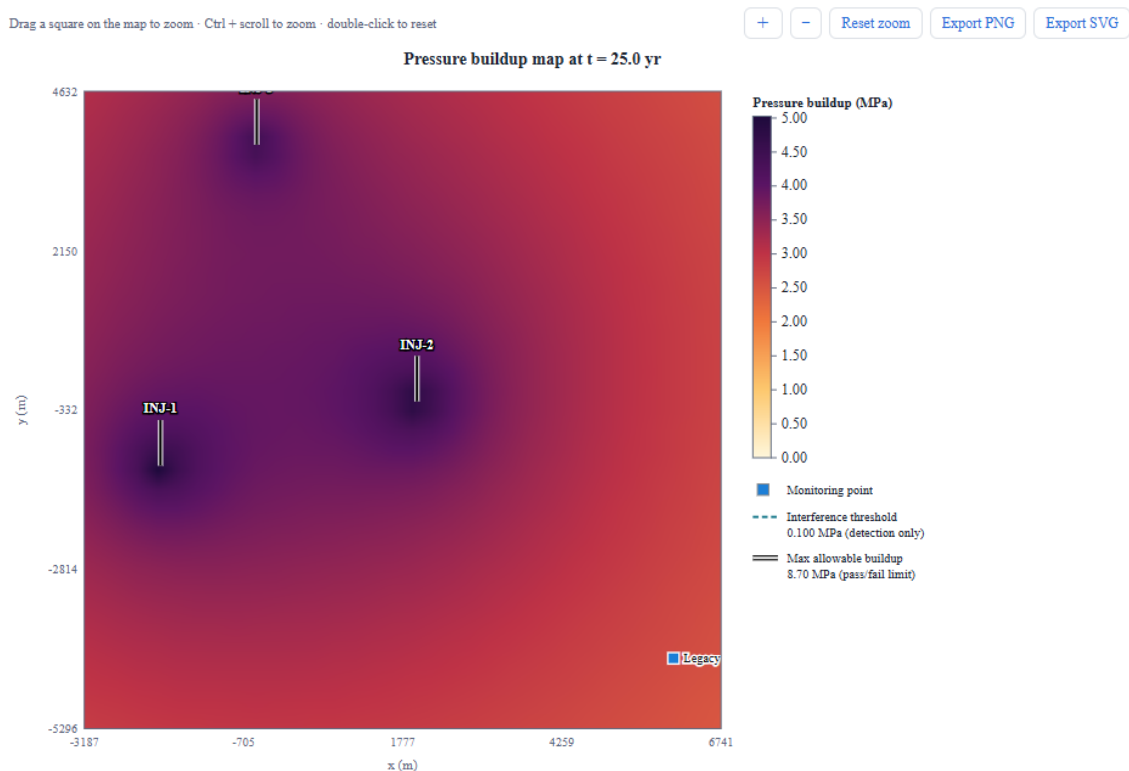


Figure 12. A zoomed region of a map. Zoom controls are above the chart.

Table 6. Chart controls.

Action	How
Zoom into a region	Drag a box on the plot. On maps the box is made square so the scale stays true.
Zoom about a point	Hold Ctrl (⌘ on a Mac) and scroll the mouse wheel, or pinch on a trackpad.
Zoom in or out in steps	Use the + and – buttons.
Return to the full view	Click Reset zoom or double-click the chart. Zoom also resets after a new RUN.
Save the chart as an image	Click Export PNG (raster) or Export SVG (vector). The image has a white background, a title and a legend, and shows the region currently displayed.

8. Exports

8.1 Results CSV

Export results CSV saves the interference matrix at the evaluation time, the time series that is currently shown, and the peak check of every well, in the selected pressure unit.

8.2 Report (PDF and Word)

Report (PDF) and Report (Word) generate a publication-style document: title block, abstract, introduction, methodology with numbered equations, input tables, results with captioned figures and tables (CO₂ saturation, pressure, interference, boundary sensitivity, field-maximum drivers), a discussion written from your numbers, limitations and references. The report reflects the inputs of the last run and the units and evaluation time currently selected. The Word version can be edited; the PDF is ready to share.

9. File formats

The wells table can be saved with Export and loaded again with Import CSV. Excel files should be saved as CSV first. Columns are separated by commas, semicolons or tabs, and the header row is optional.

Table 7. Wells CSV columns.

Mode	Columns (in order)
Local coordinates	name, x_m, y_m, rate_Mtpa, start_yr, end_yr, skin (optional), changes (optional)
Longitude / latitude	name, lon_deg, lat_deg, rate_Mtpa, start_yr, end_yr, skin (optional), changes (optional)

An empty skin means “calculate it”. The optional changes column lists rate changes as year:rate pairs separated by |, for example 8:0.5|15:0.2 (the rate becomes 0.5 Mt/yr from year 8 and 0.2 Mt/yr from year 15). A header whose second column contains “lon” switches the application to longitude / latitude mode on import.

Example (local coordinates): INJ-1,0,0,1,0,25, (skin left empty) and INJ-2,4000,1000,1,2,25,4.5

10. Model summary and limitations

Pressure buildup is calculated from the Theis line-source solution for each well, added together in space and time (one term for every rate change of every well, the shut-in being a change to zero rate), with a straight boundary modelled with image wells. The wellbore pressure adds the skin term. CO₂ saturation follows from the radial Buckley–Leverett (Welge) solution with Corey relative permeabilities. The report contains the equations.

- Homogeneous, isotropic, confined aquifer of constant thickness; no leakage through the caprock.
- Brine-equivalent flow for the pressure calculation: CO₂ is converted to reservoir volume with the CO₂ density and brine viscosity is used everywhere. This overstates near-well pressure but is reasonable for interference between wells.
- The CO₂ saturation map neglects gravity override, dissolution, capillary pressure and residual trapping, and does not feel the aquifer boundary. The dry-zone radius is a screening estimate (water fugacity coefficient set by you, default 1) evaluated at the initial reservoir pressure.
- The three-zone pressure model treats the dry and gas fronts as sharp and uses the average saturation behind the front for the two-phase zone; with rate changes each period uses its own rate for the front positions. The single-phase option ignores the CO₂ zones altogether.
- Skin is a constant factor applied only at the injector while it injects.
- Only one straight boundary can be modelled. Multiple faults, heterogeneity, brine production and geomechanical effects are not included.
- Results are for screening and ranking; confirm with numerical simulation before making decisions.

11. Troubleshooting

Table 8. Common questions.

Problem	Likely cause	What to do
“No results yet”	The analysis has not been run.	Press ► RUN analysis.
Results do not change when I edit an input	Results update only on RUN.	Press RUN; watch for the yellow banner.
Warning: wells on both sides of the boundary	The boundary line passes between wells or points.	Move the boundary so that all locations are on one side.
The allowable buildup is	Safety-factored fracture pressure is below the	Check depth and the two gradients, and the

Problem	Likely cause	What to do
zero or negative	initial pressure.	safety factor.
Wells import fails	A row has fewer than six columns or a non-numeric value.	Check the column order in Section 9; the message names the row.
Longitude / latitude error	Latitude is outside $\pm 90^\circ$ or longitude outside $\pm 180^\circ$.	Correct the values; check that longitude and latitude are not swapped.
The plume looks small	Only injected mass inside the front is shown; there is no gravity override.	Check porosity, thickness, CO2 density and relative-permeability inputs.
A chart is too small to read	The browser window is narrow.	Widen the window or use the zoom controls.
Exports do nothing	The browser blocked the download.	Allow downloads for the site and try again.

12. Glossary

Table 9. Terms used in the application.

Term	Meaning
Buildup	Rise of the formation pressure above its initial value because of injection.
Bottomhole pressure (BHP)	Pressure at the well in the injection interval: initial pressure plus buildup.
Interference	Pressure rise at a well that is caused by other wells.
Skin	Dimensionless factor for near-well damage (positive) or stimulation (negative).
Plume	The region occupied by injected CO2.
Sg	CO2 saturation: the fraction of the pore volume filled with CO2.
Allowable buildup	Safety factor $\times$ fracture pressure – initial pressure; the pass/fail limit for wells.
Interference threshold	Small pressure rise used to detect where and when a well's influence arrives; not a pass/fail limit.
Image well	A mirrored well used to represent a straight boundary.
Shut-in	End of injection at a well; its pressure then recovers.

Appendix A. Default example data

Table 10. Wells in the built-in example.

Well	x (m)	y (m)	Rate (Mt/yr)	Start (yr)	End (yr)	Skin
INJ-1	0	0	1.0	0	25	calculated
INJ-2	4000	1000	1.0	2	25	calculated
INJ-3	1500	5000	0.8	5	25	calculated
INJ-4	-3500	3000	0.5	8	20	calculated

Monitoring point “Legacy well” at $x = 8000$ m, $y = -3000$ m. Aquifer: 150 mD, 60 m, porosity 0.2, depth 2000 m; skin from a damaged zone of 50 mD and 1.5 m radius ($s = 5.42$).

References

- Buckley, S.E., Leverett, M.C., 1942. Mechanism of fluid displacement in sands. Transactions of the AIME, 146, 107–116.
- Earlougher, R.C., Jr., 1977. Advances in Well Test Analysis. SPE Monograph Series, Vol. 5. Society of Petroleum Engineers, Richardson, TX.
- Hawkins, M.F., Jr., 1956. A note on the skin effect. Transactions of the AIME, 207, 356–357.

Matthews, C.S., Russell, D.G., 1967. Pressure Buildup and Flow Tests in Wells. SPE Monograph Series, Vol. 1. Society of Petroleum Engineers, New York.

Theis, C.V., 1935. The relation between the lowering of the piezometric surface and the rate and duration of discharge of a well using ground-water storage. Transactions of the American Geophysical Union, 16(2), 519–524.

Welge, H.J., 1952. A simplified method for computing oil recovery by gas or water drive. Transactions of the AIME, 195, 91–98.