


Behind the Wheel

The vehicle inspection, basic control skills and road test — what each part is, what to say, how to drive it, and what fails you.

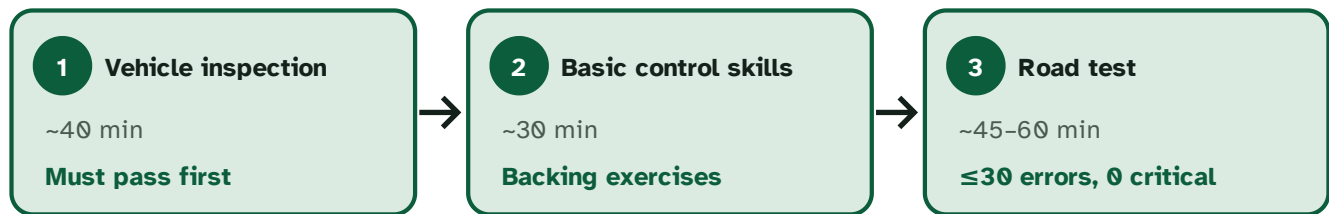

Fail one part → the test ends; the rest is rescheduled. 3 tries in all for the three tests.

Written for a **Class A** tractor-semitrailer with air brakes (your General Knowledge + Combination path).
Class B/C and bus notes are included where they differ.

Built from the California Commercial Driver Handbook DL 650 (REV. 12/2019) Sections 11–13, plus Sections 1, 2, 5 and 6; page numbers like “p. 11–4” point to it. All drawings are original, made for this guide; they are simplified, so learn the real parts on your own truck. Boxes marked “Practice tip” are common driving-school advice, not handbook rules. Not affiliated with the California DMV. Rules and test procedures change — confirm with DMV and your training provider before test day.

Contents

Part 1 — How the skills test day works	4
Rules for all three tests	4
Before you book: permit, training, vehicle	4
Automatic fails — know these cold	5
Part 2 — Test 1: Vehicle inspection	6
Know the parts: the rig from the side	6
Your walk-around route	7
1 · Engine compartment	8
2 · Engine start and in-cab checks	9
3 · Air brake checks (where people fail)	10
4 · Steering	12
5 · Suspension	13
6 · Brakes at each wheel	14
7 · Wheels and tires	15
8 · Side of the vehicle, under, and rear	16
9 · Coupling system (on every Class A test)	17
10 · Trailer	18
Part 3 — Test 2: Basic control skills	19
How it's scored	19
Steering when backing a trailer	20
Straight line backing	21
Offset back / right	21
Offset back / left	22
Parallel park — driver side	22
Parallel park — conventional	23
Alley dock	23
Part 4 — Test 3: Road test	25
Turns	25

Intersections, city streets, lane changes, expressway	26
Stop/start (roadside stop)	27
Curves, railroad crossings, bridges and signs	27
Scored the whole drive	28
Part 5 — Cards to practice with	29
Air brake check card	29
One-page inspection checklist	29
Backing practice log	30
Day-before checklist	30

How the skills test day works

Three tests, always in this order. You bring the vehicle. Everything is in English, with no interpreter.

	1. Vehicle inspection	2. Basic control skills	3. Road test
About	~40 min	~30 min	~45–60 min
What you do	Walk around the vehicle: point to or touch each part, name it, and say what you check and why. Start the engine, do the in-cab and air-brake checks.	Backing exercises inside cones and lines (a set chosen from 6).	Drive a set route in traffic following the examiner's directions.
Scored on	Items named and explained; brake checks done right	Encroachments, pull-ups, looks, final position	Errors (max 30) and critical driving errors (0 allowed)
Page	11-1 – 11-11	12-1 – 12-4	13-1 – 13-4

Rules for all three tests

- **Pass the vehicle inspection first.** Fail it, and the other two tests are postponed (pp. 11-1, 11-11).
- **3 tries in all** to pass the three skills tests on one application (p. 11-1). A failed basic control or road test means a retest fee when you return (p. 1-4).
- **English only, no interpreters.** Speaking a language other than English, or not understanding English instructions: verbal warnings the first **2** times; the **3rd** time that day is an **automatic failure** (pp. 11-1, 12-1, 13-1).
- **No aids.** The only aid allowed on the inspection is the handbook's Section 11 inspection guide, and you may not write on it (p. 11-1). No phones, no helpers, no marks on the vehicle or curbs (p. 1-10).
- **No labels on parts.** A vehicle with parts marked or labeled cannot be used (p. 11-1).
- **Brake lights, 4-way flashers, turn signals and horn must work** — if not, the tests are postponed (p. 11-1).
- **No recording.** Any dash cam or recording device must be off or disabled during all skills tests; if it can't be turned off, block it (pp. 1-10 – 1-11).
- **Backup cameras and self-parking** cannot be the only thing you use (pp. 12-1, 13-1).

Before you book: permit, training, vehicle

Need	Detail
Commercial learner's permit (CLP)	Held at least 14 days after it was first issued (p. 1-2). Parts you pass count only within the CLP's first 180 days; after a renewal you retake all parts (p. 1-4).
Entry-level driver training (ELDT)	Federal rule for a first Class A or B CDL: finish theory and behind-the-wheel training with a provider listed on FMCSA's Training Provider Registry before the skills test. <i>Not in the 2019 handbook — confirm with DMV and your school.</i>

Need	Detail
Written tests	Passed before any skills test (p. 1-11): General Knowledge, Combination, and Air Brakes for an air-brake truck.
The vehicle	The type you want to be licensed for (p. 1-11), in safe working order, with no labels on parts. You test in it for all three tests.
Riding with you	When you practice on a CLP, a CDL holder with the right class and endorsements must ride with you (p. 1-2).

Your test vehicle sets your restrictions

If you test in...	You get restriction	Meaning
a vehicle with an automatic transmission	E	no manual-transmission CMV
a vehicle without air brakes (or you didn't take or failed the air brake knowledge test)	L	no air-brake CMV
a vehicle with air-over-hydraulic brakes	Z	no full air-brake CMV
a combination joined by a pintle hook or other non-fifth-wheel hitch	O	no tractor-trailer

From pp. 1-6 – 1-7 (restriction codes). Testing in a manual-transmission tractor-semitrailer with full air brakes avoids all four.

Automatic fails – know these cold

Test	Automatic failure
All three	3rd language warning on the same day
Inspection	Air brake checks not done correctly (each one done AND the numbers said) — fails the whole inspection (p. 11-4)
Inspection	Hydraulic brakes: not doing BOTH parts of the check (p. 11-4)
Basic control	Not securing the vehicle (Neutral + parking brake) or not getting out safely for a look — <i>may</i> be an automatic failure (p. 12-1)
Basic control	Refusing an exercise or not finishing it as told — <i>may</i> be an automatic failure (p. 12-1)
Road test	Any critical driving error, or more than 30 errors. You must also finish with no accident and no moving violation (p. 13-1).

PART 2


Test 1: Vehicle inspection

For each item: **point to or touch it, name it, and say what you are checking.** A check you do but don't say may not earn credit.

	Class A	Class B or C
Test versions	1 of 4 , all equal; you learn which just before you start	1 of 3
Always included	Engine start, in-cab inspection, coupling system	Engine start, in-cab, plus special features (e.g. bus)
How much	The whole vehicle or only part — the examiner tells you	Same

p. 11-11. Because you don't know which part you'll get, learn all of it.

Know the parts: the rig from the side

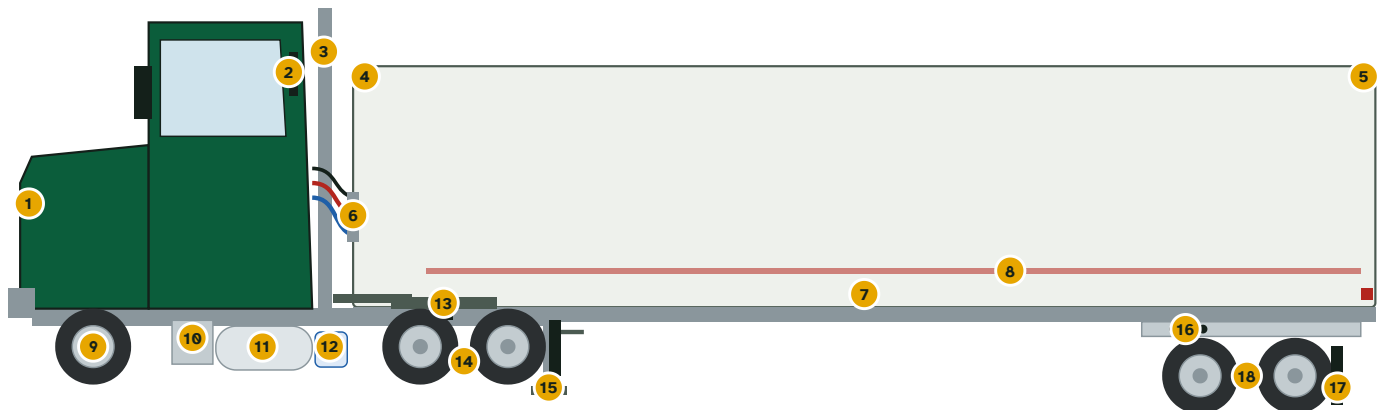


WHAT EACH NUMBER IS

- | | |
|---|---|
| 1. Headlights, turn signals | 10. Steps, battery box |
| 2. Mirrors | 11. Fuel tank + cap |
| 3. Exhaust | 12. DEF tank (if equipped) |
| 4. Clearance light: amber at front | 13. Fifth wheel + kingpin |
| 5. Red at rear | 14. Drive axles: tires 2/32 in |
| 6. Glad hands + electrical plug | 15. Landing gear, crank handle |
| 7. Side marker (amber) | 16. Tandem slider + locking pins |
| 8. Reflective tape | 17. Splash guards |
| 9. Steering axle: tires 4/32 in | 18. Trailer axles |

Driver (left) side of a tractor-semitrailer. Lights and reflectors: **amber** at the front and sides, **red** at the rear (p. 11-3).

Your walk-around route

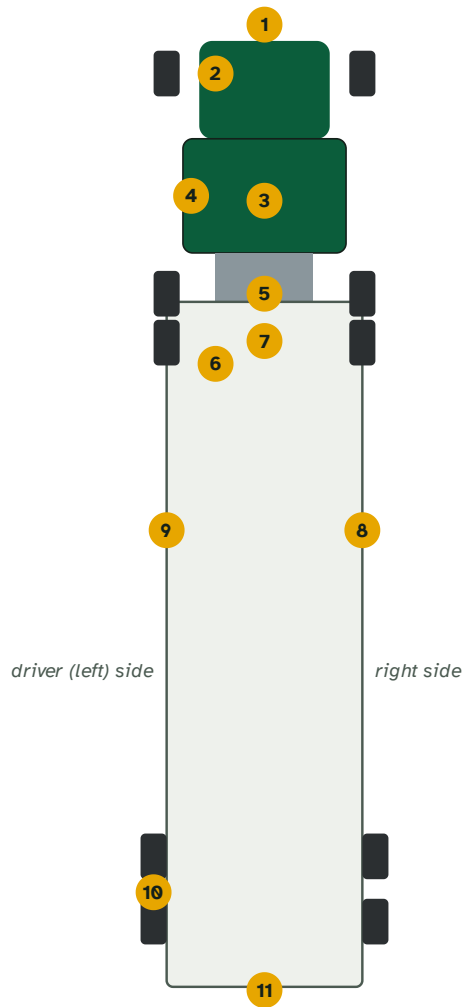

Use the **same order every time**. A fixed order helps you remember every step under test pressure (p. 11-1).

This order follows the areas of the handbook's memory aid page (the page after 11-11). It's one sensible route, not the only allowed one.

As you walk up (engine off), say:


- General condition: no damage, **not leaning** to one side.
- Under the vehicle: no fresh **oil, coolant, grease or fuel** leaks.
- Around it: no hazards — people, vehicles, objects, **low wires or limbs**.
- **Parking brakes set and/or wheels chocked.**

p. 11-1

ORDER

- | | |
|--|--|
| 1. Front of vehicle, lights, engine compartment, steering | 7. Coupling devices (tractor + trailer) |
| 2. Steering axle: suspension, brakes, tires | 8. Side of tractor + trailer, lights, reflectors |
| 3. Engine start + in-cab checks (air brake checks) | 9. Trailer front, side, frame, landing gear, tandem release |
| 4. Driver door, fuel area | 10. Trailer axles: suspension, brakes, tires |
| 5. Under vehicle: drive shaft, exhaust, frame | 11. Rear of trailer, lights, reflectors |
| 6. Drive axles: suspension, brakes, tires | |

1 • Engine compartment

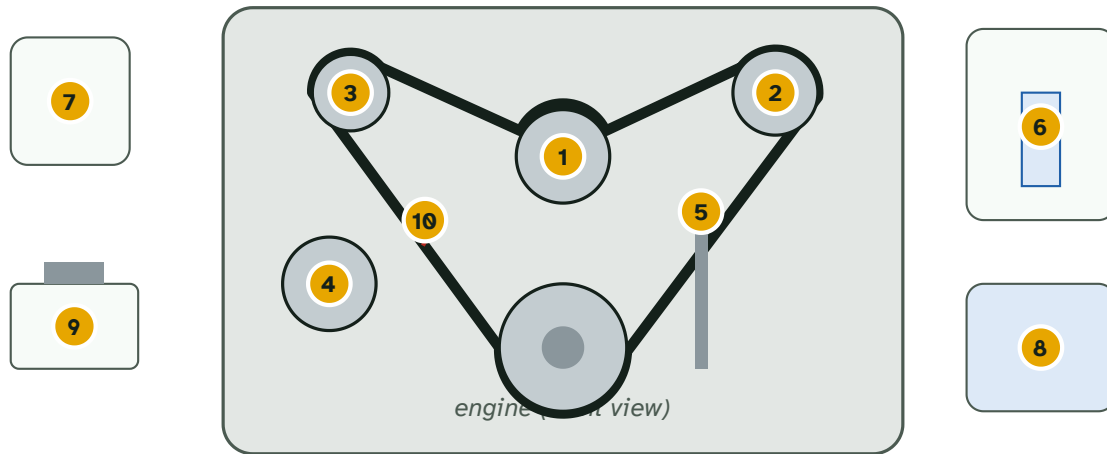

WHAT EACH NUMBER IS

1. Water pump
2. Alternator (wires fastened)
3. Power steering pump
4. Air compressor
5. Oil dipstick
6. Coolant sight glass
7. Power steering fluid
8. Washer fluid, cap on
9. Brake master cylinder (hydraulic)
10. Belt: $\frac{1}{2}$ – $\frac{3}{4}$ in play at the center


Layouts differ by engine. Some parts (often the air compressor) are gear-driven, not belt-driven: tell the examiner which, and check that it works, is mounted securely and not leaking (p. 11-2).

Point to / touch	Say out loud
Ground, engine, transmission	No puddles on the ground, no drips under the engine or transmission. Hoses in good condition, not leaking.
Water pump • alternator • air compressor	Name each. Mounted securely, not leaking. Alternator wires fastened.
Oil dipstick	Engine off. This is the dipstick; the level is in the safe range, above the refill mark.
Coolant sight glass	Level shows in the sight glass. (No sight glass: describe what you'd look for with the radiator cap off.)
Power steering fluid	Dipstick or sight glass: above the refill mark.
Washer fluid	Level OK, cap secure.
Each belt	Snug: $\frac{1}{2}$ to $\frac{3}{4}$ inch of play at the center of the belt; no cracks, frays, loose fibers or wear.
Brake master cylinder (hydraulic brakes)	Securely attached, not leaking; fluid between the add and full marks.

p. 11-2. Example: you press the middle of the alternator belt and it moves about $\frac{5}{8}$ in — inside $\frac{1}{2}$ – $\frac{3}{4}$, so it is snug enough. Still check it for cracks and frays.

2 · Engine start and in-cab checks

Safe start: shift lever in **Neutral** (Park for an automatic) → **press the clutch** → start → keep the clutch in until the engine reaches idle speed → let the clutch out slowly (p. 11-2).

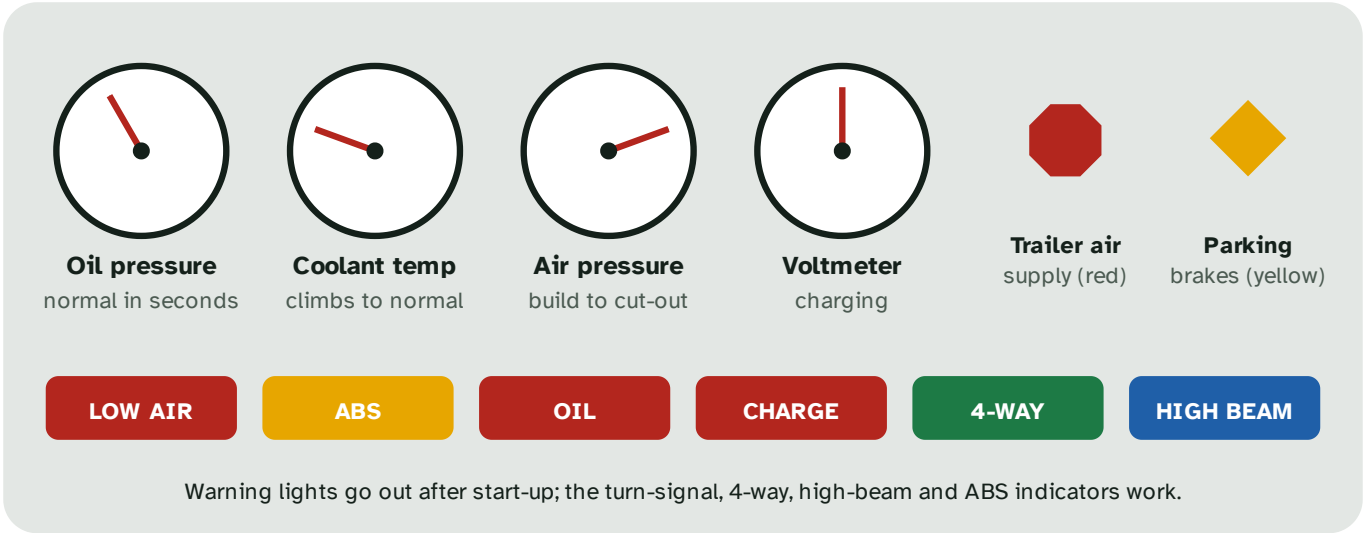

Gauge layouts vary by truck; know where yours are.

Item	What should happen / what you say
Oil pressure	Rises to normal (or the warning light goes off); oil temperature, if fitted, climbs slowly to normal. (Handbook example gauge: 5–20 psi idling, 35–75 psi operating, p. 2-5.)
Coolant temperature	Starts to climb to normal (or the light goes off).
Air pressure	Builds to governor cut-out, about 120–140 psi or the maker’s number.
Ammeter / voltmeter	Shows charging (or the warning light is off).
Mirrors, windshield	Clean, adjusted; no illegal stickers, nothing blocking the view, no glass damage.
Wipers / washers	Arms and blades secure, undamaged, move smoothly; washers work.
Horn(s)	Air and/or electric horn works.
Heater / defroster	Both work.
Safety belt	Securely mounted, adjusts, latches; not ripped or frayed.
Lights (dash)	Left and right turn signal, 4-way flasher, high-beam and ABS indicators come on.

pp. 11-2 – 11-3

Emergency equipment


Required	Optional (mention if carried)
Spare electrical fuses (say so if the vehicle has none) 3 red reflective triangles , or 6 fuses, or 3 liquid-burning flares Fire extinguisher: charged and securely mounted	Tire chains (where winter needs them) Tire-changing equipment List of emergency phone numbers Accident reporting kit

p. 11-3

3 • Air brake checks (where people fail)

RULE

Do **each** check **and say the numbers**. The order is up to you. Doing any of them wrong = **automatic failure of the whole inspection** (p. 11-4).

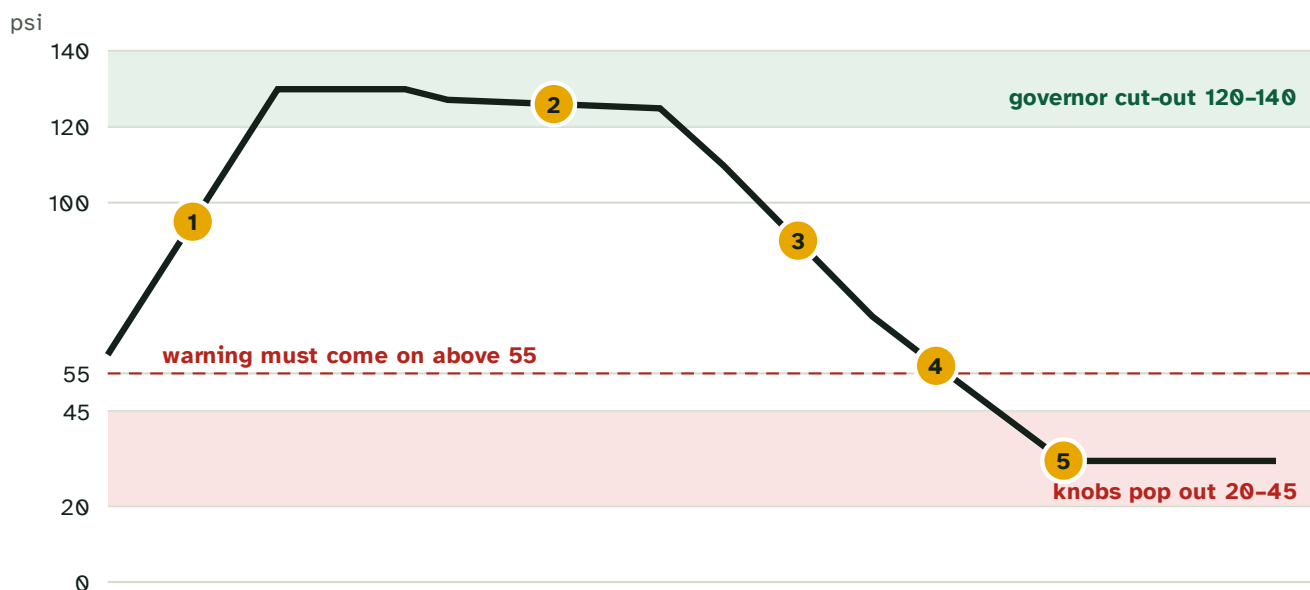

STEPS

1. Build air to governor cut-out (120–140 psi, or maker's number). Say when it cut out.
2. Applied leakage: engine off, parking brake(s) released, hold the foot brake 1 minute. Say the loss and your limit.
3. Key on (engine on or off): fan the air down by pumping the foot brake.
4. Low-air warning (buzzer/light) must come on BEFORE 55 psi. Say where it came on.
5. Keep fanning: parking brake knob (and tractor protection valve) pop out, normally 20–45 psi. Say where.

Pressure on your gauge during the checks (drawn, not to scale).

Check	How	Pass / what to say
Applied leakage	Air at cut-out (say when it cut out). Engine off, chock wheels if needed, release the parking brake (and tractor protection valve). Press the foot brake fully and hold 1 minute after the gauge settles.	Loss no more than 3 psi single vehicle • 4 psi combination of 2 • 6 psi combination of 3+ (3 psi if the towed unit has no air brakes). Say the loss and your limit.

Check	How	Pass / what to say
Low-air warning	Key on. Fan off the air by pumping the foot brake.	Buzzer/light/flag comes on before 55 psi (or the maker's level). Say where.
Spring brakes pop	Parking brake (and tractor protection valve) released; keep fanning the air down.	Parking brake knob (and trailer air supply knob on a tractor-trailer) pop out , normally 20–45 psi . Say where.
Parking brake	Seat belt on. Air at cut-out, parking brake on, trailer brakes released: gently try to pull forward. Then set only the trailer parking brake and gently pull against it.	Vehicle does not move.
Service brake	Roll ahead at about 5 mph , press the brake to stop.	Stops; no pull to either side.

pp. 11-4, 5-8 – 5-9. A large bus often warns at 80–85 psi: say the 55–75 psi range and that your bus is built to warn higher (p. 5-9).

SAY IT LIKE THIS (EXAMPLE)

“Air is at 125 psi, the governor cut out at 125. Engine off, parking brakes released, foot brake applied and held... after one minute I lost 2 psi. The limit for a two-vehicle combination is 4 psi, so it passes.”

“Pumping the brake... the low-air warning came on at 62 psi, above 55 — passes. Still pumping... the trailer air supply knob popped at 40 psi and the parking brake knob at 30 — both within 20 to 45.”

Numbers here are an example; say the real numbers your gauge shows.


COMMON FAIL

Rushing the leak test (not waiting for the gauge to settle, or not holding a full minute) · forgetting to **say** the numbers · checking the parking brake without the seat belt on · pulling hard against the brakes instead of gently.

Hydraulic brakes instead (if your truck has them)

Pump the pedal **3 times**, then hold it down **5 seconds**: it must not sink. With a reserve (backup) system: key off, press the pedal, listen for the reserve pump motor; warning buzzer/light off. **Skipping either part = automatic failure**. Hydro-Boost: engine off, release the parking brake, pump the pedal to use up the pressure, hold it lightly (15–25 lb), start the engine at idle — the pedal gives a little then holds (p. 11-4).

4 · Steering

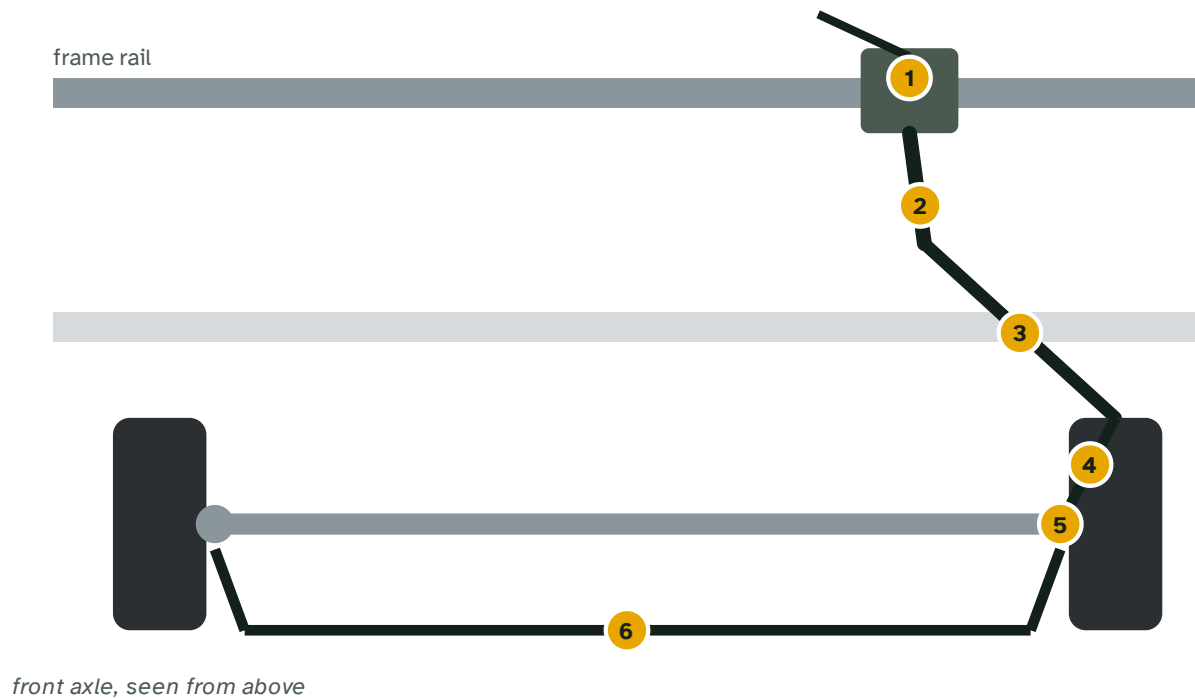


WHAT EACH NUMBER IS

- | | |
|--|---|
| 1. Steering gear box: mounted, no leaks, no missing nuts/bolts | 4. Steering arm |
| 2. Pitman arm | 5. Knuckle / spindle |
| 3. Drag link | 6. Tie rod: not worn or cracked; joints tight; cotter keys in place |

Point to / touch	Say out loud
Steering gear box and hoses	Mounted securely, not leaking, no missing nuts, bolts or cotter keys. No power steering fluid leaks or hose damage.
Pitman arm, drag link, steering arm, tie rod	Not worn or cracked; joints and sockets not worn or loose; no missing nuts, bolts or cotter keys.

p. 11-5. A cotter key is a small split pin that stops a nut from backing off. In the cab, steering play of more than 10° (about 2 in on a 20-in wheel) makes the truck hard to steer (p. 2-2).

5 • Suspension

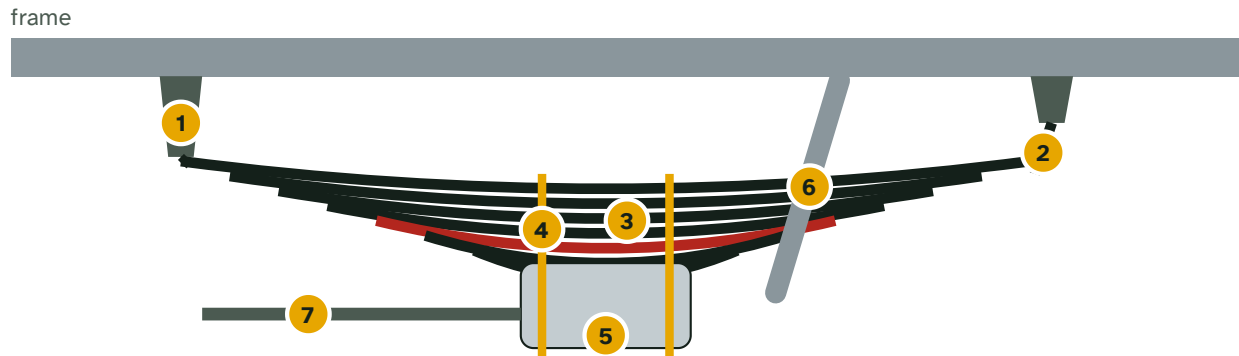

WHAT EACH NUMBER IS


- | | |
|---|--|
| 1. Spring hanger | 4. U-bolts |
| 2. Shackle | 5. Axle |
| 3. Leaf spring: no missing, shifted, cracked or broken leaves | 6. Shock absorber: secure, not leaking |
| | 7. Torque rod |

Out of service when $\frac{1}{4}$ or more of the leaves in a spring are missing or broken. Example: 12 leaves → 3 or more = out of service (p. 11-5).

Point to / touch	Say out loud
Springs (leaf, coil, torsion bars, air ride)	No missing, shifted, cracked or broken leaves; air ride not damaged or leaking.
Spring mounts: hangers, bushings, U-bolts	No cracked or broken hangers, no missing or damaged bushings, no broken, loose or missing bolts or U-bolts — at the frame and the axle.
Shock absorbers	Secure, not leaking.

p. 11-5. Be ready to do this on every axle — tractor and trailer.

6 • Brakes at each wheel

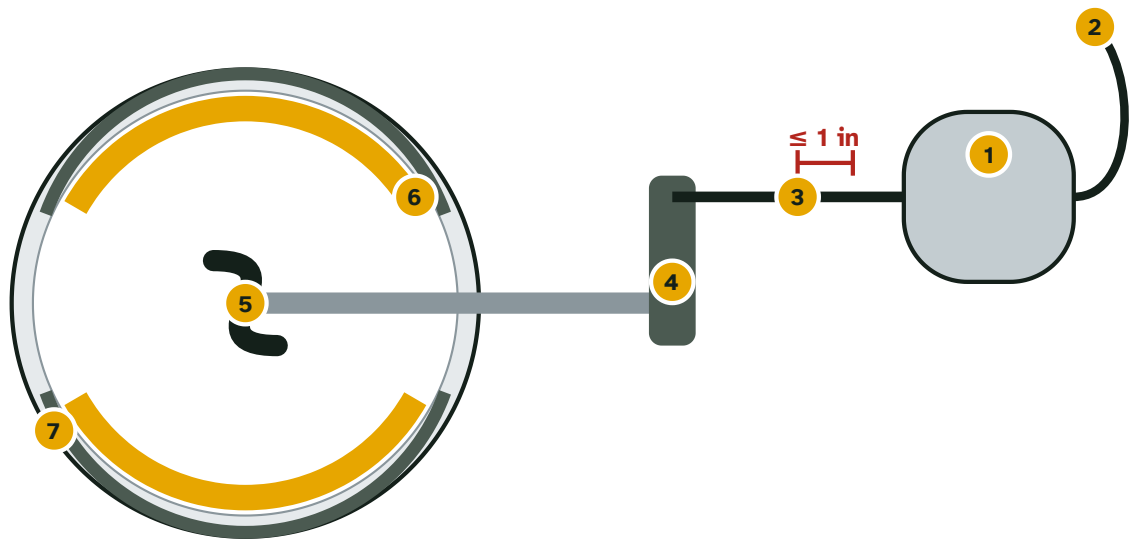

WHAT EACH NUMBER IS

1. Brake chamber: not leaking, cracked or dented; clamps on

2. Hose

3. Pushrod
4. Slack adjuster: nothing broken, loose or missing

5. S-cam

6. Brake lining: not dangerously thin


7. Drum: no cracks, dents, holes, oil or grease

Manual slack adjuster, brakes **released**: pull it by hand — the pushrod should not move more than **1 inch** (p. 11-5).

Point to / touch	Say out loud
Slack adjuster and pushrod	Mounted securely; no broken, loose or missing parts; pushrod moves no more than 1 inch when pulled by hand (manual adjusters).
Brake chamber	Not leaking, cracked or dented; mounted securely; no loose or missing clamps.
Brake hoses / lines	Not cracked, worn or frayed; fittings tight, not leaking.
Drum	No cracks, dents or holes; no loose or missing bolts; no debris, oil or grease.
Linings (where visible)	Not dangerously thin.

p. 11-5

7 • Wheels and tires

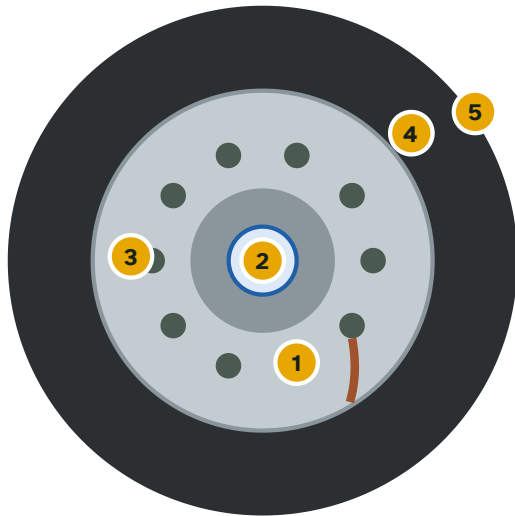

Tread depth (every major groove)



Steer tires $\geq 4/32$ in • others $\geq 2/32$ in

Dual wheels (seen from behind)



Evenly spaced, nothing stuck between

WHAT EACH NUMBER IS

1. Rust trail = nut may be loose
2. Hub oil seal / sight glass: level OK, no leaks
3. Valve stem + cap present
4. Rim: not bent, no welding repairs
5. Tire: no cuts, bulges, even wear; check pressure with a gauge

Point to / touch	Say out loud
Rim	Not damaged or bent, no welding repairs. Rust trails can mean the rim is loose.
Tires (every tire)	Tread at least 4/32 in on steering-axle tires, 2/32 in on all others; even wear; no cuts or damage to tread or sidewalls; valve caps and stems there and undamaged. Check pressure with a tire gauge.
Radial / bias-ply	Not mixed on the vehicle. (Bus front tires may not be recapped, retreaded or regrooved.)
Hub oil seal / axle seal	Not leaking; level OK in the sight glass, if fitted.
Lug nuts	All there, no cracks or bending, no rust trails or shiny threads (signs of looseness); bolt holes not cracked.
Spacers (Budd spacing)	Not bent, damaged or rusted through; duals evenly apart, nothing stuck between them.

p. 11-6

COMMON FAIL


Kicking a tire or hitting it with a mallet to check inflation — **no credit**. Use a tire gauge (p. 11-6).

8 • Side of the vehicle, under, and rear

Point to / touch	Say out loud
Door, hinges, seals; mirrors and brackets; windows	Door and hinges work, seals intact; mirrors secure, not too dirty; windows clean and working.
Fuel tank and cap	Tank secure, cap tight, no leaks.
Drive shaft and U-joints	Not bent or cracked; U-joints secure.
Exhaust	No rust or carbon soot (leak signs); no cracks, holes or bad dents; tightly connected and mounted.
DEF tank (after-treatment)	More than $\frac{1}{8}$ full; DEF dash indicator works.
Frame	No cracks, broken welds or holes in rails, cross members, box or floor.
Lights and reflectors	Clean, working, right color: clearance lights and reflectors red at the rear, amber elsewhere . Brake lights, turn signals and 4-way flashers checked separately .
Rear: splash guards, doors, ties, lift	Splash guards secure; cargo doors open, close and latch from outside; ties, straps, chains and binders secure; a cargo lift has no leaks or damaged parts (explain how you'd test it) and is fully retracted and latched.

pp. 11-3, 11-6 – 11-7

9 • Coupling system (on every Class A test)

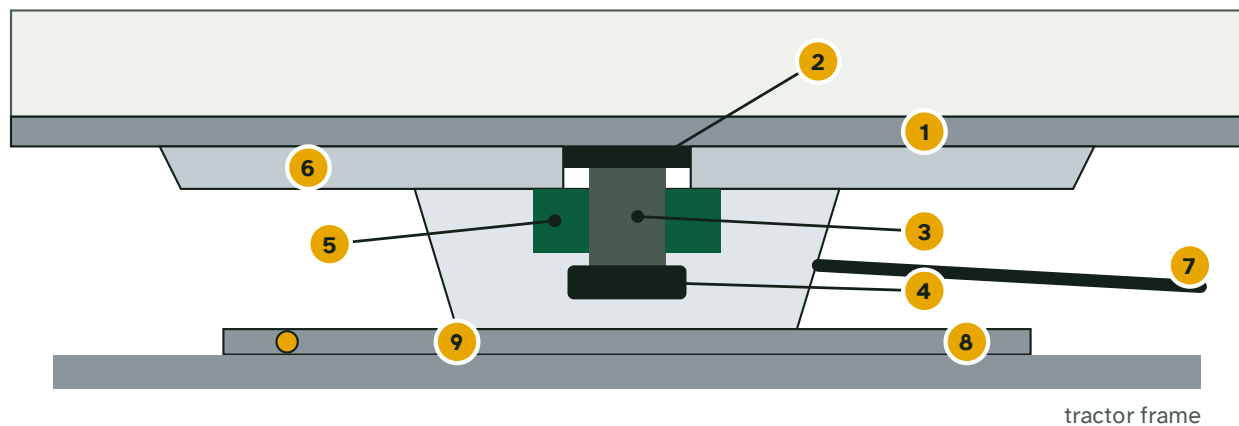

WHAT EACH NUMBER IS

1. Apron (trailer underside): not bent, cracked or broken; lying flat — no gap
2. Kingpin base
3. Kingpin SHANK: the jaws close here; kingpin not bent or damaged
4. Kingpin head: the jaws must NOT be on the head
5. Locking jaws: fully closed around the shank
6. Fifth-wheel skid plate: greased, securely mounted, bolts and pins in place
7. Release arm engaged, safety latch in place
8. Sliding fifth wheel: locking pins present and fully engaged
9. Mounting brackets, clamps, bolts, nuts: none loose or missing; platform not cracked

Look into the fifth-wheel gap from behind: jaws closed around the kingpin **shank**, trailer lying flat on the skid plate with **no gap** (pp. 6-16, 11-8).

Point to / touch	Say out loud
Air lines and electrical cord (tractor to trailer)	Listen for air leaks. Lines not cut, chafed, spliced or worn (no steel braid showing), not tangled, pinched or dragging. Electrical plug firmly seated and locked at both ends.
Glad hands (trailer front)	Locked, undamaged, not leaking; seals in good shape.
Catwalk and steps	Solid, clear of objects, bolted to the frame.
Fifth-wheel mounting	No loose or missing brackets, clamps, bolts or nuts; fifth wheel and slide solidly attached.
Skid plate and platform	Greased, securely mounted, bolts and pins in place; platform not cracked or broken.
Release arm / hitch release lever	In place and secure; engaged, with the safety latch in place.
Locking jaws	Fully closed around the kingpin.
Kingpin, apron, gap	Kingpin not bent or damaged; apron not bent, cracked or broken; trailer lying flat on the skid plate — no gap; kingpin lock checked.
Sliding fifth wheel	Locking pins there and fully engaged, no air leaks if air-powered; positioned so the tractor frame clears the landing gear in turns.

pp. 11-7 – 11-8, 11-10. Pintle hook or ball hitch instead: no missing or broken parts, no broken welds; safety chains secure, no kinks, not too much slack (p. 11-8).

10 • Trailer

Point to / touch	Say out loud
Header board (if any), front wall	Secure, undamaged, strong enough to hold cargo; tarp carrier fastened; enclosed trailer front: no cracks, bulges, holes or missing rivets.
Landing gear	Fully raised , no missing parts, crank handle secure; frame and pads undamaged; no leaks if powered.
Tandem release arm and locking pins	Locked in place and secured.
Doors, ties, lift; frame	Same as for the truck.
Trailer wheels, suspension, brakes, splash guards	Same checks as the tractor axles.

p. 11-10

BUS OR SCHOOL BUS INSTEAD?

Also: passenger entry door and lift, **demonstrate at least 1 emergency exit** and point out the rest, seats, and the bus sitting level with no air leaks. School buses add the emergency kit and body-fluid cleanup kit, warning-light indicators, student mirrors and stop arm (pp. 11-9 – 11-11).

Watch: [YouTube search: “California CDL class A pre-trip inspection full”](#) · [YouTube search: “CDL air brake check leak test low air warning”](#) · [YouTube search: “CDL in-cab inspection”](#) (search links; videos are not checked — the handbook wins if they differ)

Test 2: Basic control skills

Backing exercises in a course marked with **lines and cones**. You'll get **some** of these 6: straight line backing, offset back right, offset back left, parallel park driver side, parallel park conventional, alley dock (p. 12-1).

How it's scored


Scored	Counts as	Rule
Encroachment	Any part of the vehicle touches or crosses a line or cone	Each one = 1 error — the mirror brushing a cone counts
Pull-up	Stopping and driving forward to fix position	First pull-ups aren't penalized; too many are errors. Just stopping (no change of direction) is not a pull-up
Look	Opening the door, leaving the seat, or walking to the back of a bus	Max 2 per exercise; straight line backing only 1
Final position	Where the examiner told you to end	Not in position = penalized, could fail

p. 12-1

Getting out for a look — do it safely every time

Before you get out:

1. Neutral
2. Parking brake(s) set
3. Climb down facing in

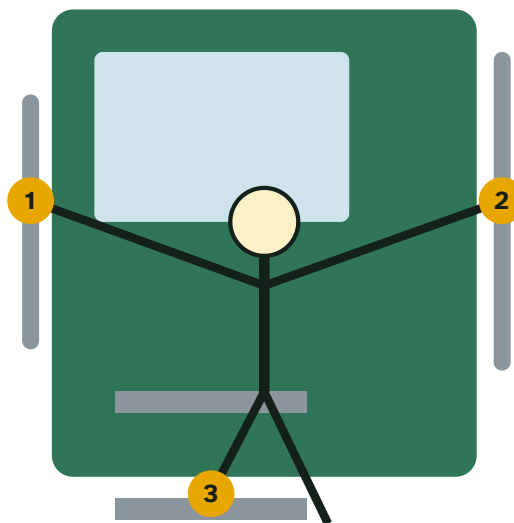

Face the truck

2 hands + 1 foot

(or 2 feet + 1 hand)


touching at all times

Not securing the vehicle or not getting out safely **may be an automatic failure** (p. 12-1). On a bus, keep a firm hold on the handrail.

Steering when backing a trailer

Your hand at the **BOTTOM** of the wheel

(driver's view)

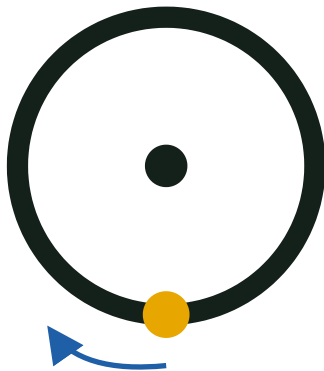

Hand moves to your left

Same moment, rig seen from above

Trailer swings to your left



(driver's left = up in this picture)


- Handbook rule: turn the steering wheel the **opposite** way from where you want the trailer to go; once it starts to turn, turn back to **follow** it (pp. 2-10, 6-4).
- **Correct drift right away** by turning toward the drift. Back **slowly**, in the **lowest reverse gear**. Check both mirrors often (p. 2-10).
- Back toward the **driver's side** whenever you can — you see that side through your own window (p. 2-10).

PRACTICE TIP (DRIVING-SCHOOL ADVICE, NOT HANDBOOK TEXT)

Think of the hand at the bottom of the wheel: move it the way you want the trailer's rear to go. Make small inputs and wait for the trailer to respond. When in doubt, stop, get out and look (it costs a look, not a crash), or pull up and start over.

Straight line backing

Back straight down the lane — only 1 look allowed

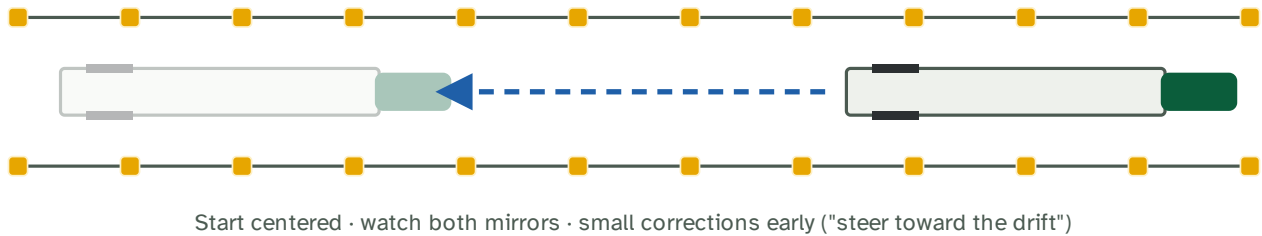


1. Line the rig up straight in the lane before you start.
2. Back slowly in the lowest reverse gear.
3. Watch both mirrors; the gap between the trailer and each cone row should stay the same.
4. If the trailer drifts toward one side, turn toward the drift a little, then straighten.

Only 1 look allowed on this exercise (p. 12-1).

Offset back / right


Offset back / right: pull ahead to the outer line, then back into the lane to your right rear

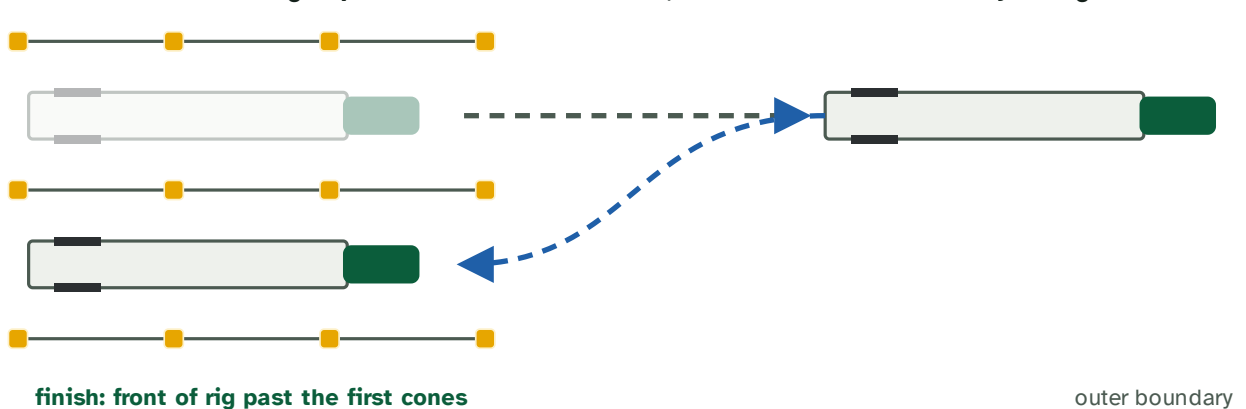

1. Drive straight forward out of your lane toward the **outer boundary**.
2. Back into the lane to your **right rear**.
3. Keep backing until the **front of the vehicle is past the first set of cones**, touching no line or cone.

This is the harder side: you back toward your blind (right) side, so use the right mirror constantly and take a look if unsure (pp. 2-10, 12-2).


Offset back / left

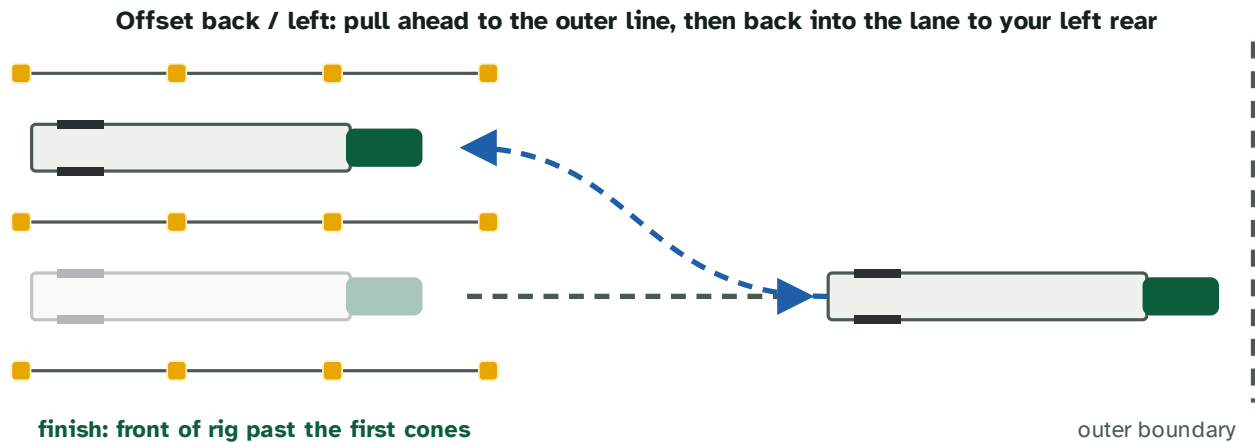

1. Drive straight forward toward the outer boundary.
2. Back into the lane to your **left rear** — the sight side, so you can watch the trailer through your window.
3. Finish with the front of the vehicle past the first set of cones.

p. 12-2

Parallel park – driver side

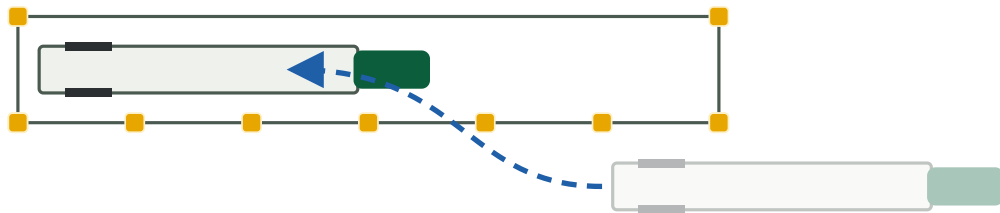


Space on your left: drive past it, then back in. The **WHOLE** rig must end inside the cones.

1. The space is on your **left**.
2. Drive **past** the space, parallel to it.
3. Back in without crossing the front, side or rear boundaries.
4. Finish with the **entire vehicle completely inside** the space.

p. 12-2

Parallel park – conventional

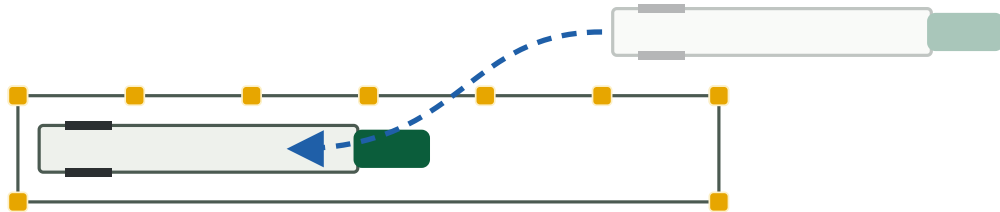


Space on your right: drive past it, then back in. The **WHOLE** rig must end inside the cones.

1. The space is on your **right** (the blind side).
2. Drive past the space, parallel to it, then back in.
3. Finish with the entire vehicle inside, no line or cone touched.

p. 12-2. Trap: “conventional” is the **right** side; “driver side” is the left.

Alley dock

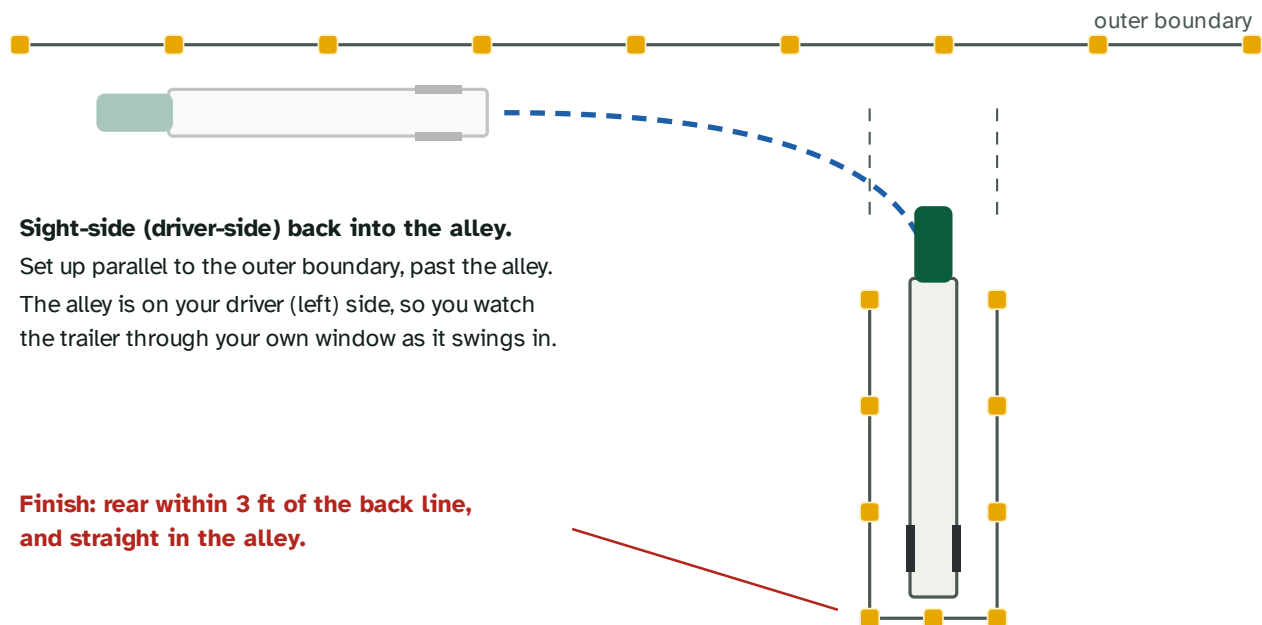

Sight-side (driver-side) back into the alley.

Set up parallel to the outer boundary, past the alley.

The alley is on your driver (left) side, so you watch the trailer through your own window as it swings in.

Finish: rear within 3 ft of the back line, and straight in the alley.

1. Drive **past** the alley and set the rig **parallel to the outer boundary**.
2. **Sight-side** back into the alley (it's at a right angle, like a loading dock).
3. Finish with the rear **within 3 feet** of the back of the alley, **straight**, no line or cone touched.

Example: stopping 5 ft from the back line is not finished (more than 3 ft). Stopping 2 ft away but angled is not finished either — it must be straight (p. 12-2).

COMMON FAIL

Rolling back while you think instead of stopping · too many pull-ups · a 3rd look · getting out without Neutral + parking brake · leaving the trailer angled or part-way out of the final box · relying on a backup camera.

Watch: [YouTube search: "CDL alley dock 90 degree backing"](#) · [YouTube search: "CDL offset backing right"](#) · [YouTube search: "CDL parallel parking conventional"](#) · [YouTube search: "CDL straight line backing tips"](#) (search links; videos are not checked — the handbook wins if they differ)


Test 3: Road test

RULE

Pass = **no more than 30 errors** AND **no critical driving error**. Wear your seat belt, obey every sign, signal and law, and finish with **no accident and no moving violation** (p. 13-1).

The examiner gives directions early enough to follow them and will never ask you to drive unsafely. Anything the route lacks (e.g. a railroad crossing) you may be asked to **simulate** — tell and show what you would do (pp. 13-1, 13-3).

Turns

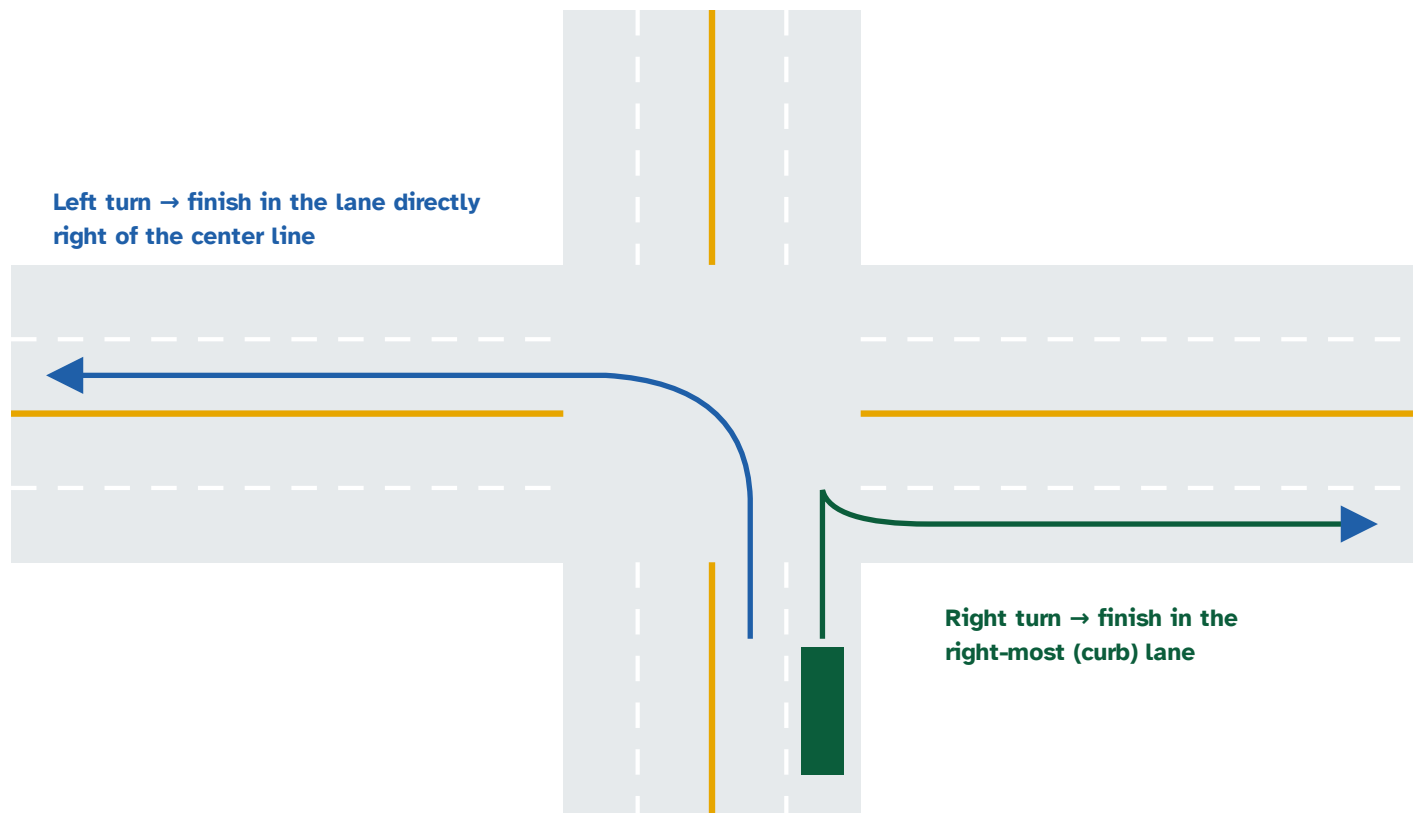


On a multi-lane road: a left turn ends in the lane **directly right of the center line**; a right turn ends in the **right-most (curb) lane** (p. 13-4).

Stage	Do
When told to turn	Check traffic in all directions, signal, get into the correct lane safely.
Approaching	Signal. Slow smoothly; change gears as needed to keep power. No unsafe coasting (out of gear for more than your vehicle's length).
If you must stop	Stop smoothly, fully, behind the stop line, crosswalk or sign. Behind another vehicle, leave a safe gap . Don't roll. Front wheels straight ahead while waiting.

Stage	Do
During the turn	Check all directions again, both hands on the wheel, watch the mirror so the rear doesn't hit anything on the inside. Don't swing into oncoming traffic. Finish in the correct lane. Don't shift in the turn.
After	Signal off; get up to traffic speed; move to the right-most lane when safe; check mirrors.

pp. 13-1 – 13-2, 13-4


Stopped behind another vehicle: stop where you can still SEE ITS REAR TIRES touching the road.

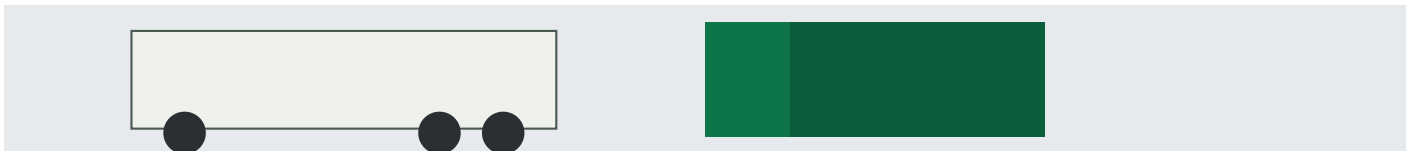

Behind the stop line, no rolling, front wheels straight.

Intersections, city streets, lane changes, expressway

- **Intersections:** check all directions; slow gently, brake smoothly; stop fully behind the line with a safe gap, no rolling. **Don't enter if you can't clear it.** Yield to pedestrians and traffic; don't change lanes in the intersection; hands on the wheel; check mirrors after (p. 13-2).
- **City (urban business):** regular traffic checks, safe following distance, centered in the right-most lane, keep up with traffic but never over the limit (p. 13-2).

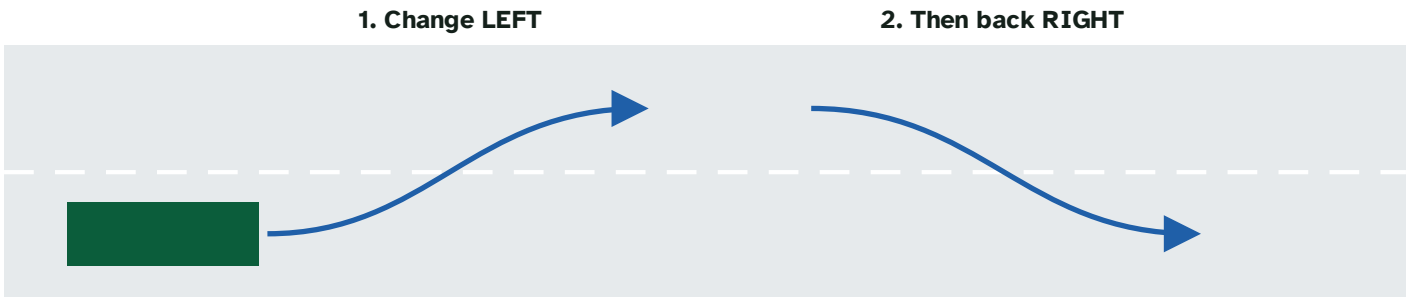

Each time: mirrors + traffic check → signal → wait for a safe gap → move → cancel signal

You'll be told to change lanes to the left, then back to the right (p. 13-2).

Expressway	Examiner wants
Entering	Check traffic, signal, merge smoothly into the proper lane.
On it	Right lane position, spacing and speed; keep checking traffic in all directions.
Exiting	Traffic checks, signal, slow smoothly in the exit lane ; on the ramp keep slowing inside the lane markings with good spacing.

p. 13-2

Stop/start (roadside stop)

Pull over as if to get out and check the truck (p. 13-2).

Stopping

1. Check traffic all around.
2. **Right** signal; move to the right-most lane or shoulder.
3. Slow smoothly, brake evenly, shift as needed; full stop, **no coasting**.
4. Parallel to the curb, out of traffic, not blocking driveways, hydrants, intersections or signs.
5. **Cancel** the signal → **4-way flashers on** → **parking brake** → Neutral or Park → feet off brake and clutch.

Starting again

1. Check mirrors in all directions.
2. **4-ways off** → **left** signal on.
3. When clear: release the parking brake, pull **straight ahead**. **Don't turn the wheel before the vehicle moves.**
4. Check traffic, especially to the **left**; steer and speed up smoothly into the lane.
5. Cancel the left signal.

pp. 13-2 – 13-3

Curves, railroad crossings, bridges and signs

- **Curves:** slow down **before** the curve so you don't brake or shift in it; stay in your lane; keep checking traffic (p. 13-3).
- **Every railroad crossing:** slow, brake smoothly, shift as needed; look and listen; right-most lane on a multi-lane road. While any part is in the crossing: **no stopping, no gear changes, no passing, no lane changes** (p. 13-3).

4-way flashers ON approaching • stop • look and listen both ways • (bus: open window and door)



While ANY part is on the crossing: no stopping, no gear change, no passing, no lane change.
Keep both hands on the wheel as you cross. Flashers OFF after.

Extra steps for a bus, school bus or placarded vehicle at every non-exempt crossing (p. 13-3). Example: 60 ft away is too far; 10 ft is too close.

- **Overpass:** you may be asked the posted **clearance (height)**. **Bridge:** the posted **weight limit**. No bridge on the route? Be ready to name and explain any traffic sign (p. 13-4).
- **School bus endorsement:** you demonstrate loading and unloading students (p. 13-4).

PRACTICE TIP (DRIVING-SCHOOL ADVICE, NOT HANDBOOK TEXT)

Read every clearance and weight sign aloud to yourself as you pass it during practice. It makes the bridge/overpass question easy.

Scored the whole drive

	Do	Don't
Clutch	Always use it to shift; double-clutch on an unsynchronized transmission	Rev or lug the engine; ride the clutch; coast with it in; “pop” it
Gears	Pick a gear that doesn't rev or lug	Grind or clash; shift in turns or intersections
Brakes	Smooth, steady pressure	Ride or pump; brake harshly
Lanes	Stop behind lines, crosswalks, signs; right-most lane unless blocked	Drive over curbs, sidewalks or lane markings
Steering	Both hands on the wheel except while shifting	Over-steer or under-steer
Traffic checks	Mirrors regularly; before, during and after intersections; scan busy and pedestrian areas	—
Signals	Use properly, when required, at the right time	Forget to cancel after a turn or lane change

p. 13-4

Watch: [YouTube search: “CDL road test California what examiners look for”](#) · [YouTube search: “CDL road test turns tractor trailer right turn”](#) · [YouTube search: “CDL double clutching tutorial”](#) (search links; videos are not checked — the handbook wins if they differ)

Cards to practice with

Air brake check card

#	Do	Say	Pass
1	Build air	"Governor cut out at ___ psi"	120–140 (or maker's)
2	Engine off, parking brake(s) released, foot brake held 1 min	"Lost ___ psi in one minute; limit ___"	≤3 single · ≤4 two · ≤6 three+ (≤3 if trailer has no air brakes)
3	Key on, fan the brake	"Warning came on at ___ psi"	before 55
4	Keep fanning	"Knob(s) popped at ___ psi"	20–45
5	Seat belt on, rebuild air, parking brake on (trailer released), gentle tug; then trailer brake only, gentle tug	"Parking brakes hold"	no movement
6	Roll ~5 mph, brake	"Stops straight, no pull"	no pull

One-page inspection checklist

- | | |
|---|--|
| <ul style="list-style-type: none"> ☐ Approach: leaks, lean, hazards, brakes set / chocked ☐ Leaks, hoses ☐ Water pump, alternator, compressor (belt or gear) ☐ Oil dipstick ☐ Coolant ☐ Power steering fluid ☐ Washer fluid ☐ Belts ½–¾ in ☐ Master cylinder (hydraulic) ☐ Safe start: Neutral, clutch in ☐ Oil, coolant, air, volt gauges ☐ Mirrors, windshield ☐ Wipers, washers ☐ Horn(s) ☐ Heater, defroster ☐ Seat belt ☐ Fuses; 3 triangles; extinguisher ☐ Dash indicators | <ul style="list-style-type: none"> ☐ Air checks 1–6 (card above) ☐ Lights and reflectors: amber front/sides, red rear ☐ Steering box, hoses, linkage ☐ Springs (¼ rule), mounts, shocks ☐ Slack adjuster ≤1 in, chamber, hoses, drum, linings ☐ Rims, tires 4/32 & 2/32, gauge ☐ Hub seal, lug nuts, spacers ☐ Door, mirrors, fuel tank, cap ☐ Drive shaft, U-joints, exhaust, DEF >⅛ ☐ Frame ☐ Air/electric lines, glad hands ☐ Catwalk, steps ☐ Fifth-wheel mounts, skid plate ☐ Release arm + latch; jaws on shank; no gap ☐ Slider pins ☐ Header board, landing gear up, tandem pins ☐ Trailer axles ☐ Rear: splash guards, doors, lights |
|---|--|

Backing practice log

Score yourself like the examiner does. Aim for 0 encroachments, few pull-ups, and at most 2 looks (1 on straight line backing), several times in a row.

Date	Exercise	Encroachments	Pull-ups	Looks	Final position OK?

Day-before checklist

- ☐ CLP held 14+ days; written tests passed; training completed (confirm ELDT with your school)
- ☐ Test vehicle: brake lights, 4-way flashers, turn signals and horn all work; no labels on parts; dash cam off or covered
- ☐ Emergency equipment on board: fuses, 3 triangles, charged and mounted extinguisher
- ☐ Tire gauge in the cab (no credit for kicking tires)
- ☐ Clean handbook Section 11 inspection guide — no notes written on it
- ☐ Say the whole inspection out loud once, in order, without looking
- ☐ Run through the air brake card once with the real gauges
- ☐ Sleep. The road test is 45–60 minutes of full attention.