
MIDI **RECEIVE SEND** Computer **CC34 CC 36** CC 37 Z CH₂ CH₁ **CC 38** CC 39 CC 42 **CC 42** (\uparrow) **(1)** 0 0 NOTE NOTE **CC 40** CC 41 **PITCH PITCH** 1 (\uparrow) 0 0 NOTE NOTE ON/OFF ON/OFF 1 (\uparrow) 0 0 Pull down Switch Z and tap the reset button to enter Calibration Mode Workshop RESET


TURING MACHINE

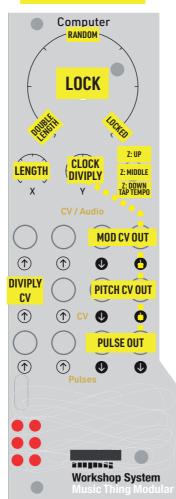


REVERB



MIDI

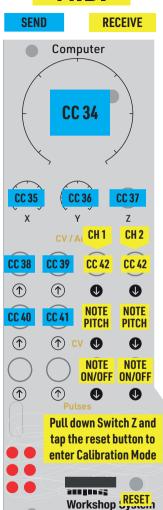

TURING MACHINE

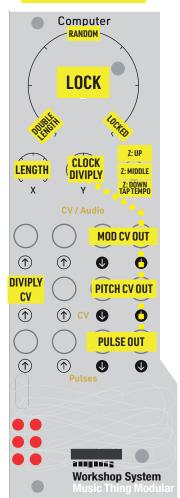

REVERB

