


Extension module EMO-R8

Unipi 1.1 can be expanded by up to 56 relays. For this purpose is used the I²C expansion module EMO-R8, which can be purchased [in our e-shop \(https://www.unipi.technology/cs/8-relay-addon-emo-r8-p34\)](https://www.unipi.technology/cs/8-relay-addon-emo-r8-p34). Instructions for use with SW Mervis can be found [here on this link](#).

The module can be connected using the RJ11 connection cable included in the package.

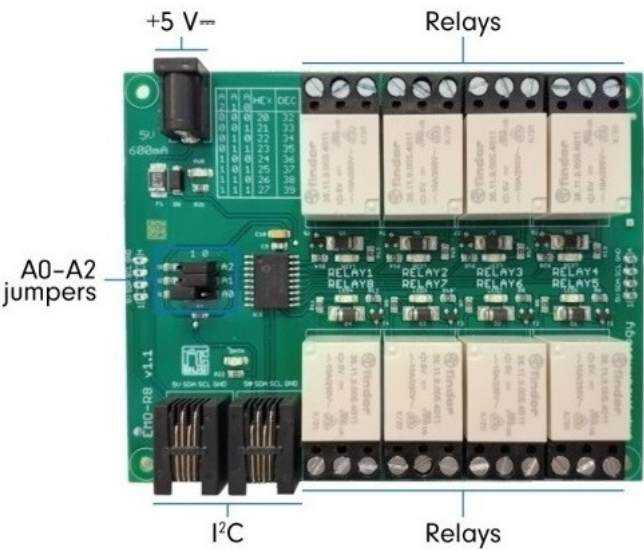

Connectivity

- 8× Finder 36.11.9.005.4011 switching relay (250 V~ / 10 A or 30 V~ / 10 A)
- 2× I²C port - one serves as an input (from Unipi 1.1) and the other for connecting another EMO-R8 board or another I²C extension
- 2.1 mm power jack (DC jack) - requires power supply of 5 V~ / 0,6 A
- 3× jumper for setting the address according to the table

Addressing

Up to 7 different addresses can be set for this expansion module, so up to 7 of these modules can be connected to Unipi 1.1. The following table describes the position of the jumpers for setting the I²C address. Starting Unipi Base OS (Operating System) 12 and Mervis OS (Operating System) 2.6.5.10, you are now able to access the extension module by Modbus.

A2	A1	A0	HEX	DEC	MODBUS	Description
0	0	0	20	32	0	Address reserved for relay on Unipi 1.1
0	0	1	21	33	1	Free address
0	1	0	22	34	2	Free address
0	1	1	23	35	3	Free address
1	0	0	24	36	4	Free address
1	0	1	25	37	5	Free address
1	1	0	26	38	6	Free address
1	1	1	27	39	7	Free address

Modbus accessing on GNU/Linux systems

Does not apply for Mervis OS (Operating System). To use the extension board on Modbus, you have to allow it first. Follow steps in file viewed by command **cat /etc/unipi-id/README.md**.