

# Linux PTP Using PHC Adjust Phase

This document provides instructions for getting Linux PTP to use the PTP hardware clock adjust phase mode.

# **Contents**

1.	Intro	duction		3		
2.	Syst	em Requ	irements	4		
	2.1	Linux P	TP Source	4		
	2.2	Linux Kernel		4		
		2.2.1.	Adjust Phase Patch Files	4		
		2.2.2.	Backporting to Linux v3.x+	8		
	2.3	Network	Interface Requirements	11		
		2.3.1.	ethtool	11		
		2.3.2.	SIOCETHTOOL	12		
		2.3.3.	SO_TIMESTAMPING	12		
		2.3.4.	PTP_CLK_REQ_EXTTS	14		
	2.4	Linux P	TP Hardware Clock	15		
		2.4.1.	ClockMatrix PHC Driver	15		
3.	Gett	Getting Started				
	3.1	Sanity T	esting	20		
		3.1.1.	Verify PHC Capabilities	20		
		3.1.2.	Verify Clocks Increment	21		
		3.1.3.	Verify Clock Set Time	22		
		3.1.4.	Verify Time Stamper Incoming 1-PPS from PTP Clock	22		
		3.1.5.	Verify ts2phc Aligns Time Stamper and 1-PPS from PTP Clock	23		
		3.1.6.	Verify PTP Clock Time Adjustment Affects PTP Timestamp	25		
		3.1.7.	Verify PTP Clock Frequency Adjustment Affects Time Stamper Frequency			
	3.2	3.2 ts2phc				
	3.3	ptp4l				
		3.3.1.	Example Write Phase Mode Configuration	30		
	3.4	Sample Session				
4.	App	endix		38		
	4.1	Perform	ance Metrics	38		
		4.1.1.	WritePhase Reference Tracker, Multicast master	38		
		4.1.2.	DMIPS Calculation			
	4.2	Identifyi	ng PHC Device Number	43		
		4.2.1.	ClockMatrix	43		
		4.2.2.	Network Interface	43		
	4.3	View ptp	Device Name	44		
	4.4	SO_SELECT_ERR_QUEUE: Protocol not available4				
	4.5	testptp		44		

# Linux PTP Using PHC Adjust Phase Quick Start Guide


5.	5. Revision History		.50
	4.7	1588 Profile Configuration Validation Tool for ptp4l	.46
	4.6	phc_ctl	.46
		4.5.1. Sample Build for ZCU102 board	.45

# 1. Introduction

The Linux PTP project is an implementation of the Precision Time Protocol (PTP) according to IEEE standard 1588 for Linux licensed under the GNU General Public License.

# IEEE 1588 Default Profile Compliant

· Enterprise / Industrial

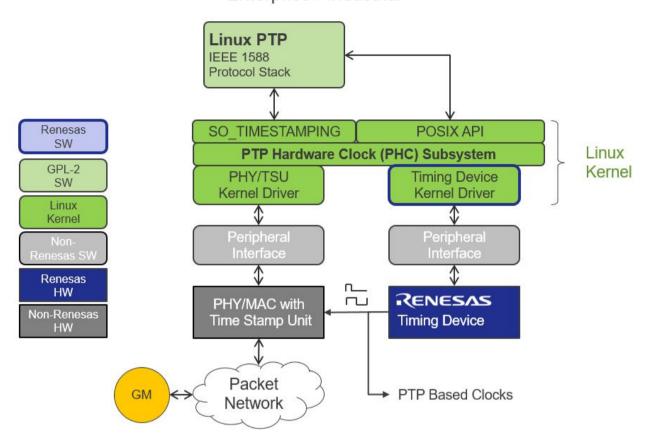

Linux PTP supports both hardware and software time stamping via the Linux SO\_TIMESTAMPING socket option.

Hardware time stamping is used because it provides better accuracy by time stamping packets at the exact moment they are sent and received. Hardware time stamping requires hardware PTP support from the PHY/MAC.

Some PTP hardware clocks have a adjust phase mode that has a built-in hardware filtering capability. The adjust phase mode uses a phase offset control word instead of a frequency offset control word.

Adjust phase support was introduced into the Linux PHC subsystem in Linux kernel v5.8.

Linux PTP v3.0 added ts2phc that is used to align the PHC and time stamper when the PHC and time stamper are not the same device.

#### 2. **System Requirements**

- Linux PTP v3.0+
- Linux kernel v5.8+
- Network interface
  - Implements SIOCETHTOOL
  - · Supports PTP hardware clock (PHC)
  - Pass PTP Ethernet packet time stamps using the SO\_TIMESTAMPING API
- Linux PTP Hardware Clock driver
  - Renesas timing device that supports adjust phase
  - ClockMatrix PHC driver with adjust phase was introduced in Linux kernel v5.8
  - Driver code can be backported to Linux kernel v3.0+ that is patched to support adjust phase

#### 2.1 **Linux PTP Source**

Instructions on cloning and compiling Linux PTP from source can be found below. Linux PTP added support for adjust phase in 2020-05-04 commit 7df88a.

### Host sites:

- http://linuxptp.sourceforge.net
- https://sourceforge.net/p/linuxptp/code/ci/master/tree
- https://sourceforge.net/p/linuxptp/code/ci/v3.1/tree

### Mirror site:

https://github.com/richardcochran/linuxptp

#### 2.2 **Linux Kernel**

### Host sites:

- https://github.com/torvalds/linux
- https://git.kernel.org/pub/scm/linux/kernel/git/stable/linux.git

Some PTP hardware clocks have an adjust phase mode that has a built-in hardware filtering capability. The adjust phase mode uses a phase offset control word instead of a frequency offset control word.

The Linux PHC subsystem added the capability to accept phase offset control word in Linux kernel v5.8.

Linux PTP v3.0 has also added support for adjust phase (i.e., write\_phase\_mode configuration parameter).

If you are using Linux kernel v3.x to v5.7, you will need to backport the adjust phase support into the kernel.

## **Adjust Phase Patch Files**

The following patch files are the differences between Linux kernel v5.8-rc5 and v5.6.

### Files affected:

- drivers/ptp/ptp\_chardev.c
- drivers/ptp/ptp clock.c
- include/linux/ptp\_clock\_kernel.h
- include/uapi/linux/ptp\_clock.h
- tools/testing/selftests/ptp/testptp.c

### 2.2.1.1. Patch file for Linux v5.6

Copy and paste the following and save as a text file on the root directory of your linux kernel v5.6.

```
From 2ae6eb4fa4a7d7499322e68fc17fae14f35bfc1b Mon Sep 17 00:00:00 2001
Date: Fri, 17 Jul 2020 16:50:20 -0400
Subject: [PATCH] adjust phase patch for linux v5.6
drivers/ptp/ptp_chardev.c
                                      1 +
                                      9 +++++++
drivers/ptp/ptp_clock.c
include/linux/ptp_clock_kernel.h
                                      14 ++++++----
 include/uapi/linux/ptp_clock.h
                                        4 +++-
 tools/testing/selftests/ptp/testptp.c | 6 ++++--
 5 files changed, 26 insertions(+), 8 deletions(-)
diff --git a/drivers/ptp/ptp_chardev.c b/drivers/ptp/ptp_chardev.c
index 9d72ab5..4c9fc5c 100644
--- a/drivers/ptp/ptp_chardev.c
+++ b/drivers/ptp/ptp_chardev.c
@@ -133,12 +133,13 @@ long ptp_ioctl(struct posix_clock *pc, unsigned int cmd, unsigned long
arg)
     caps.n_alarm = ptp->info->n_alarm;
     caps.n_ext_ts = ptp->info->n_ext_ts;
     caps.n per out = ptp->info->n per out;
     caps.pps = ptp->info->pps;
     caps.n_pins = ptp->info->n_pins;
     caps.cross_timestamping = ptp->info->getcrosststamp != NULL;
     caps.adjust_phase = ptp->info->adjphase != NULL;
     if (copy_to_user((void __user *)arg, &caps, sizeof(caps)))
        err = -EFAULT;
     break;
  case PTP_EXTTS_REQUEST:
  case PTP_EXTTS_REQUEST2:
diff --git a/drivers/ptp/ptp_clock.c b/drivers/ptp/ptp_clock.c
index ac1f2bf..4fc6e4b 100644
--- a/drivers/ptp/ptp_clock.c
+++ b/drivers/ptp/ptp_clock.c
@@ -143,12 +143,21 @@ static int ptp_clock_adjtime(struct posix_clock *pc, struct
__kernel_timex *tx)
        return -ERANGE;
     if (ops->adjfine)
        err = ops->adjfine(ops, tx->freq);
     else
        err = ops->adjfreq(ops, ppb);
     ptp->dialed_frequency = tx->freq;
  } else if (tx->modes & ADJ_OFFSET) {
     if (ops->adjphase) {
        s32 offset = tx->offset;
        if (!(tx->modes & ADJ_NANO))
          offset *= NSEC_PER_USEC;
        err = ops->adjphase(ops, offset);
     }
  } else if (tx->modes == 0) {
     tx->freq = ptp->dialed_frequency;
```

```
err = 0;
  }
  return err;
diff --git a/include/linux/ptp_clock_kernel.h b/include/linux/ptp_clock_kernel.h
index c64alef..aa805f6 100644
--- a/include/linux/ptp_clock_kernel.h
+++ b/include/linux/ptp_clock_kernel.h
@@ -33,13 +33,13 @@ struct system_device_crosststamp;
struct ptp_system_timestamp {
  struct timespec64 pre_ts;
  struct timespec64 post_ts;
 };
- * struct ptp_clock_info - decribes a PTP hardware clock
+ * struct ptp_clock_info - describes a PTP hardware clock
  * @owner:
                The clock driver should set to THIS MODULE.
  * @name:
                A short "friendly name" to identify the clock and to
                help distinguish PHY based devices from MAC based ones.
                The string is not meant to be a unique id.
  * @max_adj: The maximum possible frequency adjustment, in parts per billon.
@@ -62,12 +62,15 @@ struct ptp_system_timestamp {
  * @adjfreq: Adjusts the frequency of the hardware clock.
               This method is deprecated. New drivers should implement
               the @adjfine method instead.
               parameter delta: Desired frequency offset from nominal frequency
               in parts per billion
 \mbox{\ensuremath{^{\star}}} @adjphase: Adjusts the phase offset of the hardware clock.
                parameter delta: Desired change in nanoseconds.
  * @adjtime: Shifts the time of the hardware clock.
               parameter delta: Desired change in nanoseconds.
    @gettime64: Reads the current time from the hardware clock.
                 This method is deprecated. New drivers should implement
                 the @gettimex64 method instead.
@@ -102,16 +105,16 @@ struct ptp_system_timestamp {
               zero if the function can be assigned to this pin, and
               nonzero otherwise.
               parameter pin: index of the pin in question.
               parameter func: the desired function to use.
               parameter chan: the function channel index to use.
 * @do_work: Request driver to perform auxiliary (periodic) operations
           Driver should return delay of the next auxiliary work scheduling
           time (>=0) or negative value in case further scheduling
           is not required.
 * @do_aux_work: Request driver to perform auxiliary (periodic) operations
                   Driver should return delay of the next auxiliary work
+ *
                   scheduling time (>=0) or negative value in case further
                   scheduling is not required.
  * Drivers should embed their ptp_clock_info within a private
  * structure, obtaining a reference to it using container_of().
```

```
* The callbacks must all return zero on success, non-zero otherwise.
@@ -125,12 +128,13 @@ struct ptp_clock_info {
  int n_per_out;
  int n_pins;
  int pps;
  struct ptp_pin_desc *pin_config;
  int (*adjfine)(struct ptp_clock_info *ptp, long scaled_ppm);
  int (*adjfreq)(struct ptp_clock_info *ptp, s32 delta);
 int (*adjphase)(struct ptp_clock_info *ptp, s32 phase);
  int (*adjtime)(struct ptp_clock_info *ptp, s64 delta);
  int (*gettime64)(struct ptp_clock_info *ptp, struct timespec64 *ts);
  int (*gettimex64)(struct ptp_clock_info *ptp, struct timespec64 *ts,
          struct ptp_system_timestamp *sts);
  int (*getcrosststamp)(struct ptp_clock_info *ptp,
              struct system_device_crosststamp *cts);
diff --git a/include/uapi/linux/ptp_clock.h b/include/uapi/linux/ptp_clock.h
index 9dc9d00..ff070aa 100644
--- a/include/uapi/linux/ptp clock.h
+++ b/include/uapi/linux/ptp_clock.h
@@ -86,13 +86,15 @@ struct ptp_clock_caps {
  int n_ext_ts; /* Number of external time stamp channels. */
  int n_per_out; /* Number of programmable periodic signals. */
  int pps;
                 /* Whether the clock supports a PPS callback. */
  int n_pins;
                 /* Number of input/output pins. */
  /* Whether the clock supports precise system-device cross timestamps */
  int cross_timestamping;
- int rsv[13]; /* Reserved for future use. */
  /* Whether the clock supports adjust phase */
+ int adjust_phase;
+ int rsv[12]; /* Reserved for future use. */
};
struct ptp_extts_request {
  unsigned int index; /* Which channel to configure. */
  unsigned int flags; /* Bit field for PTP_xxx flags. */
  unsigned int rsv[2]; /* Reserved for future use. */
diff --git a/tools/testing/selftests/ptp/testptp.c b/tools/testing/selftests/ptp/testptp.c
index c0dd102..da7a9dd 100644
--- a/tools/testing/selftests/ptp/testptp.c
+++ b/tools/testing/selftests/ptp/testptp.c
@@ -266,20 +266,22 @@ int main(int argc, char *argv[])
               " %d maximum frequency adjustment (ppb)\n"
                 %d programmable alarms\n"
                  %d external time stamp channels\n"
                 %d programmable periodic signals\n"
                 %d pulse per second\n"
                 %d programmable pins\n"
                 %d cross timestamping\n",
                 %d cross timestamping\n"
                  %d adjust_phase\n",
               caps.max_adj,
               caps.n_alarm,
               caps.n_ext_ts,
               caps.n_per_out,
               caps.pps,
               caps.n_pins,
               caps.cross_timestamping);
```

```
caps.cross_timestamping,
+
               caps.adjust_phase);
+
     }
  }
  if (0x7ffffffff != adjfreq) {
     memset(&tx, 0, sizeof(tx));
     tx.modes = ADJ FREQUENCY;
2.7.4
To apply the patch file,
$ git am --signoff < 0001-adjust-phase-patch-for-linux-v5.6.patch
Applying: Adjust phase patch for linux v5.6
$ ait loa
commit d6e62c17b920a4425395fdacc7c174be955e7568
Author: Vincent Cheng <vincent.cheng.xh@renesas.com>
Date: Fri Jul 17 16:50:20 2020 -0400
adjust phase patch for linux v5.6
Signed-off-by: Vincent Cheng <vincent.cheng.xh@renesas.com>
commit 7111951b8d4973bda27ff663f2cf18b663d15b48
Author: Linus Torvalds <torvalds@linux-foundation.org>
Date: Sun Mar 29 15:25:41 2020 -0700
Linux 5.6
Or patch the files and manually commit the changes afterwards.
$ patch -p1 < 0001-adjust-phase-patch-for-linux-v5.6.patch</pre>
patching file drivers/ptp/ptp_chardev.c
patching file drivers/ptp/ptp_clock.c
patching file include/linux/ptp_clock_kernel.h
patching file include/uapi/linux/ptp_clock.h
patching file tools/testing/selftests/ptp/testptp.c
$ git status
On branch tmp
Changes not staged for commit:
(use "git add <file>..." to update what will be committed)
(use "git checkout -- <file>..." to discard changes in working directory)
modified: drivers/ptp/ptp_chardev.c
modified: drivers/ptp/ptp_clock.c
modified: include/linux/ptp_clock_kernel.h
modified: include/uapi/linux/ptp_clock.h
modified: tools/testing/selftests/ptp/testptp.c
no changes added to commit (use "git add" and/or "git commit -a")
```

# 2.2.2. Backporting to Linux v3.x+

For backporting adjust phase changes into other linux kernel versions, examine the following individual patch files and manually make the corresponding appropriate changes for your linux kernel version.

### 2.2.2.1. drivers/ptp/ptp\_chardev.c

```
--- a/drivers/ptp/ptp_chardev.c
+++ b/drivers/ptp/ptp_chardev.c
@@ -133,12 +133,13 @@ long ptp_ioctl(struct posix_clock *pc, unsigned int cmd, unsigned long arg)
caps.n_alarm = ptp->info->n_alarm;
```

```
caps.n_ext_ts = ptp->info->n_ext_ts;
     caps.n_per_out = ptp->info->n_per_out;
     caps.pps = ptp->info->pps;
     caps.n_pins = ptp->info->n_pins;
     caps.cross_timestamping = ptp->info->getcrosststamp != NULL;
     caps.adjust_phase = ptp->info->adjphase != NULL;
     if (copy_to_user((void __user *)arg, &caps, sizeof(caps)))
        err = -EFAULT;
     break;
  case PTP_EXTTS_REQUEST:
  case PTP_EXTTS_REQUEST2:
2.2.2.2. drivers/ptp/ptp_clock.c
--- a/drivers/ptp/ptp_clock.c
+++ b/drivers/ptp/ptp_clock.c
@@ -143,12 +143,21 @@ static int ptp_clock_adjtime(struct posix_clock *pc, struct
__kernel_timex *tx)
        return -ERANGE;
     if (ops->adjfine)
        err = ops->adjfine(ops, tx->freq);
     else
        err = ops->adjfreq(ops, ppb);
     ptp->dialed_frequency = tx->freq;
  } else if (tx->modes & ADJ_OFFSET) {
     if (ops->adjphase) {
       s32 offset = tx->offset;
        if (!(tx->modes & ADJ_NANO))
           offset *= NSEC_PER_USEC;
        err = ops->adjphase(ops, offset);
   } else if (tx->modes == 0) {
     tx->freq = ptp->dialed_frequency;
     err = 0;
  return err;
2.2.2.3. include/linux/ptp_clock_kernel.h
--- a/include/linux/ptp_clock_kernel.h
+++ b/include/linux/ptp_clock_kernel.h
@@ -125,12 +128,13 @@ struct ptp_clock_info {
  int n_per_out;
  int n_pins;
  int pps;
  struct ptp_pin_desc *pin_config;
  int (*adjfine)(struct ptp_clock_info *ptp, long scaled_ppm);
  int (*adjfreq)(struct ptp_clock_info *ptp, s32 delta);
+ int (*adjphase)(struct ptp_clock_info *ptp, s32 phase);
  int (*adjtime)(struct ptp_clock_info *ptp, s64 delta);
  int (*gettime64)(struct ptp_clock_info *ptp, struct timespec64 *ts);
  int (*gettimex64)(struct ptp_clock_info *ptp, struct timespec64 *ts,
          struct ptp_system_timestamp *sts);
  int (*getcrosststamp)(struct ptp_clock_info *ptp,
```

```
struct system_device_crosststamp *cts);
```

# 2.2.2.4. include/uapi/linux/ptp\_clock.h

```
--- a/include/uapi/linux/ptp_clock.h
+++ b/include/uapi/linux/ptp_clock.h
@@ -86,13 +86,15 @@ struct ptp_clock_caps {
  int n_ext_ts; /* Number of external time stamp channels. */
  int n_per_out; /* Number of programmable periodic signals. */
               /* Whether the clock supports a PPS callback. */
                 /* Number of input/output pins. */
  int n_pins;
  ^{\prime \star} Whether the clock supports precise system-device cross timestamps ^{\star}/
  int cross_timestamping;
  int rsv[13]; /* Reserved for future use. */
+ /* Whether the clock supports adjust phase */
+ int adjust_phase;
+ int rsv[12]; /* Reserved for future use. */
 };
struct ptp_extts_request {
  unsigned int index; /* Which channel to configure. */
  unsigned int flags; /* Bit field for PTP_xxx flags. */
  unsigned int rsv[2]; /* Reserved for future use. */
```

# 2.2.2.5. tools/testing/selftests/ptp/testptp.c

```
--- a/tools/testing/selftests/ptp/testptp.c
+++ b/tools/testing/selftests/ptp/testptp.c
@@ -266,20 +266,22 @@ int main(int argc, char *argv[])
               " %d maximum frequency adjustment (ppb)\n"
               " %d programmable alarms\n"
                  %d external time stamp channels\n"
                  %d programmable periodic signals\n"
                  %d pulse per second\n"
                  %d programmable pins\n"
                  %d cross timestamping\n",
                  %d cross timestamping\n"
               " %d adjust_phase\n",
               caps.max_adj,
               caps.n_alarm,
               caps.n_ext_ts,
               caps.n_per_out,
               caps.pps,
               caps.n_pins,
               caps.cross_timestamping);
               caps.cross_timestamping,
               caps.adjust_phase);
     }
  if (0x7fffffff != adjfreq) {
     memset(&tx, 0, sizeof(tx));
     tx.modes = ADJ_FREQUENCY;
```

# 2.3 Network Interface Requirements

The network interface driver would need to:

- Support ioctl command SIOCETHTOOL
- Support PTP hardware clock (PHC)
  - · Pass PTP Ethernet packet time stamps using the SO\_TIMESTAMPING API
  - Support POSIX clock API clock\_adjtime() with struct timex modes
    - ADJ FREQUENCY
    - · ADJ\_OFFSET
    - ADJ NANO
    - ADJ SETOFFSET
- Support PTP request type
  - PTP CLK REQ PPS
  - PTP\_CLK\_REQ\_EXTTS (PTP\_ENABLE\_FEATURE)

### 2.3.1. ethtool

ethtool can show whether a MAC supports hardware or software time stamping and whether it supports PHC. The following example output indicates support for hardware time stamping listed under Capabilities and is registered as PHC device 0, PTP Hardware Clock: 0.

```
$ ethtool -T eth0
Time stamping parameters for eth0:
Capabilities:
      hardware-transmit (SOF_TIMESTAMPING_TX_HARDWARE)
hardware-receive (SOF_TIMESTAMPING_RX_HARDWARE)
      hardware-raw-clock (SOF_TIMESTAMPING_RAW_HARDWARE)
PTP Hardware Clock: 0
Hardware Transmit Timestamp Modes:
      off
                               (HWTSTAMP_TX_OFF)
                               (HWTSTAMP_TX_ON)
      on
Hardware Receive Filter Modes:
      none
                               (HWTSTAMP_FILTER_NONE)
      all
                               (HWTSTAMP_FILTER_ALL)
```

If the ethtool utility is not on your system, you can compile the utility from the source.

https://git.kernel.org/pub/scm/network/ethtool/ethtool.git

Build ethtool from source example:

```
# Build ethtool from source
$ git clone git://git.kernel.org/pub/scm/network/ethtool/ethtool.git
$ cd ethtool
$ ./autogen.sh
$ ./configure
# CROSS compile for target board, ie. sudo apt-get install gcc-aarch64-linux-gnu
$ make clean all CC=/usr/bin/aarch64-linux-gnu-gcc
# Copy ethtool binary to target board
```

### 2.3.2. SIOCETHTOOL

Used in linuxptp/sk.c to interrogate network interface timestamping capabilities.

```
linuxptp/sk.c:
int sk_get_ts_info(const char *name, struct sk_ts_info *sk_info)
{
#ifdef ETHTOOL_GET_TS_INFO
    struct ethtool_ts_info info;
    ...
    info.cmd = ETHTOOL_GET_TS_INFO;

    err = ioctl(fd, SIOCETHTOOL, &ifr);
    if (err < 0) {
        pr_err("ioctl SIOCETHTOOL failed: %m");
        close(fd);
        goto failed;
...
include/uapi/linux/ethtool.h:
    #define ETHTOOL_GET_TS_INFO 0x00000041 /* Get time stamping and PHC info */</pre>
```

## 2.3.3. SO TIMESTAMPING

https://www.kernel.org/doc/Documentation/networking/timestamping.txt

1. Control Interfaces

```
The interfaces for receiving network packages timestamps are:
* SO_TIMESTAMPING
  Generates timestamps on reception, transmission or both. Supports
  multiple timestamp sources, including hardware. Supports generating
  timestamps for stream sockets.
. . .
1.3 SO_TIMESTAMPING (also SO_TIMESTAMPING_OLD and SO_TIMESTAMPING_NEW):
Supports multiple types of timestamp requests. As a result, this
socket option takes a bitmap of flags, not a boolean. In
  err = setsockopt(fd, SOL_SOCKET, SO_TIMESTAMPING, &val, sizeof(val));
val is an integer with any of the following bits set. Setting other
bit returns EINVAL and does not change the current state.
The socket option configures timestamp generation for individual
sk_buffs (1.3.1), timestamp reporting to the socket's error
queue (1.3.2) and options (1.3.3). Timestamp generation can also
be enabled for individual sendmsg calls using cmsg (1.3.4).
1.3.1 Timestamp Generation
Some bits are requests to the stack to try to generate timestamps. Any
combination of them is valid. Changes to these bits apply to newly
```

created packets, not to packets already in the stack. As a result, it

RENESAS

is possible to selectively request timestamps for a subset of packets (e.g., for sampling) by embedding an send() call within two setsockopt calls, one to enable timestamp generation and one to disable it. Timestamps may also be generated for reasons other than being requested by a particular socket, such as when receive timestamping is enabled system wide, as explained earlier.

#### SOF TIMESTAMPING RX HARDWARE:

Request rx timestamps generated by the network adapter.

### SOF\_TIMESTAMPING\_RX\_SOFTWARE:

Request rx timestamps when data enters the kernel. These timestamps are generated just after a device driver hands a packet to the kernel receive stack.

### SOF\_TIMESTAMPING\_TX\_HARDWARE:

Request tx timestamps generated by the network adapter. This flag can be enabled via both socket options and control messages.

### SOF\_TIMESTAMPING\_TX\_SOFTWARE:

Request tx timestamps when data leaves the kernel. These timestamps are generated in the device driver as close as possible, but always prior to, passing the packet to the network interface. Hence, they require driver support and may not be available for all devices. This flag can be enabled via both socket options and control messages.

### 1.3.4. Enabling timestamps via control messages

In addition to socket options, timestamp generation can be requested per write via cmsg, only for SOF\_TIMESTAMPING\_TX\_\* (see Section 1.3.1). Using this feature, applications can sample timestamps per sendmsg() without paying the overhead of enabling and disabling timestamps via setsockopt:

```
struct msghdr *msg;
 . . .
 cmsg
                          = CMSG_FIRSTHDR(msg);
 cmsg->cmsg_level
                         = SOL_SOCKET;
 cmsg->cmsg_type
                         = SO_TIMESTAMPING;
                          = CMSG_LEN(sizeof(__u32));
 cmsg->cmsg_len
 *((_u32 *) CMSG_DATA(cmsg)) = SOF_TIMESTAMPING_TX_SCHED |
                SOF_TIMESTAMPING_TX_SOFTWARE |
                SOF_TIMESTAMPING_TX_ACK;
 err = sendmsg(fd, msg, 0);
The SOF_TIMESTAMPING_TX_* flags set via cmsq will override
the SOF_TIMESTAMPING_TX_* flags set via setsockopt.
Moreover, applications must still enable timestamp reporting via
setsockopt to receive timestamps:
 __u32 val = SOF_TIMESTAMPING_SOFTWARE |
         SOF_TIMESTAMPING_OPT_ID /* or any other flag */;
 err = setsockopt(fd, SOL_SOCKET, SO_TIMESTAMPING, &val, sizeof(val));
```

. . .

3.1 Hardware Timestamping Implementation: Device Drivers

A driver which supports hardware time stamping must support the SIOCSHWTSTAMP ioctl and update the supplied struct hwtstamp\_config with the actual values as described in the section on SIOCSHWTSTAMP. It should also support SIOCGHWTSTAMP.

Time stamps for received packets must be stored in the skb. To get a pointer to the shared time stamp structure of the skb call skb\_hwtstamps(). Then set the time stamps in the structure:

```
struct skb_shared_hwtstamps {
    /* hardware time stamp transformed into duration
    * since arbitrary point in time
    */
    ktime_t hwtstamp;
};
```

Time stamps for outgoing packets are to be generated as follows:

- In hard\_start\_xmit(), check if (skb\_shinfo(skb)->tx\_flags & SKBTX\_HW\_TSTAMP)
  is set no-zero. If yes, then the driver is expected to do hardware time
  stamping.
- If this is possible for the skb and requested, then declare that the driver is doing the time stamping by setting the flag SKBTX\_IN\_PROGRESS in skb\_shinfo(skb)->tx\_flags , e.g. with

```
skb_shinfo(skb)->tx_flags |= SKBTX_IN_PROGRESS;
```

You might want to keep a pointer to the associated skb for the next step and not free the skb. A driver not supporting hardware time stamping doesn't do that. A driver must never touch sk\_buff::tstamp! It is used to store software generated time stamps by the network subsystem.

- Driver should call skb\_tx\_timestamp() as close to passing sk\_buff to hardware as possible. skb\_tx\_timestamp() provides a software time stamp if requested and hardware timestamping is not possible (SKBTX\_IN\_PROGRESS not set).
- As soon as the driver has sent the packet and/or obtained a hardware time stamp for it, it passes the time stamp back by calling skb\_hwtstamp\_tx() with the original skb, the raw hardware time stamp. skb\_hwtstamp\_tx() clones the original skb and adds the timestamps, therefore the original skb has to be freed now. If obtaining the hardware time stamp somehow fails, then the driver should not fall back to software time stamping. The rationale is that this would occur at a later time in the processing pipeline than other software time stamping and therefore could lead to unexpected deltas between time stamps.

# 2.3.4. PTP CLK REQ EXTTS

Can check if device supports PTP\_CLK\_REQ\_EXTTS by using the testptp utility. For details on testptp, see testptp.

For example, the device /dev/ptp0 supports PTP\_CLK\_REQ\_EXTTS because it says 1 external time stamp channels.

```
# testptp -d /dev/ptp0 -c
capabilities:
  999999999 maximum frequency adjustment (ppb)
  0 programmable alarms
```

- 1 external time stamp channels
- O programmable periodic signals
- 0 pulse per second
- 0 programmable pins
- 0 cross timestamping

### 2.4 Linux PTP Hardware Clock

Linux PTP works with devices with drivers that support the PTP hardware clock (PHC) infrastructure for Linux. Details on Linux PHC subsystem can be found at <a href="https://www.kernel.org/doc/Documentation/ptp/ptp.txt">https://www.kernel.org/doc/Documentation/ptp/ptp.txt</a>.

Clock drivers include include/linux/ptp\_clock\_kernel.h and register themselves by presenting a 'struct ptp\_clock\_info' to the registration method. Clock drivers must implement all of the functions in the interface. If a clock does not offer a particular ancillary feature, then the driver should just return -EOPNOTSUPP from those functions.

Drivers must ensure that all of the methods in interface are reentrant. Since most hardware implementations treat the time value as a 64 bit integer accessed as two 32 bit registers, drivers should use spin\_lock\_irqsave/spin\_unlock\_irqrestore to protect against concurrent access. This locking cannot be accomplished in class driver, since the lock may also be needed by the clock driver's interrupt service routine.

For examples of drivers that support PHC, search for ptp\_clock\_register in the linux kernel source.

Sample of devices that support PHC API (Linux Kernel v5.7):

- drivers/net/ethernet/broadcom/bnx2x/bnx2x\_main.c
- drivers/net/ethernet/broadcom/tg3.c
- drivers/net/ethernet/cadence/macb ptp.c
- drivers/net/ethernet/cavium/common/cavium\_ptp.c
- drivers/net/ethernet/freescale/fec\_ptp.c
- drivers/net/ethernet/intel/e1000e/ptp.c
- drivers/net/ethernet/renesas/ravb\_ptp.c
- drivers/net/phy/dp83640.c

Renesas Timing Devices with PHC driver support:

- drivers/ptp/ptp\_clockmatrix.c
- drivers/ptp/ptp\_idt82p33.c

### 2.4.1. ClockMatrix PHC Driver

The ClockMatrix<sup>™</sup> family includes integrated devices that provide eight PLL channels. Each PLL channel can be independently configured as a frequency synthesizer, jitter attenuator, digitally controlled oscillator (DCO), or a digital phase lock loop (DPLL).

Typically these devices are used as timing references and clock sources for PTP applications.

### 2.4.1.1. Source Code

The ClockMatrix PHC driver with adjust phase support was introduced in Linux v5.8 kernel. The ClockMatrix PHC driver files are located in the Linux kernel ``drivers/ptp`` directory.

Latest driver code can be retrieved from the master branch of the linux kernel.

https://git.kernel.org/pub/scm/linux/kernel/git/stable/linux.git/tree/drivers/ptp?h=master

Files of interest:

- Kconfig
- Makefile
- idt8a340\_reg.h
- ptp\_clockmatrix.h
- ptp\_clockmatrix.c

## Kconfig:

```
config PTP_1588_CLOCK_IDTCM

tristate "IDT CLOCKMATRIX as PTP clock"

depends on PTP_1588_CLOCK && I2C

default n

help

This driver adds support for using IDT CLOCKMATRIX(TM) as a PTP

clock. This clock is only useful if your time stamping MAC

is connected to the IDT chip.

To compile this driver as a module, choose M here: the module

will be called ptp_clockmatrix.
```

### Makefile:

```
...
obj-$(CONFIG_PTP_1588_CLOCK_IDTCM) += ptp_clockmatrix.o
```

### 2.4.1.2. CM PHC Driver Release Notes


Kernel	Date	Description
5.12	2021-02-17	Fixes: Output to internal 1-PPS Alignment not complete when SYS_DPLL not locked.  clean-up - parenthesis around a == b are unnecessary simplify code - remove unnecessary `err` variable coding style - tighten vertical spacing clean-up dev_*() messages add alignment of 1-PPS to idtcm_perout_enable add wait_for_sys_apll_dpll_lock.
5.11	2020-12-09	Fixes: 4.8.7 non-zero phase_adj is lost when driver starts  deprecate firmware older than 4.8.7  fix non-zero phase_adj is lost after snap  remove 5 second delay before entering write phase mode  reset device and check BOOT_STATUS
5.9.12	2020-11-25 2020-08-19	bug fix for idtcm_strverscmp Fixes: I2C write bug for certain platforms use i2c_master_send for i2c write
5.9	2020-07-30	Fixes: Intermittent snap bug for 4.8.0  update to support 4.8.7 firmware

Kernel	Date	Description
5.8	2020-05-02 2020-04-25	Add adjphase() to support PHC write phase mode. Remove unnecessary comparison
5.6	2020-01-07 2020-01-02	Rework clockmatrix version information. Constify copied structure
5.5	2019-11-06 2019-11-03	Fix missing unlock on error in idtcm_probe() Add a ptp clock driver for IDT ClockMatrix

### 2.4.1.3. Device Connection

The ClockMatrix device is expected to output two signals to the PTP time stamping device.

- x MHz as 1588 PTP clock
- 1-PPS to align the rising clock edge of the PTP Timer with ClockMatrix

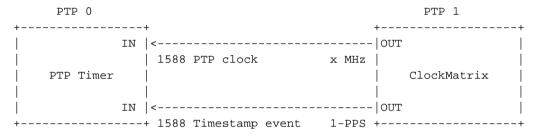

PTP time stamper driver supports: PTP\_CLK\_REQ\_EXTTS

## 2.4.1.4. Kernel Device Tree

Insert ClockMatrix in the appropriate section of the device tree.

Sample entry on the Xilinx ZCU102 board:

```
"
i2c-mux@75 {
    i2c@1 {
        phc@5b { /* Clock Matrix */
            compatible = "idt,8a34000";
        reg = <0x5b>;
        };
};
```

# 2.4.1.5. Kernel .config

```
#
# PTP clock support
#
CONFIG_PTP_1588_CLOCK=y
#
# Enable PHYLIB and NETWORK_PHY_TIMESTAMPING to see the additional clocks.
#
CONFIG_PTP_1588_CLOCK_IDTCM=m
```

### 2.4.1.6. Device Configuration


When the ClockMatrix driver is loaded, it looks in /lib/firmware a configuration file to load into the ClockMatrix device.

The filename is determined during compile time by FW\_FILENAME:

FW\_FILENAME macro is defined in drivers/ptp/ptp\_clockmatrix.h.

Renesas Timing Commander Software using Clockmatrix Timing Commander Personality v8.4. can be used to generate ClockMatrix device configuration .bin file.

#define FW\_FILENAME "idtcm.bin"

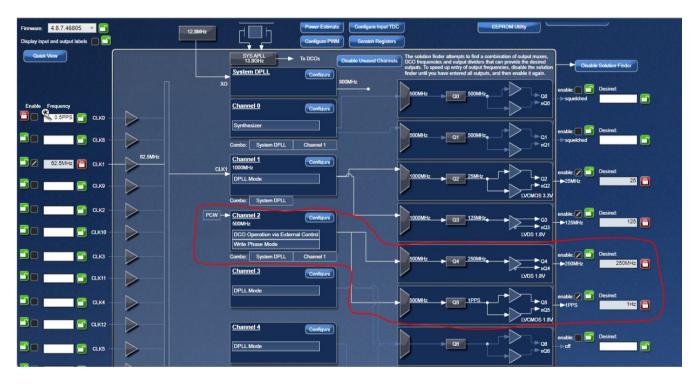



For device configuration support, email  $\underline{\texttt{IDT-support-1588@lm.renesas.com}}$ .

# 3. Getting Started


# 3.1 Sanity Testing

Use <u>testptp</u> and <u>phc\_ctl</u> to check that the 1588 timestamp device and PTP clock device is connected and configured to behave as expected.

- Verify PHC capabilities
- Verify clock's time of day increments
- Verify clock set time
- Verify time stamper incoming 1-PPS from PTP clock
- Verify ts2phc aligns time stamper and 1-PPS from PTP clock
- Verify PTP clock time adjustment affects PTP timestamp
- Verify PTP clock frequency adjustment affects time stamper frequency

Some of the checks can be performed with testptp or phc\_ctl. If the check passes using one of the programs, there is no need to repeat the same check using the other program.

The following example logs were captured using the Xilinx ZCU102 board with a ClockMatrix device as the PTP clock.

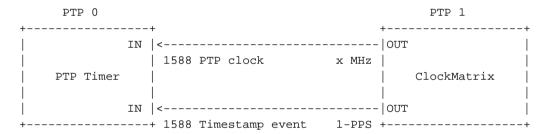

PTP time stamper driver supports: PTP\_CLK\_REQ\_EXTTS

/dev/ptp0, Xilinx Timer, is the time stamper for 1588 packets.

/dev/ptp1, ClockMatrix, is the PTP clock source to the time stamper.

There is an expectation that the PTP timestamp with 0 nanoseconds aligns with the rising edge of outgoing 1-PPS clock signal.

# 3.1.1. Verify PHC Capabilities

For the Xilinx time stamper, the PHC driver must support at least one "external time stamp channels"...

For the ClockMatrix device, the PHC driver must support at least one "programmable periodic signals" to generate the 1-PPS to the Xilinx time stamper.

### testptp

For Xilinx timer stamper:

```
$ ./testptp -d /dev/ptp0 -c
capabilities:
  999999999 maximum frequency adjustment (ppb)
  0 programmable alarms
  1 external time stamp channels
  0 programmable periodic signals
  0 pulse per second
  0 programmable pins
  0 cross timestamping
```

### For ClockMatrix device:

```
$ ./testptp -d /dev/ptp1 -c
capabilities:
   244000 maximum frequency adjustment (ppb)
0 programmable alarms
0 external time stamp channels
12 programmable periodic signals
0 pulse per second
0 programmable pins
0 cross timestamping
```

### phc\_ctl

### For Xilinx timer stamper:

```
$ ./phc_ctl /dev/ptp0 -- caps
phc_ctl[60.986]:
capabilities:
   999999999 maximum frequency adjustment (ppb)
   0 programable alarms
   1 external time stamp channels
   0 programmable periodic signals
   0 configurable input/output pins
   doesn't have pulse per second support
   doesn't have cross timestamping support
```

### For ClockMatrix device:

```
$ ./phc_ctl /dev/ptp0 -- caps
phc_ctl[94.634]:
capabilities:
   244000 maximum frequency adjustment (ppb)
   0 programable alarms
   0 external time stamp channels
   12 programmable periodic signals
   0 configurable input/output pins
   doesn't have pulse per second support
   doesn't have cross timestamping support
```

# 3.1.2. Verify Clocks Increment

If the PTP device is working (i.e., the input clock is present), repeated command to get the clock time should show incremental readings.

### testptp

For Xilinx timer stamper.

```
$./testptp -d /dev/ptp0 -g
clock time: 1595449857.649425272 or Wed Jul 22 20:30:57 2020
$ ./testptp -d /dev/ptp0 -g
clock time: 1595449859.400688308 or Wed Jul 22 20:30:59 2020
For ClockMatrix device:
$ ./testptp -d /dev/ptp1 -g
clock time: 1595449899.113274703 or Wed Jul 22 20:31:39 2020
$ ./testptp -d /dev/ptp1 -g
clock time: 1595449900.072974835 or Wed Jul 22 20:31:40 2020
```

### phc ctl

```
For Xilinx timer stamper.
```

# 3.1.3. Verify Clock Set Time

Check clock set time was able set to 1000 seconds and then 0 seconds.

For Xilinx timer stamper.

```
$ ./phc_ctl /dev/ptp0 -- set 1000
phc_ctl[12839.455]: set clock time to 1000.00000000 or Thu Jan 1 00:16:40 1970
$ ./phc_ctl /dev/ptp0 -- get
phc ctl[12842.198]: clock time is 1002.743910000 or Thu Jan 1 00:16:42 1970
$ ./phc_ctl /dev/ptp0 -- set 0
phc_ctl[12852.670]: set clock time to 0.000000000 or Thu Jan 1 00:00:00 1970
$ ./phc_ctl /dev/ptp0 -- get
phc_ctl[12854.174]: clock time is 1.504634712 or Thu Jan 1 00:00:01 1970
For ClockMatrix device:
$ ./phc_ctl /dev/ptp1 -- set 1000
phc_ctl[13015.464]: set clock time to 1000.00000000 or Thu Jan 1 00:16:40 1970
$ ./phc_ctl /dev/ptp1 -- get
phc_ctl[13022.248]: clock time is 1006.783599918 or Thu Jan 1 00:16:46 1970
$ ./phc_ctl /dev/ptp1 -- set 0
phc_ctl[13025.308]: set clock time to 0.000000000 or Thu Jan 1 00:00:00 1970
$ ./phc_ctl /dev/ptp1 -- get
phc_ctl[13026.747]: clock time is 1.439099534 or Thu Jan 1 00:00:01 1970
```

# 3.1.4. Verify Time Stamper Incoming 1-PPS from PTP Clock

Since the Xilinx timer should be receiving a 1-PPS input, it should show periodic 1 second events.

```
$ ./testptp -e 5000 -d /dev/ptp0 external time stamp request okay event index 0 at 1797.085533392 event index 0 at 1799.085533392 event index 0 at 1800.085533392 event index 0 at 1801.085533392 event index 0 at 1802.085533392 event index 0 at 1802.085533392
```

```
event index 0 at 1803.085533392
```

There may be an accumulation of 1-PPS events, and you may see the display scroll rapidly. However, the 1-PPS event queue should flush relatively quickly and you should see the display incrementing every second.

To quit testptp loop, press Ctrl+C.

If the 1-PPS clock going into the Xilinx timer is missing, there will be no event index output after external time stamp request okay is displayed.

```
$ ./testptp -e 5000 -d /dev/ptp0
external time stamp request okay
```

To quit testptp loop, press Ctrl+C.

# 3.1.5. Verify ts2phc Aligns Time Stamper and 1-PPS from PTP Clock

- 1. Set time stamper time to 1000.5 seconds.
- 2. Set PHC time to 80000 seconds.
- 3. Run ts2phc with debug log enabled to align time stamper to PHC clock.

When using ts2phc with a ClockMatrix device, the message: PTP\_PIN\_SETFUNC failed: Invalid argument may pop up. The ClockMatrix PHC driver does not support dynamic PTP\_PIN\_SETFUNC yet. This message can be ignored because the ClockMatrix device is expected to be configured to output the expected 1-PPS during start-up.

```
$ cat ts2phc.cfg
# ts2phc config file to get it to behave like syncd to align
# time stamper to PHC device's 1-PPS signal.
# Example:
# ./ts2phc -m -q -f ts2phc.cfg
#
[global]
clock_servo nullf
first_step_threshold 0.000000001
step_threshold 0.000000001
# time stamper, slave device
[/dev/ptp0]
ts2phc.channel 0
# PHC device (ex. CM), master device
# Set ts2phc.channel to 2 for Sabre
[/dev/ptp1]
ts2phc.master 1
ts2phc.channel 5
# Set time stamper time to 1000.5 seconds.
$ ./phc_ctl /dev/ptp0 -- set 1000.5
phc_ctl[15170.818]: set clock time to 1000.500000000 or Thu Jan 1 00:16:40 1970
# Set PHC time to 80000 seconds.
```

```
#
$ ./phc_ctl /dev/ptp1 -- set 80000
phc_ctl[15188.347]: set clock time to 80000.00000000 or Thu Jan 1 22:13:20 1970
# Run ``ts2phc`` with debug log enabled to align time stamper to PHC clock.
$ ./ts2phc -mqf ts2phc.cfq -l 7
ts2phc[15208.103]: config item (null).message tag is '(null)'
ts2phc[15208.104]: config item (null).verbose is 1
ts2phc[15208.104]: config item (null).use_syslog is 0
ts2phc[15208.104]: config item (null).logging_level is 7
ts2phc[15208.104]: config item /dev/ptp0.ts2phc.master is 0
ts2phc[15208.104]: config item (null).clock_servo is 3
ts2phc[15208.104]: config item /dev/ptp0.ts2phc.pin_index is 0
ts2phc[15208.104]: config item /dev/ptp0.ts2phc.channel is 0
ts2phc[15208.104]: config item /dev/ptp0.ts2phc.extts_polarity is 2
ts2phc[15208.104]: config item /dev/ptp0.ts2phc.extts_correction is 0
ts2phc[15208.104]: config item /dev/ptp0.ts2phc.pulsewidth is 500000000
ts2phc[15208.104]: config item (null).free_running is 0
ts2phc[15208.104]: PHC slave /dev/ptp0 has ptp index 0
ts2phc[15208.104]: config item (null).step_threshold is 0.000000
ts2phc[15208.104]: config item (null).first_step_threshold is 0.000000
ts2phc[15208.104]: config item (null).max_frequency is 900000000
ts2phc[15208.104]: config item (null).servo_offset_threshold is 0
ts2phc[15208.104]: config item (null).servo_num_offset_values is 10
ts2phc[15208.104]: config item /dev/ptpl.ts2phc.master is 1
ts2phc[15208.105]: PHC master /dev/ptpl has ptp index 0
ts2phc[15208.105]: config item /dev/ptp1.ts2phc.channel is 5
ts2phc[15208.105]: config item /dev/ptp1.ts2phc.pin_index is 0
PTP_PIN_SETFUNC failed: Invalid argument
ts2phc[15208.105]: Failed to set the pin. Continuing bravely on...
ts2phc[15209.346]: /dev/ptp0 extts index 0 at 1039.030816420 corr 0 src 80021.400568 diff -78981969183580
ts2phc[15209.346]: /dev/ptp0 master offset -78981969183580 s1 freq+0
ts2phc[15210.346]: /dev/ptp0 extts index 0 at 80022.000000000 corr 0 src 80022.400672 diff 0
ts2phc[15210.346]: /dev/ptp0 master offset 0 s2 freq+0
ts2phc[15211.346]: /dev/ptp0 extts index 0 at 80023.00000000 corr 0 src 80023.400674 diff 0
ts2phc[15211.346]: /dev/ptp0 master offset 0 s2 freq+0
ts2phc[15212.346]: /dev/ptp0 extts index 0 at 80024.000000000 corr 0 src 80024.400728 diff 0
ts2phc[15212.346]: /dev/ptp0 master offset 0 s2 freq+0
ts2phc[15213.346]: /dev/ptp0 extts index 0 at 80025.000000000 corr 0 src 80025.300776 diff 0
ts2phc[15213.346]: /dev/ptp0 master offset 0 s2 freq+0
```

s1 means unlock state and s2 is the locked state (i.e., master and are aligned). The states in ts2phc are independent of the states in ptp4l.

### Looking closer at the following lines:

```
PHC slave /dev/ptp0 has ptp index 0
...

PHC master /dev/ptp1 has ptp index 0
...

/dev/ptp0 extts index 0 at 1039.030816420 corr 0 src 80021.400568 diff -78981969183580
/dev/ptp0 master offset -78981969183580 s1 freq+0
/dev/ptp0 extts index 0 at 80022.000000000 corr 0 src 80022.400672 diff 0
```

1039.030816420 is the time from /dev/ptp0, the PHC slave.

80021.400568 is the time from /dev/ptp1, the PHC master.

diff -78981969183580 or master offset -78981969183580 is in nanoseconds, ie. -78981.969183580 s.

To align the PHC slave, ts2phc will take the difference between the PHC masters and adjust the PHC slave accordingly.

Note after the adjustment, the master offset becomes 0.

```
/dev/ptp0 master offset -78981969183580 s1 freq+0
...
/dev/ptp0 master offset 0 s2 freq+0
...
/dev/ptp0 master offset 0 s2 freq+0
```

When you stop ts2phc, it will disable the PTP clock's 1-PPS output. Running ts2phc will enable it again.

# 3.1.6. Verify PTP Clock Time Adjustment Affects PTP Timestamp

Prerequisites:

- PTP master configured for 1 packet per second internal
- Run ``ts2phc`` in the background
- Run ``ptp4l`` as a slave in free run mode in the background using the time stamper PHC (i.e. no -p option)

ptp41 can be configured into "free run" mode by adding "free\_running 1" to the ptp4l configuration file.

Or by adding "--free\_running=1" at the command line when starting ptp41.

The plan is to monitor the master offset from ptp41 as we manually change the ToD counter on the PTP clock.

The master offset value in ptp41 output represents the measured offset from the master in nanoseconds.

```
$ cat debug2.cfg
[global]
domainNumber 4
# Announce messages
announceReceiptTimeout 2
logAnnounceInterval 1
# Sync/Delay_Req/Delay_Resp messages
\# ex. 0 = 1-PPS, -3 = 8 PPS, -4 = 16 PPS
logSyncInterval 0
logMinDelayReqInterval 0
slaveOnly 1
masterOnly 0
clockClass 255
hybrid_e2e 1
inhibit_multicast_service 1
unicast_listen 1
unicast_req_duration 300
network_transport UDPv4
[unicast_master_table]
table_id 1
logQueryInterval 2
UDPv4 10.64.10.1
[eth0]
unicast_master_table 1
#
```

```
# Run ts2phc in background to align PHC clock to time stamper
$ ./ts2phc -mq -f ts2phc.cfg&
[1] 4611
PTP_PIN_SETFUNC failed: Invalid argument
ts2phc[31300.670]: Failed to set the pin. Continuing bravely on...
# Run ptp4l in free run mode against a 1-PPS master to monitor
# the effect of stepping the PTP clock.
$ ./ptp4l -mqf debug2.cfg --free_running=1&
ptp41[31666.715]: master offset -1614041727993934660 s0 freq -68 path delay 7723
# Master offset is -1614041727993934660 ns, so need to adj +
# phc_ctl adj value is in seconds.
$ ./phc_ctl /dev/ptp1 -- adj 1614041727.993934660
phc_ctl[31763.871]: adjusted clock by 1614041727.993935 seconds
ptp41[31766.706]: master offset-5636 s0 freq -304195 path delay 7719
ptp41[31768.706]: master offset-5785 s0 freq -72 path delay 7724
ptp41[31770.706]: master offset-5900 s0 freq -56 path delay 7727
If the initial offset master offset was positive, use a negative adj value.
ptp41[32019.682]: master offset 199999266496145525 s0 freq
                                                               -48 path delay 7722
# Master offset is 199999266496145525 ns, so need to adj -
# phc_ctl adj value is in seconds.
$ ./phc_ctl /dev/ptp1 -- adj -199999266.496145525
phc_ctl[32075.860]: adjusted clock by -199999266.496146 seconds
                                   -3266 s0 freq +100010 path delay 7725
-3359 s0 freq -48 path delay 7722
ptp41[32077.677]: master offset
ptp41[32079.677]: master offset
ptp41[32081.676]: master offset
                                     -3487 s0 freq
                                                        -64 path delay 7722
```

# 3.1.7. Verify PTP Clock Frequency Adjustment Affects Time Stamper Frequency

### Prerequisites:

- PTP master configured for 1 packet per second internal
- Run ts2phc in the background
- Run ptp41 as a slave in free run mode in the background using the time stamper PHC (i.e. no -p option)

ptp41 can be configured into "free run" mode by adding "free\_running 1" to the ptp41 configuration file.

Or by adding "--free\_running=1" at the command line when starting ptp41.

The plan is to monitor the increase/decrease in the master offset from ptp41 as we manually change the frequency.

The freq value in ptp41 output represents the frequency adjustment of the clock in parts per billion, ppb, to converge to zero using pi\_servo. However, we are running in free run so no adjustments are made

```
#
   Run ts2phc in background to align PHC clock to time stamper
$ ./ts2phc -mq -f ts2phc.cfg&
# Run ptp4l in free run mode against a 1-PPS master to monitor
# the effect of stepping the PTP clock.
$ ./ptp4l -mqf debug2.cfg --free_running=1&
ptp41[43236.627]: master offset -1614053583657415603 s0 freq -60 path delay 7730
# Adjust master offset close to 0 so it is easier to see freq changes.
$ ./phc_ctl /dev/ptp1 -- adj 1614053583.657414804
phc_ctl[43237.739]: adjusted clock by 1614053583.657415 seconds
ptp41[43238.626]: master offset -1614053583657415723 s0 freq -60 path delay 7730
ptp41[43240.626]: master offset
                                                         -923 s0 freq +999999999 path delay 7726
. . .
                                                       -1587 s0 freq
ptp41[43252.625]: master offset
                                                                                     -52 path delay
                                                                                                                     7726
ptp41[43254.625]: master offset
                                                       -1725 s0 freq
                                                                                    -68 path delay
                                                                                                                    7728
# Master offset is -, adj +freq to make offset more positive
\# Note the sudden increase in the master offset above 0
$ ./phc_ctl /dev/ptp1 -- freq 100000
phc_ctl[43256.419]: adjusted clock frequency offset to 100000.000000ppb
ptp41[43256.625]: master offset 18739 s0 freq +10232 path delay
                                                                                                                    7728

      ptp41[43258.625]:
      master offset
      218724 s0 freq
      +99978 path delay

      ptp41[43260.624]:
      master offset
      418657 s0 freq
      +99954 path delay

      ptp41[43262.624]:
      master offset
      619941 s0 freq
      +99962 path delay

      ptp41[43264.624]:
      master offset
      836138 s0 freq
      +99972 path delay

      ptp41[43266.624]:
      master offset
      1036107 s0 freq
      +99936 path delay

                                                                                                                    7719
                                                                                                                   7714
                                                                                                                   6374
                                                                                                                   -9859
                                                                                                                   -9936
# Master offset is +, adj -freq to make offset more negative
\# Note the sudden decrease in the master offset to below 0
$ ./phc_ctl /dev/ptp1 -- freq -100000
phc_ctl[43267.670]: adjusted clock frequency offset to -100000.000000ppb

      ptp41[43270.623]:
      master offset
      845291 s0 freq -100066 path delay -9936

      ptp41[43272.623]:
      master offset
      637303 s0 freq -100070 path delay -2068

      ptp41[43274.623]:
      master offset
      428607 s0 freq -100082 path delay 6484

      ptp41[43276.623]:
      master offset
      209219 s0 freq -100090 path delay 25712

      ptp41[43278.623]:
      master offset
      2421 s0 freq -100058 path delay 32414

      ptp41[43280.622]:
      master offset
      -197723 s0 freq -100082 path delay 32414

#
```

```
# Set freq to 0 to return to neutral position, will drift naturally.
# Note the return to a more stable master offset
$ ./phc_ctl /dev/ptp1 -- freq 0
phc_ctl[43281.814]: adjusted clock frequency offset to 0.000000ppb
ptp41[43282.622]: master offset -311498 s0 freq -59672 path delay 26853
                                                    -56 path delay
ptp41[43284.622]: master offset
                                 -308916 s0 freq
ptp41[43286.622]: master offset
                                 -305015 s0 freq
                                                     -32 path delay 20194
ptp41[43288.622]: master offset
                                 -302327 s0 freq
                                                     -80 path delay 17346
ptp41[43290.622]: master offset
                                 -297620 s0 freq
                                                    -52 path delay 12535
```

# 3.2 ts2phc

ts2phc one of the utilities under Linux PTP, is used to align the timestamping device with the Renesas timing device.

```
# ./ts2phc -h
usage: ts2phc [options]
 -c [dev|name] phc slave clock (like /dev/ptp0 or eth0)
                (may be specified multiple times)
 -f [file]
                read configuration from 'file'
 -h
                prints this message and exits
                set the logging level to 'num'
 -1 [num]
                print messages to stdout
 -m
                do not print messages to the syslog
 -q
 -s [dev|name] source of the PPS signal
                may take any of the following forms:
                    generic
                             - an external 1-PPS without ToD information
                    /dev/ptp0 - a local PTP Hardware Clock (PHC)
                              - a local PTP Hardware Clock (PHC)
                    eth0
                    nmea
                              - a gps device connected by serial port or network
                prints the software version and exits
 - 77
```

When using ts2phc with a ClockMatrix device, the message: PTP\_PIN\_SETFUNC failed: Invalid argument may pop up. The ClockMatrix PHC driver does not support dynamic PTP\_PIN\_SETFUNC yet. This message can be ignored because the ClockMatrix device is expected to be configured to output the expected 1-PPS during start-up.

# 3.3 ptp4l

ptp41 is an implementation of the Precision Time Protocol (PTP) according to IEEE standard 1588 for Linux. It implements Boundary Clock (BC), Ordinary Clock (OC), and Transparent Clock (TC).

```
usage: ptp41 [options]

Delay Mechanism

-A         Auto, starting with E2E
-E         E2E, delay request-response (default)
-P         P2P, peer delay mechanism

Network Transport

-2         IEEE 802.3
-4         UDP IPV4 (default)
-6         UDP IPV6
```

```
Time Stamping
-H
         HARDWARE (default)
-S
         SOFTWARE
         LEGACY HW
-T.
Other Options
-f [file] read configuration from 'file'
-i [dev] interface device to use, for example 'eth0'
          (may be specified multiple times)
-p [dev] Clock device to use, default auto
          (ignored for SOFTWARE/LEGACY HW time stamping)
         slave only mode (overrides configuration file)
-8
-l [num] set the logging level to 'num'
         print messages to stdout
-m
         do not print messages to the syslog
-q
- 77
         prints the software version and exits
         prints this message and exits
-h
```

Various ptp41 sample configuration files are in the linuxptp>/configs directory. For more info about ptp41 configuration parameters see man page for ptp41.

```
man -1 ptp41.8
```

To use the adjust phase feature, the following configuration parameters are important:

```
servo_num_offset_values
```

The number of offset values considered in order to transition from the  ${\tt SERVO\_LOCKED\_STABLE}$  state.

The transition occurs once the last 'servo\_num\_offset\_values' offsets are all below the 'servo\_offset\_threshold' value.

### servo\_offset\_threshold

The offset threshold used in order to transition from the SERVO\_LOCKED to the SERVO\_LOCKED\_STABLE state. The transition occurs once the last 'servo\_num\_offset\_values' offsets are all below the threshold value. The default value of offset\_threshold is 0 (disabled).

### tsproc\_mode

Select the time stamp processing mode used to calculate offset and delay. Possible values are filter, raw, filter\_weight, raw\_weight. Raw modes perform well when the rate of sync messages (logSyncInterval) is similar to the rate of delay messages (logMinDelayReqInterval or logMinPdelayReqInterval). Weighting is useful with larger network jitters (e.g. software time stamping). The default is filter.

### write\_phase\_mode

This option enables using the "write phase" feature of a PTP Hardware Clock. If supported by the device, this mode uses the hardware's built in phase offset control instead of frequency offset control. The default value is 0 (disabled).

# 3.3.1. Example Write Phase Mode Configuration

```
first_step_threshold 0.000020000
step_threshold 0.000020000
tx_timestamp_timeout 100

write_phase_mode 1
servo_offset_threshold 100
servo_num_offset_values 64
tsproc_mode raw
```

tsproc\_mode in raw mode to let the hardware filter do the time stamp filtering.

Write phase adjustments only happen in SERVO\_LOCK\_STABLE state.


Configure the <code>servo\_offset\_threshold</code> and <code>servo\_num\_offset\_values</code> so that it is close enough to 0 offset so that the hardware filtering, which has limited bandwidth, can converge to zero in a relatively short period of time.

# 3.4 Sample Session

The following sample session is on a Xilinx ZCU102 board with a ClockMatrix device.

CM DPLL2 is the 1588 PTP clock to the Xilinx Timer.

The Xilinx Timer is registered as ptp0 and ClockMatrix is registered as ptp1.

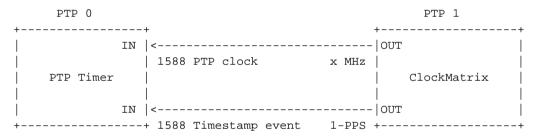

PTP time stamper driver supports: PTP\_CLK\_REQ\_EXTTS

### Start ts2phc

We want time adjustments and no frequency adjustments, so we configure ts2phc to use the nullf servo.

Sample configuration ts2phc.cfg:

```
$ cat ts2phc.cfg

#
# ts2phc config file to get it to behave like syncd to align
# time stamper to PHC device's 1-PPS signal.
#
# Example:
# ./ts2phc -m -q -f ts2phc.cfg
#

[global]
clock_servo nullf
first_step_threshold 0.000000001
step_threshold 0.000000001
# time stamper, slave device
[/dev/ptp0]
ts2phc.channel 0
```

```
# PHC device (ex. CM), master device
[/dev/ptp1]
ts2phc.master 1
ts2phc.channel 5
```

Continuing with the example on the Xilinx ZCU102 board:

- Xilinx time stamping device is eth0 or ptp0
- ClockMatrix is ptp1

ptp0 is the slave clock (i.e., it needs to align itself with the incoming 1-PPS from the source clock (ClockMatrix)).

When first starting ts2phc, it may be beneficial to see the log messages.

```
$ ./ts2phc -m -q -f ts2phc.cfg -l 7
ts2phc[84.381]: config item /dev/ptp0.ts2phc.master is 0
ts2phc[84.382]: config item (null).clock_servo is 3
ts2phc[84.382]: config item /dev/ptp0.ts2phc.pin_index is 0
ts2phc[84.382]: config item /dev/ptp0.ts2phc.channel is 0
ts2phc[84.382]: config item /dev/ptp0.ts2phc.extts_polarity is 2
ts2phc[84.382]: config item /dev/ptp0.ts2phc.extts_correction is 0
ts2phc[84.382]: config item /dev/ptp0.ts2phc.pulsewidth is 500000000
ts2phc[84.382]: config item (null).free_running is 0
ts2phc[84.382]: PHC slave /dev/ptp0 has ptp index 0
ts2phc[84.382]: config item (null).step_threshold is 0.000000
ts2phc[84.382]: config item (null).first_step_threshold is 0.000000
ts2phc[84.382]: config item (null).max_frequency is 900000000
ts2phc[84.382]: config item (null).servo_offset_threshold is 0
ts2phc[84.382]: config item (null).servo_num_offset_values is 10
ts2phc[84.382]: config item /dev/ptp1.ts2phc.master is 1
ts2phc[84.383]: PHC master /dev/ptp1 has ptp index -1
ts2phc[84.383]: config item /dev/ptp1.ts2phc.channel is 5
ts2phc[84.383]: config item /dev/ptp1.ts2phc.pin_index is 0
PTP_PIN_SETFUNC failed: Invalid argument
ts2phc[84.383]: Failed to set the pin. Continuing bravely on...
ts2phc[85.113]: /dev/ptp0 extts index 0 at 169492.956561892 corr 0 src 10.465738 diff 169482956561892
ts2phc[85.113]: /dev/ptp0 master offset 169482956561892 s1 freq+0
ts2phc[86.112]: /dev/ptp0 extts index 0 at 11.000000000 corr 0 src 11.265748 diff 0
ts2phc[86.112]: /dev/ptp0 master offset 0 s2 freq+0
ts2phc[87.112]: /dev/ptp0 extts index 0 at 12.000000000 corr 0 src 12.265798 diff 0
ts2phc[87.112]: /dev/ptp0 master offset 0 s2 freq+0
ts2phc[88.112]: /dev/ptp0 extts index 0 at 13.000000000 corr 0 src 13.265798 diff 0
ts2phc[88.112]: /dev/ptp0 master offset 0 s2 freq+0
```

Failed to set the pin. Continuing bravely on... is expected, this will be addressed in a future version of the ClockMatrix PHC driver.

ptp0 extts index 0 at 169492.956561892 tells us the counter value on the rising edge of the incoming 1-PPS signal on ptp0.

Alignment is achieved when the sub-second portion of the counter is 0.

ts2phc shows that ptp0 had a 956561892 ns offset at the rising edge of the incoming 1-PPS signal.

ts2phc adjusted Xilinx's timer to reduce the sub-second offset to 0.

```
ts2phc[85.113]: /dev/ptp0 master offset 169482956561892 s1 freq +0
```

ts2phc subsequently reports that ptp0 is aligned with ptp1's PPS, ie. diff 0

The Xilinx timer time stamp jumped from xxxx.956561892 to xxxx.000000000.

```
ts2phc[86.112]: /dev/ptp0 extts index 0 at 11.000000000 corr 0 src 11.265748 diff 0
```

The subsequent 1-PPS events show 0 sub-second values ``12.00000000`` and ``13.00000000`` which indicates ``ptp0`` is aligned with the incoming 1-PPS signal from ClockMatrix.

```
ts2phc[87.112]: /dev/ptp0 extts index 0 at 12.000000000 corr 0 src 12.265798 diff 0 ts2phc[88.112]: /dev/ptp0 extts index 0 at 13.000000000 corr 0 src 13.265798 diff 0
```

Once the system is behaving as expected, ts2phc can be started as a background process without the verbose messaging.

```
$ ./ts2phc -m -q -f ts2phc.cfg &
PTP_PIN_SETFUNC failed: Invalid argument
ts2phc[31.038]: Failed to set the pin. Continuing bravely on...
```

### Start ptp4I

The following examples use ptp41 compiled from the linuxptp master branch, Fri Feb 26, 2021, commit f774703cb1.

### 3.4.1.1. Unicast

The following is a sample ptp41 configuration file for a unicast master.

Please ensure the domainNumber matches the unicast master's domainNumber; otherwise, the unicast requests will be ignored by the unicast master.

```
$ cat standalone_G.8275.2.cfg
# Telecom G.8275.2 T-TSC example configuration containing those attributes
# which either differ from the defaults or are relevant to the profile.
[global]
domainNumber
                                  44
slaveOnly
                                  1
                                  0
masterOnly
# Announce messages
announceReceiptTimeout
                                  2
logAnnounceInterval
# Sync/Delay_Reg/Delay_Resp messages
\# ex. 0 = 1-PPS, -3 = 8 PPS, -4 = 16 PPS
logSyncInterval
                                  -4
logMinDelayReqInterval
                                  -4
# step_window is in units of sync packets
# 3 seconds:
#@ 16 PPS, set to 48
#@ 1 PPS, set to 3
step_window
                                  48
clockClass
                                  255
```

# Linux PTP Using PHC Adjust Phase Quick Start Guide

clockAccuracy	0xFE
timeSource	0xa0
maxStepsRemoved	255
_	
offsetScaledLogVariance	0xffff
G.8275.defaultDS.localPriority	128
G.8275.portDS.localPriority	128
priority1	128
priority2	255
dataset_comparison	G.8275.x
transportSpecific	0
cransportspectific	Ü
clock_type	OC
delay_mechanism	E2E
first_step_threshold	0.000020000
step_threshold	0.000020000
tx_timestamp_timeout	1000
write_phase_mode	0
servo_offset_threshold	100
servo_num_offset_values	64
tsproc_mode raw	0 1
network_transport	UDPv4
hybrid_e2e	1
inhibit_multicast_service	1
unicast_listen	1
unicast_req_duration	300
[unicast_master_table]	
table_id	1
logQueryInterval	2
UDPv4	10.64.10.1
	<del></del>
[eth0]	
unicast_master_table	1

The sample configuration file is for G.8275.2, but we can use it as an example for a unicast master.

With ts2phc running in the background, ptp41 is used to synchronize with a PTP master.

### Unicast slave using standalone.G.8275.2.cfg with 16 PPS for Sync/Delay Request

\_\_\_\_\_\_

```
Option
                           Description
_____
-m
                           Print messages to stdout
                           Do not print messages to the syslog
-p /dev/ptp1
                           Use PHC clock device /dev/ptp1
-p /dev/ptp1
-f standalone.G.8275.2.cfg Read configuration from standarone.G.02.0.....

Consintimber 4 Override the domainNumber at the command line to match GM
______
$ ./ptp4l -m -q -p /dev/ptp1 -f standalone_G.8275.2.cfg --domainNumber 4
option slaveOnly is deprecated, please use clientOnly instead
ptp41[28.339]: selected /dev/ptp1 as PTP clock
ptp41[28.341]: port 0 (/var/run/ptp41): hybrid_e2e only works with E2E
ptp41[28.341]: port 0 (/var/run/ptp4lro): hybrid_e2e only works with E2E
ptp41[28.341]: port 1 (eth0): taking /dev/ptp1 from the command line, not the attached ptp0
ptp41[28.362]: port 1 (eth0): INITIALIZING to LISTENING on INIT_COMPLETE
ptp41[28.362]: port 0 (/var/run/ptp41): INITIALIZING to LISTENING on INIT_COMPLETE
ptp41[28.362]: port 0 (/var/run/ptp4lro): INITIALIZING to LISTENING on INIT_COMPLETE
ptp41[32.782]: port 1 (eth0): new foreign master 00b0ae.fffe.02e810-1
ptp41[32.988]: selected local clock 000a35.fffe.00bf01 as best master
ptp41[36.782]: selected best master clock 00b0ae.fffe.02e810
ptp41[36.782]: updating UTC offset to 37
ptp41[36.782]: port 1 (eth0): LISTENING to UNCALIBRATED on RS SLAVE
ptp41[41.973]: clockcheck: clock jumped forward or running faster than expected!
ptp41[43.911]: port 1 (eth0): UNCALIBRATED to SLAVE on MASTER_CLOCK_SELECTED
ptp41[44.410]: rms 807315252816901888 max 1614630505633803776 freq
                                                              -34 + / - 174 delay 7705 + / -
ptp41[45.410]: rms 120 max 172 freq -203 +/- 17 delay 7709 +/- 10
ptp41[47.410]: rms 20 max 40 freq -53 +/- 13 delay 7709 +/-
ptp41[48.410]: rms 15 max 34 freq
                                   -43 +/- 18 delay 7702 +/-
                  7 max 16 freq
                                    -56 +/- 12 delay 7705 +/- 7
ptp41[49.410]: rms
                                                              9
                 12 max
                                    -62 +/- 20 delay 7703 +/-
ptp41[50.410]: rms
                          20 freq
                                    -56 +/- 12 delay 7710 +/-
ptp41[51.410]: rms
                  7 max
                          18 freq
ptp41[52.410]: rms
                          22 freq
                                    -57 +/- 14 delay 7708 +/- 11
                   8 max
                                    -61 +/- 11 delay 7710 +/-
ptp41[53.410]: rms 7 max
                          14 freq
ptp41[54.410]: rms 12 max
                          26 freq
                                    -56 +/- 20 delay 7708 +/-
ptp41[55.409]: rms 7 max
                          12 freq
                                    -52 +/- 11 delay 7708 +/-
                          14 freq
                                    -60 +/- 14 delay 7705 +/- 10
ptp41[56.409]: rms
                 9 max
                                    -62 +/- 19 delay 7705 +/- 11
ptp41[57.409]: rms 11 max
                          24 freq
ptp41[58.409]: rms
                   9 max
                          24 freq
                                    -56 +/- 15 delay
                                                      7708 +/-
ptp41[59.409]: rms
                 13 max
                          28 freq
                                    -61 +/- 21 delay 7706 +/-
ptp41[60.409]: rms
                                    -51 +/-
                                            8 delay 7708 +/-
                   6 max
                          12 freq
```

# Unicast slave using standalone.G.8275.2.cfg at 1-PPS Sync/Delay Request

Option	Description
-m	Print messages to stdout
-q	Do not print messages to the syslog
-p /dev/ptp1	Use PHC clock device /dev/ptp1
-f standalone.G.8275.2.cfg	Read configuration from standalone.G.8275.2.cfg
domainNumber 4	Override the domainNumber at the command line to match GM
-step_window 3	Delay 3 sync packets after $adjtime()$ to allow timestamps to settle
logSyncInterval 0	Sync packet rate at 1-PPS
logMinDelayReqInterval 0	Delay request packet rate at 1-PPS

```
$ ./ptp41 -mq -p /dev/ptp1 -f standalone_G.8275.2.cfg --domainNumber 4 --step_window 3 --
logSyncInterval 0 --logMinDelayReqInterval 0
option slaveOnly is deprecated, please use clientOnly instead
ptp41[54.219]: selected /dev/ptp1 as PTP clock
ptp41[54.221]: port 0 (/var/run/ptp41): hybrid_e2e only works with E2E
ptp41[54.221]: port 0 (/var/run/ptp4lro): hybrid_e2e only works with E2E
ptp41[54.221]: port 1 (eth0): taking /dev/ptp1 from the command line, not the attached ptp0
ptp41[54.242]: port 1 (eth0): INITIALIZING to LISTENING on INIT_COMPLETE
ptp41[54.242]: port 0 (/var/run/ptp41): INITIALIZING to LISTENING on INIT_COMPLETE
ptp41[54.242]: port 0 (/var/run/ptp4lro): INITIALIZING to LISTENING on INIT_COMPLETE
ptp41[54.714]: port 1 (eth0): new foreign master 00b0ae.fffe.02e810-1
ptp41[58.714]: selected best master clock 00b0ae.fffe.02e810
ptp41[58.714]: updating UTC offset to 37
ptp41[58.714]: port 1 (eth0): LISTENING to UNCALIBRATED on RS_SLAVE
ptp41[59.651]: master offset -1614631351385584072 s0 freq +0 path delay
                                                                                   0
ptp41[60.652]: master offset -1614631351385584108 s1 freq
                                                            -36 path delay
                                                                                   Λ
ptp41[62.651]: clockcheck: clock jumped forward or running faster than expected!
ptp41[64.651]: master offset
                                 -252 s0 freq
                                                  -36 path delay
ptp4l[65.651]: master offset
                                 -314 s2 freq
                                                 -98 path delay
                                                                      7712
ptp41[65.651]: port 1 (eth0): UNCALIBRATED to SLAVE on MASTER_CLOCK_SELECTED
ptp41[66.651]: master offset
                            -298 s2 freq -396 path delay
                                 -116 s2 freq
ptp41[67.651]: master offset
                                                 -303 path delay
                                                                      7702
                                 192 s2 freq
ptp41[68.651]: master offset
                                                 -30 path delay
                                                                      7702
ptp41[69.651]: master offset
                                  258 s2 freq
                                                 +93 path delay
                                                                      7732
ptp41[70.651]: master offset
                                 162 s2 freq
                                                 +75 path delay
                                                                     7712
ptp41[71.651]: master offset
                                  -36 s2 freq
                                                  -75 path delay
                                                                     7766
                                                  -61 path delay
ptp41[72.651]: master offset
                                 -12 s2 freq
                                                                      7766
ptp41[73.651]: master offset
                                    8 s2 freq
                                                  -45 path delay
                                                                      7710
ptp41[74.650]: master offset
                                   -8 s2 freq
                                                  -59 path delay
                                                                      7710
                                                                      7708
ptp41[75.650]: master offset
                                 -18 s2 freq
                                                  -71 path delay
                                                  -62 path delay
                                                                      7706
ptp41[76.650]: master offset
                                   -4 s2 freq
ptp41[77.650]: master offset
                                  -4 s2 freq
                                                 -64 path delay
                                                                      7718
                                   0 s2 freq
ptp41[78.650]: master offset
                                                 -61 path delay
                                                                      7718
ptp41[79.650]: master offset
                                   -4 s2 freq
                                                  -65 path delay
                                                                      7718
                                                                      7718
ptp41[80.650]: master offset
                                    4 s2 freq
                                                  -58 path delay
ptp41[81.650]: master offset
                                   10 s2 freq
                                                  -51 path delay
                                                                      7720
ptp41[82.650]: master offset
                                   8 s2 freq
                                                  -50 path delay
                                                                      7710
```

### **Multicast**

The sample configuration file is for G.8275.1, but we can use it as an example for a multicast master to show write\_phase\_mode enabled.

```
cat standalone_G.8275.1.cfg
#
# Telecom G.8275.1 T-TSC example configuration containing those attributes
# which either differ from the defaults or are relevant to the profile.
#
[global]
domainNumber 24
slaveOnly 1
masterOnly 0
# Announce messages
announceReceiptTimeout 3
logAnnounceInterval -3
```

```
# Sync/Delay_Req/Delay_Resp messages â 16 packets-per-second, -4 = 16 PPS
logSyncInterval
                       -4
logMinDelayReqInterval -4
# step_window is in units of sync packets
# 3 seconds:
  @ 16 PPS, set to 48
# @ 1 PPS, set to 3
step_window
              48
              255
clockClass
clockAccuracy 0xFE
timeSource
               0xa0
maxStepsRemoved 255
offsetScaledLogVariance 0xffff
G.8275.defaultDS.localPriority 128
G.8275.portDS.localPriority
                               128
priority1
               128
priority2
              255
dataset_comparison
                      G.8275.x
transportSpecific
clock_type
delay_mechanism E2E
first_step_threshold
                     0.000020000
step_threshold
                     0.000020000
tx_timestamp_timeout 1000
write_phase_mode
servo_offset_threshold 100
servo_num_offset_values 64
tsproc_mode
network_transport
                       T.2
# 01:1B:19:00:00:00
                      Forwardable multi-cast address
# 01:80:C2:00:00:0E
                      Non-forwardable multi-cast address
                       01:1B:19:00:00:00
ptp_dst_mac
[eth0]
```

With ts2phc running in the background, ptp41 is used to synchronize with a PTP multicast master.

## Multicast slave using standalone.G.8275.1.cfg

Option Description

-m Print messages to stdout

-q Do not print messages to the syslog

42 max 55 freq

71 freq

ptp41[36.613]: rms 62 max 73 freq +0 +/- 0 delay 7231 +/- 6
ptp41[37.613]: rms 62 max 75 freq +0 +/- 0 delay 7228 +/- 10

55 max

ptp41[35.613]: rms 58 max 75 freq

```
-p /dev/ptp1
                            Use PHC clock device /dev/ptp1
-f standalone.G.8275.1.cfg
                           Read configuration from standalone.G.8275.1.cfg
______
freq +0 indicates that ptp4l writes the phase offset directly into the PHC clock device, so no frequency
adjustments are made.
\ ./ptp4l -m -q -p /dev/ptp1 -f standalone.G.8275.1.cfg
ptp41[23.183]: selected /dev/ptp1 as PTP clock
ptp41[23.185]: port 1 (eth0): taking /dev/ptp1 from the command line, not the attached ptp0
ptp41[23.245]: port 1 (eth0): INITIALIZING to LISTENING on INIT_COMPLETE
ptp41[23.245]: port 0 (/var/run/ptp41): INITIALIZING to LISTENING on INIT_COMPLETE
ptp41[23.245]: port 0 (/var/run/ptp4lro): INITIALIZING to LISTENING on INIT_COMPLETE
ptp41[23.356]: port 1 (eth0): new foreign master 0080ea.fffe.4dc760-1
ptp41[23.606]: selected best master clock 0080ea.fffe.4dc760
ptp41[23.606]: updating UTC offset to 37
ptp41[23.606]: port 1 (eth0): LISTENING to UNCALIBRATED on RS_SLAVE
ptp41[25.801]: clockcheck: clock jumped forward or running faster than expected!
ptp41[27.114]: port 1 (eth0): UNCALIBRATED to SLAVE on MASTER_CLOCK_SELECTED
ptp41[27.614]: rms 807316614105398016 max 1614633228210796032 freq -220 +/- 171 delay 7235 +/-
ptp41[28.614]: rms 56 max 83 freq -147 +/- 77 delay 7229 +/-
                                                                6
ptp41[29.614]: rms 60 max 91 freq -23 +/- 16 delay 7230 +/- 12
ptp41[30.614]: rms 24 max 41 freq -23 +/- 13 delay 7230 +/-
                                    -30 +/- 27 delay 7226 +/-
ptp41[31.613]: rms 10 max 21 freq
ptp41[32.613]: rms 29 max 47 freq
                                     +0 +/- 0 delay 7234 +/-
```

+0 +/- 0 delay 7231 +/- 14

0 delay 7231 +/-

+0 +/- 0 delay 7229 +/-

+0 +/-

ptp41[33.613]: rms

ptp41[34.613]: rms

# 4. Appendix

# 4.1 Performance Metrics

The performance metric in the next section has the following definitions.

- CPU% The percentage of the CPU that is being used by the process.
- DMIPS Number is the CPU % multiplied by the board's measured DMIPS number.
- RSS Resident Set Size is the memory occupied by a process that is held in main memory. It does not
  include memory that is swapped out. It does include memory from shared libraries as long as the pages from
  those libraries are actually in memory. It does include all stack and heap memory.

The REA measured DMIPS for the ZCU102 Evaluation Board is 2948.967211 DMIPS

For information about the DMIPS calculation, see **DMIPS Calculation**.

# 4.1.1. WritePhase Reference Tracker, Multicast master

	16 PPS		
	1 Master		
	CPU %	DMIPS	RSS (MB)
ptp4l	0.22%	6.52	0.604

# 4.1.2. DMIPS Calculation

### 4.1.2.1. Hardware Specifications

Board: Xilinx ZCU102 Eval Board, CPU @ 1.333 GHz

# cat /sys/devices/system/cpu/cpu0/cpufreq/cpuinfo\_cur\_freq
[25310.282758] cpu cpu0: dev\_pm\_opp\_set\_rate: failed to find current OPP for freq
1333333330 (-34)
1333333

https://www.xilinx.com/products/boards-and-kits/ek-u1-zcu102-g.html

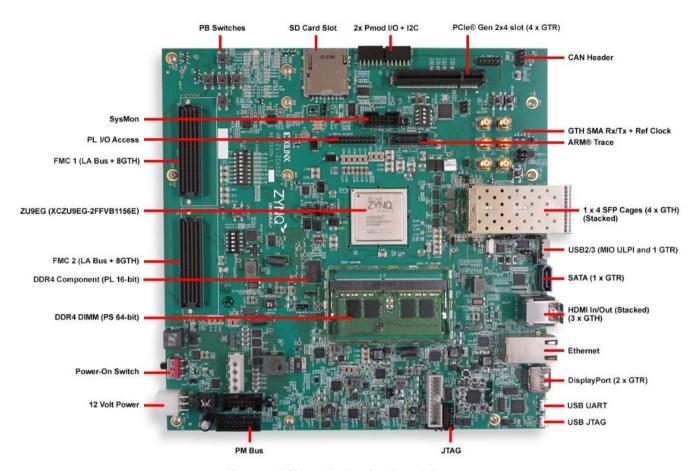


Figure 1. ZCU102 Evaluation Board Features

### 4.1.2.2. Software Environment

## 4.1.2.2.1. Compiler

aarch64-linux-gnu-gcc (Ubuntu/Linaro 5.4.0-6ubuntu1~16.04.9) 5.4.0 20160609

### 4.1.2.2.2. Compile Flags

-O3 -fno-inline -DTIME -DHZ=60 -DNDEBUG -w -DRENESAS

#### 4.1.2.2.3. Linux Version

Linux pl\_eth\_1g\_ptp\_zcu102\_cm 4.14.0-xilinx-v2018.3 #1 SMP Mon Mar 22 19:09:09 UTC 2021 aarch64 GNU/Linux

# 4.1.2.2.4. Dhrystone Version

# https://fossies.org/linux/privat/old/dhrystone-2.1.tar.gz

Modified for ZCU102 environment – modified TIME macro time measurement mechanism to use clock\_gettime() for nanosecond granularity versus second granularity.

### 4.1.2.2.5. ZCU102 Patch File

Type 'make' should work (sudo apt-get install gcc-aarch64-linux-gnu).

Copy  $gcc\_dry2$  to board and run for 150,000,000 which is about 20+ seconds.

\$ ./gcc\_dry2

Dhrystone Benchmark, Version 2.1 (Language: C)

```
Program compiled without 'register' attribute
Please give the number of runs through the benchmark: 150000000
Execution starts, 150000000 runs through Dhrystone
. . .
User\_Time = 28.957748413
Microseconds for one run through Dhrystone:
Dhrystones per Second:
                                         5179960.5
Makefile | 12 ++++++----
2 files changed, 41 insertions(+), 5 deletions(-)
diff --git a/Makefile b/Makefile
index dfaa795..8b6ad76 100644
--- a/Makefile
+++ b/Makefile
@@ -17,13 +17,14 @@
CC=
          cl
                     # C compiler name goes here (MSC)
                      # C compiler name goes here (UNIX)
CC=
         CC
GCC=
         gcc
          /usr/bin/aarch64-linux-gnu-gcc
+GCC=
PROGS=
                      # Programs to build (MSC)
         msc
PROGS=
          unix
                         # Programs to build (UNIX)
#TIME_FUNC= -DMSC_CLOCK # Use Microsoft clock() for measurement
-#TIME_FUNC= -DTIME
                             # Use time(2) for measurement
-TIME_FUNC= -DTIMES
+TIME_FUNC= -DTIME
                        # Use times(2) for measurement
                        # Use time(2) for measurement
+#TIME_FUNC= -DTIMES
                              # Use times(2) for measurement
 #HZ= 50
               # Frequency of times(2) clock ticks
                      # Frequency of times(2) clock ticks
HZ =
          60
                  # Frequency of times(2) clock ticks
          100
 #HZ=
@@ -37,12 +38,12 @@ ENUMS=
                                         # Compiler does have enum type
OPTIMIZE= -Ox -G2
                        # Optimization Level (MSC, 80286)
                      # Optimization Level (generic UNIX)
OPTIMIZE = -04
-GCCOPTIM=
               -0
+GCCOPTIM= -O3 -fno-inline
T.FT.AGS=
                          #Loader Flags
         $(OPTIMIZE) $(TIME_FUNC) -DHZ=$(HZ) $(ENUMS) $(STRUCTASSIGN) $(CFL)
-GCCFLAGS= $(GCCOPTIM) $(TIME FUNC) -DHZ=$(HZ) $(ENUMS) $(STRUCTASSIGN) $(CFL)
+GCCFLAGS= $(GCCOPTIM) $(TIME_FUNC) -DHZ=$(HZ) $(ENUMS) $(STRUCTASSIGN) $(CFL) -DNDEBUG -w -
DRENESAS
       You shouldn't need to touch the rest
@@ -50,7 +51,8 @@ GCCFLAGS= $(GCCOPTIM) $(TIME_FUNC) -DHZ=$(HZ) $(ENUMS) $(STRUCTASSIGN)
$(CFL)
SRC=
           dhry_1.c dhry_2.c
HDR=
           dhry.h
```

```
-UNIX PROGS=
               cc_dry2 cc_dry2reg gcc_dry2 gcc_dry2reg
+#UNIX_PROGS= cc_dry2 cc_dry2reg gcc_dry2 gcc_dry2reg
+UNIX_PROGS= gcc_dry2
MSC_PROGS= sdry2.exe sdry2reg.exe mdry2.exe mdry2reg.exe \
        ldry2.exe ldry2reg.exe cdry2.exe cdry2reg.exe \
        hdry2.exe hdry2reg.exe
diff --git a/dhry_1.c b/dhry_1.c
index 164c6f9..fba717d 100644
--- a/dhry_1.c
+++ b/dhry_1.c
@@ -17,6 +17,12 @@
 #include "dhry.h"
+#ifdef RENESAS
+#include <stdint.h>
+#include <time.h>
+#define NSEC2SEC 100000000LL
+#endif
 /* Global Variables: */
Rec_Pointer
                Ptr_Glob,
@@ -51,8 +57,12 @@ extern int
                                   times ();
                /* Measurements should last at least about 2 seconds */
 #endif
 #ifdef TIME
+#ifdef RENESAS
+struct timespec now;
+#else
extern long
               time();
                /* see library function "time" */
+#endif
 #define Too_Small_Time 2
                 /* Measurements should last at least 2 seconds */
@@ -61,9 +71,15 @@ extern clock_t
                                   clock();
 #define Too_Small_Time (2*HZ)
 #endif
+#ifdef RENESAS
+int64_t
                Begin_Time,
                End_Time;
+float
                User_Time;
+#else
long
                Begin_Time,
                End_Time,
                User_Time;
+#endif
 float
                Microseconds,
                Dhrystones_Per_Second;
@@ -137,8 + 153,13 @@ main ()
  Begin_Time = (long) time_info.tms_utime;
 #endif
 #ifdef TIME
+#ifdef RENESAS
```

```
+ clock_gettime(CLOCK_MONOTONIC, &now);
+ Begin_Time = now.tv_sec * NSEC2SEC + now.tv_nsec;
+#else
  Begin_Time = time ( (long *) 0);
 #endif
+#endif
 #ifdef MSC_CLOCK
  Begin_Time = clock();
 #endif
@@ -198,8 +219,13 @@ main ()
  End_Time = (long) time_info.tms_utime;
#endif
#ifdef TIME
+#ifdef RENESAS
+ clock_gettime(CLOCK_MONOTONIC, &now);
+ End_Time = now.tv_sec * NSEC2SEC + now.tv_nsec;
   End_Time = time ( (long *) 0);
 #endif
+#endif
 #ifdef MSC_CLOCK
   End_Time = clock();
 #endif
@@ -257,9 +283,17 @@ main ()
  printf ("
                  should be: DHRYSTONE PROGRAM, 2'ND STRING\n");
  printf ("\n");
+#ifdef RENESAS
+ User_Time = (float)(End_Time - Begin_Time) / NSEC2SEC;
  printf("User_Time = %0.9f\n", User_Time);
+ if (User_Time < (float)Too_Small_Time)
+#else
  User_Time = End_Time - Begin_Time;
+ printf("User_Time = %ld\n", User_Time);
   if (User_Time < Too_Small_Time)</pre>
+#endif
   {
    printf ("Measured time too small to obtain meaningful results\n");
    printf ("Please increase number of runs\n");
2.7.4
```

### 4.1.2.3. Results

From power-up, start at 140,000,000 loop iterations and increment 10,000,000 each time.

Iterations	Dhrystones per Second
14000000	5181170.5
150000000	5181197.0
16000000	5181290.5
170000000	5181255.5
180000000	5181080.5

Iterations	Dhrystones per Second
19000000	5181232.0
20000000	5182418.0
210000000	5181273.5
22000000	5181138.0
23000000	5181133.5

Discarding the first run, The average of the next 9 runs is 5181335.389.

DMIPS (Dhrystone MIPS) numbers are calculated using the formula:

```
DMIPS = Dhrystones per second / 1757
```

Using formula above:

```
DMIPS = 5181335.389 / 1757
```

DMIPS = 2948.967211

A more commonly reported figure is DMIPS / MHz.

```
DMIPS / MHz = 2948.967211 / 1333.333
```

DMIPS / MHZ = 2.21

# 4.2 Identifying PHC Device Number

# 4.2.1. ClockMatrix

On a successful CM PHC driver load, the registered ptp device number can be see in the system log.

View the kernel start-up log with 'dmesg' command.

```
$ dmesg | grep idt
...
[ 3.419848] idtcm 15-005b: 4.8.0, Id: 0x4001 HW Rev: 5 OTP Config Select: 15
[ 7.128855] idtcm 15-005b: PLL2 registered as ptp1
```

## 4.2.2. Network Interface

The Ethernet interface in this example is eth0. It uses the Xilinx Timer as its PTP time stamping device.

```
Capabilities:

hardware-transmit (SOF_TIMESTAMPING_TX_HARDWARE)
hardware-receive (SOF_TIMESTAMPING_RX_HARDWARE)
hardware-raw-clock (SOF_TIMESTAMPING_RAW_HARDWARE)
PTP Hardware Clock: 0
Hardware Transmit Timestamp Modes:
```

off (HWTSTAMP\_TX\_OFF)

If the Ethernet interface is not supported as a PTP hardware clock, it will say PTP Hardware Clock: none.

For support in getting the Ethernet interface to register as a PTP Hardware Clock, contact the PHY/MAC vendor for support.

# 4.3 View ptp Device Name

View registered ptp devices:

```
$ ls /sys/class/ptp
ptp0 ptp1
```

View name of a ptp device:

```
$ cat /sys/class/ptp/ptp1/clock_name
IDT CM PLL2

$ cat /sys/class/ptp/ptp0/clock_name
Xilinx Timer
```

# 4.4 SO SELECT ERR QUEUE: Protocol not available

SO\_SELECT\_ERR\_QUEUE was introduced into the kernel in 3.10.

When using Linux kernels prior to 3.10, customers may encounter this message in ptp41.

```
ptp41[33.123]: eth1: SO_SELECT_ERR_QUEUE: Protocol not available
```

This message can be ignored; it is a warning message and does not prevent ptp41 from working

# 4.5 testptp

testptp is a Linux PHC test tool that is part of the kernel.

It is located in tools/testing/selftests/ptp/testptp.c.

```
usage: testptp [options]
           request a one-shot alarm after 'val' seconds
 -a val
            request a periodic alarm every 'val' seconds
 -A val
 -C
           query the ptp clock's capabilities
           device to open
           read 'val' external time stamp events
 -e val
 -f val
           adjust the ptp clock frequency by 'val' ppb
            get the ptp clock time
 -q
           prints this message
 -h
 -i val
           index for event/trigger
           measure the time offset between system and phc clock
 -k val
            for 'val' times (Maximum 25)
            list the current pin configuration
 -L pin, val configure pin index 'pin' with function 'val'
            the channel index is taken from the '-i' option
            'val' specifies the auxiliary function:
            0 - none
            1 - external time stamp
            2 - periodic output
```

```
-p val enable output with a period of 'val' nanoseconds
-P val enable or disable (val=1|0) the system clock PPS
-s set the ptp clock time from the system time
-S set the system time from the ptp clock time
-t val shift the ptp clock time by 'val' seconds
-T val set the ptp clock time to 'val' seconds
```

The following example is cross compiling the ``testptp`` tool in a linux v5.8-rc5 repository on an Ubuntu 16.04 build machine.

# 4.5.1. Sample Build for ZCU102 board

```
# Compile for ZCU102
$ sudo apt-get install gcc-aarch64-linux-gnu
$ export CROSS_COMPILE=/usr/bin/aarch64-linux-gnu-
# Linux kernel root (v5.8-rc5)
$ cd tools/testing/selftests/ptp
$ make
```

## 4.5.1.1. Compilation Error

When cross-compiling, the build machine's Linux kernel's "ptp\_clock.h" may be outdated.

For example, the Ubuntu 16.04 build machine is using Linux v4.15.0.

```
$ uname -srm
Linux 4.15.0-107-generic x86_64
```

And produces the following compilation error:

```
# Linux kernel root (v5.8-rc5)
$ make
Makefile:10: warning: overriding recipe for target 'clean'
../lib.mk:126: warning: ignoring old recipe for target 'clean'
/usr/bin/aarch64-linux-gnu-gcc -I../../../usr/include/ testptp.c -lrt -o testptp
testptp.c: In function 'do_flag_test':
testptp.c:61:3: error: 'PTP_EXTTS_REQUEST2' undeclared (first use in this function)
   PTP_EXTTS_REQUEST2,
testptp.c:61:3: note: each undeclared identifier is reported only once for each function it
appears in
testptp.c:68:25: error: 'PTP_EXTTS_VALID_FLAGS' undeclared (first use in this function)
   PTP_ENABLE_FEATURE | (PTP_EXTTS_VALID_FLAGS + 1),
testptp.c: In function 'main':
testptp.c:281:15: error: 'struct ptp_clock_caps' has no member named 'adjust_phase'
           caps.adjust_phase);
<builtin>: recipe for target 'testptp' failed
make: *** [testptp] Error 1
```

### 4.5.1.2. Workaround

In testptp.c, replace #include linux/ptp\_clock.h> with a relative include to the local repo's ptp\_clock.h.

```
testptp.c:
    #include <sys/time.h>
    #include <sys/timex.h>
    #include <sys/types.h>
```

```
#include <time.h>
#include <unistd.h>

- #include <linux/ptp_clock.h>
+ #include "../../../include/uapi/linux/ptp_clock.h"

With above workaround, testptp compiles.
$ make
Makefile:10: warning: overriding recipe for target 'clean'
../lib.mk:126: warning: ignoring old recipe for target 'clean'
/usr/bin/aarch64-linux-gnu-gcc -I../../../usr/include/ testptp.c -lrt -o testptp
```

# 4.6 phc\_ctl

phc\_ctl is part of the linuxptp collection of programs.

For details on linuxptp, see linuxptp

```
$ ./phc_ctl -h
usage: phc_ctl [options] <device> -- [command]
device
                ethernet or ptp clock device
 options
 -1 [num]
                set the logging level to 'num'
 -a
                do not print messages to the syslog
                do not print messages to stdout
 -0
 -17
                prints the software version and exits
 -h
                prints this message and exits
 commands
 specify commands with arguments. Can specify multiple
 commands to be executed in order. Seconds are read as
 double precision floating point values.
 set [seconds] set PHC time (defaults to time on CLOCK_REALTIME)
 aet
                  get PHC time
 adj <seconds> adjust PHC time by offset
 freq [ppb]
                  adjust PHC frequency (default returns current offset)
                  compare PHC offset to CLOCK_REALTIME
 cmp
                  display device capabilities (default if no command given)
 caps
 wait <seconds> pause between commands.
```

# 4.7 1588 Profile Configuration Validation Tool for ptp4l

When creating a ptp4l configuration file for the G.8265.1, G.8275.1, or G.8275.2 profiles the validate tool can be used to check if the 1588 parameters conform to the ranges specified by the profile selected by option '-p'.

Valid -p options:

- G.8265.1
- G.8275.1
- G.8275.2

If a value does not conform to the profile, the value is highlighted and validate exits.

```
$ ./validate -h
usage: validate [options]
```

#### **Apply Patch File**

3.1-Introduce-validate-profile-program.patch adds validate program to linuxptp v3.1 source.

For the patch file, email IDT-support-1588@lm.renesas.com.

```
$ git clone git://git.code.sf.net/p/linuxptp/code linuxptp
Cloning into 'linuxptp'...
. . .
Checking connectivity... done.
$ cp v3.1-Introduce-validate-profile-program.patch linuxptp
$ cd linuxptp
$ git checkout v3.1
Note: checking out 'v3.1'.
HEAD is now at 38ad326... Version 3.1
$ patch -p1 < v3.1-Introduce-validate-profile-program.patch</pre>
patching file .gitignore
patching file configs/G.8265.1_sample_master.cfg
patching file configs/G.8265.1_sample_slave.cfg
patching file configs/G.8275.1_sample.cfg
patching file configs/G.8275.1 sample BC.cfg
patching file configs/G.8275.1_sample_GM.cfg
patching file configs/G.8275.2_sample.cfg
patching file configs/G.8275.2_sample_BC.cfg
patching file configs/G.8275.2_sample_GM.cfg
patching file configs/externServo_G.8275.1.cfg
patching file configs/externServo_G.8275.2.cfg
patching file configs/standalone_G.8275.1.cfg
patching file configs/standalone_G.8275.2.cfg
patching file makefile
patching file validate.c
patching file validate.h
```

#### Sample Compile Log

```
$ make validate
DEPEND validate.c
DEPEND ts2phc_slave.c
DEPEND ts2phc_nmea_master.c
...
DEPEND e2e_tc.c
DEPEND designated_fsm.c
DEPEND config.c
DEPEND clockcheck.c
```

```
DEPEND clockadi.c
DEPEND clock.c
DEPEND bmc.c
gcc -Wall -DVER=3.1 -D_GNU_SOURCE -DHAVE_CLOCK_ADJTIME -DHAVE_POSIX_SPAWN -
DHAVE_ONESTEP_SYNC -c -o validate.o validate.c
gcc -Wall -DVER=3.1 -D_GNU_SOURCE -DHAVE_CLOCK_ADJTIME -DHAVE_POSIX_SPAWN -
DHAVE_ONESTEP_SYNC
                    -c -o hash.o hash.c
gcc -Wall -DVER=3.1 -D_GNU_SOURCE -DHAVE_CLOCK_ADJTIME -DHAVE_POSIX_SPAWN -
DHAVE_ONESTEP_SYNC -c -o interface.c
gcc -Wall -DVER=3.1 -D_GNU_SOURCE -DHAVE_CLOCK_ADJTIME -DHAVE_POSIX_SPAWN -
DHAVE_ONESTEP_SYNC
                    -c -o phc.o phc.c
gcc -Wall -DVER=3.1 -D_GNU_SOURCE -DHAVE_CLOCK_ADJTIME -DHAVE_POSIX_SPAWN -
DHAVE_ONESTEP_SYNC
                     -c -o print.o print.c
gcc -Wall -DVER=3.1 -D_GNU_SOURCE -DHAVE_CLOCK_ADJTIME -DHAVE_POSIX_SPAWN -
DHAVE_ONESTEP_SYNC
                     -c -o sk.o sk.c
gcc -Wall -DVER=3.1 -D_GNU_SOURCE -DHAVE_CLOCK_ADJTIME -DHAVE_POSIX_SPAWN -
DHAVE_ONESTEP_SYNC
                    -c -o util.o util.c
    validate.o hash.o interface.o phc.o print.o sk.o util.o -lm -lrt -pthread -o
validate
```

# Sample Usage

The following is an example of a G.8275.1 T-TSC profile configuration with some invalid values.

```
$ cat g.8275.1.slave.cfg
[global]
announceReceiptTimeout
                           0xfe
clockAccuracy
clockClass
                           255
clock_type
                           OC
delay_mechanism
                           E2E
domainNumber
dataset_comparison
                           G.8275.x
G.8275.defaultDS.localPriority 128
G.8275.portDS.localPriority
                                 128
logAnnounceInterval
logMinDelayReqInterval
                           Ω
logSyncInterval
                           0
masterOnly
maxStepsRemoved
network_transport
                           IIDPv4
offsetScaledLogVariance
                          0xffff
priority1
                           128
                           128
priority2
                           01:1B:19:00:00:00
ptp_dst_mac
slaveOnly
timeSource
                           0xa0
$ ./validate -p G.8275.1 -f g.8275.1.slave.cfg
4 is an out of range value for option domainNumber at line 7
failed to parse configuration file g.8275.1.slave.cfg
Default values for G.8275.1 SLAVEONLY profile are:
 announceReceiptTimeout
                                3
                                                  The only allowed value is [3]
                                Oxfe
                                                  The only allowed value is [0xfe]
clockAccuracy
```

clockClass

The only allowed value is [255]

255

### Linux PTP Using PHC Adjust Phase Quick Start Guide

```
clock_type
                                \Omega
                                                   The only allowed value is [OC]
delay_mechanism
                                E2E
                                                   The only allowed value is [E2E]
domainNumber
                                24
                                                   The range is [24, 43]
G.8275.defaultDS.localPriority 128
                                                  The range is [1, UINT8_MAX]
 G.8275.portDS.localPriority
                                128
                                                  The range is [1, UINT8_MAX]
 logAnnounceInterval
                                                  The only allowed value is [-3]
                                -3
 logMinDelayReqInterval
                                -4
                                                   The only allowed value is [-4]
 logSyncInterval
                                -4
                                                   The only allowed value is [-4]
masterOnly
                                Ω
                                                  The only allowed value is [0]
maxStepsRemoved
                                255
                                                  The range is [1, UINT8_MAX]
network_transport
                                                   The only allowed value is [L2]
                                L2
 offsetScaledLogVariance
                                0xffff
                                                   The only allowed value is [0xffff]
priority1
                                128
                                                   The only allowed value is [128]
priority2
                                                   The only allowed value is [255]
ptp_dst_mac
                                01:1B:19:00:00:00 The only allowed value is
[01:1B:19:00:00:00, 01:80:C2:00:00:0E]
 slaveOnly
                                                   The only allowed value is [1]
timeSource
                                0xa0
                                                  The range is [0, UINT8_MAX]
// Changed domainNumber from 4 to 24
$ ./validate -p G.8275.1 -f g.8275.1.slave.cfg
0 is an out of range value for option logMinDelayReqInterval at line 12
failed to parse configuration file g.8275.1.slave.cfg
// Changed logMinDelayReqInterval and logSyncInterval from 0 to -4
$ ./validate -p G.8275.1 -f g.8275.1.slave.cfg
128 is an out of range value for option priority2 at line 19
failed to parse configuration file g.8275.1.slave.cfg
// Changed priority2 to 255
$ ./validate -p G.8275.1 -f g.8275.1.slave.cfg
Port item network_transport out of range in the global section!
// Changed network_transport to L2
$ $ ./validate -p G.8275.1 -f g.8275.1.slave.cfg
g.8275.1.slave.cfg Checked successfully for G.8275.1 3 profile
```

# 5. Revision History

Revision	Date	Description
1.01	August 18, 2021	Clarify 3.1.6/3.1.7 is using time stamper PHC.
1.0	Jun 9, 2021	<ul> <li>Add Sanity Testing section to Getting Started</li> <li>Add note about SO_SELECT_ERR_QUEUE message to Appendix</li> <li>Update Getting Started Sample Session to use standalone_*.cfg files that include step_window parameter</li> <li>Rename to "LinuxPtpUsingPhcAdjustPhaseQuickStart" from "LinuxPTPUsingPHCAdjustPhaseReferenceManual"</li> <li>Add Performance Metrics section</li> </ul>
0.2	Dec 17, 2020	<ul> <li>Add Revision History section</li> <li>Add section numbers to bookmarks on PDF</li> <li>Remove IDT from "The IDT ClockMatrix (TM) family"</li> <li>Update with ts2phc.cfg change</li> <li>Revise cover page, add logo, page numbering</li> </ul>
0.1	Aug 7, 2020	First release of this document

### **IMPORTANT NOTICE AND DISCLAIMER**

RENESAS ELECTRONICS CORPORATION AND ITS SUBSIDIARIES ("RENESAS") PROVIDES TECHNICAL SPECIFICATIONS AND RELIABILITY DATA (INCLUDING DATASHEETS), DESIGN RESOURCES (INCLUDING REFERENCE DESIGNS), APPLICATION OR OTHER DESIGN ADVICE, WEB TOOLS, SAFETY INFORMATION, AND OTHER RESOURCES "AS IS" AND WITH ALL FAULTS, AND DISCLAIMS ALL WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, WITHOUT LIMITATION, ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR NON-INFRINGEMENT OF THIRD-PARTY INTELLECTUAL PROPERTY RIGHTS.

These resources are intended for developers who are designing with Renesas products. You are solely responsible for (1) selecting the appropriate products for your application, (2) designing, validating, and testing your application, and (3) ensuring your application meets applicable standards, and any other safety, security, or other requirements. These resources are subject to change without notice. Renesas grants you permission to use these resources only to develop an application that uses Renesas products. Other reproduction or use of these resources is strictly prohibited. No license is granted to any other Renesas intellectual property or to any third-party intellectual property. Renesas disclaims responsibility for, and you will fully indemnify Renesas and its representatives against, any claims, damages, costs, losses, or liabilities arising from your use of these resources. Renesas' products are provided only subject to Renesas' Terms and Conditions of Sale or other applicable terms agreed to in writing. No use of any Renesas resources expands or otherwise alters any applicable warranties or warranty disclaimers for these products.

(Disclaimer Rev.1.01 Jan 2024)

### **Corporate Headquarters**

TOYOSU FORESIA, 3-2-24 Toyosu, Koto-ku, Tokyo 135-0061, Japan www.renesas.com

#### **Trademarks**

Renesas and the Renesas logo are trademarks of Renesas Electronics Corporation. All trademarks and registered trademarks are the property of their respective owners.

#### **Contact Information**

For further information on a product, technology, the most up-to-date version of a document, or your nearest sales office, please visit <a href="https://www.renesas.com/contact-us/">www.renesas.com/contact-us/</a>.