INDEX

1982 SALES DESIGNATIONS	MODEL
300 D (TURBO)	123.133
300 CD (TURBO) 123.153
300 TD (TURBO)123.193

INDEX - Alphabetical Listing of Electrical Circuits

SC	LICAGATIC	COMPONENT	Tights (continued)	CLUE NA A TEC	COMPONENT
30		LOCATION	,	•	OCATION
Automatic Antenna	115		—License		
Automatic Climate Control	119		-Marker		
Auxiliary Fan	127	. 201	—Park	112	. 204
Charging System	108	. 202	—Stop	111	207
Cigar Lighter	115	. 202	—Tail	112	204
Clock	120	. 208	—Trunk	. 114	203
Cruise Control	111	. 207	—Turn Signal	. 116	207
Engine Overload Protection	109	. 201	Power Distribution	104	204
Fuse Information	102		Power Windows	132	205
Gauges	120	. 208	Pre-Glow System	106	205
Ground Distribution	136		Radio		202
Heated Seats	134	. 203	Rear Defogger	. 130	. 205
Horns	126	. 203	Rear Wiper/Washer		206
Lights			Seat Backrest Locking System	135	206
—Backup	109	. 201	Sliding Roof	126	203
—Center Console	124	. 201	Start/Stop (Ignition Switch)	107	206
—Courtesy	122	. 203	Transmission Kickdown	109	201
—Fog Lights	110	. 203	Warning Indicators	120	208
—Glove Box			Warning System		
—Hazard	116	. 207	Wiper/Washer		
—Headlights	110	. 203	-		
—Instrument Cluster 12					




Fuse-Circuit List

Fuse		Circuits Protected	Page
No.	Amps (color)		
1	8(WT)	Illumination: Instrument Cluster/ Center Console Lights: Marker/License Lights: Park/Tail (RH) Warning System	124 114 112 118
2	8(WT)	Automatic Antenna Clock Courtesy Lights Lights: Hazard Seat Backrest Locking System Trunk Light Warning System	115 121 122 116 135 114 118
3	8(WT)	Lights: Park/Tail (LH)	112
4	8(WT) *16(PK)	Radio Cigar Lighter Glove Box Light *With Heated Seats (Front)	115 115 109 134
5		NOT USED	
6	16(PK)	Headlights Rear Wiper/Washer (TD only) Wiper/Washer	110 129 128
7	8(WT)	Headlights (RH High Beam)	110
8	16 (PK)	Automatic Climate Control	119

Fuse			Page
No.	Amps(color)	Circuits Protected	
9	8(WT)	Headlight (LH High Beam)	110
10	16(PK)	Rear Defogger (D & CD Only)	130
	*25(BU)	Rear Defogger (TD Only) *With Heated Seats (Rear)	131 134
11	16(PK)	Headlights (RH Low Beam)/Fog Lights	110
12	8(W T)	Auxiliary Fan Lights: Turn Signal Power Windows Stoplights/Cruise Control Warning Indicators/Gauges	127 116 132 111 120
13	8(WT)	Headlights (LH Low Beam)	110
14	8(WT)	Automatic Climate Control Backup Lights/Transmission Kickdown Engine Overload Protection Horns Warning System	119 109 126 118
а	16(PK)	Power Windows (RF/LR)	132
b	16(PK)	Power Windows (LF/RR)	132
c	16(PK)	Auxiliary Fan	127
d	16(PK)	Sliding Roof	126
In- Line	80	Pre-Glow System (Part of Glow Plug Control Relay)	106



FUSE BOX

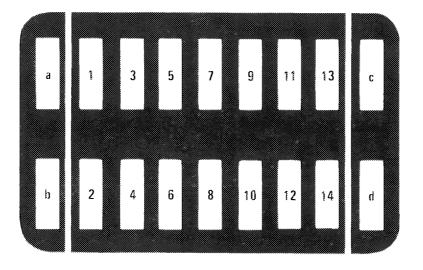


103
200
D/CD/TD
TURBO

RELAY CODE	RELAY USE
6	Auxiliary Fan Relay
10	Window Relay


POWER DISTRIBUTION

(For Component Locations See Page 204)

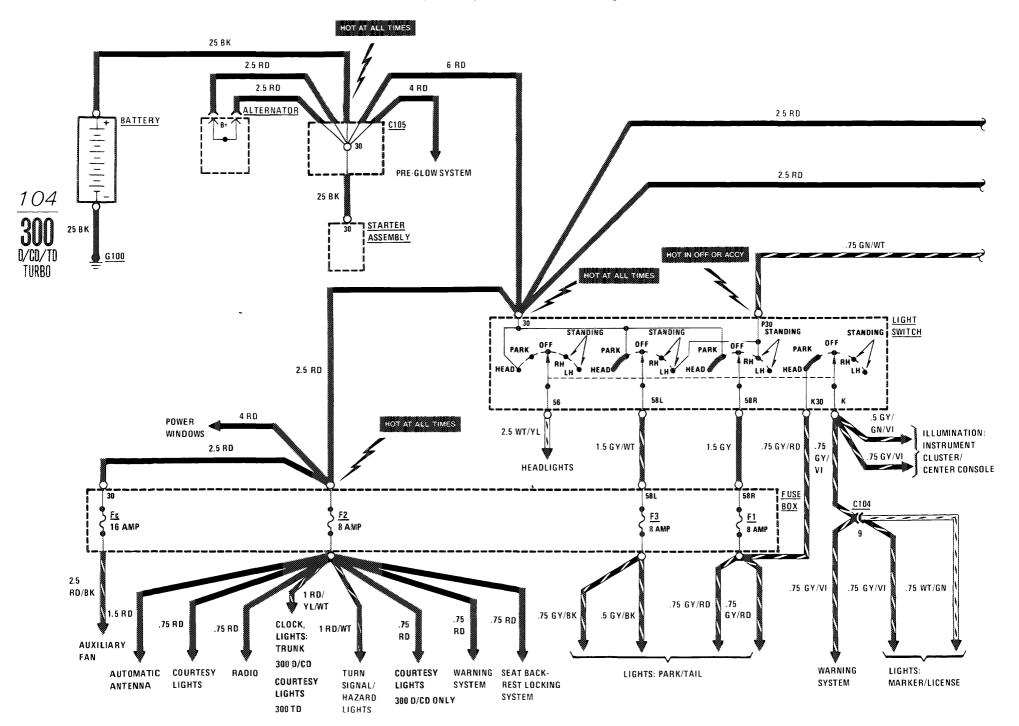


POWER DISTRIBUTION

(For Component Locations See Page 204)

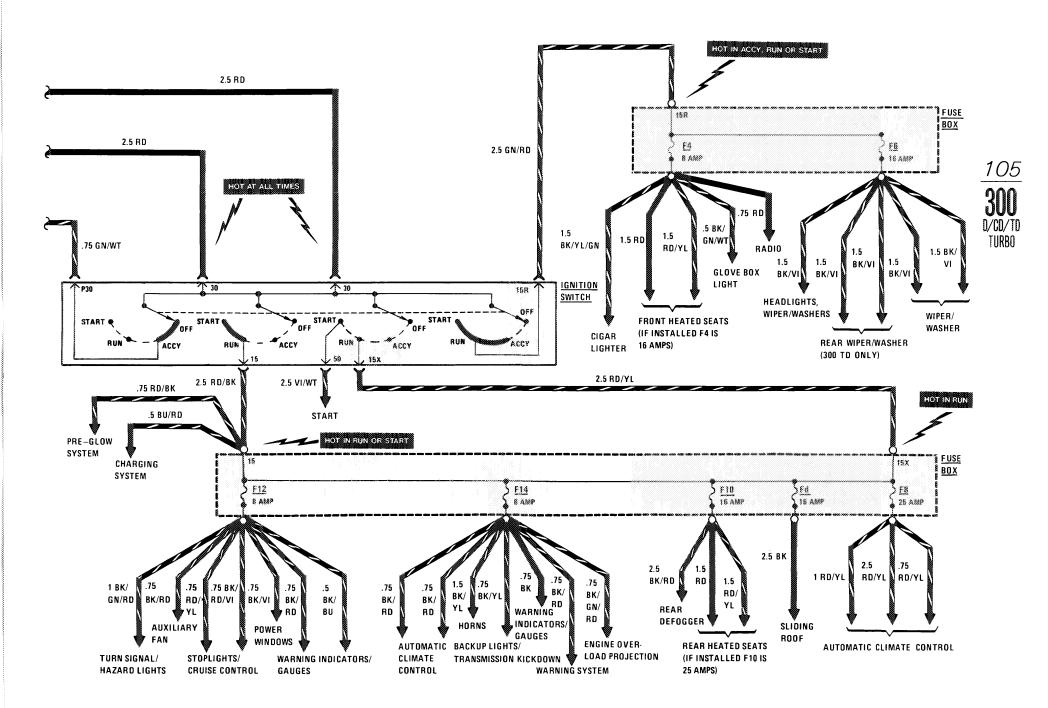


PRE-GLOW SYSTEM

(For Component Locations See Page 205)

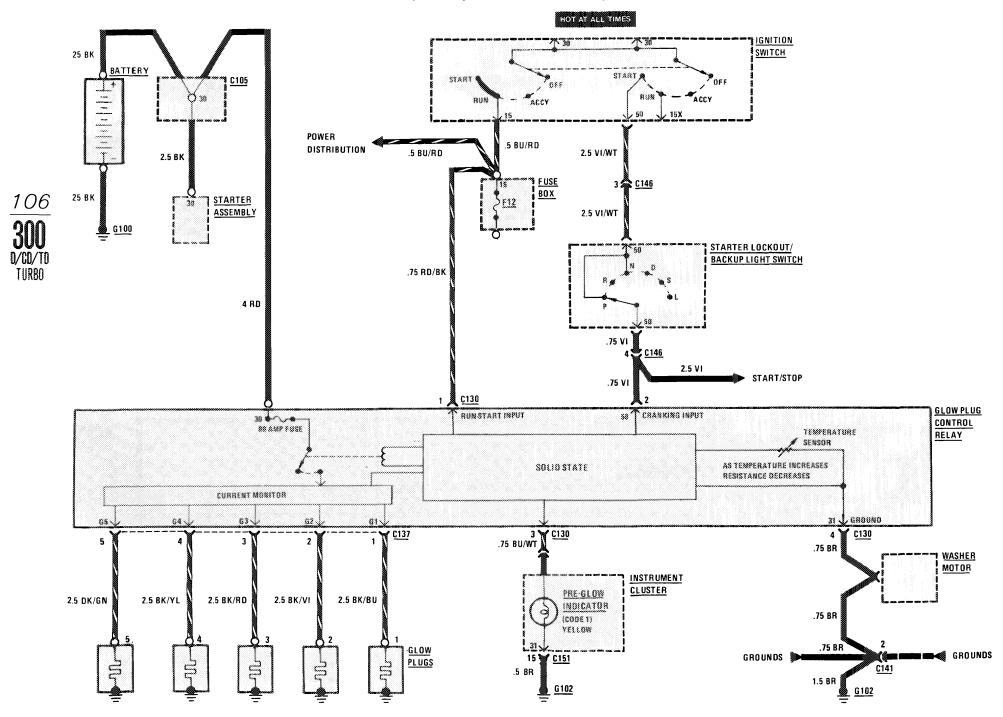

START/STOP (IGNITION SWITCH)


(For Component Locations See Page 206)

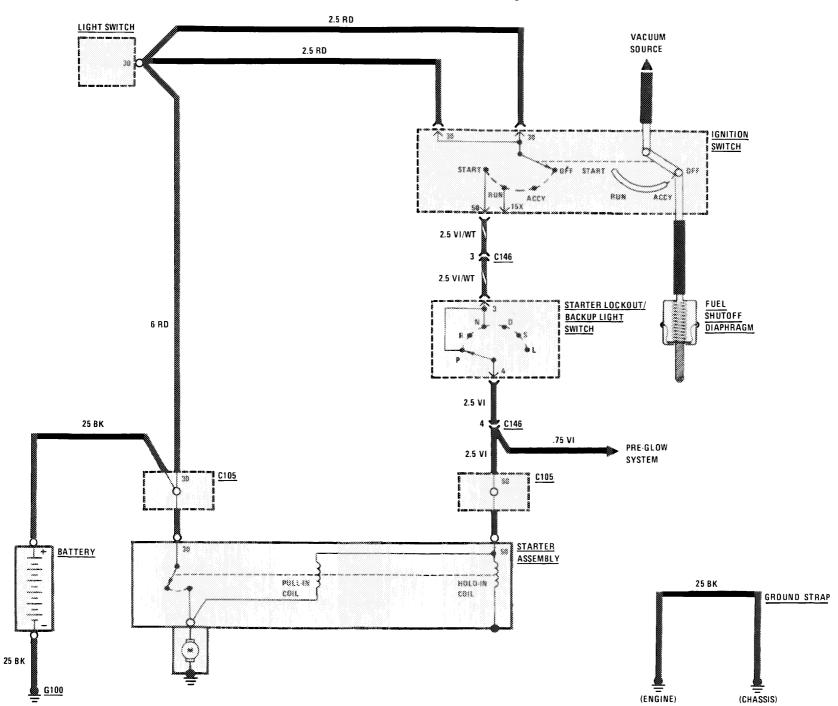

107 300 D/CD/TD TURRO


CHARGING SYSTEM

(For Component Locations See Page 202)

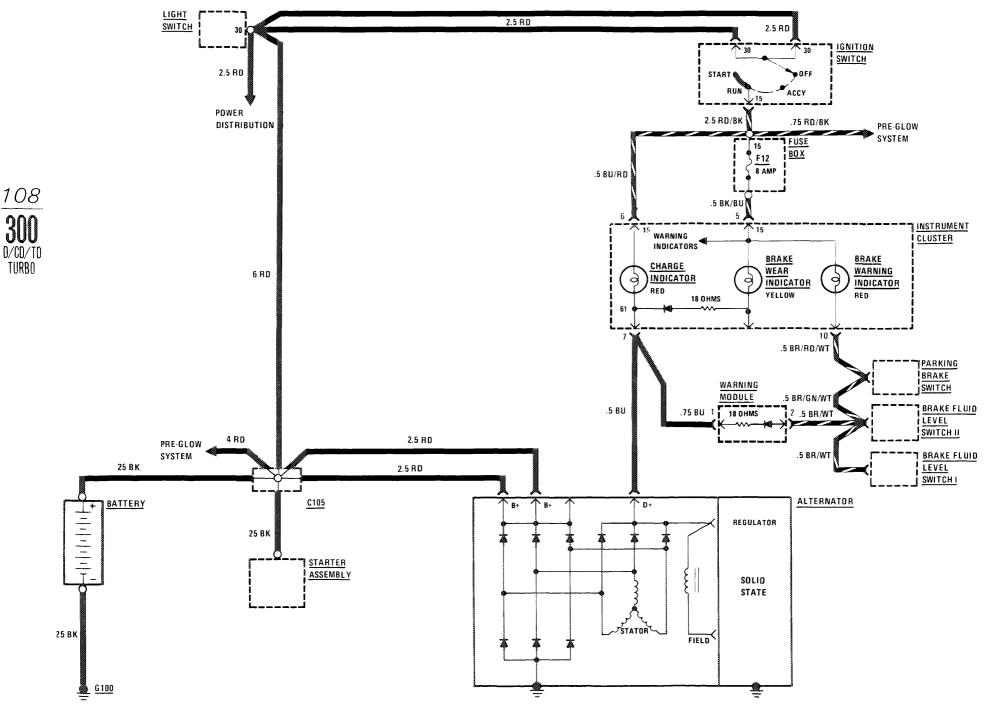

GLOVE BOX LIGHT


(For Component Locations See Page 201)

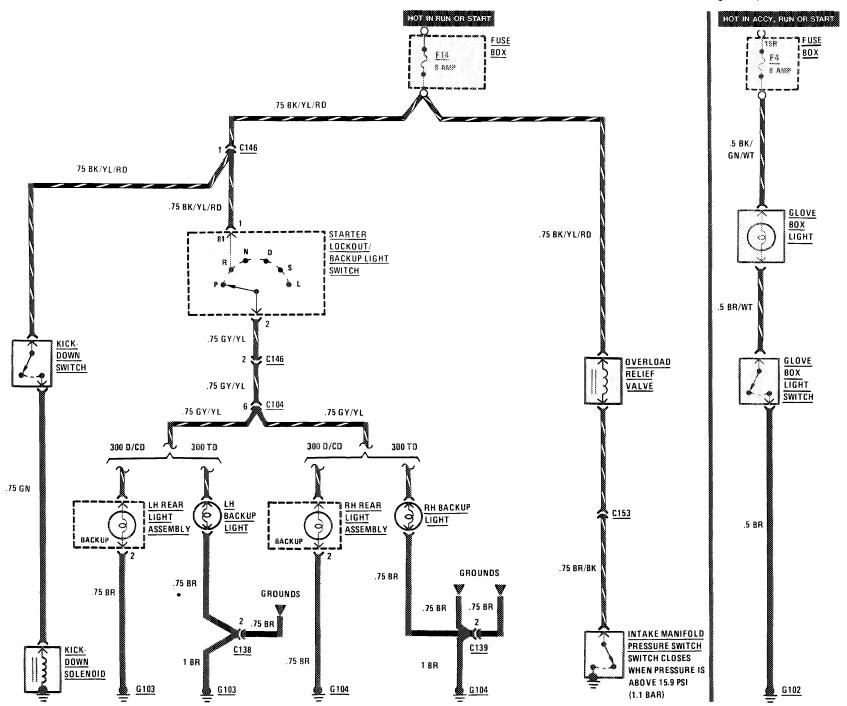

109 300 D/CD/TD TURBO

HEADLIGHTS/FOG LIGHTS


(For Component Locations See Page 203)

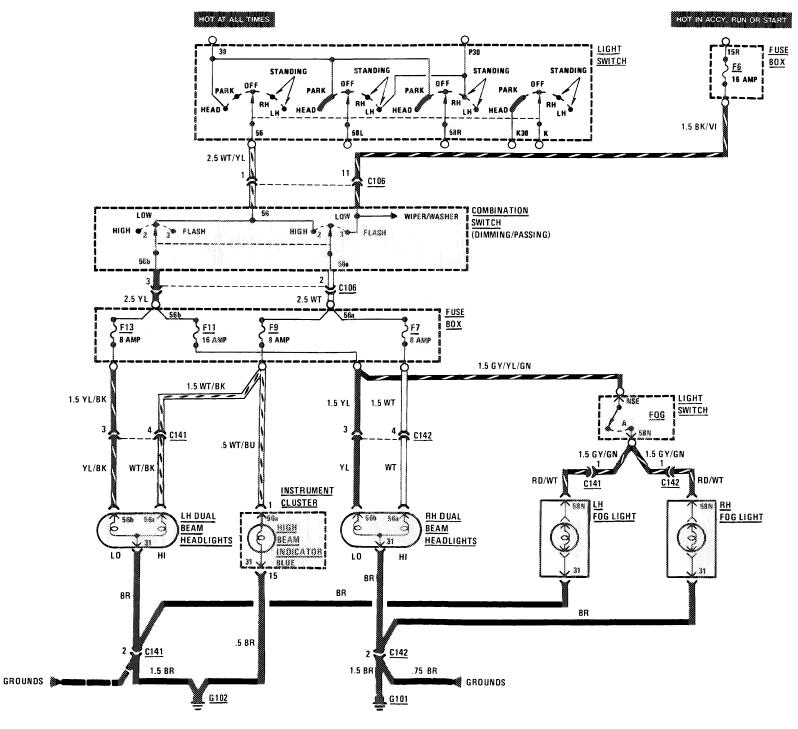

110 300 D/CD/TD


STOPLIGHTS/CRUISE CONTROL

(For Component Locations See Page 207)

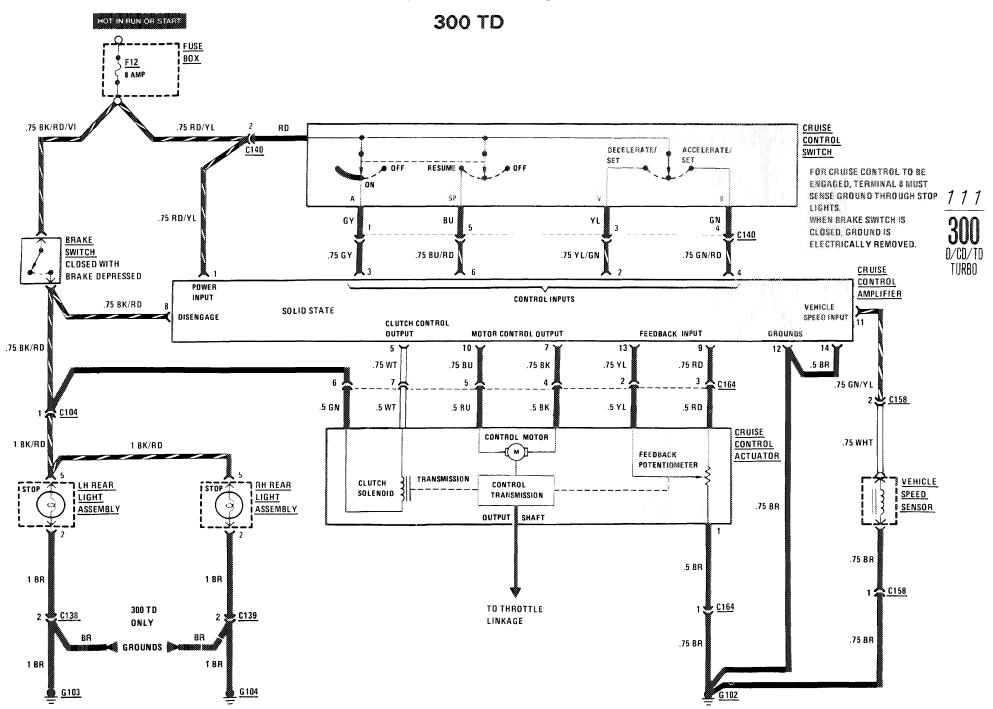

LIGHTS: PARK/TAIL/LICENSE


(For Component Locations See Page 204)

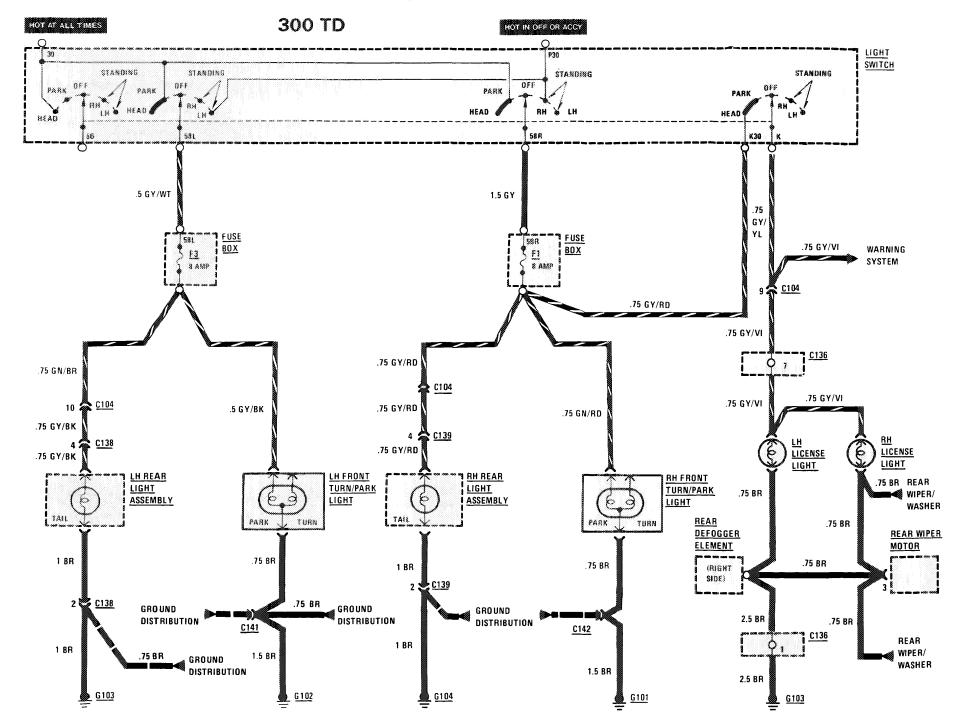

112 300 0/CD/TD


LIGHTS: PARK/TAIL

(For Component Locations See Page 204)

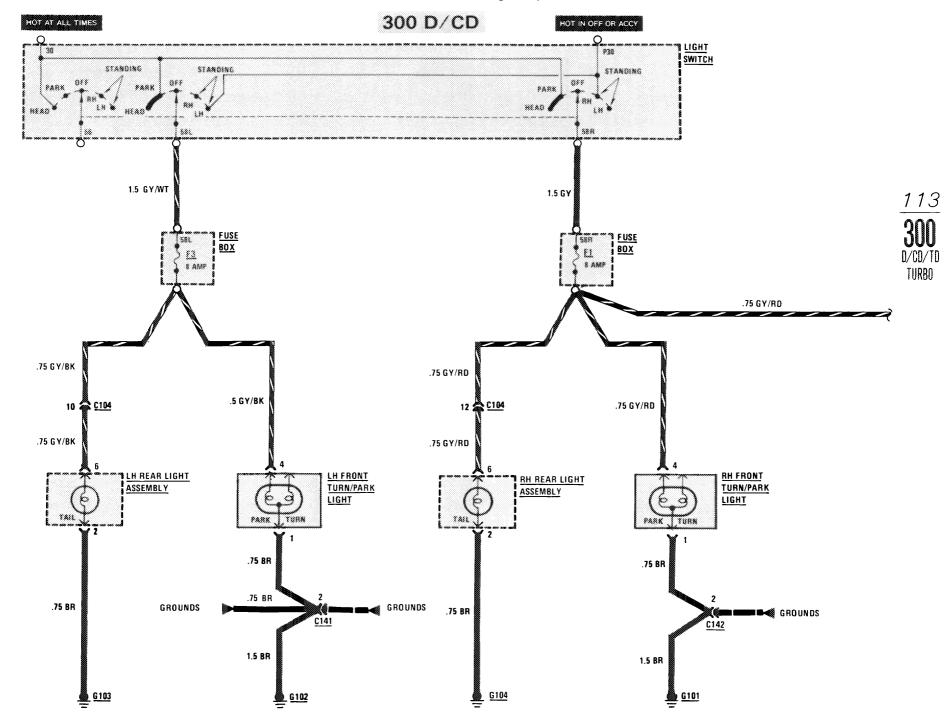


LIGHTS: MARKER/LICENSE/TRUNK

(For Component Locations See Page 203)

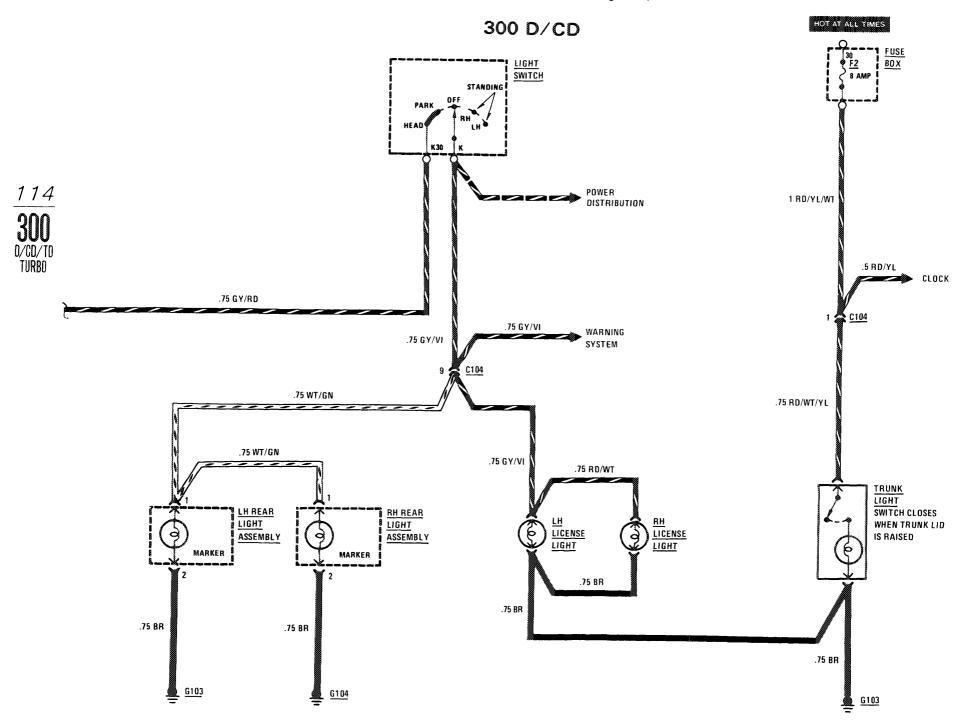


CIGAR LIGHTER/RADIO/AUTOMATIC ANTENNA

(For Component Locations See Page 202)

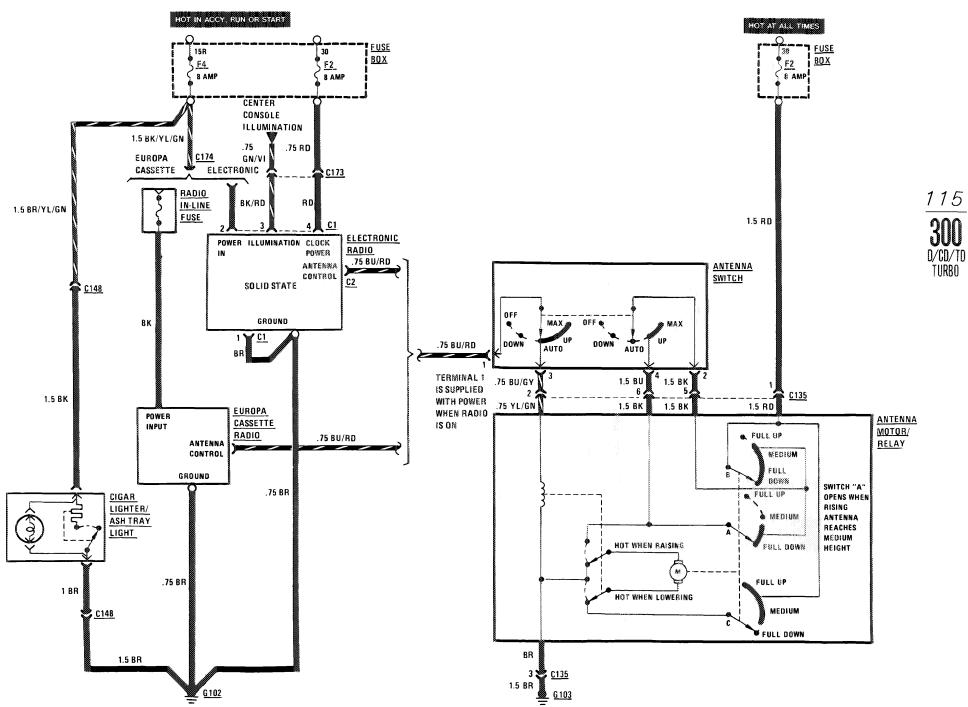


TURN SIGNAL/HAZARD LIGHTS

(For Component Locations See Page 207)

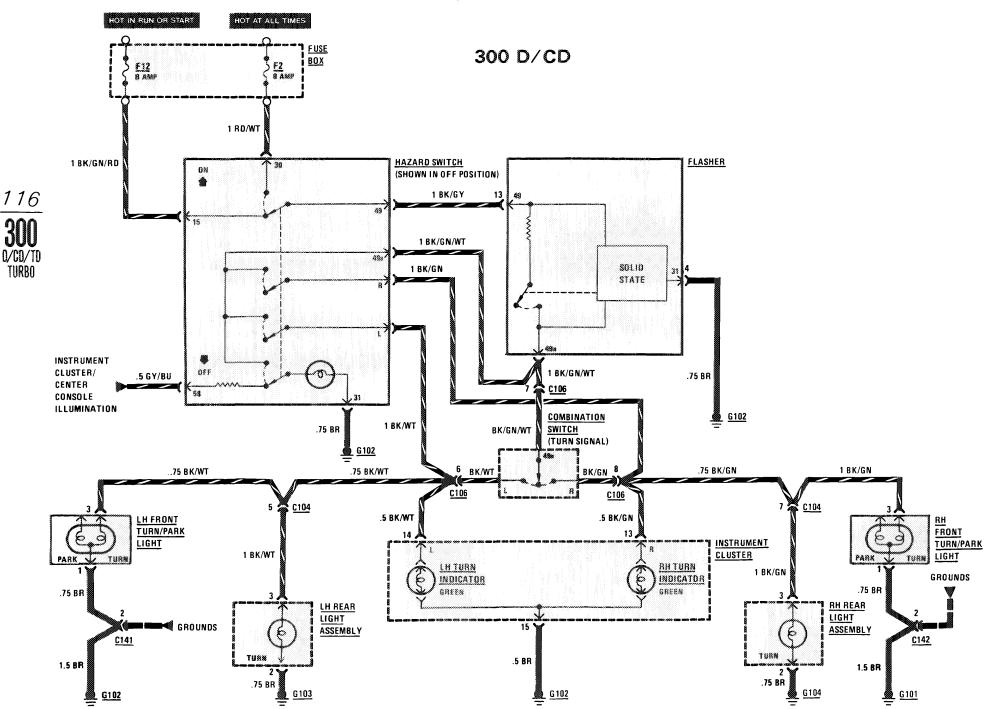


TURN SIGNAL/HAZARD LIGHTS

(For Component Locations See Page 207)

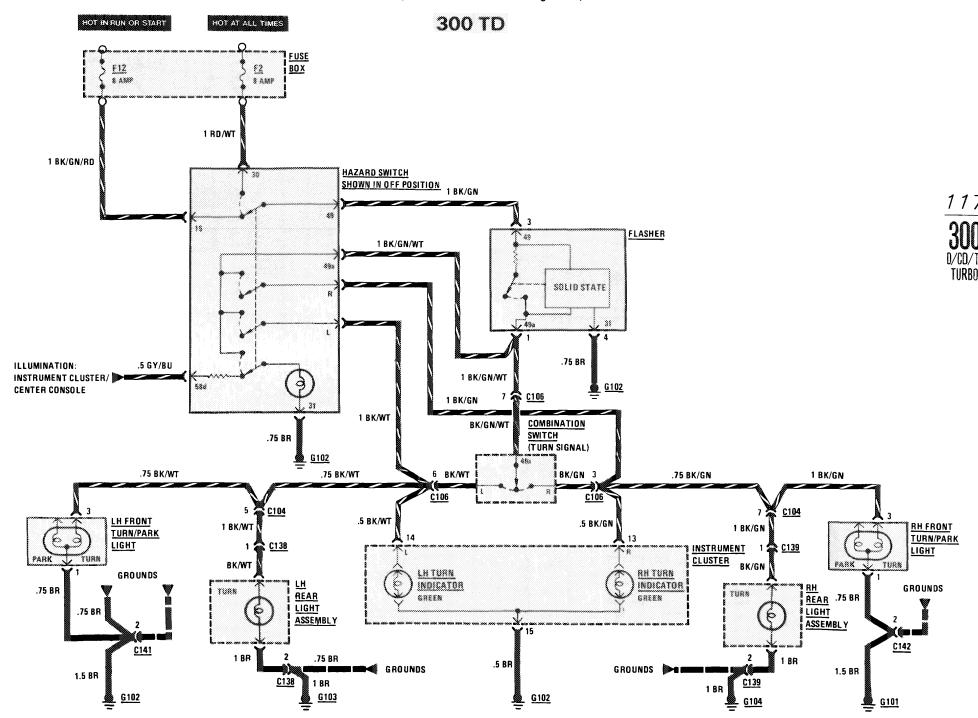

WARNING SYSTEM


(For Component Locations See Page 208)

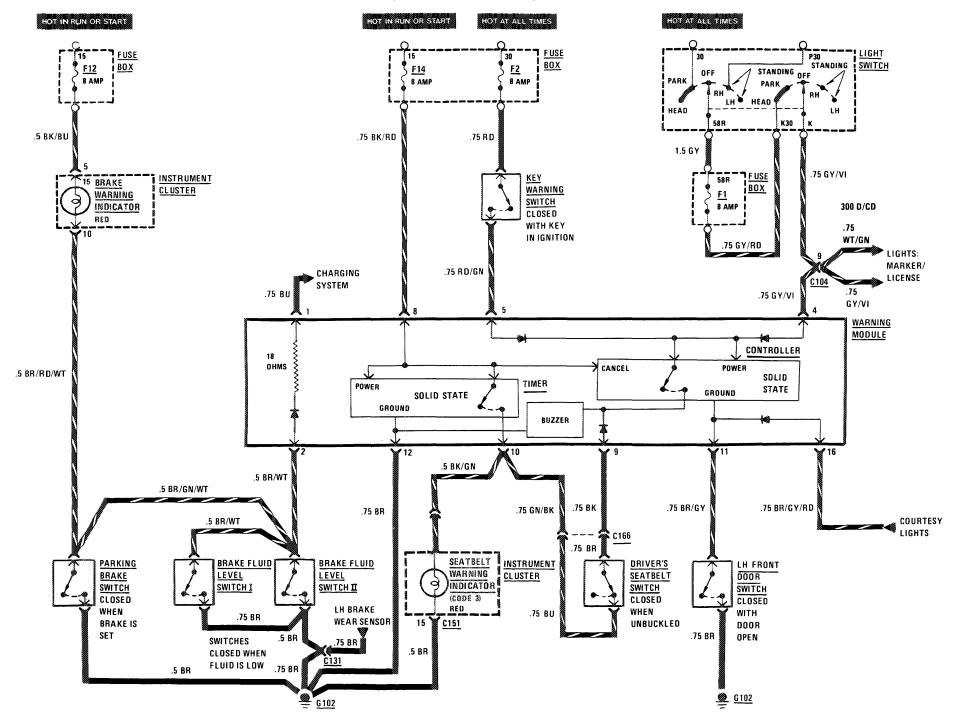

300 D/CD/TD


AUTOMATIC CLIMATE CONTROL (ACC) POWER AND GROUND DISTRIBUTION

(For Component Locations See Page 310)

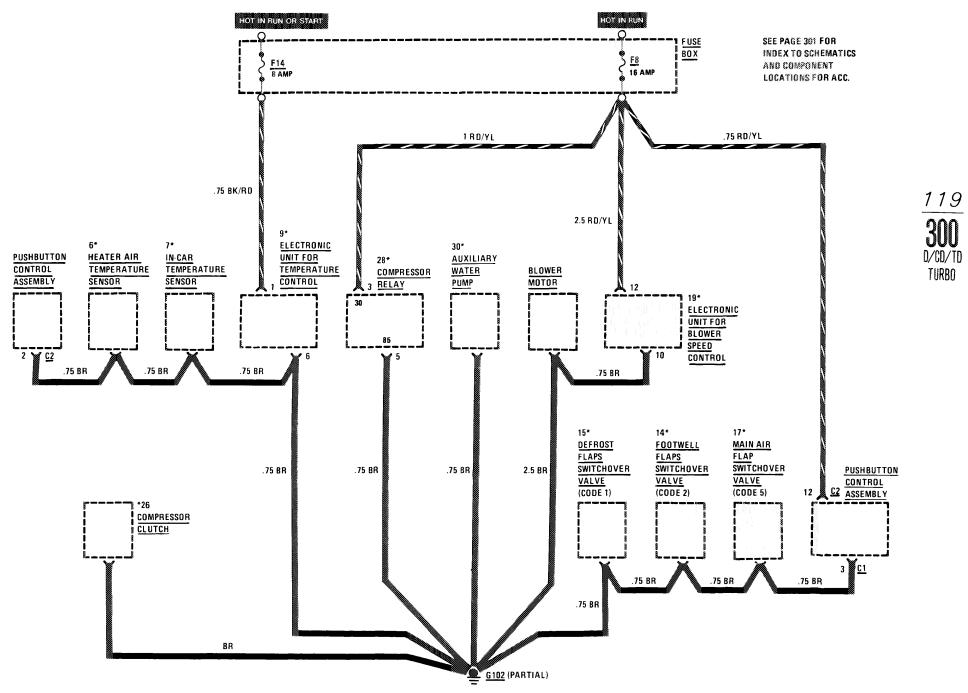

WARNING INDICATORS/GAUGES


(For Component Locations See Page 208)

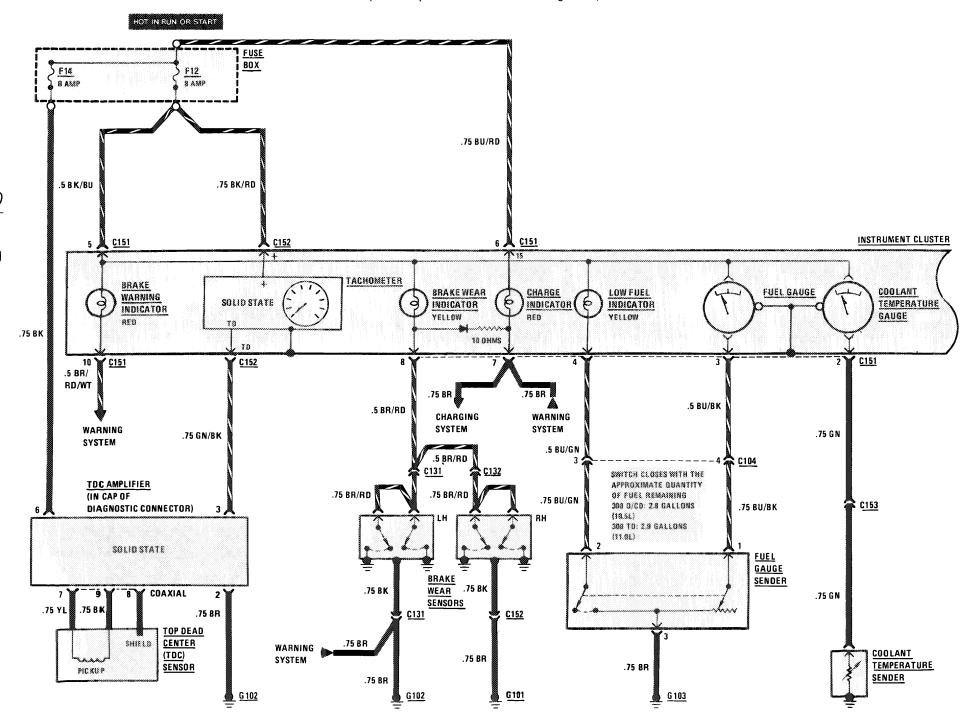

120 300 D/CD/TD TURBO

WARNING INDICATORS/GAUGES/CLOCK/INSTRUMENT CLUSTER ILLUMINATION


(For Component Locations See Page 208)

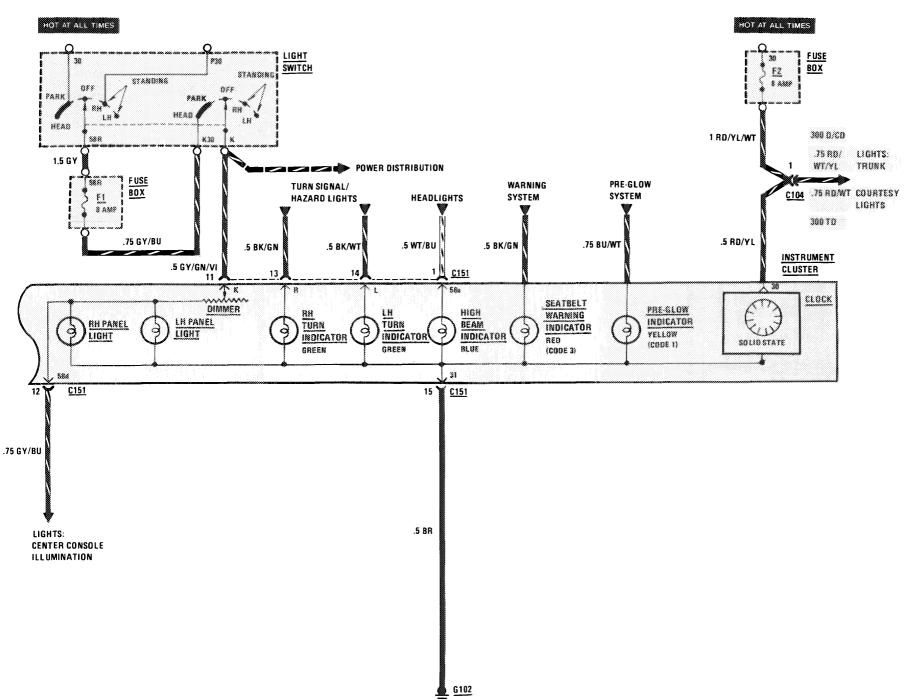

121 300 D/CD/TD

COURTESY LIGHTS


(For Component Locations See Page 202)

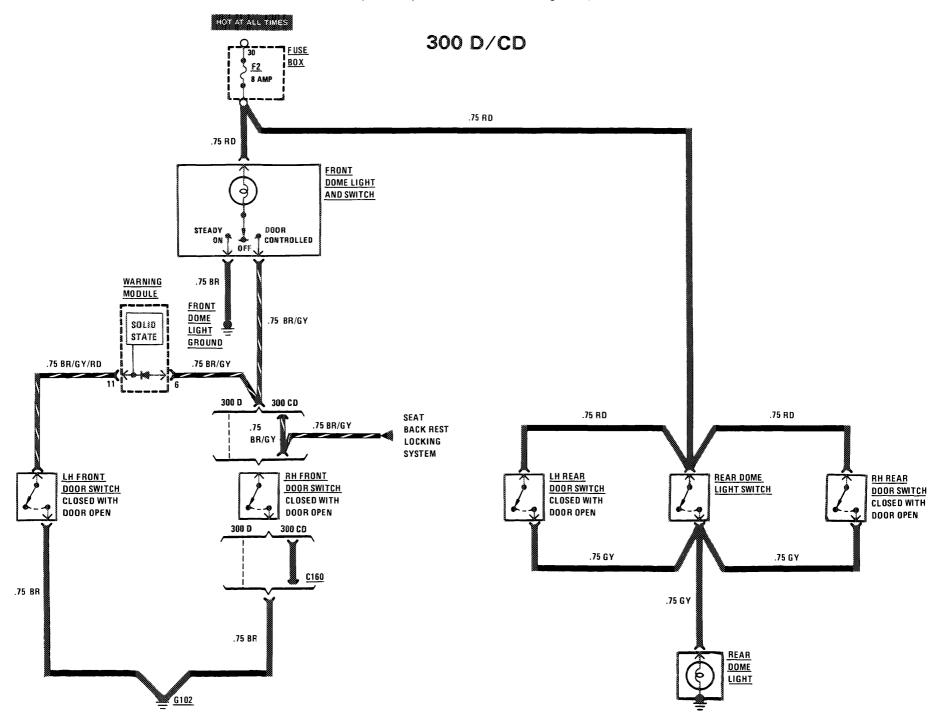

122 300 0/CD/TD TURBO

COURTESY LIGHTS


(For Component Locations See Page 203)

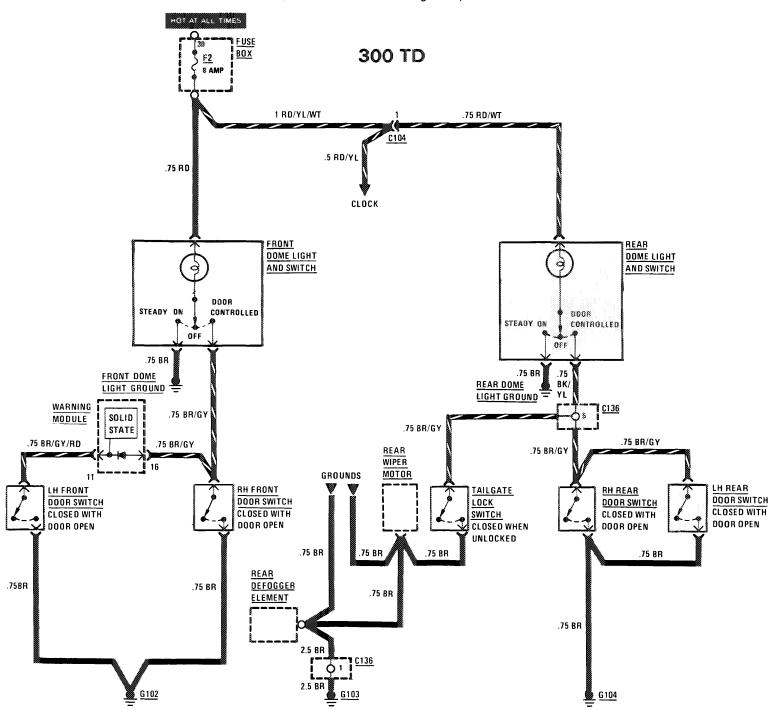

123 300 D/CD/TD


ILLUMINATION: INSTRUMENT CLUSTER / CENTER CONSOLE

(For Component Locations See Page 201)

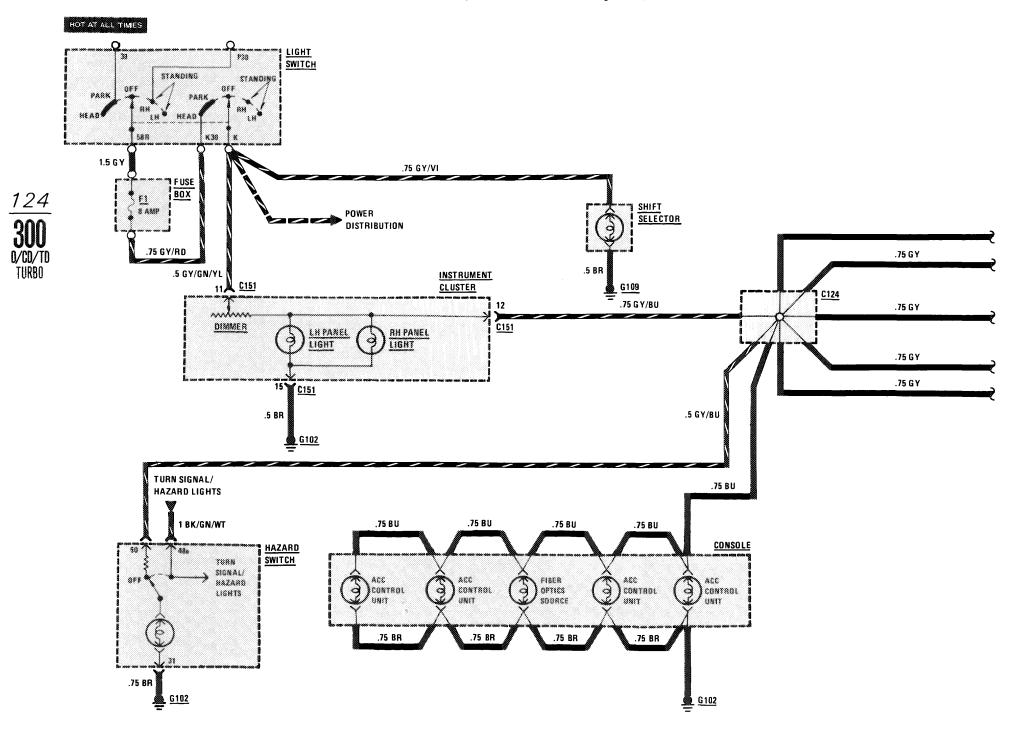



ILLUMINATION: CENTER CONSOLE

(For Component Locations See Page 201)

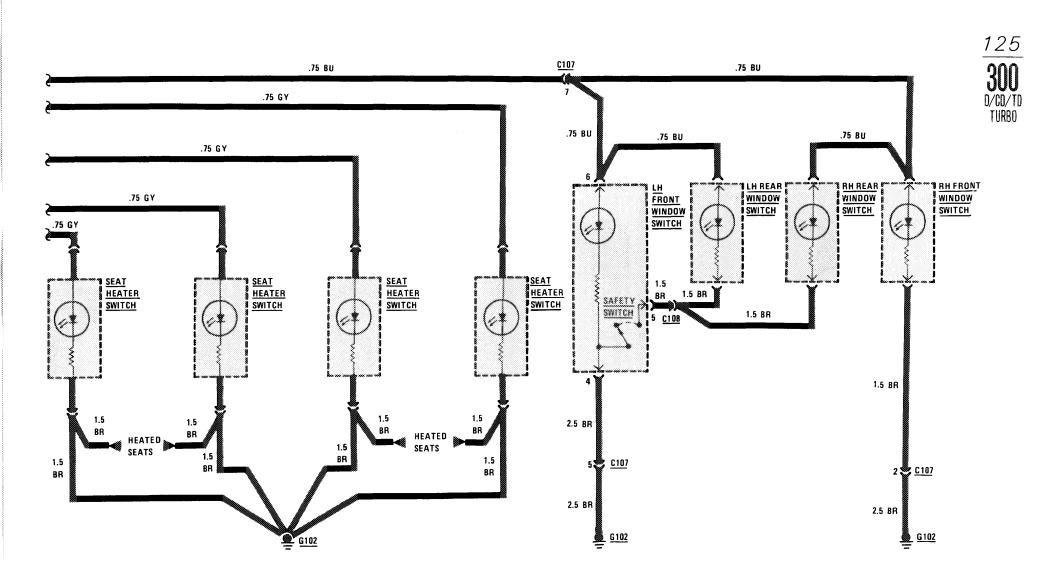

(For Component Locations See Page 203)

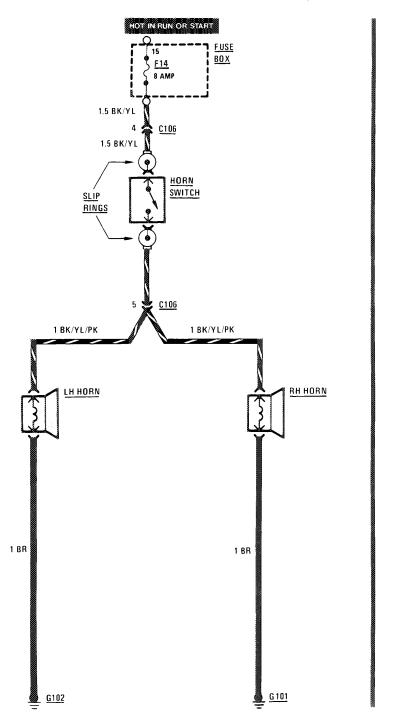


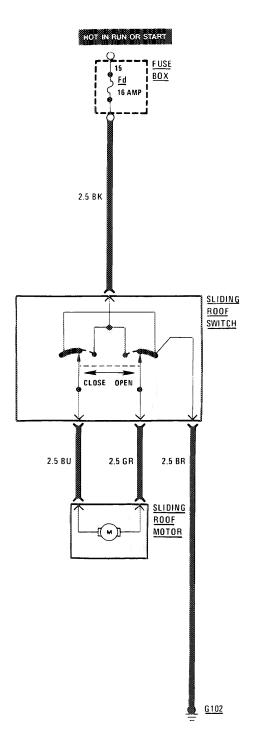

126 300 0/CD/TD TURBO

AUXILIARY FAN


(For Component Locations See Page 201)

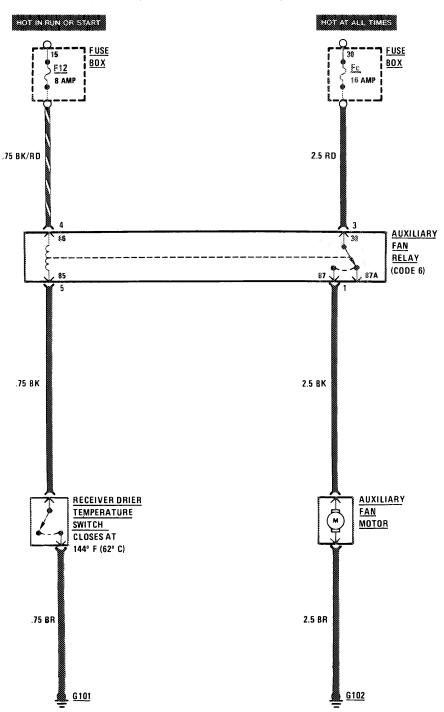


127 300

WIPER/WASHER

(For Component Locations See Page 208)

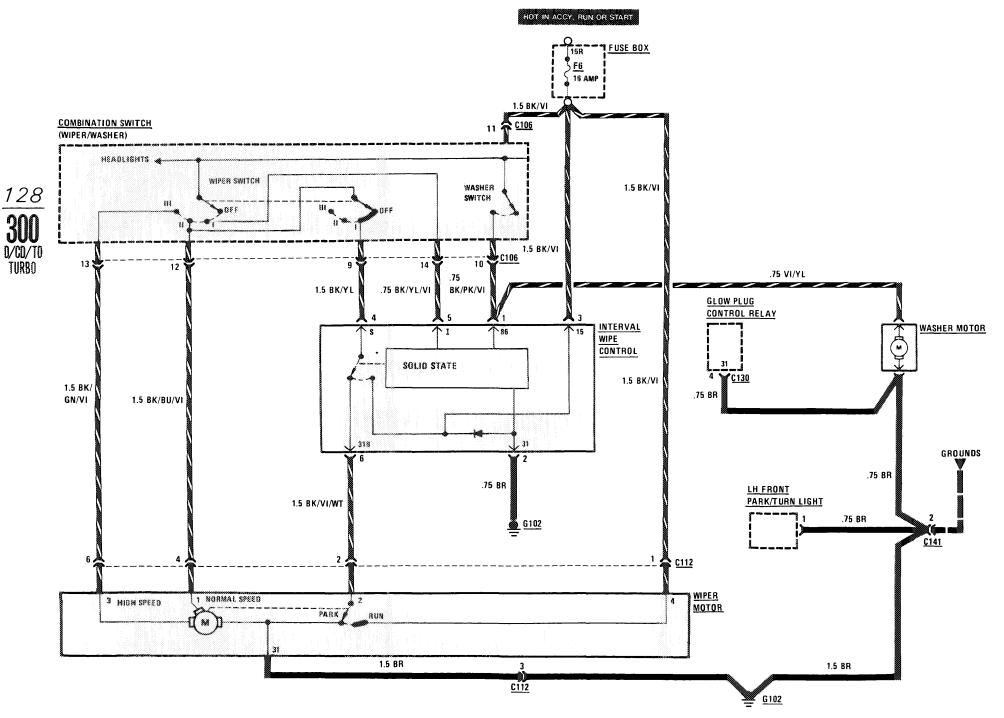


(For Component Locations See Page 206)

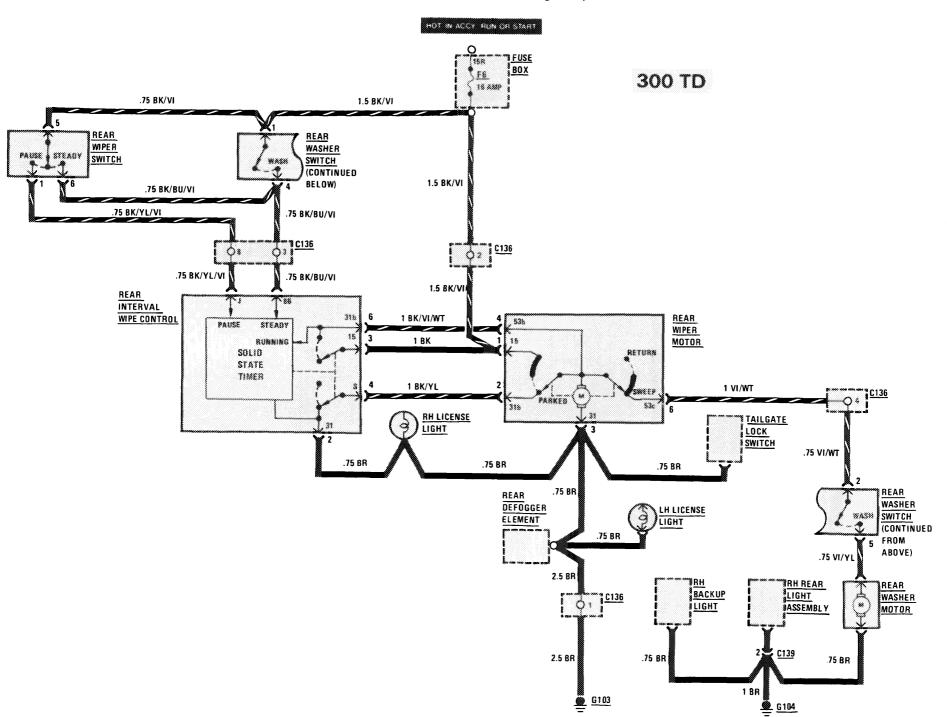

129

REAR DEFOGGER


(For Component Locations See Page 205)

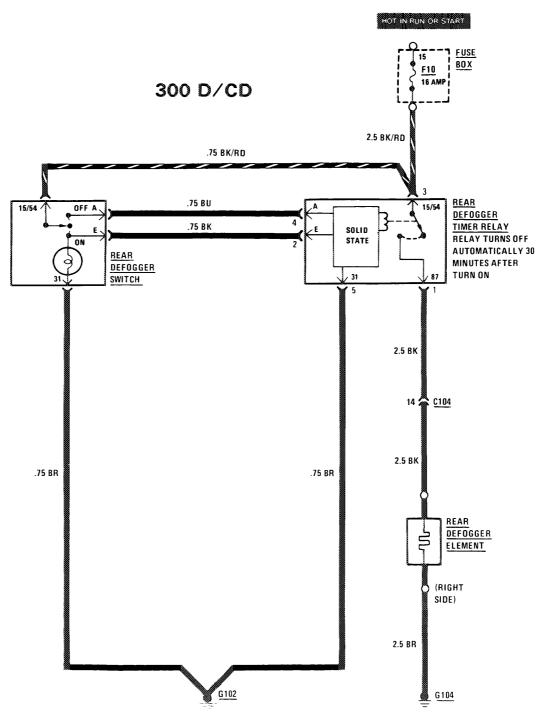

130 300 D/CD/TD

REAR DEFOGGER


(For Component Locations See Page 205)

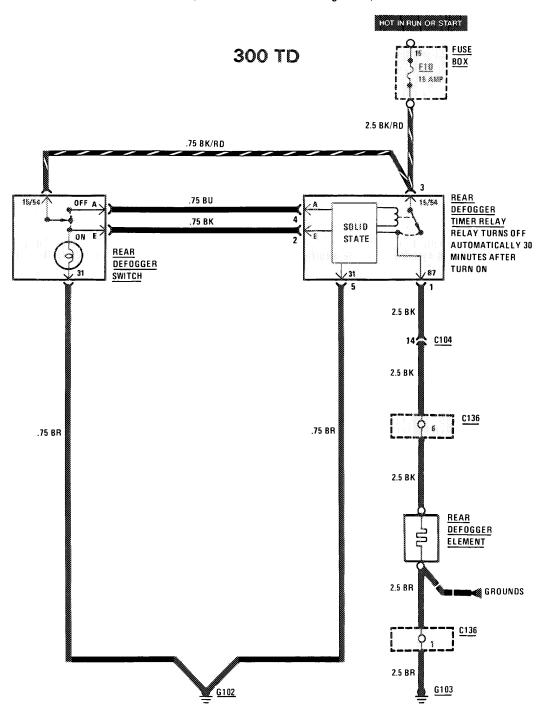

131 300 D/CD/TD

POWER WINDOWS


(For Component Locations See Page 205)

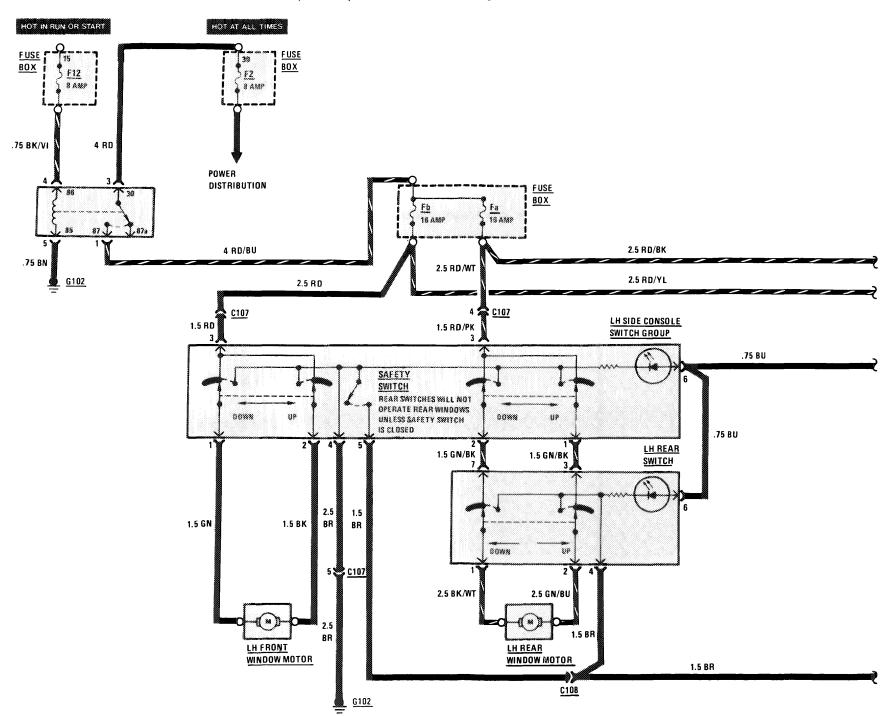

132 300 D/CD/TO TURBO

POWER WINDOWS

(For Component Locations See Page 205)

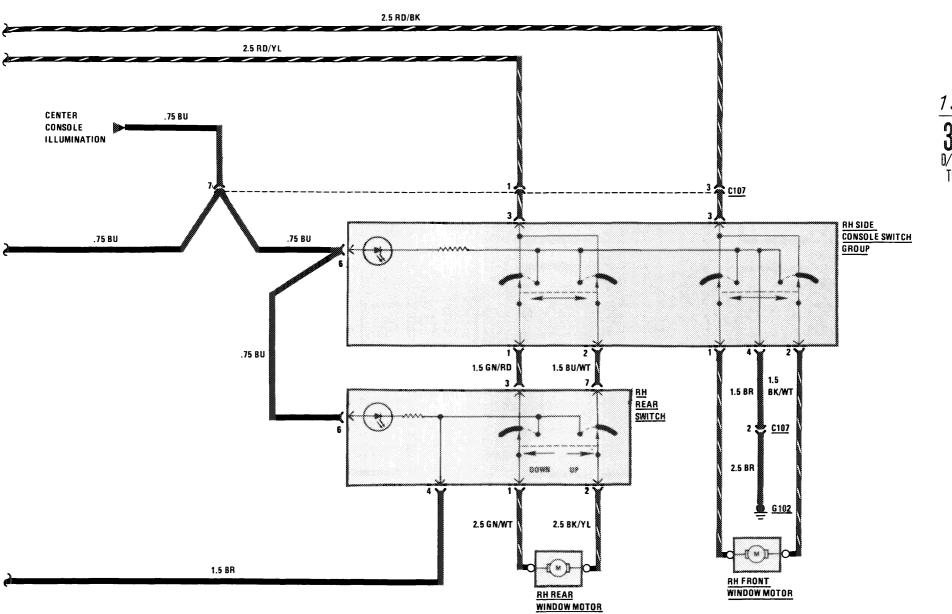


<u>133</u>

300 D/CD/TD TURBO


HEATED SEATS

(For Component Locations See Page 203)

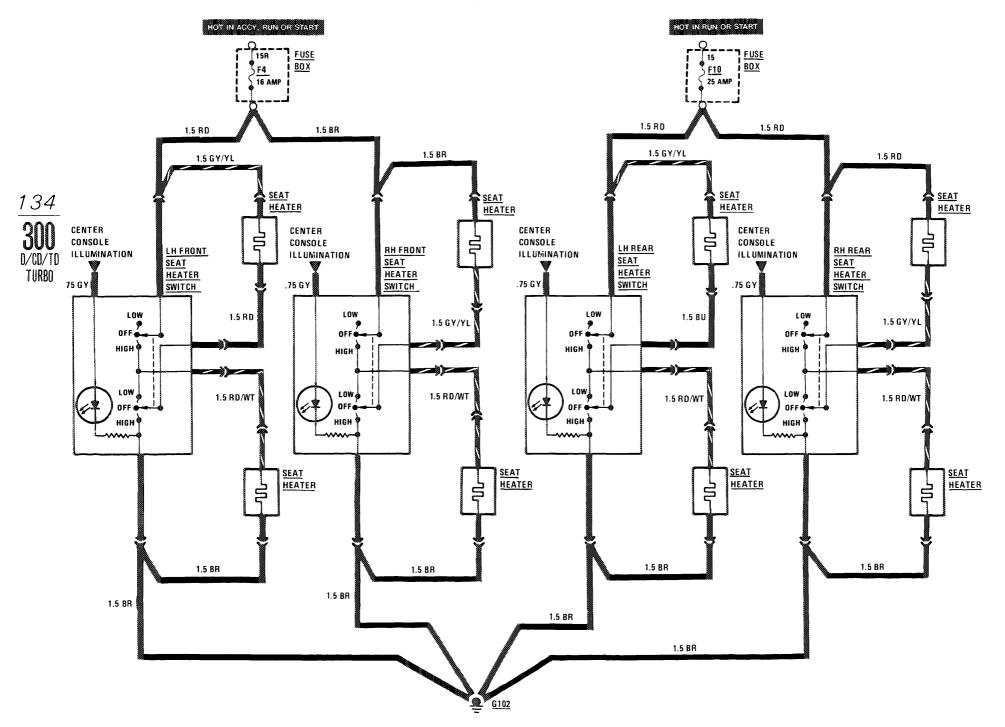


SEAT BACKREST LOCKING SYSTEM


(For Component Locations See Page 206)

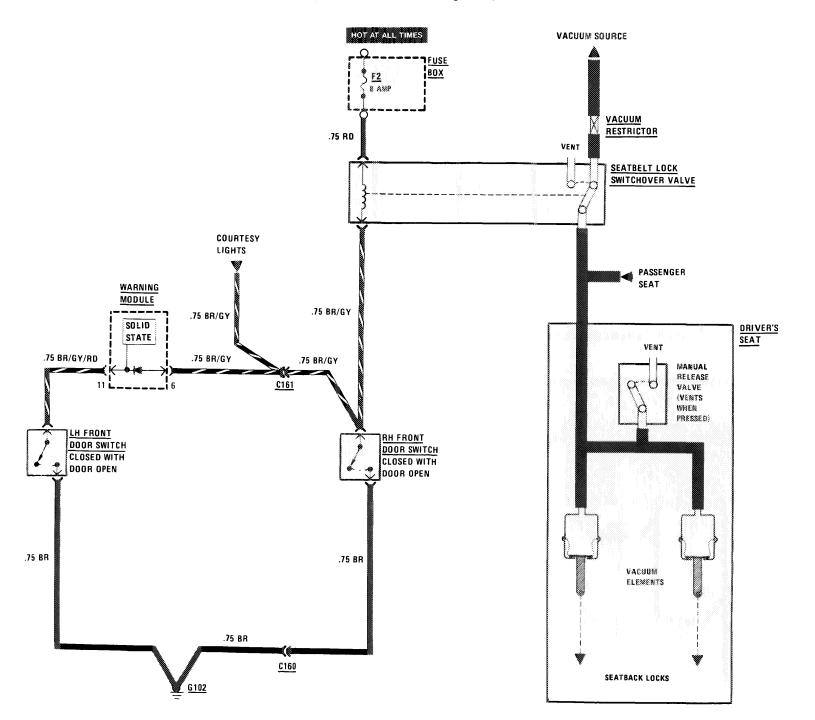



135 300 D/CD/TD

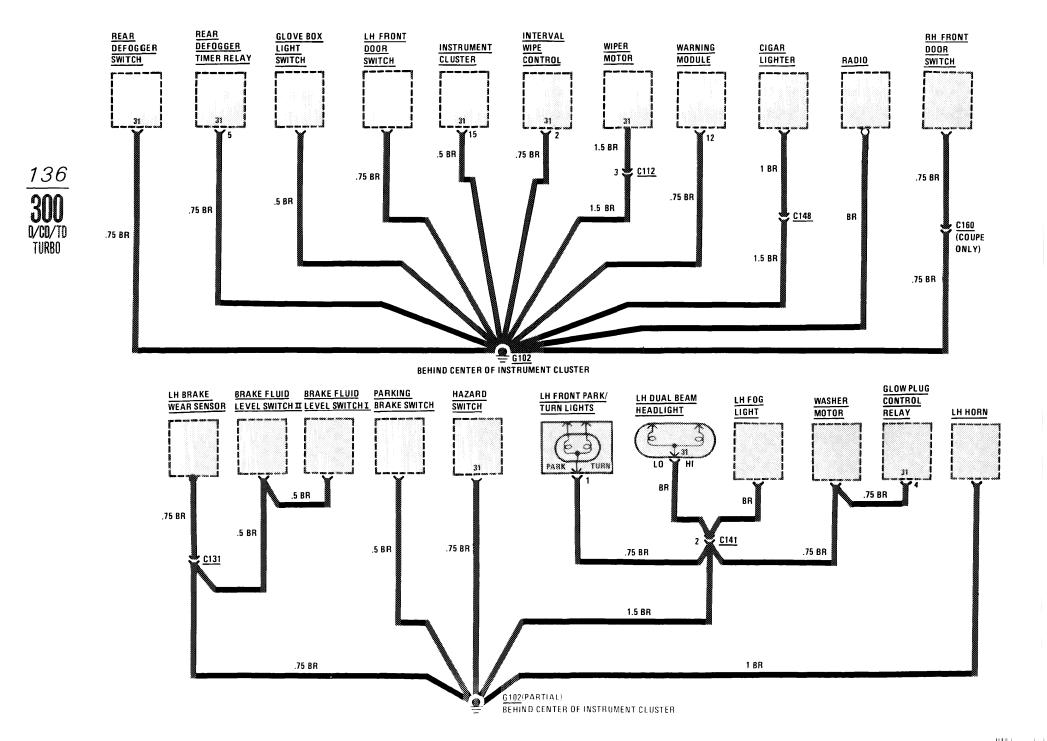


300 TD

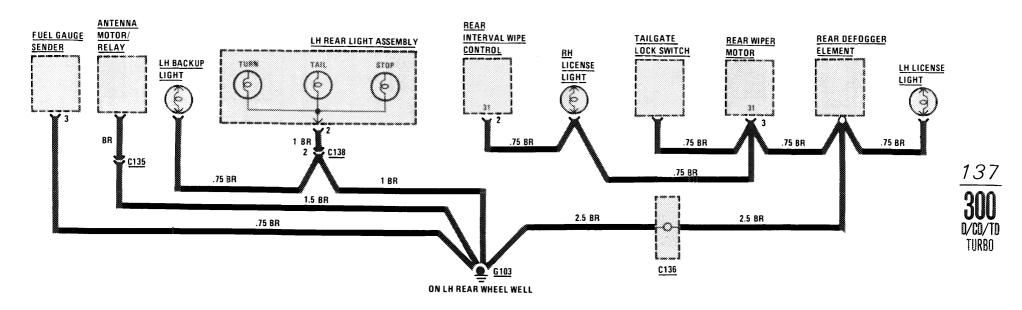

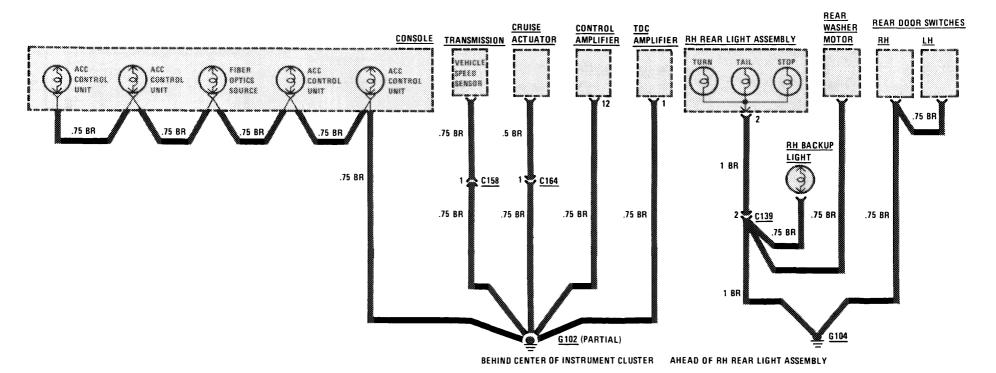

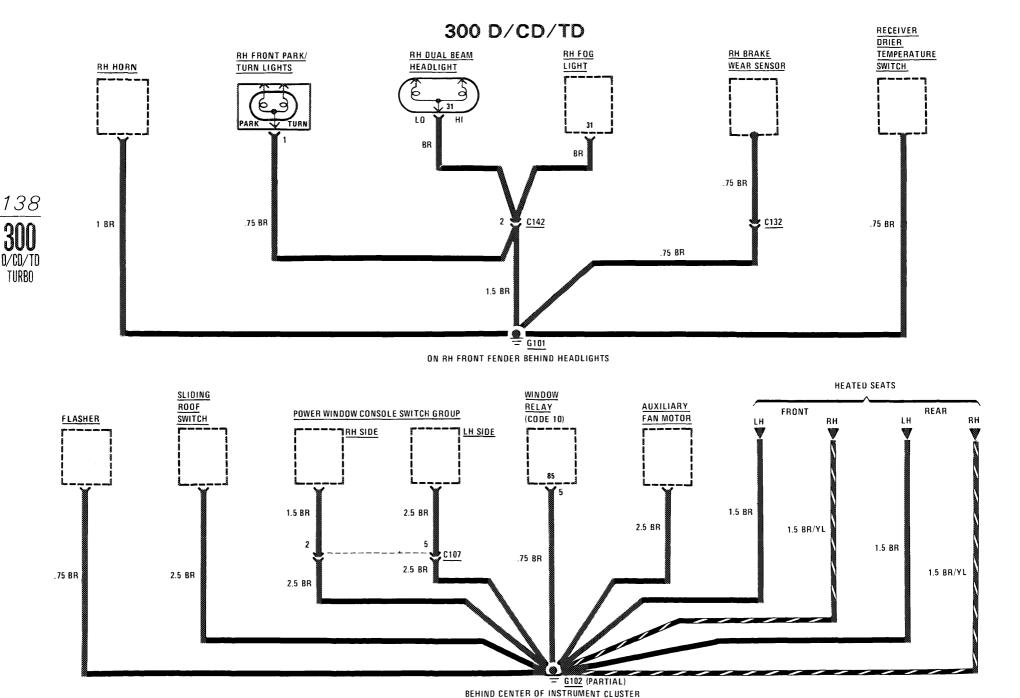

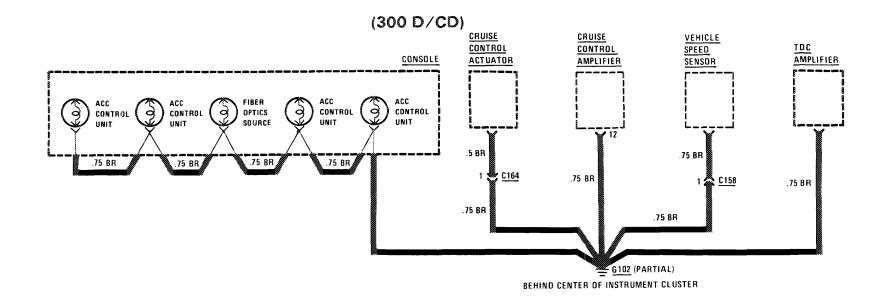

139 300 D/CD/TD TURBO

