

CALCULATOR




SVI™
SPECTRAVIDEO

©1984 NYA RONE X AB

324

Screen Display

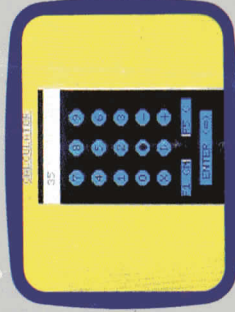


Tips on Handling and Storage

1. Avoid touching the tape with your fingers; you may cause drop-outs or scratches.
2. Protect your cassette from dust and damage when not in use by keeping it in its protective plastic box.
3. The tape should be wound snugly on the cassette reels; if the tape is loose, carefully wind it on to one of the reels by gently turning one of the hubs.
4. Keep the recorder head and pinch roller clean by regular use of a good cassette head cleaner.

5. Avoid prolonged exposure of cassettes to excessive heat, sunlight and strong magnetic fields. Do not store near heating appliances, TV sets or similar equipment.

6. To preserve valuable or prized recordings, punch out and remove the erasure prevention tab on the top edge of the cassette.

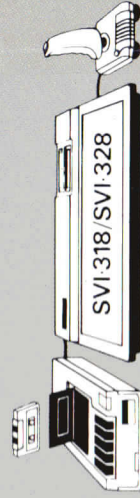

324 CALCULATOR

Instructions

Introduction

Turn your computer into a calculator. You can now use your SVI to automatically perform multiplication, addition, subtraction and division on inputs. Realistic graphics make this program as easy to use and practical as a dedicated calculator.

Hardware Requirements

1. SVI-318 or SVI-328 Computer
2. Data Cassette

Getting Started

1. Hook up your computer to the TV or monitor and connect the data cassette as per the instructions in your User's Manual.
2. Turn all units on.
3. Insert tape. Rewind fully. Type:

load ENTER

Wait until the filename is **Found** and the **"Ok"** prompt appears.

4. Press F5 to run the program. Refer to the instructions section for details.

1. Once loaded the program will display the copyright credits, then a brief description of the keys used in the program.

2. Press ENTER to start the program. A black rectangular block with numerical and mathematical function keys is drawn on the screen. The buttons are arranged exactly like a real calculator.
3. The keys used in this program are listed below:

all numeric keys

X	-	multiplication
+	-	addition
-	-	subtraction
D	-	division
ENTER	=	
F5	-	clears last number entered
F1	-	clears the memory
e on display	-	number too large

4. When you key in a number, it will be shown on the calculator display. You can easily perform all the calculation simply by typing in the number and then the operator as you would with any calculator.

In the Event of Difficulty

1. If the program is in progress, and the computer hangs up, hold down the CTRL key while pressing the STOP key. When the **"Ok"** prompt is displayed, press F5 to run the game. If this fails to eliminate the problem try step 2.
 2. Turn off all equipment and check all connecting cables.
- Rewind tape and retry the procedures outlined in "Getting Started".

124590