



SVI™
SPECTRAVIDEO

©1984 COMPUTER DISTRIBUTORS LTD.

334

Screen Display




Tips on Handling and Storage

1. Avoid touching the tape with your fingers; you may cause drop-outs or scratches.
2. Protect your cassette from dust and damage when not in use by keeping it in its protective plastic box.
3. The tape should be wound snugly on the cassette reels; if the tape is loose, carefully wind it on to one of the reels by gently turning one of the hubs.
4. Keep the recorder head and pinch roller clean by regular use of a good cassette head cleaner.

5. Avoid prolonged exposure of cassettes to excessive heat, sunlight and strong magnetic fields. Do not store near heating appliances, TV sets or similar equipment.

6. To preserve valuable or prized recordings, punch out and remove the erasure prevention tab on the top edge of the cassette.

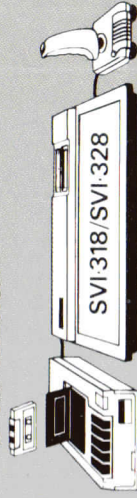

Introduction

It's wash day!

Dirt and grime are staining your wash -- help the Hungry Enzymes gobble up the infiltrators and clean your drain. Scrub away coat after coat of grime by directing the greedy enzyme as he floats to the surface.

Hardware Requirements

1. SVI-318 or SVI-328 Computer
2. Data Cassette
3. One Joystick (Optional)

Getting Started

1. Hook up your computer to the TV or monitor and connect the data cassette as per the instructions in your User's Manual.
2. Turn all units on.
3. Insert tape. Rewind fully. Type:

cloud **ENTER**

Wait until the filename is **Found** and the **"Ok"** prompt appears.

4. Press **F5** to run the program. Refer to the instructions section for details.



Instructions

1. Once loaded the program will display the title page, then a brief description of the game.
 2. Enter '0' to use the cursor keys, '1' to use a joystick in port 1 or '2' to use a joystick in port 2.
 3. A green layer of the wash with random dirt and blocks is drawn on the screen (See Fig. 1). Enzymes always move upwards and you can use the cursor control keys or a joystick to move them diagonally in order to gobble up all the dirt and avoid the blocks.
 4. When all the dirt is gobbled up or your enzyme is caught in the block, a new layer of dirt will be displayed. The more dirt you gobble up, the greedier and faster your enzyme gets.
 5. You lose an enzyme every time you hit a block and there are only 4 enzymes for each game. Your score and the highest score are shown at the bottom of the screen.
 6. If all 4 enzymes are caught, the game will be over. Press 'Y' to continue playing or 'N' to exit.
- ## In the Event of Difficulty
1. If the program is in progress, and the computer hangs up, hold down the **CTRL** key while pressing the **STOP** key. When the **"Ok"** prompt is displayed, press **F5** to run the game. If this fails to eliminate the problem try step 2.
 2. Turn off all equipment and check all connecting cables.
- Rewind tape and retry the procedures outlined in "Getting Started".