
LIQUID CRYSTAL INNER REAR VIEW MIRROR

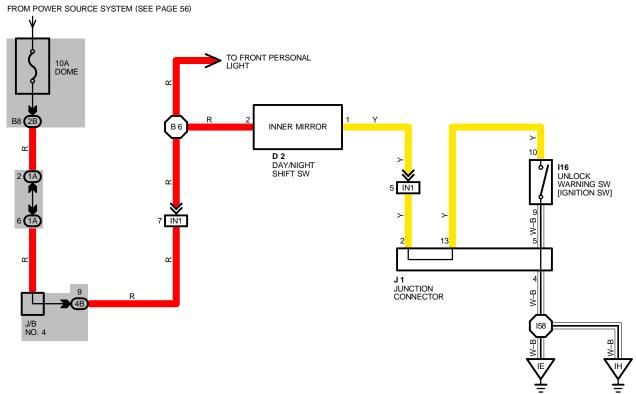

SERVICE HINTS

D 2 DAY/NIGHT SHIFT SW

1-GROUND: ALWAYS APPROX. 12 VOLTS 116 UNLOCK WARNING SW [IGNITION SW] 10-9: CLOSED WITH IGNITION KEY IN CYLINDER

: PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
D 2	28	I16	26	J 1	27

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1A	18	COWL WIRE AND J/B NO.1 (LEFT SIDE OF STEERING COLUMN TUBE)
2B	20	COWL WIRE AND J/B NO.2 (ENGINE COMPARTMENT LEFT)
4B	23	COWL WIRE AND J/B NO.4 (BEHIND THE COMBINATION METER)

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IN1	36	COWL WIRE AND ROOF WIRE (BEHIND GLOVE BOX)


: GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
IE	34	LEFT KICK PANEL
IH	34	RIGHT KICK PANEL


: SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I 58	36	COWL WIRE	В 6	38	ROOF WIRE

J 1



I16 BLACK



D 2