
FROM POWER SOURCE SYSTEM (SEE PAGE 56)

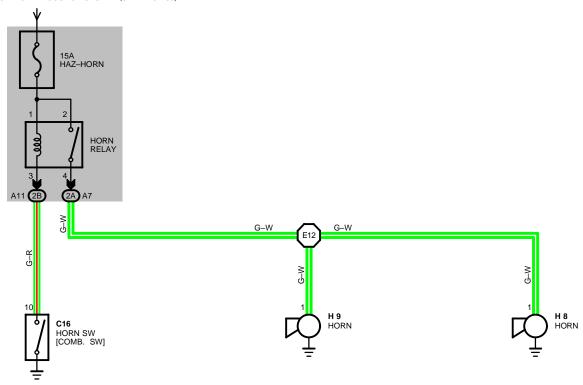

## **SERVICE HINTS**

**HORN RELAY** 

2-4 : CLOSED WITH HORN SW ON

## : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C16	26	H 8	24	H 9	24

## : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

	CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
Ī	2A 20 ENGINE ROOM MAIN WIRE AND J/B NO.2 (ENGINE COMPARTMENT LEFT)		
Ī	2B 20 COWL WIRE AND J/B N0.2 (ENGINE COMPARTMENT LEFT)		

## : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E 12	32	ENGINE ROOM MAN WIRE			

