


Vivado SDK 2019.1 - Configuration UART

This configuration allows to use a single USB connection to communicate and program the ZedBoard.

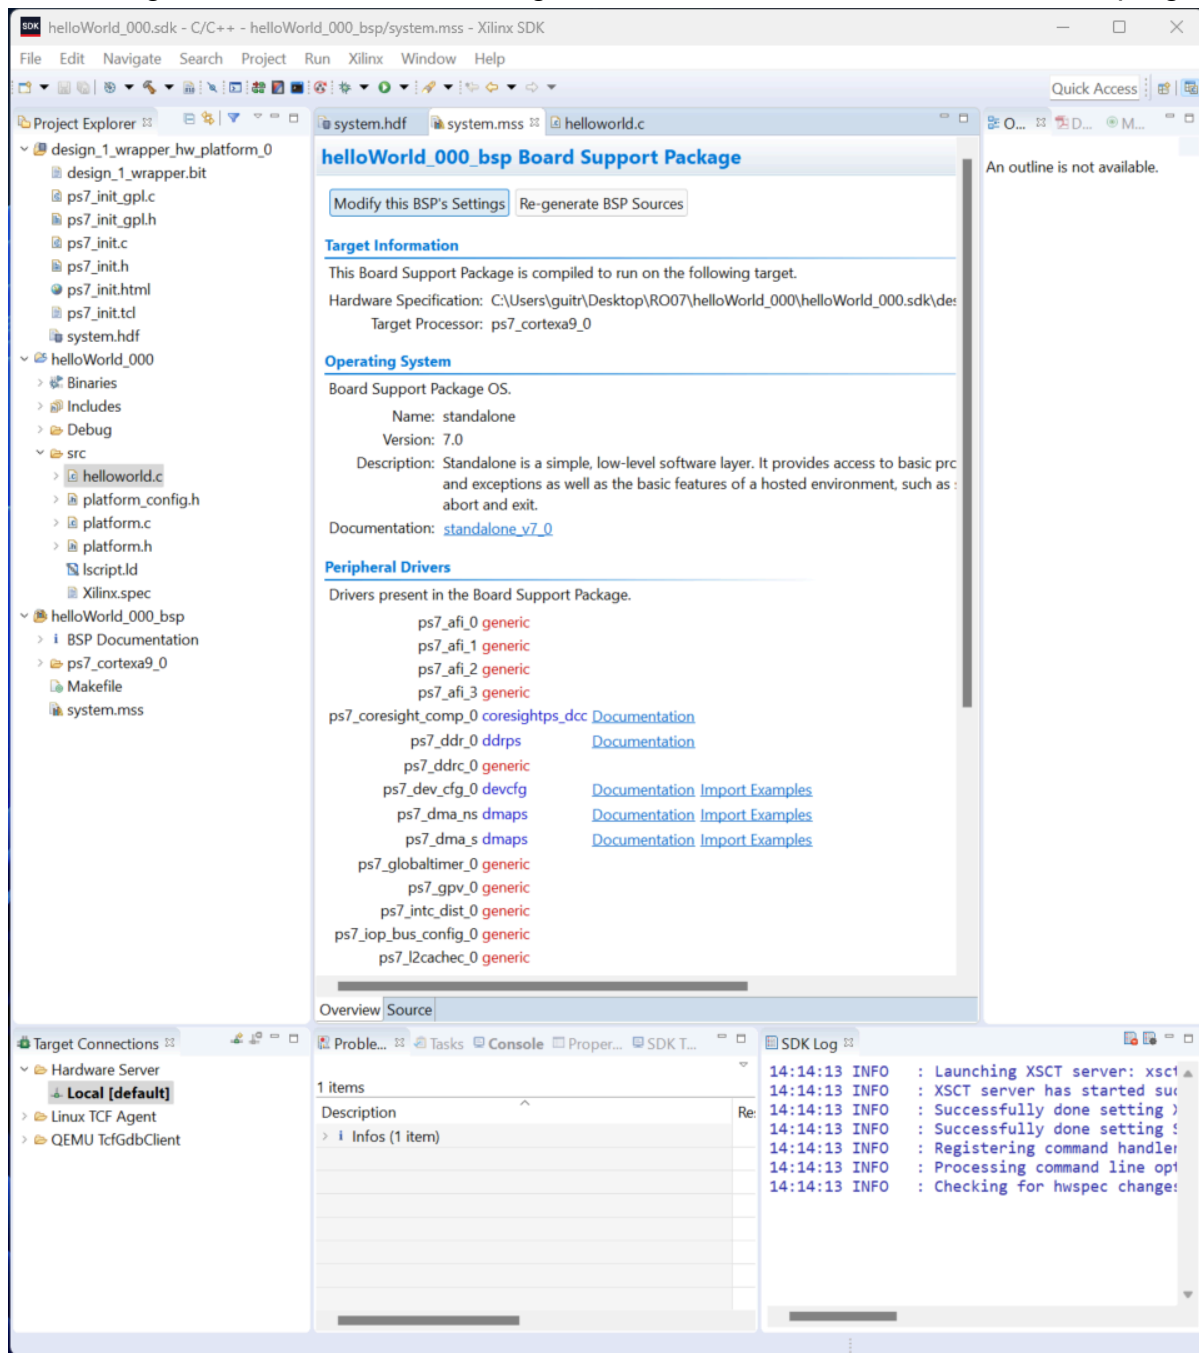

- Overview
 - standalone
 - drivers
 - ps7_cortexa9_0

Name	Value	Default	Type	Description
hypervisor_guest	false	false	boolean	Enable hypervisor guest support
lockstep_mode_debug	false	false	boolean	Enable debug logic in lockstep mode
sleep_timer	none	none	peripheral	This parameter is used to select the sleep timer peripheral.
stdin	ps7_coresight_comp_0	none	peripheral	stdin peripheral
stdout	ps7_uart_1		peripheral	stdout peripheral
ttc_select_cntr	ps7_coresight_comp_0		enum	Selects the counter to use for TTC
zynqmp_fsbl_bsp	ps7_uart_1		boolean	Disable or Enable OptiFPGA boot
> microblaze_exceptions	false	false	boolean	Enable MicroBlaze Exception Support
> enable_sw_intrusive_pr	false	false	boolean	Enable S/W Intrusive Profiling



OK

Cancel

- Overview
 - standalone
 - drivers
 - ps7_cortexa9_0

[illegible]

OK

Cancel