
eurolite® FE-1750

Hybrid Laserflower

Bedienungsanleitung **User Manual**

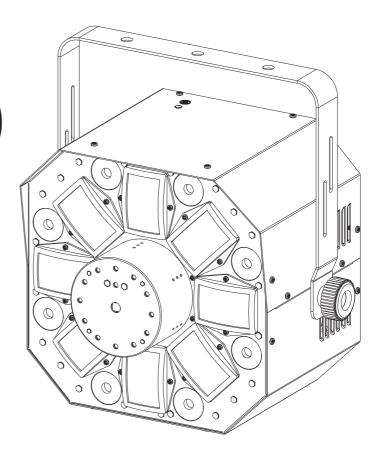

eurolite®

LED FE-1750 Hybrid Laserflower

Hybrid Laserflower mit RG-Laser (2M) und Stroboskop Hybrid Laserflower with RG laser (2M) and stroboscope



















No. 51741083

Inhaltsverzeichnis / Table of contents

Deutsch

EINFÜHRUNG	3
Produktmerkmale	3
SICHERHEITSHINWEISE	
UMWELTSCHUTZ	
GERÄTEBESCHREIBUNG	
INSTALLATION	
ANSCHLÜSSE	8
DMX512-Ansteuerung	8
Drahtlose DMX-Übertragung mit QuickDMX	9
Anschluss ans Netz	9
Stromversorgung von weiteren Geräten	9
BEDIENUNG	-
Menüstruktur	10
Standalone-Betrieb	11
Fernbedienung IR-7	12
DMX-Betrieb	13
REINIGUNG UND WARTUNG	_
Sicherungswechsel	15
TECHNISCHE DATEN	-
Zubehör	16
English	
INTRODUCTION	17
Product features	17
SAFETY INSTRUCTIONS	
PROTECTING THE ENVIRONMENT	
DESCRIPTION OF THE DEVICE	
INSTALLATION	
CONNECTIONS	
DMX512 control	22
Wireless DMX transmission with QuickDMX	22
	22
Connection to the mains	22
Connection to the mains Power supply of further devices	22 23
Connection to the mains Power supply of further devices OPERATION	22 23 23
Connection to the mains Power supply of further devices OPERATION Menu structure	22 23 23 23
Connection to the mains Power supply of further devices OPERATION Menu structure Stand-alone mode	22 23 23 23 24
Connection to the mains Power supply of further devices OPERATION Menu structure Stand-alone mode Remote control IR-7	22 23 23 23 24 25
Connection to the mains Power supply of further devices OPERATION Menu structure Stand-alone mode Remote control IR-7 DMX operation	22 23 23 24 25 26
Connection to the mains Power supply of further devices OPERATION Menu structure Stand-alone mode Remote control IR-7 DMX operation CLEANING AND MAINTENANCE	22 23 23 23 24 25 26 28
Connection to the mains Power supply of further devices OPERATION Menu structure Stand-alone mode Remote control IR-7 DMX operation	22 23 23 24 25 26 28

Diese Bedienungsanleitung gilt für die Artikelnummer / This user manual is valid for the article number: 51741083

Das neueste Update dieser Bedienungsanleitung finden Sie im Internet unter: You can find the latest update of this user manual in the Internet under: www.eurolite.de

BEDIENUNGSANLEITUNG

eurolite®

LED FE-1750 Hybrid Laserflower



GEFAHR! Elektrischer Schlag durch Kurzschluss

Seien Sie besonders vorsichtig beim Umgang mit gefährlicher Netzspannung. Bei dieser Spannung können Sie einen lebensgefährlichen elektrischen Schlag erhalten. Öffnen Sie das Gerät niemals und schützen Sie es vor Feuchtigkeit und Nässe.



Lesen Sie vor der Verwendung des Geräts diese Bedienungsanleitung. Sie erhalten dadurch wichtige Hinweise für den korrekten Betrieb.

Alle Personen, die mit der Aufstellung, Inbetriebnahme, Bedienung, Wartung und Instandhaltung dieses Gerätes zu tun haben, müssen

- entsprechend qualifiziert sein
- diese Bedienungsanleitung genau beachten
- die Bedienungsanleitung als Teil des Produkts betrachten
- die Bedienungsanleitung während der Lebensdauer des Produkts behalten
- die Bedienungsanleitung an jeden nachfolgenden Besitzer oder Benutzer des Produkts weitergeben
- sich die letzte Version der Anleitung im Internet herunter laden

EINFÜHRUNG

Wir freuen uns, dass Sie sich für eines unserer Produkte entschieden haben. Wenn Sie nachfolgende Hinweise beachten, sind wir sicher, dass Sie lange Zeit Freude an Ihrem Kauf haben werden.

Produktmerkmale

4in1-LED-Effektscheinwerfer mit Derby, Washlight, Laser (2M) und Stroboskop

- Rotierender Derby f
 ür Spiegelkugeleffekte mit 6 leistungsstarken 3-W-RGBAW+UV-LEDs (6in1)
- 8 leistungsstarke 4-W-RGB+UV-LEDs (4in1) für breites Stimmungslicht und Schwarzlicht
- 2 Laserdioden f
 ür roten und gr
 ünen Sternenlasereffekt
- Laserklasse 2M: keine Abnahme oder Bestellung eines Laserschutzbeauftragten erforderlich
- Strobe-Ring mit 12 kaltweißen SMD-LEDs (0,5 W) für schnelle, dynamische Strobe-Effekte
- Alle Effekte individuell steuerbar
- Geräuschloser Betrieb
- Auto-, Musik-, Master/Slave- und DMX-Modus
- 7 integrierte Showprogramme im Auto- und Musikmodus
- Stufenlose Farbmischung, Dimmer und Strobe-Effekt
- Adressierung und Einstellungen über Steuereinheit mit 4-stelliger LED-Anzeige
- Bequeme Fernsteuerung per mitgelieferter IR-Fernbedienung EUROLITE IR-7
- Musiksteuerung über eingebautes Mikrofon mit einstellbarer Mikrofonempfindlichkeit
- Kompatibel zu QuickDMX das Funk-DMX-System von Eurolite
- Phantomgespeiste USB-Buchse für Quick-DMX-Empfänger (Zubehör)
- DMX512-Steuerung über jeden handelsüblichen DMX-Controller möglich
- 4 oder 13 DMX-Kanäle wählbar
- Schwenkbarer Montagebügel
- Durchschleifausgang zur Spannungsversorgung von bis zu 8 Geräten



SICHERHEITSHINWEISE



WARNUNG!

Lesen Sie aufmerksam die Sicherheitshinweise und benutzen Sie das Produkt nur wie in dieser Anleitung beschrieben, damit es nicht versehentlich zu Verletzungen oder Schäden kommt.

Verwendungszweck

- Bei diesem Gerät handelt es sich um einen Laserprojektor, mit dem sich dekorative Lichteffekte erzeugen lassen. Das Gerät ist für professionelle Anwendungen im Bereich der Veranstaltungstechnik vorgesehen (z. B. auf Bühnen). Es ist nicht für die Raumbeleuchtung in Haushalten geeignet.
- Verwenden Sie das Produkt ausschließlich gemäß den hier gegebenen Vorgaben. Bei Schäden, die durch Nichtbeachten dieser Anleitung verursacht werden, erlischt der Garantieanspruch. Für Folgeschäden wird keine Haftung übernommen.
- Bei Sach- oder Personenschäden, die durch unsachgemäße Handhabung oder Nichtbeachten der Sicherheitshinweise verursacht werden, übernehmen wir keine Haftung und es erlischt jeder Garantieanspruch.
- Aus Sicherheitsgründen ist das eigenmächtige Umbauen oder Verändern des Geräts nicht gestattet und hat den Verfall der Garantieleistung zur Folge.

Gefahr durch Elektrizität

- Das Gerät ist nur zur Verwendung im Innenbereich geeignet. Benutzen Sie es nicht im Freien. Setzen Sie es niemals Regen oder Feuchtigkeit aus. Bewahren Sie es nicht in feuchten Räumen auf.
- Um Stromschläge zu vermeiden, niemals irgendeinen Teil des Produkts öffnen. Im Geräteinneren befinden sich keine vom Benutzer zu wartende Teile.
- Schließen Sie das Gerät nur an eine vorschriftsmäßig installierte Steckdose an, deren Spannung und Frequenz mit dem Typenschild des Geräts genau übereinstimmt und die über einen Fehlerstromschutzschalter (FI) abgesichert ist. Wenn der Netzstecker mit einem Schutzkontakt ausgestattet ist, muss er an eine Steckdose mit Schutzleiter angeschlossen werden. Deaktivieren Sie niemals den Schutzleiter eines Netzkabels. Nichtbeachtung kann zu Schäden am Gerät und zu Verletzungen des Benutzers führen.
- Die Steckdose muss gut zugänglich sein, damit Sie im Bedarfsfall den Netzstecker schnell ziehen können.
- Fassen Sie den Netzstecker niemals mit nassen Händen an, da die Gefahr eines Stromschlags besteht.
- Das Netzkabel darf nicht geknickt oder gequetscht werden. Halten Sie es von heißen Oberflächen und scharfen Kanten fern.
- Ziehen Sie den Netzstecker nie am Kabel aus der Steckdose, fassen Sie immer am Stecker an.
- Trennen Sie das Gerät vom Stromnetz bei längerem Nichtgebrauch, bevor Sie es reinigen und wenn Gewitter auftreten.
- Setzen Sie das Gerät keinen hohen Temperaturen, direktem Sonnenlicht, Tropf- oder Spritzwasser, starken Vibrationen sowie hohen mechanischen Beanspruchungen aus. Benutzen Sie das Gerät nicht in tropischem Klima.
- Stellen Sie keine mit Flüssigkeit gefüllten Gegenstände sowie offene Brandquellen wie brennende Kerzen auf oder direkt neben dem Gerät ab.
- Sorgen Sie dafür, dass keine Gegenstände in das Gerät fallen können, insbesondere Metallteile.
- Lassen Sie Reparaturen am Gerät oder am Netzkabel nur von qualifiziertem Fachpersonal durchführen. Reparaturen müssen durchgeführt werden, wenn sichtbare Schäden am Gerät oder am Netzkabel vorhanden sind, Flüssigkeiten oder Objekte in das Gerät gelangt sind, das Gerät Regen ausgesetzt war, das Gerät heruntergefallen ist oder wenn Funktionsstörungen auftreten.
- Die Reinigung beschränkt sich auf die Oberfläche. Dabei darf keine Feuchtigkeit in Anschlussräume oder an Netzspannung führende Teile gelangen. Wischen Sie das Produkt nur mit einem fusselfreien, angefeuchteten Tuch ab. Niemals Lösungsmittel oder scharfe Reinigungsmittel verwenden.

Gefahr für Kinder und Personen mit eingeschränkter Fähigkeit

- Das Gerät ist kein Spielzeug. Halten Sie es vor Kindern und Haustieren fern. Lassen Sie Verpackungsmaterial nicht achtlos liegen. Betreiben Sie das Gerät nicht unbeaufsichtigt.
- Das Gerät darf nur von Personen benutzt werden, die über ausreichende physische, sensorische und geistige Fähigkeiten sowie über entsprechendes Wissen und Erfahrung verfügen. Andere Personen dürfen das Gerät nur benutzen, wenn sie von einer für ihre Sicherheit zuständigen Person beaufsichtigt oder angeleitet werden.

Warnung vor Verbrennung und Brand

- Der zulässige Umgebungstemperaturbereich (Ta) beträgt -5 bis +45 °C. Verwenden Sie das Gerät niemals außerhalb dieses Temperaturbereichs.
- Die Gehäusetemperatur (Tc) kann im Betrieb bis zu 65 °C betragen. Vermeiden Sie den Kontakt mit Personen oder Gegenständen.
- Der Mindestabstand zur beleuchteten Fläche beträgt 1 m. Der Wert ist am Gerät über das Bildzeichen angegeben: (]---m .
- Halten Sie das Gerät vor leicht entflammbaren Materialien fern. Platzieren Sie es so, dass im Betrieb eine ausreichende Luftzirkulation gewährleistet ist. Das Gerät muss einen Mindestabstand von 50 cm zu angrenzenden Flächen haben und die Lüftungsöffnungen am Gehäuse dürfen auf keinen Fall abgedeckt werden.

Warnung vor Verletzungen

- Nicht direkt in die Lichtquelle blicken. Personen mit lichtempfindlicher Epilepsie könnten epileptische Anfälle erleiden oder bewusstlos werden.
- Stellen Sie sicher, dass das Gerät fachgerecht und sicher aufgestellt oder befestigt ist und nicht herunterfallen kann. Beachten Sie bei der Installation die gesetzlichen, nationalen Sicherheitsvorschriften insbesondere die Bestimmungen der EN 60598-2-17.
- Versuchen Sie niemals, die Installation selbst vorzunehmen, wenn Sie nicht über eine ausreichende Qualifikation verfügen, sondern beauftragen Sie einen professionellen Installateur. Unsachgemäße Installationen können zu Verletzungen und/oder zur Beschädigung von Eigentum führen.
- Der Hersteller haftet nicht für Schäden, die durch unsachgemäße Installation und unzureichende Sicherheitsvorkehrungen verursacht werden.
- Bei einer Montage über Kopf ist das Gerät immer durch eine zweite Befestigung (z. B. Fangseil oder Fangnetz) zu sichern.
- Während Montage- und Wartungsarbeiten muss der Bereich unterhalb des Geräts abgesperrt sein.
- Bei gewerblicher Nutzung sind die landesspezifischen Unfallverhütungsvorschriften des Verbandes der gewerblichen Berufsgenossenschaften für elektrische Anlagen und Betriebsmittel unbedingt zu beachten.

Vorsicht - Sachschäden

- Schließen Sie das Gerät niemals über einen Dimmer an die Netzspannung an.
- Lichteffekte sind generell nicht für den Dauerbetrieb konzipiert. Längere Betriebszeiten sollten immer durch Pausen unterbrochen werden, um die Lebensdauer des Geräts erhöhen.
- Vermeiden Sie es das Gerät in kurzen Intervallen ein- und auszuschalten. Dadurch reduziert sich die Lebensdauer des Geräts erheblich.
- Nehmen Sie das Gerät niemals gleich in Betrieb, nachdem es starken Temperaturschwankungen ausgesetzt wurde. Das dabei entstehende Kondenswasser kann unter Umständen das Gerät zerstören. Lassen Sie das Gerät ausgeschaltet auf Zimmertemperatur kommen. Warten Sie bis das Kondenswasser verdunstet ist.
- Benutzen Sie die Originalverpackung, um das Gerat bei Transport und Lagerung optimal vor Erschütterungen, Staub und Feuchtigkeit zu schützen.
- Wenn am Gerät ein Etikett mit Seriennummer angebracht ist, darf dieses nicht entfernt werden, da ansonsten der Garantieanspruch erlischt.

Batteriehinweise

- Schließen Sie die Batterien nie kurz, werfen Sie sie nie ins Feuer und versuchen Sie auch nicht, sie wieder aufzuladen (Explosionsgefahr!).
- Entfernen Sie die Batterien bei längerem Nichtgebrauch.
- Ausgelaufene Batterien können bei Berührung Hautverätzungen verursachen. Benutzen Sie in solchen Fällen geeignete Schutzhandschuhe.

Wichtige Hinweise für Lasergeräte

GEFAHR!



Nicht in den Laserstrahl blicken. Den Laserstrahl nicht mit optischen Instrumenten wie Lupen oder Ferngläsern betrachten. Laserstrahlung kann zu Augen- und/oder Hautverletzungen führen. Alle Schutzmaßnahmen für den sicheren Betrieb dieses Lasers müssen unbedingt eingehalten werden.

LASERSTRAHLUNG
Nicht in den Strahl blicken oder direkt
mit optischen instrumenten betrachten
LASERKLASSE 2M
EN 0825-1:2014
P=<1mW \(\lambda = 532/650nm \)

Unbedingt einzuhaltende Schutzmaßnahmen

- Dieses Gerät beinhaltet einen Laser der Klasse 2M entsprechend der Klassifizierung nach DIN EN 60825-1. Am Gehäuse ist ein entsprechender Warnhinweis angebracht. Die zugängliche Laserstrahlung liegt nur im sichtbaren Spektralbereich (400 nm bis 700 nm). Bei kurzzeitiger Bestrahlungsdauer (max. 0,25 Sekunden) ist die Laserstrahlung jedoch ungefährlich für das Auge. Eine längere Bestrahlung wird durch den natürlichen Lidschlussreflex verhindert. Schließen Sie dennoch bewusst die Augen oder wenden Sie sich sofort ab, sollte die Laserstrahlung ins Auge treffen.
- Der Betreiber muss die landesspezifischen Unfallverhütungsvorschriften des Verbandes der gewerblichen Berufsgenossenschaften für elektrische Anlagen und Betriebsmittel beachten. Die entsprechende Unfallverhütungsvorschrift der Berufsgenossenschaft in Deutschland ist die BGV-B2.
- Die Montage, Inbetriebnahme und Bedienung dieses Produkts darf nur durch entsprechend qualifiziertes Fachpersonal und nur unter Berücksichtigung der in der Bedienungsanleitung genannten Anforderungen erfolgen.
- Wenn andere als die hier angegebenen Bedienungs- und Justiereinrichtungen benutzt oder Verfahrensweisen ausgeführt werden, kann dies zu gefährlicher Strahlungsexposition führen!
- Blicken Sie nie in den Laserstrahl und richten Sie ihn niemals auf Personen oder Tiere. Laserstrahlung kann zu Augen- oder Hautverletzungen führen.
- Blicken Sie auf keinen Fall mit optischen Instrumenten (wie z. B. Lupen oder Ferngläsern) in den Laserstrahl. Es besteht Gefahr von Augen- und/oder Hautverletzungen.
- Richten Sie den Laserstrahl niemals auf Spiegel oder andere reflektierende Flächen. Der unkontrolliert abgelenkte Strahl könnte Personen oder Tiere treffen.
- Installieren Sie das Produkt so, dass die Projektionen mit einem Abstand von mindestens 1 Meter zum Publikum stattfinden.
- Kennzeichnen Sie den Anwendungsbereich des Geräts durch Absperrungen oder Warnschilder.
- Achtung Laserdiode! Öffnen oder verändern Sie niemals das Gerät. Eine Veränderung kann zum Austritt gefährlicher Laserstrahlung führen, die die angegebene Leistung um ein vielfaches überschreitet.

UMWELTSCHUTZ




Informationen zur Entsorgung

Bitte übergeben Sie das Gerät bzw. die Geräte am Ende der Nutzungsdauer zur umweltgerechten Entsorgung einem örtlichen Recyclingbetrieb. Geräte, die mit diesem Symbol gekennzeichnet sind, dürfen nicht im Hausmüll entsorgt werden. Für weitere Informationen wenden Sie sich bitte an Ihren Händler oder die zuständige örtliche Behörde. Entnehmen Sie evtl. eingelegte Batterien und entsorgen Sie diese getrennt vom Produkt.



Als Endverbraucher sind Sie durch die Batterieverordnung gesetzlich zur Rückgabe aller gebrauchten Batterien und Akkus verpflichtet. Die Entsorgung über den Hausmüll ist verboten. Verbrauchte Batterien können Sie unentgeltlich bei den Sammelstellen Ihrer Gemeinde und überall, wo Batterien verkauft werden, abgeben. Mit der Verwertung von Altgeräten und der ordnungsgemäßen Entsorgung von Batterien und Akkus leisten Sie einen wichtigen Beitrag zum Schutz unserer Umwelt.

GERÄTEBESCHREIBUNG

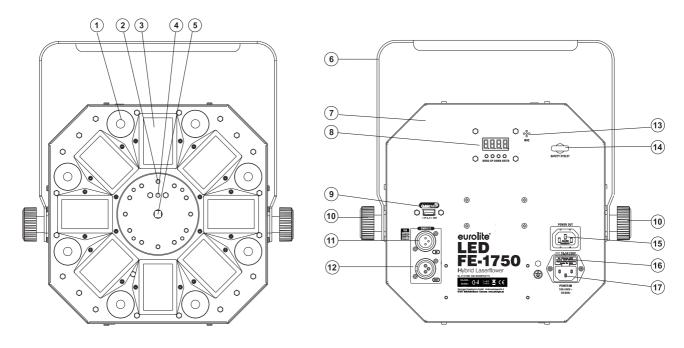

- (1) Washlight mit RGB+UV-LEDs
- (2) Strobe-Ring mit kaltweißen LEDs
- (3) Derby mit RGBAW+UV-LEDs
- (4) Infrarotsensor für die Fernbedienung
- (5) Laseraustrittsöffnung
- (6) Montagebügel
- (7) Gehäuse
- (8) Display mit Bedientasten
- (9) USB-Buchse für QuickDMX-Empfänger

- (10) Feststellschraube
- (11) DMX-Eingang
- (12) DMX-Ausgang
- (13) Mikrofon
- (14) Fangseilöse
- (15) Netzdurchschleifausgang
- (16) Sicherungshalter
- (17) Netzanschluss

INSTALLATION



WARNUNG! Verletzungsgefahr durch Herabfallen

Über Kopf installierte Geräte können beim Herabstürzen erhebliche Verletzungen verursachen! Stellen Sie sicher, dass das Gerät sicher installiert ist und nicht herunterfallen kann. Die Montage darf nur durch eine Fachkraft erfolgen, die mit den Gefahren und den einschlägigen Vorschriften hierfür vertraut ist.



GEFAHR! Verletzung durch Laserstrahlung.

Beachten Sie bei der Montage unbedingt das Kapitel Sicherheitshinweise.

Das Gerät kann auf dem Boden aufgestellt oder an einer Traverse oder einer anderen geeigneten Struktur befestigt werden. Die Montage darf niemals freischwingend erfolgen.

- 1 Die tragende Struktur muss mindestens für das Zehnfache aller montierten Geräte ausgelegt sein.
- 2 Sperren Sie den Arbeitsbereich während der Montage und arbeiten Sie von einer stabilen Plattform aus.
- 3 Verwenden Sie Montagematerial, das für die Struktur geeignet ist und die Last des Geräts tragen kann. Geeignetes Montagematerial finden Sie im Abschnitt "Zubehör".
- 4 Sichern Sie das Gerät mit einem Fangseil oder einer anderen geeigneten Einrichtung zusätzlich ab. Diese zweite Aufhängung muss auf Grundlage der aktuellsten Arbeitsschutzbestimmungen ausreichend dimensioniert und so angebracht sein, dass im Fehlerfall der Hauptaufhängung kein Teil der Installation herabfallen kann. Für die Befestigung eines Fangseils ist eine entsprechende Öse am Gerät montiert. Befestigen Sie das Sicherungsseil so, dass der Fallweg des Geräts nicht mehr als 20 cm betragen kann.
- 5 Zum Ausrichten des Geräts lösen Sie die Feststellschrauben am Hängebügel, stellen die gewünschte Neigung ein und ziehen die Schrauben wieder fest an.
- 6 Überprüfen Sie, ob sich Spiegelkugeln, glänzende Oberflächen etc. im Strahlungsbereich des Lasers befinden. Entfernen Sie vorsichtshalber spiegelnde Gegenstände aus dem Strahlungsbereich bzw. decken Sie sie ab.
- 7 Nach der Montage muss das Gerät regelmäßig gewartet und überprüft werden, um mögliche Korrosion, Verformung und Lockerung zu vermeiden.

ANSCHLÜSSE

DMX512-Ansteuerung

Für die Ansteuerung des Geräts per DMX512 ist eine Datenverbindung notwendig. Das Gerät verfügt dazu über 3-polige XLR-Anschlüsse.

- 1 Verbinden Sie den Ausgang Ihres Controllers mit dem DMX-Eingang DMX IN des Geräts über ein DMX-Kabel.
- Verbinden Sie den DXM-Ausgang DMX OUT des Geräts mit dem DMX-Eingang des nächsten Geräts in der Kette. Verbinden Sie immer einen Ausgang mit dem Eingang des nächsten Geräts bis alle Geräte angeschlossen sind.
- 3 Am letzten Gerät muss die DMX-Leitung durch einen Abschlusswiderstand abgeschlossen werden. Dazu wird ein XLR-Stecker in den DMX-Ausgang am letzten Gerät gesteckt, bei dem zwischen Signal (–) und Signal (+) ein 120-Ω-Widerstand eingelötet ist.
- 4 Ab einer Kabellänge von 300 m oder nach 32 angeschlossenen DMX-Geräten sollte das Signal mit Hilfe eines DMX-Aufholverstärkers verstärkt werden, um eine fehlerfreie Datenübertragung zu gewährleisten.



Belegung der XLR-Verbindung:

DMX-Ausgang

XLR-Einbaubuchse:



DMX-Eingang

XLR-Einbaustecker:



Drahtlose DMX-Übertragung mit QuickDMX

Das Gerät verfügt über einen weiteren DMX-Eingang für einen QuickDMX-Empfänger (separat erhältliches Zubehör). Über diesen Anschluss lässt sich ein DMX-Steuersignal drahtlos auf das Gerät übertragen. Der Anschluss ist als USB-Buchse ausgeführt, die die benötigte Betriebsspannung von 5 V für den Empfänger zur Verfügung stellt. Durch den Einsatz der QuickDMX-Funkstrecke entfällt die aufwändige Verkabelung zwischen dem DMX-Lichtsteuergerät und dem Gerät.

Belegung der USB-Buchse:



+5V D- D+ GND

Anschluss ans Netz

Das Gerät verfügt über ein Schaltnetzteil, das eine Netzspannung zwischen 100 und 240 Volt erlaubt.

- 1 Schließen Sie das beiliegende Netzkabel an und stecken den Netzstecker in eine geerdete Schutzkontaktsteckdose ein. Damit ist das Gerät eingeschaltet.
- 2 Zum Ausschalten ziehen Sie den Netzstecker aus der Steckdose.
- 3 Schließen Sie das Gerät nicht über einen Dimmer an die Netzspannung an. Für besseren Bedienkomfort verwenden Sie eine schaltbare Steckdose.

Stromversorgung von weiteren Geräten

Über den Netzausgang POWER OUT können weitere Geräte mit Strom versorgt werden. Zum Zusammenschalten der Geräte, verbinden Sie immer den Ausgang POWER OUT mit dem Eingang POWER IN des nächsten Geräts bis alle Geräte angeschlossen sind. Passende Netzkabel mit Kaltgerätestecker sind optional erhältlich. Auf diese Weise lassen sich bis zu 8 Geräte bei 230/240 Volt Netzspannung und bis zu 4 Geräte bei 110/115 Volt Netzspannung zusammenschalten.



BEDIENUNG

Nach dem Anschluss ans Netz ist das Gerät betriebsbereit. Das Display zeigt die zuletzt eingestellte Betriebsart. Nehmen Sie nun die notwendigen Menüeinstellungen für die jeweilige Betriebsart mit den Bedientasten vor. Auch wenn Sie das Gerät vom Stromnetz trennen, bleiben alle Einstellungen gespeichert. Das Gerät kann entweder im Standalone-Modus über das Bedienfeld und die Fernbedienung EUROLITE IR-7 oder im DMX-gesteuerten Modus über einen handelsüblichen DMX-Controller betrieben werden.

Menüstruktur

Modus		Anzei	ge	Funktion
		Au – 1		Programm 1: Washlight + Derby + Strobe + Laser
		Au – 2		Programm 2: Washlight + Derby + Strobe
		Au – 3		Programm 3: Washlight + Derby + Laser
Automatikbetrieb	Auto	Au – 4		Programm 4: Derby + Laser + Strobe
		Au – 5		Programm 5: Derby
		Au – 6		Programm 6: Washlight
		Au – 7		Programm 7: Laser
		So – 1		Programm 1: Washlight+ Derby + Strobe + Laser
		So – 2		Programm 2: Washlight + Derby + Strobe
		So – 3		Programm 3: Washlight + Derby + Laser
Musiksteuerung	Sond	So – 4		Programm 4: Derby + Laser + Strobe
		So – 5		Programm 5: Derby
		So – 6		Programm 6: Washlight
		So – 7		Programm 7: Laser
Ablaufgeschwindigkeit für den Automatikbetrieb	SPEd	SP 1-9		Ablaufgeschwindigkeit langsam > schnell
Mikrofonempfindlichkeit für die Musiksteuerung	SEnS	SE 1-9		Mikrofonempfindlichkeit niedrig > hoch
Musiksteuerung mit	a =	on		LEDs aus bei fehlendem Musiksignal
Dunkelschaltung	SILE	oFF		LEDs bleiben an bei fehlendem Musiksignal
ID F I I'	InFr	on		IR-Fernbedienung an
IR-Fernbedienung		oFF		IR-Fernbedienung aus
DMV Datrick	A 1.1.	13CH	d001-512	13-Kanal-Modus und Startadresse
DMX-Betrieb	Addr	4CH	d001-512	4-Kanal-Modus und Startadresse
Slave-Modus	SLAU	Slave		Slave-Modus
Display		dISP		normale Darstellung
Display	dISP	dSiP		Darstellung um 180° gedreht



Standalone-Betrieb

Automatikbetrieb

Im Automatikbetrieb stehen verschiedene 7 Showprogramme zur Verfügung, die mit einer einstellbaren Geschwindigkeit ablaufen.

- Drücken Sie die Taste MENU so oft, bis das Display die Betriebsart Auto anzeigt. Bestätigen Sie mit der Taste ENTER. Wählen Sie das gewünschte Showprogramm mit den Tasten UP und DOWN. Bestätigen Sie mit der Taste ENTER.
- 2 Drücken Sie die Taste MENU so oft, bis das Display SPEd anzeigt. Bestätigen Sie mit der Taste ENTER. Stellen Sie mit den Tasten UP und DOWN die Ablaufgeschwindigkeit des Programms von SP 1 (langsam) bis SP 9 (schnell) ein. Bestätigen Sie mit der Taste ENTER.

Musiksteuerung

Durch das integrierte Mikrofon lassen sich die integrierten Showprogramme im Rhythmus der Musik (bei deutlichem Bassschlag) optimal mit dem Gerät wiedergeben.

- 1 Drücken Sie die Taste **MENU** so oft, bis das Display die Betriebsart **Sond** anzeigt. Bestätigen Sie mit der Taste **ENTER**. Wählen Sie das gewünschte Showprogramm mit den Tasten **UP** und **DOWN**. Bestätigen Sie mit der Taste **ENTER**.
- 2 Drücken Sie die Taste MENU so oft, bis das Display SEnS anzeigt. Bestätigen Sie mit der Taste ENTER. Passen Sie mit den Tasten UP und DOWN die Mikrofonempfindlichkeit an die Lautstärke der Musik an (SE 1 = niedrig, SE 9 = hoch).
- Wenn Sie im Menüpunkt **SILE** die Einstellung **on** wählen, werden die LEDs bei zu geringer Lautstärke oder fehlendem Bassschlag dunkelgeschaltet. In der Einstellung **oFF** bleiben die LEDs auch in Musikpausen an.

Display-Darstellung

Im Menu dISP lässt sich die Darstellung des Displays einstellen.

- 1 Drücken Sie die Taste **MENU** so oft, bis das Display das Menü **dISP** anzeigt. Bestätigen Sie mit der Taste **ENTER**.
- Wählen Sie mit den Tasten **UP** und **DOWN** zwischen der Einstellung **dISP** (normale Darstellung) und **dSiP** (Darstellung um 180° gedreht). Bestätigen Sie mit der Taste **ENTER**.

Master/Slave-Betrieb mit mehreren Geräten

Es lassen sich mehrere Geräte zusammenschalten (max. 32). Das Hauptgerät (Master) kann dann alle Nebengeräte (Slave) synchron steuern ohne die Notwendigkeit eines DMX-Controllers. Die Geräte müssen auf die jeweilige Betriebsart eingestellt werden.

- 1 Konfigurieren Sie zuerst alle Slave-Geräte vor dem Anschluss an das Master-Gerät. Drücken Sie dazu die Taste **MENU** so oft, bis das Display **SLAU** anzeigt. Bestätigen Sie mit der Taste **ENTER**.
- Verbinden Sie den DMX-Ausgang des Master-Geräts mit dem DMX-Eingang des ersten Slave-Geräts. Verbinden Sie dann den DMX-Ausgang des ersten Slave-Geräts mit dem DMX-Eingang des zweiten Slave-Geräts usw., bis alle Geräte in einer Kette angeschlossen sind. Das Master-Gerät muss das erste Gerät in der Kette sein. Der DMX-Eingang darf nicht an einen DMX-Controller angeschlossen sein.
- 3 Wählen Sie am Master-Gerät die gewünschte Betriebsart. Die zusammengeschalteten Geräte arbeiten nun synchron.

Fernbedienung IR-7

Das Gerät muss für die Ansteuerung per Fernbedienung aktiviert werden. Wählen Sie dazu im Menüpunkt **InFr** die Einstellung **on**. Halten Sie beim Betätigen einer Taste die Fernbedienung immer in Richtung des Sensors auf der Gerätevorderseite. Zwischen Fernbedienung und Sensor muss Sichtverbindung bestehen. In der DMX- und der Slave-Betriebsart sind die Funktionen der Fernbedienung deaktiviert.



Taste	Funktion
BLACKOUT	LEDs aus
AUTO	Automatikbetrieb; Programmwahl mit (+)/(–)
SOUND	Musiksteuerung; Programmwahl mit (+)/(–)
STROBE	Strobe-Effekt für Automatikbetrieb und Musiksteuerung; Blitzrate einstellen mit (+)/(–)
SPEED	Ablaufgeschwindigkeit im Automatikbetrieb; Einstellung mit (+)/(–)
SENSITIVITY	Mikrofonempfindlichkeit; Einstellung mit (+)/(–)
DMX	DMX-Betrieb
MANUAL	Farbmodus; Farben wählen mit R/G/B und UV sowie (+)/(-)
UNIT	Taste 1 drücken: Laser an/aus
1-9	Gesamthelligkeit im manuellen Modus; 1 = dunkel, 9 = hell

Hinweise:

- Die Fernbedienung wird mit eingesetzter Batterie geliefert. Damit die Batterie während der Lagerung nicht entladen werden kann, befindet sich eine Isolierfolie zwischen der Batterie und den Batteriekontakten. Ziehen Sie vor dem ersten Betrieb die Folie auf der Rückseite der Fernbedienung aus dem Batteriehalter heraus. Andernfalls ist die Fernbedienung nicht funktionstüchtig.
- Lässt die Reichweite der Fernbedienung nach ist die Batterie verbraucht und muss auswechselt werden. Drücken Sie dazu auf der Rückseite der Fernbedienung den kleinen Riegel mit der Kerbe nach rechts und ziehen Sie gleichzeitig den Batteriehalter heraus. Für den Betrieb der Fernbedienung wird eine 3-V-Knopfzelle Typ CR 2025 benötigt. Achten Sie beim Einsetzen darauf, dass der Pluspol der Knopfzelle im Halter nach oben zeigt.
- Entnehmen Sie vorsichtshalber die Batterie aus der Fernbedienung bei längerem Nichtgebrauch.

DMX-Betrieb

Anzahl der DMX-Kanäle und DMX-Startadresse einstellen

Für den Betrieb über einen Controller mit DMX512-Protokoll verfügt das Gerät über 13 Steuerkanäle. Es kann aber auch in einen Modus mit 4 Kanälen umgeschaltet werden, wenn andere Funktionen benötigt werden. Damit das Gerät vom Controller angesteuert werden kann, muss außerdem die DMX-Startadresse für den ersten DMX-Kanal eingestellt werden. Die Startadresse ist abhängig von Ihrem DMX-Controller. Lesen Sie hierzu die Dokumentation des Geräts.

- 1 Drücken Sie die Taste **MENU** so oft, bis das Display die Betriebsart **Addr** anzeigt. Bestätigen Sie mit der Taste **ENTER**.
- 2 Das Display zeigt **4 CH** (4 DMX-Kanäle) oder **13 CH** (13 DMX-Kanäle) an. Wählen Sie mit den Tasten **UP** und **DOWN** die gewünschte Anzahl der DMX-Kanäle. Bestätigen Sie mit der Taste **ENTER**.
- 3 Das Menü für die DMX-Startadresse wird aufgerufen d***. Stellen die Adresse mit den Tasten UP und DOWN ein. Bestätigen Sie mit der Taste ENTER.
- 4 Beim Empfang von DMX-Steuersignalen blinkt ein Punkt im Display.

Hinweis: Bitte vergewissern Sie sich, dass sich die Steuerkanäle nicht mit anderen Geräten überlappen, damit das Gerät korrekt und unabhängig von anderen Geräten in der DMX-Verbindung funktioniert. Werden mehrere Geräte auf eine Adresse definiert, arbeiten sie synchron.

Funktionen im 4-Kanal-Modus

Kanal	Wert	Funktion
	000 – 009	Keine Funktion
	010 – 019	Rot
	020 – 029	Grün
	030 – 039	Blau
	040 – 049	UV
	050 - 059	Rot + Grün
	060 – 069	Grün + Blau
4	070 – 079	Blau + UV
Washlight	080 – 089	Rot + UV
wasinigiit	090 – 099	Grün + UV
	100 – 109	Rot + Blau
	110 – 119	Rot + Grün + Blau
	120 – 129	Rot + Grün + UV
	130 – 139	Rot + Blau + UV
	140 – 149	Grün + Blau + UV
	150 – 159	Alle LEDs an
	160 – 209	Regenbogeneffekt langsam > schnell
	210 – 255	Regenbogeneffekt + Strobe-Effekt langsam > schnell
2	000 – 009	Keine Funktion
Strobe-Ring	010 – 255	Strobe-Effekt langsam > schnell
3	000 – 009	Keine Funktion
Derby	010 – 129	Vorwärtsrotation langsam > schnell
20.27	130 – 255	Rückwärtsrotation langsam > schnell
	000 – 009	Keine Funktion
4	010 – 119	Vorwärtsrotation langsam > schnell
Rotation des Lasers	120 – 129	Keine Rotation
	130 – 255	Rückwärtsrotation langsam > schnell

Funktionen im 13-Kanal-Modus

Kanal	Wert	Funktion
1	000 – 255	Rot 0-100%
2	000 - 255	Grün 0-100%
3	000 - 255	Blau 0-100%
4	000 - 255	UV 0-100%
-	000 - 233	Keine Funktion
	010 – 019	Rot
	020 – 029	Grün
	030 - 039	Blau
	040 – 049	UV
	050 - 059	Rot + Grün
	060 - 069	Grün + Blau
5	070 – 079	Blau + UV
Washlight	080 - 089	Rot + UV
vvasinight	090 – 099	Grün + UV
	100 – 109	Rot + Blau
	110 – 109	Rot + Grün + Blau
	120 – 129	Rot + Grün + UV
	130 – 139	Rot + Blau + UV
	140 – 149	Grün + Blau + UV
	150 – 159	Alle LEDs an
	160 – 255	Regenbogeneffekt langsam > schnell
6	000 - 009	Keine Funktion
Washlight	010 – 255	Strobe-Effekt mit allen LEDs langsam > schnell
- Tuomigni	000 – 009	Keine Funktion
	010 – 019	Rot
	020 – 029	Grün
	030 - 039	Blau
	040 – 049	Weiß
	050 – 059	Amber
	060 – 069	UV
	070 – 079	Rot + Grün
7	080 – 089	Rot + Blau
Derby	090 – 099	Grün + Blau
	100 – 109	Grün + Amber
	110 – 119	Blau + Amber
	120 – 129	Grün + Weiß + UV
	130 – 139	Rot + Amber + UV
	140 – 149	Rot + Grün + Blau
	150 – 159	Alle LEDs an
	160 – 255	Regenbogeneffekt langsam > schnell
8	000 – 009	Keine Funktion
Derby	010 - 255	Strobe-Effekt mit allen LEDs langsam > schnell
9	000 – 009	Keine Funktion
Derby	010 – 129	Vorwärtsrotation langsam > schnell
23.03	130 – 255	Rückwärtsrotation langsam > schnell
	000 – 009	Keine Funktion
10	010 – 059	Roter Laser an
Laser	060 – 109 110 – 159	Grüner Laser an
	160 – 255	Roter + grüner Laser an Regenbogeneffekt langsam > schnell
	000 – 009	Keine Funktion
. 11	010 – 129	Vorwärtsrotation langsam > schnell
Laser	130 – 255	Rückwärtsrotation langsam > schnell
12	000 – 009	Keine Funktion
		The state of the s

Strobe-Ring	010 – 255	Strobe-Effekt langsam > schnell
13	000 – 009	Keine Funktion
Automatikbetrieb/	010 – 119	Automatikbetrieb langsam > schnell
Musiksteuerung	120 – 255	Musikgesteuerung langsam > schnell

REINIGUNG UND WARTUNG

Das Gerät sollte äußerlich in regelmäßigen Abständen von Verunreinigungen wie Staub usw. gereinigt werden. Insbesondere die Linsen sollten sauber sein, damit das Licht mit maximaler Helligkeit abgestrahlt werden kann.

- 1 Trennen Sie das Gerät vom Netz und lassen Sie es abkühlen, bevor Sie mit der Reinigung beginnen.
- 2 Reinigen Sie die Oberflächen mit einem fusselfreien, angefeuchteten Tuch. Verwenden Sie auf keinen Fall Alkohol oder irgendwelche Lösungsmittel, da sonst die Gehäuseoberflächen beschädigt werden könnten. Vermeiden Sie unbedingt das Eindringen von Nässe oder Feuchtigkeit in das Gerät.
- 3 Das Gerät muss trocken sein, bevor Sie es wieder einschalten.

Im Geräteinneren befinden sich keine zu wartenden Teile. Öffnen Sie das Gehäuse nicht. Unternehmen Sie keine Reparaturversuche, da dies ein Sicherheitsrisiko darstellt. Wartungs- und Servicearbeiten sind ausschließlich dem autorisierten Fachhandel vorbehalten. Sollten einmal Ersatzteile benötigt werden, verwenden Sie bitte nur Originalersatzteile. Sollten Sie noch weitere Fragen haben, wenden Sie sich bitte an Ihren Fachhändler.

Sicherungswechsel

Wenn die Feinsicherung des Geräts defekt ist, ersetzen Sie diese durch eine Sicherung gleichen Typs.

- 1 Trennen Sie das Gerät vom Netz und lassen Sie es abkühlen.
- 2 Öffnen Sie den Sicherungshalter am Netzanschluss mit einem passenden Schraubendreher.
- 3 Entfernen Sie die defekte Sicherung aus dem Sicherungshalter und setzen Sie die neue Sicherung ein.
- 4 Setzen Sie den Sicherungshalter wieder im Gehäuse ein. Danach kann das Gerät wieder mit dem Netz verbunden werden.



TECHNISCHE DATEN

Spannungsversorgung:	100-240 V AC, 50/60 Hz
Gesamtanschlusswert:	60 W
Schutzklasse:	
Sicherung:	T0.5A, 250 V
Laserklasse:	2M
Lasermodule:	Rot 100 mW, grün 50 mW
Wellenlänge:	Rot 650 nm, grün 532 nm
LEDs:	
Wash-/UV-Effekt:	8 x 4 W RGB+UV (4in1)
Derby-Effekt:	6 x 3 W RGBAW+UV (6in1)
Strobe-Effekt:	12 x 0,5 W, weiß
DMX-Kanäle:	4/13
DMX-Anschluss:	3-pol XLR
QuickDMX-Anschluss:	USB, Typ A
Musiksteuerung:	über eingebautes Mikrofon
Blitzrate:	0-20 Hz
Abstrahlwinkel:	25°
Maße (L x B x H):	190 x 315 x 330 mm
Gewicht:	4,3 kg

Zubehör

EUROLITE TPC-10 Klammer, silber	BestNr. 59006856
EUROLITE Sicherungsseil A 3x600mm bis 5kg, silber	BestNr. 58010310
EUROLITE DMX Kabel XLR 3pol 3m sw	BestNr. 3022785H
PSSO DMX Kabel XLR 3pol 3m sw Neutrik	BestNr. 30227810
OMNITRONIC Kaltgeräte Verlängerung 3x1,0 3m sw	BestNr. 30235201
EUROLITE IR-7 Fernbedienung	BestNr. 50530561
EUROLITE QuickDMX USB Funksender/Empfänger	BestNr. 70064704

Technische Änderungen ohne vorherige Ankündigung und Irrtum vorbehalten. © 04.06.2018



eurolite®

LED FE-1750 Hybrid Laserflower



DANGER! Electric shock caused by short-circuit

Be careful with your operations. With a dangerous voltage you can suffer a dangerous electric shock when touching the wires. Never open the housing. Keep the device away from rain and moisture.



Please read these instructions carefully before using the product. They contain important information for the correct use of the product.

Every person involved with the installation, operation and maintenance of this device has to

- be qualified
- follow the instructions of this manual
- consider this manual to be part of the total product
- keep this manual for the entire service life of the product
- pass this manual on to every further owner or user of the product
- download the latest version of the user manual from the Internet

INTRODUCTION

Thank you for having chosen one of our products. If you follow the instructions given in this manual, we are sure that you will enjoy this device for a long period of time.

Product features

4in1 LED effect light with derby, washlight, laser (2M) and stroboscope

- Rotating derby for mirror ball effects with 6 high-power 3 W RGBAW+UV LEDs (6in1)
- 8 high-power 4 W RGB+UV LEDs (4in1) for washlight and blacklight effects
- 2 laser diodes for of red and green star laser effects
- Laser class 2M: does not require additional protective measures or appointment of a laser safety officer
- Strobe ring with 12 cold white 0.5 W SMD LEDs for fast, dynamic strobe effects
- All effects can be controlled individually
- Auto. music. master/slave and DMX mode
- Silent operation
- 7 built-in auto and music show programs
- Stepless color mixture, dimmer and strobe effect
- Addressing and setting via control panel with 4-digit LED display
- Convenient wireless control via included IR remote control EUROLITE IR-7
- Sound-control via built-in microphone with adjustable microphone sensitivity
- Supports QuickDMX the wireless DMX system from Eurolite
- Built-in phantom-powered USB port for QuickDMX receivers (accessories)
- DMX512 control possible via any commercial DMX controller
- 4 or 13 DMX channels selectable
- Swivel mounting bracket
- Feed-through output allows to power up to 8 devices

SAFETY INSTRUCTIONS



WARNING!

Please read the safety warnings carefully and only use the product as describe in this manual to avoid accidental injury or damage.

Intended use

- This device is a laser projector for creating decorative lighting effects. This device is designed for professional use in the field of event technology, e.g. on stage. It is not suitable for household lighting.
- Only use the device according to the instructions given herein. Damages due to failure to follow these operating instructions will void the warranty! We do not assume any liability for any resulting damage.
- We do not assume any liability for material and personal damage caused by improper use or non-compliance with the safety instructions. In such cases, the warranty/guarantee will be null and void.
- Unauthorized rebuilds or modifications of the device are not permitted for reasons of safety and render the warranty invalid.

Danger due to electricity

- The device is suitable for indoor use only. Do not use it outdoors. Never expose it to rain or moisture. Do not store it in rooms exposed to moisture.
- To reduce the risk of electric shock, do not open any part of the device. There are no serviceable parts inside the device.
- Only connect the device to a properly installed mains outlet. The outlet must be protected by residual
 current breaker (RCD). The voltage and frequency must exactly be the same as stated on the device. If the
 mains cable is equipped with an earthing contact, then it must be connected to an outlet with a protective
 ground. Never defeat the protective ground of a mains cable. Failure to do so could result in damage to the
 device and possibly injure the user.
- The mains outlet must be easily accessible so that you can unplug the device quickly if need be.
- Never touch the mains plug with wet or damp hands. There is the risk of potentially fatal electric shock.
- The mains cable must not be bent or squeezed. Keep it away from hot surfaces or sharp edges.
- Never pull the mains cable to disconnect the mains plug from the mains outlet, always seize the plug.
- Unplug the device during lighting storms, when unused for long periods of time or before cleaning.
- Do not expose the device to any high temperatures, direct sunlight, dripping or splashing water, strong vibrations or heavy mechanical stress.
- Do not place any objects filled with liquids on the device.
- Do not place any open sources of fire, such as burning candles, on or directly next to the device.
- Make sure that objects cannot fall into the device, in particular metal parts.
- Only have repairs to the device or its mains cable carried out by qualified service personnel. Repairs are
 required when the device or the mains cable is visibly damaged, liquid has been spilled or objects have
 fallen into the device; when the device has been exposed to rain or moisture, has been dropped or
 malfunctions occur.
- Cleaning of the device is limited to the surface. Make sure that moisture does not come into contact with any areas of the terminal connections or mains voltage control parts. Only wipe off the product with a soft lint-free and moistened cloth. Never use solvents or aggressive detergents.

Danger to children and people with restricted abilities

- This product is not a toy. Keep it out of the reach of children and pets. Do not leave packaging material lying around carelessly. Never leave this device running unattended.
- This device may be used only by persons with sufficient physical, sensorial, and intellectual abilities and having corresponding knowledge and experience. Other persons may use this device only if they are supervised or instructed by a person who is responsible for their safety.



Warning - risk of burns and fire

- The admissible ambient temperature range (Ta) is -5 to +45°C. Do not operate the device outside of this temperature range.
- The housing temperature (Tc) can be up to 65°C during use. Avoid contact by persons and materials.
- Do not illuminate surfaces within 1 m of the device. This value is indicated on the device by the \(\] ---m \(\) symbol.
- Do not use the device near highly flammable materials. Always place the device at a location where sufficient air circulation is ensured. Leave 50 cm of free space around the device. Never cover the air vents of the housing.
- Only operate the device in moderate climate, never in tropical climate.

Warning - risk of injuries

- Do not look directly at the light source. Persons with light-sensitive epilepsy may suffer from epileptic seizures or fall unconscious.
- Make sure that the product is set up or installed safely and expertly and prevented from falling down. Comply with the standards and rules that apply in your country, in particular EN 60598-2-17.
- If you lack the qualification, do not attempt the installation yourself, but instead use a professional installer. Improper installation can result in bodily injury and / or damage to property.
- The manufacturer cannot be made liable for damages caused by incorrect installations or insufficient safety precautions.
- For overhead use, always secure the device with a secondary safety attachment such as a safety bond or safety net.
- Make sure that the area below the installation place is blocked when rigging, derigging or servicing the device.
- For commercial use the country-specific accident prevention regulations of the government safety organization for electrical facilities must be complied with at all times.

Caution - material damage

- This device must not be connected to the mains voltage by means of a dimmer.
- Lighting effects are not designed for permanent operation. Consistent operation breaks will ensure that the device will serve you for a long time without defects.
- Never switch the device on and off at short intervals. This will considerably reduce the service life of the device.
- If the device has been exposed to drastic temperature fluctuation, do not switch it on immediately. The resulting condensation may destroy the device. Allow the device to reach room temperature before connecting it. Wait until the condensation has evaporated.
- Please use the original packaging to protect the device against vibration, dust and moisture during transportation or storage.
- If a serial number label is affixed to the device, do not remove the label as this would render the warranty void.

About batteries

- Do not try to short-circuit, recharge, disassemble or heat batteries (danger of explosion!).
- Remove the batteries if the device is not used for a longer period of time.
- Damaged/leaking batteries may cause harm to your skin use safety gloves.



Important information for laser products

DANGER!



Avoid direct eye exposure. Never view directly with optical instruments (e.g. magnifying lens or telescope). Laser radiation can cause eye damage and/or skin damage. All protective measures for a safe operation of this laser must be applied.

LASER RADIATION
Do not stare into the beam or
view directly with optical instruments
2M LASER PRODUCT
EN 60825-1:2014
P_s=<1mW \(\lambda = 532/650nm \)

Safety measures which must be observed

- This device includes a class 2M laser according to the EN 60825-1. The accessible laser radiation is exclusively within the visible spectral range (400 nm to 700 nm). However, a short-term exposure (max. 0.25 seconds) is not hazardous to the eye. A longer exposure is prevented by the natural eyelid closing reflex. Nevertheless, close your eyes or turn away immediately if the laser beam hits the eye. The corresponding warning is attached to the housing.
- The operator must comply with the country-specific accident prevention regulations of the government safety organization for electrical facilities.
- The corresponding accident prevention regulation of the accident prevention and insurance association in Germany is BGV-B2.
- This product must only be mounted, commissioned and operated by suitably qualified specialist personnel and only under observance of the requirements stated in the operating instructions.
- The use of operating and adjustment equipment and procedures other than those indicated here can lead to dangerous exposure to radiation.
- Do not stare into the laser beam and do not aim the laser at another person or animals. Laser radiation may result in injuries to the eyes or skin.
- Do not look into the laser beam with optical instruments (e.g. magnifying glasses or binoculars) under any circumstances. Laser radiation can cause eye damage and/or skin damage.
- Do not point the laser beam at mirrors or other reflective surfaces. The uncontrolled, reflected beam may strike people or animals.
- Always set up and install the unit so that a minimum distance of 1 m is kept between the laser light and the audience.
- Mark the area where this laser equipment is used by means of barriers and warning signs etc.
- Caution laser diode! Do not open or modify the unit. A modification can result in a more hazardous laser radiation which considerably exceeds the specified values.

PROTECTING THE ENVIRONMENT




Disposal of old equipment


When to be definitively put out of operation, take the product to a local recycling plant for a disposal which is not harmful to the environment. Devices marked with this symbol must not be disposed of as household waste. Contact your retailer or local authorities for more information. Remove any inserted batteries and dispose of them separately from the product.



You as the end user are required by law (Battery Ordinance) to return all used batteries/rechargeable batteries. Disposing of them in the household waste is prohibited. You may return your used batteries free of charge to collection points in your municipality and anywhere where batteries/rechargeable batteries are sold. By disposing of used devices and batteries correctly, you contribute to the protection of the environment.

DESCRIPTION OF THE DEVICE

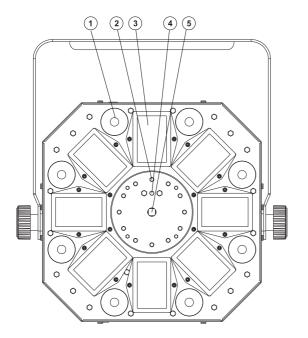

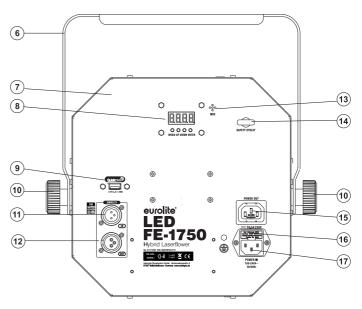

- (1) Washlight with RGB+UV LEDs
- (2) Strobe ring with cold white LEDs
- (3) Derby with RGBAW+UV LEDs
- (4) Infrared sensor for the remote control
- (5) Laser output aperture
- (6) Mounting brackets
- (7) Housing
- (8) Display with operations buttons
- (9) USB port for QuickDMX receiver

- (10) Fixation screws
- (11) DMX input
- (12) DMX output
- (13) Microphone
- (14) Safety eyelet
- (15) Power feed-through output
- (16) Fuse holder
- (17) Power input

INSTALLATION



WARNING! Risk of injury caused by falling objects

Devices in overhead installations may cause severe injuries when crashing down. Make sure that the device is installed securely and cannot fall down. The installation must be carried out by a specialist who is familiar with the hazards and the relevant regulations.



DANGER! Damage caused by laser radiation

Observe the chapter safety instructions when installing the device.

The device may be placed on the floor or fastened to a truss or similar rigging structure. The device must never be fixed swinging freely in the room.

- 1 The rigging structure must support at least 10 times the weight of all fixtures to be installed on it.
- 2 Block access below the work area and work from a stable platform when installing the device.
- 3 Use rigging hardware that is compatible with the structure and capable of bearing the weight of the device. Please refer to the "Accessories" section for a list of suitable rigging hardware.
- Secure the device with a safety bond or other secondary attachment. This secondary safety attachment must be sufficiently dimensioned in accordance with the latest industrial safety regulations and constructed in a way that no part of the installation can fall down if the main attachment fails. Pull the safety bond through the safety eyelet and fasten it in such a way that, in the event of a fall, the maximum drop distance of the device will not exceed 20 cm.



- 5 To align the device, release the fixation screws at the mounting bracket, adjust the desired inclination angle and retighten the fixation screws.
- 6 Make sure not to point the laser beams at highly reflective surfaces such as mirror balls, windows and shiny objects. As a precaution, remove or cover up highly reflective objects in order to avoid laser reflections.
- 7 After installation, the device requires inspections periodically to prevent the possibility of corrosion, deformation and loosening.


CONNECTIONS

DMX512 control

A DMX512 data link is required in order to control the device via DMX. The device provides 3-pin XLR connectors for DMX connection.

- 1 Connect the output of your DMX controller to the DMX input DMX IN of the device with a DMX cable.
- 2 Connect the DMX output DMX OUT of the device to the DMX input of the next unit in the chain. Always connect one output to the input of the next unit until all units are connected.
- 3 At the last unit, the DMX cable has to be terminated. Plug the terminator with a 120 Ω resistor between Signal (–) and Signal (+) in the DMX output of the last unit.
- 4 If the cable length exceeds 300 m or the number of DMX devices is greater than 32, it is recommended to insert a DMX level amplifier to ensure proper data transmission.

XLR connection:





DMX-input XLR mounting-plug:



Wireless DMX transmission with QuickDMX

The device features an alternative DMX input for a QuickDMX receiver (sold separately). This connector allows for wireless transmission of DMX control signals to the device. The connector is designed as a USB port which provides the required 5 V operating voltage for the receiver. With QuickDMX devices, extensive cabling between the DMX controller and the device is not required.

Occupation of the USB port:



+5V D- D+ GND

Connection to the mains

The device uses an auto-range power supply that accepts input voltages between 100 und 240 volts.

- 1 Connect the device via the mains cable to a grounded mains socket. Thus the unit is switched on.
- 2 To switch off the unit, disconnect the power plug.
- 3 Do not connect the unit to the mains voltage via a dimmer. For a more convenient operation, use a mains outlet which is switchable.



Power supply of further devices

The jack POWER OUT allows for power supply of further devices. To interconnect several devices, connect the jack POWER OUT to the input POWER IN of the next unit until all units are connected. Matching power cables with IEC plugs are available as accessories. In this manner, up to 8 devices can be linked at 230/240 input voltage and up to 4 devices at 110/115 input voltage.

OPERATION

After connecting the device to the mains it is ready for operation. The display indicates the last operating mode. The operating modes can be selected by means of the control buttons. All settings remain stored even if the device is disconnected from the mains. The device can be operated in stand-alone mode via the control board and the EUROLITE IR-7 remote control or in DMX-controlled mode via any commercial DMX controller.

Menu structure

Mode		Displ	ay	Function
		Au – 1		Program 1: washlight + derby + strobe + laser
		Au – 2		Program 2: washlight + derby + strobe
		Au – 3		Program 3: washlight + derby + laser
Auto mode	Auto	Au – 4		Program 4: derby + laser + strobe
		Au – 5		Program 5: derby
		Au – 6		Program 6: washlight
		Au – 7		Program 7: laser
		So – 1		Program 1: washlight + derby + strobe + laser
		So – 2		Program 2: washlight + derby + strobe
		So – 3		Program 3: washlight + derby + laser
Sound control	Sond	So – 4		Program 4: derby + laser + strobe
		So – 5		Program 5: derby
		So – 6		Program 6: washlight
		So – 7		Program 7: laser
Running speed in automatic mode	SPEd	SP 1-9		Program running speed slow > fast
Microphone sensitivity for sound control	SEnS	SE 1-9		Microphone sensitivity low > high
		on		LEDs switch off if there is no music signal
Silent scene mode	SILE	oFF		LEDs remain switched on if there is no music signal
DMV anaration	A -1 -1 -	13CH	d001-512	13-channel mode and start address
DMX operation	Addr	4CH	d001-512	4-channel mode and start address
Slave mode	SLAU	Slave		Slave mode
IR remote control	InFr	on		IR remote control on
IV LEHIOTE COULLOI		oFF		IR remote control off
Dionley	4ICD	dISP		Normal representation
Display	dISP	dSIP		Representation turned by 180°



Stand-alone mode

Automatic mode

In automatic mode, 7 show programs are available that run at an adjustable speed.

- 1 Press the **MENU** button so many times until **Auto** is indicated in the display. Confirm with the **ENTER** button. Use the buttons **UP** and **DOWN** to select the desired show program. Confirm with the **ENTER** button.
- 2 Press the MENU button so many times until SPEd is indicated in the display. Confirm with the ENTER button. Use the buttons UP and DOWN to adjust the running speed of the program from SP 1 (slow) to SP 9 (fast). Confirm with the ENTER button.

Sound control

Via the integrated microphone the unit can perfectly reproduce the show programs to the rhythm of the music (sufficient bass provided).

- 1 Press the **MENU** button so many times until **Sond** is indicated in the display. Confirm with the **ENTER** button. Use the buttons **UP** and **DOWN** to select the desired show program. Confirm with the **ENTER** button.
- 2 Press the **MENU** button so many times until **SEnS** is indicated in the display. Confirm with the **ENTER** button. Use the buttons **UP** and **DOWN** to Adjust the microphone sensitivity to the volume of the music (**SE 1** = low, **SE 9** = high).
- 3 If you enable the silent scene mode (**on** setting) in menu item **SILE**, the LEDs will be switched off if the volume is too low or if there is no sufficient bass beat. If you disable this mode (**off** setting) the LEDs remain on during periods without music.

Display representation

Menu **dISP** allows adjusting the display representation.

- 1 Press the **MENU** button until the display shows **dISP**. Confirm with the **ENTER** button.
- 2 Use the buttons **UP** and **DOWN** to switch between normal representation (**dISP**) and reversed representation (**dSiP**). Confirm with the **ENTER** button.

Interconnecting several devices (master/slave operation)

Several devices may be interconnected (max. 32). Then all slave units can be synchronously controlled with the master unit without the need for a DMX controller. The devices must be set to the corresponding operating modes.

- 1 Configure all slave units before connecting the master unit: Press the **MENU** button so many times until **SLAU** is indicated in the display. Confirm with the **ENTER** button.
- 2 Connect the DMX output of the master unit to the DMX input of the first slave unit. Then connect the DMX output of the first slave unit to the DMX input of the second slave unit, etc. until all units have been connected in a chain. Make sure the master unit is the first in the chain. Do not connect a DMX controller to the DMX input of the master unit.
- 3 Set the master unit to the desired operating mode. The interconnected devices will now operate in sync.

Remote control IR-7


The device must be activated for remote control. For this, select "on" in the menu item **InFr**. When actuating a button, always direct the remote control towards the sensor on the front panel of the device. There must be no any obstacles between remote control and the sensor. Remote control is disabled when the device is operated in DMX or Slave mode.



Button	Function
BLACKOUT	LEDs off
AUTO	Automatic mode; program selection with (+)/(-)
SOUND	Sound control; program selection with (+)/(-)
STROBE	Strobe effect for automatic mode and sound control; flash rate setting with (+)/(–)
SPEED	Running speed in automatic mode; setting with (+)/(–)
SENSITIVITY	Microphone sensitivity; setting with (+)/(-)
DMX	DMX mode
MANUAL	Color mode; select colors with R/G/B and UV and (+)/(-)
UNIT	Press <1>: Laser on/off
1-9	Total brightness in manual mode; 1 = dark, 9 = bright

Notes:

- The remote control is supplied with a battery inserted. An insulating foil between the battery and the battery contacts prevents the battery from being discharged during storage. Prior to the first operation remove the foil from the battery support on the rear side of the remote control. Otherwise operation of the remote control is not possible.
- If the range of the remote control decreases, replace the battery. For this purpose, on the rear side of the remote control press the small bar with the groove to the right and at the same time remove the battery support. For operation, one 3 V button cell type CR 2025 is required. When inserting, pay attention that the positive pole of the button cell shows upwards in the support.



 Remove the battery from the remote control as a precaution if the device is not used for a longer period of time.

DMX operation

Setting the number of DMX channels and the DMX starting address

For operation with a controller with DMX512 protocol, the device is equipped with 13 control channels. However, it can also be switched to a mode with 4 channels if different functions are required. To be able to operate the device with a DMX controller, the DMX starting address must be set for the first DMX channel. The starting address depends upon which DMX controller is being used. Please refer to the controller's documentation.

- 1 Press the **MENU** button so many times until **Addr** is indicated in the display. Confirm with the **ENTER** button.
- The display indicates **4 CH** (4 DMX channels) or **13 CH** (13 DMX channels). Use the buttons **UP** and **DOWN** to select the desired number of DMX channels. Confirm with the **ENTER** button.
- 3 Now the display indicates the menu item for the DMX start address **d*****. Use the buttons **UP** and **DOWN** to set the address. Confirm with the **ENTER** button.
- 4 The display will not flash when DMX signals are being received. If no control signals are available, the display will flash.

Note: Please make sure that you do not have any overlapping channels in order to control each device correctly and independently from any other fixture on the DMX chain. If several devices are addressed similarly, they will work synchronically.

Functions in 4-channel mode

Channel	Value	Function
	000 – 009	No function
	010 – 019	Red
	020 – 029	Green
	030 – 039	Blue
	040 – 049	UV
	050 – 059	Red + Green
	060 – 069	Green + Blue
4	070 – 079	Blue + UV
1 Washlight	080 – 089	Red + UV
wasniigni	090 – 099	Green + UV
	100 – 109	Red + Blue
	110 – 119	Red + Green + Blue
	120 – 129	Red + Green + UV
	130 – 139	Red + Blue + UV
	140 – 149	Green + Blue + UV
	150 – 159	All LEDs on
	160 – 209	Rainbow effect with increasing speed
	210 – 255	Rainbow effect + strobe effect with increasing speed
2	000 – 009	No function
Strobe ring	010 – 255	Strobe effect with increasing speed
•	000 – 009	No function
3 Derby	010 – 129	Forward rotation with increasing speed
Delby	130 – 255	Backward rotation with increasing speed
	000 – 009	No function
4	010 – 119	Forward rotation with increasing speed
Laser rotation	120 – 129	No rotation
	130 – 255	Backward rotation with increasing speed

Functions in 13-channel mode

Channel	Value	Function
1	000 – 255	Red 0-100%
2	000 – 255	Green 0-100%
3	000 – 255	Blue 0-100%
4	000 – 255	UV 0-100%
	000 – 009	No function
	010 – 019	Red
	020 – 029	Green
	030 - 039	Blue
	040 – 049	UV
	050 - 059	Red + Green
	060 - 069	Green + Blue
_	070 – 079	Blue + UV
5 Washlight	080 - 089	Red + UV
wasningiit	090 - 099	Green + UV
	100 – 109	Red + Blue
	110 – 119	Red + Green + Blue
	120 – 129	Red + Green + UV
	130 – 139	Red + Blue + UV
	140 – 149	Green + Blue + UV
	150 – 159	All LEDs on
	160 – 255	Rainbow effect with increasing speed
6	000 – 009	No function
Washlight	010 – 255	Strobe effect with all LEDs with increasing speed
	000 – 009	No function
	010 – 019	Red
	020 – 029	Green
	030 – 039	Blue
	040 – 049	White
	050 – 059	Amber
	060 – 069	UV
7	070 – 079	Red + Green
Derby	080 – 089	Red + Blue
	090 – 099	Green + Blue
	100 – 109	Green + Amber
	110 – 119	Blue + Amber
	120 – 129	Green + White + UV
	130 – 139	Red + Amber + UV
	140 – 149	Red + Green + Blue
	150 – 159	All LEDs on
	160 – 255	Rainbow effect with increasing speed
8 Derby	000 – 009	No function
Derby 9	010 – 255	Strobe effect with all LEDs with increasing speed
Derby	000 – 009	No function
Delby	010 – 129	Forward rotation with increasing speed
	130 – 255	Backward rotation with increasing speed
	000 - 009	No function
10	010 – 059	Red laser on
Laser	060 – 109	Green laser on
	110 – 159	Red + green laser on
11	160 – 255	Laser rainbow effect with increasing speed
Laser	000 – 009	No function
Lasti	010 – 129	Forward rotation with increasing speed

	130 – 255	Backward rotation with increasing speed		
12	000 – 009	No function		
Strobe ring	010 – 255	Strobe with increasing speed		
13	000 – 009	No function		
Auto/sound control	010 – 119	Auto mode with increasing speed		
mode 120 – 255		Sound control mode with increasing speed		

CLEANING AND MAINTENANCE

The outside of the device should be cleaned periodically to remove contaminants such as dust etc. The lenses, in particular, should be clean to ensure that light will be emitted at maximum brightness.

- 1 Disconnect the device from power and allow it to cool before cleaning.
- 2 Clean the surface with a soft lint-free and moistened cloth. Never use alcohol or solvents as these may damage the surface. Make sure that no liquids can enter the device.
- 3 The device must be dry before reapplying power.

There are no serviceable parts inside. Do not open the housing. Do not try to repair the device by yourself as this may result in damage. Maintenance and service operations are only to be carried out by authorized dealers. Should you need any spare parts, please use genuine parts. Should you have further questions, please contact your dealer.

Replacing the fuse

If the fine-wire fuse of the device fuses, only replace the fuse by a fuse of the same type and rating.

- 1 Disconnect the device from power and allow it to cool.
- 2 Open the fuse holder of the mains connection with a fitting screwdriver.
- 3 Remove the old fuse from the fuse holder and replace it with a new fuse.
- 4 Carefully push the fuse holder back into its position before reapplying power.



TECHNICAL SPECIFICATIONS

Power supply:	100-240 V AC, 50/60 Hz		
Power consumption:	60 W		
Protection class:	1		
Fuse:	T0.5A, 250 V		
Laser classification:	2M		
Laser modules:	Red 100 mW, green 50 mW		
Wavelength:	Red 650 nm, green 532 nm		
LEDs			
Wash/UV effect:	8 x 4 W RGB+UV (4in1)		
Derby effect:	6 x 3 W RGBAW+UV (6in1)		
Strobe effect:	12 x 0.5 W, white		
DMX channels:	4/13		
DMX connection:	3-pin XLR		
QuickDMX connection:	USB, type A		
Sound control:	via built-in microphone		
Flash rate:	0-20 Hz		
Beam angle:	25°		
Dimensions (L x W x H):	190 x 315 x 330 mm		
Weight:	4.3 kg		

Accessories

EUROLITE TPC-10 Coupler, silver	No. 59006856
EUROLITE Safety Bond A 3x600mm up to 5kg, silver	No. 58010310
EUROLITE DMX cable XLR 3pin 3m bk	No. 3022785H
PSSO DMX cable XLR 3pin 3m bk Neutrik	No. 30227810
OMNITRONIC IEC Extension 3x1.0 3m bk	No. 30235201
EUROLITE IR-7 Remote Control	No. 50530561
EUROLITE QuickDMX USB Wireless Transmitter/Receiver	No. 70064704

All information is subject to change without prior notice. $\ensuremath{\text{@}}\xspace$ 04.06.2018

