LET ME GIVE YOU A RESET GUIDE

A GUIDE TO RESET WASTE INK PAD COUNTER OF PRINTER USING UNLIMITED KEY



RESETTER

CONTENTS

WHAT IS WASTE INK PAD COUNTER?

WHEN DO YOU NEED A COUNTER RESET IN EPSON PRINTERS?

WHAT IS AN UNLIMITED RESET KEY?

HOW TO GET THE UNLIMITED RESET KEY?

WHAT PROGRAMS ARE USED IN RESETTING THE COUNTER?

HOW TO RESET THE WASTE INK PAD COUNTER OF EPSON PRINTER

HOW TO RESET THE INK ABSORBER IN CANON PRINTER

HOW TO ENTER THE CANON PRINTER INTO SERVICE MODE

WHAT IS WASTE INK PAD COUNTER?

The Waste Ink Pad Counter is a feature in many inkjet printers (especially Epson models) that tracks the amount of waste ink the printer produces over time. Here's a clear explanation:

🖨️ **What is Waste Ink?**

During cleaning cycles or when printing is canceled midway, excess ink is flushed through the printhead and collected inside the printer in a sponge-like component called the waste ink pad. This ink is not used on paper but is instead absorbed internally to prevent leaks or damage.

📊 **What is the Waste Ink Pad Counter?**

The Waste Ink Pad Counter is a digital meter inside the printer's firmware that records how much ink has been absorbed by the waste ink pads. Once it reaches a certain limit (usually a percentage like 100%), the printer:

- Stops working or refuses to print,
- Shows an "Ink Pad Full" or "Service Required" error,
- Prevents damage or ink overflow by locking itself for safety.

⚠️ **Why Does This Happen?**

Manufacturers set this limit to avoid:

- Ink leakage inside the printer,
- Potential electrical damage,
- Messy or unsafe working conditions.

But in many cases, the pads are not yet physically full, just the counter has reached its preset limit.



WHEN DO YOU NEED A COUNTER RESET IN EPSON PRINTERS?

You need a waste ink pad counter reset when your printer shows any of the following signs:

🔴 Common Warning Messages

For Epson printer:

- “A printer’s ink pad is at the end of its service life”
- “The ink pad needs service or E-11”
- “Parts inside your printer are at the end of their service life”
- “A printer’s ink pad is nearing the end of its service life”

For Canon printers:

- Support Code: 5B00
- Support Code: 1700, 1701. The ink absorber is almost full

These appear when the waste ink counter reaches 100%, even if the pad is not physically full yet.

⚠️ Other Signs You Need a Reset:

- The printer won’t print at all even with ink and paper.
- The printer lights are blinking alternately (usually power and error lights).
- You’ve just cleaned or replaced the waste ink pads, and the printer still won’t work.

🛠️ Important Notes:

- A reset only clears the digital counter, not the physical ink in the pads.
- If the printer has been used heavily over time, it's also recommended to clean or replace the pads to avoid overflow.

www.resetter.net



WHAT IS AN UNLIMITED RESET KEY?

The unlimited reset key is an activation key for the Inkpad Resetter, Epson Adjustment Program & Canon Service Tool.

CONDITION: An unlimited reset key is an activation key that doesn't expire and can be used without limit on one PC. However, the unlimited reset key can only be used on one PC or computer. You need to buy another key if you want to use the program on another PC.


Unlimited Reset key can solve the following errors:
For Epson printer:

A printer's ink pad is at the end of its service life






The ink pad needs service or E-11

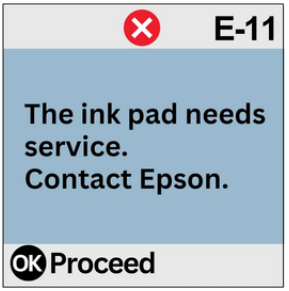



A part inside your printer are at the end of their service life

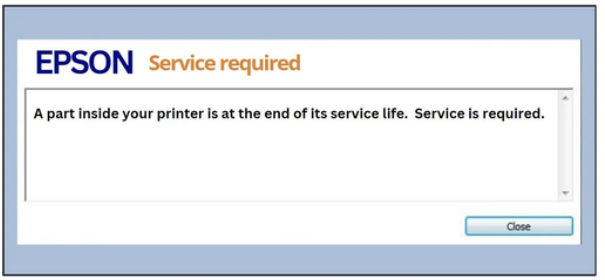


A printer's ink pad is nearing the end of its service life OR W-11





For Canon printer:

Support Code: 5B00

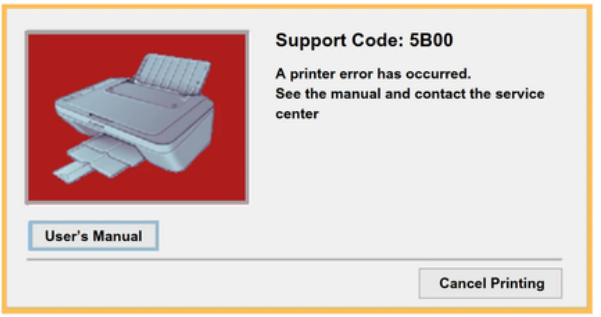

Support Code: 1700, 1701. The ink absorber is almost full



N**OTE:** Resetting the ink absorber of the Canon printer requires putting the printer into service mode,
learn how to put the Canon printer into service mode




HOW TO GET THE UNLIMITED RESET KEY?

To get the activation key, you need to download and open the resetter. We recommended using Winrar to open the program.

1. Open the proogram using Winrar.



2. Run the program by double-clicking it. Send the **hardware ID** to us and we will send you the activation key.

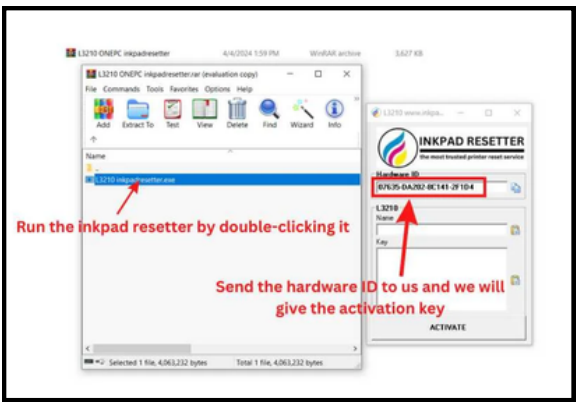



3. Contact Resetter.net to get the activation key. You have to send your Name and the hardware ID.

Contact Resetter.net

Whatsapp

Telegram: resetternet

Email: resetter.net@gmail.com


FB Page: facebook.com/resetter.net




WHAT PROGRAMS ARE USED IN RESETTING THE COUNTER?

The programs that are used in resetting the waste ink pad counters are Inkpad Resetter, Epson Adjustment Program & Canon Service Tool. In online method, Resetter will use the Online Printer Reset Module.

Inkpad resetter

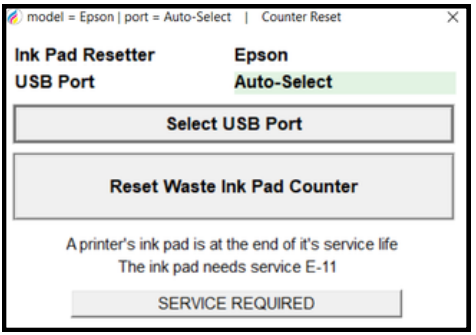


Adjustment program

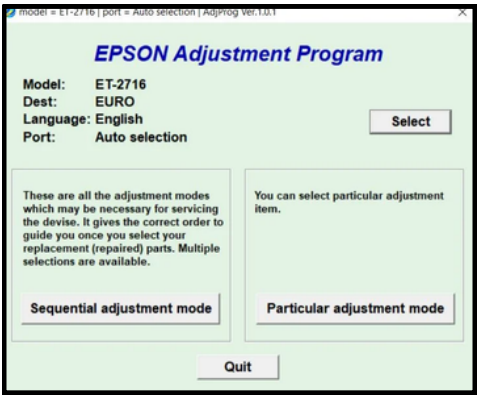



Canon Service Tool

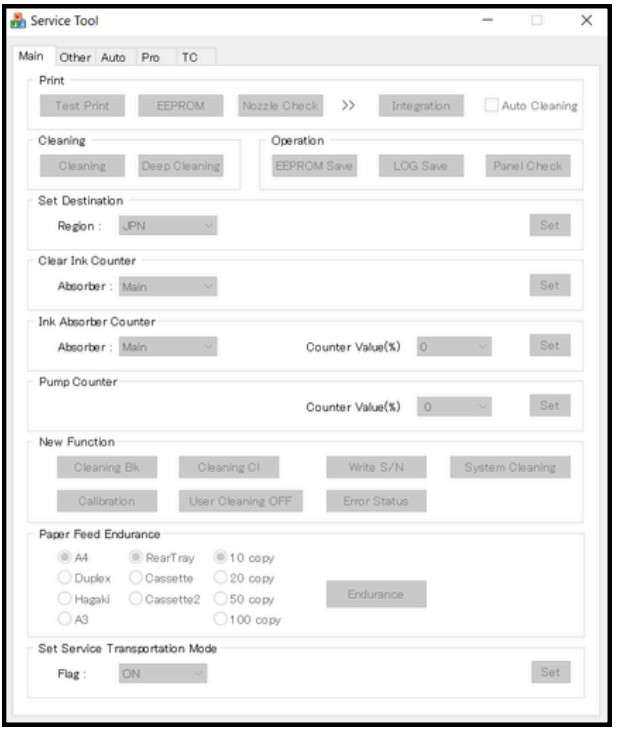

Reset module






HOW TO RESET THE WASTE INK PAD COUNTER OF EPSON PRINTER

STEP-BY-STEP INSTRUCTIONS

1. Check the error message of the printer. The error message must be ‘SERVICE REQUIRED” “A printer’s ink pad is at the end of its service life”, “A printer’s ink pad is nearing the end of its service life” or “The ink pad needs service” E-11.

2. After checking the error, you have to CANCEL ALL THE PRINT JOBS. It is necessary for the inkpad resetter or Adjustment program to work.

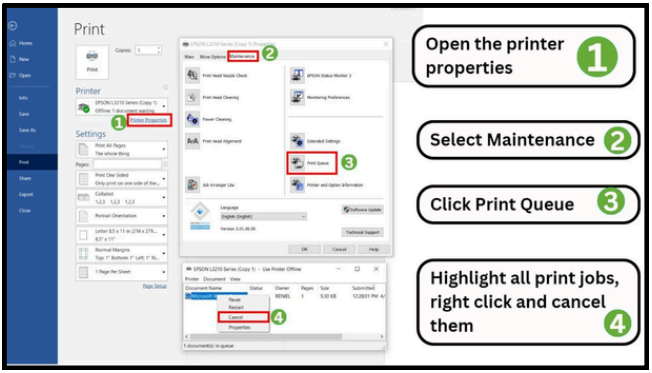

3. After canceling all the print jobs, the next step you should do is to disable or turn off the third-party antivirus and Windows antivirus or Defender. Disabling the antivirus will allow inkpad resetter or Adjustment program to download and save to the PC.


Watch the video here:

How to turn off the antivirus




4. Now, it's time to download the inkpad resetter. The download button is provided.
Watch the video here:
How to download and activate the ink pad resetter

5. After downloading, open the inkpad resetter using WinRar. If you don't have WinRar, you have to download it and install it on your PC. Type on the web browser and search download WinRar.

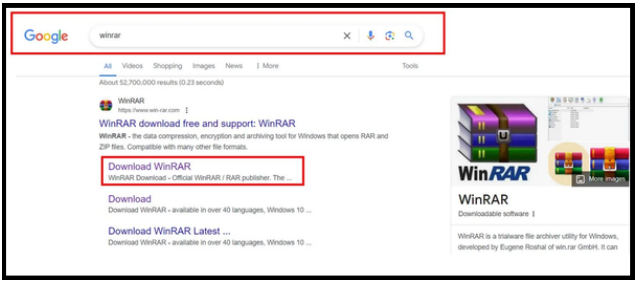

6. Activate the inkpad resetter or Adjustment program by following the procedure below:

- Open the **Resetter.exe** using **WinRar** to get the **hardware ID** and buy the **activation key**
- Copy the **Name** and **Key**.
- Paste the **Name** and **Key** into the Registration Dialog.
- Click **Register** or **Activate**.

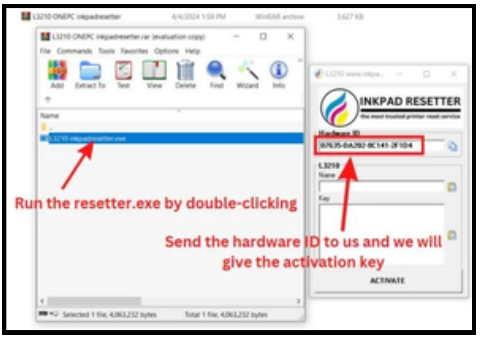



7. After all these steps are done, you are now ready to reset your printer waste ink pad counter using inkpad resetter or adjustment program.

Watch the video here:

Watch the tutorial video on how to reset the waste ink pad counter in Epson printer


How to reset the waste ink pad counter using Adjustment program

How to use the Ink Pad Resetter to Reset the Waste Ink Pad Counter of the Printer

1.Open the ink pad resetter using Winrar. If you don't have WinRar, you can download and install it on your computer.



2. Run the Resetter.exe by double-clicking. Send the hardware ID to us and we will send the activation key.

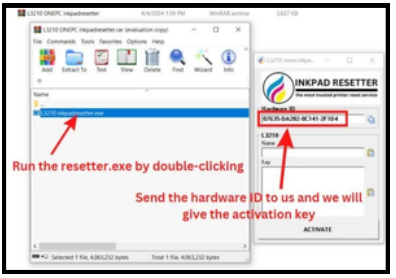




3. Click the “Select USB Port” button.




4. Choose the USB Port with the same model name and click “OK“.

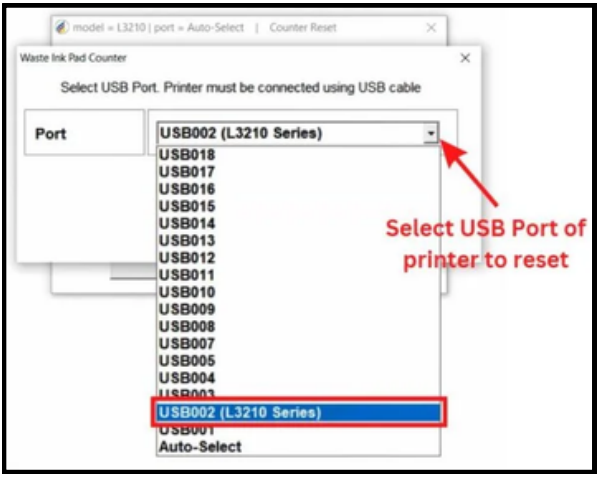


5. Click the “Reset Waste Ink Pad Counter“ button.




6 Select the “Waste Ink Pad Counter” and click OK.

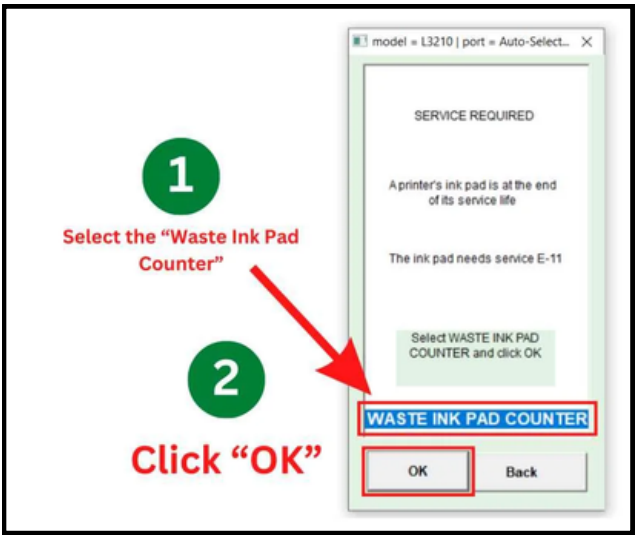


7. Check all the boxes. After checking, click the “Read” button to read the counter.

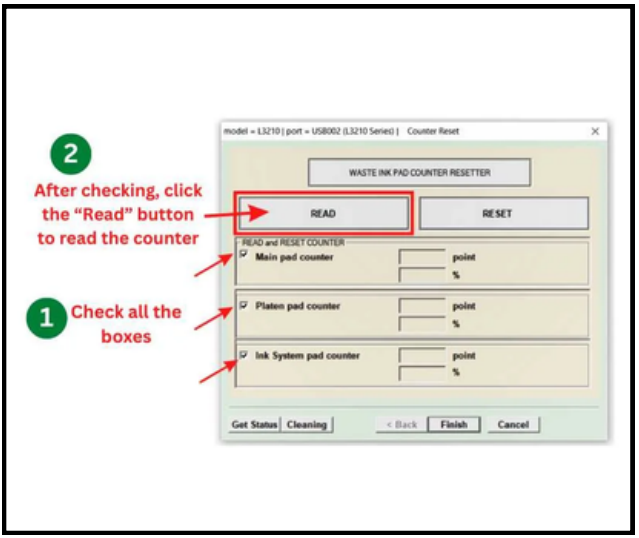

8. Check all the boxes again. After checking all the boxes, click the “Reset” button

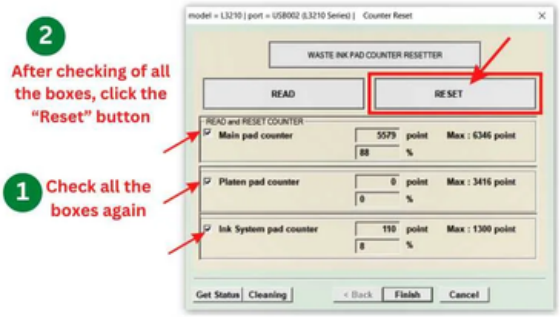

9. Click OK.

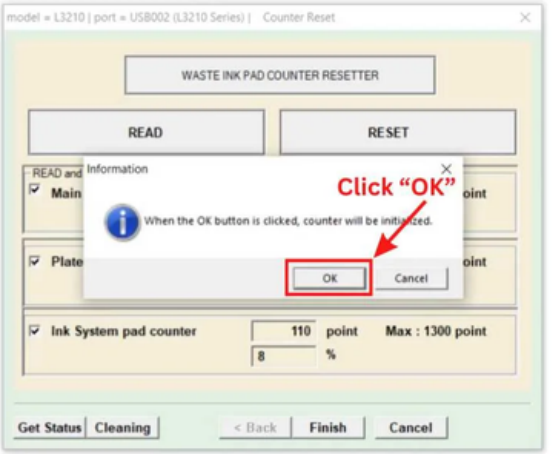

10. Reboot the printer.

Note: You can the same procedure using Adjustment program.



HOW TO RESET THE INK ABSORBER IN CANON PRINTER

1. Power OFF the printer with the Power button.
2. Press and hold the Resume button (red triangle in the red circle) and press the Power button
3. Hold both buttons until the power on indicator will light then release the Resume button (don't release the Power button) and press the Resume button 5 times and for the MG series – 6 times!
4. Release all buttons – the printer will blink a few times with a green light and will then light green constantly. You have to put the printer in Service Mode now and you can now run the Service Tool. (If the printer is still blinking green – you have some other errors in the printer and you have to fix them first because the Service Tool will not work if the printer is not put in service mode – the green light is constant)
5. Run the Service Tool program.
6. Select the connected USB port number from USB PORT
7. In the Ink Absorber Counter section of the Service Tool, select MAIN from the Absorber pull-down menu.
8. From the Counter Value (%) pull-down menu, select the value (in 10% increments) which is the closest to the actual counter value confirmed before the replacement of the logic board, and click SET.

Print EEPROM information to confirm that the value is properly set to the EEPROM.

Learn more how to reset it




HOW TO ENTER THE CANON PRINTER INTO SERVICE MODE

To enter Service Mode on a Canon printer (usually for maintenance, resetting ink absorber counters, or firmware updates), the procedure varies slightly by model, but here's the general method for many Canon PIXMA models (e.g., G-series, MG-series, IP-series):

WARNING:

Entering Service Mode is intended for technicians. Making incorrect changes can damage your printer or void your warranty. Proceed at your own risk.

General Steps to Enter Service Mode (Canon PIXMA Printers):

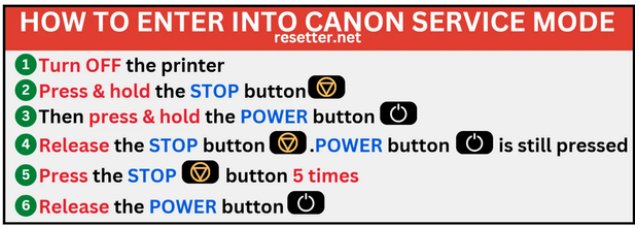

1. Turn off the printer. (Power cord plugged in.)
2. Press and hold the Stop/Reset button (usually the red triangle in a circle).
3. While holding Stop/Reset, press and hold the Power button.
4. Keep holding the Power button and release the Stop/Reset button.
5. While still holding the Power button, press the Stop/Reset button 5 times:
   - On some models, 2 or 5 presses are used to enter different modes (e.g., regular service mode vs. factory mode).
6. Release the Power button.
7. The printer screen may stay blank or show "0". This indicates Service Mode.



Signs You Are in Service Mode:

- The screen is blank or displays “0”.
- The green and orange lights blink alternately.
- You may hear the printer initialize.

Example Model Variations:

- Canon G2010/G3010/G4010: Same method as above.
- Canon IP2770/IP2772: Use 5 presses of the Stop/Reset button.
- Canon MG/MX Series: Similar, but might vary in number of presses (check model-specific guide).

What You Can Do in Service Mode

- Reset the waste ink absorber counter.
- Print a nozzle check pattern.
- Update firmware manually.
- Restore factory settings.

Exiting Service Mode:

- Please turn off the printer, then turn it on normally.

see the list Canon printers and the number of presses in service mode

NOTE: The models of Canon printers that cannot be reset by the service tool.

See the list of supported printers and unsupported printers that the tool can reset the ink absorber.



List of unsupported printers that the service tool can't be reset the ink absorber:

MG24xx, MG25xxs, MG29xx, MG30xx,
G3060/2060/1020, IP2870/2880s, E4xx, E3170,
E3370, IX2810, TS202/207/307/8070
E400 series: E400, E404, E407, E408
E410 series: E410, E414, E417, E418
E460 series: E460, E461,E464
E470 series: E470, E471, E477, E478
E3170, E3370
IP2870S, IP2880S
MG2550, MG2570S,MG2580S
MG3000 series: MG3010, MG3020, MG3022,
MG3040, MG3050, MG3050s, MG3051, MG3052,
MG3053
MG3060, MG3070, MG3077, MG3070S, MG3077S,
MG3080, MG3090
TS202, TS207, TS307, TS8070
TS3100 series:TS3120 TS3122 TS3129 TS3140
TS3150 TS3151 TS3160 TS3165 TS3166 TS3170
TS3170S TS3177S TS3180 TS3190 TS3195
IX2810
MG29xx
MG24xx
MG25xxs
G3060, G2060, G1020
G1726